



CHAPTER 2

Adding and Deleting Location Servers

This chapter describes how to add and delete location servers.

This chapter contains the following sections:

- “[Adding a Location Server to Cisco WCS](#)” section on page 2-2
- “[Deleting Location Servers from the Cisco WCS Database](#)” section on page 2-2

Adding a Location Server to Cisco WCS

To add a location server to Cisco WCS, log into WCS and follow these steps:

-
- Step 1** Verify that you can ping the location server that you want to add from the Cisco WCS server.
 - Step 2** Choose **Location > Location Servers** to display the All Location Servers window.
 - Step 3** From the drop-down menu (right-hand side), choose **Add Server** and click **GO**.
 - Step 4** In the Server Name field, enter a name for the location server.
 - Step 5** In the IP Address field, enter the location server's IP address.
 - Step 6** (Optional) In the Contact Name field, enter the name of the location server administrator.
 - Step 7** In the User Name and Password fields, enter the username and password for the location server.
The default username and password are both *admin*.
 - Step 8** In the Port field, enter the port number used by the location server.
The default port is 8001.
 - Step 9** Check the Enable check box to enable HTTPS. Uncheck the check box to disable HTTPS.
HTTPS is disabled by default.
 - Step 10** Click **Save**.
Cisco WCS searches for the location server and adds it to the Cisco WCS database.
 - Step 11** Go back to the All Location Servers window and click **Refresh** (top right). Verify that the location server that you have just added appears in the window.

**Note**

Cisco WCS does not allow you to add a server that already exists in the WCS database.

Deleting Location Servers from the Cisco WCS Database

To delete location servers from the Cisco WCS database, follow these steps:

-
- Step 1** In Cisco WCS, choose **Location > Location Servers**.
 - Step 2** Select the server or servers to be deleted by checking the corresponding check box(es).
 - Step 3** From the drop-down menu (right-hand side), choose **Delete Server(s)** and click **GO**.
 - Step 4** Click **OK** to confirm that you want to delete the selected location server from the WCS database.
 - Step 5** Click **Cancel** to stop deletion.
-