




Guidelines for Managing Maps in Cisco CMX

We recommend that you use the following guidelines to effectively manage the maps on Cisco CMX. These guidelines are based on frequently asked questions about map import/update scenarios and will help avoid typical mistakes while importing/updating maps on Cisco CMX.

- You can import maps from Catalyst Center. For more information, see [Importing Maps from Catalyst Center](#).
- Map uploads into Cisco CMX are best performed outside of business hours (or when Cisco CMX system activity is low), after 9PM is recommended. There are no hard and fast rules though. Maps import involves significant amount of processing to update the Database and processing floor images based on the size of floor image.
- Decide on an update window of 30 minutes for uploading maps to Cisco CMX. For a typical floor image, Cisco CMX can take up to 15 seconds per image to complete processing and show the floor image on Cisco CMX GUI. A typical map of a Campus with 100 floors may take up to 30 minutes to complete image processing background jobs. If the image processing in progress, The GUI will show an information message saying 'This floor image is currently being processed. Please refresh the page after a few moments to view the image'.

Figure 1: Activity Map

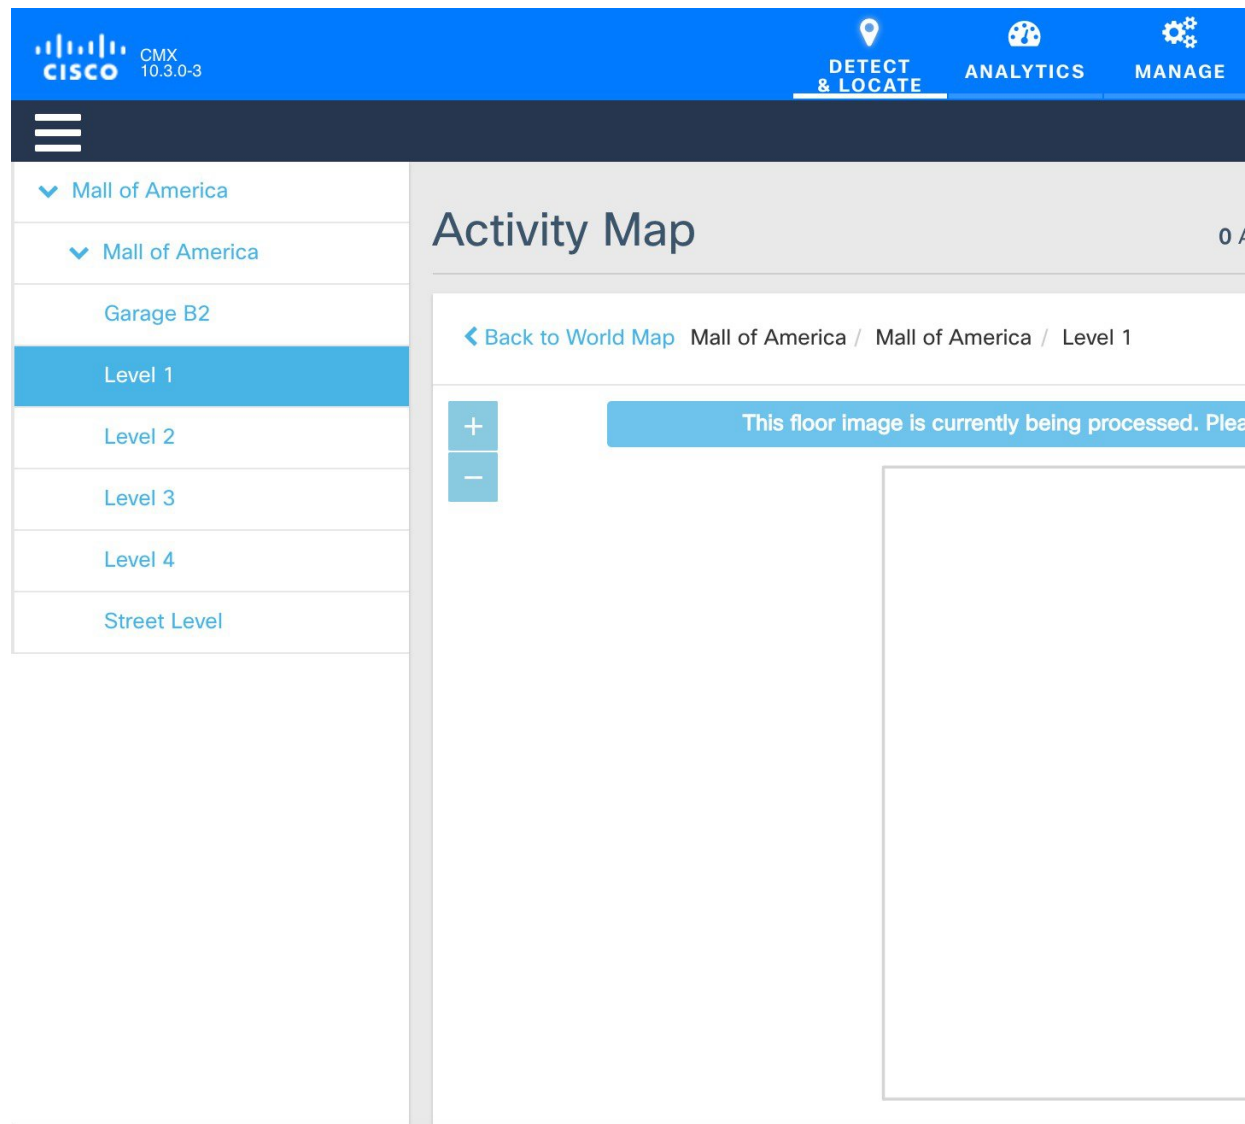

- Create and update the zones using Cisco CMX GUI map editor. All other map edit operations are to be performed using Prime Infrastructure.
- An AP can only be associated with a single floor map in Prime. If you are planning to move APs from one floor to another, you want to disassociate them from existing floor-map in Prime so that they can be associated to new floor-map in Prime. (Please refer to 'Typical map import issues: Case 2' for troubleshooting steps.)
- To expand a map to cover a larger area, create a new map in Prime and move APs to the new map from older map. You also want to make sure that the older floor is deleted from Prime and Cisco CMX before the new floor map is imported on Cisco CMX.
- Avoid doing bulk map import/exports. Export individual maps changes from Prime Infrastructure and import into Cisco CMX. For large set of maps, It's not recommended to use 'Import from Cisco Prime'

option (shown in the picture) as this will sync all maps from Prime to Cisco CMX that may put significant amount of load on the system.

Figure 2: Import from Cisco Prime

SETTINGS

- Tracking
- Filtering
- Location Setup
- Mail Server
- ▼ Controllers and Maps Setup
- Import**
- Advanced
- Upgrade
- High Availability

Import from Cisco Prime

Please provide Cisco Prime credentials below:

Username
Enter Username

IP Address
Enter IP Address

Password
Enter Password

☐ Save Cisco Prime Credentials

☐ Delete & replace existing maps & analytics data

☐ Delete & replace existing zones

*Please enter the correct SNMP community string after import.

► **Controllers**
Last Synced: N/A

► **Maps**
Last Synced: N/A

- [Create a Map Using Cisco Prime Infrastructure, on page 4](#)
- [Delete a Map Using Cisco Prime Infrastructure, on page 4](#)
- [Move an Access Point Between Maps Using Cisco Prime Infrastructure, on page 5](#)
- [Export a Map Using Cisco Prime Infrastructure, on page 9](#)
- [Import New and Modified Maps to Cisco CMX, on page 10](#)

Create a Map Using Cisco Prime Infrastructure

To create a map using Cisco Prime Infrastructure, see the "[Using Wireless Maps](#)" chapter in the Cisco Prime Infrastructure 3.1 User Guide.

Delete a Map Using Cisco Prime Infrastructure

Procedure

-
- | | |
|---------------|---|
| Step 1 | Log in to Cisco Prime Infrastructure. |
| Step 2 | Click the Open/Close navigation icon (above the Home icon on top left hand side). |
| Step 3 | Choose Maps > Site Maps . |
| Step 4 | From the Select a command drop-down list, choose Delete . |
| Step 5 | Select the checkbox of the individual map you wish to delete and click Go (next to the Select a command drop-down). |

Prime Infrastructure

Maps / Wireless Maps / Site Maps ★

Maps Tree View

- Root Area
 - System Campus
 - Unassigned
 - Nortech Campus
 - pwalawal-campus

Site Maps [Edit View](#)

Show: Type Status ☐ Incomplete ?

<input type="checkbox"/> Name	Type ▲	Incomplete	Total APs
System Campus	Campus/Site		87
Unassigned	Campus/Site		0
<input type="checkbox"/> Nortech Campus	Campus/Site		13
<input type="checkbox"/> pwalawal-campus	Campus/Site		4
<input type="checkbox"/> Nortech Campus > Nortech Building	Building		13
<input type="checkbox"/> System Campus > Bldg 18	Building		7
<input type="checkbox"/> System Campus > Mall Of Emirates	Building		4
<input type="checkbox"/> System Campus > Nortech	Building		4
<input type="checkbox"/> System Campus > SJC-24	Building		6
<input type="checkbox"/> System Campus > bldg14-dharani	Building		3
<input type="checkbox"/> System Campus > dwg_test_building	Building		1
<input type="checkbox"/> System Campus > khushbo18	Building		47
<input type="checkbox"/> System Campus > khushboo	Building		0
<input type="checkbox"/> System Campus > pwalawal	Building		15
<input type="checkbox"/> System Campus > test2	Building		0
<input type="checkbox"/> pwalawal-campus > pwalawal-building-1	Building		4
<input type="checkbox"/> Nortech Campus > Nortech Building > Halo Mode	Floor Area		4
<input type="checkbox"/> Nortech Campus > Nortech Building > Mixed Mode	Floor Area		9
<input checked="" type="checkbox"/> System Campus > Bldg 18 > 2nd-Floor	Floor Area		7

Move an Access Point Between Maps Using Cisco Prime Infrastructure


Procedure


- Step 1** Log in to Cisco Prime Infrastructure.
- Step 2** Click on Open/Close navigation icon (above the Home icon on top left hand side).
- Step 3** Choose **Maps > Site Maps**.
- Step 4** From the **Select a command** drop-down list, choose **Floor Area**.

Step 5 Click **Go**.

Step 6 Click on the floor Area from which you want to release the AP. The **Floor View** window is displayed.

Step 7 From the **Select a command** drop-down list, choose **Remove Access**

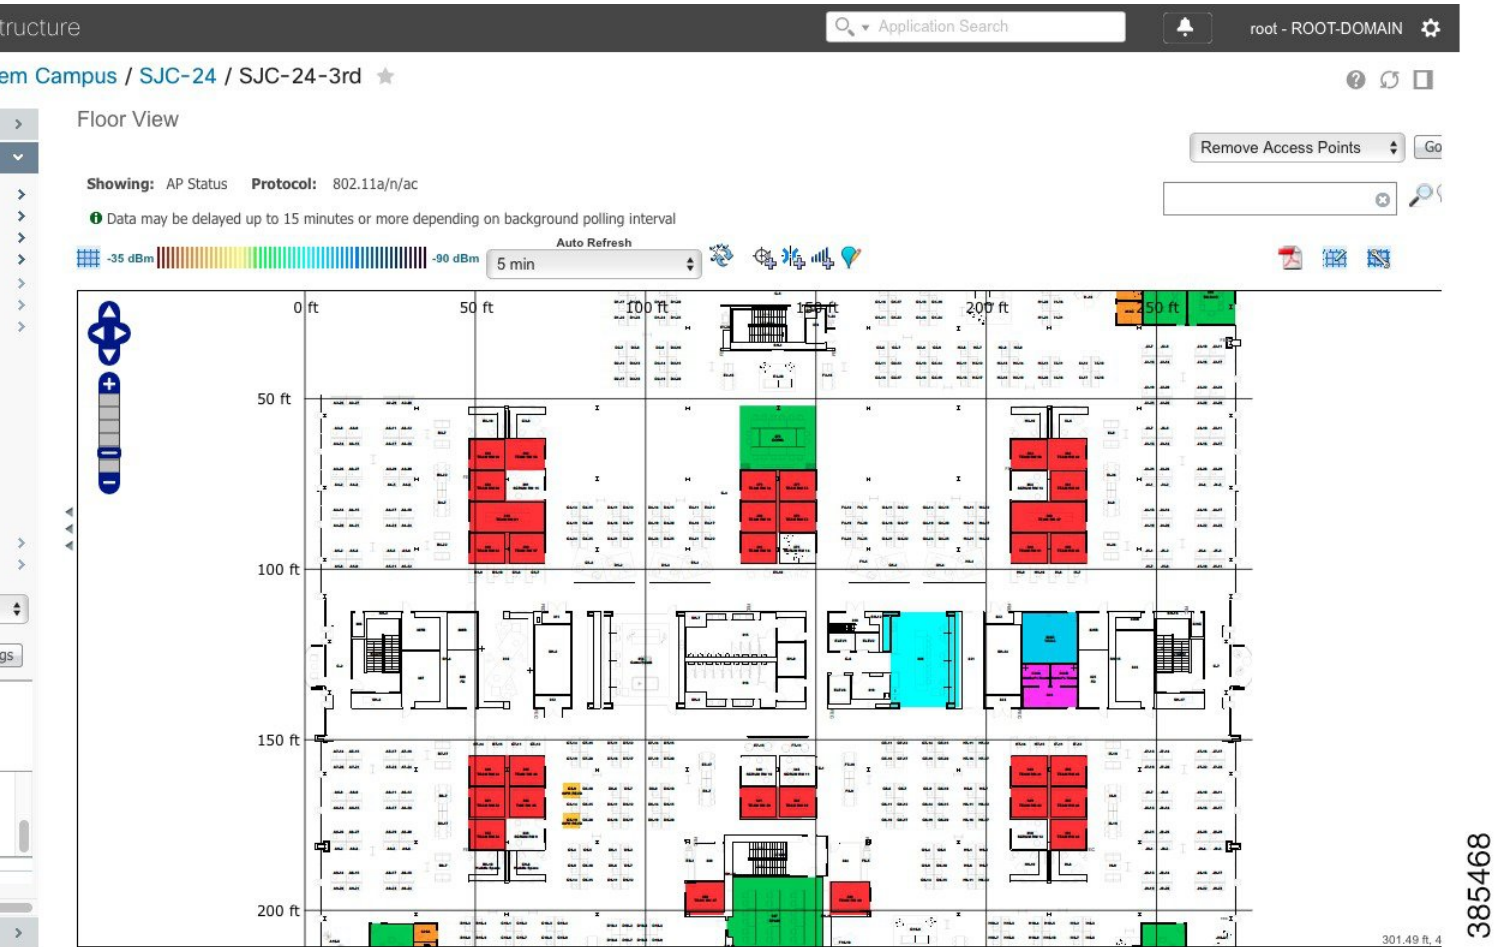

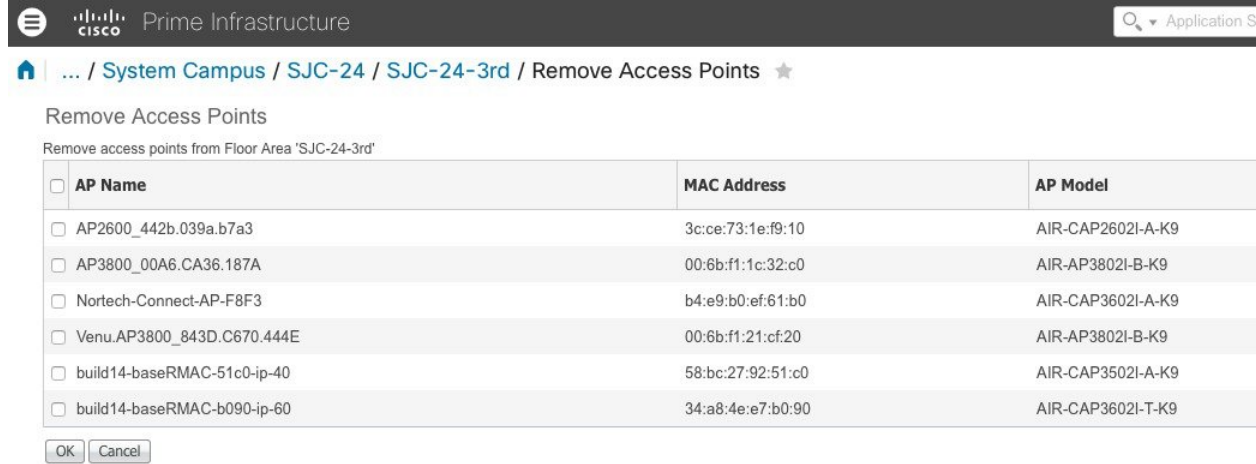Step 8Select the AP to be deleted and click **OK**.

The screenshot shows the Cisco Prime Infrastructure web interface. The breadcrumb navigation path is: **... / System Campus / SJC-24 / SJC-24-3rd / Remove Access Points**. The main heading is **Remove Access Points**. Below it, a sub-heading reads: **Remove access points from Floor Area 'SJC-24-3rd'**. A table lists six access points, each with a checkbox in the first column, the **AP Name**, **MAC Address**, and **AP Model**.

<input type="checkbox"/>	AP Name	MAC Address	AP Model
<input type="checkbox"/>	AP2600_442b.039a.b7a3	3c:ce:73:1e:f9:10	AIR-CAP2602I-A-K9
<input type="checkbox"/>	AP3800_00A6.CA36.187A	00:6b:f1:1c:32:c0	AIR-AP3802I-B-K9
<input type="checkbox"/>	Nortech-Connect-AP-F8F3	b4:e9:b0:ef:61:b0	AIR-CAP3602I-A-K9
<input type="checkbox"/>	Venu.AP3800_843D.C670.444E	00:6b:f1:21:cf:20	AIR-AP3802I-B-K9
<input type="checkbox"/>	build14-baseRMAC-51c0-ip-40	58:bc:27:92:51:c0	AIR-CAP3502I-A-K9
<input type="checkbox"/>	build14-baseRMAC-b090-ip-60	34:a8:4e:e7:b0:90	AIR-CAP3602I-T-K9

At the bottom of the table are two buttons: **OK** and **Cancel**. The **OK** button is highlighted with a grey background.

Step 9

Click **Position AP** icon (before the delete icon) to place APs on the map.

Maps Tree View >

Floor Settings ▾

- ☒ Access Points >
- ☒ AP Heatmaps >
- ☒ Clients >
- ☒ 802.11 Tags >
- ☐ Rogue APs >
- ☐ Adhoc Rogues >
- ☐ Rogue Clients >
- ☐ Coverage Areas >
- ☐ Location Regions >
- ☐ Obstacles >
- ☐ Rails >
- ☐ Markers >
- ☐ Chokepoints >
- ☐ Wifi TDOA Receivers >
- ☐ GPS Markers >
- ☐ Services >
- ☐ Interferers >
- ☐ wIPS Attackers >

Show MSE data

Currently Detected

Save Settings

▼ Load Status

Load

Loading APs
Loading Clients
Loading Tags
Periodic Refresh Done.
Done loading Clients
Done loading Tags

MSE Assignment >

Floor View

Showing: AP Status Protocol: 802.11a/n/ac

Data may be delayed up to 15 minutes or more depending on background polling interval

-35 dBm -90 dBm Auto Refresh 5 min

0 ft 50 ft 100 ft

50 ft

100 ft

150 ft

200 ft

Step 10

From the **AP Name** drop-down list, choose the AP and place it to the correct location on the map.

Home / System Campus / SJC-24 / SJC-24-3rd / Position APs ★

Click on an AP icon to change its position, height and/or antenna information. Position of AP can be changed by dragging the icon with mouse.

Position APs

--AP Name--	--MAC Address--
AP2600_442b.039a.b7a3	3c:ce:73:1e:f9:10
AP3800_00A6.CA36.187A	00:6b:f1:1c:32:c0
build14-baseRMAC-51c0-ip-40	58:bc:27:92:51:c0
build14-baseRMAC-b090-ip-60	34:a8:4e:e7:b0:90
Nortech-Connect-AP-F8F3	b4:e9:b0:ef:61:b0
Venu.AP3800_843D.C670.444E	00:6b:f1:21:cf:20



Use Ctrl + Mouse Click or Mouse Drag on APs for multiple Ctrl-A for all currently visible APs



Export a Map Using Cisco Prime Infrastructure

Procedure

- Step 1** Log in to Cisco Prime Infrastructure.
- Step 2** Click on Open/Close navigation icon (above the Home icon on top left hand side).
- Step 3** Choose **Maps > Site Maps**.
- Step 4** From the **Select a command** drop-down list, choose **Export Maps**.
- Step 5** Check the checkbox of the individual map you wish to export .

Prime Infrastructure

Maps / Wireless Maps / Site Maps

Maps Tree View

- Root Area
 - System Campus
 - Unassigned
 - Nortech Campus
 - pwalawal-campus

Site Maps [Edit View](#)

Show: Type Status ☐ Incomplete [Go](#)

<input type="checkbox"/> Name	Type ^	Incomplete	Total APs	a/n/ac Radios	b/g/n Radios
System Campus	Campus/Site		92	93	91
Unassigned	Campus/Site		0	0	0
<input type="checkbox"/> Nortech Campus	Campus/Site		13	13	13
<input type="checkbox"/> pwalawal-campus	Campus/Site		4	4	4
<input type="checkbox"/> Nortech Campus > Nortech Building	Building		13	13	13
<input type="checkbox"/> System Campus > Bldg 18	Building		7	7	7
<input type="checkbox"/> System Campus > Mall Of Emirates	Building		10	11	9
<input type="checkbox"/> System Campus > Nortech	Building		4	4	4
<input type="checkbox"/> System Campus > SJC-24	Building		6	6	6
<input type="checkbox"/> System Campus > bldg14-dharani	Building		3	3	3
<input type="checkbox"/> System Campus > dwg_test_building	Building		0	0	0
<input type="checkbox"/> System Campus > khushbo18	Building		47	47	47
<input type="checkbox"/> System Campus > khushboo	Building		0	0	0
<input type="checkbox"/> System Campus > pwalawal	Building		15	15	15
<input type="checkbox"/> System Campus > test2	Building		0	0	0
<input type="checkbox"/> pwalawal-campus > pwalawal-building-1	Building		4	4	4
<input checked="" type="checkbox"/> Nortech Campus > Nortech Building > Halo Mode	Floor Area		4	4	4

Step 6 Click Go.

Import New and Modified Maps to Cisco CMX

Navigate to Cisco CMX UI Advanced import option below (select System - Settings - Controllers and Maps Setup - Advanced), leave both checkboxes unchecked shown below. Browse to the maps file to be imported, select **Upload**.

SETTINGS

Tracking

Filtering

Location Setup

Mail Server

✓ Controllers and
Maps Setup

Import

Advanced

Upgrade

High Availability

Maps

Please select maps to add or modify:

 [Browse...](#)☐ Delete & replace existing maps & analytics data☐ Delete & replace existing zones[Upload](#)

Controllers

Please add controllers by providing the information below:

Controller Type Controller Version
[Optional] Controller SNMP Version Controller SNMP Write
Community [Add Controller](#)

