



CHAPTER 5

Managing Users and Groups

This chapter describes how to configure and manage users, groups, and host access on the mobility services engine.

This chapter contains the following sections:

- [Managing Groups, page 5-2](#)
- [Managing Users, page 5-3](#)

Managing Groups

This section describes how to add, delete, and edit user groups.

User groups allow you to define and different access privileges to users.



Caution

Group permissions override individual user permissions. For example, if you give a user full access and add that user to a group with read access permission, that user will not be able to configure mobility services engine settings.

Adding User Groups

To add a user group to a mobility services engine, follow these steps:

-
- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
 - Step 2** Click the name of the mobility services engine to which you want to add a user group.
 - Step 3** Choose **System > Accounts > Groups** (left).
 - Step 4** Select **Add Group** from the Select a command drop-down menu and click **Go**.
 - Step 5** Enter the name of the group in the Group Name field.
 - Step 6** Select a permission level (read, write, or full) from the Permission drop-down menu.



Note Full Access is required for Cisco WCS to access mobility services engines.

- Step 7** Click **Save**.
-

Deleting User Groups

To delete user groups from a mobility services engine, follow these steps:

-
- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
 - Step 2** Click the name of the mobility services engine from which you want to delete a user group.
 - Step 3** Choose **System > Accounts > Groups** (left).
 - Step 4** Check the check boxes of the groups that you want to delete.
 - Step 5** Select **Delete Group** from the Select a command drop-down menu and click **Go**.
 - Step 6** Click **OK**.
-

Changing User Group Permissions

**Caution**

Group permissions override individual user permissions. For example, if you give a user full access and add that user to a group with read access permission, that user will not be able to configure mobility services engine settings.

To change user group permissions, follow these steps:

-
- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
 - Step 2** Click the name of the mobility services engine you want to edit.
 - Step 3** Choose **System > Accounts > Groups** (left).
 - Step 4** Click the name of the group you want to edit.
 - Step 5** Select a permission level (read, write, or full) from the Permission drop-down menu.
 - Step 6** Click **Save**.
-

Managing Users

This section describes how to add, delete, and edit users to a mobility services engine. It also describes how to view active user sessions.

Adding Users

**Caution**

Group permissions override individual user permissions. For example, if you give a user full access and add that user to a group with read access permission, that user will not be able to configure mobility services engine settings.

To add a users to a mobility services engine, follow these steps:

-
- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
 - Step 2** Click the name of the mobility services engine to which you want to add users.
 - Step 3** Choose **System > Accounts > Users** (left).
 - Step 4** Select **Add User** from the Select a command drop-down menu and click **Go**.
 - Step 5** Enter the username in the Username field.
 - Step 6** Enter a password in the Password field.
 - Step 7** Enter the name of the group to which the user belongs in the Group Name field.

Step 8 Select a permission level (read, write, or full) from the Permission drop-down menu.



Note Full Access is required for Cisco WCS to access mobility services engines.

Step 9 Click **Save**.

Deleting Users

To delete a user from a mobility services engine, follow these steps:

-
- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
 - Step 2** Click the name of the mobility services engine from which you want to delete a user.
 - Step 3** Choose **System > Accounts > Users** (left).
 - Step 4** Check the check boxes of the users that you want to delete.
 - Step 5** Select **Delete User** from the Select a command drop-down menu and click **Go**.
 - Step 6** Click **OK**.
-

Changing User Properties

To change user properties, follow these steps:

-
- Step 1** In Cisco WCS, choose **Services > Mobility Services**.
 - Step 2** Click the name of the mobility services engine you want to edit.
 - Step 3** Choose **System > Accounts > Users** (left).
 - Step 4** Click the name of the group that you want to edit.
 - Step 5** Make the required changes to the Password, Group Name, and Permission fields.
 - Step 6** Click **Save**.
-