



CHAPTER 7

Managing Users and Groups

This chapter describes how to manage users, groups, and host access on the mobility services engine.

This chapter contains the following sections:

- [Prerequisites, page 7-1](#)
- [Guidelines and Limitations, page 7-1](#)
- [Managing User Groups, page 7-1](#)
- [Managing Users, page 7-3](#)

Prerequisites

Full access is required for Cisco NCS to access mobility services engines.

Guidelines and Limitations

Group permissions override individual user permissions. For example, if you give a user full access and add that user to a group with *read only* access, that user is unable to configure mobility services engine settings.

Managing User Groups

This section describes how to add, delete, and edit user groups.

User groups allow you to assign different access privileges to users.

This section contains the following topics:

- [Adding User Groups, page 7-1](#)
- [Deleting User Groups, page 7-2](#)
- [Changing User Group Permissions, page 7-2](#)

Adding User Groups

To add a user group to a mobility services engine, follow these steps:

-
- Step 1** Choose **Services > Mobility Services Engines**.
 - Step 2** Click the name of the mobility services engine to which you want to add a user group.
 - Step 3** Choose **System > Accounts > Groups**.
 - Step 4** From the Select a command drop-down list, choose **Add Group**. Click **Go**.
 - Step 5** Enter the name of the group in the Group Name text box.
 - Step 6** Choose a permission level (**read**, **write**, or **full**) from the Permission drop-down list.



Note Full access is required for the NCS to access mobility services engines.

- Step 7** Click **Save**.
-

Deleting User Groups

To delete user groups from a mobility services engine, follow these steps:

-
- Step 1** Choose **Services > Mobility Services Engines**.
 - Step 2** Click the name of the mobility services engine from which you want to delete a user group.
 - Step 3** Choose **System > Accounts > Groups**.
 - Step 4** Select the check boxes of the groups that you want to delete.
 - Step 5** From the Select a command drop-down list, choose **Delete Group**, and click **Go**.
 - Step 6** Click **OK**.
-

Changing User Group Permissions



Caution

Group permissions override individual user permissions. For example, if you give user a full access and add that user to a group with only read access, that user is unable to configure mobility services engine settings.

To change user group permissions, follow these steps:

-
- Step 1** Choose **Services > Mobility Services Engines**.
 - Step 2** Click the name of the mobility services engine you want to edit.
 - Step 3** Choose **System > Accounts > Groups**.
 - Step 4** Click the name of the group you want to edit.
 - Step 5** From the Permission drop-down list, choose a permission level (**read**, **write**, **full**).

Step 6 Click **Save**.

Managing Users

This section describes how to add, delete, and edit users for a mobility services engine. It also describes how to view active user sessions.

This section contains the following topics:

- [Adding Users, page 7-3](#)
- [Deleting Users, page 7-3](#)
- [Changing User Properties, page 7-4](#)

Adding Users



Caution

Group permissions override individual user permissions. For example, if you give a user full access and add that user to a group with only read access, that user is unable to configure mobility services engine settings.

To add a user to a mobility services engine, follow these steps:

-
- Step 1** Choose **Services > Mobility Services Engines**.
- Step 2** Click the name of the mobility services engine to which you want to add users.
- Step 3** Choose **System > Accounts > Users**.
- Step 4** From the Select a command drop-down list, choose **Add User**. Click **Go**.
- Step 5** Enter the username in the Username text box.
- Step 6** Enter a password in the Password text box.
- Step 7** Reenter the password in the Confirm Password text box.
- Step 8** Enter the name of the group to which the user belongs in the Group Name text box.
- Step 9** From the Permission drop-down list, choose a permission level (**read**, **write**, or **full**).



Note

Full access is required for the NCS to access mobility services engines.

Step 10 Click **Save**.

Deleting Users

To delete a user from a mobility services engine, follow these steps:

-
- Step 1** Choose **Services > Mobility Services Engines**.
 - Step 2** Click the name of the mobility services engine from which you want to delete a user.
 - Step 3** Choose **System > Accounts > Users**.
 - Step 4** Select the check boxes of the users that you want to delete.
 - Step 5** From the Select a command drop-down list, choose **Delete User**. Click **Go**.
 - Step 6** Click **OK**.
-

Changing User Properties

To change user properties, follow these steps:

-
- Step 1** Choose **Services > Mobility Services Engines**.
 - Step 2** Click the name of the mobility services engine you want to edit.
 - Step 3** Choose **System > Accounts > Users**.
 - Step 4** Click the name of the group that you want to edit.
 - Step 5** Make the required changes to the Password and Group Name text boxes.
 - Step 6** Click **Save**.
-