



Preface

This preface describes the audience, organization, and conventions of the Cisco Wireless Intrusion Prevention System Configuration Guide. It also provides information on how to obtain other documentation. This chapter includes the following sections:

- [Audience, page i](#)
- [Related Documentation, page i](#)
- [Obtaining Documentation and Submitting a Service Request, page i](#)

Audience

This guide is for administrators who configure and manage Wireless Intrusion and Prevention System (wIPS). Before you begin, you should be familiar with network structure, terms, and concepts.

Related Documentation

See the Cisco 3350 Mobility Services Engine Getting Started Guide or Cisco 3355 Mobility Services Engine Getting Started Guide for Mobility Services Engine installation and setup information. These documents are available on Cisco.com at the following URL:

Click this link to browse to user documentation for the Cisco Unified Wireless Network solution:

http://www.cisco.com/en/US/products/ps9742/tsd_products_support_install_and_upgrade.html

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation*, at: <http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation, as an RSS feed and deliver content directly to your desktop using a reader application. The RSS feeds are a free service.

