



## Preface

---

This guide describes how you can configure and maintain the Cisco Prime Network Control System (NCS) Release 1.0 using the command-line interface (CLI). Each topic provides a high-level summary of the tasks required for using the CLI for the Cisco NCS in the Cisco Unified Network Solution that runs on supported appliances for small, medium, and large Cisco NCS deployments.

This preface contains the following sections:

- [Who Should Read This Guide, page ix](#)
- [How to Use This Guide, page ix](#)
- [How This Guide Organized, page x](#)
- [Document Conventions, page x](#)
- [Documentation Updates, page xi](#)
- [Related Documentation, page xi](#)
- [Obtaining Documentation and Submitting a Service Request, page xi](#)



**Note**

---

Use this guide in conjunction with the documentation listed in the [“Related Documentation” section on page xi](#).

---

## Who Should Read This Guide

The majority of the instructions in this guide are straightforward; however, a few are complex. Therefore, only experienced users should use these instructions.



**Note**

---

Use this guide in conjunction with the documentation listed in [Related Documentation, page xi](#).

---

## How to Use This Guide

We recommend that you use the information in this guide as follows:

- Read the document in its entirety. Subsequent sections build on information and recommendations discussed in previous sections.
- Use this document for all-inclusive information about the Cisco NCS appliance.

- Do not vary the command-line conventions (see [Document Conventions](#), page x).

## How This Guide Organized

The following table lists the major sections of this guide.

Chapter	Title	Description
Chapter 1	<a href="#">Overview of the Cisco NCS Command-Line Interface</a>	Provides an overview of the Cisco NCS CLI environment and command modes.
Chapter 2	<a href="#">Using the Cisco NCS Command-Line Interface</a>	Describes how you can access and administer Cisco NCS using the CLI.
Appendix A	<a href="#">Cisco NCS Command Reference</a>	Provides a complete description of all NCS CLI commands.

## Document Conventions

This guide uses the following conventions to convey instructions and information.

Convention	Description
<b>bold font</b>	Commands and keywords.
<i>italic font</i>	Variables for which you supply values.
[ ]	Keywords or arguments that appear within square brackets are optional.
{x   y   z}	A choice of required keywords appears in braces separated by vertical bars. You must select one.
<code>courier font</code>	Examples of information displayed on the screen.
<b><code>courier font</code></b>	Examples of information you must enter.
< >	Nonprinting characters (for example, passwords) appear in angle brackets.
[ ]	Default responses to system prompts appear in square brackets.



### Note

Means *reader take note*. Notes contain helpful suggestions or references to material not covered in the manual.



### Tip

Means *the following information will help you solve a problem*. A tip might not consist of an action or troubleshooting help, but could still contain useful information.



### Caution

Means *reader be careful*. In this situation, you might do something that could result in equipment damage or loss of data.

## Documentation Updates

Table 1 lists the documentation update dates.

**Table 1** *Updates to the CLI Reference Guide for the Cisco Prime Network Control System, Release 1.0*

Date	Description
11/1/10	Cisco Network Control System (NCS) Release 1.0

## Related Documentation

Table 2 lists the Cisco Prime NCS documents.

**Table 2** *Product Documentation for Cisco NCS*

Document Title	Location
<i>Release Notes for the Cisco Prime Network Control System, Release 1.0</i>	<a href="http://www.cisco.com/en/US/docs/wireless/ncs/1.0/release/notes/NCS_RN1.0.0.html">http://www.cisco.com/en/US/docs/wireless/ncs/1.0/release/notes/NCS_RN1.0.0.html</a>
<i>Cisco Prime Network Control System Configuration Guide, Release 1.0</i>	<a href="http://www.cisco.com/en/US/docs/wireless/ncs/1.0/configuration/guide/NCS10cg.html">http://www.cisco.com/en/US/docs/wireless/ncs/1.0/configuration/guide/NCS10cg.html</a>
<i>Cisco Prime Network Control System Appliance Getting Started Guide, Release 1.0</i>	<a href="http://www.cisco.com/en/US/docs/wireless/ncs/appliance/install/guide/primencs_qsg.html">http://www.cisco.com/en/US/docs/wireless/ncs/appliance/install/guide/primencs_qsg.html</a>
<i>Cisco Prime Network Control System CLI command Reference, Release 1.0</i>	<a href="http://www.cisco.com/en/US/docs/wireless/ncs/1.0/command/reference/cli10.html">http://www.cisco.com/en/US/docs/wireless/ncs/1.0/command/reference/cli10.html</a>

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.

