



IoT OD Cluster

- [Overview, on page 1](#)
- [Configure IoT OD Cluster from CLI, on page 1](#)
- [Verify IoT OD Cluster, on page 2](#)

Overview

IoT OD Cluster

Cisco IoT OD for Industrial Wireless is a cloud-based IoT services platform designed to monitor and manage IoT devices and networks. For more information about the IoT OD, see [Introduction to Industrial Wireless](#).

IoT OD Cluster Before Release 17.15.1

Earlier than Cisco UIW Release 17.15.1, selecting the IoT OD cluster for access was not an option. The default setting was auto, which redirected users to either the US or EU cluster based on the geolocation. For example, devices in the United States are redirected to the US cluster and devices outside the United States are redirected to the EU cluster.

IoT OD Cluster in Release 17.15.1

From Cisco UIW Release 17.15.1, you can configure the IoT OD cluster URL to Auto, EU, or US options.

Configure IoT OD Cluster from CLI

Procedure

To configure the IoT OD cluster in an AP, run the following command:

Device#**configure** **iotod-iw cluster** { **auto** | **us** | **eu** }

Note

By default, the auto option is enabled.

After you configure the AP with the required cluster, use the following URL to access the IoT OD.

- For auto use: device.ciscoiot.com
 - For the US, use: us.ciscoiot.com
 - For the EU, use: eu.ciscoiot.com
-

Verify IoT OD Cluster

To verify the IW Service cluster configuration, run the following command:

```
Device#show iotod-iw cluster configuration
IoT Operations Dashboard EU Cluster
```