



Set Up Sensors


- [Sensors, on page 1](#)
- [Claim Sensors, on page 1](#)

Sensors

Use the **Setup > Sensors** option in the Cisco Spaces dashboard to claim the sensors into your wireless networks.

Claim Sensors

Use the MAC addresses of the sensors to claim them into the wireless network.

-
- Step 1** Log in to [Cisco Spaces](#).
- Step 2** In the Cisco Spaces dashboard, click the **Menu** icon () and choose **Setup > Sensors**.
- Step 3** Click **Claim Sensors**.
The **Claim Sensor(s)** slide-in pane is displayed.
- Step 4** In the **Enter a new tag** field, enter the MAC address of the sensor to claim.
- Step 5** Click **Enter**. Use comma (,) as a separator to add multiple MAC addresses and claim multiple sensors at the same time.
- Step 6** Click **Claim**.
The sensor details such as location, status, SSIDs and MAC address are displayed in the **Sensor Management** window.
To unclaim sensors, click the MAC address and click **Unclaim**.
-

