




Set Up Wired Network

- [Set Up Wired Network, on page 1](#)

Set Up Wired Network

The Cisco Spaces: **Connector** enables you to connect your wired and wireless networks with Cisco Spaces.

To set up a wired network, you must have Cisco Catalyst 9300 Series switches and also Cisco Spaces: **Connector** installed on a virtual machine.

Cisco Spaces: Connector 3.0 is now available under the **Menu** () > **Setup** > **Wired Network** section. You can create both 2.x and 3.0 connectors under the **Wired Network**.

Connector 3.0 capabilities such as service association, instance tracking, and metrics visualizations are available in the **Wired Network** section.

For more information about setting up Cisco Spaces: **Connector**, see the *Cisco Spaces: Connector Configuration Guide* at:

https://www.cisco.com/c/en/us/td/docs/wireless/spaces/connector/config/b_connector_30.html.

