



## Set Up Sensors

---

- [Sensors, on page 1](#)
- [Claim Sensors, on page 1](#)

### Sensors

Use the **Setup > Sensors** option in the Cisco Spaces dashboard to claim the sensors into your wireless networks.

### Claim Sensors

Use the MAC addresses of the sensors to claim them into the wireless network.

#### Procedure

---

- Step 1** Log in to Cisco Spaces.
- Step 2** In the Cisco Spaces dashboard, click the **Menu** icon (☰) and choose **Setup > Sensors**.
- Step 3** Click **Claim Sensors**.  
The **Claim Sensor(s)** slide-in pane is displayed.
- Step 4** In the **Enter a new tag** field, enter the MAC address of the sensor to claim.
- Step 5** Click **Enter**. Use comma (,) as a separator to add multiple MAC addresses and claim multiple sensors at the same time.
- Step 6** Click **Claim**.  
The sensor details such as location, status, SSIDs and MAC address are displayed in the **Sensor Management** window.  
To unclaim sensors, click the MAC address and click **Unclaim**.
-

