




Set Up Wired Network

- [Set Up Wired Network, on page 1](#)

Set Up Wired Network

The Cisco Spaces: **Connector** enables you to connect your wired and wireless networks with Cisco Spaces.

To set up a wired network, you must have Cisco Catalyst 9300 Series switches and also Cisco Spaces: **Connector** installed on a virtual machine.

Cisco Spaces: Connector 3.0 is now available under the **Menu** () > **Setup** > **Wired Network** section. You can create 3.0 connectors under the **Wired Network**.

Connector 3.0 capabilities such as service association, instance tracking, and metrics visualizations, are available in the **Wired Network** section.

The Wired Network page includes connector and switch management actions, such as **Create Connector**, **View Connectors**, **Add Switches**, and **View Switches**. In the Configure Spaces Connector section, you can create connectors.

- In the **Configure Spaces Connector** section.
 - Click **Create Connectors**.
 - Click **Create New Connector**.
 - In the **Spaces Connector Name** field, enter the spaces connector name.
 - Click **Save**.
 - Click **View Connectors**.
 - In the **Actions** column, click the Test Connectivity, Edit, or Delete icon if needed.
 - In the **Add Switch** section.
 - Click **Add Switches**.
 - Select **Add new switch**.
- Select **Connectors** from the drop-down list.

In the **Switch Name** field, enter the Switch name.

In the **Switch IP** field, enter Switch IP.

In the **Netconfig Username** field, enter the Netconfig Username.

Click **Add Location**, then select the location from the location hierarchy.

- Select **Choose switches from another connector**.

Click **Add Location**, then select the location from the location hierarchy.

Choose connector from the drop-down list.

- Select **Import switches from spreadsheet**.

Select **Connector** from the drop-down list.

Follow the on-screen instructions.

Click **Next**.

- Click **Save**.

- Click **View Switches**.

- In the **Actions** column, click the Test Connectivity, Edit, or Delete icon if required.

For more information about setting up Cisco Spaces: **Connector**, refer to the *Cisco Spaces: Connector Configuration Guide* at:

https://www.cisco.com/c/en/us/td/docs/wireless/spaces/connector/config/b_connector_30.html.