



## Hotspot Service

---

- [Configure Hotspot Service, on page 1](#)
- [Connector Dashboard: Hotspot service, on page 3](#)
- [Open Ports for Hotspot Service, on page 3](#)


## Configure Hotspot Service

### Procedure

---


- Step 1** In the Cisco Spaces dashboard left navigation pane, click **Setup** and choose **Wireless Networks**.
- Step 2** In the **Connect your wireless network** window that is displayed, go to the **Step 2** area and click **View Connectors**.

Figure 1: View Connectors

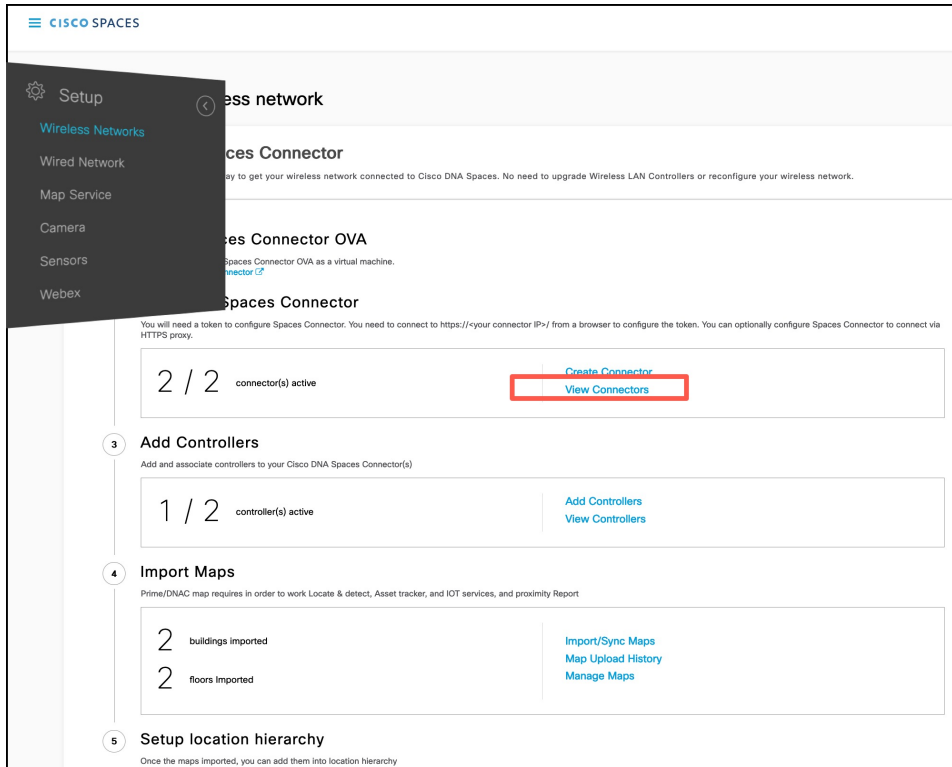

**Step 3** In the connector details window that is displayed, choose a connector and click **Add Services**.

Figure 2: Add Service

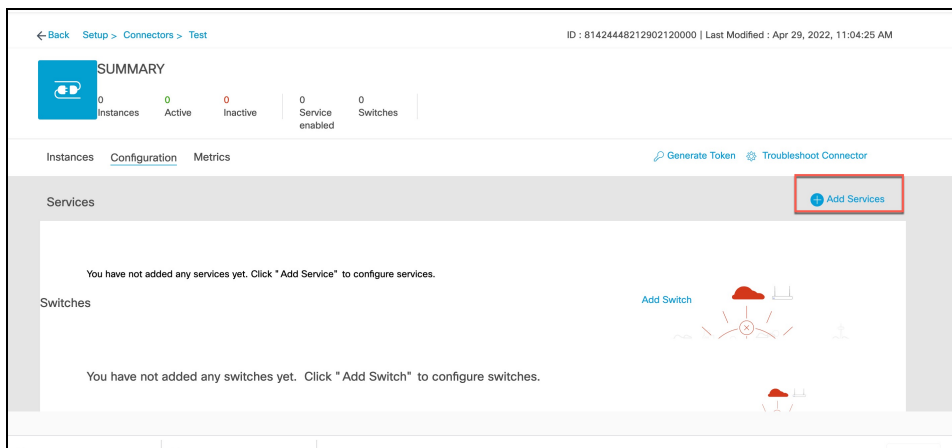

**Step 4** In the **Add Service** window that is displayed, choose **hotspot** and click **Add**.

**Note**  
**service-manager** is added by default.

In the **Connector Details** window, you can see that the number of services enabled has increased.

## Connector Dashboard: Hotspot service

Figure 3: Hotspot Service


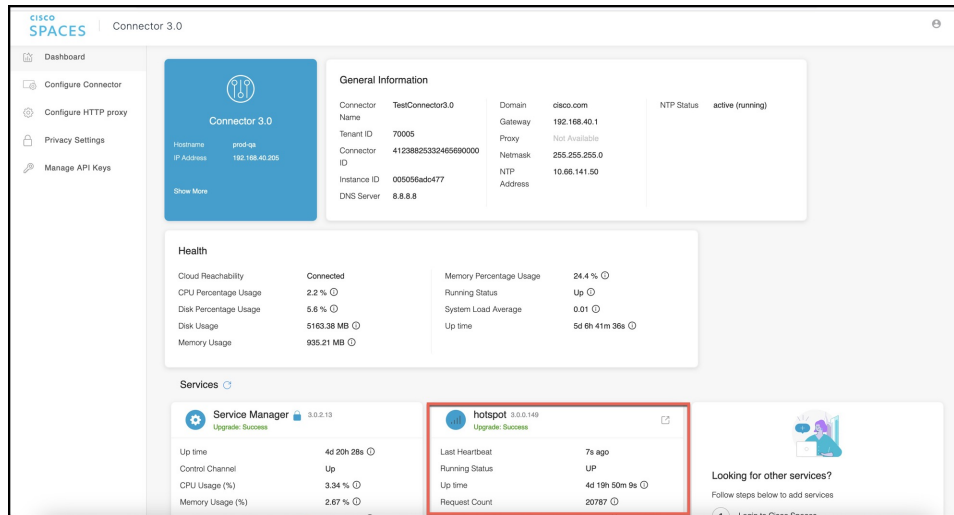



Figure 4: Hotspot Service: Details

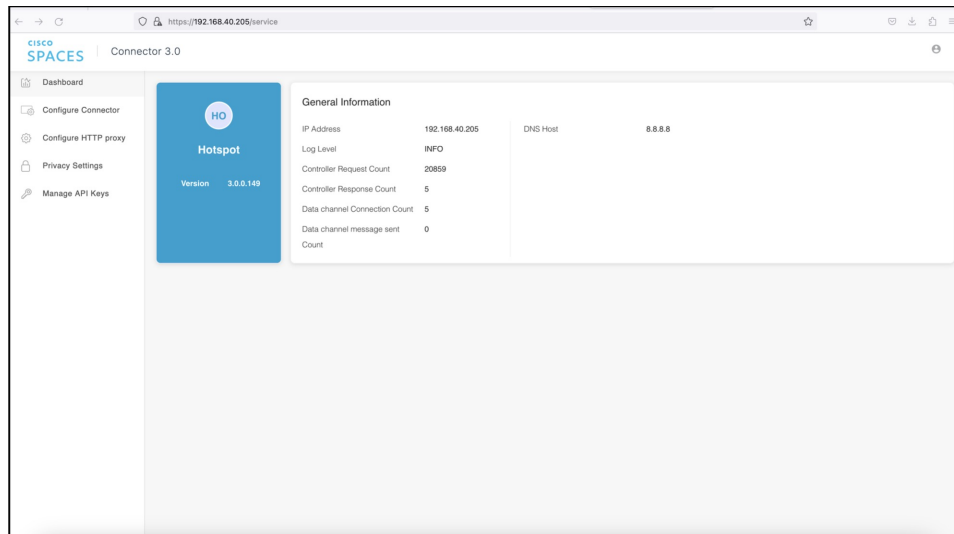

## Open Ports for Hotspot Service

This section lists the connector ports that must be open for the proper functioning of the hotspot service.

Figure 5: Open Ports for Hotspot Service

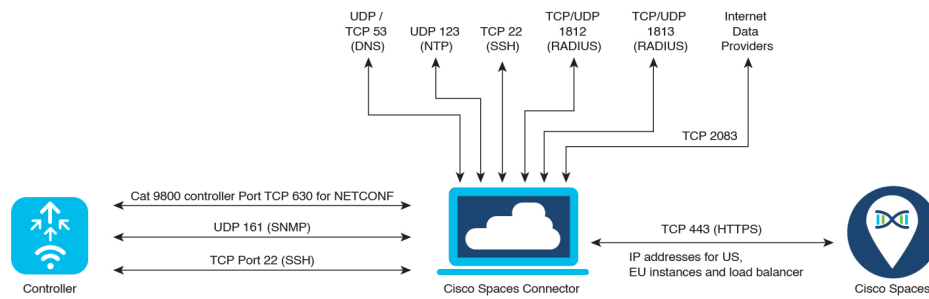

Test the connectivity between the connector and the wireless controller. See [Configure and Test Connectivity between the Connector 3 and AireOS controller](#) or [Configure and Test the Connectivity between a Connector 3 and a Catalyst 9800 controller](#).