



Check OpenRoaming Activation

- [Check OpenRoaming Activation, on page 1](#)

Check OpenRoaming Activation

After configuring the controller-based network or Meraki network, confirm activation before client testing.

Procedure

- Step 1** In Cisco Spaces, check the OpenRoaming activation status on the **OpenRoaming** dashboard.
 - Step 2** For Catalyst 9800 and AireOS deployments, confirm that the hotspot-enabled connector remains **Running** and that the controller remains associated with the OpenRoaming profile.
 - Step 3** For Cisco Meraki deployments, confirm that pilot clients appear under **Network-wide > Clients** in Meraki Dashboard after testing.
 - Step 4** For Cisco Meraki deployments, verify that Cisco Spaces API changes were pushed to Meraki by reviewing **Organization > Monitor > Change Log**.
-

