



AMF Command Reference

- [aaa, on page 12](#)
- [amf-global, on page 13](#)
- [amf-global call-control-policy, on page 13](#)
- [amf-global call-control-policy am-policy, on page 16](#)
- [amf-global call-control-policy core-network-type-restriction, on page 16](#)
- [amf-global call-control-policy default-slice, on page 17](#)
- [amf-global call-control-policy feature-support-ie ims-vops-service-3gpp no-support, on page 17](#)
- [amf-global call-control-policy feature-support-ie ims-vops-service-3gpp support, on page 18](#)
- [amf-global call-control-policy local-cause-code-map auth-failure, on page 19](#)
- [amf-global call-control-policy local-cause-code-map clear-subscriber, on page 19](#)
- [amf-global call-control-policy local-cause-code-map ctxt-xfer-fail-amf, on page 20](#)
- [amf-global call-control-policy local-cause-code-map ctxt-xfer-fail-mme, on page 21](#)
- [amf-global call-control-policy local-cause-code-map dnn-mismatch, on page 21](#)
- [amf-global call-control-policy local-cause-code-map dnn-not-subscribed, on page 22](#)
- [amf-global call-control-policy local-cause-code-map gw-unreachable, on page 22](#)
- [amf-global call-control-policy local-cause-code-map inter-plmn-roaming, on page 23](#)
- [amf-global call-control-policy local-cause-code-map peer-node-unknown, on page 23](#)
- [amf-global call-control-policy local-cause-code-map restricted-zone-code, on page 24](#)
- [amf-global call-control-policy local-cause-code-map smf-selection-failure, on page 25](#)
- [amf-global call-control-policy local-cause-code-map udm-unavailable, on page 25](#)
- [amf-global call-control-policy paging-priority map, on page 26](#)
- [amf-global call-control-policy policy amf-redirection, on page 26](#)
- [amf-global call-control-policy policy context-release, on page 27](#)
- [amf-global call-control-policy policy idle-mode paging, on page 27](#)
- [amf-global call-control-policy policy idle-mode ue-cfg-update, on page 27](#)
- [amf-global call-control-policy policy nssf-interaction, on page 28](#)
- [amf-global call-control-policy policy slicing, on page 28](#)
- [amf-global call-control-policy policy ue-cfg-update, on page 29](#)
- [amf-global call-control-policy policy ue-context-transfer, on page 29](#)
- [amf-global call-control-policy rat-type-restriction, on page 30](#)
- [amf-global call-control-policy registration restrict, on page 31](#)
- [amf-global call-control-policy security-algo security-algo, on page 31](#)
- [amf-global call-control-policy timers context-transfer-guard, on page 32](#)

- amf-global call-control-policy timers ho-supervisory, on page 32
- amf-global call-control-policy timers t3502, on page 33
- amf-global call-control-policy timers t3512, on page 33
- amf-global call-control-policy timers t3513, on page 33
- amf-global call-control-policy timers t3522, on page 34
- amf-global call-control-policy timers t3550, on page 34
- amf-global call-control-policy timers t3555, on page 35
- amf-global call-control-policy timers t3560, on page 35
- amf-global call-control-policy timers t3570, on page 36
- amf-global call-control-policy timers tguard, on page 36
- amf-global call-control-policy timers tidle, on page 37
- amf-global call-control-policy timers tidt, on page 37
- amf-global call-control-policy timers tn2, on page 38
- amf-global call-control-policy timers tpurge, on page 38
- amf-global dnn-policy, on page 38
- amf-global dnn-policy network-element-profile-list, on page 39
- amf-global nf-profile, on page 39
- amf-global nf-profile nf-type-profile, on page 40
- amf-global nf-profile nf-type-profile grpc-endpoint, on page 40
- amf-global nf-profile nf-type-profile http-endpoint, on page 41
- amf-global operator-policy, on page 41
- amf-global operator-policy network-element-profile-list, on page 42
- amf-global paging-algo, on page 43
- amf-global paging-map, on page 44
- amf-global paging-map precedence, on page 44
- amf-global paging-profile, on page 45
- amf-global paging-profile paging-stage, on page 46
- amf-global plmn-policy, on page 46
- amf-global supi-policy, on page 47
- amf-global timers proc-timeout ue-registration, on page 47
- amf-services, on page 47
- amf-services guamis, on page 49
- amf-services local-cause-code-map auth-failure, on page 49
- amf-services local-cause-code-map clear-subscriber, on page 50
- amf-services local-cause-code-map ctxt-xfer-fail-amf, on page 51
- amf-services local-cause-code-map ctxt-xfer-fail-mme, on page 51
- amf-services local-cause-code-map dnn-mismatch, on page 52
- amf-services local-cause-code-map dnn-not-subscribed, on page 52
- amf-services local-cause-code-map gw-unreachable, on page 53
- amf-services local-cause-code-map inter-plmn-roaming, on page 53
- amf-services local-cause-code-map peer-node-unknown, on page 54
- amf-services local-cause-code-map restricted-zone-code, on page 54
- amf-services local-cause-code-map smf-selection-failure, on page 55
- amf-services local-cause-code-map udm-unavailable, on page 55
- amf-services locality oauth2-enabled, on page 56
- amf-services peer-mme gummei, on page 56

- [amf-services peer-mme tai-match](#), on page 57
- [amf-services peer-mme tai-match tac](#), on page 58
- [amf-services peer-mme tai-match tac any](#), on page 58
- [amf-services peer-mme tai-match tac startval](#), on page 58
- [amf-services peer-mme tai-match tac startval to](#), on page 59
- [amf-services pgw](#), on page 60
- [amf-services relative-amf-capacity](#), on page 60
- [amf-services tai-groups](#), on page 60
- [amf-tools](#), on page 61
- [amf-tools amf-mock-tool](#), on page 61
- [amf-tools lattice](#), on page 61
- [apn-groups](#), on page 62
- [apn-groups apns](#), on page 63
- [apn-profiles](#), on page 63
- [cd](#), on page 63
- [cdl clear sessions](#), on page 64
- [cdl kafka](#), on page 64
- [cdl show sessions](#), on page 65
- [cdl show status](#), on page 66
- [clear ipam](#), on page 67
- [clear ipam](#), on page 67
- [clear subscriber](#), on page 67
- [clear subscriber](#), on page 68
- [clear subscriber clear-opt ran-opt](#), on page 69
- [client http header](#), on page 69
- [client http ping](#), on page 70
- [client inbound interface](#), on page 70
- [client inbound interface limit overload](#), on page 71
- [client inbound interface limit pending](#), on page 71
- [client inbound limit overload](#), on page 71
- [client inbound limit pending](#), on page 72
- [client outbound host ping](#), on page 72
- [client outbound interface](#), on page 73
- [client outbound interface host ping](#), on page 73
- [client outbound interface limit consecutive failure](#), on page 74
- [client outbound interface limit pending](#), on page 74
- [client outbound limit consecutive failure](#), on page 74
- [client outbound limit pending](#), on page 75
- [commit](#), on page 75
- [compare](#), on page 76
- [config](#), on page 76
- [config-error info](#), on page 77
- [coverage](#), on page 77
- [datastore dbs](#), on page 77
- [datastore dbs endpoints](#), on page 78
- [datastore notification-ep](#), on page 78

- [datastore session-db](#), on page 79
- [datastore session-db endpoints](#), on page 79
- [debug-settings amf-ngap-ep](#), on page 79
- [debug-settings amf-rest-ep](#), on page 80
- [debug-settings amf-sctp-lb](#), on page 80
- [debug-settings amf-service](#), on page 80
- [deployment](#), on page 81
- [deployment resource](#), on page 82
- [describe](#), on page 82
- [diagnostics](#), on page 83
- [diagnostics info](#), on page 84
- [dump](#), on page 84
- [edr](#), on page 84
- [edr edrsubscribers](#), on page 85
- [edr file files](#), on page 85
- [edr file files disable](#), on page 86
- [edr file files flush](#), on page 86
- [edr file files limit](#), on page 86
- [edr file files procedure-id disable-event-id](#), on page 87
- [edr file files procedure-id disable-event-id disable-inner disable](#), on page 87
- [edr file files procedure-id disable-event-id disable-inner event-id disable-field-id](#), on page 88
- [edr file files procedure-id disable-event-id disable-inner event-id disable-field-id disable](#), on page 88
- [endpoint all](#), on page 88
- [endpoint info](#), on page 89
- [exit](#), on page 89
- [geo maintenance](#), on page 89
- [geo reset-role](#), on page 89
- [geo switch-role](#), on page 90
- [geomonitor podmonitor pods](#), on page 90
- [geomonitor remoteclustermonitor](#), on page 91
- [geomonitor trafficMonitor](#), on page 92
- [geomonitor vipmonitor instance](#), on page 92
- [geomonitor vipmonitor instance vips](#), on page 92
- [group nf-mgmt](#), on page 93
- [group nf-mgmt heartbeat](#), on page 94
- [group nrf discovery](#), on page 94
- [group nrf discovery service type nrf](#), on page 95
- [group nrf discovery service type nrf endpoint-profile](#), on page 95
- [group nrf discovery service type nrf endpoint-profile endpoint-name](#), on page 96
- [group nrf discovery service type nrf endpoint-profile endpoint-name primary ip-address](#), on page 97
- [group nrf discovery service type nrf endpoint-profile endpoint-name secondary ip-address](#), on page 98
- [group nrf discovery service type nrf endpoint-profile endpoint-name tertiary ip-address](#), on page 100
- [group nrf discovery service type nrf endpoint-profile version uri-version](#), on page 101
- [group nrf mgmt](#), on page 102
- [group nrf mgmt service type nrf](#), on page 102
- [group nrf mgmt service type nrf endpoint-profile](#), on page 103

- group nrf mgmt service type nrf endpoint-profile endpoint-name, on page 103
- group nrf mgmt service type nrf endpoint-profile endpoint-name primary ip-address, on page 104
- group nrf mgmt service type nrf endpoint-profile endpoint-name secondary ip-address, on page 106
- group nrf mgmt service type nrf endpoint-profile endpoint-name tertiary ip-address, on page 107
- group nrf mgmt service type nrf endpoint-profile version uri-version, on page 109
- help, on page 109
- history, on page 111
- id, on page 111
- idle-timeout, on page 111
- ignore-leading-space, on page 111
- infra metrics experimental, on page 112
- infra metrics verbose verboseLevels, on page 112
- infra transaction limit, on page 113
- infra transaction limit consecutive same, on page 113
- infra transaction loop, on page 114
- infra transaction loop category, on page 114
- infra transaction loop category threshold, on page 114
- infra transaction loop category threshold thresholds, on page 115
- instance instance-id, on page 115
- instance instance-id endpoint ep, on page 116
- instance instance-id endpoint ep interface, on page 117
- instance instance-id endpoint ep interface dispatcher, on page 118
- instance instance-id endpoint ep interface internal base-port, on page 120
- instance instance-id endpoint ep interface sla, on page 120
- instance instance-id endpoint ep interface vip, on page 121
- instance instance-id endpoint ep interface vip6, on page 121
- instance instance-id endpoint ep internal base-port, on page 122
- instance instance-id endpoint ep internal-port, on page 122
- instance instance-id endpoint ep retransmission, on page 123
- instance instance-id endpoint ep system-health-level crash, on page 124
- instance instance-id endpoint ep system-health-level critical, on page 124
- instance instance-id endpoint ep system-health-level warn, on page 125
- instance instance-id endpoint ep vip, on page 126
- instance instance-id endpoint ep vip6, on page 126
- instances instance, on page 127
- job, on page 127
- k8 amf local etcd endpoint, on page 128
- k8 label pod-group-config, on page 128
- k8 label sctp-layer, on page 129
- k8s single-node, on page 129
- leaf-prompting, on page 130
- license smart register, on page 130
- license smart deregister, on page 131
- license smart renew, on page 131
- license smart status, on page 131
- local-instance, on page 132

- logging async application enable, on page 132
- logging async monitor-subscriber enable, on page 133
- logging async tracing enable, on page 133
- logging async transaction enable, on page 134
- logging error, on page 134
- logging level, on page 134
- logging logger, on page 136
- logging logger level, on page 136
- logging transaction, on page 138
- logout, on page 139
- monitor protocol, on page 139
- monitor subscriber, on page 140
- no, on page 141
- nrf discovery-info discovery-filter, on page 141
- nrf discovery-info discovery-filter nf-discovery-profile, on page 142
- nrf discovery-info discovery-filter nf-discovery-profile nf-service, on page 142
- nrf registration-info, on page 142
- nrf subscription-info, on page 142
- paginate, on page 143
- patch amf-ngap-ep, on page 143
- patch amf-rest-ep, on page 143
- patch amf-sctp-lb, on page 144
- patch amf-service, on page 144
- peers, on page 144
- peers all, on page 144
- profile emergency-profile emergency, on page 145
- profile emergency-profile emergency extended-emergency-num, on page 145
- profile emergency-profile emergency local-emergency-num, on page 146
- profile emergency-profile emergency slice, on page 147
- profile network-element amf, on page 147
- profile network-element amf query-params, on page 148
- profile network-element ausf, on page 148
- profile network-element ausf query-params, on page 149
- profile network-element nssf, on page 149
- profile network-element nssf query-params, on page 150
- profile network-element pcf, on page 150
- profile network-element pcf query-params, on page 151
- profile network-element smf, on page 151
- profile network-element smf query-params, on page 152
- profile network-element udm, on page 153
- profile network-element udm query-params, on page 153
- profile nf-client nf-type amf amf-profile, on page 154
- profile nf-client nf-type amf amf-profile locality, on page 154
- profile nf-client nf-type amf amf-profile locality service name type, on page 154
- profile nf-client nf-type amf amf-profile locality service name type endpoint-profile, on page 155

- profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name, on page 157
- profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions, on page 158
- profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name primary ip-address, on page 160
- profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name secondary ip-address, on page 162
- profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address, on page 163
- profile nf-client nf-type amf amf-profile locality service name type endpoint-profile version uri-version, on page 165
- profile nf-client nf-type ausf ausf-profile, on page 166
- profile nf-client nf-type ausf ausf-profile locality, on page 166
- profile nf-client nf-type ausf ausf-profile locality service name type, on page 167
- profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile, on page 167
- profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name, on page 169
- profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions, on page 171
- profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name primary ip-address, on page 173
- profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name secondary ip-address, on page 174
- profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address, on page 176
- profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile version uri-version, on page 177
- profile nf-client nf-type chf chf-profile, on page 178
- profile nf-client nf-type chf chf-profile locality, on page 179
- profile nf-client nf-type chf chf-profile locality service name type, on page 179
- profile nf-client nf-type chf chf-profile locality service name type endpoint-profile, on page 180
- profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name, on page 181
- profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions, on page 183
- profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name primary ip-address, on page 185
- profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name secondary ip-address, on page 186
- profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address, on page 188
- profile nf-client nf-type chf chf-profile locality service name type endpoint-profile version uri-version, on page 189
- profile nf-client nf-type eir eir-profile, on page 190
- profile nf-client nf-type eir eir-profile locality, on page 191
- profile nf-client nf-type eir eir-profile locality service name type, on page 191
- profile nf-client nf-type eir eir-profile locality service name type endpoint-profile, on page 192

- [profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name](#), on page 194
- [profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions](#), on page 195
- [profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name primary ip-address](#), on page 197
- [profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name secondary ip-address](#), on page 199
- [profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name tertiary ip-address](#), on page 200
- [profile nf-client nf-type eir eir-profile locality service name type endpoint-profile version uri-version](#), on page 202
- [profile nf-client nf-type group nrf auth service type nrf oauth2](#), on page 203
- [profile nf-client nf-type nssf nssf-profile](#), on page 204
- [profile nf-client nf-type nssf nssf-profile locality](#), on page 204
- [profile nf-client nf-type nssf nssf-profile locality service name type](#), on page 205
- [profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile](#), on page 205
- [profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name](#), on page 207
- [profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions](#), on page 209
- [profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name primary ip-address](#), on page 211
- [profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name secondary ip-address](#), on page 212
- [profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address](#), on page 214
- [profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile version uri-version](#), on page 215
- [profile nf-client nf-type oauthenabled](#), on page 216
- [profile nf-client nf-type pcf pcf-profile](#), on page 218
- [profile nf-client nf-type pcf pcf-profile locality](#), on page 218
- [profile nf-client nf-type pcf pcf-profile locality service name type](#), on page 218
- [profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile](#), on page 219
- [profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name](#), on page 221
- [profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions](#), on page 223
- [profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name primary ip-address](#), on page 225
- [profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name secondary ip-address](#), on page 226
- [profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address](#), on page 228
- [profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile version uri-version](#), on page 229
- [profile nf-client nf-type spp spp-profile](#), on page 230
- [profile nf-client nf-type spp spp-profile locality](#), on page 231

- [profile nf-client nf-type sepp sepp-profile locality service name type, on page 231](#)
- [profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile, on page 232](#)
- [profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile endpoint-name, on page 233](#)
- [profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions, on page 235](#)
- [profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile endpoint-name primary ip-address, on page 237](#)
- [profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile endpoint-name secondary ip-address, on page 238](#)
- [profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile endpoint-name tertiary ip-address, on page 240](#)
- [profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile version uri-version, on page 241](#)
- [profile nf-client nf-type smf smf-profile, on page 242](#)
- [profile nf-client nf-type smf smf-profile locality, on page 243](#)
- [profile nf-client nf-type smf smf-profile locality service name type, on page 243](#)
- [profile nf-client nf-type smf smf-profile locality service name type endpoint-profile, on page 244](#)
- [profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name, on page 246](#)
- [profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions, on page 247](#)
- [profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name primary ip-address, on page 249](#)
- [profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name secondary ip-address, on page 251](#)
- [profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address, on page 252](#)
- [profile nf-client nf-type smf smf-profile locality service name type endpoint-profile version uri-version, on page 254](#)
- [profile nf-client nf-type udm udm-profile, on page 255](#)
- [profile nf-client nf-type udm udm-profile locality, on page 255](#)
- [profile nf-client nf-type udm udm-profile locality service name type, on page 256](#)
- [profile nf-client nf-type udm udm-profile locality service name type endpoint-profile, on page 256](#)
- [profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name, on page 258](#)
- [profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions, on page 260](#)
- [profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name primary ip-address, on page 262](#)
- [profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name secondary ip-address, on page 263](#)
- [profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name tertiary ip-address, on page 265](#)
- [profile nf-client nf-type udm udm-profile locality service name type endpoint-profile version uri-version, on page 266](#)
- [profile nf-client-failure nf-type amf, on page 267](#)
- [profile nf-client-failure nf-type amf profile failure-handling, on page 267](#)

- [profile nf-client-failure nf-type amf profile failure-handling service name type, on page 268](#)
- [profile nf-client-failure nf-type amf profile failure-handling service name type message type, on page 269](#)
- [profile nf-client-failure nf-type amf profile failure-handling service name type message type status-code httpv2, on page 269](#)
- [profile nf-client-failure nf-type ausf, on page 271](#)
- [profile nf-client-failure nf-type ausf profile failure-handling, on page 271](#)
- [profile nf-client-failure nf-type ausf profile failure-handling service name type, on page 272](#)
- [profile nf-client-failure nf-type ausf profile failure-handling service name type message type, on page 272](#)
- [profile nf-client-failure nf-type ausf profile failure-handling service name type message type status-code httpv2, on page 273](#)
- [profile nf-client-failure nf-type chf, on page 275](#)
- [profile nf-client-failure nf-type chf profile failure-handling, on page 275](#)
- [profile nf-client-failure nf-type chf profile failure-handling service name type, on page 276](#)
- [profile nf-client-failure nf-type chf profile failure-handling service name type message type, on page 276](#)
- [profile nf-client-failure nf-type chf profile failure-handling service name type message type status-code httpv2, on page 277](#)
- [profile nf-client-failure nf-type eir, on page 279](#)
- [profile nf-client-failure nf-type eir profile failure-handling, on page 279](#)
- [profile nf-client-failure nf-type eir profile failure-handling service name type, on page 279](#)
- [profile nf-client-failure nf-type eir profile failure-handling service name type message type, on page 280](#)
- [profile nf-client-failure nf-type eir profile failure-handling service name type message type status-code httpv2, on page 280](#)
- [profile nf-client-failure nf-type nrf, on page 282](#)
- [profile nf-client-failure nf-type nrf profile failure-handling, on page 283](#)
- [profile nf-client-failure nf-type nrf profile failure-handling service name type, on page 283](#)
- [profile nf-client-failure nf-type nrf profile failure-handling service name type message type, on page 284](#)
- [profile nf-client-failure nf-type nrf profile failure-handling service name type message type status-code httpv2, on page 285](#)
- [profile nf-client-failure nf-type nssf, on page 285](#)
- [profile nf-client-failure nf-type nssf profile failure-handling, on page 285](#)
- [profile nf-client-failure nf-type nssf profile failure-handling service name type, on page 286](#)
- [profile nf-client-failure nf-type nssf profile failure-handling service name type message type, on page 286](#)
- [profile nf-client-failure nf-type nssf profile failure-handling service name type message type status-code httpv2, on page 287](#)
- [profile nf-client-failure nf-type pcf, on page 289](#)
- [profile nf-client-failure nf-type pcf profile failure-handling, on page 289](#)
- [profile nf-client-failure nf-type pcf profile failure-handling service name type, on page 289](#)
- [profile nf-client-failure nf-type pcf profile failure-handling service name type message type, on page 290](#)
- [profile nf-client-failure nf-type pcf profile failure-handling service name type message type status-code httpv2, on page 291](#)
- [profile nf-client-failure nf-type spp, on page 293](#)
- [profile nf-client-failure nf-type spp profile failure-handling, on page 293](#)
- [profile nf-client-failure nf-type spp profile failure-handling service name type, on page 293](#)

- [profile nf-client-failure nf-type sepp profile failure-handling service name type message type](#), on page 294
- [profile nf-client-failure nf-type sepp profile failure-handling service name type message type status-code httpv2](#), on page 294
- [profile nf-client-failure nf-type smf](#), on page 296
- [profile nf-client-failure nf-type smf profile failure-handling](#), on page 297
- [profile nf-client-failure nf-type smf profile failure-handling service name type](#), on page 297
- [profile nf-client-failure nf-type smf profile failure-handling service name type message type](#), on page 298
- [profile nf-client-failure nf-type smf profile failure-handling service name type message type status-code httpv2](#), on page 298
- [profile nf-client-failure nf-type udm](#), on page 300
- [profile nf-client-failure nf-type udm profile failure-handling](#), on page 300
- [profile nf-client-failure nf-type udm profile failure-handling service name type](#), on page 301
- [profile nf-client-failure nf-type udm profile failure-handling service name type message type](#), on page 302
- [profile nf-client-failure nf-type udm profile failure-handling service name type message type status-code httpv2](#), on page 302
- [profile nf-pair nf-type](#), on page 304
- [profile nf-pair nf-type cache invalidation true](#), on page 306
- [profile nf-pair nf-type locality](#), on page 306
- [profile nf-pair nf-type nrf-auth-group nrf-discovery-group](#), on page 307
- [quit](#), on page 308
- [reconcile](#), on page 308
- [resource pod](#), on page 308
- [resource pod cpu](#), on page 308
- [resource pod labels](#), on page 309
- [resource pod memory](#), on page 309
- [resources](#), on page 310
- [resources info](#), on page 310
- [router bfd instance instance-id](#), on page 310
- [router bfd instance instance-id interface-list](#), on page 310
- [router bfd instance instance-id interface-list neighbors](#), on page 311
- [router bgplist](#), on page 311
- [router bgplist bfd](#), on page 312
- [router bgplist interfaceList](#), on page 313
- [router bgplist interfaceList bondingInterfaces](#), on page 313
- [router bgplist interfaceList neighbors](#), on page 313
- [router bgplist policies](#), on page 314
- [router monitor-interface interface-list](#), on page 315
- [rpc](#), on page 316
- [rpc all](#), on page 316
- [running-status](#), on page 316
- [running-status info](#), on page 316
- [screen-length](#), on page 317
- [screen-width](#), on page 317

aaa

- [search](#), on page 317
- [search](#), on page 317
- [send](#), on page 318
- [sessions](#), on page 318
- [sessions affinity](#), on page 319
- [sessions commit-pending](#), on page 319
- [show](#), on page 319
- [show bfd-neighbor](#), on page 319
- [show bgp-global](#), on page 320
- [show bgp-kernel-route](#), on page 320
- [show bgp-neighbors](#), on page 320
- [show bgp-route-summary](#), on page 321
- [show bgp-routes](#), on page 321
- [show edr](#), on page 321
- [show geo-maintenance-mode](#), on page 322
- [show georeplication](#), on page 322
- [show local-interface-status](#), on page 322
- [show role](#), on page 323
- [show subscriber](#), on page 323
- [show subscriber ran-opt](#), on page 324
- [show-defaults](#), on page 324
- [slice-group](#), on page 325
- [slice-group slices](#), on page 325
- [smiuser](#), on page 326
- [system](#), on page 327
- [tai-group](#), on page 328
- [tai-group tais](#), on page 328
- [tai-group tais tailist](#), on page 329
- [tai-group tais tailist tac](#), on page 329
- [tai-group tais tailist tac range](#), on page 330
- [terminal](#), on page 330
- [timestamp](#), on page 331
- [tracing](#), on page 331
- [tracing endpoint](#), on page 331
- [who](#), on page 332

aaa

Configures the AAA-based user management parameters.

Command Modes

Exec

Syntax Description

```
aaa authentication users user admin change-password { old-password
old_password | new-password new_password | confirm-password new_password }
```

old-password *old_password*

Specify the current password.

Must be a string.

new-password *new_password*

Specify the new password.

Must be a string.

confirm-password *new_password*

Specify the new password once again to change the password.

Must be a string.

Usage Guidelines	Use this command to configure the AAA-based user management parameters.
-------------------------	---

amf-global

Configures global AMF parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	amf-global amf-name <i>amf_name</i>
---------------------------	--

amf-name *amf_name*

Specify name of the AMF.

Must be a string.

Usage Guidelines	Use this command to configure global AMF parameters. The CLI prompt changes to the AMF Global Configuration mode (config-amf-global).
-------------------------	---

amf-global call-control-policy

Configures call control policy.

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)
----------------------	---

Syntax Description	call-control-policy <i>cc_policy_name</i> { asynch-type-comm { false true } check-eir { false true } default-dnn <i>default_dnn</i> disable-init-csr-reg { false true } disable-rfsp-pcf { false true } enable-auth-periodic-reg { false true } enable-auth-svc-req { false true } enable-guti-realloc-periodic-reg { false true } enable-guti-realloc-service-req { false true } report-uli { false true } retrieve-imei { false true } }
---------------------------	---

asynch-type-comm { false | true }

Specify whether to enable or disable asynchronous communication.

Must be one of the following:

- **false**
- **true**

Default Value: false.

call-control-policy *cc_policy_name*

Specify the name of the Call Control Policy.

Must be a string.

check-eir { false | true }

Specify whether to enable or disable the parameters to check EIR.

Must be one of the following:

- **false**
- **true**

Default Value: false.

default-dnn *default_dnn*

Specify the default DNN.

Must be a string.

disable-init-csr-reg { false | true }

Specify whether to enable or disable initial CSR registration.

Must be one of the following:

- **false**
- **true**

Default Value: true.

disable-rfsp-pcf { false | true }

Specify whether to enable or disable RFSP PCF.

Must be one of the following:

- **false**
- **true**

Default Value: false.

enable-auth-periodic-reg { false | true }

Specify whether to enable or disable periodic authentication registration.

Must be one of the following:

- **false**
- **true**

Default Value: false.

enable-auth-svc-req { false | true }

Specify whether to enable or disable authentication service request.

Must be one of the following:

- **false**
- **true**

Default Value: false.

enable-guti-realloc-periodic-reg { false | true }

Specify whether to enable or disable GUTI reallocation periodic registration.

Must be one of the following:

- **false**
- **true**

Default Value: true.

enable-guti-realloc-service-req { false | true }

Specify whether to enable or disable GUTI reallocation service request.

Must be one of the following:

- **false**
- **true**

Default Value: false.

report-uli { false | true }

Specify whether to enable or disable ULI report.

Must be one of the following:

- **false**
- **true**

Default Value: false.

amf-global call-control-policy am-policy**retrieve-imei { false | true }**

Specify whether to enable or disable the parameters to retrieve IMEI.

Must be one of the following:

- **false**
- **true**

Default Value: false.

tai-group *tai_group_name*

Specify name of the TAI group.

Usage Guidelines

Use this command to configure call control policy parameters.

amf-global call-control-policy am-policy

Configures global AM policy parameters.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description**am-policy skip { false | true }****skip { false | true }**

Specify whether to skip fetching the AM Policy.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines

Use this command to configure global AM parameters.

amf-global call-control-policy core-network-type-restriction

Configures enabling policy to apply CoreNetworkType restriction at AMF.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description**core-network-type-restriction *restriction***

core-network-type-restriction *restriction*

Specify the core network type restriction.

Must be one of the following:

- **5gc**
- **override-udm-restrictions**

Usage Guidelines

Use this command to configure enabling policy to apply CoreNetworkType restriction at AMF.

amf-global call-control-policy default-slice

Configures default slice for the subscriber.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description

default-slice name *slice_name* sst *slice_service_type* sdt *slice_differentiator_type*

name *slice_name*

Specify name of the slice.

Must be a string.

sdt *slice_differentiator_type*

Specify the Slice Differentiator Type (SDT).

Must be a string in the octet-string24 pattern. For information on the octet-string24 pattern, see the Input Pattern Types section.

sst *slice_service_type*

Specify the Slice Service Type (SST).

Must be an integer in the range of 0-255.

Usage Guidelines

Use this command to configure default slice for the subscriber.

amf-global call-control-policy feature-support-ie ims-vops-service-3gpp no-support

Configures ims-vops-service-3gpp support.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*call_control_policy_name*)

amf-global call-control-policy feature-support-ie ims-vops-service-3gpp support

Syntax Description **feature-support-ie ims-vops-service-3gpp [not-supported { false | true }] [reject-voice-centric-ue { false | true }]**

not-supported { false | true }

Specify whether to enable or disable 5G VoPS 3GPP support.

Must be one of the following:

- **false**
- **true**

Default Value: true.

reject-voice-centric-ue { false | true }

Specify if VoPS is not supported whether to reject voice-centric UE registration.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines Use this command to configure ims-vops-service-3gpp support.

amf-global call-control-policy feature-support-ie ims-vops-service-3gpp support

Configures ims-vops-service-3gpp support.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*call_control_policy_name*)

Syntax Description **feature-support-ie ims-vops-service-3gpp support supported { false | true } ue-capability-match-required { false | true }**

supported { false | true }

Specify whether to enable or disable 5G VoPS 3GPP support.

Must be one of the following:

- **false**
- **true**

Default Value: false.

ue-capability-match-required { false | true }

Specify whether if VoPS is supported UE capability check is required or not required.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines Use this command to configure ims-vops-service-3gpp support.

amf-global call-control-policy local-cause-code-map auth-failure

Configures the UE authentication failure condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_service_name*)

Syntax Description **local-cause-code-map auth-failure cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- **illegal-ms**
- **no-suitable-cells-in-tracking-area**
- **plmn-not-allowed**
- **restricted-service-area**
- **roaming-not-allowed-in-this-tracking-area**
- **tracking-area-not-allowed**

Default Value: illegal-ms.

Usage Guidelines Use this command to configure the ue authentication failure condition type parameter.

amf-global call-control-policy local-cause-code-map clear-subscriber

Configures the UE subscriber clear condition type.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

amf-global call-control-policy local-cause-code-map ctxt-xfer-fail-amf

Syntax Description **local-cause-code-map clear-subscriber cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- **5GS-services-not-allowed**
- **no-suitable-cells-in-tracking-area**
- **plmn-not-allowed**
- **restricted-service-area**
- **roaming-not-allowed-in-this-tracking-area**
- **tracking-area-not-allowed**

Default Value: plmn-not-allowed.

Usage Guidelines Use this command to configure the UE subscriber clear condition type.

amf-global call-control-policy local-cause-code-map ctxt-xfer-fail-amf

Configures the AMF context transfer failure condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **local-cause-code-map ctxt-xfer-fail-amf cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- **no-suitable-cells-in-tracking-area**
- **plmn-not-allowed**
- **restricted-service-area**
- **roaming-not-allowed-in-this-tracking-area**
- **tracking-area-not-allowed**
- **ue-identity-not-derived**

Default Value: ue-identity-not-derived.

Usage Guidelines Use this command to configure the AMF context transfer failure condition type parameter.

amf-global call-control-policy local-cause-code-map ctxt-xfer-fail-mme

Configures the MME context transfer failure condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **local-cause-code-map ctxt-xfer-fail-mme cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed
- ue-identity-not-derived

Default Value: ue-identity-not-derived.

Usage Guidelines Use this command to configure the MME context transfer failure condition type parameter.

amf-global call-control-policy local-cause-code-map dnn-mismatch

Configures the DNN mismatch condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **local-cause-code-map dnn-mismatch cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed

amf-global call-control-policy local-cause-code-map dnn-not-subscribed

- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: plmn-not-allowed.

Usage Guidelines Use this command to configure the DNN mismatch condition type parameter.

amf-global call-control-policy local-cause-code-map dnn-not-subscribed

Configures the DNN not subscribed condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **local-cause-code-map dnn-not-subscribed cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- dnn-not-subscribed

Default Value: dnn-not-subscribed.

Usage Guidelines Use this command to configure the DNN not subscribed condition type parameter.

amf-global call-control-policy local-cause-code-map gw-unreachable

Configures the GW Unreachable Condition Type parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **local-cause-code-map gw-unreachable cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area

- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: no-suitable-cells-in-tracking-area.

Usage Guidelines	Use this command to configure the GW Unreachable Condition Type parameter.
-------------------------	--

amf-global call-control-policy local-cause-code-map inter-plmn-roaming

Configures the inter-PLMN roaming condition type parameter.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	<code>local-cause-code-map inter-plmn-roaming cause-code-5gmm cause_code_5gmm</code>
---------------------------	--

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- 5GS-services-not-allowed
- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: plmn-not-allowed.

Usage Guidelines	Use this command to configure the inter-PLMN roaming condition type parameter.
-------------------------	--

amf-global call-control-policy local-cause-code-map peer-node-unknown

Configures the peer node no response condition type parameter.

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy- <i>policy_name</i>)
----------------------	---

amf-global call-control-policy local-cause-code-map restricted-zone-code

Syntax Description **local-cause-code-map peer-node-unknown cause-code-5gmm cause_code_5gmm**

cause-code-5gmm cause_code_5gmm

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed
- ue-identity-not-derived

Default Value: ue-identity-not-derived.

Usage Guidelines Use this command to configure the peer node no response condition type parameter.

amf-global call-control-policy local-cause-code-map restricted-zone-code

Configures the restricted zone code condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **local-cause-code-map restricted-zone-code cause-code-5gmm cause_code_5gmm**

cause-code-5gmm cause_code_5gmm

Specify the condition type.

Must be one of the following:

- 5GS-services-not-allowed
- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: no-suitable-cells-in-tracking-area.

Usage Guidelines Use this command to configure the restricted zone code condition type parameter.

amf-global call-control-policy local-cause-code-map smf-selection-failure

Configures the SMF selection failure condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **local-cause-code-map smf-selection-failure cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: no-suitable-cells-in-tracking-area.

Usage Guidelines Use this command to configure the SMF selection failure condition type parameter.

amf-global call-control-policy local-cause-code-map udm-unavailable

Configures the UDM not available condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **local-cause-code-map udm-unavailable cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area

amf-global call-control-policy paging-priority map

- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: no-suitable-cells-in-tracking-area.

Usage Guidelines

Use this command to configure the UDM not available condition type parameter.

amf-global call-control-policy paging-priority map

Configures mapping ARP from SMF to Ngap paging priority.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **paging-priority map arp *arp_value* ngap-paging-priority *ngap_paging_priority***

arp *arp_value*

Specify the Allocation and Retention Priority (ARP) value from SMF.

Must be an integer in the range of 1-15.

ngap-paging-priority *ngap_paging_priority*

Specify the paging priority in the paging message.

Must be an integer in the range of 0-7.

Usage Guidelines

Use this command to configure mapping ARP from SMF to Ngap paging priority.

amf-global call-control-policy policy amf-redirection

Configures AMF redirection parameters.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **policy amf-redirection { enabled | disabled }**

enabled{ false | true }

Specify whether to enable or disable AMF redirection.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines Use this command to configure AMF redirection parameters.

amf-global call-control-policy policy context-release

Configures UE Context release procedure parameters.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description

```
policy context-release force-smf-update { false | true }
```

force-smf-update { false | true }

Specify whether to initiate SMF update without PDU list available in release messages.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines Use this command to configure UE Context release procedure parameters.

amf-global call-control-policy policy idle-mode paging

Configures tailist for paging.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description

```
policy idle-mode paging use-new-tailist
```

use-new-tailist

Specify to use new tailist for paging as last stage.

Usage Guidelines Use this command to configure tailist for paging.

amf-global call-control-policy policy idle-mode ue-cfg-update

Configures enabling paging for UE config.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description

```
policy idle-mode ue-cfg-update initiate-paging
```

amf-global call-control-policy policy nssf-interaction**initiate-paging**

Specify to enable paging for UE config.

Usage Guidelines	Use this command to configure enabling paging for UE config.
-------------------------	--

amf-global call-control-policy policy nssf-interaction

Configures NSSF interaction parameters.

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy- <i>policy_name</i>)
----------------------	---

Syntax Description	policy nssf-interaction { disabled enabled }
---------------------------	---

enabled{ false | true }

Specify whether to enable or disable NSSF interaction.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines	Use this command to configure NSSF interaction parameters.
-------------------------	--

amf-global call-control-policy policy slicing

Configures slicing policy configuration parameters.

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy- <i>policy_name</i>)
----------------------	---

Syntax Description	policy slicing inclusion-mode <i>inclusion_mode</i>
---------------------------	--

inclusion-mode *inclusion_mode*

Specify the NSSAI Inclusion Mode to be send in Registration Accept.

Must be one of the following:

- **A**
- **B**
- **C**
- **D**
- **None**

Default Value: None.

Usage Guidelines

Use this command to configure slicing policy configuration parameters.

amf-global call-control-policy policy ue-cfg-update

Configures UE Config update procedure parameters.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description

```
policy ue-cfg-update [ on-nssf-slice-change { false | true } ] [ on-tai-change { false | true } ]
```

on-nssf-slice-change { false | true }

Specify whether to initiate UE config update procedure if slice parameter from NSSF changes.

Must be one of the following:

- **false**
- **true**

Default Value: false.

on-tai-change { false | true }

Specify whether to initiate UE config update procedure on TAI list changes.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines

Use this command to configure UE Config update procedure parameters.

amf-global call-control-policy policy ue-context-transfer

Configures UE context transfer related parameters.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description

```
policy ue-context-transfer [ allow-interplmn-supi-transfer { false | true } ] [ horizontal-key-derivation { false | true } ] [ use-source-key { false | true } ] [ use-source-pcf { false | true } ]
```

amf-global call-control-policy rat-type-restriction**allow-interIMMn-supI-transfer { false | true }**

Specify whether source AMF sends UE context with SUPI.

Must be one of the following:

- **false**
- **true**

Default Value: false.

horizontal-key-derivation { false | true }

Specify whether source AMF will generate new key every time.

Must be one of the following:

- **false**
- **true**

Default Value: false.

use-source-key { false | true }

Specify whether target AMF will use key received from source AMF.

Must be one of the following:

- **false**
- **true**

Default Value: true.

use-source-pcf { false | true }

Specify whether target AMF sends pcfReselectedInd as true in transfer-update and source AMF clears PCF association.

Must be one of the following:

- **false**
- **true**

Default Value: true.

Usage Guidelines

Use this command to configure UE context transfer related parameters.

amf-global call-control-policy rat-type-restriction

Configures enabling policy to apply RatType restriction at AMF.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description `rat-type-restriction restriction`

rat-type-restriction *restriction*

Specify the RAT type restriction.

Must be one of the following:

- EUTRAN
- NR
- VIRTUAL
- WLAN
- override-udm-restrictions

Usage Guidelines Use this command to configure enabling policy to apply RatType restriction at AMF.

amf-global call-control-policy registration restrict

Configures enabling policy to restrict subscriber for all locations at AMF.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description `registration restrict access-type access_type`

access-type *access_type*

Specify the access type.

Must be one of the following:

- all

Usage Guidelines Use this command to configure enabling policy to restrict subscriber for all locations at AMF.

amf-global call-control-policy security-algo security-algo

Configures multiple algorithms in priority order.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description `security-algo priority [[ciphering-algo ciphering_algorithm] [integrity-prot-algo integrity_protocol_algorithm]]`

ciphering-algo *ciphering_algorithm*

Specify the ciphering algorithm.

amf-global call-control-policy timers context-transfer-guard

Must be one of the following:

- **128-5G-EA1**
- **128-5G-EA2**
- **5G-EA0**

integrity-prot-algo *integrity_protocol_algorithm*

Specify the integrity protocol algorithm.

Must be one of the following:

- **128-5G-IA1**
- **128-5G-IA2**
- **5G-IA0**

security-algo *priority*

Specify the priority.

Must be an integer.

Usage Guidelines

Use this command to configure multiple algorithms in priority order.

amf-global call-control-policy timers context-transfer-guard

Configures the context-transfer-guard timer parameter.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description

timers context-transfer-guard value *timeout_duration*

value *timeout_duration*

Specify the timeout period in seconds. Configure guard timer values, which must be in the range of 0-10.

The default value is 5. The value 0 is used to disable the timer in the procedure.

Usage Guidelines

Use this command to configure the context-transfer-guard timer in seconds. Started by source AMF on receiving TransferUpdate. On expiry, PDUs will be cleared locally.

amf-global call-control-policy timers ho-supervisory

Configures the ho-supervisory timer parameter.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **timers ho-supervisory value** *timer_value*

value *timer_value*

Specify the timer value in milliseconds.

Must be an integer in the range of 100-10000.

Default Value: 500.

Usage Guidelines Use this command to configure the ho-supervisory timer parameter.

amf-global call-control-policy timers t3502

Configures the t3502 timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers t3502 value** *timeout_duration*

value *timeout_duration*

Specify the timeout period in seconds.

Must be an integer in the range of 0-35712000.

Usage Guidelines Use this command to configure the t3502 timer parameter.

amf-global call-control-policy timers t3512

Configures the t3512 timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **timers t3512 value** *timeout_duration*

value *timeout_duration*

Specify the timeout period in seconds.

Must be an integer in the range of 0-35712000.

Usage Guidelines Use this command to configure the t3512 timer parameter.

amf-global call-control-policy timers t3513

Configures the t3513 timer parameter.

amf-global call-control-policy timers t3522

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers t3513 value timeout_duration retry max_retries**

retry max_retries

Specify the maximum number of retries.

Must be an integer in the range of 0-5.

Default Value: 4.

value timeout_duration

Specify the timeout period in seconds.

Must be an integer in the range of 0-30.

Default Value: 6.

Usage Guidelines Use this command to configure the t3513 timer parameter.

amf-global call-control-policy timers t3522

Configures the t3522 timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers t3522 value timeout_duration retry max_retries**

retry max_retries

Specify the maximum number of retries.

Must be an integer in the range of 0-5.

Default Value: 4.

value timeout_duration

Specify the timeout period in seconds.

Must be an integer in the range of 0-30.

Default Value: 6.

Usage Guidelines Use this command to configure the t3522 timer parameter.

amf-global call-control-policy timers t3550

Configures the t3550 timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers t3550 value timeout_duration retry max_retries**

retry max_retries

Specify the maximum number of retries.

Must be an integer in the range of 0-5.

Default Value: 4.

value timeout_duration

Specify the timeout period in seconds.

Must be an integer in the range of 0-30.

Default Value: 6.

Usage Guidelines Use this command to configure the t3550 timer parameter.

amf-global call-control-policy timers t3555

Configures the t3555 timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers t3555 value timeout_duration retry max_retries**

retry max_retries

Specify the maximum number of retries.

Must be an integer in the range of 0-5.

Default Value: 4.

value timeout_duration

Specify the timeout period in seconds.

Must be an integer in the range of 0-30.

Default Value: 6.

Usage Guidelines Use this command to configure the t3555 timer.

amf-global call-control-policy timers t3560

Configures the t3560 timer parameter.

amf-global call-control-policy timers t3570

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers t3560 value timeout_duration retry max_retries**

retry max_retries

Specify the maximum number of retries.

Must be an integer in the range of 0-5.

Default Value: 4.

value timeout_duration

Specify the timeout period in seconds.

Must be an integer in the range of 0-30.

Default Value: 6.

Usage Guidelines Use this command to configure t3560 timer parameter.

amf-global call-control-policy timers t3570

Configures the t3570 timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers t3570 value timeout_duration retry max_retries**

retry max_retries

Specify the maximum number of retries.

Must be an integer in the range of 0-5.

Default Value: 4.

value timeout_duration

Specify the timeout period in seconds.

Must be an integer in the range of 0-30.

Default Value: 6.

Usage Guidelines Use this command to configure the t3570 timer parameter.

amf-global call-control-policy timers tguard

Configures the tguard timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers tguard value timeout_duration**

value timeout_duration

Specify the timeout period in seconds.

Must be an integer in the range of 0-35712000.

Usage Guidelines Use this command to configure the tguard timer parameter.

amf-global call-control-policy timers tide

Configures the UE connected mode inactivity timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers tide value timeout_duration**

value timeout_duration

Specify the timer value in seconds.

Must be an integer in the range of 30-25200.

Usage Guidelines Use this command to configure the UE connected mode inactivity timer parameter.

amf-global call-control-policy timers tidt

Configures the tidt timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers tidt value timeout_duration**

value timeout_duration

Specify the timeout period in seconds.

Must be an integer in the range of 0-35712000.

Usage Guidelines Use this command to configure the tidt timer parameter.

amf-global call-control-policy timers tn2

amf-global call-control-policy timers tn2

Configures the tn2 timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers tn2 value timeout_duration**

value timeout_duration

Specify the timeout period in seconds.

Must be an integer in the range of 0-35712000.

Usage Guidelines Use this command to configure the tn2 timer parameter.

amf-global call-control-policy timers tpurge

Configures the purge timer parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy Configuration (config-call-control-policy-*policy_name*)

Syntax Description **timers tpurge value timeout_duration**

value timeout_duration

Specify the timeout period in seconds.

Must be an integer in the range of 0-35712000.

Usage Guidelines Use this command to configure the purge timer parameter.

amf-global dnn-policy

Configures the DNN policy parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)

Syntax Description **dnn-policy dnn_name [[ims-enabled { false | true }] [lbo-roaming-allowed { false | true }] [nf-profile-name nf_profile_name]]**

dnn-policy dnn_name

Specify name of the DNN.

Must be a string.

ims-enabled { false | true }

Specify whether IMS is enabled for DNN.

Must be one of the following:

- **false**
- **true**

Default Value: false.

lbo-roaming-allowed { false | true }

Specify whether Local Breakout Roaming is supported.

Must be one of the following:

- **false**
- **true**

Default Value: false.

nf-profile-name *nf_profile_name*

Specify name of the NF profile.

Must be a string.

Usage Guidelines	Use this command to configure DNN policy parameter.
-------------------------	---

amf-global dnn-policy network-element-profile-list

Configures the network element profile list.

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > DNN Policy Configuration (config-dnn-policy- <i>policy_name</i>)
----------------------	---

Syntax Description	network-element-profile-list smf <i>smf_profile_name</i>
---------------------------	---

smf *smf_profile_name*

Specify name of the SMF network element profile.

Must be a string.

Usage Guidelines	Use this command to configure the network element profile list.
-------------------------	---

amf-global nf-profile

Configures NF profile parameters.

amf-global nf-profile nf-type-profile

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)
Syntax Description	<p>nf-profile <i>nf_profile_name</i></p> <p>nf_profile_name</p> <p>Specify name of the NF profile.</p> <p>Must be a string.</p>
Usage Guidelines	Use this command to configure NF profile parameters. The CLI prompt changes to the NF Profile Configuration mode (config-nf-profile-<profile_name>).

amf-global nf-profile nf-type-profile

Configures the NF profile type parameter.

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > NF Profile Configuration (config-nf-profile- <i>profile_name</i>)
Syntax Description	<p>nf-type-profile type <i>nf_profile_type</i></p> <p>type <i>nf_profile_type</i></p> <p>Specify the NF profile type.</p> <p>Must be one of the following:</p> <ul style="list-style-type: none"> • ausf • nrf • nssf • pcf • smf • udm
Usage Guidelines	Use this command to configure the NF profile type parameter. The CLI prompt changes to the NF Type Profile Configuration mode (config-nf-type-profile-<type>).

amf-global nf-profile nf-type-profile grpc-endpoint

Configures GRPC endpoint parameters.

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > NF Profile Name Configuration (config-nf-profile- <i>nf_profile_name</i>) > NF Profile Type Configuration (config-nf-type-profile- <i>profile_name</i>)
Syntax Description	grpc-endpoint host <i>host_name</i> port <i>port_number</i>

host *host_name*

Specify the host name.

Must be a string.

port *port_number*

Specify the port number.

Must be an integer.

Usage Guidelines Use this command to configure GRPC endpoint parameters.

amf-global nf-profile nf-type-profile http-endpoint

Configures HTTP endpoint parameters.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > NF Profile Name Configuration (config-nf-profile-*nf_profile_name*) > NF Profile Type Configuration (config-nf-type-profile-*profile_name*)

Syntax Description **http-endpoint base-url *base_url***

base-url *base_url*

Specify the base URL.

Must be a string.

Usage Guidelines Use this command to configure HTTP endpoint parameters.

amf-global operator-policy

Configures the operator policy.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)

Syntax Description **operator-policy *policy_name* [[ccp-name *ccp_name*] [nf-profile-name *nf_profile_name*] [paging-policy-name *paging_policy_name*]]**

ccp-name *ccp_name*

Specify name of the CCP.

Must be a string.

emergency-profile-name *emergency_profile_name*

Specify name of the emergency profile.

amf-global operator-policy network-element-profile-list***nf-profile-name nf_profile_name***

Specify name of the NF profile.

Must be a string.

operator-policy policy_name

Specify name of the operator policy.

Must be a string.

paging-map-name paging_map_name

Specify name of the 5G paging map.

Must be a string of 1-64 characters.

Usage Guidelines

Use this command to configure the operator policy.

amf-global operator-policy network-element-profile-list

Configures network element profiles.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > Operator Policy Configuration (config-operator-policy-*policy_name*)

Syntax Description

```
network-element-profile-list { amf amf_ne_profile_name | ausf ausf_ne_profile_name
| nssf nssf_ne_profile_name | pcf pcf_ne_profile_name | smf smf_ne_profile_name | udm
udm_ne_profile_name }
```

amf amf_ne_profile_name

Specify name of the AMF network element profile.

Must be a string.

ausf ausf_ne_profile_name

Specify name of the AUSF network element profile.

Must be a string.

nssf nssf_ne_profile_name

Specify name of the NSSF network element profile.

Must be a string.

pcf pcf_ne_profile_name

Specify name of the PCF network element profile.

Must be a string.

smf smf_ne_profile_name

Specify name of the SMF network element profile.

Must be a string.

udm udm_ne_profile_name

Specify name of the UDM network element profile.

Must be a string.

Usage Guidelines	Use this command to configure network element profiles.
-------------------------	---

amf-global paging-algo

Configures the paging algorithm.

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)
----------------------	---

Syntax Description	paging-algo <i>algorithm_name</i> [[action <i>action</i>] [max-n-gnb <i>max_gnbs_to_page</i>] [t3513-timeout <i>paging_timeout</i>] [max-paging-attempts <i>max_paging_attempts</i>]]
---------------------------	--

action action

Specify the action.

Must be one of the following:

- **all_gnb_all_tai**
- **all_gnb_last_tai**
- **all_gnb_remaining_tai_all**
- **all_gnb_remaining_tai_seq**
- **last_gnb_last_tai**
- **last_n_gnb_last_tai**

max-n-gnb max_gnbs_to_page

Specify the max number of gNBs to page.

Must be an integer in the range of 1-5.

max-paging-attempts max_paging_attempts

Specify the maximum number of paging attempts.

Must be an integer in the range of 1-5.

paging-algo paging_algorithm_name

Specify name of the paging algorithm.

amf-global paging-map

Must be a string of 1-64 characters.

t3513-timeout *paging_timeout*

Specify the paging timeout value in seconds.

Must be an integer in the range of 1-10.

Usage Guidelines Use this command to configure the paging algorithm.

amf-global paging-map

Configures the paging map parameters.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)

Syntax Description **paging-map** *paging_map_name*

paging_map_name

Specify name of the 5G paging map.

Must be a string of 1-64 characters.

Usage Guidelines Use this command to configure the paging map parameters.

amf-global paging-map precedence

Configures the paging map precedence parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)

Syntax Description **paging-map** *map_name* [**precedence** *map_precedence_level* [[**paging-profile-name** *paging_profile_name*] [**trigger-type** *trigger_type*]]]

arp-value arp_value

Specify the Allocation and Retention Priority (ARP) value.

Must be an integer in the range of 1-15.

dereg-value deregistration_trigger_value

Specify the deregistration trigger value.

Must be one of the following:

- **amf_init**
- **udm_init**

dnn-value *dnn_value*

Specify the Data Network Name (DNN) value.

Must be a string of 1-64 characters.

fiveqi-value *5qi_value*

Specify the 5G QoS Indicator value.

Must be an integer in the range of 1-85.

paging-profile-name *paging_profile_name*

Specify name of the 5G paging profile.

Must be a string of 1-64 characters.

ppi-value *ppi_value*

Specify the Paging Policy Indicator (PPI) value.

Must be an integer in the range of 1-7.

precedence *map_precedence_level*

Specify the map precedence level.

Must be an integer in the range of 1-255.

trigger-type *trigger_type*

Specify the paging trigger type.

Must be one of the following:

- **5qi**
- **arp**
- **dereg**
- **dnn**
- **ppi**
- **uecfg**

Usage Guidelines

Use this command to configure the paging map precedence parameter.

amf-global paging-profile

Configures paging profile parameters.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)

amf-global paging-profile paging-stage

Syntax Description **paging-profile** *paging_profile_name*

paging_profile_name

Specify name of the 5G paging profile.

Must be a string of 1-64 characters.

Usage Guidelines Use this command to configure paging profile parameters. The CLI prompt changes to the Paging Profile Configuration mode (config-paging-profile-<profile_name>).

amf-global paging-profile paging-stage

Configures paging stage information.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > Paging Profile Configuration (config-paging-profile-*profile_name*)

Syntax Description **paging-stage** *paging_stage_precedence* [**paging-algo** *paging_algorithm_name*]

paging-algo paging_algorithm_name

Specify name of the paging algorithm.

Must be a string of 1-64 characters.

paging_stage_precedence

Specify the stage.

Must be an integer in the range of 1-5.

Usage Guidelines Use this command to configure paging stage.

amf-global plmn-policy

Configures the operator policy.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)

Syntax Description **plmn-policy** *plmn_name* **operator-policy-name** *operator_policy_name*

operator-policy-name operator_policy_name

Specify name of the operator policy.

Must be a string.

plmn-policy plmn_name

Specify name of the PLMN.

Must be a string of 5-6 characters in the plmn-string pattern. For information on the plmn-string pattern, see the Input Pattern Types section.

Usage Guidelines	Use this command to configure the operator policy.
-------------------------	--

amf-global supi-policy

Configures SUPI policy information.

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)
----------------------	---

Syntax Description	supi-policy supi_prefix operator-policy-name operator_policy_name
---------------------------	--

operator-policy-name operator_policy_name

Specify name of the operator policy.

Must be a string.

supi-policy supi_prefix

Specify the SUPI prefix.

Must be a string of 1-15 characters in the supi-string pattern. For information on the supi-string pattern, see the Input Pattern Types section.

Usage Guidelines	Use this command to configure SUPI policy parameters.
-------------------------	---

amf-global timers proc-timeout ue-registration

Configures timeout value for registration.

Command Modes	Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global)
----------------------	---

Syntax Description	timers proc-timeout ue-registration value timer_value
---------------------------	--

value timer_value

Specify the timer value in seconds.

Must be an integer in the range of 0-120.

Usage Guidelines	Use this command to configure timeout value for registration.
-------------------------	---

amf-services

Configures AMF service configuration parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description

```
amf-services amf_service_name [ [ amf-name amf_name ] [ emergency-profile-name emergency_profile_name ] [ locality locality_name ] [ operator-policy-name operator_policy_name ] [ relative-amf-capacity relative_amf_capacity ] [ validate-Tais { false | true } ] ]
```

amf-name amf_name

Specify name of the AMF.

Must be a string.

amf-services amf_service_name

Specify name of the AMF service.

Must be a string.

emergency-profile-name emergency_profile_name

Specify name of the emergency profile.

locality locality_name

Specify the locality for Geo support.

Must be a string.

operator-policy-name operator_policy_name

Specify name of the operator policy.

relative-amf-capacity relative_amf_capacity

Specify the relative AMF capacity.

Must be an integer in the range of 0-255.

Default Value: 127.

validate-Tais { false | true }

Specify whether to enable or disable TAI validation.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines

Use this command to configure AMF service configuration parameters. The CLI prompt changes to the AMF Services Configuration mode (config-amf-services-<service_name>).

amf-services guamis

Configures the Globally Unique AMF ID (GUAMIS).

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description **guamis** **mcc** *mobile_country_code* **mnc** *mobile_network_code* **region-id** *amf_region_id* **set-id** *amf_set_id* **pointer** *amf_pointer*

mcc *mobile_country_code*

Specify the mobile country code.

Must be a string.

mnc *mobile_network_code*

Specify the mobile network code.

Must be a string.

pointer *amf_pointer*

Specify the pointer value.

Must be an integer.

region-id *amf_region_id*

Specify the AMF region ID.

Must be an integer.

set-id *amf_set_id*

Specify the AMF set ID.

Must be an integer.

Usage Guidelines Use this command to configure the GUAMIS, which is used to uniquely identify an AMF within a 5G network. It is comprised of the MCC, MNC, AMF Region ID, AMF Set ID and AMF Pointer.

amf-services local-cause-code-map auth-failure

Configures the UE authentication failure condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*policy_name*)

Syntax Description **local-cause-code-map** **auth-failure** **cause-code-5gmm** *cause_code_5gmm*

amf-services local-cause-code-map clear-subscriber***cause-code-5gmm cause_code_5gmm***

Specify the condition type.

Must be one of the following:

- illegal-ms
- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: illegal-ms.

Usage Guidelines

Use this command to configure the UE authentication failure condition type parameter.

amf-services local-cause-code-map clear-subscriber

Configures the UE subscriber clear condition type.

Command Modes

Exec > Global Configuration (config) > AMF Global Configuration (config-amf-global) > AMF Call Control Policy (config-call-control-policy-*call_control_policy_name*)

Syntax Description

local-cause-code-map clear-subscriber cause-code-5gmm cause_code_5gmm

cause-code-5gmm cause_code_5gmm

Specify the condition type.

Must be one of the following:

- 5GS-services-not-allowed
- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: plmn-not-allowed.

Usage Guidelines

Use this command to configure the UE subscriber clear condition type.

amf-services local-cause-code-map ctxt-xfer-fail-amf

Configures the AMF context transfer failure condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-service_name)

Syntax Description `local-cause-code-map ctxt-xfer-fail-amf cause-code-5gmm cause_code_5gmm`

cause-code-5gmm cause_code_5gmm

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed
- ue-identity-not-derived

Default Value: ue-identity-not-derived.

Usage Guidelines Use this command to configure the AMF context transfer failure condition type parameter.

amf-services local-cause-code-map ctxt-xfer-fail-mme

Configures the MME context transfer failure condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-amf_services_name)

Syntax Description `local-cause-code-map ctxt-xfer-fail-mme cause-code-5gmm cause_code_5gmm`

cause-code-5gmm cause_code_5gmm

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

amf-services local-cause-code-map dnn-mismatch

- ue-identity-not-derived

Default Value: ue-identity-not-derived.

Usage Guidelines

Use this command to configure the MME context transfer failure condition type parameter.

amf-services local-cause-code-map dnn-mismatch

Configures the DNN mismatch condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description **local-cause-code-map dnn-mismatch cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: plmn-not-allowed.

Usage Guidelines

Use this command to configure the DNN mismatch condition type parameter.

amf-services local-cause-code-map dnn-not-subscribed

Configures the DNN not subscribed condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description **local-cause-code-map dnn-not-subscribed cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- dnn-not-subscribed

Default Value: dnn-not-subscribed.

Usage Guidelines Use this command to configure the DNN not subscribed condition type parameter.

amf-services local-cause-code-map gw-unreachable

Configures the gw unreachable condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description **local-cause-code-map gw-unreachable cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: no-suitable-cells-in-tracking-area.

Usage Guidelines Use this command to configure the gw unreachable condition type parameter.

amf-services local-cause-code-map inter-plmn-roaming

Configures the inter-PLMN roaming condition type parameter.

Command Modes Exec > Global Configuration (config)

Syntax Description **local-cause-code-map inter-plmn-roaming cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- 5GS-services-not-allowed
- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area

amf-services local-cause-code-map peer-node-unknown

- tracking-area-not-allowed

Default Value: plmn-not-allowed.

Usage Guidelines

Use this command to configure the inter-PLMN roaming condition type parameter.

amf-services local-cause-code-map peer-node-unknown

Configures the peer node no response condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description **local-cause-code-map peer-node-unknown cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed
- ue-identity-not-derived

Default Value: ue-identity-not-derived.

Usage Guidelines

Use this command to configure the peer node no response condition type parameter.

amf-services local-cause-code-map restricted-zone-code

Configures the restricted zone code condition type parameter.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description **local-cause-code-map restricted-zone-code cause-code-5gmm** *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- 5GS-services-not-allowed
- no-suitable-cells-in-tracking-area

- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: no-suitable-cells-in-tracking-area.

Usage Guidelines

Use this command to configure the restricted zone code condition type parameter.

amf-services local-cause-code-map smf-selection-failure

Configures the SMF selection failure condition type parameter.

Command Modes

Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description

local-cause-code-map smf-selection-failure cause-code-5gmm *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: no-suitable-cells-in-tracking-area.

Usage Guidelines

Use this command to configure the SMF selection failure condition type parameter.

amf-services local-cause-code-map udm-unavailable

Configures the UDM not available condition type parameter.

Command Modes

Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description

local-cause-code-map udm-unavailable cause-code-5gmm *cause_code_5gmm*

cause-code-5gmm *cause_code_5gmm*

Specify the condition type.

Must be one of the following:

amf-services locality oauth2-enabled

- no-suitable-cells-in-tracking-area
- plmn-not-allowed
- restricted-service-area
- roaming-not-allowed-in-this-tracking-area
- tracking-area-not-allowed

Default Value: no-suitable-cells-in-tracking-area.

Usage Guidelines	Use this command to configure the UDM not available condition type parameter.
-------------------------	---

amf-services locality oauth2-enabled

Configures the AMF ID (**oauth2-enabled**) to enable the client authorization support to NRF.

Command Modes	Exec > Global Configuration (config) > AMF Services Configuration (amf-services <i>amf_services_name</i>) > AMF Name (amf-name <i>amf_name</i>) > Locality (locality <i>locality_name</i>) > oauth2-enabled
----------------------	--

Syntax Description

```
amf-name amf_name
locality locality_name
oauth2-enabled
access-token-jws-algo { HS256 | ES256 | RS256 }
access-token-jws-key { shared_secret_key | public_key }
```

oauth2-enabled

Enable the OAuth2 client authorization to register the AMF with NRF. The default value is false.

access-token-jws-algo { HS256 | ES256 | RS256 }

Specify the type of the access token for the JWS Algorithm authorization.

access-token-jws-key { shared_secret_key | public_key }

Specify the type of the access token for the JWS Key authorization.

Usage Guidelines

Use this command, when the **oauth2-enabled** feature is configured, the options **access-token-jws-algo** and **access-token-jws-key** are mandatory.

amf-services peer-mme gummei

Configures Globally Unique MME Identifier (GUMMEI) parameters.

Command Modes	Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services- <i>amf_services_name</i>)
----------------------	--

Syntax Description

```
peer-mme gummei mcc mobile_country_code mnc mobile_network_code group-id mme_group_id
mme-code mme_code address peer_mme_ip_address
```

address peer_mme_ip_address

Specify the IP address if the peer MME.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

-Or-

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

group-id mme_group_id

Specify the MME group ID.

Must be an integer in the range of 0-65535.

mcc mobile_country_code

Specify the three-digit mobile country code. For example, 123.

Must be a string in the three-digit pattern. For information on the three-digit pattern, see the Input Pattern Types section.

mme-code mme_code

Specify the MME code.

Must be an integer in the range of 0-255.

mnc mobile_network_code

Specify the two- or three-digit mobile network code. For example, 23, 456.

Must be a string in the two-or-three-digit pattern. For information on the two-or-three-digit pattern, see the Input Pattern Types section.

Usage Guidelines

Use this command to configure peer MME parameters.

amf-services peer-mme tai-match

Configures TAI match.

Command Modes

Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description

```
peer-mme tai-match priority tai_match_priority mcc mobile_country_code mnc mobile_network_code
```

mcc mobile_country_code

Specify the three-digit mobile country code. For example, 123.

Must be a string in the three-digit pattern. For information on the three-digit pattern, see the Input Pattern Types section.

amf-services peer-mme tai-match tac

mnc *mobile_network_code*

Specify the two- or three-digit mobile network code. For example, 23, 456.

Must be a string in the two-or-three-digit pattern. For information on the two-or-three-digit pattern, see the Input Pattern Types section.

priority *tai_match_priority*

Specify the TAI match priority value.

Must be an integer in the range of 0-4096.

Usage Guidelines Use this command to configure TAI match parameters.

amf-services peer-mme tai-match tac

Configures Tracking Area Code parameters.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description **tac *options***

Usage Guidelines Use this command to configure the Tracking Area Code parameters.

amf-services peer-mme tai-match tac any

Configures the Tracking Area Code wildcard for peer MME.

Command Modes Exec > Global Configuration (config)

Syntax Description **any *options***

address *ip_address*

Specify the IP address of the peer MME.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

-Or-

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

Usage Guidelines Use this command to configure the the Tracking Area Code wildcard for peer MME.

amf-services peer-mme tai-match tac startval

Configures the Tracking Area Code start value.

Command Modes Exec > Global Configuration (config)

Syntax Description **tac startval start tac_start_value**

address ip_address

Specify the IP address of the peer MME.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

-Or-

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

start tac_start_value

Specify the Tracking Area Code start value.

Must be an integer in the range of 1-65535.

Usage Guidelines Use this command to configure the the Tracking Area Code start value.

amf-services peer-mme tai-match tac startval to

Configures the Tracking Area Code range for peer MME.

Command Modes Exec > Global Configuration (config)

Syntax Description **tac to end tac_start_value**

address ip_address

Specify the IP address of the peer MME.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

-Or-

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

end tac_end_value

Specify the Tracking Area Code range for Peer MME.

Must be an integer in the range of 1-65535.

Usage Guidelines Use this command to configure the the Tracking Area Code range for peer MME.

amf-services pgw

Configures peer SMF+PGW-C parameters.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_service_name*)

Syntax Description **pgw fqdn *fqdn* smf-network-element-profile *smf_ne_profile_name***

fqdn fqdn

Specify the PGW fully qualified domain name.

Must be a string.

smf-network-element-profile smf_profile_name

Specify name of the SMF network element profile.

Must be a string.

Usage Guidelines Use this command to configure SMF+PGW-C parameters.

amf-services relative-amf-capacity

Configures the AMF Services ID (**relative-amf-capacity**) to enable the Relative Capacity Configuration Update feature in AMF.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (amf-services *amf_services_name*)

Syntax Description **config**

```
amf-services service_name
    relative-amf-capacity capacity_number
```

relative-amf-capacity capacity_number

relative-amf-capacity *capacity_number*—Specifies the AMF capacity, within the range of 0–255. The default value is 127.

Usage Guidelines Use this **relative-amf-capacity** command, when you want the relative capacity configuration update feature in AMF feature to be configured.

amf-services tai-groups

Configures TAI groups.

Command Modes Exec > Global Configuration (config) > AMF Services Configuration (config-amf-services-*amf_services_name*)

Syntax Description **tai-groups *tai_group_name***

tai_group_name

Specify name of the TAI group.

Usage Guidelines

Use this command to configure TAI groups.

You can configure a maximum of one element with this command.

amf-tools

Enable or disable the AMF tools.

Command Modes

Exec > Global Configuration (config)

Syntax Description

amf-tools enable { false | true }

enable { false | true }

Specify to enable or disable the AMF tools.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines

Use this command to enable or disable the AMF tools.

amf-tools amf-mock-tool

Configures AMF mock tool.

Command Modes

Exec > Global Configuration (config)

Syntax Description

amf-mock-tool external-ip *external_ip_address*

external-ip *external_ip_address*

Specify the external IP address.

Must be a string.

Usage Guidelines

Use this command to configure AMF mock tool external IP address.

amf-tools lattice

Configures lattice.

apn-groups

Command Modes	Exec > Global Configuration (config)
Syntax Description	<pre>lattice sctp-k8-node-name <i>sctp_k8_node_name</i> sctp-ip-address <i>sctp_ip_address</i> lattic-tar-url <i>lattic_tar_url</i> test-companion-tar-url <i>test_companion_tar_url</i></pre> <p>lattic-tar-url <i>lattic_tar_url</i> Specify the lattice tar URL. Must be a string.</p> <p>sctp-ip-address <i>sctp_ip_address</i> Specify the external IP address for SCTP. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section. -Or- Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.</p> <p>sctp-k8-node-name <i>sctp_k8_node_name</i> Specify the kubernetes node name on which lattice is to be deployed. Must be a string.</p> <p>test-companion-tar-url <i>test_companion_tar_url</i> Specify the test companion tar URL. Must be a string.</p>
Usage Guidelines	Use this command to configure lattice.

apn-groups

Configures APN groups.

Command Modes	Exec > Global Configuration (config)
Syntax Description	<pre>apn-groups name <i>apn_group_name</i></pre> <p>name <i>apn_group_name</i> Specify name of the APN group. Must be a string.</p>
Usage Guidelines	Use this command to configure APN groups. The CLI prompt changes to the APN Groups Configuration mode (config-apn-groups-<group_name>).

apn-groups apns

Configures APN group parameters.

Command Modes Exec > Global Configuration (config) > APN Groups Configuration (config-apn-groups-group_name)

Syntax Description **apns apn_name**

apns apn_name

Specify name of the APN.

Must be a string.

Usage Guidelines Use this command to configure APN group parameters.

apn-profiles

Configures APN profile parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **apn-profiles apn_profile_name**

apn_profile_name

Specify name of the APN profile.

Must be a string.

Usage Guidelines Use this command to configure APN profile parameters.

cd

Changes the current working directory.

Command Modes Exec

Syntax Description **cd directory.ssh**

directory

Specify the directory name.

Must be a string.

Usage Guidelines Use this command to change the current working directory.

cdl clear sessions

cdl clear sessions

Clears the data from the Cisco Data Layer (CDL) datastore.

Command Modes Exec

Syntax Description `cdl clear sessions [db-name database | filter filter | map-id map_id | slice-name slice_name]`

db-name *database*

Specify the database name to be queried for displaying the session details.

Must be a string of 1 to 16 characters.

filter *filter*

Specify the filter.

map-id *map_id*

Specify the map ID to display the data for a map.

Must be an integer in the range of 0-1024.

slice-name *slice_name*

Specify the slice name to be queried.

Must be a string of 1 to 16 characters.

Usage Guidelines Use this command to clear the data from the Cisco Data Layer (CDL) datastore.

cdl kafka

Displays the Kafka parameters for Geo Replication.

Command Modes Exec

Syntax Description `cdl kafka [describe [consumer-groups name | topics [name kafka_topic_name | include-internal-topics] | list [consumer-groups | topics include-internal-topics]]`

describe

Describe the kafka topics or consumer groups.

consumer-groups *name*

Displays the kafka consumer groups. By default, all the consumer groups are described

topics name *kafka_topic_name*

Displays the specified kafka topics. By default, all the internal topics are described

include-internal-topics

Indicates to include the internal topics.

list

Lists the kafka topics or the consumer groups.

consumer-groups

Lists the kafka topics or the consumer groups.

topics include-internal-topics

List all the kafka topics that include the internal topics.

Usage Guidelines

Use this command to display Kafka parameters for Geo Replication.

cdl show sessions

Displays the session data from the datastore.

Command Modes	Exec
----------------------	------

Syntax Description	<pre>cdl show sessions count [detailed [db-name <i>db_name</i> filter { condition [ends-with match starts-with] key <i>key_value</i> } map-id <i>map_id</i> slice-name <i>slice_name</i>] summary] summary [db-name <i>db_name</i> filter { condition [ends-with match starts-with] key <i>key_value</i> } limit <i>limit</i> map-id <i>map_id</i> max-data-size-kb <i>maximum_data_size</i> next-eval-end-time next-eval-start-time purge-on-eval slice-name <i>slice_name</i>] detailed [db-name <i>db_name</i> filter { condition [ends-with match starts-with] key <i>key_value</i> } limit <i>limit</i> map-id <i>map_id</i> max-data-size-kb <i>maximum_data_size</i> next-eval-end-time next-eval-start-time purge-on-eval slice-name <i>slice_name</i>]</pre>
---------------------------	---

count

Display the session count information.

detailed

Display the session details with data.

db-name *db_name*

Specify the database name to be queried for displaying the session details.

Must be a string of 1 to 16 characters.

cdl show status**key *key_value***

Specify the query value.

Must be a string of 0 to 512 characters.

map-id *map_id*

Specify the map ID to display the data for a map.

Must be an integer in the range of 0-1024.

limit *limit*

Specify the maximum number of records to display.

Must be an integer in the range of 1-500.

filter condition { ends-with | match | starts-with }

Specify the query expression to filter the results of query.

purge-on-eval

Displays the list of sessions that have purge-on-eval flag set to true or false.

next-eval-end-time

Displays the sessions that have the next-eval-time less than this time.

next-eval-start-time

Displays the sessions that have the next-eval-time greater than this time.

Usage Guidelines

Use this command to display the session details.

cdl show status

Displays the status of the database from the datastore.

Command Modes

Exec

Syntax Description**cdl show status db-name *database_name*****db-name *database_name***

Specify the database name to display the status.

Must be a string of 1 to 16 characters.

Usage Guidelines

Use this command to display the status of the queried database from the datastore.

clear ipam

Clears the IP Address Management (IPAM) operational data.

Command Modes Exec

Syntax Description `clear ipam`

Usage Guidelines Use this command to clear IPAM operational data.

clear ipam

Clears the IP Address Management (IPAM) operational data.

Command Modes Exec

Syntax Description `clear ipam`

Usage Guidelines Use this command to clear the IPAM data.

clear subscriber

Clears subscriber data.

Command Modes Exec

Syntax Description `clear subscriber { all | gr-instance gr_instance | imei imei_id | namespace namespace | nf-service nf_service | supi supi_id | config_specific_options }`

all

Specify to remove all subscriber data.

gr-instance *gr_instance*

Specify the subscribers from the GR instance.

imei *imei_id*

Specify the International Mobile Equipment Identity.

Must be a string of 15-16 characters.

namespace *namespace*

NOTE: This keyword is deprecated, use nf-service instead. Specifies the product namespace under which to search.

Default Value: cisco-mobile-infra:none.

clear subscriber***nf-service nf_service***

Specify the network function service under which to search.

Default Value: cisco-mobile-infra:none.

supi supi_id

Specify to remove subscriber data associated with the SUPI ID.

Must be a string of 1-63 characters.

Usage Guidelines Use this command to clear subscriber data.

clear subscriber

Clears the subscriber data.

Command Modes Exec

Syntax Description `clear subscriber { all | gnodeb-id { mcc mcc_value | mnc mnc_value } | gr-instance gr_instance | imei imei_id | namespace namespace | nf-service nf_service | supi supi_id | config_specific_options }`

all

Clears all the subscriber data.

gnodeb-id { mcc mcc_value | mnc mnc_value }

Specify the gNodeB ID.

gr-instance gr_instance

Specify the subscribers from the GR instance.

imei imei_id

Specify the International Mobile Equipment Identity.

Must be a string of 15 to 16 characters.

namespace namespace

Specify the product namespace under which to search.



Note This keyword is deprecated, use nf-service instead.

Default Value: cisco-mobile-infra:none

nf-service *nf_service*

Specify the network function service under which to search.

Default Value: cisco-mobile-infra:none.

supi *supi_id*

Specify to remove subscriber data associated with the SUPI ID.

Must be a string of 1 to 63 characters.

Usage Guidelines	Use this command to clear the subscriber data.
-------------------------	--

clear subscriber clear-opt ran-opt

Displays and clears subscriber data based on specified criteria.

Command Modes	Exec
----------------------	------

Syntax Description	<code>{ clear show } subscriber gnodeb-id <i>gnodeb_id</i> mnc <i>mobile_network_code</i> mcc <i>mobile_country_code</i></code>
---------------------------	---

gnodeb-id *gnodeb_id*

Specify the gnodeb-id.

Must be an integer in the range of 0-4294967295.

mcc *mobile_country_code*

Specify the mobile country code.

Must be a string in the two-or-three-digit pattern. For information on the two-or-three-digit pattern, see the Input Pattern Types section.

mnc *mobile_network_code*

Specify the mobile network code.

Must be a string in the two-or-three-digit pattern. For information on the two-or-three-digit pattern, see the Input Pattern Types section.

Usage Guidelines	Use this command to view and to clear subscriber data based on specified criteria.
-------------------------	--

client http header

Configures HTTP header parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	<code>client http header user-agent <i>user_agent_header</i></code>
---------------------------	---

client http ping***user-agent user_agent_header***

Specify the user agent header.

Must be one of the following:

- **app-name**
- **cluster-name**
- **disable**

Default Value: app-name.

Usage Guidelines Use this command to configure HTTP header parameters.

client http ping

Configures HTTP ping parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description `client http ping { [interval ping_interval] [timeout ping_timeout] }`

interval ping_interval

Specify, in milliseconds, the time interval between two HTTP pings.

Must be an integer in the range of 0-30000.

Default Value: 10000.

timeout ping_timeout

Specify, in milliseconds, the ping timeout duration to detect if remote host is down.

Must be an integer in the range of 0-15000.

Default Value: 5000.

Usage Guidelines Use this command to configure HTTP ping parameters.

client inbound interface

Configures inbound client interface parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description `client inbound interface interface_name`

interface interface_name

Specify name of the interface.

Usage Guidelines	Use this command to configure inbound client interface parameters. The CLI prompt changes to the Interface Configuration mode (config-interface-<interface_name>).
-------------------------	--

client inbound interface limit overload

Configures Overload configuration parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	<code>client inbound limit overload reject-code response_code</code>
---------------------------	--

reject-code response_code

Specify the response code to be used when pending limit exceeds.

Must be an integer.

Usage Guidelines	Use this command to configure Overload configuration parameters.
-------------------------	--

client inbound interface limit pending

Configures pending limit parameter.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	<code>client inbound limit pending request max_pending_request_limit</code>
---------------------------	---

request max_pending_request_limit

Specify the maximum pending request limit to allow.

Must be an integer.

Default Value: 10240.

Usage Guidelines	Use this command to configure the pending request limit parameter.
-------------------------	--

client inbound limit overload

Configures Overload configuration parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	<code>client inbound limit overload reject-code response_code</code>
---------------------------	--

reject-code response_code

Specify the response code to be used when pending limit exceeds.

Must be an integer.

client inbound limit pending

Usage Guidelines Use this command to configure Overload configuration parameters.

client inbound limit pending

Configures pending limit parameter.

Command Modes Exec > Global Configuration (config)

Syntax Description **client inbound limit pending request** *max_pending_request_limit*

request *max_pending_request_limit*

Specify the maximum pending request limit to allow.

Must be an integer.

Default Value: 10240.

Usage Guidelines Use this command to configure the pending request limit parameter.

client outbound host ping

Configures outbound host ping parameter.

Command Modes Exec > Global Configuration (config) > Interface Configuration (config-interface-*interface_name*)

Syntax Description **host ping backoff** *backoff_interval* **timeout** *ping_timeout* **interval** *ping_interval*

backoff *backoff_interval*

Specify, in milliseconds, the backoff time interval to wait when remote host is detected down before pinging again.

Must be an integer in the range of 0-3600000.

Default Value: 0.

interval *ping_interval*

Specify, in milliseconds, the time interval between two pings.

Must be an integer in the range of 0-30000.

Default Value: 0.

timeout *ping_timeout*

Specify the ping timeout duration, in milliseconds, to detect remote host down.

Must be an integer in the range of 0-15000.

Default Value: 0.

Usage Guidelines Use this command to configure outbound host ping parameter.

client outbound interface

Configures outbound client interface parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **client outbound interface** *interface_name*

interface *interface_name*

Specify the interface.

Usage Guidelines Use this command to configure outbound client interface parameters. The CLI prompt changes to the Interface Configuration mode (config-interface-<*interface_name*>).

client outbound interface host ping

Configures outbound host ping parameter.

Command Modes Exec > Global Configuration (config) > Interface Configuration (config-interface-*interface_name*)

Syntax Description **host ping backoff** *backoff_interval* **timeout** *ping_timeout* **interval** *ping_interval*

backoff *backoff_interval*

Specify, in milliseconds, the backoff time interval to wait when remote host is detected down before pinging again.

Must be an integer in the range of 0-3600000.

Default Value: 0.

interval *ping_interval*

Specify, in milliseconds, the time interval between two pings.

Must be an integer in the range of 0-30000.

Default Value: 0.

timeout *ping_timeout*

Specify the ping timeout duration, in milliseconds, to detect remote host down.

Must be an integer in the range of 0-15000.

Default Value: 0.

Usage Guidelines Use this command to configure outbound host ping parameter.

client outbound interface limit consecutive failure

client outbound interface limit consecutive failure

Configures consecutive failure configuration parameters.

Command Modes Exec > Global Configuration (config) > Interface Configuration (config-interface-*interface_name*)

Syntax Description **limit consecutive failure count** *consecutive_failure_count* **codes** *failure_codes*

codes *failure_codes*

Specify the list of failure codes to be considered, such as timeout, 503, etc.

Must be a string.

You can configure a maximum of 10 elements with this keyword.

count *consecutive_failure_count*

Specify the consecutive failure limit count to detect remote host as down.

Must be an integer.

Default Value: 0.

Usage Guidelines Use this command to configure consecutive failure configuration parameters.

client outbound interface limit pending

Configures pending limit configuration.

Command Modes Exec > Global Configuration (config) > Interface Configuration (config-interface-*interface_name*)

Syntax Description **limit pending response** *response_message_limit*

response *response_message_limit*

Specify the pending response message limit to detect remote host as down.

Must be an integer.

Default Value: 1024.

Usage Guidelines Use this command to configure pending limit configuration.

client outbound limit consecutive failure

Configures consecutive failure configuration parameters.

Command Modes Exec > Global Configuration (config) > Interface Configuration (config-interface-*interface_name*)

Syntax Description **limit consecutive failure count** *consecutive_failure_count* **codes** *failure_codes*

codes *failure_codes*

Specify the list of failure codes to be considered, such as timeout, 503, etc.

Must be a string.

You can configure a maximum of 10 elements with this keyword.

count *consecutive_failure_count*

Specify the consecutive failure limit count to detect remote host as down.

Must be an integer.

Default Value: 0.

Usage Guidelines Use this command to configure consecutive failure configuration parameters.

client outbound limit pending

Configures pending limit configuration.

Command Modes Exec > Global Configuration (config) > Interface Configuration (config-interface-*interface_name*)

Syntax Description **limit pending response** *response_message_limit*

response *response_message_limit*

Specify the pending response message limit to detect remote host as down.

Must be an integer.

Default Value: 1024.

Usage Guidelines Use this command to configure pending limit configuration.

commit

Configures the commit parameters.

Command Modes Exec

Syntax Description **commit** [**abort** { **persist-id** *persist_id* } | **confirm** { **persist-id** *persist_id* } | **persist-id** *persist_id*]

abort **persist-id *persist_id***

Specify to abort commit. Specify the persistence ID for the commit operation.

Must be an integer.

compare**confirm persist-id *persist_id***

Specify to confirm commit. Specify the persistence ID for the commit operation.

Must be an integer.

persist-id persist_id

Specify the persistence ID for the commit operation.

Must be an integer.

Usage Guidelines Use this command to configure the commit parameters.

compare

Ccompares the running configuration to another configuration or a file.

Command Modes Exec

Syntax Description **compare** **file** { *filename another_configuration* }

filename [.kube | .ssh] |

Specify the file name ending with .kube/.ssh or the directory path of the file to be compared.

Must be a string.

another_configuration

Specify the configuration to be compared against.

Must be a string.

Usage Guidelines Use this command to configure the file that must be compared.

config

Manipulates the software configuration information.

Command Modes Exec

Syntax Description **config** [**exclusive** | **no-confirm** | **shared** | **terminal**]

exclusive

Specify to enter the exclusive configuration mode.

no-confirm

Specify to apply the command without asking for confirmation.

shared

Specify to enter the shared configuration mode.

terminal

Specify to enter the terminal configuration mode.

Usage Guidelines

Use this command to manipulate the software configuration information.

config-error info

Displays configuration error information.

Command Modes Exec

Syntax Description **show config-error [info]**

Usage Guidelines

Use this command to view configuration error information.

coverage

Configures code coverage utilities.

Command Modes Exec > Global Configuration (config)

Syntax Description **coverage container-stop *container_stop***

container-stop *container_stop*

Specify the container stop.

Must be a string.

Default Value: false.

Usage Guidelines

Use this command to configure code coverage utilities.

datastore dbs

Configures DBS parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **datastore dbs *dbs_name***

dbs *dbs_name*

Specify name of the DBS.

datastore dbs endpoints

Must be a string.

Usage Guidelines

Use this command to configure the DBS parameters. The CLI prompt changes to the DBS Configuration mode (config-dbs-<dbs_name>).

datastore dbs endpoints

Configures endpoint parameters.

Command Modes

Exec > Global Configuration (config) > DBS Configuration (config-dbs-dbs_name)

Syntax Description

endpoints endpoint_name [port port_number]

endpoints endpoint_name

Specify the endpoint host name.

Must be a string.

port port_number

Specify the port number.

Must be an integer.

Usage Guidelines

Use this command to configure endpoint parameters.

datastore notification-ep

Configures notification endpoint parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

datastore notification-ep { [host host_name] [port port_number] }

host host_name

Specify the host name.

Must be a string.

port port_number

Specify the port number.

Must be an integer.

Usage Guidelines

Use this command to configure notification endpoint parameters.

datastore session-db

Configures Session DB parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description `datastore session-db endpoints endpoint_name [[port port_number] [slice-name slice_name]]`

slice-name slice_name

Specify name of the slice.

Must be a string.

Usage Guidelines Use this command to configure Session DB parameters.

datastore session-db endpoints

Configures endpoint parameters.

Command Modes Exec > Global Configuration (config) > DBS Configuration (config-dbs-dbs_name)

Syntax Description `endpoints endpoint_name [port port_number]`

endpoints endpoint_name

Specify the endpoint host name.

Must be a string.

port port_number

Specify the port number.

Must be an integer.

Usage Guidelines Use this command to configure endpoint parameters.

debug-settings amf-ngap-ep

Configures debug settings for AMF NGAP endpoint.

Command Modes Exec > Global Configuration (config)

Syntax Description `debug-settings amf-ngap-ep go-debug`

```
debug-settings amf-rest-ep
```

go-debug

Specify to debug.

Must be a string.

Usage Guidelines Use this command to configure debug settings for the AMF NGAP endpoint.

debug-settings amf-rest-ep

Configures debug settings for AMF REST endpoint.

Command Modes Exec > Global Configuration (config)

Syntax Description `debug-settings amf-rest-ep go-debug`

go-debug

Specify to debug.

Must be a string.

Usage Guidelines Use this command to configure debug settings for the AMF REST endpoint.

debug-settings amf-sctp-lb

Configures debug settings for amf-sctp-lb.

Command Modes Exec > Global Configuration (config)

Syntax Description `debug-settings amf-sctp-lb go-debug`

go-debug

Specify to debug.

Must be a string.

Usage Guidelines Use this command to configure debug settings for amf-sctp-lb.

debug-settings amf-service

Configures debug settings for AMF service.

Command Modes Exec > Global Configuration (config)

Syntax Description `debug-settings amf-service go-debug`

go-debug

Specify to debug.

Must be a string.

Usage Guidelines	Use this command to configure debug settings for the AMF service.
-------------------------	---

deployment

Configures the product deployment parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	deployment { app-name <i>application_name</i> cluster-name <i>cluster_name</i> dc-name <i>datacenter_name</i> logical-nf-instance-id <i>logical_nf_instance_id</i> model <i>deployment_model</i> }
---------------------------	---

app-name *application_name*

Specify name of the application.

Must be a string.

cluster-name *cluster_name*

Specify name of the cluster.

Must be a string.

dc-name *datacenter_name*

Specify name of the datacenter.

Must be a string.

logical-nf-instance-id *logical_nf_instance_id*

Specify the logical NF instance ID.

Must be an integer.

Default Value: 0.

model *deployment_model*

Specify the deployment model. Default: Large.

Must be one of the following:

- **small**

Usage Guidelines	Use this command to configure product deployment parameters.
-------------------------	--

deployment resource

Configures the deployment CPU resource parameter.

Command Modes Exec > Global Configuration (config) > Deployment Configuration (config-deployment)

Syntax Description `resource cpu cpu_size`

cpu cpu_size

Specify the CPU size in millicores.

Must be an integer in the range of 2000-1000000.

Default Value: 18000.

Usage Guidelines Use this command to configure the deployment CPU resource parameter.

describe

Displays the command information.

Command Modes Exec

Syntax Description `describe command`

command

Specify the command name to display the detailed information about the command.

Must be a string.

The command must be one of the following:

- aaa
- cd
- cdl
- clear
- commit
- compare
- config
- describe
- dump
- exit
- geo

- **help**
- **history**
- **id**
- **idle-timeout**
- **ignore-leading-space**
- **job**
- **leaf-prompts**
- **license**
- **logout**
- **monitor**
- **no**
- **paginate**
- **quit**
- **reconcile**
- **screen-length**
- **screen-width**
- **search**
- **send**
- **show**
- **show-defaults**
- **smiuser**
- **system**
- **terminal**
- **timestamp**
- **transaction**
- **who**

Usage Guidelines Use this command to display the command-specific information.

diagnostics

Displays diagnostics information.

diagnostics info

Command Modes	Exec
Syntax Description	show diagnostics
Usage Guidelines	Use this command to view diagnostics information.

diagnostics info

Displays diagnostics information.

Command Modes	Exec
Syntax Description	show diagnostics [info]
Usage Guidelines	Use this command to view diagnostics information.

dump

Removes the transaction history.

Command Modes	Exec
Syntax Description	dump transactionhistory
	transactionhistory
	Dump the transaction history.

Usage Guidelines Use this command to remove the transaction history.

edr

Configures EDR reporting parameters.

Command Modes	Exec > Global Configuration (config)
Syntax Description	edr { [reporting reporting_status] [subscribers subscribers_edr_reporting] }
	reporting reporting_status
	Specify to enable or disable EDR reporting.
	Must be one of the following:
	<ul style="list-style-type: none"> • disable • enable
	Default Value: disable.

Usage Guidelines Use this command to configure EDR parameters.

edr edrsubscribers

Configures subscriber EDR reporting.

Command Modes Exec > Global Configuration (config)

Syntax Description **edr subscribers** *subscribers_for_edr_reporting*

Syntax Description **edr reporting { enable | disable } subscribers** *subscribers_for_edr_reporting*

subscribers *subscribers_for_edr_reporting*

Specify the subscribers to enable EDR reporting. For example, imsi-123456789012345.

Must be a string.

You can configure a maximum of 10 elements with this keyword.

Usage Guidelines Use this command to configure subscriber EDR reporting.

edr file files

Configures EDR file parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **edr file { transaction | transaction-collision } [reporting reporting_status] [verbose verbosity_status]**

file { transaction | transaction-collision }

Specify name of the EDR file.

reporting reporting_status

Specify to enable or disable reporting of this file.

Must be one of the following:

- **disable**
- **enable**

Default Value: disable.

verbose verbosity_status

Specify to enable or disable field description or long names in the file.

Must be one of the following:

edr file files disable

- **disable**
- **enable**

Default Value: disable.

Usage Guidelines Use this command to configure EDR file parameters.

edr file files disable

Disables procedure IDs.

Command Modes Exec > Global Configuration (config) > EDR File Configuration (config-file-*edr_file*)

Syntax Description **disable procedure-id procedure_ids**

procedure-id procedure_ids

Specify the procedure ID value(s)/name(s).

Must be a string.

Usage Guidelines Use this command to disable specific procedure IDs.

edr file files flush

Configures EDR file flush parameters.

Command Modes Exec > Global Configuration (config) > EDR File Configuration (config-file-*edr_file*)

Syntax Description **flush interval file_flush_interval**

interval file_flush_interval

Specify, in milliseconds, the file flush interval.

Must be an integer.

Default Value: 1000.

Usage Guidelines Use this command to configure the EDR file flush parameters.

edr file files limit

Configures EDR file limit parameters.

Command Modes Exec > Global Configuration (config) > EDR File Configuration (config-file-*edr_file*)

Syntax Description **limit { [count max_files_to_preserve] [size max_single_file_size] }**

count *max_files_to_preserve*

Specify the maximum number of files to be preserved.

Must be an integer.

Default Value: 10.

size *max_single_file_size*

Specify the maximum single file size limit in MB.

Must be an integer.

Default Value: 100.

Usage Guidelines Use this command to configure the EDR file limit parameters.

edr file files procedure-id disable-event-id

Disables transaction-level procedure ID configuration.

Command Modes Exec > Global Configuration (config) > EDR File Configuration (config-file-*edr_file*)

Syntax Description **procedure-id *procedure_id***

procedure *procedure_id*

Specify the procedure ID value/name.

Must be a string.

Usage Guidelines Use this command to disable transaction-level procedure ID configuration.

edr file files procedure-id disable-event-id disable-inner disable

Disables event IDs.

Command Modes Exec > Global Configuration (config) > EDR File Configuration (config-file-*edr_file*) > Procedure ID Configuration (config-procedure-id-*procedure_id*)

Syntax Description **disable event-id *event_ids***

event-id *event_ids*

Specify the event ID value(s)/name(s).

Must be a string.

Usage Guidelines Use this command to disable event IDs.

```
edr file files procedure-id disable-event-id disable-inner event-id disable-field-id
```

edr file files procedure-id disable-event-id disable-inner event-id disable-field-id

Disables procedure-level event ID configuration.

Command Modes Exec > Global Configuration (config) > EDR File Configuration (config-file-*edr_file*) > Procedure ID Configuration (config-procedure-id-*procedure_id*)

Syntax Description **event-id** *event_id*

event *event_id*

Specify the event ID value/name.

Must be a string.

Usage Guidelines Use this command to disable procedure-level event ID configuration.

edr file files procedure-id disable-event-id disable-inner event-id disable-field-id disable

Disables field IDs.

Command Modes Exec > Global Configuration (config) > EDR File Configuration (config-file-*edr_file*) > Procedure ID Configuration (config-procedure-id-*procedure_id*)

Syntax Description **disable** **field-id** *field_ids*

field-id *field_ids*

Specify the field ID value(s)/name(s).

Must be a string.

Usage Guidelines Use this command to disable field IDs.

endpoint all

Displays endpoint status.

Command Modes Exec

Syntax Description **show** **endpoint** [**all**]

Usage Guidelines Use this command to view the status of endpoints.

endpoint info

Displays endpoint information.

Command Modes Exec

Syntax Description `show endpoint info`

Usage Guidelines Use this command to view endpoint information.

exit

Exits the current configuration mode and returns to the parent configuration mode.

Command Modes Exec

Syntax Description `exit`

Usage Guidelines Use this command to exit the current configuration mode and return to the parent configuration mode. When used in the Exec mode, exits the management session.

geo maintenance

Configures Geo Admin Controller to enable or disable maintenance mode.

Command Modes Exec

Syntax Description `geo maintenance mode { false | true }`

mode { false | true }

Specify whether to enable or disable maintenance mode. To enable, set to true.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines Use this command to configure Geo Admin Controller to enable or disable maintenance mode.

geo reset-role

Configures Geo Admin Controller for reset role.

geo switch-role

Command Modes	Exec
Syntax Description	geo reset-role { [instance-id <i>instance_id</i>] [role <i>new_role</i>] }
	instance-id <i>instance_id</i> Specify the instance ID for geo command.
	role <i>new_role</i> Specify the new role for the specified site.

Usage Guidelines Use this command to configure Geo Admin Controller for reset role.

geo switch-role

Configures Geo Admin Controller for trigger failover.

Command Modes	Exec
Syntax Description	geo switch-role { [fallback-interval <i>fallback_interval</i>] [instance-id <i>instance_id</i>] [role <i>new_role</i>] }
	fallback-interval <i>fallback_interval</i> Specify, in seconds, the interval between notify failover and actual failover. Must be a string.
	instance-id <i>instance_id</i> Specify the instance ID for geo command.
	role <i>new_role</i> Specify the new role for the specified site.

Usage Guidelines Performs instance role manipulation. Use this command to configure Geo Admin Controller for trigger failover.

geomonitor podmonitor pods

Configures configuration of pods to be monitored.

Command Modes	Exec > Global Configuration (config)
Syntax Description	geomonitor podmonitor pods <i>pod_name</i> [[failedReplicaPercent <i>failed_replica_precentage</i>] [retryCount <i>retry_count</i>] [retryFailOverInterval <i>retry_interval</i>] [retryInterval <i>retry_interval</i>]]

failedReplicaPercent failed_replica_precentage

Specify the percentage of failed replica after which GR failover will get triggered.

Must be an integer in the range of 10-100.

pods pod_name

Specify the name of the pod to be monitored.

Must be a string.

retryCount retry_count

Specify the counter value to retry if pod failed to ping after which pod is marked as down.

Must be an integer in the range of 1-10.

retryFailOverInterval retry_interval

Specify, in milliseconds, the retry interval if pod ping fails.

Must be an integer in the range of 200-10000.

retryInterval retry_interval

Specify, in milliseconds, the retry interval if pod ping is successful.

Must be an integer in the range of 200-10000.

Usage Guidelines

Use this command to configure configuration of pods to be monitored.

geomonitor remoteclustermonitor

Configures remote cluster monitoring parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

```
geomonitor remoteclustermonitor retryCount retry_count retryInterval
retry_interval
```

retryCount retry_count

Specify the retry count if remote cluster is not reachable. To disable, set to 0.

Must be an integer in the range of 0-10.

Default Value: 3.

retryInterval retry_interval

Specify, in milliseconds, the retry interval after which status of the remote site will be fetched.

Must be an integer in the range of 200-50000.

Default Value: 3000.

geomonitor trafficMonitor

Usage Guidelines Use this command to configure remote cluster monitoring parameters.

geomonitor trafficMonitor

Configures traffic monitoring configuration.

Command Modes Exec > Global Configuration (config)

Syntax Description **geomonitor trafficMonitor thresholdCount *threshold_count* thresholdInterval *threshold_interval***

thresholdCount *threshold_count*

Specify the number of calls received for standby instance. To disable, set to 0.

Must be an integer in the range of 0-10000.

Default Value: 0.

thresholdInterval *threshold_interval*

Specify, in milliseconds, the maximum duration window to hit the threshold count value.

Must be an integer in the range of 100-10000.

Default Value: 3000.

Usage Guidelines Use this command to configure traffic monitoring configuration.

geomonitor vipmonitor instance

Configures VIP monitoring parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **geomonitor vipmonitor instance *instance_id***

instance *instance_id*

Specify the instance ID.

Must be an integer in the range of 1-8.

Usage Guidelines Use this command to configure VIP monitoring configuration. The CLI prompt changes to the Instance Configuration mode (config-instance-<*instance_id*>).

geomonitor vipmonitor instance vips

Configures VIP interface monitoring parameters.

Command Modes Exec > Global Configuration (config) > Instance Configuration (config-instance-*instance_id*)

Syntax Description

```
vips vip_interface_name [ retryCount retry_count | retryFailOverInterval retry_interval | retryInterval retry_interval | vipIp vip_ip | vipPort vip_port_number ]
```

retryCount *retry_count*

Specify the counter value to retry if VIP failed to ping after which VIP is marked as down.

Must be an integer in the range of 1-10.

retryFailOverInterval *retry_interval*

Specify, in milliseconds, the retry interval if VIP failed to ping.

Must be an integer in the range of 200-10000.

retryInterval *retry_interval*

Specify, in milliseconds, the retry interval if VIP pinged successfully.

Must be an integer in the range of 200-10000.

viplp *vip_ip*

Specify the IPv4 address.

Must be a string.

vipPort *vip_port_number*

Specify the diagnostic port number.

Must be an integer.

vip_interface_name

Specify name of the interface to monitor.

Must be a string.

Usage Guidelines Use this command to configure VIP interface monitoring parameters.

group nf-mgmt

Configures NF management group name.

Command Modes Exec > Global Configuration (config)

Syntax Description

```
nf-mgmt mgmt_group_name { nrf-mgmt-group nrf_mgmt_group_name | failure-handling-profile fh_profile_name | nrf-auth-group nrf_auth_group_name | locality locality_name | re-register { false | true } }
```

group nf-mgmt heartbeat

failure-handling-profile *fh_profile_name*

Specify name of the Failure Handling profile for the NRF Management functionality.

Must be a string.

locality *locality_name*

Specify the locality information.

Must be a string.

nf-mgmt *mgmt_group_name*

Specify name of the NRF management group.

Must be a string.

nrf-mgmt-group *nrf_mgmt_group_name*

Specify name of the NRF management group.

Must be a string.

Usage Guidelines Use this command to configure NF management group name.

group nf-mgmt heartbeat

Configures the heartbeat interval parameter.

Command Modes Exec > Global Configuration (config) > NF Management Group Configuration (config-nf-mgmt-mgmt_group_name)

Syntax Description **heartbeat interval *heartbeat_interval***

interval *heartbeat_interval*

Specify the heartbeat interval in seconds.

Must be an integer.

Usage Guidelines Use this command to configure the heartbeat interval parameter.

group nrf discovery

Configures NRF discovery group parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **group nrf discovery *group_name* [nrf-type *nrf_type*]**

discovery group_name

Specify name of the NRF discovery group.

Must be a string.

nrf-type nrf_type

Specify the NRF type.

Must be one of the following:

- **PLMN**: PLMN.
- **SHARED**: SHARED.
- **SLICE-LOCAL**: SLICE-LOCAL.

Usage Guidelines

Use this command to configure the NRF discovery group configuration.

group nrf discovery service type nrf

Configures the NRF discovery service name.

Command Modes

Exec > Global Configuration (config)

Syntax Description

nrf nrf_service_name [responsetimeout response_timeout]

nrf nrf_service_name

Specify name of the NRF discovery service.

Must be one of the following:

- nnrf-disc

responsetimeout response_timeout

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

Usage Guidelines

Use this command to configure the NRF discovery service name.

group nrf discovery service type nrf endpoint-profile

Configures endpoint profile parameters2.

Command Modes

Exec > Global Configuration

```
group nrf discovery service type nrf endpoint-profile endpoint-name
```

Syntax Description

endpoint-profile *endpoint_profile_name* { **api-uri-prefix** *api_uri_prefix* | **api-root** *api_root* | **uri-scheme** *uri_scheme* }

api-root *api_root*

Specify the API root.

Must be a string.

api-uri-prefix *api_uri_prefix*

Specify the API URI prefix.

Must be a string.

endpoint-profile *endpoint_profile_name*

Specify name of the endpoint profile.

Must be a string.

uri-scheme *uri_scheme*

Specify the URI scheme.

Must be one of the following:

- **http**

- **https**

Usage Guidelines

Use this command to configure endpoint profile parameters.

group nrf discovery service type nrf endpoint-profile endpoint-name

Configures endpoint parameters.

Command Modes

Exec > Global Configuration

Syntax Description

endpoint-name *endpoint_name* [**priority** *priority* | **capacity** *endpoint_capacity*]

capacity *endpoint_capacity*

Specify the endpoint capacity.

Must be an integer in the range of 0-65535.

Default Value: 10.

priority *priority*

Specify the node priority for endpoint.

Must be an integer in the range of 0-65535.

endpoint_name

Specify name of the endpoint.

Must be a string.

Usage Guidelines

Use this command to configure endpoint parameters.

group nrf discovery service type nrf endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>)

```
group nrf discovery service type nrf endpoint-profile endpoint-name secondary ip-address
```

> Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6 ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

group nrf discovery service type nrf endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name)

> Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6
ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

group nrf discovery service type nrf endpoint-profile endpoint-name tertiary ip-address

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port *port_number*

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

group nrf discovery service type nrf endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>)

> Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6
ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

group nrf discovery service type nrf endpoint-profile version uri-version

Configures URI version information.

Command Modes

Exec > Global Configuration

Syntax Description

```
uri-version uri_version [ full-version full_version ]
```

full-version full_version

Specify the full version in the format *major-version.minor-version.patch-version.[alpha-draft-number]*

Must be a string.

group nrf mgmt**uri-version *uri_version***

Specify the URI version.

Must be a string in the pattern v\d.

Usage Guidelines Use this command to configure URI version information.

group nrf mgmt

Configures the NRF self-management group parameters.

Command Modes Exec > Global Configuration**Syntax Description** **mgmt** *group_name* [**nrf-type** *nrf_type*]**mgmt *group_name***

Specify name of the NRF self-management group.

Must be a string.

nrf-type *nrf_type*

Specify the NRF type.

Must be one of the following:

- **PLMN**: PLMN.
- **SHARED**: SHARED.
- **SLICE-LOCAL**: SLICE-LOCAL.

Usage Guidelines Use this command to configure the NRF self-management group parameters.

group nrf mgmt service type nrf

Configures the NRF self-management service information.

Command Modes Exec > Global Configuration**Syntax Description** **nrf** **nrf-service-name** *nrf_service_name* [**responsetimeout** *response_timeout*]**nrf-service-name *nrf_service_name***

Specify name of the NRF service.

Must be one of the following:

- **nnrf-nfm**

responsetimeout *response_timeout*

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

Usage Guidelines	Use this command to configure the NRF self-management service information.
-------------------------	--

group nrf mgmt service type nrf endpoint-profile

Configures endpoint profile parameters1.

Command Modes	Exec > Global Configuration
----------------------	-----------------------------

Syntax Description	endpoint-profile <i>endpoint_profile_name</i> { api-uri-prefix <i>api_uri_prefix</i> api-root <i>api_root</i> uri-scheme <i>uri_scheme</i> }
---------------------------	--

api-root *api_root*

Specify the API root.

Must be a string.

api-uri-prefix *api_uri_prefix*

Specify the API URI prefix.

Must be a string.

endpoint-profile *endpoint_profile_name*

Specify name of the endpoint profile.

Must be a string.

uri-scheme *uri_scheme*

Specify the URI scheme.

Must be one of the following:

- **http**
- **https**

Usage Guidelines	Use this command to configure endpoint profile parameters.
-------------------------	--

group nrf mgmt service type nrf endpoint-profile endpoint-name

Configures endpoint parameters.

```
group nrf mgmt service type nrf endpoint-profile endpoint-name primary ip-address
```

Command Modes	Exec > Global Configuration
Syntax Description	<p>endpoint-name <i>endpoint_name</i> [max-retry-count <i>max_retry_count</i>] [priority <i>endpoint_priority</i>]</p> <p>max-retry-count <i>max_retry_count</i> Specify the maximum retry count. Must be an integer in the range of 0-10. Default Value: 3.</p> <p>priority <i>endpoint_priority</i> Specify the node priority for endpoint. Must be an integer in the range of 0-65535.</p> <p>endpoint_name Specify name of the endpoint. Must be a string.</p>
Usage Guidelines	Use this command to configure endpoint parameters.

group nrf mgmt service type nrf endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name

Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6 ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

```
group nrf mgmt service type nrf endpoint-profile endpoint-name secondary ip-address
```

group nrf mgmt service type nrf endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name)

> Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6
ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

group nrf mgmt service type nrf endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name

```
group nrf mgmt service type nrf endpoint-profile endpoint-name tertiary ip-address
```

Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6
ipv6_address ] [ port port_number ] }
```

ipv4 *ipv4_address*

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 *ipv6_address*

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port *port_number*

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

group nrf mgmt service type nrf endpoint-profile version uri-version

Configures version information.

Command Modes Exec > Global Configuration

Syntax Description **uri-version** *uri_version* [**full-version** *full_version*]

full-version *full_version*

Specify the full version in the format *major-version.minor-version.patch-version.[alpha-draft-number]*

Must be a string.

uri-version *uri_version*

Specify the URI version.

Must be a string in the pattern v\d.

Usage Guidelines Use this command to configure the version information.

help

Displays help information for specified command.

Command Modes Exec

Syntax Description **help** *command*

command

Specify the command name to display the corresponding help information.

Must be a string.

The command must be one of the following:

- **aaa**
- **cd**
- **cdl**
- **clear**
- **commit**
- **compare**
- **config**

help

- **describe**
- **dump**
- **exit**
- **geo**
- **help**
- **history**
- **id**
- **idle-timeout**
- **ignore-leading-space**
- **job**
- **leaf-prompts**
- **license**
- **logout**
- **monitor**
- **no**
- **paginate**
- **quit**
- **reconcile**
- **screen-length**
- **screen-width**
- **search**
- **send**
- **show**
- **show-defaults**
- **smiuser**
- **system**
- **terminal**
- **timestamp**
- **transaction**
- **who**

Usage Guidelines

Use this command to view help information for a specified command.

history

Configures the command history cache size.

Command Modes Exec

Syntax Description `history history_size`

history_size

Specify the command history cache size.

Must be an integer in the range of 0-1000.

Usage Guidelines Use this command to configure the command history cache size.

id

Displays the user ID information.

Command Modes Exec

Syntax Description `id`

Usage Guidelines Use this command to view the user ID information.

idle-timeout

Configures the maximum duration for which a command can remain idle in seconds after which the system automatically terminates the connection.

Command Modes Exec

Syntax Description `idle-timeout timeout_in_seconds`

timeout_in_seconds

Specify the idle timeout duration in seconds.

Usage Guidelines Use this command to configure the maximum duration for which a command can remain idle.

ignore-leading-space

Configures whether to ignore or consider the leading whitespace at the beginning of a command.

Command Modes Exec

Syntax Description `ignore-leading-space { false | true }`

`{ false | true }`

Specify false to ignore leading whitespace, and true to consider it.

Must be either "false" or "true".

Usage Guidelines Use this command to configure whether to ignore or consider leading whitespace at the beginning of a command.

infra metrics experimental

Configures the experimental metrics version to be enabled.

Command Modes Exec > Global Configuration (config)

Syntax Description `infra metrics experimental version experimental_metrics_version`

`version experimental_metrics_version`

Specify the experimental metrics version to be enabled.

Must be an integer in the range of 0-4.

Default Value: 0.

Usage Guidelines Use this command to configure the experimental metrics version to be enabled.

infra metrics verbose verboseLevels

Configures verbose configuration parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description `infra metrics verbose pod_type level verbose_level`

`level verbose_level`

Specify the verbosity level.

Must be one of the following:

- debug
- production
- trace

Default Value: trace.

pod_type

Specify the pod type.

Must be one of the following:

- **load-balancer**
- **protocol**
- **service**

Usage Guidelines Use this command to configure verbose configuration parameters.

infra transaction limit

Configures the maximum stage limit per transaction.

Command Modes Exec > Global Configuration (config)

Syntax Description **infra transaction limit stage max_stage_limit**

stage max_stage_limit

Specify the maximum stage limit per transaction.

Must be an integer.

Default Value: 100.

Usage Guidelines Use this command to configure the maximum stage limit per transaction.

infra transaction limit consecutive same

Configures the maximum consecutive stage limit per transaction.

Command Modes Exec > Global Configuration (config)

Syntax Description **infra transaction limit consecutive same stage max_consecutive_stage_limit**

stage max_consecutive_stage_limit

Specify the maximum consecutive stage limit per transaction.

Must be an integer.

Default Value: 10.

Usage Guidelines Use this command to configure the maximum consecutive stage limit per transaction.

infra transaction loop

infra transaction loop

Configures the transaction loop detection parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **infra transaction loop detection** *detection_status*

detection ***detection_status***

Specify to enable or disable loop detection.

Must be one of the following:

- **disable**
- **enable**

Default Value: disable.

Usage Guidelines Use this command to configure the transaction loop detection parameter.

infra transaction loop category

Configures the loop category.

Command Modes Exec > Global Configuration (config)

Syntax Description **infra transaction loop category** *loop_category*

category ***loop_category***

Specify the category.

Usage Guidelines Use this command to configure the loop category. The CLI prompt changes to the Loop Category Configuration mode(config-category-<category>).

infra transaction loop category threshold

Configures the loop detection interval parameter.

Command Modes Exec > Global Configuration (config) > Loop Category Configuration (config-category-*category*)

Syntax Description **threshold interval** *loop_detect_interval*

interval ***loop_detect_interval***

Specify, in seconds, the loop detection interval.

Must be an integer.

Default Value: 5.

Usage Guidelines Use this command to configure the loop detection interval parameter.

infra transaction loop category threshold thresholds

Configures thresholds.

Command Modes Exec > Global Configuration (config) > Loop Category Configuration (config-category-*category*)

Syntax Description **threshold** *threshold_level* [[**action** *threshold_action*] [**count** *max_transactions*]]

action *threshold_action*

Specify the action to take on threshold breach.

Must be one of the following:

- **kill-session**
- **log-event**
- **noop**

Default Value: noop.

count *max_transactions*

Specify the maximum number of transactions for the threshold interval.

Must be an integer.

Default Value: 100.

thresholds *threshold_level*

Specify the threshold level.

Must be one of the following:

- **high**
- **low**

Usage Guidelines Use this command to configure thresholds.

instance instance-id

Configures instance ID of GR instance.

instance instance-id endpoint ep

Command Modes Exec > Global Configuration (config)

Syntax Description **instance instance-id *instance_id***

id *instance_id*

Specify the instance ID.

Usage Guidelines GR instance-specific parameters. Use this command to configure the instance ID of GR instance. The CLI prompt changes to the Instance ID Configuration mode (config-instance-id-<*instance_id*>).

instance instance-id endpoint ep

Configures endpoint parameters.

Command Modes Exec > Global Configuration (config) > Instance ID Configuration (config-instance-id-*instance_id*)

Syntax Description **endpoint *endpoint_type* [[**instancetype** *ep_local_interface_type*] [**loopbackEth** *loopbackEth*] [**loopbackPort** *loopbackPort*] [**nodes** *node_replicas_for_resiliency*] [**replicas** *replicas_per_node*] [**uri-scheme** *uri_scheme*]]**

certificate-name *certificate_alias_name*

Specify the alias name for the certificate.

endpoint *endpoint_type*

Specify the endpoint type.

instancetype *ep_local_interface_type*

Specify the endpoint local interface type.

Must be one of the following:

- **Dual**
- **IPv4**
- **IPv6**

Default Value: IPv4.

internal-vip *internal_vip*

Specify the internal VIP.

Must be a string.

loopbackEth *loopbackEth*

Specify the endpoint local interface name or host IP.

Must be a string.

loopbackPort *loopbackPort*

Specify the endpoint local port.

Must be an integer.

max-fragment-size *max_fragment_size*

Specify the Maximum SCTP fragment size for data packet.

Must be an integer.

Default Value: 0.

nodes *node_replicas_for_resiliency*

Specify the number of node replicas for resiliency.

Must be an integer.

Default Value: 1.

replicas *replicas_per_node*

Specify the number of replicas per node.

Must be an integer.

Default Value: 1.

uri-scheme *uri_scheme*

Specify the URI scheme.

Must be one of the following:

- http
- https

Default Value: http.

Usage Guidelines

Use this command to configure endpoint parameters.

instance instance-id endpoint ep interface

Configures the interface type.

Command Modes

Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_name*)

Syntax Description

interface *interface_type*

certificate-name *certificate_alias_name*

Specify the alias name for certificate.

instance instance-id endpoint ep interface dispatcher

instancetype ep_local_interface_type

Specify the endpoint local interface type.

Must be one of the following:

- Dual
- IPv4
- IPv6

Default Value: IPv4.

loopbackEth loopback_eth

Specify the Loopback Eth pod interface.

Must be a string.

loopbackPort loopback_port_number

Specify the loopback port number.

Must be an integer.

uri-scheme uri_scheme

Specify the URI scheme.

Must be one of the following:

- http
- https

Default Value: http.

interface_type

Specify the interface type.

Usage Guidelines

Use this command to configure the interface type.

instance instance-id endpoint ep interface dispatcher

Displays the dispatcher queue support details for the interface.

Command Modes

Exec > Global Configuration (config) > Instance ID Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_type*) > Interface Configuration (config-interface-*interface_name*)

Syntax Description

```
dispatcher { cache { false | true } | capacity queue_capacity | count
dispatcher_queues_count | expiry cache_expiry_duration | nonresponsive
cache_entry_expiry_duration | outbound { false | true } | rate-limit
queue_rate_limit | threshold outstanding_requests_per_queue_cache }
```

cache { false | true }

Specify to enable or disable retransmission cache support. To disable, set to true.

Must be one of the following:

- **false**
- **true**

Default Value: false.

capacity queue_capacity

Specify the capacity of each queue.

Must be an integer.

Default Value: 5000.

count dispatcher_queues_count

Specify the count of dispatcher queues.

Must be an integer.

Default Value: 0.

expiry cache_entry_expiry_duration

Specify, in milliseconds, the responded cache entry expiry duration.

Must be an integer.

Default Value: 60000.

nonresponsive cache_entry_expiry_duration

Specify, in milliseconds, the non-responsive cache entry expiry duration.

Must be an integer.

Default Value: 30000.

outbound { false | true }

Specify to enable or disable queue support for outbound messages. To disable, set to true.

Must be one of the following:

- **false**
- **true**

Default Value: true.

rate-limit queue_rate_limit

Specify the rate limit for each queue.

Must be an integer.

instance instance-id endpoint ep interface internal base-port

Default Value: 0.

threshold *outstanding_requests_per_queue_cache*

Specify the outstanding requests per queue cache.

Must be an integer.

Default Value: 30000.

Usage Guidelines	Use this command to view dispatcher queue support details for the interface.
-------------------------	--

instance instance-id endpoint ep interface internal base-port

Configures the internal base-port to start endpoint parameter.

Command Modes	Exec > Global Configuration (config) > Instance ID Configuration (config-instance-id- <i>instance_id</i>) > Endpoint Configuration (config-endpoint-endpoint_type) > Interface Configuration (config-interface-interface_name)
----------------------	---

Syntax Description	internal base-port start <i>base_port_to_start_ep</i>
---------------------------	--

start *base_port_to_start_ep*

Specify the base port to start endpoint.

Must be an integer in the range of 1024-65535.

Usage Guidelines	Use this command to configure the internal base-port to start endpoint parameter.
-------------------------	---

instance instance-id endpoint ep interface sla

Configures SLA parameters.

Command Modes	Exec > Global Configuration (config) > Instance Configuration (config-instance-id- <i>instance_id</i>) > Endpoint Configuration (config-endpoint-endpoint_name) > Interface Configuration (config-interface-interface_name)
----------------------	--

Syntax Description	sla { [response <i>response_time</i>] [procedure <i>procedure_time</i>] }
---------------------------	--

procedure *procedure_time*

Specify, in milliseconds, the procedure time.

Must be an integer in the range of 1000-120000.

response *response_time*

Specify, in milliseconds, the response time.

Must be an integer in the range of 1000-180000.

Usage Guidelines	Use this command to configure SLA parameters.
-------------------------	---

instance instance-id endpoint ep interface vip

Configures Virtual IP parameters.

Command Modes Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_name*) > Interface Configuration (config-interface-*interface_name*)

Syntax Description **vip-ip** *vip_ip_address* [[**offline**] [**vip-interface** *interface_name*] [**vip-port** *vip_port_number*]]

offline

Specify to mark the vip-ip as offline.

vip-interface *interface_name*

Specify the interface name to advertise BGP router.

Must be a string.

vip-ip *vip_ip_address*

Specify the host IP address.

Must be a string.

vip-port *vip_port_number*

Specify the port number.

Must be an integer.

Usage Guidelines Use this command to configure Virtual IP parameters.

instance instance-id endpoint ep interface vip6

Configures VIP IPv6 parameters.

Command Modes Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_name*) > Interface Configuration (config-interface-*interface_name*)

Syntax Description **vip-ip6** *vip_ip6* [[**offline**] [**vip-ipv6-port** *port_number*]]

offline

Specify the VIP IP as offline.

vip-ip6 *vip_ip6*

Specify the host detail.

Must be a string.

instance instance-id endpoint ep internal base-port

vip-ipv6-port *port_number*

Specify the port number.

Must be an integer.

Usage Guidelines Use this command to configure VIP IPv6 parameters.

instance instance-id endpoint ep internal base-port

Configures the internal base-port to start endpoint parameter.

Command Modes Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_type*)

Syntax Description **internal base-port start *base_port_to_start_ep***

start *base_port_to_start_ep*

Specify the base port to start endpoint.

Must be an integer in the range of 1024-65535.

Usage Guidelines Use this command to configure the internal base-port to start endpoint parameter.

instance instance-id endpoint ep internal-port

Configures internal port parameters.

Command Modes Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_type*)

Syntax Description **internal-port metrics *metrics_port* admin *admin_port* ipc *ipc_port* pprof *pprof_port* keepalive *keepalive_port***

admin *admin_port*

Specify the admin port number for SCTP.

Must be an integer.

Default Value: 7879.

ipc *ipc_port*

Specify the IPC port number for SCTP.

Must be an integer.

Default Value: 9005.

keepalived *keepalived_port*

Specify the keepalived port number for SCTP.

Must be an integer.

Default Value: 29000.

metrics *metrics_port*

Specify the metrics port number for SCTP.

Must be an integer.

Default Value: 7083.

pprof *pprof_port*

Specify the PPROF port number for SCTP.

Must be an integer.

Default Value: 7850.

Usage Guidelines

Use this command to configure internal port parameters.

instance instance-id endpoint ep retransmission

Configures retransmission configuration parameters.

Command Modes

Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_type*)

Syntax Description

retransmission timeout *retransmission_interval* max-retry *max_retry*

max-retry *max_retry*

Specify the maximum number of times to request retry attempts. To disable retransmission, set to 0

Must be an integer in the range of 0-5.

Default Value: 3.

timeout *retransmission_interval*

Specify the retransmission interval in seconds. To disable retransmission, set to 0

Must be an integer in the range of 0-10.

Default Value: 2.

Usage Guidelines

Use this command to configure retransmission configuration parameters.

```
instance instance-id endpoint ep system-health-level crash
```

instance instance-id endpoint ep system-health-level crash

Configures system health crash parameters.

Command Modes Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_type*)

Syntax Description `system-health-level crash { [cpu-percent cpu_percentage] [memory-in-mbs memory] [num-of-goroutine goroutine_per_core] }`

cpu-percent *cpu_percentage*

Specify the CPU percentage.

Must be an integer.

Default Value: 80.

memory-in-mbs *memory*

Specify the memory in MB.

Must be an integer.

Default Value: 2048.

num-of-goroutine *goroutine_per_core*

Specify the number of goroutine per core.

Must be an integer.

Default Value: 45000.

Usage Guidelines Use this command to configure system health crash parameters.

instance instance-id endpoint ep system-health-level critical

Configures system health critical parameters.

Command Modes Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_type*)

Syntax Description `system-health-level critical { [cpu-percent cpu_percent] [memory-in-mbs memory] [num-of-goroutine number_of_goroutine] }`

cpu-percent *cpu_percent*

Specify the CPU percentage.

Must be an integer.

Default Value: 60.

memory-in-mbs *memory*

Specify the memory in MB.

Must be an integer.

Default Value: 1024.

num-of-goroutine *number_of_goroutine*

Specify the number of goroutine per core.

Must be an integer.

Default Value: 35000.

Usage Guidelines

Use this command to configure system health critical parameters.

instance instance-id endpoint ep system-health-level warn

Configures system health warn parameters.

Command Modes

Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_type*)

Syntax Description

```
system-health-level warn { [ cpu-percent cpu_percentage ] [ memory-in-mbs memory ] [ num-of-goroutine number_of_goroutine ] }
```

cpu-percent *cpu_percentage*

Specify the CPU percentage.

Must be an integer.

Default Value: 50.

memory-in-mbs *memory*

Specify the memory in MBs.

Must be an integer.

Default Value: 512.

num-of-goroutine *goroutine_per_core*

Specify the number of goroutine per core.

Must be an integer.

Default Value: 25000.

Usage Guidelines

Use this command to configure system health warn parameters.

```
instance instance-id endpoint ep vip
```

instance instance-id endpoint ep vip

Configures VIP parameters.

Command Modes Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*) > Endpoint Configuration (config-endpoint-*endpoint_type*)

Syntax Description **vip-ip** *vip_ipv4_address* [[**offline**] [**vip-interface** *vip_interface_name*] [**vip-port** *port_number*]]

offline

Specify the VIP-IP as offline.

vip-interface *vip_interface_name*

Specify the interface name to advertise BGP router.

Must be a string.

vip-ip *vip_ipv4_address*

Specify the VIP IPv4 address.

Must be a string.

vip-port *port_number*

Specify the port number.

Must be an integer.

Usage Guidelines Use this command to configure VIP parameters.

instance instance-id endpoint ep vip6

Configures VIP IPv6 parameters.

Command Modes Exec > Global Configuration (config) > Instance ID Configuration (config-instance-id-*instance_id*) > Endpoint *endpoint_type* Configuration (config-endpoint-*endpoint_type*)

Syntax Description **vip-ipv6** *vip_ipv6_detail* [[**offline**] [**vip-ipv6-port** *vip_ipv6_port_number*]]

offline

Specify the VIP-IP as offline.

vip-ipv6-port *vip_ipv6_port_number*

Specify the port number.

Must be an integer.

vip-ipv6 *vip_ipv6_detail*

Specify the IPv6 detail.

Must be a string.

Usage Guidelines	Use this command to configure VIP IPv6 parameters.
-------------------------	--

instances instance

Configures instance configuration parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	instances instance <i>instance_id</i> [[cluster-id <i>cluster_id</i>] [system-id <i>system_id</i>] [slice-name <i>slice_name</i>]]
---------------------------	--

cluster-id *cluster_id*

Specify the instance cluster ID.

Must be a string.

instance *instance_id*

Specify the instance ID.

Must be an integer in the range of 1-8.

slice-name *slice_name*

Specify the CDL slice name associated with instance ID.

Must be a string.

system-id *system_id*

Specify the instance system ID.

Must be a string.

Usage Guidelines	Use this command to configure instance configuration parameters.
-------------------------	--

job

Suspends the jobs that are running in the background.

Command Modes	Exec
----------------------	------

Syntax Description	job stop <i>job_id</i>
---------------------------	-------------------------------

k8 amf local etcd endpoint***job_id***

Specify the job ID.

Must be an integer.

Usage Guidelines

Use this command to suspend the jobs that are running in the background.

k8 amf local etcd endpoint

Configures AMF local Etcd endpoint parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description**amf local etcd endpoint host *host_name* port *port_number******host host_name***

Specify the host name.

Must be a string.

Default Value: etcd.

port port_number

Specify the port number.

Must be an integer.

Default Value: 2379.

Usage Guidelines

Use this command to configure AMF local Etcd endpoint parameters.

k8 label pod-group-config

Configures K8 node affinity label pod group configuration.

Command Modes

Exec > Global Configuration (config)

Syntax Description**k8 label pod_group *key* *label_key* *value* *label_value******key label_key***

Specify the key for the label.

Must be a string.

value label_value

Specify the value for the label.

Must be a string.

pod_group

Specify the pod group for the VMs.

Must be one of the following:

- **cdl-layer**
- **oam-layer**
- **protocol-layer**
- **service-layer**

Usage Guidelines

Use this command to configure K8 node affinity label pod group configuration.

k8 label sctp-layer

Configures AMF sctp-layer parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

sctp-layer key label_key value label_value

key *label_key*

Specify the key for the label.

Must be a string.

value *label_value*

Specify the value for the label.

Must be a string.

Usage Guidelines

Use this command to configure sctp-layer parameters.

k8s single-node

Enables AMF to be deployed in single node.

Command Modes

Exec > Global Configuration (config)

Syntax Description

k8s single-node { false | true }

single-node { false | true }

Specify whether to enable or disable single-node deployment of AMF.

Must be one of the following:

- **false**

leaf-prompting

- **true**

Default Value: false.

If **k8s single-node true** is configured, AMF pods can be deployed in a single node.

Single node deployment involves some additional configurations. For more information, contact your Cisco account representative.



Note AMF does not support dynamic changes to this command.

Usage Guidelines Use this command to enable AMF to be deployed in single node.

leaf-prompting

Enables or disables automatically querying for leaf values.

Command Modes Exec

Syntax Description `leaf-prompting { false | true }`

{ false | true }

Specify false to disable leaf prompting, true to enable.

Must be either "false" or "true".

Usage Guidelines Use this command to automatically query for leaf values.

license smart register

Registers the VNF for Smart Licensing.

Command Modes Exec

Syntax Description `license smart register [force | idtoken idtoken]`

register

Register the VNF for Smart Licensing.

force

Force registration of the agent.

idtoken

Specify the ID token to register the agent with.

Must be an integer.

Usage Guidelines	Use this command to register the VNF for Smart Licensing.
-------------------------	---

license smart deregister

Deregisters the VNF for Smart Licensing.

Command Modes	Exec
----------------------	------

Syntax Description	<code>license smart deregister</code>
---------------------------	---------------------------------------

deregister

Deregisters the VNF for Smart Licensing.

Usage Guidelines	Use this command to deregister the VNF for Smart Licensing.
-------------------------	---

license smart renew

Renews smart agent IDs and authentication.

Command Modes	Exec
----------------------	------

Syntax Description	<code>license smart renew { ID auth }</code>
---------------------------	--

renew

Renews the smart agent IDs and authentication.

ID

Specify the ID to renew smart agent license registration information.

auth

Specify to initiate a manual update of the license usage information with Cisco.

Usage Guidelines	Use this command to renew the smart agent IDs and authentication.
-------------------------	---

license smart status

Displays the smart licensing status information.

Command Modes	Exec
----------------------	------

Syntax Description	<code>license smart status status-only { true false }</code>
---------------------------	--

local-instance**status**

Displays the smart licensing information.

status-only

Displays only the status information.

Must be one of the following:

- false
- true

Usage Guidelines Use this command to view the smart licensing status information.

local-instance

Configures GR instance for current instance.

Command Modes Exec > Global Configuration

Syntax Description **local-instance instance gr_instance_id**

instance *gr_instance_id*

Specify the GR instance ID of current instance.

Usage Guidelines Use this command to configure GR instance for current instance.

logging async application enable

Enables and configures async logging.

Command Modes Exec > Global Configuration (config)

Syntax Description **logging async application { disable | enable buffer-size *buffer_size* }**

Syntax Description **logging async monitor-subscriber { disable | enable buffer-size *buffer_size* }**

Syntax Description **logging async tracing { disable | enable buffer-size *buffer_size* }**

Syntax Description **logging async transaction { disable | enable buffer-size *buffer_size* }**

buffer-size *buffer_size*

Specify the buffer size for async logging.

Must be an integer.

Usage Guidelines Use this command to enable and configure async logging.

logging async monitor-subscriber enable

Enables and configures async logging.

Command Modes Exec > Global Configuration (config)

Syntax Description `logging async application { disable | enable buffer-size buffer_size }`

Syntax Description `logging async monitor-subscriber { disable | enable buffer-size buffer_size }`

Syntax Description `logging async tracing { disable | enable buffer-size buffer_size }`

Syntax Description `logging async transaction { disable | enable buffer-size buffer_size }`

buffer-size *buffer_size*

Specify the buffer size for async logging.

Must be an integer.

Usage Guidelines Use this command to enable and configure async logging.

logging async tracing enable

Enables and configures async logging.

Command Modes Exec > Global Configuration (config)

Syntax Description `logging async application { disable | enable buffer-size buffer_size }`

Syntax Description `logging async monitor-subscriber { disable | enable buffer-size buffer_size }`

Syntax Description `logging async tracing { disable | enable buffer-size buffer_size }`

Syntax Description `logging async transaction { disable | enable buffer-size buffer_size }`

buffer-size *buffer_size*

Specify the buffer size for async logging.

Must be an integer.

Usage Guidelines Use this command to enable and configure async logging.

logging async transaction enable

logging async transaction enable

Enables and configures async logging.

Command Modes Exec > Global Configuration (config)

Syntax Description `logging async application { disable | enable buffer-size buffer_size }`

Syntax Description `logging async monitor-subscriber { disable | enable buffer-size buffer_size }`

Syntax Description `logging async tracing { disable | enable buffer-size buffer_size }`

Syntax Description `logging async transaction { disable | enable buffer-size buffer_size }`

buffer-size *buffer_size*

Specify the buffer size for async logging.

Must be an integer.

Usage Guidelines Use this command to enable and configure async logging.

logging error

Configures error logging parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description `logging error stack status`

stack *status*

Specify to enable or disable error stack.

Must be one of the following:

- **disable**
- **enable**

Default Value: enable.

Usage Guidelines Use this command to configure error logging parameters.

logging level

Configures the logging level.

Command Modes Exec > Global Configuration (config)

Syntax Description **logging level** *log_level*

application *application_log_level*

Specify the application logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

monitor-subscriber *monitor_subscriber_log_level*

Specify the monitor subscriber logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

tracing *tracing_log_level*

Specify the tracing logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

logging logger***transaction transaction_log_level***

Specify the transaction logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

Usage Guidelines Use this command to configure the logging level.

logging logger

Configures the log name.

Command Modes Exec > Global Configuration (config)

Syntax Description **logging name** *log_name*

name log_name

Specify the log name in "module.component.interface" format.

Must be a string.

Usage Guidelines Use this command to configure the log name.

logging logger level

Configures the logging level.

Command Modes Exec > Global Configuration (config)

Syntax Description **logging level** *log_type_options*

application application_log_level

Specify the application logging level.

Must be one of the following:

- **debug**
- **error**

- **info**
- **off**
- **trace**
- **warn**

monitor-subscriber *monitor_subscriber_log_level*

Specify the monitor subscriber logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

tracing *tracing_log_level*

Specify the tracing logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**
- **warn**

transaction *transaction_log_level*

Specify the transaction logging level.

Must be one of the following:

- **debug**
- **error**
- **info**
- **off**
- **trace**

logging transaction

- **warn**

Usage Guidelines Use this command to configure the logging level.

logging transaction

Configures the logging transaction parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description

```
logging transaction { [ duplicate { disable | enable } ] [ message { disable | enable } ] [ persist { disable | enable [ max-file-size max_file_size ] [ max-rotation max_rotations ] } ] }
```

duplicate { enable | disable }

Specify whether to enable or disable duplicate logs in transaction logging.

Must be one of the following:

- **disable**
- **enable**

Default Value: disable.

max-file-size *max_file_size*

Specify the maximum transaction file size in MB.

Must be an integer in the range of 1-10000.

Default Value: 50.

max-rotation *max_rotations*

Specify the maximum number of file rotations.

Must be an integer in the range of 2-1000.

Default Value: 10.

message { enable | disable }

Specify whether to enable or disable messages in transaction logging.

Must be one of the following:

- **disable**
- **enable**

Default Value: disable.

persist{ enable | disable }

Specify whether to enable or disable file-based transaction logging.

Must be one of the following:

- **disable**
- **enable**

Default Value: disable.

Usage Guidelines

Use this command to configure the logging transaction parameters.

logout

Logout a specific session or a specific user from all sessions.

Command Modes

Exec

Syntax Description

logout [session session_id | user user_name]

session *session_id*

Specify the session ID from the possible completion options.

Must be a string.

user *user_name*

Specify the user name or the user process from the possible completion options.

Must be a string.

Usage Guidelines

Use this command to log out a specific session or a specific user from all sessions.

monitor protocol

Configures the AMF to monitor the protocol.

Command Modes

Exec

Syntax Description

monitor protocol [interface interface_name [capture-duration duration | gr-instance gr_instance | pcap]]

interface *interface_name*

Specify the name of interface on which PCAP is captured.

Must be a string.

Must be one of the following:

monitor subscriber

- sbi
- pfcp
- gtpu
- gtpe
- gtp

capture-duration duration

Specify the duration, in seconds, during which PCAP is captured.

Must be an integer.

Default Value: 300 seconds

gr-instance gr_instance

Specify the GR instance ID.

pcap

Enable PCAP file generation.

Must be "yes" or "no".

Default Value: no

Usage Guidelines

Use this command to monitor the protocol.

monitor subscriber

Configures the AMF to monitor the subscribers.

Command Modes

Exec

Syntax Description

```
monitor subscriber [ capture-duration duration | dump filename file_name |
supi supi | gr-instance gr_instance | imei subscriber_imei | imsi subscriber_imsi |
internal-messages [ yes ] | list | namespace [ sgw | smf ] | [
capture-duration duration | gr-instance gr_instance | internal-messages [ yes ]
] | nf-service [ sgw | smf ] | transaction-logs [ yes ] ] | nf-service
[ sgw | smf ] | supi supi | transaction-logs [ yes ] ]
```

supi supi

Specify the subscriber identifier.

Must be a string.

capture-duration duration

Specify the duration, in seconds, during which PCAP is captured.

Must be an integer.

Default Value: 300 seconds

internal-messages

Set to yes to enable internal messages.

Default Value: disabled

transaction-logs

Set to yes to enable transaction logging.

Default Value: disabled

dump filename *file_name*

Specify the path of the file name to be dumped.

Must be a string.

list

List the monitored subscriber files.

Usage Guidelines

Use this command to monitor the subscribers.

no

Restores the command history cache size to its default setting. See the *history* command.

Command Modes

Exec

Syntax Description

no history

Usage Guidelines

Use this command to configure the command history cache size to its default setting. For more details, see the *history* command.

nrf discovery-info discovery-filter

Displays NF discovery filter information.

Command Modes

Exec > Global Configuration

Syntax Description

show discovery-filter

Usage Guidelines

Use this command to view NF discovery filter information.

nrf discovery-info discovery-filter nf-discovery-profile

nrf discovery-info discovery-filter nf-discovery-profile

Displays discovery profile information.

Command Modes Exec > Global Configuration

Syntax Description **show nf-discovery-profile**

Usage Guidelines Use this command to view NF discovery profile information.

nrf discovery-info discovery-filter nf-discovery-profile nf-service

Displays NF service information.

Command Modes Exec > Global Configuration

Syntax Description **show nf-service**

Usage Guidelines Use this command to view NF service information.

nrf registration-info

Displays NRF registration information.

Command Modes Exec

Syntax Description **show nrf [registration-info [gr-instance *gr_instance*]]**

gr-instance *gr_instance*

Specify the GR instance ID.

Must be a string.

Usage Guidelines Use this command to view registration information.

nrf subscription-info

Displays NF subscription information.

Command Modes Exec > Global Configuration

Syntax Description **show nrf subscription-info**

Usage Guidelines Use this command to view NF subscription information.

paginate

Configures whether or not to paginate CLI command output.

Command Modes Exec

Syntax Description `paginate { true | false }`

{ true | false }

Specify false to disable paginating CLI command output, and true to enable.

Must be either "false" or "true".

Usage Guidelines Use this command to paginate the command output.

patch amf-ngap-ep

Configures patch amf-ngap-ep parameter.

Command Modes Exec > Global Configuration (config)

Syntax Description `patch amf-ngap-ep patch-url patch_url`

patch-url *patch_url*

Specify the patch URL.

Must be a string.

Usage Guidelines Use this command to configure patch amf-ngap-ep parameter.

patch amf-rest-ep

Configures patch AMF REST endpoint.

Command Modes Exec > Global Configuration (config)

Syntax Description `patch amf-rest-ep patch-url patch_url`

patch-url *patch_url*

Specify the patch URL.

Must be a string.

Usage Guidelines Use this command to configure patch AMF REST endpoint.

patch amf-sctp-lb

patch amf-sctp-lb

Configures patch amf-sctp-lb parameter.

Command Modes Exec > Global Configuration (config)

Syntax Description `patch amf-sctp-lb patch-url patch_url`

patch-url *patch_url*

Specify the patch URL.

Must be a string.

Usage Guidelines Use this command to configure patch amf-sctp-lb parameter.

patch amf-service

Configures patch AMF service.

Command Modes Exec > Global Configuration (config)

Syntax Description `patch amf-service patch-url patch_url`

patch-url *patch_url*

Specify the patch URL.

Must be a string.

Usage Guidelines Use this command to configure patch AMF service.

peers

Displays peer information.

Command Modes Exec

Syntax Description `show peers`

Usage Guidelines Use this command to view peer information.

peers all

Displays information for all peers.

Command Modes Exec

Syntax Description `show peers [all]`

Usage Guidelines Use this command to view peer configuration information.

profile emergency-profile emergency

Configures emergency profile parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description `profile emergency-profile profile_name [[dnn dnn_name] [ue-validation-level ue_validation_level]]`

dnn dnn_name

Specify name of the DNN.

Must be a string.

emergency-profile profile_name

Specify name of the profile.

Must be a string.

ue-validation-level ue_validation_level

Specify the UE validation level.

Must be one of the following:

- **auth-only**: Specify to allow only authenticated UEs. Subscription is bypassed.
- **full**: Specify to allow only authenticated UEs with subscription and location validated. Allow only UEs with Normal Registration.
- **none**: Specify to allow any UE. UE without SUPI will attach using IMEI/PEI. Authentication is optional..
- **supi-only**: Specify to allow only UEs with SUPI. UE without SUPI will be rejected. Authentication is optional.

Usage Guidelines Use this command to configure emergency profile parameters. The CLI prompt changes to the Emergency Profile Configuration mode (config-emergency-profile-<profile_name>).

profile emergency-profile emergency extended-emergency-num

Configures the extended emergency number parameters.

Command Modes Exec > Global Configuration (config) > Emergency Profile Configuration (config-emergency-profile-*profile_name*)

profile emergency-profile emergency local-emergency-num

Syntax Description

extended-emergency-num *extended_emergency_number* **sub-service**
emergency_number_sub_service_type

extended-emergency-num **extended_emergency_number**

Specify the extended emergency number.

Must be a string of 1-10 characters.

sub-service **emergency_number_sub_service_type**

Specify the emergency number sub-service type.

Must be a string.

Usage Guidelines

Use this command to configure extended emergency number parameters.

You can configure a maximum of 10 elements with this command.

profile emergency-profile emergency local-emergency-num

Configures local emergency number parameters.

Command Modes

Exec > Global Configuration (config) > Emergency Profile Configuration
 (config-emergency-profile-*profile_name*)

Syntax Description

local-emergency-num *emergency_number* *emergency_number_service_type*

emergency_number

Specify the emergency number.

Must be a string of 1-10 characters.

emergency_number_service_type

Specify the emergency number service type.

Must be one of the following:

- **ambulance**
- **fire**
- **marine-guard**
- **mountain-rescue**
- **police**

Usage Guidelines

Use this command to configure local emergency number parameters.

You can configure a maximum of 10 elements with this command.

profile emergency-profile emergency slice

Configures slice for suscriber parameters.

Command Modes Exec > Global Configuration (config) > Emergency Profile Configuration (config-emergency-profile-profile_name)

Syntax Description **slice name slice_name [sst slice_service_type sdt slice_differentiator_type]**

name slice_name

Specify name of the slice.

Must be a string.

sdt slice_differentiator_type

Specify the Slice Differentiator Type (SDT).

Must be a string in the octet-string24 pattern. For information on the octet-string24 pattern, see the Input Pattern Types section.

sst slice_service_type

Specify the Slice Service Type (SST).

Must be an integer in the range of 0-255.

Usage Guidelines Use this command to configure slice for suscriber parameters.

profile network-element amf

Configures the peer AMF network element configuration parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **profile network-element amf peer_amf_config_name [[nf-client-profile nf_client_profile_name] [failure-handling-profile failure_handling_profile_name]]**

failure-handling-profile failure_handling_profile_name

Specify name of the failure handling profile.

Must be a string.

nf-client-profile nf_client_profile_name

Specify name of the NF client profile.

Must be a string.

profile network-element amf query-params***peer_amf_config_name***

Specify name of the AMF peer configuration.

Must be a string.

Usage Guidelines

Use this command to configure the peer AMF network element configuration parameters. The CLI prompt changes to the AMF NE Configuration mode (config-amf-<amf_name>).

profile network-element amf query-params

Configures query parameters for AMF discovery.

Command Modes

Exec > Global Configuration (config) > AMF NE Configuration mode (config-amf-*amf_name*)

Syntax Description

query-params *amf_query_params*

query-params amf_query_params

Specify the AMF query parameters.

Must be one of the following:

- **dnn**
- **guami**
- **requester-plmn**
- **snssais**
- **supi**
- **tai**
- **target-plmn**

Usage Guidelines

Use this command to configure query parameters for AMF discovery.

profile network-element ausf

Configures peer AUSF parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

profile network-element ausf *peer_ausf_config_name nf-client-profile nf_client_profile_name failure-handling-profile fh_profile_name*

failure-handling-profile fh_profile_name

Specify name of the failure handling profile.

Must be a string.

nf-client-profile nf_client_profile_name

Specify name of the NF client profile.

Must be a string.

peer_ausf_config_name

Specify name of the peer AUSF configuration.

Must be a string.

Usage Guidelines

Use this command to configure peer AUSF parameters.

profile network-element ausf query-params

Configures query parameter for AUSF discovery.

Command Modes

Exec > Global Configuration (config) > AUSF Peer Configuration (config-amf-peer_ausf_config_name)

Syntax Description

query-params amf_ausf_query_params

query-params amf_ausf_query_params

Specify the AMF AUSF query parameters.

Must be one of the following:

- requester-plmn
- routing-indicator
- supi
- target-plmn

Usage Guidelines

Use this command to configure query parameter for AUSF discovery.

profile network-element nssf

Configures peer NSSF parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

profile network-element nssf peer_nssf_config_name nf-client-profile nf_client_profile_name failure-handling-profile fh_profile_name

failure-handling-profile fh_profile_name

Specify name of the failure handling profile.

Must be a string.

profile network-element nssf query-params***nf-client-profile nf_client_profile_name***

Specify name of the NF client profile.

Must be a string.

peer_nssf_config_name

Specify name of the NSSF peer configuration.

Must be a string.

Usage Guidelines Use this command to configure peer NSSF parameters.

profile network-element nssf query-params

Configures query parameters for NSSF discovery.

Command Modes Exec > Global Configuration (config) > NSSF Peer Configuration (config-nssf-peer_nssf_config_name)

Syntax Description **query-params** *query_parameters*

query-params query_parameters

Specify NRF query parameters.

Must be one of the following:

- dnn
- requester-plmn
- snssais
- supi
- tai
- target-plmn

Usage Guidelines Use this command to configure query parameters for NSSF discovery.

profile network-element pcf

Configures peer PCF parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **profile network-element pcf** *peer_pcf_config_name* **nf-client-profile** *nf_client_profile_name* **failure-handling-profile** *failure_handling_profile_name*

failure-handling-profile *failure_handling_profile_name*

Specify name of the failure handling profile.

Must be a string.

nf-client-profile *nf_client_profile_name*

Specify name of the NF client profile.

Must be a string.

peer_pcf_config_name

Specify name of the PCF peer configuration.

Must be a string.

Usage Guidelines

Use this command to configure the peer PCF parameters.

profile network-element pcf query-params

Configures query parameters for PCF discovery.

Command Modes

Exec > Global Configuration (config) > PCF Peer Configuration (config-pcf-peer_pcf_config_name)

Syntax Description

query-params *query_parameters*

query-params *query_parameters*

Specify NRF query parameters.

Must be one of the following:

- dnn
- requester-plmn
- snssais
- supi
- tai
- target-plmn

Usage Guidelines

Use this command to configure query parameters for PCF discovery.

profile network-element smf

Configures SMF peer parameters.

Command Modes

Exec > Global Configuration (config)

profile network-element smf query-params

Syntax Description **profile network-element smf peer_smf_config_name nf-client-profile nf_client_profile_name failure-handling-profile fh_profile_name**

failure-handling-profile *fh_profile_name*

Specify name of the failure handling profile.

Must be a string.

nf-client-profile *nf_client_profile_name*

Specify name of the NF client profile.

Must be a string.

peer_smf_config_name

Specify name of the SMF peer configuration.

Must be a string.

Usage Guidelines Use this command to configure SMF peer parameters.

profile network-element smf query-params

Configures query parameter for SMF discovery.

Command Modes Exec > Global Configuration (config) > SMF Peer Configuration (config-smf-peer_smf_config_name)

Syntax Description **query-params *query_parameters***

query-params *smf_query_params*

Specify the SMF query parameters.

Must be one of the following:

- dnn
- pgwfqdn
- pgwind
- requester-plmn
- snssais
- supi
- tai
- target-plmn

Usage Guidelines Use this command to configure query parameter for SMF discovery.

profile network-element udm

Configures peer UDM parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description

```
profile network-element udm peer_udm_config_name nf-client-profile
nf_client_profile_name failure-handling-profile fh_profile_name
```

failure-handling-profile *fh_profile_name*

Specify name of the failure handling profile.

Must be a string.

nf-client-profile *nf_client_profile_name*

Specify name of the NF client profile.

Must be a string.

peer_udm_config_name

Specify name of the UDM peer configuration.

Must be a string.

Usage Guidelines Use this command to configure peer UDM parameters.

profile network-element udm query-params

Configures query parameters for UDM discovery.

Command Modes Exec > Global Configuration (config) > UDM Peer Configuration (*config-udm-peer_udm_config_name*)

Syntax Description

```
query-params query_parameters
```

query-params *amf_udm_query_params*

Specify the AMF UDM query parameters.

Must be one of the following:

- **requester-plmn**
- **routing-indicator**
- **supi**
- **target-plmn**

Usage Guidelines Use this command to configure query parameters for UDM discovery.

profile nf-client nf-type amf amf-profile

profile nf-client nf-type amf amf-profile

Configures AMF profile parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **profile nf-client nf-type amf amf-profile *profile_name***

amf-profile *profile_name*

Specify the AMF profile name

Must be a string.

Usage Guidelines Use this command to configure AMF profile parameters. The CLI prompt changes to the AMF Profile Configuration mode (config-amf-profile-<*profile_name*>).

profile nf-client nf-type amf amf-profile locality

Configures the AMF profile locality parameter.

Command Modes Exec > Global Configuration (config) > AMF Profile Configuration (config-amf-profile-*profile_name*)

Syntax Description **locality *locality_name* [priority *locality_priority*]**

locality *locality_name*

Specify name of the locality.

Must be a string.

priority *locality_priority*

Specify priority of the locality configuration.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the AMF profile locality parameter.

profile nf-client nf-type amf amf-profile locality service name type

Configures the AMF service name type parameter.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*)

Syntax Description **service name type *amf_service_name_type* responsetimeout *response_timeout***

responsetimeout *response_timeout*

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type *amf_service_name_type*

Specify the service name type.

Must be one of the following:

- namf-comm
- namf-evts
- namf-loc
- namf-mt

Usage Guidelines

Use this command to configure the AMF service name type parameter. The CLI prompt changes to the Service Name Type Configuration mode (config-type-<service_name_type>).

profile nf-client nf-type amf amf-profile locality service name type endpoint-profile

Configures endpoint profile parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type)

```
profile nf-client nf-type amf amf-profile locality service name type endpoint-profile
```

Command Modes Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_*name_type*)

Command Modes Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_*name_type*)

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_*name_type*)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_*name_type*)

Syntax Description

```
endpoint-profile endpoint_profile_name { capacity capacity_value | priority profile_priority | api-uri-prefix api_uri_prefix | api-root api_root | uri-scheme uri_scheme }
```

api-root *api_root*

Specify the API root.

Must be a string.

api-uri-prefix *api_uri_prefix*

Specify the API URI prefix.

Must be a string.

capacity *capacity_value*

Specify the profile capacity.

Must be an integer in the range of 0-65535.

Default Value: 10.

endpoint-profile *endpoint_profile_name*

Specify name of the endpoint profile.

Must be a string.

priority *profile_priority*

Specify the priority of the profile.

Must be an integer in the range of 0-65535.

Default Value: 1.

uri-scheme *uri_scheme*

Specify the URI scheme.

Must be one of the following:

- **http**: HTTP.
- **https**: HTTPS.

Usage Guidelines

Use this command to configure endpoint profile parameters. The CLI prompt changes to the Endpoint Profile Configuration mode (config-endpoint-profile-<profile_name>).

profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name

Configures the endpoint name parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

```
profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions
```

Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-smf) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Syntax Description	<p>endpoint-name <i>endpoint_name</i> [priority <i>node_priority</i> capacity <i>node_capacity</i>]</p> <p>capacity node_capacity Specify the node capacity for the endpoint. Must be an integer in the range of 0-65535.</p> <p>endpoint-name endpoint_name Specify name of the endpoint. You can configure the primary, secondary, and tertiary host (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both IPv4 and IPv6 addresses. However, the SMF gives preference to the IPv4 address. Must be a string.</p> <p>priority node_priority Specify the node priority for the endpoint. Must be an integer in the range of 0-65535.</p>

Usage Guidelines	Use this configuration to configure the endpoint name parameters. The CLI prompt changes to the Endpoint Name Configuration mode (config-endpoint-name-<endpoint_name>).
-------------------------	--

profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Configures the Default Notification Subscription parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) >
----------------------	--

Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
default-notification-subscriptions name [ callback-uri callback_uri |
n1-message-class n1_message_class | n2-information-class n2_information_class |
notification-type notification_type ]
```

callback-uri *callback_uri*

Specify the callback URI.

Must be a string.

```
profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name primary ip-address
```

n1-message-class n1_message_class

Specify the N1 Message Class.

Must be one of the following:

- **5GMM**

n2-information-class n2_information_class

Specify the N2 Information Class.

Must be one of the following:

- **RAN**

notification-type notification_type

Specify the notification type.

Must be one of the following:

- **DATA_CHANGE_NOTIFICATION**
- **DATA_REMOVAL_NOTIFICATION**
- **LOCATION_NOTIFICATION**
- **N1_MESSAGES**
- **N2_INFORMATION**

name

Specify the name of the default notification subscriptions.

Must be a string.

Usage Guidelines

Use this command to configure the Default Notification Subscription parameters. The CLI prompt changes to the Default Notification Subscriptions Configuration mode (config-default-notification-subscriptions-<name>)

profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre>

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

```
profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name secondary ip-address
```

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre>
	ipv4 <i>ipv4_address</i> Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.
	ipv6 <i>ipv6_address</i> Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.
	port <i>port_number</i> Specify the port number. Must be an integer in the range of 0-65535.
Usage Guidelines	Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
----------------------	--

```
profile nf-client nf-type amf amf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address
```

Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description `{ primary | secondary | tertiary } ip-address { [ipv4 ipv4_address | ipv6 ipv6_address] [port port_number] }`

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 *ipv6_address*

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port *port_number*

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type amf amf-profile locality service name type endpoint-profile version uri-version

Configures the URI version parameter. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)

profile nf-client nf-type ausf ausf-profile

Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Syntax Description	<p>version uri-version { uri_version full-version full_version }</p> <p>full-version full_version Specify the full version in the format <i>major-version.minor-version.patch-version.[alpha-draft-number]</i> Must be a string.</p> <p>uri-version uri_version Specify the URI version. Must be a string in the pattern v\d.</p>
Usage Guidelines	Use this command to configure the URI version parameter.

profile nf-client nf-type ausf ausf-profile

Configures AUSF profile parameters.

Command Modes	Exec > Global Configuration (config)
Syntax Description	<p>profile nf-client nf-type ausf ausf-profile profile_name</p> <p>ausf-profile profile_name Specify name of the AUSF profile. Must be a string.</p>
Usage Guidelines	Use this command to configure AUSF profile parameters. The CLI prompt changes to the AUSF Profile Configuration mode (config-ausf-profile-<profile_name>).

profile nf-client nf-type ausf ausf-profile locality

Configures the AUSF profile locality parameter.

Command Modes	Exec > Global Configuration (config) > AUSF Profile Configuration (config-ausf-profile-profile_name)
Syntax Description	locality locality_name [priority locality_priority]

locality *locality_name*

Specify name of the locality.

Must be a string.

priority *locality_priority*

Specify priority of the locality configuration.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the AUSF profile locality parameter.

profile nf-client nf-type ausf ausf-profile locality service name type

Configures the AUSF service name type parameter.

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*)

Syntax Description

service name type ausf_service_name_type [responsetimeout response_timeout]

responsetimeout *response_timeout*

Specify the timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type *ausf_service_name_type*

Specify the AUSF service name type.

Must be one of the following:

- **nausf-auth**

Usage Guidelines

Use this command to configure the AUSF service name type parameter. The CLI prompt changes to the Service Name Type Configuration mode (config-type-<service_name_type>).

profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile

Configures endpoint profile parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Syntax Description	<pre>endpoint-profile endpoint_profile_name { capacity capacity_value priority profile_priority api-uri-prefix api_uri_prefix api-root api_root uri-scheme uri_scheme }</pre> <p>api-root <i>api_root</i> Specify the API root. Must be a string.</p> <p>api-uri-prefix <i>api_uri_prefix</i> Specify the API URI prefix. Must be a string.</p>

capacity capacity_value

Specify the profile capacity.

Must be an integer in the range of 0-65535.

Default Value: 10.

endpoint-profile endpoint_profile_name

Specify name of the endpoint profile.

Must be a string.

priority profile_priority

Specify the priority of the profile.

Must be an integer in the range of 0-65535.

Default Value: 1.

uri-scheme uri_scheme

Specify the URI scheme.

Must be one of the following:

- **http**: HTTP.
- **https**: HTTPS.

Usage Guidelines

Use this command to configure endpoint profile parameters. The CLI prompt changes to the Endpoint Profile Configuration mode (config-endpoint-profile-<profile_name>).

profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name

Configures the endpoint name parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name

profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name

Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-smf) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Syntax Description **endpoint-name endpoint_name [priority node_priority | capacity node_capacity]**

capacity node_capacity

Specify the node capacity for the endpoint.

Must be an integer in the range of 0-65535.

endpoint-name endpoint_name

Specify name of the endpoint. You can configure the primary, secondary, and tertiary host (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both IPv4 and IPv6 addresses. However, the SMF gives preference to the IPv4 address.

Must be a string.

priority node_priority

Specify the node priority for the endpoint.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this configuration to configure the endpoint name parameters. The CLI prompt changes to the Endpoint Name Configuration mode (config-endpoint-name-<endpoint_name>).

profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Configures the Default Notification Subscription parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

```
profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions
```

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
default-notification-subscriptions name [ callback-uri callback_uri |  
n1-message-class n1_message_class | n2-information-class n2_information_class |  
notification-type notification_type ]
```

callback-uri *callback_uri*

Specify the callback URI.

Must be a string.

n1-message-class *n1_message_class*

Specify the N1 Message Class.

Must be one of the following:

- **5GMM**

n2-information-class *n2_information_class*

Specify the N2 Information Class.

Must be one of the following:

- **RAN**

notification-type *notification_type*

Specify the notification type.

Must be one of the following:

- **DATA_CHANGE_NOTIFICATION**
- **DATA_REMOVAL_NOTIFICATION**
- **LOCATION_NOTIFICATION**
- **N1_MESSAGES**
- **N2_INFORMATION**

name

Specify the name of the default notification subscriptions.

Must be a string.

Usage Guidelines

Use this command to configure the Default Notification Subscription parameters. The CLI prompt changes to the Default Notification Subscriptions Configuration mode (config-default-notification-subscriptions-<name>)

profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

```
profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name secondary ip-address
```

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6 ipv6_address ] [ port port_number ] }
```

ipv4 *ipv4_address*

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 *ipv6_address*

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port *port_number*

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre> <p>ipv4 <i>ipv4_address</i> Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.</p> <p>ipv6 <i>ipv6_address</i> Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.</p> <p>port <i>port_number</i> Specify the port number. Must be an integer in the range of 0-65535.</p>

profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre>
ipv4 <i>ipv4_address</i>	Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.
ipv6 <i>ipv6_address</i>	Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.
port <i>port_number</i>	Specify the port number. Must be an integer in the range of 0-65535.
Usage Guidelines	Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type ausf ausf-profile locality service name type endpoint-profile version uri-version

Configures the URI version parameter. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)

```
profile nf-client nf-type chf chf-profile
```

Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Syntax Description	<p>version uri-version { uri_version full-version full_version }</p> <p>full-version full_version Specify the full version in the format <i>major-version.minor-version.patch-version.[alpha-draft-number]</i> Must be a string.</p> <p>uri-version uri_version Specify the URI version. Must be a string in the pattern v\d.</p>
Usage Guidelines	Use this command to configure the URI version parameter.

profile nf-client nf-type chf chf-profile

Configures the CHF profile parameters.

Command Modes	Exec > Global Configuration (config)
Syntax Description	<pre>profile nf-client nf-type chf chf-profile <i>profile_name</i></pre> <p>chf-profile profile_name Specify name of the CHF profile. Must be a string.</p>
Usage Guidelines	Use this command to configure the CHF profile parameters. The CLI prompt changes to the CHF Profile Configuration mode (config-chf-profile-< <i>profile_name</i> >).

profile nf-client nf-type chf chf-profile locality

Configures the CHF profile locality parameter.

Command Modes Exec > Global Configuration (config) > CHF Profile Configuration (config-chf-profile-*profile_name*)

Syntax Description **locality** *locality_name* [**priority** *locality_priority*]

locality *locality_name*

Specify name of the locality.

Must be a string.

priority *locality_priority*

Specify priority of the locality configuration.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the CHF profile locality parameter.

profile nf-client nf-type chf chf-profile locality service name type

Configures the CHF service name type parameter.

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*)

Syntax Description **service** *name* **type** *service_name_type* [**responsetimeout** *response_timeout*]

responsetimeout *response_timeout*

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type *service_name_type*

Specify the CHF service name type.

Must be one of the following:

- nchf-convergedcharging
- nchf-spendinglimitcontrol

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile

Usage Guidelines

Use this command to configure the CHF service name type parameter. The CLI prompt changes to the Service Name Type Configuration mode (config-type-<service_name_type>).

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile

Configures endpoint profile parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Syntax Description

```
endpoint-profile endpoint_profile_name { capacity capacity_value | priority profile_priority | api-uri-prefix api_uri_prefix | api-root api_root | uri-scheme uri_scheme }
```

api-root *api_root*

Specify the API root.

Must be a string.

api-uri-prefix *api_uri_prefix*

Specify the API URI prefix.

Must be a string.

capacity *capacity_value*

Specify the profile capacity.

Must be an integer in the range of 0-65535.

Default Value: 10.

endpoint-profile *endpoint_profile_name*

Specify name of the endpoint profile.

Must be a string.

priority *profile_priority*

Specify the priority of the profile.

Must be an integer in the range of 0-65535.

Default Value: 1.

uri-scheme *uri_scheme*

Specify the URI scheme.

Must be one of the following:

- **http**: HTTP.
- **https**: HTTPS.

Usage Guidelines

Use this command to configure endpoint profile parameters. The CLI prompt changes to the Endpoint Profile Configuration mode (config-endpoint-profile-<profile_name>).

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name

Configures the endpoint name parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) >

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name

Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-smf) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Syntax Description **endpoint-name endpoint_name [priority node_priority | capacity node_capacity]**

capacity node_capacity

Specify the node capacity for the endpoint.

Must be an integer in the range of 0-65535.

endpoint-name *endpoint_name*

Specify name of the endpoint. You can configure the primary, secondary, and tertiary host (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both IPv4 and IPv6 addresses. However, the SMF gives preference to the IPv4 address.

Must be a string.

priority *node_priority*

Specify the node priority for the endpoint.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this configuration to configure the endpoint name parameters. The CLI prompt changes to the Endpoint Name Configuration mode (config-endpoint-name-<endpoint_name>).

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Configures the Default Notification Subscription parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>default-notification-subscriptions <i>name</i> [callback-uri <i>callback_uri</i> n1-message-class <i>n1_message_class</i> n2-information-class <i>n2_information_class</i> notification-type <i>notification_type</i>]</pre> <p>callback-uri <i>callback_uri</i> Specify the callback URI. Must be a string.</p> <p>n1-message-class <i>n1_message_class</i> Specify the N1 Message Class. Must be one of the following:</p> <ul style="list-style-type: none"> • 5GMM <p>n2-information-class <i>n2_information_class</i> Specify the N2 Information Class. Must be one of the following:</p> <ul style="list-style-type: none"> • RAN <p>notification-type <i>notification_type</i> Specify the notification type. Must be one of the following:</p> <ul style="list-style-type: none"> • DATA_CHANGE_NOTIFICATION • DATA_REMOVAL_NOTIFICATION

- LOCATION_NOTIFICATION
- N1_MESSAGES
- N2_INFORMATION

name

Specify the name of the default notification subscriptions.

Must be a string.

Usage Guidelines

Use this command to configure the Default Notification Subscription parameters. The CLI prompt changes to the Default Notification Subscriptions Configuration mode (config-default-notification-subscriptions-<name>)

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

```
profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name secondary ip-address
```

Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre> <p>ipv4 ipv4_address Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.</p> <p>ipv6 ipv6_address Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.</p> <p>port port_number Specify the port number. Must be an integer in the range of 0-65535.</p>
Usage Guidelines	Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
----------------------	---

Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)

Syntax Description { **primary** | **secondary** | **tertiary** } **ip-address** { [**ipv4** *ipv4_address* | **ipv6** *ipv6_address*] [**port** *port_number*] }

ipv4 *ipv4_address*

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

ipv6 *ipv6_address*

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port *port_number*

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre>
	ipv4 <i>ipv4_address</i> Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.
	ipv6 <i>ipv6_address</i> Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.
	port <i>port_number</i> Specify the port number. Must be an integer in the range of 0-65535.
Usage Guidelines	Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type chf chf-profile locality service name type endpoint-profile version uri-version

Configures the URI version parameter. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
----------------------	---

```
profile nf-client nf-type eir eir-profile
```

Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Syntax Description	<pre>version uri-version { uri_version full-version full_version }</pre> <p>full-version <i>full_version</i> Specify the full version in the format <i>major-version.minor-version.patch-version.[alpha-draft-number]</i> Must be a string.</p> <p>uri-version <i>uri_version</i> Specify the URI version. Must be a string in the pattern v\d.</p>
Usage Guidelines	Use this command to configure the URI version parameter.

profile nf-client nf-type eir eir-profile

Configures EIR profile parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **profile nf-client nf-type eir eir-profile eir_profile_name**

eir-profile eir_profile_name

Specify name of the EIR profile.

Must be a string.

Usage Guidelines Use this command to configure the EIR profile parameters. The CLI prompt changes to the EIR Profile Configuration mode (config-eir-profile-<profile_name>).

profile nf-client nf-type eir eir-profile locality

Configures the EIR profile locality parameter.

Command Modes Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*)

Syntax Description **locality locality_name [priority priority]**

locality locality_name

Specify name of the locality.

Must be a string.

priority priority

Specify the priority of the locality configuration.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the EIR profile locality parameter.

profile nf-client nf-type eir eir-profile locality service name type

Configures the EIR service name type parameter.

Command Modes Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*)

Syntax Description **service name type service_name_type [responsetimeout response_timeout_response_timeout_interval]**

responsetimeout response_timeout_response_timeout_interval

Specify the response timeout interval in milliseconds.

profile nf-client nf-type eir eir-profile locality service name type endpoint-profile

Must be an integer.

Default Value: 2000.

type *service_name_type*

Specify the EIR service name type.

Must be one of the following:

- n5g-eir-eic

Usage Guidelines

Use this command to configure the EIR service name type parameter. The CLI prompt changes to the Service Name Type Configuration mode (config-type-<service_name_type>).

profile nf-client nf-type eir eir-profile locality service name type endpoint-profile

Configures endpoint profile parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Syntax Description	<pre>endpoint-profile <i>endpoint_profile_name</i> { capacity <i>capacity_value</i> priority <i>profile_priority</i> api-uri-prefix <i>api_uri_prefix</i> api-root <i>api_root</i> uri-scheme <i>uri_scheme</i> }</pre> <p>api-root <i>api_root</i> Specify the API root. Must be a string.</p> <p>api-uri-prefix <i>api_uri_prefix</i> Specify the API URI prefix. Must be a string.</p> <p>capacity <i>capacity_value</i> Specify the profile capacity. Must be an integer in the range of 0-65535. Default Value: 10.</p> <p>endpoint-profile <i>endpoint_profile_name</i> Specify name of the endpoint profile. Must be a string.</p> <p>priority <i>profile_priority</i> Specify the priority of the profile. Must be an integer in the range of 0-65535. Default Value: 1.</p> <p>uri-scheme <i>uri_scheme</i> Specify the URI scheme. Must be one of the following: <ul style="list-style-type: none"> • http: HTTP. • https: HTTPS. </p>

```
profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name
```

Usage Guidelines

Use this command to configure endpoint profile parameters. The CLI prompt changes to the Endpoint Profile Configuration mode (config-endpoint-profile-<profile_name>).

profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name

Configures the endpoint name parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-smf) > UDM Profile Configuration (config-udm-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Syntax Description **endpoint-name** *endpoint_name* [**priority** *node_priority* | **capacity** *node_capacity*]

capacity *node_capacity*

Specify the node capacity for the endpoint.

Must be an integer in the range of 0-65535.

endpoint-name *endpoint_name*

Specify name of the endpoint. You can configure the primary, secondary, and tertiary host (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both IPv4 and IPv6 addresses. However, the SMF gives preference to the IPv4 address.

Must be a string.

priority *node_priority*

Specify the node priority for the endpoint.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this configuration to configure the endpoint name parameters. The CLI prompt changes to the Endpoint Name Configuration mode (config-endpoint-name-<*endpoint_name*>).

profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Configures the Default Notification Subscription parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name

profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description `default-notification-subscriptions name [callback-uri callback_uri | n1-message-class n1_message_class | n2-information-class n2_information_class | notification-type notification_type]`

callback-uri *callback_uri*

Specify the callback URI.

Must be a string.

n1-message-class *n1_message_class*

Specify the N1 Message Class.

Must be one of the following:

- 5GMM

n2-information-class *n2_information_class*

Specify the N2 Information Class.

Must be one of the following:

- RAN

notification-type *notification_type*

Specify the notification type.

Must be one of the following:

- DATA_CHANGE_NOTIFICATION
- DATA_REMOVAL_NOTIFICATION
- LOCATION_NOTIFICATION
- N1_MESSAGES
- N2_INFORMATION

name

Specify the name of the default notification subscriptions.

Must be a string.

Usage Guidelines

Use this command to configure the Default Notification Subscription parameters. The CLI prompt changes to the Default Notification Subscriptions Configuration mode (config-default-notification-subscriptions-<name>)

profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

```
profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name primary ip-address
```

Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 <i>ipv4_address</i> ipv6 <i>ipv6_address</i>] [port <i>port_number</i>] }</pre> <p>ipv4 <i>ipv4_address</i> Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.</p> <p>ipv6 <i>ipv6_address</i> Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.</p> <p>port <i>port_number</i> Specify the port number. Must be an integer in the range of 0-65535.</p>

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

```
profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name tertiary ip-address
```

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6 ipv6_address ] [ port port_number ] }
```

ipv4 *ipv4_address*

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 *ipv6_address*

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port *port_number*

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type eir eir-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre> <p>ipv4 <i>ipv4_address</i> Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.</p> <p>ipv6 <i>ipv6_address</i> Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.</p> <p>port <i>port_number</i> Specify the port number. Must be an integer in the range of 0-65535.</p>

```
profile nf-client nf-type eir eir-profile locality service name type endpoint-profile version uri-version
```

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type eir eir-profile locality service name type endpoint-profile version uri-version

Configures the URI version parameter. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Syntax Description `version uri-version { uri_version | full-version full_version }`

full-version *full_version*

Specify the full version in the format *major-version.minor-version.patch-version.[alpha-draft-number]*

Must be a string.

uri-version *uri_version*

Specify the URI version.

Must be a string in the pattern v\d.

Usage Guidelines

Use this command to configure the URI version parameter.

profile nf-client nf-type group nrf auth service type nrf oauth2

Configures the AMF ID (**service type nrf oauth2** in the **group nrf auth**) to enable an NRF endpoint, to which the AMF will send the `AccessToken` request to the NRF server, when the **nf-client** is configured.

Command Modes

Exec > Global Configuration (config) > AMF Configuration (config-amf amf_name) > NF Profile Name Configuration (config-nf-profile-nf *nf_profile_name*) > NF Profile Type Configuration (config-nf-type-profile *profile_type_name*) > group nrf auth > service type nrf oauth2

Syntax Description

```
group nrf auth nrf_group_name
    service type nrf oauth2
        endpoint-profile endpoint_profile_details
        capacity capacity_number
        uri-scheme http
        endpoint-name endpoint_name
        priority priority_number
        primary ip-address ipv4 ipv4_address
        primary ip-address port port_address
```

group nrf auth *nrf_group_name*

Specify the NRF group name to authenticate. Must be a string.

service type nrf oauth2

Specify the service and the type of NRF, which must be authenticated to enable the OAuth2 profile configuration.

endpoint-profile *endpoint_profile_details*

Specify the endpoint profile details.

capacity *capacity_number*

Specify the capacity requirement in number.

uri-scheme http

Specify the URI scheme.

profile nf-client nf-type nssf nssf-profile

endpoint-name *endpoint_name*

Specify the endpoint name.

priority *priority_number*

Specify the priority request. Must be in numbers.

primary ip-address ipv4 *ipv4_address*

Specify the primary IPv4 address.

primary ip-address port *port_address*

Specify the primary port address.

Usage Guidelines

Use this command, when the **service type nrf oauth2** in the **group nrf auth** feature is configured, when the AMF sends the `AccessToken` request to the NRF server, when the `nf-client` is configured.

profile nf-client nf-type nssf nssf-profile

Configures NSSF profile parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

profile nf-client nf-type nssf nssf-profile *nssf_profile_name*

nssf-profile *nssf_profile_name*

Specify name of the NSSF profile.

Must be a string.

Usage Guidelines

Use this command to configure the NSSF profile parameters. The CLI prompt changes to the NSSF Profile Configuration mode (`config-nssf-profile-<profile_name>`).

profile nf-client nf-type nssf nssf-profile locality

Configures locality parameter.

Command Modes

Exec > Global Configuration (config) > NSSF Profile Configuration (`config-nssf-profile-profile_name`)

Syntax Description

locality *locality_name* [priority *locality_config_priority*]

locality *locality_name*

Specify name of the locality.

Must be a string.

priority *locality_config_priority*

Specify the priority of the locality configuration.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the NSSF Profile Locality parameter.

profile nf-client nf-type nssf nssf-profile locality service name type

Configures the NSSF service name type parameter.

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*)

Syntax Description

```
service name type service_name_type [ responsetimeout response_timeout_interval ]
```

responsetimeout *response_timeout_interval*

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type *service_name_type*

Specify the NSSF service name type.

Must be one of the following:

- **nssf-nsselection**

Usage Guidelines

Use this command to configure the NSSF service name type parameter. The CLI prompt changes to the Service Name Type Configuration mode (config-type-<service_name_type>).

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile

Configures endpoint profile parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-*service_name_type*)

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile

Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Syntax Description	<p>endpoint-profile <i>endpoint_profile_name</i> { capacity <i>capacity_value</i> priority <i>profile_priority</i> api-uri-prefix <i>api_uri_prefix</i> api-root <i>api_root</i> uri-scheme <i>uri_scheme</i> }</p> <p>api-root <i>api_root</i></p> <p>Specify the API root.</p> <p>Must be a string.</p> <p>api-uri-prefix <i>api_uri_prefix</i></p> <p>Specify the API URI prefix.</p> <p>Must be a string.</p> <p>capacity <i>capacity_value</i></p> <p>Specify the profile capacity.</p> <p>Must be an integer in the range of 0-65535.</p>

Default Value: 10.

endpoint-profile *endpoint_profile_name*

Specify name of the endpoint profile.

Must be a string.

priority *profile_priority*

Specify the priority of the profile.

Must be an integer in the range of 0-65535.

Default Value: 1.

uri-scheme *uri_scheme*

Specify the URI scheme.

Must be one of the following:

- **http**: HTTP.
- **https**: HTTPS.

Usage Guidelines

Use this command to configure endpoint profile parameters. The CLI prompt changes to the Endpoint Profile Configuration mode (config-endpoint-profile-<profile_name>).

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name

Configures the endpoint name parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name

Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-smf) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Syntax Description	<p>endpoint-name endpoint_name [priority node_priority capacity node_capacity]</p> <p>capacity node_capacity Specify the node capacity for the endpoint. Must be an integer in the range of 0-65535.</p> <p>endpoint-name endpoint_name Specify name of the endpoint. You can configure the primary, secondary, and tertiary host (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both IPv4 and IPv6 addresses. However, the SMF gives preference to the IPv4 address. Must be a string.</p> <p>priority node_priority Specify the node priority for the endpoint. Must be an integer in the range of 0-65535.</p>
Usage Guidelines	Use this configuration to configure the endpoint name parameters. The CLI prompt changes to the Endpoint Name Configuration mode (config-endpoint-name-<endpoint_name>).

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Configures the Default Notification Subscription parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Command Modes

Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Syntax Description

```
default-notification-subscriptions name [ callback-uri callback_uri | n1-message-class n1_message_class | n2-information-class n2_information_class | notification-type notification_type ]
```

callback-uri *callback_uri*

Specify the callback URI.

Must be a string.

n1-message-class *n1_message_class*

Specify the N1 Message Class.

Must be one of the following:

- **5GMM**

n2-information-class *n2_information_class*

Specify the N2 Information Class.

Must be one of the following:

- **RAN**

notification-type *notification_type*

Specify the notification type.

Must be one of the following:

- **DATA_CHANGE_NOTIFICATION**
- **DATA_REMOVAL_NOTIFICATION**
- **LOCATION_NOTIFICATION**
- **N1_MESSAGES**
- **N2_INFORMATION**

name

Specify the name of the default notification subscriptions.

Must be a string.

Usage Guidelines

Use this command to configure the Default Notification Subscription parameters. The CLI prompt changes to the Default Notification Subscriptions Configuration mode (config-default-notification-subscriptions-<name>)

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>)

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name secondary ip-address

> Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description { **primary** | **secondary** | **tertiary** } **ip-address** { [**ipv4** **ipv4_address** | **ipv6** **ipv6_address**] [**port** **port_number**] }

ipv4 **ipv4_address**

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 **ipv6_address**

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port **port_number**

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name

Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6
ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

```
profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address
```

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name)

> Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6
ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type nssf nssf-profile locality service name type endpoint-profile version uri-version

Configures the URI version parameter. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

profile nf-client nf-type oauthenabled

Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Syntax Description	<p>version uri-version { uri_version full-version full_version }</p> <p>full-version full_version Specify the full version in the format <i>major-version.minor-version.patch-version.[alpha-draft-number]</i> Must be a string.</p> <p>uri-version uri_version Specify the URI version. Must be a string in the pattern v\d.</p>
Usage Guidelines	Use this command to configure the URI version parameter.

profile nf-client nf-type oauthenabled

Configures the AMF ID (**oauthenabled**) to enable the `Nnrf_AccessToken` request to the NRF server, when the `nf-client` is configured.

Command Modes	Exec > Global Configuration (config) > AMF Configuration (config-amf amf_name) > NF Profile Name Configuration (config-nf-profile-nf_nf_profile_name) > NF Profile Type Configuration (config-nf-type-profile profile_type_name) > oauthenabled enabled
Syntax Description	<pre>oauthenabled { true false } nf-type-profile nf_type_profile_name locality locality_name priority priority_number service name type service_name type_npcf_am_policy_control</pre>

```
endpoint-profile endpoint_profile_details
capacity capacity_number
uri-scheme http
endpoint-name endpoint_name
priority priority_number
primary ip-address ipv4 ipv4_address
primary ip-address port port_address
```

oautheenabled

Enable the OAuth2 client authorization to register the AMF with NRF. The default value is false.

nf-type-profile *nf_type_profile_name*

Specify the NF profile name.

locality *locality_name*

Specify the locality.

priority *priority_number*

Specify the priority request. Must be in numbers.

service name type *service_name_type_npcf_am_policy_control*

Specify the service name and the type.

endpoint-profile *endpoint_profile_details*

Specify the endpoint profile details.

capacity *capacity_number*

Specify the capacity requirement in number.

uri-scheme http

Specify the URI scheme.

endpoint-name *endpoint_name*

Specify the endpoint name.

primary ip-address ipv4 *ipv4_address*

Specify the primary IPv4 address.

primary ip-address port *port_address*

Specify the primary port address.

profile nf-client nf-type pcf pcf-profile

Usage Guidelines	Use this command, when the oauthenabled feature is configured, when the AMF sends the <code>Nnrf_AccessToken</code> request to the NRF server, when the <code>nf-client</code> is configured.
-------------------------	--

profile nf-client nf-type pcf pcf-profile

Configures PCF profile parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	profile nf-client nf-type pcf pcf-profile <i>profile_name</i>
---------------------------	--

pcf-profile *profile_name*

Specify name of the PCF profile.

Must be a string.

Usage Guidelines	Use this command to configure the PCF profile parameters. The CLI prompt changes to the PCF Profile Configuration mode (<code>config-pcf-profile-<profile_name></code>).
-------------------------	--

profile nf-client nf-type pcf pcf-profile locality

Configures the PCF profile locality parameter.

Command Modes	Exec > Global Configuration (config) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>)
----------------------	---

Syntax Description	locality <i>locality_name</i> [priority <i>locality_priority</i>]
---------------------------	---

locality *locality_name*

Specify name of the locality.

Must be a string.

priority *locality_priority*

Specify priority of the locality configuration.

Must be an integer in the range of 0-65535.

Usage Guidelines	Use this command to configure the PCF profile locality parameter.
-------------------------	---

profile nf-client nf-type pcf pcf-profile locality service name type

Configures the PCF service name type parameter.

Command Modes Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*)

Syntax Description **service name type** *service_name_type* [**responsetimeout** *response_timeout*]

responsetimeout response_timeout

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type service_name_type

Specify the PCF service name parameters.

Must be one of the following:

- **npcf-am-policy-control**
- **npcf-bdtpolicycontrol**
- **npcf-eventexposure**
- **npcf-policyauthorization**
- **npcf-smpolicycontrol**
- **npcf-ue-policy-control**

Usage Guidelines Use this command to configure the PCF service name type parameter. The CLI prompt changes to the Service Name Type Configuration mode (config-type-<*service_name_type*>).

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile

Configures endpoint profile parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-*service_name_type*)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-*service_name_type*)

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-*service_name_type*)

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile

Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Syntax Description	<p>endpoint-profile <i>endpoint_profile_name</i> { capacity <i>capacity_value</i> priority <i>profile_priority</i> api-uri-prefix <i>api_uri_prefix</i> api-root <i>api_root</i> uri-scheme <i>uri_scheme</i> }</p> <p>api-root <i>api_root</i> Specify the API root. Must be a string.</p> <p>api-uri-prefix <i>api_uri_prefix</i> Specify the API URI prefix. Must be a string.</p> <p>capacity <i>capacity_value</i> Specify the profile capacity. Must be an integer in the range of 0-65535. Default Value: 10.</p> <p>endpoint-profile <i>endpoint_profile_name</i> Specify name of the endpoint profile. Must be a string.</p>

priority *profile_priority*

Specify the priority of the profile.

Must be an integer in the range of 0-65535.

Default Value: 1.

uri-scheme *uri_scheme*

Specify the URI scheme.

Must be one of the following:

- **http**: HTTP.
- **https**: HTTPS.

Usage Guidelines

Use this command to configure endpoint profile parameters. The CLI prompt changes to the Endpoint Profile Configuration mode (config-endpoint-profile-<profile_name>).

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name

Configures the endpoint name parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name

Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-smf) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Syntax Description	<p>endpoint-name <i>endpoint_name</i> [priority <i>node_priority</i> capacity <i>node_capacity</i>]</p> <p>capacity node_capacity Specify the node capacity for the endpoint. Must be an integer in the range of 0-65535.</p> <p>endpoint-name endpoint_name Specify name of the endpoint. You can configure the primary, secondary, and tertiary host (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both IPv4 and IPv6 addresses. However, the SMF gives preference to the IPv4 address. Must be a string.</p> <p>priority node_priority Specify the node priority for the endpoint. Must be an integer in the range of 0-65535.</p>
Usage Guidelines	Use this configuration to configure the endpoint name parameters. The CLI prompt changes to the Endpoint Name Configuration mode (config-endpoint-name-<endpoint_name>).

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Configures the Default Notification Subscription parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Command Modes

Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Syntax Description

```
default-notification-subscriptions name [ callback-uri callback_uri | n1-message-class n1_message_class | n2-information-class n2_information_class | notification-type notification_type ]
```

callback-uri *callback_uri*

Specify the callback URI.

Must be a string.

n1-message-class *n1_message_class*

Specify the N1 Message Class.

Must be one of the following:

- **5GMM**

n2-information-class *n2_information_class*

Specify the N2 Information Class.

Must be one of the following:

- **RAN**

notification-type *notification_type*

Specify the notification type.

Must be one of the following:

- **DATA_CHANGE_NOTIFICATION**
- **DATA_REMOVAL_NOTIFICATION**
- **LOCATION_NOTIFICATION**
- **N1_MESSAGES**
- **N2_INFORMATION**

name

Specify the name of the default notification subscriptions.

Must be a string.

Usage Guidelines

Use this command to configure the Default Notification Subscription parameters. The CLI prompt changes to the Default Notification Subscriptions Configuration mode (config-default-notification-subscriptions-<name>)

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>)

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name secondary ip-address

> Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description { **primary** | **secondary** | **tertiary** } **ip-address** { [**ipv4** **ipv4_address** | **ipv6** **ipv6_address**] [**port** **port_number**] }

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name

Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6
ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

```
profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address
```

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name)

> Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6
ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type pcf pcf-profile locality service name type endpoint-profile version uri-version

Configures the URI version parameter. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

```
profile nf-client nf-type sepp sepp-profile
```

Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Syntax Description	<p>version uri-version { uri_version full-version full_version }</p> <p>full-version full_version Specify the full version in the format <i>major-version.minor-version.patch-version.[alpha-draft-number]</i> Must be a string.</p> <p>uri-version uri_version Specify the URI version. Must be a string in the pattern v\d.</p>
Usage Guidelines	Use this command to configure the URI version parameter.

profile nf-client nf-type sepp sepp-profile

Configures SEPP profile parameters.

Command Modes	Exec > Global Configuration (config)
Syntax Description	<pre>profile nf-client nf-type sepp sepp-profile <i>sepp_profile_name</i></pre> <p>sepp-profile sepp_profile_name Specify name of the SEPP profile. Must be a string.</p>
Usage Guidelines	Use this command to configure the SEPP profile parameters. The CLI prompt changes to the SEPP Profile Configuration mode (config-sepp-profile-<profile_name>).

profile nf-client nf-type spp spp-profile locality

Configures the SEPP profile locality parameter.

Command Modes Exec > Global Configuration (config) > SEPP Profile Configuration (config-sepp-profile-*profile_name*)

Syntax Description **locality** *locality_name* [**priority** *priority*]

locality *locality_name*

Specify name of the locality.

Must be a string.

priority *priority*

Specify the priority of the locality configuration.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the SEPP profile locality parameter.

profile nf-client nf-type spp spp-profile locality service name type

Configures the SEPP service name type parameter.

Command Modes Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*)

Syntax Description **service** *name* **type** *service_name_type* [**responsetimeout** *response_timeout_interval*]

responsetimeout *response_timeout_interval*

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type *service_name_type*

Specify the SEPP service name type.

Must be one of the following:

- nsmf-pdusession

Usage Guidelines Use this command to configure the SEPP service name type parameter. The CLI prompt changes to the Service Name Type Configuration mode (config-type-<*service_name_type*>).

profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile

profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile

Configures endpoint profile parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Syntax Description `endpoint-profile endpoint_profile_name { capacity capacity_value | priority profile_priority | api-uri-prefix api_uri_prefix | api-root api_root | uri-scheme uri_scheme }`

api-root *api_root*

Specify the API root.

Must be a string.

api-uri-prefix *api_uri_prefix*

Specify the API URI prefix.

Must be a string.

capacity *capacity_value*

Specify the profile capacity.

Must be an integer in the range of 0-65535.

Default Value: 10.

endpoint-profile *endpoint_profile_name*

Specify name of the endpoint profile.

Must be a string.

priority *profile_priority*

Specify the priority of the profile.

Must be an integer in the range of 0-65535.

Default Value: 1.

uri-scheme *uri_scheme*

Specify the URI scheme.

Must be one of the following:

- **http**: HTTP.
- **https**: HTTPS.

Usage Guidelines

Use this command to configure endpoint profile parameters. The CLI prompt changes to the Endpoint Profile Configuration mode (config-endpoint-profile-<profile_name>).

profile nf-client nf-type spp spp-profile locality service name type endpoint-profile endpoint-name

Configures the endpoint name parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile endpoint-name

Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-smf) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Syntax Description **endpoint-name** *endpoint_name* [**priority** *node_priority* | **capacity** *node_capacity*]

capacity node_capacity

Specify the node capacity for the endpoint.

Must be an integer in the range of 0-65535.

endpoint-name *endpoint_name*

Specify name of the endpoint. You can configure the primary, secondary, and tertiary host (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both IPv4 and IPv6 addresses. However, the SMF gives preference to the IPv4 address.

Must be a string.

priority *node_priority*

Specify the node priority for the endpoint.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this configuration to configure the endpoint name parameters. The CLI prompt changes to the Endpoint Name Configuration mode (config-endpoint-name-<endpoint_name>).

profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Configures the Default Notification Subscription parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

```
profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions
```

Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>default-notification-subscriptions <i>name</i> [callback-uri <i>callback_uri</i> n1-message-class <i>n1_message_class</i> n2-information-class <i>n2_information_class</i> notification-type <i>notification_type</i>]</pre> <p>callback-uri <i>callback_uri</i> Specify the callback URI. Must be a string.</p> <p>n1-message-class <i>n1_message_class</i> Specify the N1 Message Class. Must be one of the following:</p> <ul style="list-style-type: none"> • 5GMM <p>n2-information-class <i>n2_information_class</i> Specify the N2 Information Class. Must be one of the following:</p> <ul style="list-style-type: none"> • RAN <p>notification-type <i>notification_type</i> Specify the notification type. Must be one of the following:</p> <ul style="list-style-type: none"> • DATA_CHANGE_NOTIFICATION • DATA_REMOVAL_NOTIFICATION

- LOCATION_NOTIFICATION
- N1_MESSAGES
- N2_INFORMATION

name

Specify the name of the default notification subscriptions.

Must be a string.

Usage Guidelines

Use this command to configure the Default Notification Subscription parameters. The CLI prompt changes to the Default Notification Subscriptions Configuration mode (config-default-notification-subscriptions-<name>)

profile nf-client nf-type spp spp-profile locality service name type endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

```
profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile endpoint-name secondary ip-address
```

Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre> <p>ipv4 <i>ipv4_address</i> Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.</p> <p>ipv6 <i>ipv6_address</i> Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.</p> <p>port <i>port_number</i> Specify the port number. Must be an integer in the range of 0-65535.</p>
Usage Guidelines	Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
----------------------	---

Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre>

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

profile nf-client nf-type spp spp-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

ipv6 *ipv6_address*

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port *port_number*

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type spp spp-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre>
	ipv4 <i>ipv4_address</i> Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.
	ipv6 <i>ipv6_address</i> Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.
	port <i>port_number</i> Specify the port number. Must be an integer in the range of 0-65535.
Usage Guidelines	Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type sepp sepp-profile locality service name type endpoint-profile version uri-version

Configures the URI version parameter. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
----------------------	---

profile nf-client nf-type smf smf-profile

Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Syntax Description	<pre>version uri-version { uri_version full-version full_version }</pre> <p>full-version full_version Specify the full version in the format <i>major-version.minor-version.patch-version.[alpha-draft-number]</i> Must be a string.</p> <p>uri-version uri_version Specify the URI version. Must be a string in the pattern v\d.</p>
Usage Guidelines	Use this command to configure the URI version parameter.

profile nf-client nf-type smf smf-profile

Configures SMF profile parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **profile nf-client nf-type smf smf-profile** *smf_profile_name*

smf-profile *smf_profile_name*

Specify name of the SMF profile.

Must be a string.

Usage Guidelines Use this command to configure the SMF profile parameters. The CLI prompt changes to the SMF Profile Configuration mode (config-smf-profile-<profile_name>).

profile nf-client nf-type smf smf-profile locality

Configures the SMF profile locality parameter.

Command Modes Exec > Global Configuration (config) > SMF Profile Configuration (config-smf-profile-*profile_name*)

Syntax Description **locality** *locality_name* [**priority** *priority*]

locality *locality_name*

Specify name of the locality.

Must be a string.

priority *priority*

Specify the priority of the locality configuration.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the SMF profile locality parameter.

profile nf-client nf-type smf smf-profile locality service name type

Configures the SMF service name type parameter.

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*)

Syntax Description **service name type** *smf_service_name_type* [**responsetimeout** *response_timeout*]

responsetimeout *response_timeout*

Specify the timeout interval in milliseconds.

Must be an integer.

profile nf-client nf-type smf smf-profile locality service name type endpoint-profile

Default Value: 2000.

type *smf_service_name_type*

Specify the service name type.

Must be one of the following:

- **nsmf-pdusession**

Usage Guidelines

Use this command to configure the SMF service name type parameter. The CLI prompt changes to the Service Name Type Configuration mode (config-type-<service_name_type>).

profile nf-client nf-type smf smf-profile locality service name type endpoint-profile

Configures endpoint profile parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type)

Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Syntax Description	<pre>endpoint-profile <i>endpoint_profile_name</i> { capacity <i>capacity_value</i> priority <i>profile_priority</i> api-uri-prefix <i>api_uri_prefix</i> api-root <i>api_root</i> uri-scheme <i>uri_scheme</i> }</pre> <p>api-root <i>api_root</i> Specify the API root. Must be a string.</p> <p>api-uri-prefix <i>api_uri_prefix</i> Specify the API URI prefix. Must be a string.</p> <p>capacity <i>capacity_value</i> Specify the profile capacity. Must be an integer in the range of 0-65535. Default Value: 10.</p> <p>endpoint-profile <i>endpoint_profile_name</i> Specify name of the endpoint profile. Must be a string.</p> <p>priority <i>profile_priority</i> Specify the priority of the profile. Must be an integer in the range of 0-65535. Default Value: 1.</p> <p>uri-scheme <i>uri_scheme</i> Specify the URI scheme. Must be one of the following: <ul style="list-style-type: none"> • http: HTTP. • https: HTTPS. </p>

```
profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name
```

Usage Guidelines

Use this command to configure endpoint profile parameters. The CLI prompt changes to the Endpoint Profile Configuration mode (config-endpoint-profile-<profile_name>).

profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name

Configures the endpoint name parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-smf) > UDM Profile Configuration (config-udm-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Syntax Description **endpoint-name** *endpoint_name* [**priority** *node_priority* | **capacity** *node_capacity*]

capacity *node_capacity*

Specify the node capacity for the endpoint.

Must be an integer in the range of 0-65535.

endpoint-name *endpoint_name*

Specify name of the endpoint. You can configure the primary, secondary, and tertiary host (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both IPv4 and IPv6 addresses. However, the SMF gives preference to the IPv4 address.

Must be a string.

priority *node_priority*

Specify the node priority for the endpoint.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this configuration to configure the endpoint name parameters. The CLI prompt changes to the Endpoint Name Configuration mode (config-endpoint-name-<*endpoint_name*>).

profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Configures the Default Notification Subscription parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name

profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description **default-notification-subscriptions** *name* [**callback-uri** *callback_uri* | **n1-message-class** *n1_message_class* | **n2-information-class** *n2_information_class* | **notification-type** *notification_type*]

callback-uri *callback_uri*

Specify the callback URI.

Must be a string.

n1-message-class *n1_message_class*

Specify the N1 Message Class.

Must be one of the following:

- 5GMM

n2-information-class *n2_information_class*

Specify the N2 Information Class.

Must be one of the following:

- RAN

notification-type *notification_type*

Specify the notification type.

Must be one of the following:

- DATA_CHANGE_NOTIFICATION
- DATA_REMOVAL_NOTIFICATION
- LOCATION_NOTIFICATION
- N1_MESSAGES
- N2_INFORMATION

name

Specify the name of the default notification subscriptions.

Must be a string.

Usage Guidelines

Use this command to configure the Default Notification Subscription parameters. The CLI prompt changes to the Default Notification Subscriptions Configuration mode (config-default-notification-subscriptions-<name>)

profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name</i>_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name</i>_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name</i>_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

```
profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name primary ip-address
```

Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 <i>ipv4_address</i> ipv6 <i>ipv6_address</i>] [port <i>port_number</i>] }</pre> <p>ipv4 <i>ipv4_address</i> Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.</p> <p>ipv6 <i>ipv6_address</i> Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.</p> <p>port <i>port_number</i> Specify the port number. Must be an integer in the range of 0-65535.</p>

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

```
profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address
```

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6 ipv6_address ] [ port port_number ] }
```

ipv4 *ipv4_address*

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 *ipv6_address*

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port *port_number*

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type smf smf-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service-*name_type*) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*) > Endpoint Name Configuration (config-endpoint-name-*endpoint_name*)

Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>{ primary secondary tertiary } ip-address { [ipv4 ipv4_address ipv6 ipv6_address] [port port_number] }</pre> <p>ipv4 <i>ipv4_address</i> Specify the IPv4 address. Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.</p> <p>ipv6 <i>ipv6_address</i> Specify the IPv6 address. Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.</p> <p>port <i>port_number</i> Specify the port number. Must be an integer in the range of 0-65535.</p>

```
profile nf-client nf-type smf smf-profile locality service name type endpoint-profile version uri-version
```

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type smf smf-profile locality service name type endpoint-profile version uri-version

Configures the URI version parameter. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Syntax Description `version uri-version { uri_version | full-version full_version }`

full-version *full_version*

Specify the full version in the format *major-version.minor-version.patch-version.[alpha-draft-number]*

Must be a string.

uri-version *uri_version*

Specify the URI version.

Must be a string in the pattern v\d.

Usage Guidelines

Use this command to configure the URI version parameter.

profile nf-client nf-type udm udm-profile

Configures UDM profile parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

profile nf-client nf-type udm udm-profile *udm_profile_name*

udm-profile *udm_profile_name*

Specify name of the UDM profile.

Must be a string.

Usage Guidelines

Use this command to configure the UDM profile parameters. The CLI prompt changes to the UDM Profile Configuration mode (config-udm-profile-<profile_name>).

profile nf-client nf-type udm udm-profile locality

Configures the UDM profile locality parameters.

Command Modes

Exec > Global Configuration (config) > UDM Profile Configuration (config-udm-profile-*profile_name*)

Syntax Description

locality *locality_name* [priority *priority*]

locality *locality_name*

Specify name of the locality.

Must be a string.

priority *priority*

This keyword sets the priority for the locality configuration.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the UDM profile locality parameter.

profile nf-client nf-type udm udm-profile locality service name type

profile nf-client nf-type udm udm-profile locality service name type

Configures the UDM service name type parameter.

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*)

Syntax Description **service name type** *service_name_type* [**responsetimeout response_timeout**]

responsetimeout *response_timeout*

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type *service_name_type*

Specify the UDM service name type.

Must be one of the following:

- nudm-ee
- nudm-pp
- nudm-sdm
- nudm-ueau
- nudm-uecm

Usage Guidelines Use this command to configure the UDM service name type parameter. The CLI prompt changes to the Service Name Type Configuration mode (config-type-<*service_name_type*>).

profile nf-client nf-type udm udm-profile locality service name type endpoint-profile

Configures endpoint profile parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-*service_name_type*)

Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_ <i>name_type</i>)
Syntax Description	<pre>endpoint-profile <i>endpoint_profile_name</i> { capacity <i>capacity_value</i> priority <i>profile_priority</i> api-uri-prefix <i>api_uri_prefix</i> api-root <i>api_root</i> uri-scheme <i>uri_scheme</i> }</pre> <p>api-root <i>api_root</i> Specify the API root. Must be a string.</p> <p>api-uri-prefix <i>api_uri_prefix</i> Specify the API URI prefix. Must be a string.</p> <p>capacity <i>capacity_value</i> Specify the profile capacity. Must be an integer in the range of 0-65535.</p>

profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name

Default Value: 10.

endpoint-profile *endpoint_profile_name*

Specify name of the endpoint profile.

Must be a string.

priority *profile_priority*

Specify the priority of the profile.

Must be an integer in the range of 0-65535.

Default Value: 1.

uri-scheme *uri_scheme*

Specify the URI scheme.

Must be one of the following:

- **http**: HTTP.
- **https**: HTTPS.

Usage Guidelines

Use this command to configure endpoint profile parameters. The CLI prompt changes to the Endpoint Profile Configuration mode (config-endpoint-profile-<profile_name>).

profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name

Configures the endpoint name parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-*profile_name*)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-*profile_name*) > Locality Configuration (config-locality-*locality_name*) > Service Name

Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes

Exec > Global Configuration (config) > UDM NF-Client Configuration (config-smf) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Syntax Description

endpoint-name endpoint_name [priority node_priority | capacity node_capacity]

capacity node_capacity

Specify the node capacity for the endpoint.

Must be an integer in the range of 0-65535.

endpoint-name endpoint_name

Specify name of the endpoint. You can configure the primary, secondary, and tertiary host (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both IPv4 and IPv6 addresses. However, the SMF gives preference to the IPv4 address.

Must be a string.

priority node_priority

Specify the node priority for the endpoint.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this configuration to configure the endpoint name parameters. The CLI prompt changes to the Endpoint Name Configuration mode (config-endpoint-name-<endpoint_name>).

```
profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions
```

profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name default-notification-subscriptions

Configures the Default Notification Subscription parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)

Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service- <i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Syntax Description	<pre>default-notification-subscriptions <i>name</i> [callback-uri <i>callback_uri</i> n1-message-class <i>n1_message_class</i> n2-information-class <i>n2_information_class</i> notification-type <i>notification_type</i>]</pre> <p>callback-uri <i>callback_uri</i> Specify the callback URI. Must be a string.</p> <p>n1-message-class <i>n1_message_class</i> Specify the N1 Message Class. Must be one of the following:</p> <ul style="list-style-type: none"> • 5GMM <p>n2-information-class <i>n2_information_class</i> Specify the N2 Information Class. Must be one of the following:</p> <ul style="list-style-type: none"> • RAN <p>notification-type <i>notification_type</i> Specify the notification type. Must be one of the following:</p> <ul style="list-style-type: none"> • DATA_CHANGE_NOTIFICATION • DATA_REMOVAL_NOTIFICATION • LOCATION_NOTIFICATION • N1_MESSAGES • N2_INFORMATION <p><i>name</i> Specify the name of the default notification subscriptions. Must be a string.</p>
Usage Guidelines	Use this command to configure the Default Notification Subscription parameters. The CLI prompt changes to the Default Notification Subscriptions Configuration mode (config-default-notification-subscriptions-< <i>name</i> >)

```
profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name primary ip-address
```

profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name primary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name)

> Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6
ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines

Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name secondary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes

Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name

```
profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name secondary ip-address
```

Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description

```
{ primary | secondary | tertiary } ip-address { [ ipv4 ipv4_address | ipv6  
ipv6_address ] [ port port_number ] }
```

ipv4 ipv4_address

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 ipv6_address

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port port_number

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type udm udm-profile locality service name type endpoint-profile endpoint-name tertiary ip-address

Configures the endpoint IP address and port number parameters. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Service Name Type Configuration (config-type-service_<i>name_type</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>) > Endpoint Name Configuration (config-endpoint-name- <i>endpoint_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>)

```
profile nf-client nf-type udm udm-profile locality service name type endpoint-profile version uri-version
```

> Service Name Type Configuration (config-type-service_name_type) > Endpoint Profile Configuration (config-endpoint-profile-profile_name) > Endpoint Name Configuration (config-endpoint-name-endpoint_name)

Syntax Description { **primary** | **secondary** | **tertiary** } **ip-address** { [**ipv4** *ipv4_address* | **ipv6** *ipv6_address*] [**port** *port_number*] }

ipv4 *ipv4_address*

Specify the IPv4 address.

Must be a string in the ipv4-address pattern. For information on the ipv4-address pattern, see the Input Pattern Types section.

ipv6 *ipv6_address*

Specify the IPv6 address.

Must be a string in the ipv6-address pattern. For information on the ipv6-address pattern, see the Input Pattern Types section.

port *port_number*

Specify the port number.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the endpoint IP address and port number parameters.

profile nf-client nf-type udm udm-profile locality service name type endpoint-profile version uri-version

Configures the URI version parameter. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > AMF Profile Configuration (config-amf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > AUSF NF-Client Configuration (config-ausf) > AUSF Profile Configuration (config-ausf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > CHF Profile Configuration (config-chf-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > EIR Profile Configuration (config-eir-profile-profile_name) > Locality Configuration (config-locality-locality_name) > Endpoint Profile Configuration (config-endpoint-profile-profile_name)

Command Modes	Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > NSSF Profile Configuration (config-nssf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > PCF Profile Configuration (config-pcf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > SEPP Profile Configuration (config-sepp-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > SMF Profile Configuration (config-smf-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Command Modes	Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > UDM Profile Configuration (config-udm-profile- <i>profile_name</i>) > Locality Configuration (config-locality- <i>locality_name</i>) > Endpoint Profile Configuration (config-endpoint-profile- <i>profile_name</i>)
Syntax Description	<pre>version uri-version { uri_version full-version full_version }</pre> <p>full-version <i>full_version</i> Specify the full version in the format <i>major-version.minor-version.patch-version.[alpha-draft-number]</i> Must be a string.</p> <p>uri-version <i>uri_version</i> Specify the URI version. Must be a string in the pattern v\d.</p>
Usage Guidelines	Use this command to configure the URI version parameter.

profile nf-client-failure nf-type amf

Configures the AMF Profile Failure Handling parameters.

Command Modes	Exec > Global Configuration (config)
Syntax Description	profile nf-client-failure nf-type amf
Usage Guidelines	Use this command to configure the AMF Profile Failure Handling parameters. The CLI prompt changes to the AMF Configuration mode (config-amf).

profile nf-client-failure nf-type amf profile failure-handling

Configures the AMF Failure Handling Template parameters.

profile nf-client-failure nf-type amf profile failure-handling service name type

Command Modes Exec > Global Configuration (config) > AMF NF Client Failure Configuration (config-amf)

Syntax Description **profile failure-handling *fh_template_name***

failure-handling fh_template_name

Specify name of the AMF failure handling template.

Must be a string.

Usage Guidelines Use this command to configure the AMF Failure Handling Template parameters. The CLI prompt changes to the Failure Handling <profile_name> Configuration (config-failure-handling-<profile_name>).

profile nf-client-failure nf-type amf profile failure-handling service name type

Configures the AMF Failure Handling parameters.

Command Modes Exec > Global Configuration (config) > AMF NF-Client Configuration (config-amf) > Failure Handling Profile Configuration (config-failure-handling-*profile_name*)

Syntax Description **service name type *amf_service_name_type* [responsetimeout *response_timeout*]**

responsetimeout response_timeout

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type amf_service_name_type

Specify the AMF service name type.

Must be one of the following:

- namf-comm
- namf-evts
- namf-loc
- namf-mt

Usage Guidelines Use this command to configure AMF Failure Handling parameters. The CLI prompt changes to the Failure Handling Service Name Type Configuration mode (config-type-<service_name_type>)

profile nf-client-failure nf-type amf profile failure-handling service name type message type

Configures the AMF message type parameters.

Command Modes Exec > Global Configuration (config) > AMF NF Client Configuration (config-amf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type)

Syntax Description **message type amf_message_type**

type amf_message_type

Specify the AMF message type.

Must be one of the following:

- AmfCommCreateUeContext
- AmfCommEBIAssignment
- AmfCommN1N2MessageTransfer
- AmfCommSMStatusChangeNotify
- AmfCommUeContextTransfer
- AmfCommUeContextTransferUpdate
- AmfN1MessageNotifyClient

Usage Guidelines Use this command to configure the AMF message type parameters.

profile nf-client-failure nf-type amf profile failure-handling service name type message type status-code httpv2

Configures HTTPV2 status codes. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF Client Configuration (config-amf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > AUSF NF Client Configuration (config-ausf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

```
profile nf-client-failure nf-type amf profile failure-handling service name type message type status-code httpv2
```

Command Modes	Exec > Global Configuration (config) > CHF NF Client Configuration (config-chf) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > EIR NF Client Configuration (config-eir) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > NRF NF Client Configuration (config-nrf) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF Client Configuration (config-nssf) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > PCF NF Client Configuration (config-pcf) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF Client Configuration (config-sepp) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > SMF NF Client Configuration (config-smf) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > UDM NF Client Configuration (config-udm) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Syntax Description `status-code httpv2 { range range | range } { action action | retransmit retransmit | retransmit-interval retransmit_interval | retry retry_value }`

action action

Specify the action.

Must be one of the following:

- **continue**: Specify to continue the session without any retry. The retry count configuration is invalid with this action.
- **retry-and-continue**: Specify to retry as per the configured retry count and continue the session.

- **retry-and-ignore**: Specify to retry as per the configured retry count and ignore the session in case all retry fails.
- **retry-and-terminate**: Specify to retry as per the configured retry count and terminate the session in case all retry fails.
- **terminate**: Specify to terminate the session without any retry. Retry count configuration is invalid with this action.

code *code_value*

Specify the code, or a range of status codes separated by either - (hyphen) or , (comma).

Must be an integer.

-Or-

Must be a string.

retransmit-interval *retransmit_interval*

Specify the retransmit interval in milliseconds.

Must be an integer.

retransmit *retransmit*

Specify the retransmit value.

Must be an integer in the range of 1-10.

retry *retry_value*

Specify the number of times the NF service must retry before proceeding with the action.

Must be an integer in the range of 1-10.

Usage Guidelines

Use this command to configure HTTPv2 status codes.

profile nf-client-failure nf-type ausf

Configures AUSF Profile Failure Handling parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

profile nf-client-failure nf-type ausf

Usage Guidelines

Use this command to configure AUSF Profile Failure Handling parameters. The CLI prompt changes to the AUSF Configuration mode (config-ausf).

profile nf-client-failure nf-type ausf profile failure-handling

Configures the AUSF Failure Handling Template parameters.

profile nf-client-failure nf-type ausf profile failure-handling service name type

Command Modes	Exec > Global Configuration (config) > AUSF NF Client Failure Configuration (config-ausf)
Syntax Description	<p>profile failure-handling <i>fh_template_name</i></p> <p>failure-handling <i>fh_template_name</i></p> <p>Specify name of the AUSF failure handling template.</p> <p>Must be a string.</p>

Usage Guidelines Use this command to configure the AUSF Failure Handling Template parameters. The CLI prompt changes to the Failure Handling Profile Configuration mode (config-failure-handling-<profile_name>).

profile nf-client-failure nf-type ausf profile failure-handling service name type

Configures the AUSF Failure Handling parameters.

Command Modes	Exec > Global Configuration (config) > AUSF Configuration (config-ausf) > Failure Handling Profile Configuration (config-failure-handling- <i>profile_name</i>)
Syntax Description	<p>service name type <i>ausf_service_name_type</i> [responsetimeout <i>response_timeout</i>]</p> <p>responsetimeout <i>response_timeout</i></p> <p>Specify the response timeout.</p> <p>Must be an integer.</p> <p>Default Value: 2000.</p> <p>type <i>ausf_service_name_type</i></p> <p>Specify the AUSF service name type.</p> <p>Must be one of the following:</p> <ul style="list-style-type: none"> • nausf-auth

Usage Guidelines Use this command to configure the AUSF Failure Handling parameters.

profile nf-client-failure nf-type ausf profile failure-handling service name type message type

Configures the AUSF message type parameters.

Command Modes	Exec > Global Configuration (config) > AUSF NF Client Configuration (config-ausf) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type)
----------------------	---

Syntax Description

```
message type ausf_message_type
```

type ausf_message_type

Specify the AUSF message type.

Must be one of the following:

- **AusfAuthenticationCfm**
- **AusfAuthenticationReq**

Usage Guidelines

Use this command to configure the AUSF message type parameters.

profile nf-client-failure nf-type ausf profile failure-handling service name type message type status-code httpv2

Configures HTTPV2 status codes. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF Client Configuration (config-amf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF Client Configuration (config-ausf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > CHF NF Client Configuration (config-chf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > EIR NF Client Configuration (config-eir) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > NRF NF Client Configuration (config-nrf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF Client Configuration (config-nssf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

```
profile nf-client-failure nf-type ausf profile failure-handling service name type message type status-code httpv2
```

Command Modes	Exec > Global Configuration (config) > PCF NF Client Configuration (config-pcf) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF Client Configuration (config-sepp) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > SMF NF Client Configuration (config-smf) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > UDM NF Client Configuration (config-udm) > Failure Handling Configuration (config-failure-handling- <i>profile_name</i>) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Syntax Description	<pre>status-code httpv2 { range <i>range</i> <i>range</i> } { action <i>action</i> retransmit <i>retransmit</i> retransmit-interval <i>retransmit_interval</i> retry <i>retry_value</i> }</pre> <p>action <i>action</i></p> <p>Specify the action.</p> <p>Must be one of the following:</p> <ul style="list-style-type: none"> • continue: Specify to continue the session without any retry. The retry count configuration is invalid with this action. • retry-and-continue: Specify to retry as per the configured retry count and continue the session. • retry-and-ignore: Specify to retry as per the configured retry count and ignore the session in case all retry fails. • retry-and-terminate: Specify to retry as per the configured retry count and terminate the session in case all retry fails. • terminate: Specify to terminate the session without any retry. Retry count configuration is invalid with this action. <p>code <i>code_value</i></p> <p>Specify the code, or a range of status codes separated by either - (hyphen) or , (comma).</p> <p>Must be an integer.</p> <p>-Or-</p> <p>Must be a string.</p>

retransmit-interval *retransmit_interval*

Specify the retransmit interval in milliseconds.

Must be an integer.

retransmit *retransmit*

Specify the retransmit value.

Must be an integer in the range of 1-10.

retry *retry_value*

Specify the number of times the NF service must retry before proceeding with the action.

Must be an integer in the range of 1-10.

Usage Guidelines	Use this command to configure HTTPv2 status codes.
-------------------------	--

profile nf-client-failure nf-type chf

Configures CHF Profile Failure Handling parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	profile nf-client-failure nf-type chf
---------------------------	--

Usage Guidelines	Use this command to configure CHF Profile Failure Handling parameters. The CLI prompt changes to the CHF NF Client Configuration mode (config-chf).
-------------------------	---

profile nf-client-failure nf-type chf profile failure-handling

Configures the CHF Failure Handling Template parameters.

Command Modes	Exec > Global Configuration (config) > CHF NF Client Failure Configuration (config-chf)
----------------------	---

Syntax Description	profile failure-handling <i>fh_template_name</i>
---------------------------	---

failure-handling *fh_template_name*

Specify name of the CHF failure handling template.

Must be a string.

Usage Guidelines	Use this command to configure the CHF Failure Handling Template for CHF profile.
-------------------------	--

profile nf-client-failure nf-type chf profile failure-handling service name type

profile nf-client-failure nf-type chf profile failure-handling service name type

Configures the CHF Failure Handling parameters.

Command Modes Exec > Global Configuration (config) > CHF NF-Client Configuration (config-chf) > Failure Handling Profile Configuration (config-failure-handling-*profile_name*)

Syntax Description **service name type chf_service_name_type [responsetimeout response_timeout]**

responsetimeout response_timeout

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type chf_service_name_type

Specify the CHF service name type.

Must be one of the following:

- nchf-convergedcharging
- nchf-spendinglimitcontrol

Usage Guidelines Use this command to configure the CHF Failure Handling parameters.

profile nf-client-failure nf-type chf profile failure-handling service name type message type

Configures the CHF message type parameters.

Command Modes Exec > Global Configuration (config) > CHF NF Client Configuration (config-chf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type)

Syntax Description **message type chf_message_type**

type chf_message_type

Specify the CHF message type.

Must be one of the following:

- ChfConvergedchargingCreate
- ChfConvergedchargingDelete

- ChfConvergedchargingUpdate
- ChfSpendingLimitContolSubscribe
- ChfSpendingLimitContolUnSubscribe

Usage Guidelines

Use this command to configure the CHF message type parameters.

profile nf-client-failure nf-type chf profile failure-handling service name type message type status-code httpv2

Configures HTTPV2 status codes. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF Client Configuration (config-amf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > AUSF NF Client Configuration (config-ausf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > CHF NF Client Configuration (config-chf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > EIR NF Client Configuration (config-eir) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > NRF NF Client Configuration (config-nrf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF Client Configuration (config-nssf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > PCF NF Client Configuration (config-pcf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

```
profile nf-client-failure nf-type chf profile failure-handling service name type message type status-code httpv2
```

Command Modes Exec > Global Configuration (config) > SEPP NF Client Configuration (config-sepp) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > SMF NF Client Configuration (config-smf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > UDM NF Client Configuration (config-udm) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Syntax Description

```
status-code httpv2 { range range | range } { action action | retransmit retransmit
| retransmit-interval retransmit_interval | retry retry_value }
```

action action

Specify the action.

Must be one of the following:

- **continue**: Specify to continue the session without any retry. The retry count configuration is invalid with this action.
- **retry-and-continue**: Specify to retry as per the configured retry count and continue the session.
- **retry-and-ignore**: Specify to retry as per the configured retry count and ignore the session in case all retry fails.
- **retry-and-terminate**: Specify to retry as per the configured retry count and terminate the session in case all retry fails.
- **terminate**: Specify to terminate the session without any retry. Retry count configuration is invalid with this action.

code code_value

Specify the code, or a range of status codes separated by either - (hyphen) or , (comma).

Must be an integer.

-Or-

Must be a string.

retransmit-interval retransmit_interval

Specify the retransmit interval in milliseconds.

Must be an integer.

retransmit *retransmit*

Specify the retransmit value.

Must be an integer in the range of 1-10.

retry *retry_value*

Specify the number of times the NF service must retry before proceeding with the action.

Must be an integer in the range of 1-10.

Usage Guidelines	Use this command to configure HTTPv2 status codes.
-------------------------	--

profile nf-client-failure nf-type eir

Configures EIR Profile Failure Handling parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	profile nf-client-failure nf-type eir
---------------------------	--

Usage Guidelines	Use this command to configure EIR Profile Failure Handling parameters. The CLI prompt changes to the EIR Configuration mode (config-eir).
-------------------------	---

profile nf-client-failure nf-type eir profile failure-handling

Configures the EIR Failure Handling Template parameters.

Command Modes	Exec > Global Configuration (config) > EIR NF Client Failure Configuration (config-eir)
----------------------	---

Syntax Description	profile failure-handling <i>fh_template_name</i>
---------------------------	---

failure-handling *fh_template_name*

Specify name of the EIR failure handling template.

Must be a string.

Usage Guidelines	Use this command to configure the EIR Failure Handling Template parameters.
-------------------------	---

profile nf-client-failure nf-type eir profile failure-handling service name type

Configures the EIR Failure Handling parameters.

Command Modes	Exec > Global Configuration (config) > EIR NF-Client Configuration (config-eir) > Failure Handling Profile Configuration (config-failure-handling- <i>profile_name</i>)
----------------------	--

profile nf-client-failure nf-type eir profile failure-handling service name type message type

Syntax Description **service name type** *amf_service_name_type* [**responsetimeout** *response_timeout*]

responsetimeout *response_timeout*

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type *eir_service_name_type*

Specify the EIR service name type.

Must be one of the following:

- **n5g-eir-eic**

Usage Guidelines Use this command to configure the EIR Failure Handling parameters.

profile nf-client-failure nf-type eir profile failure-handling service name type message type

Specify the EIR message type parameters.

Command Modes Exec > Global Configuration (config) > EIR Configuration (config-eir) > Failure Handling *profile_name* Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type)

Syntax Description **message type** *eir_message_type*

type *eir_message_type*

Specify the EIR message type.

Must be one of the following:

- **EirCheckEquipmentIdentity**

Usage Guidelines Use this command to configure the EIR message type parameters.

profile nf-client-failure nf-type eir profile failure-handling service name type message type status-code httpv2

Configures HTTPV2 status codes. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF Client Configuration (config-amf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration

(config-type-service_name_type) > Failure Handling Message Type Configuration
 (config-type-message_type_name)

Command Modes	Exec > Global Configuration (config) > AUSF NF Client Configuration (config-ausf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > CHF NF Client Configuration (config-chf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > EIR NF Client Configuration (config-eir) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > NRF NF Client Configuration (config-nrf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF Client Configuration (config-nssf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > PCF NF Client Configuration (config-pcf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF Client Configuration (config-sepp) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > SMF NF Client Configuration (config-smf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > UDM NF Client Configuration (config-udm) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Syntax Description	status-code httpv2 { range range range } { action action retransmit retransmit retransmit-interval retransmit_interval retry retry_value }

```
profile nf-client-failure nf-type nrf
```

action action

Specify the action.

Must be one of the following:

- **continue**: Specify to continue the session without any retry. The retry count configuration is invalid with this action.
- **retry-and-continue**: Specify to retry as per the configured retry count and continue the session.
- **retry-and-ignore**: Specify to retry as per the configured retry count and ignore the session in case all retry fails.
- **retry-and-terminate**: Specify to retry as per the configured retry count and terminate the session in case all retry fails.
- **terminate**: Specify to terminate the session without any retry. Retry count configuration is invalid with this action.

code code_value

Specify the code, or a range of status codes separated by either - (hyphen) or , (comma).

Must be an integer.

-Or-

Must be a string.

retransmit-interval retransmit_interval

Specify the retransmit interval in milliseconds.

Must be an integer.

retransmit retransmit

Specify the retransmit value.

Must be an integer in the range of 1-10.

retry retry_value

Specify the number of times the NF service must retry before proceeding with the action.

Must be an integer in the range of 1-10.

Usage Guidelines

Use this command to configure HTTPv2 status codes.

profile nf-client-failure nf-type nrf

Configures the NRF Profile Failure Handling parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description **profile nf-client-failure nf-type nrf**

Usage Guidelines Use this command to configure NRF Profile Failure Handling parameters. The CLI prompt changes to the NRF Configuration mode (config-nrf).

profile nf-client-failure nf-type nrf profile failure-handling

Configures the NRF Failure Handling Template parameters.

Command Modes Exec > Global Configuration (config) > NRF NF Client Failure Configuration (config-nrf)

Syntax Description **profile failure-handling *fh_template_name***

failure-handling *fh_template_name*

Specify name of the NRF failure handling template.

Must be a string.

Usage Guidelines Use this command to configure the NRF Failure Handling Template parameters.

profile nf-client-failure nf-type nrf profile failure-handling service name type

Configures NRF Failure Handling parameters.

Command Modes Exec > Global Configuration (config) > NRF NF-Client Configuration (config-nrf) > Failure Handling Profile Configuration (config-failure-handling-profile-name)

Syntax Description **service name type *nrf_service_name_type* [responsetimeout *response_timeout*]**

responsetimeout *response_timeout*

Specify the timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

nrf_service_name_type

Specify the NRF service name type.

Must be one of the following:

- **nrf-nfm**

Usage Guidelines Use this command to configure the NRF Failure Handling parameters.

profile nf-client-failure nf-type nrf profile failure-handling service name type message type

profile nf-client-failure nf-type nrf profile failure-handling service name type message type

Configures NRF message type parameters.

Command Modes Exec > Global Configuration (config) > NRF NF Client Configuration (config-nrf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type)

Syntax Description `type message_type failover-enabled { false | true } re-registration-enabled { false | true }`

failover-enabled { false | true }

Specify whether to enable or disable failover to next NRF. This parameter is applicable only for NFUpdate and NRFRegistration message type.

Must be one of the following:

- **false**
- **true**

Default Value: true.

re-registration-enabled { false | true }

Specify whether to enable or disable re-registration.

Must be one of the following:

- **false**
- **true**

Default Value: true.

type message_type

Specify the message type.

Must be one of the following:

- **Heartbeat**
- **NFUpdate**
- **NRFRegistration**

Usage Guidelines Use this command to configure the NRF message type parameters.

profile nf-client-failure nf-type nrf profile failure-handling service name type message type status-code httpv2

Configures HTTPV2 status code.

Command Modes Exec > Global Configuration

Syntax Description `status-code httpv2 { code code_value | action action }`

action action

Specify the action.

Must be one of the following:

- `retry-next`
- `retry`

code code_value

Specify the code value. Ranges of status codes must be separated by either hyphen (-) or comma (,).

Must be an integer.

-Or-

Must be a string.

Usage Guidelines Use this command to configure HTTPV2 status codes.

profile nf-client-failure nf-type nssf

Configures NSSF Profile Failure Handling parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description `profile nf-client-failure nf-type nssf`

Usage Guidelines Use this command to configure NSSF Failure Handling parameters. The CLI prompt changes to the NSSF Configuration mode (config-nssf).

profile nf-client-failure nf-type nssf profile failure-handling

Configures the NSSF Failure Handling Template parameters.

Command Modes Exec > Global Configuration (config) > NSSF NF Client Failure Configuration (config-nssf)

profile nf-client-failure nf-type nssf profile failure-handling service name type

Syntax Description **profile failure-handling *fh_template_name***

failure-handling *fh_template_name*

 Specify name of the SEPP failure handling template.

 Must be a string.

Usage Guidelines Use this command to configure the NSSF Failure Handling Template parameters.

profile nf-client-failure nf-type nssf profile failure-handling service name type

Configures the NSSF Failure Handling parameters.

Command Modes Exec > Global Configuration (config) > NSSF NF-Client Configuration (config-nssf) > Failure Handling Profile Configuration (config-failure-handling-profile_name)

Syntax Description **service name type *nssf_service_name_type* [responsetimeout *response_timeout*]**

responsetimeout *response_timeout*

 Specify the response timeout interval in milliseconds.

 Must be an integer.

 Default Value: 2000.

type *nssf_service_name_type*

 Specify the NSSF service name type.

 Must be one of the following:

- **nssf-nselection**

Usage Guidelines Use this command to configure the NSSF Failure Handling parameters.

profile nf-client-failure nf-type nssf profile failure-handling service name type message type

Configures the NSSF message type parameters.

Command Modes Exec > Global Configuration (config) > NSSF NF Client Configuration (config-nssf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type)

Syntax Description **message type *nssf_message_type***

type *nssf_message_type*

Specify the NSSF message type.

Must be one of the following:

- **NssfNSSelectionReq**

Usage Guidelines

Use this command to configure the NSSF message type parameters.

profile nf-client-failure nf-type nssf profile failure-handling service name type message type status-code httpv2

Configures HTTPV2 status codes. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes

Exec > Global Configuration (config) > AMF NF Client Configuration (config-amf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > AUSF NF Client Configuration (config-ausf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > CHF NF Client Configuration (config-chf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > EIR NF Client Configuration (config-eir) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > NRF NF Client Configuration (config-nrf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > NSSF NF Client Configuration (config-nssf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes

Exec > Global Configuration (config) > PCF NF Client Configuration (config-pcf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

```
profile nf-client-failure nf-type nssf profile failure-handling service name type message type status-code httpv2
```

Command Modes Exec > Global Configuration (config) > SEPP NF Client Configuration (config-sepp) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > SMF NF Client Configuration (config-smf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > UDM NF Client Configuration (config-udm) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Syntax Description

```
status-code httpv2 { range range | range } { action action | retransmit retransmit
| retransmit-interval retransmit_interval | retry retry_value }
```

action action

Specify the action.

Must be one of the following:

- **continue**: Specify to continue the session without any retry. The retry count configuration is invalid with this action.
- **retry-and-continue**: Specify to retry as per the configured retry count and continue the session.
- **retry-and-ignore**: Specify to retry as per the configured retry count and ignore the session in case all retry fails.
- **retry-and-terminate**: Specify to retry as per the configured retry count and terminate the session in case all retry fails.
- **terminate**: Specify to terminate the session without any retry. Retry count configuration is invalid with this action.

code code_value

Specify the code, or a range of status codes separated by either - (hyphen) or , (comma).

Must be an integer.

-Or-

Must be a string.

retransmit-interval retransmit_interval

Specify the retransmit interval in milliseconds.

Must be an integer.

retransmit *retransmit*

Specify the retransmit value.

Must be an integer in the range of 1-10.

retry *retry_value*

Specify the number of times the NF service must retry before proceeding with the action.

Must be an integer in the range of 1-10.

Usage Guidelines	Use this command to configure HTTPv2 status codes.
-------------------------	--

profile nf-client-failure nf-type pcf

Configures PCF Profile Failure Fandling parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	profile nf-client-failure nf-type pcf
---------------------------	--

Usage Guidelines	Use this command to configure PCF Profile Failure Handling parameters. The CLI prompt changes to the PCF Configuration mode (config-pcf).
-------------------------	---

profile nf-client-failure nf-type pcf profile failure-handling

Configures the PCF Failure Handling Template parameters.

Command Modes	Exec > Global Configuration (config) > PCF NF Client Failure Configuration (config-pcf)
----------------------	---

Syntax Description	profile failure-handling <i>fh_template_name</i>
---------------------------	---

failure-handling *fh_template_name*

Specify name of the PCF failure handling template.

Must be a string.

Usage Guidelines	Use this command to configure the PCF Failure Handling Template parameters.
-------------------------	---

profile nf-client-failure nf-type pcf profile failure-handling service name type

Configures the PCF Failure Handling parameters.

Command Modes	Exec > Global Configuration (config) > PCF NF-Client Configuration (config-pcf) > Failure Handling Profile Configuration (config-failure-handling- <i>profile_name</i>)
----------------------	--

profile nf-client-failure nf-type pcf profile failure-handling service name type message type

Syntax Description **service name type** *pcf_service_name_type* [**responsetimeout** *response_timeout*]

responsetimeout *response_timeout*

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

pcf_service_name_type

Specify the PCF service name type.

Must be one of the following:

- **npcf-am-policy-control**
- **npcf-bdtpolicycontrol**
- **npcf-eventexposure**
- **npcf-policyauthorization**
- **npcf-smpolicycontrol**
- **npcf-ue-policy-control**

Usage Guidelines Use this command to configure the PCF Failure handling parameters.

profile nf-client-failure nf-type pcf profile failure-handling service name type message type

Configures the PCF message type parameters.

Command Modes Exec > Global Configuration (config) > PCF NF Client Configuration (config-pcf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type)

Syntax Description **message type** *pcf_message_type*

type* ***pcf_message_type**

Specify the PCF message type.

Must be one of the following:

- **PcfAmfPolicyControlCreate**
- **PcfAmfPolicyControlDelete**
- **PcfSmpolicycontrolCreate**
- **PcfSmpolicycontrolDelete**

- **PcfSmpolicycontrolUpdate**

Usage Guidelines Use this command to configure the PCF message type parameters.

profile nf-client-failure nf-type pcf profile failure-handling service name type message type status-code httpv2

Configures HTTPV2 status codes. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes	Exec > Global Configuration (config) > AMF NF Client Configuration (config-amf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > AUSF NF Client Configuration (config-ausf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > CHF NF Client Configuration (config-chf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > EIR NF Client Configuration (config-eir) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > NRF NF Client Configuration (config-nrf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF Client Configuration (config-nssf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > PCF NF Client Configuration (config-pcf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF Client Configuration (config-sepp) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration

```
profile nf-client-failure nf-type pcf profile failure-handling service name type message type status-code httpv2
```

(config-type-service_name_type) > Failure Handling Message Type Configuration
 (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > SMF NF Client Configuration (config-smf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > UDM NF Client Configuration (config-udm) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Syntax Description

```
status-code httpv2 { range range | range } { action action | retransmit retransmit
| retransmit-interval retransmit_interval | retry retry_value }
```

action action

Specify the action.

Must be one of the following:

- **continue**: Specify to continue the session without any retry. The retry count configuration is invalid with this action.
- **retry-and-continue**: Specify to retry as per the configured retry count and continue the session.
- **retry-and-ignore**: Specify to retry as per the configured retry count and ignore the session in case all retry fails.
- **retry-and-terminate**: Specify to retry as per the configured retry count and terminate the session in case all retry fails.
- **terminate**: Specify to terminate the session without any retry. Retry count configuration is invalid with this action.

code code_value

Specify the code, or a range of status codes separated by either - (hyphen) or , (comma).

Must be an integer.

-Or-

Must be a string.

retransmit-interval retransmit_interval

Specify the retransmit interval in milliseconds.

Must be an integer.

retransmit retransmit

Specify the retransmit value.

Must be an integer in the range of 1-10.

retry *retry_value*

Specify the number of times the NF service must retry before proceeding with the action.

Must be an integer in the range of 1-10.

Usage Guidelines	Use this command to configure HTTPv2 status codes.
-------------------------	--

profile nf-client-failure nf-type spp

Configures SEPP Profile Failure Handling parameters.

Command Modes	Exec > Global Configuration (config)
----------------------	--------------------------------------

Syntax Description	profile nf-client-failure nf-type spp
---------------------------	--

Usage Guidelines	Use this command to configure SEPP Failure Handling parameters. The CLI prompt changes to the SEPP Configuration mode (config-sepp).
-------------------------	--

profile nf-client-failure nf-type spp profile failure-handling

Configures SEPP Failure Handling Template parameters.

Command Modes	Exec > Global Configuration (config) > SEPP NF Client Failure Configuration (config-sepp)
----------------------	---

Syntax Description	profile failure-handling <i>fh_template_name</i>
---------------------------	---

failure-handling *fh_template_name*

Specify name of the SEPP failure handling template.

Must be a string.

Usage Guidelines	Use this command to configure SEPP Failure Handling Template parameters.
-------------------------	--

profile nf-client-failure nf-type spp profile failure-handling service name type

Configures the SEPP Failure Handling parameters.

Command Modes	Exec > Global Configuration (config) > SEPP NF-Client Configuration (config-sepp) > Failure Handling Profile Configuration (config-failure-handling- <i>profile_name</i>)
----------------------	--

Syntax Description	service name type <i>sepp_service_name_type</i> [responsetimeout <i>response_timeout</i>]
---------------------------	--

responsetimeout *response_timeout*

Specify the response timeout interval in milliseconds.

profile nf-client-failure nf-type sepp profile failure-handling service name type message type

Must be an integer.

Default Value: 2000.

type *sepp_service_name_type*

Specify the SEPP service name type.

Must be one of the following:

- **nsmf-pdusession**

Usage Guidelines Use this command to configure the SEPP Failure Handling parameters.

profile nf-client-failure nf-type sepp profile failure-handling service name type message type

Configures the SEPP message type parameters.

Command Modes

Exec > Global Configuration (config) > SEPP NF Client Configuration (config-sepp) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type)

Syntax Description

message type *sepp_message_type*

type *sepp_message_type*

Specify the SEPP message type.

Must be one of the following:

- **HsmfPduSessionNotify**
- **HsmfPduSessionUpdate**
- **VsmfPduSessionCreate**
- **VsmfPduSessionRelease**
- **VsmfPduSessionUpdate**

Usage Guidelines Use this command to configure the SEPP message type parameters.

profile nf-client-failure nf-type sepp profile failure-handling service name type message type status-code httpv2

Configures HTTPv2 status codes. This command is common to multiple NF clients, and is available in the following configuration modes.

profile nf-client-failure nf-type smf

Syntax Description **status-code httpv2 { range range | range } { action action | retransmit retransmit | retransmit-interval retransmit_interval | retry retry_value }**

action action

Specify the action.

Must be one of the following:

- **continue**: Specify to continue the session without any retry. The retry count configuration is invalid with this action.
- **retry-and-continue**: Specify to retry as per the configured retry count and continue the session.
- **retry-and-ignore**: Specify to retry as per the configured retry count and ignore the session in case all retry fails.
- **retry-and-terminate**: Specify to retry as per the configured retry count and terminate the session in case all retry fails.
- **terminate**: Specify to terminate the session without any retry. Retry count configuration is invalid with this action.

code code_value

Specify the code, or a range of status codes separated by either - (hyphen) or , (comma).

Must be an integer.

-Or-

Must be a string.

retransmit-interval retransmit_interval

Specify the retransmit interval in milliseconds.

Must be an integer.

retransmit retransmit

Specify the retransmit value.

Must be an integer in the range of 1-10.

retry retry_value

Specify the number of times the NF service must retry before proceeding with the action.

Must be an integer in the range of 1-10.

Usage Guidelines

Use this command to configure HTTPv2 status codes.

profile nf-client-failure nf-type smf

Configures SMF Profile Failure Handling parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **profile nf-client-failure nf-type smf**

Usage Guidelines Use this command to configure SMF Profile Failure Handling parameters. The CLI prompt changes to the SMF Configuration mode (config-smf).

profile nf-client-failure nf-type smf profile failure-handling

Configures the SMF Failure Handling Template parameters.

Command Modes Exec > Global Configuration (config) > SMF NF Client Failure Configuration (config-smf)

Syntax Description **profile failure-handling *fh_template_name***

fh_template_name

Specify name of the SMF failure handling template.

Must be a string.

Usage Guidelines Use this command to configure the SMF Failure Handling Template parameters.

profile nf-client-failure nf-type smf profile failure-handling service name type

Configures the SMF Failure Handling parameters.

Command Modes Exec > Global Configuration (config) > SMF NF-Client Configuration (config-smf) > Failure Handling Profile Configuration (config-failure-handling-*profile_name*)

Syntax Description **service name type *smf_service_name_type* [responsetimeout *response_timeout*]**

responsetimeout response_timeout

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

type smf_service_name_type

Specify the SMF service name type.

Must be one of the following:

- nsmf-pdusession

Usage Guidelines Use this command to configure the SMF Failure Handling parameters.

profile nf-client-failure nf-type smf profile failure-handling service name type message type

profile nf-client-failure nf-type smf profile failure-handling service name type message type

Configures the SMF message type parameters.

Command Modes Exec > Global Configuration (config) > SMF NF Client Configuration (config-smf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type)

Syntax Description **message type** *smf_message_type*

type smf_message_type

Specify the SMF message type.

Must be one of the following:

- **SmfN1N2MsgTxfrFailureNotification**
- **SmfSmContextCreate**
- **SmfSmContextDelete**
- **SmfSmContextRetrieve**
- **SmfSmContextUpdate**

Usage Guidelines Use this command to configure the SMF message type parameters.

profile nf-client-failure nf-type smf profile failure-handling service name type message type status-code httpv2

Configures HTTPV2 status codes. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF Client Configuration (config-amf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > AUSF NF Client Configuration (config-ausf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > CHF NF Client Configuration (config-chf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration

(config-type-service_name_type) > Failure Handling Message Type Configuration
 (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > EIR NF Client Configuration (config-eir) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > NRF NF Client Configuration (config-nrf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > NSSF NF Client Configuration (config-nssf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > PCF NF Client Configuration (config-pcf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > SEPP NF Client Configuration (config-sepp) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > SMF NF Client Configuration (config-smf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > UDM NF Client Configuration (config-udm) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Syntax Description `status-code httpv2 { range range | range } { action action | retransmit retransmit | retransmit-interval retransmit_interval | retry retry_value }`

action action

Specify the action.

Must be one of the following:

- **continue:** Specify to continue the session without any retry. The retry count configuration is invalid with this action.
- **retry-and-continue:** Specify to retry as per the configured retry count and continue the session.

profile nf-client-failure nf-type udm

- **retry-and-ignore**: Specify to retry as per the configured retry count and ignore the session in case all retry fails.
- **retry-and-terminate**: Specify to retry as per the configured retry count and terminate the session in case all retry fails.
- **terminate**: Specify to terminate the session without any retry. Retry count configuration is invalid with this action.

code *code_value*

Specify the code, or a range of status codes separated by either - (hyphen) or , (comma).

Must be an integer.

-Or-

Must be a string.

retransmit-interval *retransmit_interval*

Specify the retransmit interval in milliseconds.

Must be an integer.

retransmit *retransmit*

Specify the retransmit value.

Must be an integer in the range of 1-10.

retry *retry_value*

Specify the number of times the NF service must retry before proceeding with the action.

Must be an integer in the range of 1-10.

Usage Guidelines Use this command to configure HTTPv2 status codes.

profile nf-client-failure nf-type udm

Configures UDM Profile Failure Handling parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **profile nf-client-failure nf-type udm**

Usage Guidelines Use this command to configure UDM Profile Failure Handling parameters. The CLI prompt changes to the UDM Configuration mode (config-udm).

profile nf-client-failure nf-type udm profile failure-handling

Configures the UDM Failure Handling Template parameters.

Command Modes Exec > Global Configuration (config) > UDM NF Client Failure Configuration (config-udm)

Syntax Description **profile failure-handling *fh_template_name***

failure-handling *fh_template_name*

Specify name of the UDM failure handling template.

Must be a string.

Usage Guidelines Use this command to configure the UDM Failure Handling Template parameters.

profile nf-client-failure nf-type udm profile failure-handling service name type

Configures UDM Failure Handling parameters.

Command Modes Exec > Global Configuration (config) > UDM NF-Client Configuration (config-udm) > Failure Handling Profile Configuration (config-failure-handling-*profile_name*)

Syntax Description **service name type *udm_service_name_type* [responsetimeout *response_timeout*]**

responsetimeout *response_timeout*

Specify the response timeout interval in milliseconds.

Must be an integer.

Default Value: 2000.

udm_service_name_type

Specify the UDM service name type.

Must be one of the following:

- nudm-ee
- nudm-pp
- nudm-sdm
- nudm-ueau
- nudm-uecm

Usage Guidelines Use this command to configure the UDM Failure Handling parameters.

profile nf-client-failure nf-type udm profile failure-handling service name type message type

profile nf-client-failure nf-type udm profile failure-handling service name type message type

Configures the UDM message type parameters.

Command Modes Exec > Global Configuration (config) > UDM NF Client Configuration (config-udm) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type)

Syntax Description **message type** *udm_message_type*

type udm_message_type

Specify the UDM message type.

Must be one of the following:

- **UdmDeRegistrationReq**
- **UdmRegistrationReq**
- **UdmSdmGetUESMSubscriptionData**
- **UdmSdmSubscribeToNotification**
- **UdmSdmUnsubscribeToNotification**
- **UdmSubscriptionReq**
- **UdmUecmRegisterSMF**
- **UdmUecmUnregisterSMF**
- **UdmUnSubscriptionReq**

Usage Guidelines Use this command to configure the UDM message type parameters.

profile nf-client-failure nf-type udm profile failure-handling service name type message type status-code httpv2

Configures HTTPv2 status codes. This command is common to multiple NF clients, and is available in the following configuration modes.

Command Modes Exec > Global Configuration (config) > AMF NF Client Configuration (config-amf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Command Modes Exec > Global Configuration (config) > AUSF NF Client Configuration (config-ausf) > Failure Handling Configuration (config-failure-handling-*profile_name*) > Failure Handling Service Name Type Configuration

(config-type-service_name_type) > Failure Handling Message Type Configuration
 (config-type-message_type_name)

Command Modes	Exec > Global Configuration (config) > CHF NF Client Configuration (config-chf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > EIR NF Client Configuration (config-eir) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > NRF NF Client Configuration (config-nrf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > NSSF NF Client Configuration (config-nssf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > PCF NF Client Configuration (config-pcf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > SEPP NF Client Configuration (config-sepp) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > SMF NF Client Configuration (config-smf) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)
Command Modes	Exec > Global Configuration (config) > UDM NF Client Configuration (config-udm) > Failure Handling Configuration (config-failure-handling-profile_name) > Failure Handling Service Name Type Configuration (config-type-service_name_type) > Failure Handling Message Type Configuration (config-type-message_type_name)

Syntax Description `status-code httpv2 { range range | range } { action action | retransmit retransmit | retransmit-interval retransmit_interval | retry retry_value }`

action action

Specify the action.

Must be one of the following:

profile nf-pair nf-type

- **continue**: Specify to continue the session without any retry. The retry count configuration is invalid with this action.
- **retry-and-continue**: Specify to retry as per the configured retry count and continue the session.
- **retry-and-ignore**: Specify to retry as per the configured retry count and ignore the session in case all retry fails.
- **retry-and-terminate**: Specify to retry as per the configured retry count and terminate the session in case all retry fails.
- **terminate**: Specify to terminate the session without any retry. Retry count configuration is invalid with this action.

code code_value

Specify the code, or a range of status codes separated by either - (hyphen) or , (comma).

Must be an integer.

-Or-

Must be a string.

retransmit-interval retransmit_interval

Specify the retransmit interval in milliseconds.

Must be an integer.

retransmit retransmit

Specify the retransmit value.

Must be an integer in the range of 1-10.

retry retry_value

Specify the number of times the NF service must retry before proceeding with the action.

Must be an integer in the range of 1-10.

Usage Guidelines Use this command to configure HTTPv2 status codes.

profile nf-pair nf-type

Configures the NF client pair type parameter.

Command Modes Exec > Global Configuration (config)

Syntax Description `profile nf-pair nf-type nf_type [[limit max_discovery_profiles] [max-payload-size max_payload_size] [nrf-discovery-group group_name]]`

limit *max_discovery_profiles*

Specify the maximum number of discovery profiles that NRF can send.

Must be an integer in the range of 1-1000.

Default Value: 10.

max-payload-size *max_payload_size*

Specify the maximum payload size of the discovery response.

Must be an integer in the range of 124-2000.

Default Value: 124.

nf-type *nf_type*

Specify the NF client pair type.

Must be one of the following:

- **5G_EIR**
- **AF**
- **AMF**
- **AUSF**
- **BSF**
- **CHF**
- **GMLC**
- **LMF**
- **N3IWF**
- **NEF**
- **NRF**
- **NSSF**
- **NWDAF**
- **PCF**
- **SEPP**
- **SMF**
- **SMSF**
- **UDM**
- **UDR**
- **UDSF**
- **UPF**

```
profile nf-pair nf-type cache invalidation true
```

nrf-discovery-group *group_name*

Specify name of the NRF discovery group.

Must be a string.

Usage Guidelines Configures NF client pair parameters. Use this command to configure the NF client pair type parameter.

profile nf-pair nf-type cache invalidation true

Configures the invalidation cache for "true" case.

Command Modes Exec > Global Configuration (config) > NF Type Configuration (config-nf-type-*nf_type*)

Syntax Description `cache invalidation { false | true [timeout timeout_duration] }`

timeout *timeout_duration*

Specify the invalidation cache timeout duration in milliseconds.

Must be an integer.

Default Value: 0.

true

True condition.

Usage Guidelines Use this command to configure the true case parameters for invalidation cache.

profile nf-pair nf-type locality

Configures client locality parameter.

Command Modes Exec > Global Configuration (config) > NF Type Configuration (config-nf-type-*nf_type*)

Syntax Description `locality { client locality_name | geo-server locality_name | preferred-server locality_name }`

client *locality_name*

Specify the Client Locality information.

Must be a string.

geo-server *locality_name*

Specify the Geo Service Locality information.

Must be a string.

preferred-server *locality_name*

Specify the preferred server locality information.

Must be a string.

Usage Guidelines	Use this command to configure the client locality parameter.
-------------------------	--

profile nf-pair nf-type nrf-auth-group nrf-discovery-group

Configures the AMF ID (**nrf-auth-group nrf-discovery-group** in the **nf-pair**) to specify auth-groups containing the NRF endpoint details for each NF type.

Command Modes	Exec > Global Configuration (config) > AMF Configuration (config-amf amf_name) > NF Profile Name Configuration (config-nf-profile-nf <i>nf_profile_name</i>) > NF Profile Type Configuration (config-nf-type-profile <i>profile_type_name</i>) > nrf-auth-group > nrf-discovery-group
----------------------	---

Syntax Description	profile nf-pair nf-type <i>nf_type_name</i> nrf-auth-group <i>nrf_auth_group_name</i> nrf-discovery-group <i>nrf_discovery_group_name</i> locality client <i>client_name</i> locality preferred-server <i>server_name</i> locality geo-server <i>geo_server_name</i> cache invalidation { true false } timeout <i>timeout_number</i>
---------------------------	---

profile nf-pair nf-type *nf_type_name*

Specify the *nf-type* under the *nf-pair* in the profile name to authenticate. Must be a string.

nrf-auth-group *nrf_auth_group_name*

Specify the *nrf-auth-group* name.

nrf-discovery-group *nrf_discovery_group_name*

Specify the *nrf-discovery-group* name.

locality client *client_name*

Specify the client name in the locality details.

locality preferred-server *server_name*

Specify the *preferred-server* or client name in the locality details.

locality geo-server *geo_server_name*

Specify the *geo-server* name in the locality details.

cache invalidation { true | false } timeout *timeout_number*

Enable the cache invalidation configuration. The default value is false.

quit**Usage Guidelines**

Use this command, when the **nrf-discovery-group** under the **nrf-auth-group**, as auth-groups containing the NRF endpoint details for each NF type is specified, when you want to enable **nf-pair**.

quit

Exits the management session.

Command Modes

Exec

Syntax Description

quit

Usage Guidelines

Use this command to exit the management session.

reconcile

Reconciles the IPAM data with the CDL records pod resource parameter.

Command Modes

Exec

Syntax Description

reconcile ipam ipam

ipam ipam

Specify to initiate the reconcile operation.

Usage Guidelines

Use this command to reconcile the IPAM data with the CDL records pod resource parameter.

resource pod

Configures Pod resource parameter.

Command Modes

Exec > Global Configuration (config)

Syntax Description

resource pod_type

resource pod_type

Specify the pod type.

Usage Guidelines

Use this command to configure Pod resource parameter. The CLI prompt changes to the Pod Resource Configuration mode (config-resource-<pod_type>).

resource pod cpu

Configures CPU resource request parameter.

Command Modes Exec > Global Configuration (config) > Pod Resource Configuration (config-resource-pod_type)

Syntax Description **cpu request** *cpu_resource_request*

request *cpu_resource_request*

Specify the CPU resource request in millicores.

Must be an integer in the range of 100-1000000.

Usage Guidelines Use this command to configure CPU resource request parameter.

resource pod labels

Configures K8 Node Affinity label configuration.

Command Modes Exec > Global Configuration (config) > Pod Resource Configuration (config-resource-pod_type)

Syntax Description **labels key** *label_key value* *label_value*

key *label_key*

Specify the key for the label.

Must be a string.

value *label_value*

Specify the value for the label.

Must be a string.

Usage Guidelines Use this command to configure K8 Node affinity label configuration.

resource pod memory

Configures memory resource request parameter.

Command Modes Exec > Global Configuration (config) > Pod Resource Configuration (config-resource-pod_type)

Syntax Description **memory request** *memory_resource_request*

request *memory_resource_request*

Specify the memory resource request in megabytes.

Must be an integer in the range of 100-200000.

Usage Guidelines Use this command to configure memory resource request parameter.

resources

Displays resources information.

Command Modes Exec

Syntax Description `show resources`

Usage Guidelines Use this command to view resources information.

resources info

Displays resource information.

Command Modes Exec

Syntax Description `show resources [info]`

Usage Guidelines Use this command to view information about the configured resources.

router bfd instance instance-id

Configures Multi-Hop BFD configuration.

Command Modes Exec > Global Configuration (config)

Syntax Description `router bfd instance instance-id instance_id`

instance-id *instance_id*

Specify the instance ID.

Usage Guidelines Use this command to configure Multi-Hop BFD configuration. The CLI prompt changes to the Instance Configuration mode (config-instance-id-<*instance_id*>).

router bfd instance instance-id interface-list

Configures monitor interface list configuration.

Command Modes Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*)

Syntax Description `interface interface_to_monitor [gateway-ip gateway_ip_address]`

gateway-ip *gateway_ip_address*

Specify IP address of the gateway.

Must be a string.

interface *interface_to_monitor*

Specify the interface to monitor.

Must be a string.

Usage Guidelines

Use this command to configure monitor interface list configuration.

router bfd instance instance-id interface-list neighbors

Configures monitor interface list neighbor configuration parameters.

Command Modes

Exec > Global Configuration (config) > Instance Configuration (config-instance-id-*instance_id*)

Syntax Description

neighbor *neighbor_ip_address*

neighbor *neighbor_ip_address*

Specify IP address of the neighbor.

Must be a string.

Usage Guidelines

Use this command to configure monitor interface list neighbor configuration parameters.

router bgplist

Configures BGP speaker configuration.

Command Modes

Exec > Global Configuration (config)

Syntax Description

**router bgp [learnDefaultRoute { false | true } | loopbackBFDPort
bfd_local_port_number | loopbackPort bgp_local_port_number]**

bgp *bgp*

Specify the BGP.

Must be an integer.

learnDefaultRoute { false | true }

Specify whether to enable or disable learning default route and adding it in kernel space.

Must be one of the following:

- **false**
- **true**

Default Value: false.

router bgplist bfd

loopbackBFDPort *bfd_local_port_number*

Specify the BFD local port number.

Must be an integer.

Default Value: 3784.

loopbackPort *bgp_local_port_number*

Specify the BGP local port number.

Must be an integer.

Default Value: 179.

Usage Guidelines Use this command to configure the BGP speaker configuration.

router bgplist bfd

Configures BFD configuration.

Command Modes Exec > Global Configuration (config) > Router Configuration (config-router-router)

Syntax Description **bfd { interval *bfd_interval* | min_rx *bfd_min_rx* | multiplier *bfd_interval_multiplier* }**

interval *bfd_interval*

Specify, in microseconds, the BFD interval.

Must be an integer.

Default Value: 250000.

min_rx *bfd_min_rx*

Specify, in microseconds, the BFD minimum RX.

Must be an integer.

Default Value: 250000.

multiplier *bfd_interval_multiplier*

Specify the BFD interval multiplier.

Must be an integer.

Default Value: 3.

Usage Guidelines Use this command to configure the BFD configuration.

router bgplist interfaceList

Configures bonding interface configuration.

Command Modes Exec > Global Configuration (config) > Router Configuration (config-router-router)

Syntax Description **interface** *bgp_local_interface*

interface *bgp_local_interface*

Specify the BGP local interface.

Must be a string.

Usage Guidelines Use this command to configure the bonding interface configuration.

router bgplist interfaceList bondingInterfaces

Configures bonding interface configuration.

Command Modes Exec > Global Configuration (config) > Router Configuration (config-router-router) > Router Interface Configuration (config-router-interface)

Syntax Description **bondingInterface** *linked_bonding_interface*

bondingInterface *linked_bonding_interface*

Specify the linked bonding interface.

Must be a string.

Usage Guidelines Use this command to configure the bonding interface configuration.

router bgplist interfaceList neighbors

Configures neighbor parameters.

Command Modes Exec > Global Configuration (config) > Router Configuration (config-router-router) > Router Interface Configuration (config-router-interface)

Syntax Description **neighbor** *neighbor_ip_address* [**fail-over** *failover_type* | **remote-as** *remote_as_number*]

fail-over *failover_type*

Specify the failover type.

Must be one of the following:

router bgplist policies

- **bfd**

neighbor *neighbor_ip_address*

Specify the IP address of the neighbor.

Must be a string.

remote-as *remote_as_number*

Specify the Autonomous System (AS) number of the BGP neighbor.

Must be an integer.

Default Value: 65000.

Usage Guidelines	Use this command to configure the neighbor parameters.
-------------------------	--

router bgplist policies

Configures policy parameters.

Command Modes	Exec > Global Configuration (config) > Router Configuration (config-router-router)
----------------------	--

Syntax Description	policy-name <i>policy_name</i> [as-path-set <i>as_path_set</i> gateWay <i>gateway_address</i> interface <i>interface</i> ip-prefix <i>ip_prefix</i> isStaticRoute { false true } mask-range <i>mask_range</i> modifySourceIp { false true }]
---------------------------	--

as-path-set *as_path_set*

Specify the Autonomous System (AS) path set.

Must be a string.

gateWay *gateway_address*

Specify the gateway address.

Must be a string.

interface *interface*

Specify the interface to set as source ip.

Must be a string.

ip-prefix *ip_prefix*

Specify the IP prefix.

Must be a string.

isStaticRoute { **false | **true** }**

Specify whether to enable or disable adding static route into kernel space.

Must be one of the following:

- **false**
- **true**

Default Value: false.

mask-range *mask_range*

Specify the mask range.

Must be a string.

modifySourcelp { false | true }

Specify whether to enable or disable modifying source IP of incoming route.

Must be one of the following:

- **false**
- **true**

Default Value: false.

policy-name *policy_name*

Specify name of the policy.

Must be a string.

source-prefix *source_ip_prefix*

Specify the source IP prefix.

Must be a string.

Usage Guidelines

Use this command to configure the policy parameters.

router monitor-interface interface-list

Configures monitor interface list configuration.

Command Modes

Exec > Global Configuration (config)

Syntax Description

```
router monitor-interface interface interface_to_monitor linked-interface  
linked_interface_to_monitor
```

interface *interface_to_monitor*

Specify the interface to monitor.

Must be a string.

linked-interface *linked_interface_to_monitor*

Specify the linked interface to monitor.

Must be a string.

Usage Guidelines	Use this command to configure monitor interface list configuration.
-------------------------	---

rpc

Displays RPC information.

Command Modes	Exec
----------------------	------

Syntax Description	show rpc
---------------------------	-----------------

Usage Guidelines	Use this command to view RPC information.
-------------------------	---

rpc all

Displays RPC configuration information.

Command Modes	Exec
----------------------	------

Syntax Description	show rpc [all]
---------------------------	-------------------------

Usage Guidelines	Use this command to view RPC configuration information for all RPCs.
-------------------------	--

running-status

Displays system running status information.

Command Modes	Exec
----------------------	------

Syntax Description	show running-status
---------------------------	----------------------------

Usage Guidelines	Use this command to view system running status information.
-------------------------	---

running-status info

Displays the system's current status information.

Command Modes	Exec
----------------------	------

Syntax Description	show running-status [info]
---------------------------	-------------------------------------

Usage Guidelines Use this command to view the system's current status information.

screen-length

Configures the number of rows of text that the terminal screen displays.

Command Modes Exec

Syntax Description **screen-length** *number_of_rows*

number_of_rows

Specify the number of rows.

Must be an integer.

Usage Guidelines Use this command to configure the number of rows that the terminal screen displays.

screen-width

Configures the number of columns that the terminal screen displays.

Command Modes Exec

Syntax Description **screen-width** *number_of_columns*

number_of_columns

Specify the number of columns.

Must be an integer.

Usage Guidelines Use this command to configure the number of columns that the terminal screen displays.

search

Search subscriber by SUPI.

Command Modes Exec > Global Configuration (config)

Syntax Description **search subscriber supi supi_info detailed { false | true }**

Usage Guidelines Use this command to search subscriber by SUPI.

search

Search the subscriber by SUPI.

send**Command Modes** Exec**Syntax Description** **search subscriber [detailed { false | true } | supi supi]****subscriber detailed { false | true }**

Specify whether you want detailed subscriber information.

Must be "false" or "true".

supisupi

Specify the SUPI.

Must be a string.

Usage Guidelines Use this command to search subscriber by SUPI.

send

Sends messages to the terminal of a specific user or all users.

Command Modes Exec**Syntax Description** **send user message****user**

Specify the user from whom the message must be sent.

Must be a string.

Must be one of the following:

- admin
- confd-api-manager
- confd-message-manager

message

Specify the message that must be sent.

Must be a string.

Usage Guidelines Use this command to send messages to the terminal of a specific user or to all users.

sessions

Displays pending session commits in the database.

Command Modes Exec

Syntax Description **show sessions**

Usage Guidelines Use this command to view pending session commits in the database.

sessions affinity

Displays the affinity count per instance.

Command Modes Exec

Syntax Description **show sessions affinity**

Usage Guidelines Use this command to view the affinity count per instance.

sessions commit-pending

Displays all pending session commits.

Command Modes Exec

Syntax Description **show sessions commit-pending**

Usage Guidelines Use this command to view all pending session commits.

show

Displays the system information.

Command Modes Exec

Syntax Description **show system_component**

system_component

Specify the component to view the information.

Must be a string. Select from the possible completion options.

Usage Guidelines Use this command to view the system information.

show bfd-neigbor

Displays BFD status of neighbors.

show bgp-global**Command Modes** Exec**Syntax Description** **show bfd-neighbor [ip *ip_address*]****ip *ip_address***

Specify the IP address of the neighbor.

Must be a string.

Usage Guidelines Use this command to view BFD status of neighbors.

show bgp-global

Displays BGP global configuration.

Command Modes Exec**Syntax Description** **show bgp-global****Usage Guidelines** Use this command to view BGP global configuration.

show bgp-kernel-route

Displays BGP kernel-configured routes.

Command Modes Exec**Syntax Description** **show bgp-kernel-route [application { false | true }]****application { false | true }**

Specify whether to display application added routes.

Must be one of the following:

- **false**
- **true**

Default Value: false.

Usage Guidelines Use this command to view BGP kernel-configured routes.

show bgp-neighbors

Displays BGP neighbor's status.

Command Modes Exec

Syntax Description `show bgp-neighbors [ip ip_address]`

ip *ip_address*

Specify the IP address of the neighbor.

Must be a string.

Usage Guidelines Use this command to view BGP neighbor's status.

show bgp-route-summary

Displays BGP route summary.

Command Modes Exec

Syntax Description `show bgp-route-summary`

Usage Guidelines Use this command to view BGP route summary.

show bgp-routes

Displays BGP routes information.

Command Modes Exec

Syntax Description `show bgp-routes`

Usage Guidelines Use this command to view BGP routes information.

show edr

Displays EDR Transaction Procedure Event fields.

Command Modes Exec

Syntax Description `show edr { [event transaction_procedure_event] [transaction-procedure transaction_procedure] }`

event *transaction_procedure_event*

Specify the transaction procedure event name/id/all.

Must be a string.

transaction-procedure *transaction_procedure*

Specify the transaction procedure's name, ID, or all.

show geo-maintenance-mode

Must be a string.

Usage Guidelines Use this command to view EDR Transaction Procedure Event fields.

show geo-maintenance-mode

Indicates whether maintenance mode is enabled or disabled.

Command Modes Exec

Syntax Description `show geo-maintenance-mode`

Usage Guidelines Use this command to view whether maintenance mode is enabled or disabled.

show georeplication

Displays ETCD/Cache checksum.

Command Modes Exec

Syntax Description `show georeplication checksum instance-id instance_id`

checksum

Specify checksum.

instance-id *instance_id*

Specify the instance ID for which checksum will be displayed.

Must be a string.

Usage Guidelines Use this command to view ETCD/Cache checksum.

show local-interface-status

Displays status of local interface.

Command Modes Exec

Syntax Description `show local-interface-status interface local_interface_name`

interface *local_interface_name*

Specify name of the local interface.

Must be a string.

Usage Guidelines Use this command to view status of local interface.

show role

Displays current role for the specified instance.

Command Modes Exec

Syntax Description `show role instance-id instance_id`

instance-id *instance_id*

Specify the instance ID for which role must be displayed.

Usage Guidelines Use this command to view current role for the specified instance.

show subscriber

Displays subscriber information.

Command Modes Exec

Syntax Description `show subscriber { all | supi supi_id }`

all

Specify all SUPIs or IMEIs.

count *session_count*

Specify the sessions count.

Must be one of the following:

- **count**

gr-instance *gr_instance*

Specify the network function service under which to search.

imei *imei_id*

Specify the International Mobile Equipment Identity.

Must be a string of 15-16 characters.

namespace *namespace*

NOTE: This keyword is deprecated, use nf-service instead. Specify the product namespace under which to search.

show subscriber ran-opt

Default Value: cisco-mobile-infra:none.

nf-service nf_service

Specify the network function service under which to search.

Default Value: cisco-mobile-infra:none.

supi supi_id

Specify the subscriber's SUPI ID.

Must be a string.

Usage Guidelines

Use this command to view summary and detailed subscriber information for all subscribers or specific subscribers based on SUPI, IMEI, or all.

show subscriber ran-opt

Displays and clears subscriber data based on specified criteria.

Command Modes

Exec

Syntax Description

```
{ clear | show } subscriber gnodeb-id gnodeb_id mnc mobile_network_code mcc
mobile_country_code
```

gnodeb-id gnodeb_id

Specify the gnodeb-id.

Must be an integer in the range of 0-4294967295.

mcc mobile_country_code

Specify the mobile country code.

Must be a string in the two-or-three-digit pattern. For information on the two-or-three-digit pattern, see the Input Pattern Types section.

mnc mobile_network_code

Specify the mobile network code.

Must be a string in the two-or-three-digit pattern. For information on the two-or-three-digit pattern, see the Input Pattern Types section.

Usage Guidelines

Use this command to view and to clear subscriber data based on specified criteria.

show-defaults

Configures whether to display default values when showing the configuration.

Command Modes Exec

Syntax Description **show-defaults { false | true }**

show-defaults { false | true }

Specify whether to display or hide the default values. To hide select false, to display select true.

Must be either "false" or "true".

Usage Guidelines Use this command to view default values when viewing the configuration commands.

slice-group

Configures slice group parameters.

Command Modes Exec > Global Configuration (config)

Syntax Description **slice-group slice_group_name**

slice_group_name

Specify name of the slice group.

Must be a string.

Usage Guidelines Use this command to configure slice group parameters. The CLI prompt changes to the Slice Group Configuration mode (config-slice-group-<group_name>).

slice-group slices

Configures slice parameters.

Command Modes Exec > Global Configuration (config) > Slice Group Configuration (config-slice-group-<group_name>)

Syntax Description **slices name slice_name [[sst slice_service_type] [sdt slice_differentiator_type]]**

name slice_name

Specify name of the slice.

Must be a string.

sdt slice_differentiator_type

Specify the Slice Differentiator Type (SDT).

Must be a string in the octet-string24 pattern. For information on the octet-string24 pattern, see the Input Pattern Types section.

sst *slice_service_type*

Specify the Slice Service Type (SST).

Must be an integer in the range of 0-255.

Usage Guidelines	Use this command to configure slice parameters.
-------------------------	---

smiuser

Configures the Subscriber Microservices Infrastructure (SMI) user account parameters.

Command Modes	Exec
----------------------	------

Syntax Description	<pre>smiuser add-group groupname group_name smiuser add-user { usernameusername password password } smiuser assign-user-group { groupname group_name username username } smiuser change-password { username username current_password current_password new_password new_password confirm_password new_password password_expire_days expire_days } smiuser change-password-age { password_expire_days expire_days username username } smiuser change-self-password { current_password current_password new_password new_password confirm_password new_password password_expire_days expire_days } smiuser delete-group groupname group_name smiuser delete-user username username smiuser show-user username username smiuser unassign-user-group { username username groupname group_name } smiuser update-password-length length password_length</pre>
---------------------------	---

groupname *group_name*

Specify the group name in PAM.

Must be a string.

username *username*

Specify the username in PAM.

Must be a string.

password *password*

Specify the user password.

Must be a string.

current_password *current_password*

Specify the current password.

Must be a string.

new_password *new_password*

Specify the new password.

Must be a string.

confirm_password *new_password*

Confirm the new password.

Must be a string.

password_expire_days *expire_days*

Specify the number of days before the password expires.

Must be an integer.

length password_length

Specify the minimum password length.

Must be an integer.

Usage Guidelines

Use this command to configure the SMI user parameters.

system

Configures the NF's system operations.

Command Modes

Exec

Syntax Description

```
system { ops-center stop | ops-center-debug { start | stop } | synch { start | stop } | upgrade | uuid-override new-uuid uuid_value }
```

ops-center stop

Stops the operations center diagnostics.

ops-center debug { start | stop }

Starts or stops operations center debugging.

synch { start | stop }

Starts or stops the automatic synching of configuration,

tai-group**upgrade**

Initiates the upgrade of a product.

uuid-override new-uuid *uuid_value*

Change the Universally Unique Identifier (UUID) to a new value.

Must be a string.

Usage Guidelines

Use this command to display the NF's system operations.

tai-group

Configures Tracking Area Identity (TAI) group parameters.

Command Modes

Exec > Global Configuration (config)

Syntax Description

tai-group name *tai_group_name* slice-group *slice_group_name*

name *tai_group_name*

Specify name of the TAI group.

Must be a string.

slice-group *slice_group_name*

Specify name of the slice group.

Usage Guidelines

Use this command to configure TAI group parameters.

tai-group tais

Configures Tracking Area Identity (TAI).

Command Modes

Exec > Global Configuration (config)

Syntax Description

tai-group name *tai_group_name* tais name *tai_name* [ims-voice-over-ps-supported { false | true } | slice-group *slice_group_name*]

ims-voice-over-ps-supported { false | true }

Specify whether IMS Voice Over PS is supported or not supported.

Must be one of the following:

- **false**
- **true**

Default Value: false.

slice-group *slice_group_name*

Specify name of the slice group.

tais name *tai_name*

Specify name of the TAI.

Must be a string.

Usage Guidelines	Use this command to configure TAIs. A TAI is composed of MCC, MNC, and possible TACs.
-------------------------	---

tai-group tais tailist

Configures TAI list.

Command Modes	Exec > Global Configuration (config) > TAI Group Configuration (config-tai-group- <i>tai_group_name</i>) > TAIS List Configuration (config-tais- <i>tai_name</i>)
----------------------	---

Syntax Description	mcc <i>mobile_country_code</i> mnc <i>mobile_network_code</i>
---------------------------	--

mcc *mobile_country_code*

Specify the mobile country code. For example, 123.

Must be a string in the three-digit pattern. For information on the three-digit pattern, see the Input Pattern Types section.

mnc *mobile_network_code*

Specify the two- or three-digit mobile network code. For example, 23, 456.

Must be a string in the two-or-three-digit pattern. For information on the two-or-three-digit pattern, see the Input Pattern Types section.

Usage Guidelines	Use this command to configure the TAI list.
-------------------------	---

You can configure a maximum of 16 elements with this command.

tai-group tais tailist tac

Configures TAI group TAC values.

Command Modes	Exec > Global Configuration (config) > TAI Group Configuration (config-tai-group- <i>tai_group_name</i>) > TAIS List Configuration (config-tais- <i>tai_name</i>)
----------------------	---

Syntax Description	tac list <i>list_of_tac_values</i>
---------------------------	---

list *list_of_tac_values*

Specify the list of TAC values.

tai-group tais tailist tac range

Must be an integer in the range of 0-65535.

You can configure a maximum of 16 elements with this keyword.

Usage Guidelines Use this command to configure TAI group TAC values.

tai-group tais tailist tac range

Configures the TAC range.

Command Modes Exec > Global Configuration (config) > TAI Group Configuration (config-tai-group-*tai_group_name*) > TAIS List Configuration (config-tais-*tai_name*)

Syntax Description **range start tac_range_start end tac_range_end**

end tac_range_end

Specify the end value of the TAC range. Must be greater than the start value.

Must be an integer in the range of 0-65535.

start tac_range_start

Specify the start value of the TAC range. Must be lesser than the end value.

Must be an integer in the range of 0-65535.

Usage Guidelines Use this command to configure the TAC range.

You can configure a maximum of 16 elements with this command.

terminal

Configures the terminal parameters.

Command Modes Exec

Syntax Description **terminal terminal_type**

terminal_type

Specify the terminal type.

Must be one of the following:

- ansi
- generic
- linux
- vt100
- xterm

Usage Guidelines Use this command to configure the terminal parameters.

timestamp

Configures the timestamp parameters.

Command Modes Exec

Syntax Description **timestamp { enable | disable }**

timestamp { enable | disable }

Specify the configuration to enable or disable the timestamp display.

Usage Guidelines Use this command to configure the timestamp capability.

tracing

Configures debug settings for AMF NGAP endpoint.

Command Modes Exec > Global Configuration (config)

Syntax Description **tracing enable-trace-percent *tracing_percentage* append-messages { false | true }**

append-messages { false | true }

Specify to enable or disable appending messages.

Must be one of the following:

- **false**
- **true**

Default Value: true.

enable-trace-percent *tracing_percentage*

Specify the tracing percentage.

Must be an integer in the range of 0-100.

Default Value: 100.

Usage Guidelines Use this command to configure debug settings for the AMF NGAP endpoint.

tracing endpoint

Configures tracing endpoint.

who

Command Modes Exec > Global Configuration (config)

Syntax Description **tracing endpoint host** *host_name* **port** *port_number*

host *host_name*

Specify the host name.

Must be a string.

Default Value: jaeger-collector.

port *port_number*

Specify the port number.

Must be an integer.

Default Value: 9411.

Usage Guidelines Use this command to configure tracing endpoint.

who

Displays information on currently logged on users.

Command Modes Exec

Syntax Description **who**

Usage Guidelines Use this command to view information on currently logged on users. The command output displays the Session, User, Context, From, Protocol, Date, and Mode information.