



Ultra Cloud Core 5G Access and Mobility Management Function, Release 2025.03 - Configuration and Administration Guide

First Published: 2025-08-12

Americas Headquarters

Cisco Systems, Inc.
170 West Tasman Drive
San Jose, CA 95134-1706
USA
<http://www.cisco.com>
Tel: 408 526-4000
800 553-NETS (6387)
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

All printed copies and duplicate soft copies of this document are considered uncontrolled. See the current online version for the latest version.

Cisco has more than 200 offices worldwide. Addresses and phone numbers are listed on the Cisco website at www.cisco.com/go/offices.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2025 Cisco Systems, Inc. All rights reserved.



CONTENTS

PREFACE

About this Guide	xxxvii
Conventions Used	xxxvii
Contacting Customer Support	xxxviii

CHAPTER 1

5G Architecture	1
Architectural Overview	1
Control Plane Network Functions	1
User Plane Network Function	2
Subscriber Microservices Infrastructure Architecture	2
Control Plane Network Function Architecture	4

CHAPTER 2

5G AMF Overview	7
Product Description	7
Use Cases and Features	8
4G EPC Interworking with N26	8
AN Release Procedure	9
Base AMF Configuration	9
CMAS Support	9
Encryption and Integrity Protection	9
Handover Procedure	10
Lawful Intercept	10
NRF Register/Discovery	10
OAM Support	10
PDU Session Establishment	11
PDU Session Modification	11
PDU Session Release	11

Redundancy Support	11
Roaming and Restriction Support	12
Service Request Procedure	12
SMS over NAS	12
UE Configuration Update Procedure	12
Deregistration	12
Registration	13
Deployment Architecture and Interfaces	13
AMF Architecture	13
AMF Deployment	15
Supported Interfaces	15
Life Cycle of Control Plane Message	16
License Information	18
Standards Compliance	18

CHAPTER 3
Deploying and Configuring AMF through Ops Center 21

Feature Summary and Revision History	21
Summary Data	21
Revision History	21
Feature Description	22
AMF Ops Center	22
Prerequisites	22
Deploying and Accessing AMF	24
Deploying AMF	24
Accessing the AMF Ops Center	24
Configuring Ops Center	25
Sample Configuration	25
Post Configuration Check	25

CHAPTER 4
Pods and Services Reference 27

Feature Summary and Revision History	27
Summary Data	27
Revision History	27
Feature Description	28

Pods	28
Services	30
Open Ports and Services	32
Associating Pods to the Nodes	33
Viewing the Status and Pod Details	34
States	37
Viewing the Service Summary and Details	38
Multiple Service Pods on Multiple Nodes	42
Feature Description	42
How it Works	42
Feature Configuration	43
Configuration Example	43
Configuration Verification	43
GTPC Protocol Endpoint Merge with UDP Proxy Bypass	44
Feature Description	44
Configuring GTPC EP Merge Mode	44

CHAPTER 5

Smart Licensing	47
Feature Summary and Revision History	47
Summary Data	47
Revision History	47
Smart Software Licensing	47
Cisco Software Central	48
Smart Accounts and Virtual Accounts	48
Requesting a Cisco Smart Account	48
AMF Smart Licensing	49
Software Tags and Entitlement Tags	49
Configuring Smart Licensing	50
Users with Access to CSC	50
Users without Access to CSC	54
OAM Support	58

CHAPTER 6

AMF Authentication and GUTI Reallocation Configuration Control	61
Feature Summary and Revision History	61

Summary Data	61
Revision History	61
Feature Description	62
Feature Configuration	63
Configuration Example	64
Configuration Verification	65

CHAPTER 7 **AMF Bulk Statistics and MME Equivalent KPI Support** 67

Feature Summary and Revision History	67
Summary Data	67
Revision History	67
Feature Description	67
How it Works	68
OAM Support	68
Bulk Statistics Support	75

CHAPTER 8 **AMF Rolling Software Upgrade** 77

Feature Summary and Revision History	77
Summary Data	77
Revision History	77
Feature Description	77
Upgrading AMF	78
Rolling Software Upgrade for AMF	78
Rolling Software Upgrade Using the SMI Cluster Manager	80
Prerequisites	81
Triggering the Rolling Software Upgrade	85
Monitoring the Upgrade	87
Viewing the Pod Details	88
Rolling Upgrade Optimization	91
Feature Description	91
Upgrading Software to Version with Rolling Upgrade Optimization Support	92
Rolling Upgrade Optimization Limitations	93
Configuring the Supported Features for Rolling Upgrade	93
Verifying Rolling Upgrade Optimization	94

CHAPTER 9**Application-based Alerts 95**

Feature Summary and Revision History 95

Summary Data 95

Revision History 95

Feature Description 96

How it Works 96

Configuring the Alert Rules 96

Configuration Example 97

Configuration Verification 97

Viewing Alert Logger 98

Call Flow Procedure Alerts 98

Paging Success 99

Service Request Success 99

UE Deregistration Success 99

UE Registration Success 99

Message Level Alerts 100

N1 Registration Accept 100

N1 Service Accept 100

N1 UE Initiated Deregistration 100

N1 Network Initiated Deregistration 101

N2 ICSR Success 101

N2 PDU Setup Success 101

N2 PDU Modify Success 102

N2 PDU Release Success 102

N8 UECM Registration Request 102

N8 UECM Deregistration Request 103

N8 SDM Data Request 103

N8 SDM Subscription Request 103

N8 SDM Unsubscribe Request 104

N8 PCSCF Restoration Request 104

N11 SM Create 104

N11 SM Release 105

N11 SM Update 105

N12 UeAuth Req	105
N15 AM Policy Control Create	106
N15 AM Policy Control Delete	106

CHAPTER 10

Attach Rate Throttling 107

Feature Summary and Revision History	107
Summary Data	107
Revision History	107
Feature Description	108
How it Works	108
Feature Configuration	108
Configuration Example	109
OAM Support	110
Bulk Statistics Support	110

CHAPTER 11

Common Data Layer 111

Feature Summary and Revision History	111
Summary Data	111
Revision History	111
Feature Description	111
Architecture	112
Feature Configuration	113
Configuring the CDL in same namespace as AMF	113
Configuration Example	114
Configuring the CDL in different namespace as AMF	115
Configuration Example	116

CHAPTER 12

Collision Handling 119

Feature Summary	119
Summary Data	119
Feature Description	119
How it Works	120
OAM Support	120
Bulk Statistics Support	120

CHAPTER 13**CMAS Service Support 123**

Feature Summary and Revision History 123

Summary Data 123

Revision History 123

Feature Description 123

How it Works 124

Call Flows 124

CMAS Subscription, Message Delivery, and Notification Call Flow 124

Non-UE N2 Messages Subscription Call Flow 125

Non-UE N2 Messages Transfer Call Flow 126

Non-UE Message Notification Call Flow 128

Non-UE Notification Subscription Deletion Call Flow 129

Configure the Cache Validity Timer 130

CHAPTER 14**Compliance to 3GPP Specifications 131**

Feature Summary and Revision History 131

Summary Data 131

Revision History 131

Feature Description 132

Standards Compliance 132

How it Works 133

Call Flows 133

UE Registration 133

PDU Session Establishment Call Flow 138

PDU Session Modification 144

PDU Session Release 147

UE-Initiated Deregistration Call Flow 151

UDM-Initiated Deregistration Call Flow 152

AMF-Initiated Deregistration Call Flow 153

UE Identity Procedure for Authentication Failure Call Flow 155

UE Identity Procedure for Unknown Subscribers Call Flow 158

CHAPTER 15**DSCP Marking 161**

Usage Guidelines for DSCP Marking	161
Configure DSCP for N2/SCTP Interface	162
Configure DSCP for N26/GTPC Interface	163

CHAPTER 16 **Dynamic Configuration Change Support for SCTP and SBI Endpoints** 165

Feature Summary and Revision History	165
Summary Data	165
Revision History	165
Feature Description	165
Feature Configuration	166
Configuring the SCTP Endpoint	166
Configuration Example	167
Configuring the SCTP VIP-IP Port Removal	167
Configuring the SBI Endpoint	167
Configuring the Endpoint	168
Configuring AMF Registration with NRF	168
Configuring the Trigger to NRF Profile Update	169
Configuring the Internal VIP-IP for the UDP Proxy	170

CHAPTER 17 **EAP and AKA Authentication** 171

Feature Summary and Revision History	171
Summary Data	171
Revision History	171
Feature Description	171
How it Works	172
Call Flows	172
EAP-AKA'-based Authentication Call Flow	172

CHAPTER 18 **Encryption and Integrity Protection** 175

Feature Summary and Revision History	175
Summary Data	175
Revision History	175
Feature Description	175
How it Works	176

Call Flows	176
UE Registration with Encryption/Integrity Protection Call Flow	176
UE Access and Authentication Request Call Flow	179
Feature Configuration	181
Configuration Example	182
OAM Support	182
Bulk Statistics Support	182

CHAPTER 19

Equipment Identity Register	185
EIR Feature Description	185
How EIR Works	186
EIR Check Call Flow During Registration Procedure	186
Enabling EIR Check for the UE	187
Configuring EIR Network Element Profile List	188
Configuring EIR Profile Network Element	188
Configuring NF Pair Profile for EIR	189
Configuring NF Client Profile for EIR	189
Configuring Failure Handling Template for EIR	190
OAM Support for EIR	191
Bulk Statistics Support for EIR	191

CHAPTER 20

Event Data Records	193
EDR Feature Description	193
EDR Transaction File	195
Procedure Level EDR Generation	197
EDR Transaction Collision	231
EDR Limitations	231
Configuring EDRs	231
Configuring EDR Reporting	231
Configuring Transaction Level EDR Generation	232
Configuring EDR Parameters	233
Verifying EDR Transactions	235
OAM Support for EDR Logging	236
OAM Support for EDR Logging	237

Bulk Statistics for EDR Transactions and EDR Reporting	237
--	-----

CHAPTER 21

Event Exposure for UE Location Reporting	239
UE Location Reporting - Feature Description	240
UE Location Reporting - Limitations	240
Enable NG-RAN Location Reporting	241
GMLC Profile Configuration	241
Configure GMLC in Network Element Profile List	241
Configure GMLC Profile	242
Configure NF Client Profile for GMLC	243
Configure Failure Handling Profile for GMLC	244
View Active Event Subscription	245
OAM Support for Event Exposure - Cell-ID	246
Bulk Statistics Support for Event Exposure - UE Location Reporting	246

CHAPTER 22

Evolved Packet System Fallback Support	249
Feature Summary and Revision History	249
Summary Data	249
Revision History	249
Feature Description	249
Feature Configuration	250
Configuration Example	251

CHAPTER 23

Failure and Error Handling Support	253
Feature Summary and Revision History	253
Summary Data	253
Revision History	253
Feature Description	254
How it Works	254
Error Handling on SBI Interface	254
SBI Message Validation	257
Error handling on NGAP and NAS	258
Local Cause Code Mapping	258
Feature Configuration	261

Configuring the Local Cause Code Mapping at Global Configuration	261
Configuration Example	262
Configuring the Local Cause Code Mapping under Call Control Policy	262
Configuration Example	262
Configuring the Local Cause Code Mapping under AMF Service	262
Configuration Example	263
Failure Handling Template	263
Configuring the Response Timeout at Endpoint	263
Configuring the Response timeout at Failure Profile	264
Behavior for Multiple Failure Cause Code Configuration	265

CHAPTER 24

Failure/Exception Handling Framework Support 267

Feature Summary and Revision History	267
Summary Data	267
Revision History	267
Support for Failure/Exception Handling Framework	268
Error Handling on UDM Interface	268
SDM Errors	268
UECM Errors	269
Error Handling on AUSF Interface	270
Internal Errors on UDM/AUSF Interfaces	271
Error Handling for Protocol Data – NAS	271

CHAPTER 25

High Availability Services 273

Feature Summary and Revision History	273
Summary Data	273
Revision History	273
Feature Description	274
AMF High Availability Service	274
Feature Description	274
NGAP and NAS High Availability Service	275
Feature Description	275
Feature Configuration	276
Configuration Example	276

SCTP High Availability Service 276

Feature Description 276

Feature Configuration 276

Configuration Example 277

CHAPTER 26

Idle Entry Procedure 279

Feature Summary and Revision History 279

Summary Data 279

Revision History 279

Feature Description 279

How it Works 280

Call Flows 280

gNB-Initiated UE Context Release Procedure Call Flow 280

UE or NW-Initiated Deregistration followed by UE Release Procedure Call Flow 281

CHAPTER 27

SCP Model-D 283

SCP Model-D - Feature Description 283

SCP Model D - Key Parameters 284

Deployment Specific API Prefix 285

FQDN 286

Dead SCP detection 286

SCP Model-D Limitations 287

SCP Model-D Configuration 287

Configure SCP Profile and Associate Profile with Operator Policy 287

Configure SCP Network Element Profile 288

Configure SCP for Peer NF Communication 288

Configure SCP Model-D Failure Handling 291

Configure DNS Failure Handling 292

Configure AMF FQDN 293

Enable SCP Model-D 294

Configure AMF Deployment Prefix API 295

Enable Preferred Locality 296

OAM Support 297

Bulk Statistics Support 297

CHAPTER 28**Internode Registration Support 299**

Feature Summary and Revision History 299

Summary Data 299

Revision History 299

Feature Description 299

Internode Initial Registration 300

Feature Description 300

How it Works 300

Call Flows 300

Limitations 301

Internode Mobility Registration 301

Feature Description 301

Idle Mode Registration from Peer MME to AMF 301

Feature Description 301

How it Works 302

AMF to MME Idle Mode Handoff 303

Feature Description 303

How it Works 303

Feature Configuration 304

Registration with AMF Change 305

Feature Description 305

How it Works 305

OAM Support 308

CHAPTER 29**IPv6 Support on SBI Interface 309**

Feature Summary and Revision History 309

Summary Data 309

Revision History 309

Feature Description 309

Feature Configuration 310

Configuration Example 310

CHAPTER 30**Location Services 311**

Feature Description - Location Services	311
Architecture	313
Call Flows	314
MT-LR Location Service Call Flow	314
NI-LR Location Service Call Flow	315
UE Positioning Call Flow	315
Standard Compliance	315
Enable Location Services	316
Configuring LMF in Network Element Profile List	316
Configuring the Profile NF Client	317
Configuring the Profile Network Element	318
Configuring Failure Handling Profile	319
Configuring the Profile NF-pair NF-type	320
Configure Compliance Profile	320
Associate Compliance Profile with AMF Service	321
Configure MME Name and MME realm for AMF Services	322
Configure GMLC in Network Element Profile List	323
Configure GMLC Profile	323
Configure Profile NF-pair NF-type	324
Configure NF Client Profile for GMLC	325
Configure Failure Handling Profile for GMLC	326
OAM Support	327
Bulk Statistics Support	327

CHAPTER 31

Low Mobility Handover (Xn/N2)	331
Feature Summary and Revision History	331
Summary Data	331
Revision History	331
Feature Description	331
How It Works	332
Call Flows	332
N2 Handover Cancel Call Flow	332

CHAPTER 32

Mobile Equipment Identity Check Procedures	335
---	------------

Feature Summary and Revision History	335
Summary Data	335
Revision History	335
Feature Description	335
How it Works	336
Call Flows	336
UE Identity Procedure for Authentication Failure Call Flow	336
UE Identity Procedure for Unknown GUTI Registration Call Flow	338

CHAPTER 33 **Mutual TLS (mTLS) Support and Validation** 341

Feature Summary and Revision History	341
Summary Data	341
Revision History	341
Feature Description	342
Relationships	342
Prerequisites	342
How it Works	342
Limitations	343
Server Configuration in AMF	343
Feature Configuration	343
Configuration Example	343
Configuration Verification	344
Client Configuration in AMF	344
Feature Configuration	344
Configuration Example	345
Configuration Verification	345

CHAPTER 34 **N1N2 Message Transfer** 347

Feature Summary and Revision History	347
Summary Data	347
Revision History	347
Feature Description	348
How it Works	348
Call Flows	348

N1N2 Message Transfer Request Call Flow 348

CHAPTER 35

N2 Handover Procedure 351

Feature Summary and Revision History 351

Summary Data 351

Revision History 351

Feature Description 351

N2 Handover without AMF Change 352

Feature Description 352

How it Works 352

Call Flows 352

N2 Handover with AMF Change 353

Feature Description 353

How it Works 354

Call Flows 354

CHAPTER 36

N26 Stack Integration Support 357

Feature Summary and Revision History 357

Summary Data 357

Revision History 357

Feature Description 357

UDP Proxy and GTPC Endpoint 358

Feature Description 358

EBI Allocation and Reallocation Support 358

Feature Description 358

Standard Compliance 358

Limitations 358

How it Works 358

Call Flows 358

CHAPTER 37

N26-based Handover Procedures - EPC Interworking 361

Feature Summary and Revision History 361

Summary Data 361

Revision History 361

Feature Description	361
How it Works	362
Call Flows	362
5G to 4G Handover Call Flow	362
4G to 5G Handover Call Flow	363
Standards Compliance	365
Limitations	365
Feature Configuration	366
Configuring the Handover from 4G to 5G	366
Configuration Example	366
Configuring the Handover from 5G to 4G	366
Configuration Example	367

CHAPTER 38	Network-Initiated Deregistration Request	369
	Feature Summary and Revision History	369
	Summary Data	369
	Revision History	369
	Feature Description	369
	How it Works	370
	Call Flows	370
	Purge of Subscriber Data Call Flow	370
	Feature Configuration	371
	Configuration Example	372

CHAPTER 39	Network Slicing Support	373
	Feature Summary and Revision History	373
	Summary Data	373
	Revision History	374
	Feature Description	374
	How it Works	374
	Call Flows	374
	Limitations	384
	Feature Configuration	384
	Configuring the AMF Reallocation	385

Configuring the AMF Slice	385
Configuring the Emergency Slice	386
Configuring the Inclusion Mode	386
Configuration Example	386
Configuring Default Slice	387
Enabling the UE Configuration Update	387
Configuration Example	387
Configuring the Query Parameters for AMF Discovery	387
Configuration Example	388
Configuring the Query Parameter for Slice Data in NF Discovery	388
Configuring the NSSF	388
Configuring the Network Element Profile List	389
Configuring the Profile Network Element	389
Configuring the Profile NF-client	389
Configuring the Profile NF-client-failure	390
Configuring the Profile NF-pair NF-type	391
Configuring the Local AMF	391
Configuring Label Slice Data Filters in Metrics	392
Configuring Clear Subscriber with Slice Filter	392
Bulk Statistics	393

CHAPTER 40
NF Discovery and Management 395

Feature Description	395
NF Management	395
Feature Description	395
Registration	396
Configuring NRF Endpoints Profile Parameters for NF Management	396
AMF Deregistration with NRF	398
Feature Description	398
How it Works	399
NF Heartbeat	401
Feature Description	401
How it Works	402
Configuring NRF Heartbeat Interval	403

NRF Support for AMF Subscription and Notification	404
Feature Description	404
How it Works	405
Configuring NRF for Subscription and Notification	409
Standard Compliance	410
NF Profile Update	410
Feature Description	410
How it Works	410
NF Discovery	413
Feature Description	413
How it Works	414
Call Flows	414
Standards Compliance	415
Limitations	416
Configuring NRF for Discovery	416
Registering NRF	416
Discovering NRF	416
Configuring NF Client Profile	417
Associating a Discovery Group with NF Type	418
Configuring NF Endpoint Profile Parameters in NRF Discovery Group	419
Configuring Locality for NF Types	421
Configuring Locality for AMF	422
Configuring NF Profiles for a DNN	422
Defining Locality within NF Profile	423
Configuring NF Endpoint Profile Parameters in NF Client Profile	424
NRF Selection per Peer NF Type	425
Feature Description	425
Configuring the NRF Selection per Peer NF Type	426
Caching for Discovered NF Profiles	429
Feature Description	429
How it Works	429
NF Discovery Cache Invalidation	430
Static Configuration for Peer NF Management	431
Fallback to Static IP Address Support	431

Feature Description	431
How it Works	432
Configuring Fallback to Static IP Address	434
Failure Handling	436

CHAPTER 41 Node Manager Endpoint Onboarding Support 437

Feature Summary and Revision History	437
Summary Data	437
Revision History	437
Feature Description	437
Feature Configuration	438

CHAPTER 42 NRF (Network Function Repository) Services 439

Feature Summary and Revision History	439
Summary Data	439
Revision History	439
Feature Description	439
How it Works	441
OAM Support	443
Statistics Support	443
Troubleshooting Information	445
Trouble Ticket Content Data Collection	445

CHAPTER 43 OAuth2 Client Authorization Support to NRF 447

Feature Summary and Revision History	447
Summary Data	447
Revision History	447
Feature Description	448
Relationships	448
AMF as NF Producer	448
How it Works	448
Limitations	449
Feature Configuration	449
Configuration Example	450

Configuration Verification	450
AMF as NF Consumer	450
How it Works	451
Feature Configuration	451
Configuration Example	453
Configuration Verification	454
OAM Support	454
Bulk Statistics Support	454
Data Type Support	455

CHAPTER 44

Overload Control for N2 and NAS 457

Feature Summary and Revision History	457
Summary Data	457
Revision History	457
Feature Description	458
How it Works	458
Call Flows	459
Overload Start Message Call Flow	459
Overload Stop Message Call Flow	459
NAS Congestion Control Call Flow	460
Standards Compliance	461
Limitations	461
Feature Configuration	462
Configuring Congestion Control Threshold	462
Configuration Example	462
Configuration Verification	462
Configuring Congestion Action Profile	463
Configuration Example	463
Configuration Verification	464
OAM Support	464
Bulk Statistics Support	464

CHAPTER 45

Paging Overload Protection 465

Feature Summary and Revision History	465
--------------------------------------	-----

Summary Data	465
Revision History	465
Feature Description	465
How it Works	466
Feature Configuration	466
Configuration Example	466
Configuration Verification	466
OAM Support	467
Bulk Statistics Support	467

CHAPTER 46
Paging Support 469

Feature Summary and Revision History	469
Summary Data	469
Revision History	469
Feature Description	469
Paging Initiation	470
Selecting a Paging Profile	470
Paging Procedure	471
Feature Configuration	473
Configuring the Operator Policy	474
Configuration Example	474
Configuration Verification	474
Configuring the Paging Map	475
Configuration Example	476
Configuration Verification	476
Configuring the Paging Profile	476
Configuration Example	476
Configuration Verification	477
Configuring the Paging Algorithm	477
Configuration Example	477
Configuration Verification	478
Configuring the Paging Priority	478
Configuration Example	478
Configuration Verification	478

AMF Paging Configuration Example 479

CHAPTER 47

gNB-Initiated Reset Procedure 483

Feature Summary and Revision History 483

Summary Data 483

Revision History 483

Feature Description 483

How it Works 484

CHAPTER 48

Periodic Registration Support 485

Feature Summary and Revision History 485

Summary Data 485

Revision History 485

Feature Description 485

How it Works 486

Call Flows 486

Periodic Registration without Authentication Call Flow 486

Periodic Registration with Authentication Call Flow 487

Feature Configuration 489

Configuring the T3512 Timer 489

Configuring Authentication Enable 489

OAM Support 490

Bulk Statistics Support 490

CHAPTER 49

Relative Capacity Configuration Update 491

Feature Summary and Revision History 491

Summary Data 491

Revision History 491

Feature Description 491

How it Works 492

Call Flows 492

AMF Configuration Updates Call Flow 492

Feature Configuration 494

Configuration Example 495

Configuration Verification 495

CHAPTER 50

Retrieving IMEI from the UE 497

Feature Summary and Revision History 497

Summary Data 497

Revision History 497

Feature Description 497

How it Works 498

Call Flows 498

Registration Procedure Call Flow 498

Idle or Connected Mode Mobility Call Flow 499

Standards Compliance 501

Viewing the Retrieved IMEI 501

OAM Support 501

Bulk Statistics Support 501

CHAPTER 51

Roaming Support 503

Feature Summary and Revision History 503

Summary Data 503

Revision History 503

Feature Description 503

N9 and S8 Roaming 504

Feature Description 504

How it Works 504

Call Flows 505

Standards Compliance 506

Feature Configuration 507

Configuring the LBO 507

Configuring the MNC bits in SUPI 508

Configuring the GUAMI for AMF Selection 508

Configuring the 5GC Inter-PLMN Roaming 509

CHAPTER 52

SCTP Multihoming and Stack Parameters Support 511

Feature Summary and Revision History 511

Summary Data	511
Revision History	511
Stream Control Transmission Protocol (SCTP) Multihoming	512
Feature Description	512
Limitations	512
SCTP Multihoming and Stack Parameters Support	513
Feature Description	513
How it Works	514
Feature Configuration	514
Configuring Multiple SCTP and Protocol Pod Pairs	514
Configuring SCTP Endpoint Parameters	517

CHAPTER 53

Service Area Restriction	521
Feature Summary and Revision History	521
Summary Data	521
Revision History	522
Service Area Restriction	522
Feature Description	522
How it Works	522
UDM based Service Area Restrictions	522
Enforcing Service Area Code Restrictions at AMF	523
Configuring Local Cause Code Mapping for Service Area	525
Limitations	526

CHAPTER 54

Service Request Procedure	527
Feature Summary and Revision History	527
Summary Data	527
Revision History	527
Feature Description	527
Limitations	528
How it Works	528
Call Flows	528
UE Triggered Service Request	528
OAM Support	531

Statistics 531

CHAPTER 55

Session Timers 533

Feature Summary and Revision History 533

Summary Data 533

Revision History 533

Feature Description 534

How it Works 535

Call Flows 535

T3346 Call Flow 535

T3502 Call Flow 536

T3512 Call Flow 537

T3522 Call Flow 538

T3550 Call Flow 539

T3555 Call Flow 540

T3560 Call Flow 541

T3570 Call Flow 542

Tidle Timer Call Flow 543

Procedural Timer Call Flow 544

Standards Compliance 545

Feature Configuration 546

Configuring the 3GPP Timers 546

Configuring the Non-3GPP Timers 548

Configuring the IDLE Timer 549

Configuring the Procedural Timer 549

CHAPTER 56

SMF Feature Updates without SMF IEs 551

Feature Summary and Revision History 551

Summary Data 551

Revision History 551

Feature Description 551

Feature Configuration 552

Configuration Example 552

CHAPTER 57	SMS over the Non-Access Stratum Procedures	553
	Feature Summary and Revision History	553
	Summary Data	553
	Revision History	553
	Feature Description	554
	How it Works	554
	Notifications using the UE Configuration Update Command	555
	Paging	555
	Failure Handling	555
	Standards Compliance	556
	Limitations	556
	Feature Configuration	556
	Configuring AMF to send SMS over NAS	557
	Configuring NRF Discovery for SMSF	557
	Configuring Failure Handling	558
	Configuring the Paging Profile	559
	Configuring Paging for the UDM Notifications	559
	Configuring the Time Zone	559
	Configuration Example	560
	Configuration Example	561
CHAPTER 58	S-NSSAI based SMF Selection	563
	Feature Summary and Revision History	563
	Summary Data	563
	Revision History	563
	Feature Description	563
	Feature Configuration	564
	Configuration Example	564
	Configuration Verification	564
CHAPTER 59	Stateless NGAP Protocol EP Deployment	565
	Guidelines for Stateless Protocol EP Deployment	566
	Enable Stateless Protocol EP Deployment	566

Scale Stateless Protocol EP Deployment 566

CHAPTER 60

Steering of Roaming, Roaming Restrictions, and Operator Policy Support 569

Feature Summary and Revision History 569

Summary Data 569

Revision History 569

Feature Description 570

Relationships 570

Feature Configuration 570

Steering of Roaming 571

How it Works 571

Call Flows 571

Standards Compliance 575

Limitations 575

Feature Configuration 575

Configuring the Core Network Type Restriction 576

Configuring the 5GC Inter-PLMN Roaming 576

Configuring the Idle Mode for Steering 577

OAM Support 577

Statistics for Steering 577

Roaming Restriction and Operator Support 578

How it Works 578

Standards Compliance 578

Limitations 579

Relationships 579

UDM Subscription 579

Restrictions Enforcement at AMF 581

Mobility Restriction IEs 583

Feature Configuration 585

Configuring the RAT Restriction 585

Configuring the RAT Type Restriction 585

OAM Support 586

Roaming Restriction Statistics 586

Operator Policy 587

How it Works	587
Call Flows	587
Relationships	590
Subscriber Maps	590
Operator Policy Selection	590
Feature Configuration	590
Configuring under AMF Services	590
Configuring RAT Restrictions under Call Control Policy	591
Configuring Core Network Restrictions under Call Control Policy	591

CHAPTER 61	Subscription Concealed Identifier Profile	593
	Feature Summary and Revision History	593
	Summary Data	593
	Revision History	593
	Feature Description	594
	How it Works	594

CHAPTER 62	TLS Transport Support	597
	Feature Summary and Revision History	597
	Summary Data	597
	Revision History	597
	Feature Description	597
	Feature Configuration	598
	Configuring the Client Certificates	598
	Configuring the Server Certificates	598
	Enabling the TLS	599
	Configuration Verification	599
	Troubleshooting Information	599
	Trouble Ticket Data Collection	599

CHAPTER 63	UE Context Transfer Support	601
	Feature Summary and Revision History	601
	Summary Data	601
	Revision History	601

Feature Description	602
How It Works	603
Call Flows	603
UE Context Transfer Call Flow	603
Limitations	604
Feature Configuration	605
Configuration Example	605

CHAPTER 64	UE NITZ Display: Network Identity and Time Zone	607
	UE NITZ Display: Feature Description	607
	NITZ Configuration	608
	Configure Timezone and DST at TAI-Group and TAI-list Level	608
	Configure Network Name at TAI-Group and TAI-list Level	609
	Verify NITZ Configuration	610

CHAPTER 65	UE Configuration Management Procedures	613
	Feature Summary and Revision History	613
	Summary Data	613
	Revision History	613
	Feature Description	614
	How it Works	614
	TAI List Changes	615
	Call Flows	615
	Sending the New GUTI to UE Call Flow	615
	UE Configuration Update Call Flow	616
	UDM Notification Interaction Call Flow	617
	Standards Compliance	618
	Configuring Support for UE Configuration Update Command	618
	Configuring New GUTI Allocation	618
	Enabling UE Configuration Update	618
	Configuring Paging	619
	Configuring the Paging Feature	619
	Configuring the Paging Profile	620
	Configuring AMF to Page the New TAI List	620

Configuring the T3555 Timer	621
Enabling the Tidle Timer for Inactive UEs in the Connected Mode	621
OAM Support	621
Statistics	622

CHAPTER 66

Voice over New Radio (VoNR) Support 623

Feature Summary and Revision History	623
Summary Data	623
Revision History	624
Feature Description	624
Voice over New Radio (VoNR) Support	624
Feature Description	624
How it Works	625
Call Flows	625
Standards Compliance	627
Limitations	627
Feature Configuration	628
Configuring Support to Indicate IMS VoPS Support	628
Configuring the TAL-level IMS VoPS	628
OAM Support	629
Statistics	629
Emergency Services	629
Feature Description	629
How it Works	629
Call Flows	630
Standards Compliance	631
Limitations	631
Feature Configuration	631
Configuring Emergency Profile	632
Associating the Emergency Profile with the AMF Services or Global Configuration	632
Configuration Verification	633
PDN Creation, Modification, and Release	634
Feature Description	634
How it Works	634

Standards Compliance	635
Call Flows	635
Feature Configuration	636
Configuring the PCSF Restoration Feature	636
Configuring the IMS for DNN	636
Configuring the Query Selection Parameter	637
Emergency Voice Fallback	637
Feature Description	637
How it Works	637
Call Flows	637
Feature Configuration	641
Configuration Example	642
Configuration Verification	642

CHAPTER 67
Xn Handover 643

Feature Summary and Revision History	643
Summary Data	643
Revision History	643
Feature Description	643
Supported Scenarios	644
How it Works	644
Call Flows	644
Xn Handover Call Flow	644
OAM Support	645
Bulk Statistics Support	645

CHAPTER 68
Troubleshooting 647

Using CLI Data	647
show subscriber	647
clear subscriber	647
Monitor Subscriber	648
Feature Description	648
Configuring the Monitor Subscriber	648
Limitations	649

- Not Supported 649
- Logs 649
 - Feature Description 649
 - Error 650
 - Warn 650
 - Info 651
 - Debug 651
 - Trace 651
 - How it Works 651
 - Log Tags 652
- Frequently Encountered Scenarios 652
 - Geo-Replication Pod in Pending State 652

CHAPTER 69

- Sample AMF Configuration 655
 - Sample Configuration 655



About this Guide



Note The documentation set for this product strives to use bias-free language. For purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. While any existing biased terms are being substituted, exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

This preface describes the *Ultra Cloud Core 5G Access and Mobility Management Function - Configuration and Administration Guide*, the document conventions, and the customer support details.

- [Conventions Used, on page xxxvii](#)
- [Contacting Customer Support, on page xxxviii](#)

Conventions Used

The following tables describe the conventions used throughout this documentation.

Notice Type	Description
Information Note	Provides information about important features or instructions.
Caution	Alerts you of potential damage to a program, device, or system.
Warning	Alerts you of potential personal injury or fatality. May also alert you of potential electrical hazards.

Typeface Conventions	Description
Text represented as a screen display	This typeface represents displays that appear on your terminal screen, for example: Login:

Typeface Conventions	Description
Text represented as commands	This typeface represents commands that you enter, for example: show ip access-list This document always gives the full form of a command in lowercase letters. Commands are not case sensitive.
Text represented as a command variable	This typeface represents a variable that is part of a command, for example: show card <i>slot_number</i> <i>slot_number</i> is a variable representing the applicable chassis slot number.
Text represented as menu or sub-menu names	This typeface represents menus and sub-menus that you access within a software application, for example: Click the File menu, then click New

Contacting Customer Support

Use the information in this section to contact customer support.

Refer to the support area of <http://www.cisco.com> for up-to-date product documentation or to submit a service request. A valid username and password are required to access this site. Please contact your Cisco sales or service representative for additional information.



CHAPTER 1

5G Architecture

- [Architectural Overview, on page 1](#)
- [Subscriber Microservices Infrastructure Architecture, on page 2](#)
- [Control Plane Network Function Architecture, on page 4](#)

Architectural Overview

The Ultra Cloud Core is Cisco's solution supporting 3GPP's standards for 5G new radio (NR) standalone (SA) mode. These standards define various network functions (NFs) based on the separation of control plane (CP) and user plane (UP), such as CUPS. This separation enhances network performance and capabilities.

Control Plane Network Functions


The Ultra Cloud Core's CP-related NFs use a common architecture with the following tenets:

- Cloud-scale—Fully virtualized for simplicity, speed, and flexibility.
- Automation and orchestration—Optimized operations, service creation, and infrastructure.
- Security—Multiple layers of security across the deployment stack from the infrastructure through the NF applications.
- API exposure—Open and extensive for greater visibility, control, and service enablement.
- Access agnostic—Support for heterogeneous network types (for example 5G, 4G, 3G, Wi-Fi, and so on).

Control plane NFs are designed as containerized applications, such as microservices. They deploy through the Subscriber Microservices Infrastructure (SMI).

The SMI defines the common application layers for functional aspects of the NF such as life-cycle management (LCM), operations and management (OAM), and packaging.

Figure 1: Ultra Cloud Core CP Architectural Components

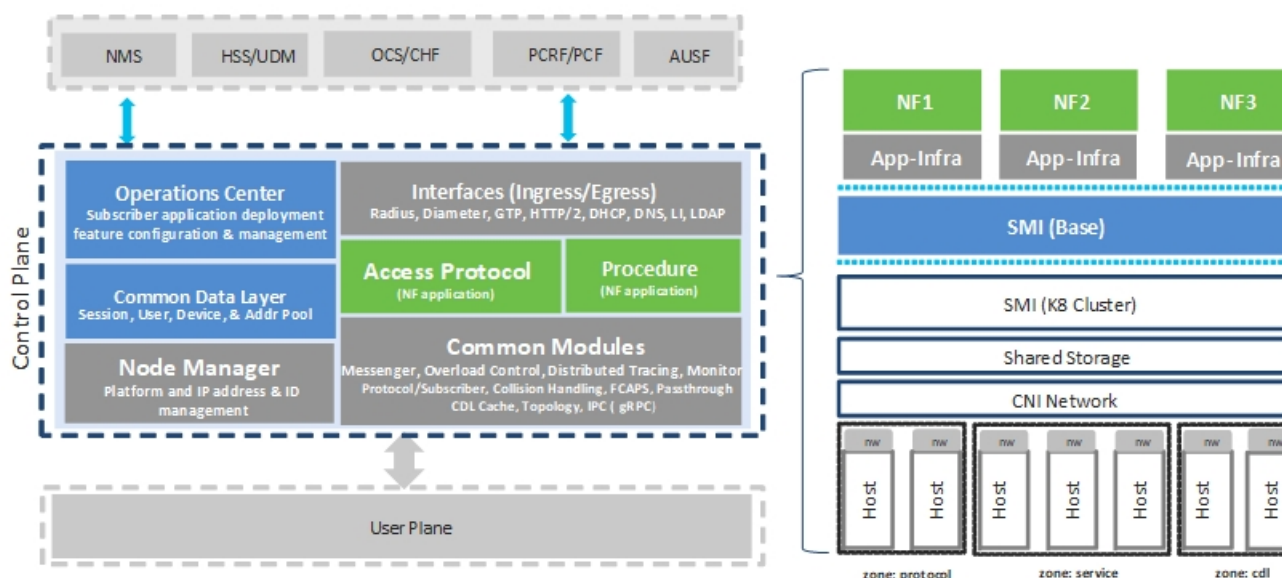

User Plane Network Function

The 5G UP NF within the Ultra Cloud Core is the User Plane Function (UPF). Unlike the CP-related NFs, The 5G UPF uses the same Vector Packet Processing (VPP) technology as the Cisco 4G CUPS architecture. This commonality delivers a consistent set of capabilities between 4G and 5G, such as:

- Ultrafast packet forwarding.
- Extensive integrated IP Services such as Subscriber Firewall, Tethering, Deep-Packet Inspection (DPI), Internet Content Adaption Protocol (ICAP), Application Detection and Control (ADC), and header enrichment (HE).
- Integrated third-party applications for traffic and TCP optimization.

Subscriber Microservices Infrastructure Architecture

The Ultra Cloud Core (UCC) Subscriber Microservices Infrastructure (SMI) is a layered stack of cloud technologies. It enables rapid deployment and seamless life-cycle operations for microservices-based applications:


The SMI stack consists of the following components:

- SMI Cluster Manager—Creates the Kubernetes (K8s) cluster, creates the software repository, and provides ongoing LCM for the cluster, including deployment, upgrades, and expansion.

- **Kubernetes Management**—Includes the K8s primary and etcd functions, which provide LCM for the NF applications that are deployed in the cluster. This component also provides cluster health monitoring and resources scheduling.
- **Common Execution Environment (CEE)**—Offers utilities and OAM functionalities for Cisco Cloud native NFs and applications. These include licensing and entitlement functions, configuration management, and telemetry. It also provides alarm visualization, logging management, and troubleshooting utilities. Also, it provides consistent interaction and experience for all customer touch points and integration points in relation to these tools and deployed applications.
- **Common Data Layer (CDL)**—Provides a high performance, low latency, stateful data store, designed specifically for 5G and subscriber applications. This next generation data store offers high availability in local or geo-redundant deployments.
- **Service Mesh**—Provides sophisticated message routing between application containers, enabling managed interconnectivity, extra security, and the ability to deploy new code and new configurations in low risk manner.
- **NB Streaming**—Provides Northbound Data Streaming service for billing and charging systems.
- **NF or Application Worker Nodes**—The containers that comprise an NF application pod.
- **NF or Application Endpoints (EPs)**—The NFs or applications and their interfaces to other entities on the network
- **Application Programming Interfaces (APIs)**—Provides various APIs for deployment, configuration, and management automation.

The following figure depicts how these components interconnect to comprise a microservice-based NF or application.

Figure 2: SMI Components

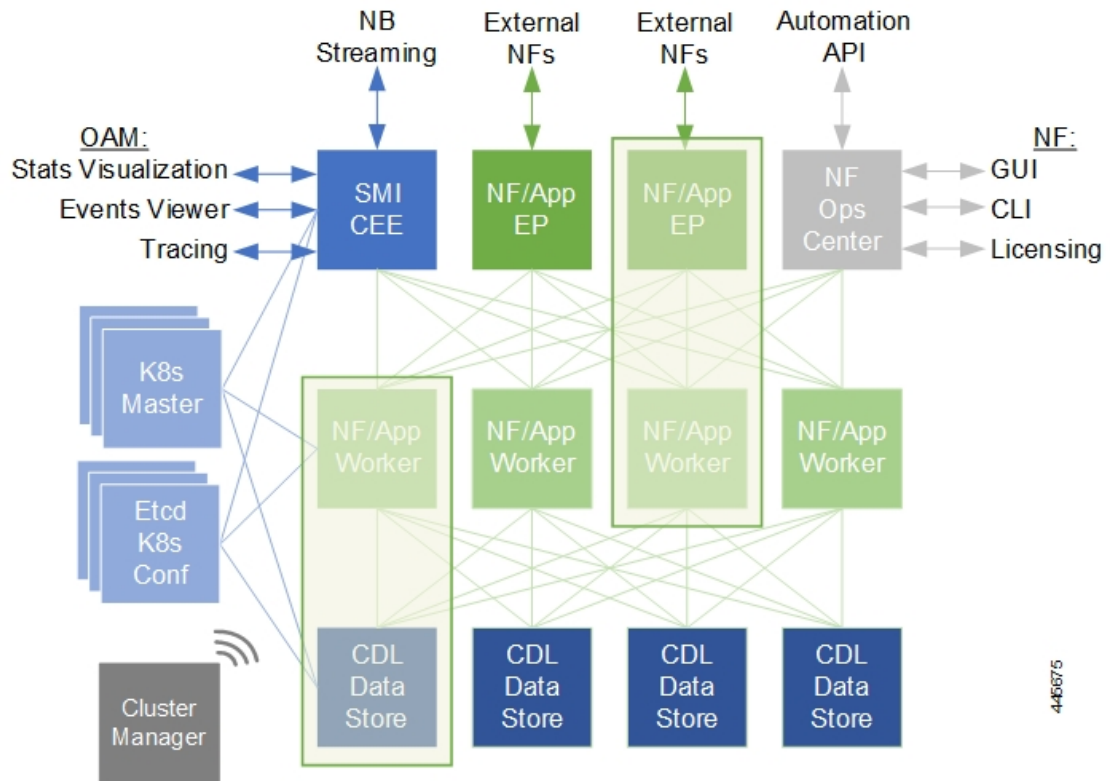


For more information on SMI components, see [Ultra Cloud Core Subscriber Microservices Infrastructure](#) and the related-documentation at *Deployment Guide > Overview* chapter.

Control Plane Network Function Architecture

Control plane (CP) NFs use a three-tiered architecture. This architecture leverages stateful or stateless capabilities in cloud native environments. The architectural tiers are as follows:


- **Protocol Load Balancer Services**—These are stateless microservices that are primarily responsible for dynamic discovery of application containers as well as for protocol proxy and termination. These include traditional 3GPP protocols and new protocols that are introduced with 5G.
- **Applications Services**—Responsible for implementing the core application or business logic, these are the stateless services that render the actual application based on the received information. This layer may contain varying degrees of microservice granularity. Application services are stateless.
- **State management services**—Enable stateless application services by providing a common data layer (CDL) to store or cache state information (for example session and subscriber data). This layer supports various data storage technologies from in-memory caches to full-fledge databases.

Figure 3: Control Plan Network Function Tiered Architecture

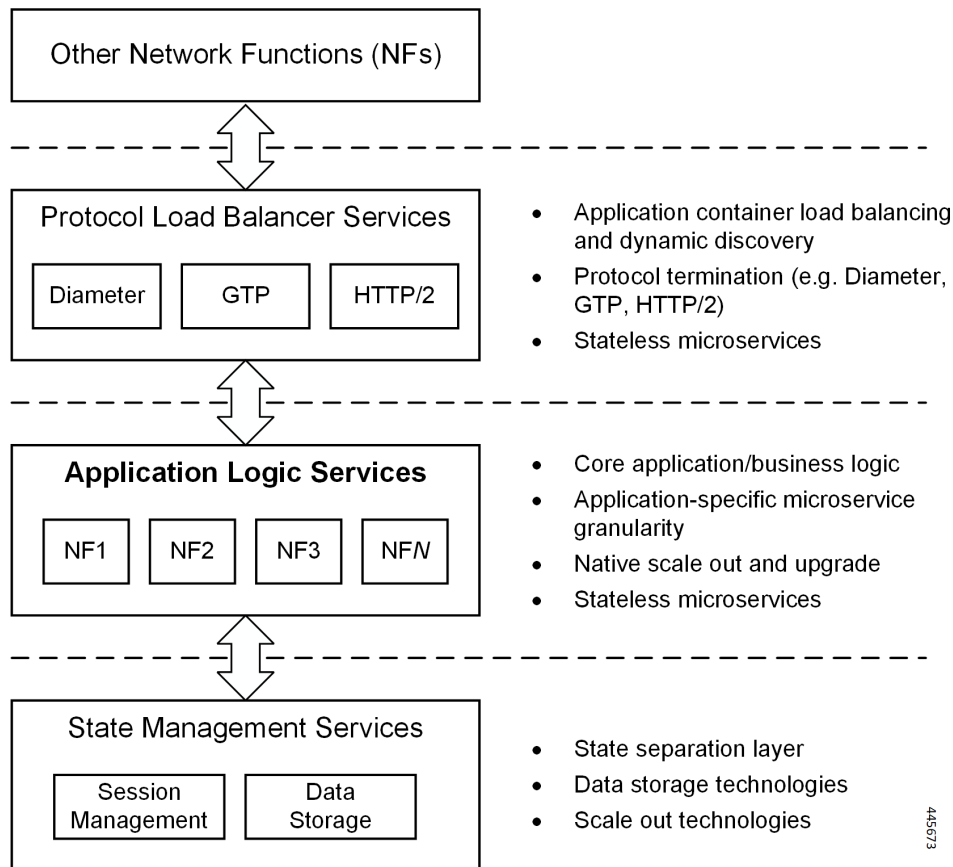

The three-tiered architecture on which Cisco CP NFs are designed fully support the 5G core (5GC) Service-based Architecture (SBA) defined by 3GPP. These NFs communicate using the Service-based Interface (SBI). They use HTTP/2 over TCP, as defined by 3GPP.

Figure 4: Cisco CP NF Service-based Architecture Support

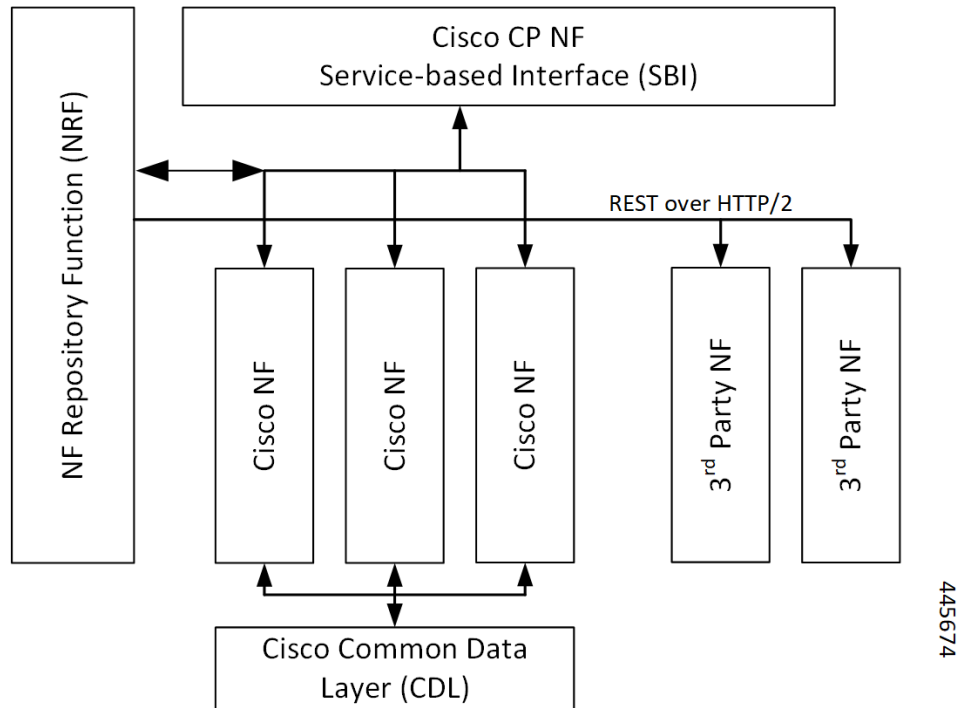

For more information on the Cisco network functions, see their corresponding network function documentation.



CHAPTER 2

5G AMF Overview

- [Product Description, on page 7](#)
- [Use Cases and Features, on page 8](#)
- [Deployment Architecture and Interfaces, on page 13](#)
- [Life Cycle of Control Plane Message, on page 16](#)
- [License Information, on page 18](#)
- [Standards Compliance, on page 18](#)

Product Description

The Access and Mobility Management Function (AMF) is one of the control plane network functions (NF) of the 5G core network (5GC). The 5G AMF, is an evolution of 4G MME, continuing with the Control Plane and User Plane Separation, and with further simplifications like moving the Sessions Management functions to the SMF and, providing common SBA interfaces.

Figure 5: EPC with Control Plane User Plane Separation Enhancement


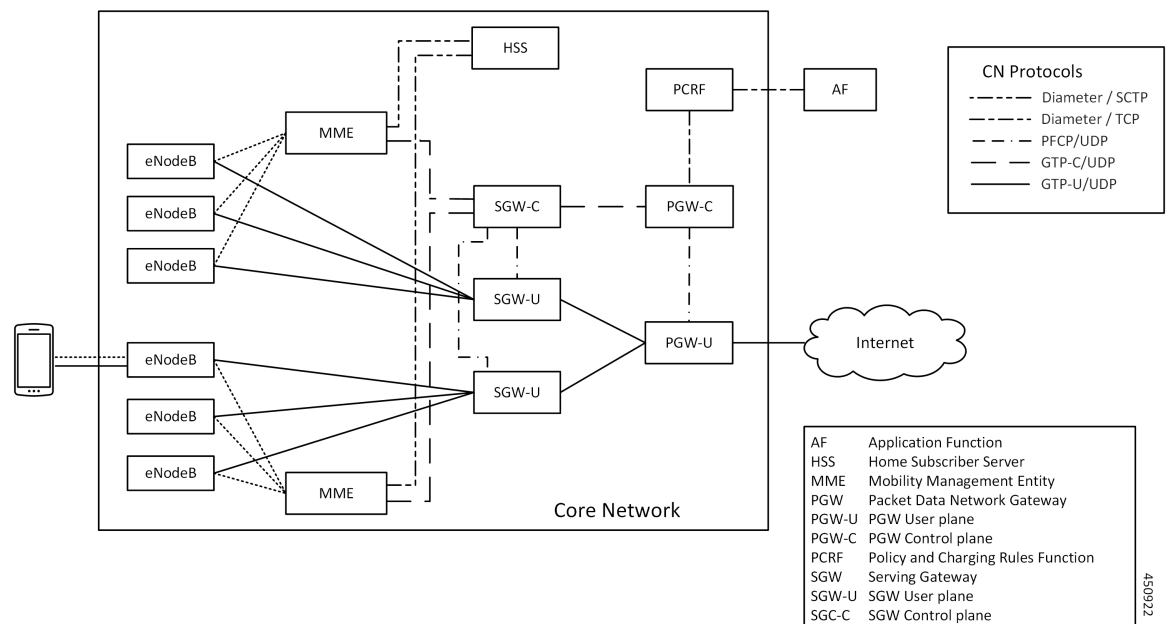


Figure 6: 5G Core Network - (a) Interface Representation, and (b) API Level Representation

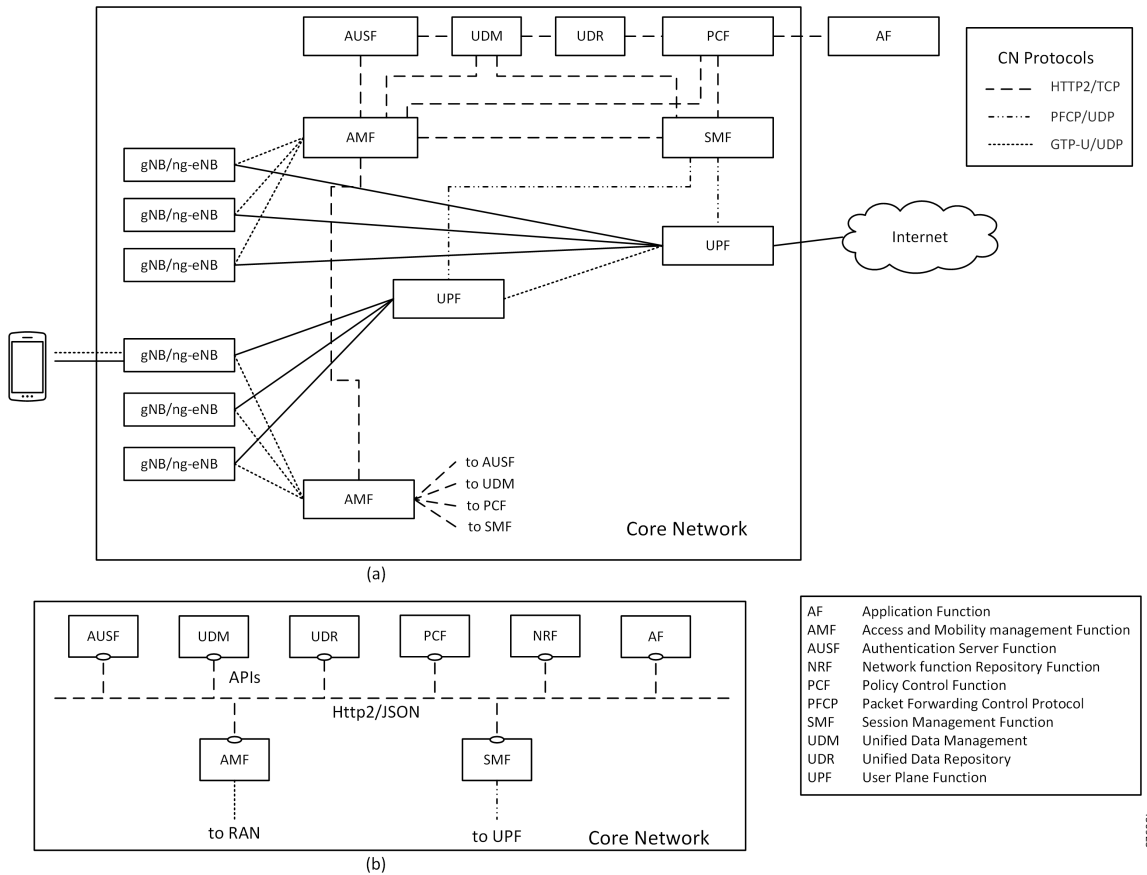

Use Cases and Features

The main functions of AMF are to support:

- Connection management, registration, and mobility management with UE.
- It terminates the control plane of 5G Radio Access Network and manages the register/deregister status/mobility of UEs.

This section describes the use cases that AMF supports.

4G EPC Interworking with N26

The N26 interface is used to transfer mobiles authentication and session context as the mobile moves between the two systems (MME <-> AMF). This scheme provides seamless mobility to an UE's IP session and hence enables seamless mobility to voice sessions between 4G and 5G. Both Idle and Connected mode handovers are supported.

The following features are related to this use case:

- [Internode Registration Support, on page 299](#)

- [N26-based Handover Procedures - EPC Interworking, on page 361](#)
- [N26 Stack Integration Support, on page 357](#)

AN Release Procedure

The AMF supports procedure to release the logical NGAP signalling connection and the associated N3 User Plane connections and RAN RRC signalling and resources.

- AN-initiated—The AMF supports RAN initiated release because of inactivity, UE initiated connection release, link failure or any other reason.
- AMF-initiated—The AMF supports AMF-initiated release because of:
 - IE value received as a part of prior procedure.
 - Optional timer expiry

The following feature is related to this use case:

- [Idle Entry Procedure, on page 279](#)

Base AMF Configuration

AMF base configuration provides a detailed view of the configurations that are required for making AMF operational. This includes setting up the infrastructure to deploy AMF, deploying AMF through SMI, and configuring the Ops Center for exploiting the AMF capabilities over time.

For more information on SMI, see the *Ultra Cloud Core SMI Cluster Deployer Operations Guide*.

The following feature is related to this use case:

- [Deploying and Configuring AMF through Ops Center , on page 21](#)

CMAS Support

The AMF supports interaction with Cell Broadcast Centre Function (CBCF) for public warning functionality and required messaging toward gNB as well as for realizing broadcast functionality.

The following feature is related to this use case:

- [CMAS Service Support, on page 123](#)

Encryption and Integrity Protection

The AMF supports both 5G-AKA and EAP-AKA' authentications. The following encryption and integrity protection algorithms enable encryption and integrity protection on the N1 interface:

- NEA0/NIA0
- 128-NEA1/128-NIA1
- 128-NEA2/128-NIA2

The following features are related to this use case:

- [EAP and AKA Authentication, on page 171](#)
- [Encryption and Integrity Protection, on page 175](#)

Handover Procedure

The AMF supports procedures to handover a UE from source NG-RAN to target NG-RAN.

- **Xn Handover**—The AMF supports Xn handover, used to handover a UE from source NG-RAN to target NG-RAN using Xn when the AMF is unchanged.
- **N2 Handover**—The AMF supports inter-AMF and intra-AMF N2 handovers. These can be triggered due to new radio conditions/load balancing, if there is no Xn connectivity between source and target NG-RAN or due to AMF change.

The following features are related to this use case:

- [N2 Handover Procedure, on page 351](#)
- [Xn Handover, on page 643](#)

Lawful Intercept

The Lawful Intercept (LI) feature enables law enforcement agencies (LEAs) to intercept subscriber communications. The LI functionality provides the network operator the capability to intercept and control messages of targeted mobile users.

For more details, contact your Cisco account representative.

NRF Register/Discovery

The AMF supports register/de-register/update with NRF. The AMF includes various query parameters, such as nf-type, plmn-info, slice-data, DNN, routing-indicator when it sends the NFDISCOVERY request towards the NRF during discovery of network elements. When AUSF, UDM, PCF, and SMF aren't locally configured, the AMF queries the NRF NF discovery API to discover them.

The following feature is related to this use case:

- [NRF \(Network Function Repository\) Services, on page 439](#)

OAM Support

The AMF provide counters and alarms/alerts for monitoring the AMF-specific functionality and features.

The following features are related to this use case:

- [Application-based Alerts, on page 95](#)
- [Deploying and Configuring AMF through Ops Center , on page 21](#)
- [Pods and Services Reference, on page 27](#)

- [Smart Licensing, on page 47](#)
- [AMF Rolling Software Upgrade, on page 77](#)
- [Troubleshooting, on page 647](#)

For more information, you can also see the following documents:

- *UCC 5G AMF - Metrics Reference*
- *UCC 5G AMF - CLI Reference*

PDU Session Establishment

The UE receives data services through a Protocol Data Unit (PDU) session, which is a logical connection between the UE and core network. In a PDU session establishment, the UE establishes a PDU session for accessing data services. Unlike EPS, where a default PDU session is always created while the UE registers to the network, in 5G, the UE establishes a PDU session when service is needed.

The following feature is related to this use case:

- [Compliance to 3GPP Specifications, on page 131](#)

PDU Session Modification

The PDU session modification procedure happens when one or several of the QoS parameters exchanged between the UE and the network are modified. Both UE- and SMF-initiated PDU session modifications are supported.

The following feature is related to this use case:

- [Compliance to 3GPP Specifications, on page 131](#)

PDU Session Release

The PDU session release procedure is used to release all the resources associated with a PDU Session. This can either be initiated by the UE or the SMF.

The following feature is related to this use case:

- [Compliance to 3GPP Specifications, on page 131](#)

Redundancy Support

The AMF support high availability for AMF specific pods and ensures session continuity in case of Pod failure.

The following feature is related to this use case:

- [High Availability Services, on page 273](#)

Roaming and Restriction Support

The AMF supports subscribers moving seamlessly in geographies beyond their network reach. Restriction control is also supported. Steering of Roaming (SoR) is supported at AMF.

The following feature is related to this use case:

- [Roaming Support, on page 503](#)

Service Request Procedure

The AMF supports the Service Request procedure used by a UE in CM-IDLE state or the 5GC to request the establishment for a secure connection to an AMF. The Service Request procedure is also used when the UE is in CM-IDLE and in CM-CONNECTED state to activate a User Plane connection for an established PDU Session.

- **UE Triggered**—The AMF supports UE in Idle state initiating Service request procedure for sending uplink signalling messages, user data or other reasons.
- **Network Triggered Service Request/Paging**—The AMF supports procedure when the network needs to send Paging Request to RAN based on trigger(s) from UDM, SMF and other NF nodes. The paging request triggers the UE to initiate Service Request procedure.

The following features are related to this use case:

- [Paging Support, on page 469](#)
- [Service Request Procedure, on page 527](#)

SMS over NAS

The AMF supports registration and deregistration for SMS over NAS. MO/MT SMS are supported in CM-IDLE/CM-CONNECTED state.

The following feature is related to this use case:

- [SMS over the Non-Access Stratum Procedures, on page 553](#)

UE Configuration Update Procedure

The AMF supports UE Configuration Update procedure for access and mobility management related parameters, such as GUTI, TAI-list.

The following feature is related to this use case:

- [UE Configuration Management Procedures, on page 613](#)

Deregistration

To enable UE to deregister from 5GS network.

- UE-init Deregistration—The deregistration procedure allows the UE to inform the network that it doesn't want to access the 5G data services.
- Network-init Deregistration—The deregistration can be initiated by the UDM if the subscription is withdrawn for the UE or UE has moved to another node. It can also be initiated by AMF based on OAM requirements.

The following feature is related to this use case:

- [Compliance to 3GPP Specifications, on page 131](#)

Registration

To enable UE tracking and reachability, a UE must register with the authorized network to receive services.

- Initial Registration—The AMF supports initial UE registration to 5GS network.
- Mobility Registration Update—The AMF supports mobility registration update:
 - When changing to new Tracking Area (TA) outside the UE's Registration Area in Connected/Idle state.
 - When the UE needs to update its capabilities or negotiated parameters.

AMF also supports registration with AMF change.

- Periodic Registration Update—The AMF supports periodic registration to the UE to confirm its availability. The procedure is controlled in the UE by the periodic registration update timer, T3512. The value of the T3512 timer is sent by the AMF to the UE in the Registration Accept message. The UE registers periodically as per the T3512 timer interval.
- Emergency Registration—The AMF supports Emergency Registration without authentication/subscription.

The following feature is related to this use case:

- [Compliance to 3GPP Specifications, on page 131](#)


Deployment Architecture and Interfaces

The Cisco AMF is a part of the 5G core network functions portfolio with a common mobile core platform architecture. The core network functions include Session Management Function (SMF), Network Repository Function (NRF), Policy Control Function (PCF), Network Slice Selection Function (NSSF), and User Plane Function (UPF).

AMF Architecture

The software architecture of the AMF is shown in the following diagram.

Figure 7: AMF Architecture

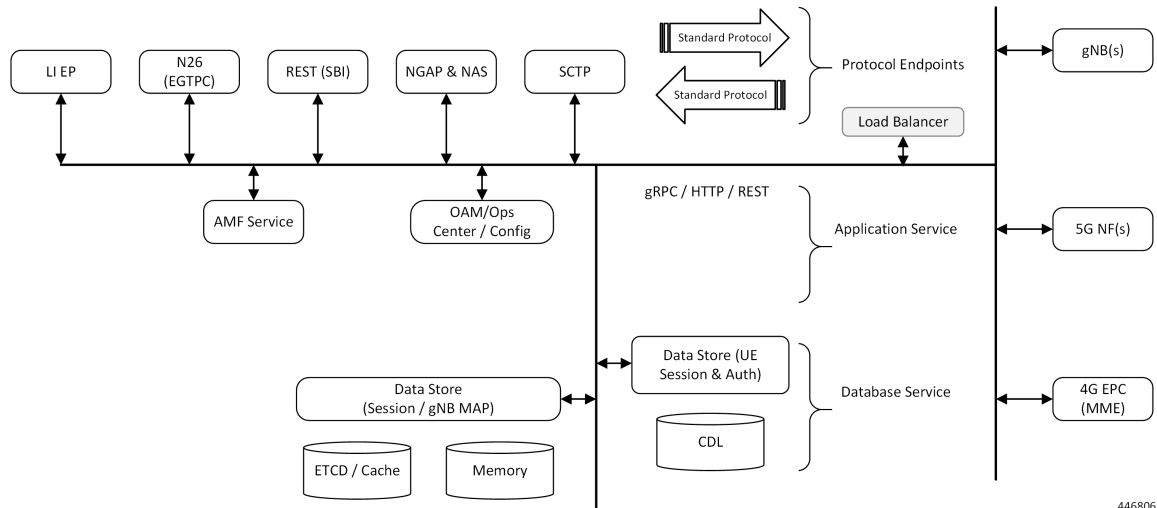

446806

The SCTP endpoint (EP) pod type supports the SCTP interface between the AMF and gNB. Only a single SCTP EP pod is run at a time. In addition to a GUAMI, the SCTP bind address is also unique to an AMF. If multiple SCTP EPs are run, they have to bind to different SCTP addresses, at which time they would not be part of the same AMF.

The SCTP EP converts each message into a GRPC message with the SCTP Payload. Unlike TCP, SCTP messages are delimited by the protocol, so there is no other knowledge that the SCTP EP needs to figure out message boundaries.

The NGAP EP or Node Manager provides termination for NGAP messages. Node Manager terminates the handling of all NGAP messages from a gNB. All messages from gNB are handled by a single Node Manager, but one Node Manager can handle messages from multiple gNBs. This allows a Node Manager to manage the state of both gNB, and one connection between a UE, gNB and AMF. If messages from the same gNB were distributed across multiple instances of Node Manager, there is no single entity in the AMF that is responsible for the state of a gNB in the AMF.

The AMF Service pods implement the logic that is necessary to provide Access and Mobility functions to the UE. This includes handling registration, handover and PDU session related procedures.

AMF Deployment

Table 1: Feature History

Feature Name	Release Information	Description
AMF Deployment on Four Servers	2024.03.0	<p>AMF now supports deploying a single AMF instance across a four-server configuration using M5 servers. This setup includes three master servers and one worker server.</p> <p>This deployment provides an enhanced scalability and reliability with the AMF instance distributed across the available M5 servers.</p>

The AMF deployment supports standalone mode. In this mode, each NF together with the required microservices is deployed in the same namespace in Kubernetes.

Supported Interfaces

This section lists the interfaces supported between the AMF and other network functions in the 5GC.

- N1 - Reference point between UE and AMF.
- N2 - Reference point between R(AN) and AMF.
- N8 - Reference point between AMF and UDM.
- N11 - Reference point between AMF and SMF.
- N12 - Reference point between AUSF and AMF.
- N14 - Reference point between AMF and AMF.
- N15 - Reference point between AMF and PCF.
- N17 - Reference point between AMF and EIR.
- N20 - Reference point between AMF and SMSE.
- N22 - Reference point between AMF and NSSF.
- N50 - Reference point between AMF and CBCF.
- NL1 - Reference point between AMF and LMF.
- NL2 - Reference point between AMF and GMLC.
- X1 - Reference point between AMF and ADMF.
- X2 - Reference point between AMF and MDF.
- Nnrf - Reference point between AMF and NRF.

Life Cycle of Control Plane Message

This call flow uses initial registration by a UE at the AMF using a GUTI assigned by an MME. All the steps in the call flow are not shown. The procedure level call flow has all the messages. The intent here is to show all the components, and the actions that are taken by each component.

Figure 8: End-to-End Registration by an UE Call Flow

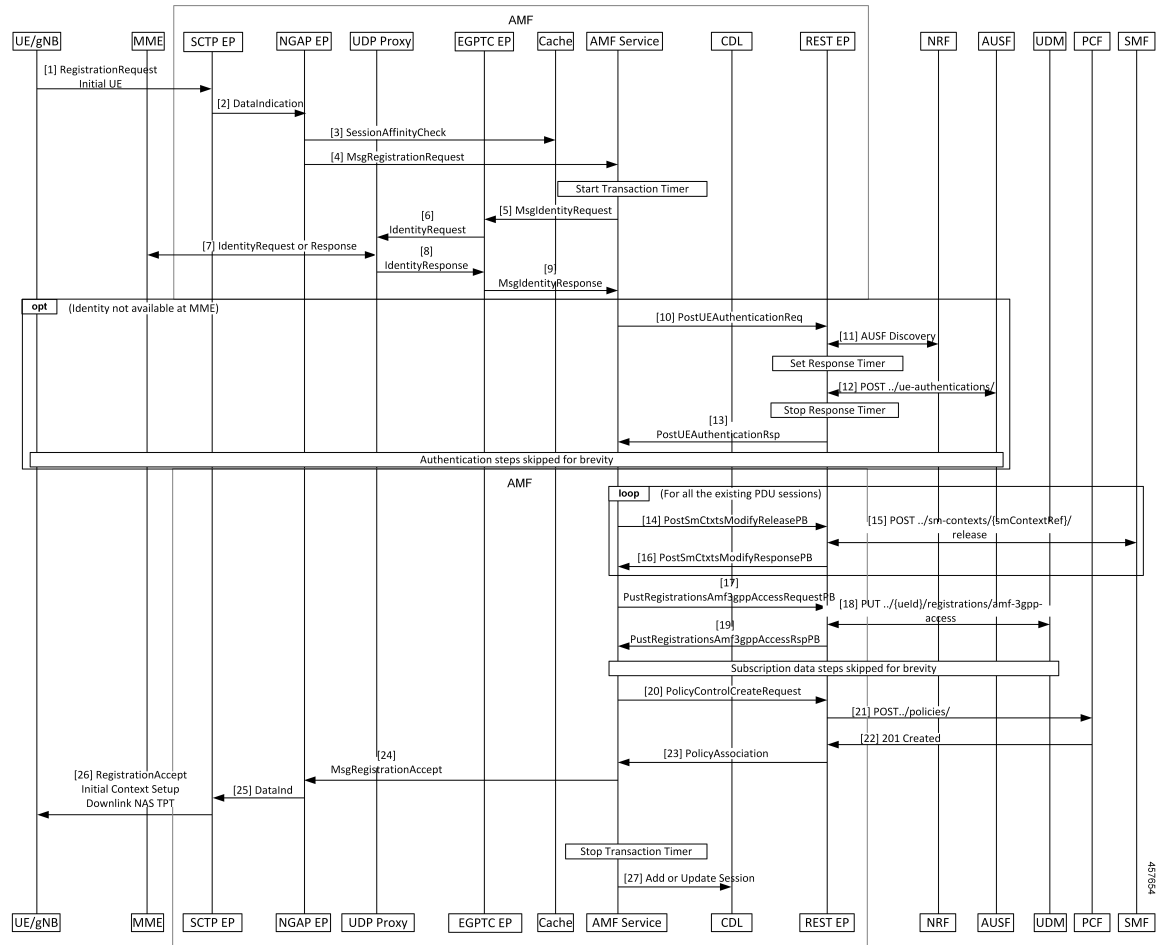


Table 2: End-to-End Registration by an UE Call Flow Description

Step	Description
1	The UE sends an Initial Registration Request to the gNB, which sends it to the AMF in an Initial UE message.
2	On the AMF, the message reaches the Sctp Endpoint (EP), which terminates the Sctp protocol and extracts the payload. It sends a DataInd GRPC message to the NGAP EP.

Step	Description
3	The NGAP EP parses the request. Both NGAP message parsing and NAS parsing are performed by the NGAP EP. It takes the ID that came in the initial message, and checks for any existing state in any AMF service by looking up the Session Affinity Cache.
4	To optimally serve the UE, the AMF maintains affinity of subscriber with service pod internally. If there's session affinity information for the UE, the NGAP EP forwards the message to that AMF service pod. Otherwise, it load balances the request to any available AMF service pod.
5	The AMF service finds the MME to check the identity of the UE. Currently, the MME information is locally configured. The AMF service sends this request to the EGTPC EP.
6	The EGTPC EP forwards the request to the UDP proxy after a transaction ID has been allocated.
7	The UDP proxy forwards this message to the MME and gets a response.
8	The response from the MME is forwarded to EGTPC EP. The EGTPC EP does the transaction matching for the request.
9	The identity response is sent to the AMF service.
10	If the security context is not present in the response from the MME, the AMF service decides to authenticate the UE. The authentication procedure is started by sending a AuthenticationRequest to the REST EP.
11	The REST EP handles all the client and server requests for the AMF, and all NRF interactions. REST EP makes a query to the NRF to find the AUSF to serve the UE. In further steps, the interaction with the NRF to resolve UDM and PCF are skipped.
12	The REST EP sends an Authentication Information Request to the AUSF and gets a response.
13	The response from the AUSF is forwarded to the AMF service. The authentication procedure between the AMF service and the UE is not explained here.
14	If there is any vestigial PDU state for the UE in the SMF, the AMF clears the state. The AMF service sends a message to REST EP for each SMF that needs to be cleared of state.
15	On the REST EP, there is no NRF interaction for this message, and the REST EP forwards this to the SMF identified in the request from the AMF service.
16	The response from the SMF is sent to the AMF service by REST EP.
17	The AMF service sends a UECM registration request to the REST EP.
18	The REST EP uses the NRF to resolve UDM selection for this request and sends a request to the UDM.
19	The response from the UDM is forwarded to the AMF Service. Retrieval of subscription data information and registering for notifications for change is not explained here.
20	The AMF service checks the configuration to see if an AM policy association needs to be done for this registration, and if it is, sends a request to the REST EP.
21	The REST EP does NRF discovery for PCF and sends a request to the PCF.

Step	Description
22	Response from the PCR is forwarded to the AMF service.
23	The AMF service sends a Registration Accept Message to NGAP.
24	The NGAP encodes both the NAS message and the NGAP message and sends a message to the SCTP EP.
25	The SCTP EP sends the message out to the gNB.
26	The rest of the message has been excluded.
27	The AMF sends an Add or Update Session message to the CDL.

License Information

The AMF supports Cisco Smart Licensing. For more information, see the *Smart Licensing* chapter in this document.

Standards Compliance

Cisco AMF complies with the 3GPP standards.

The AMF is one of the control plane (CP) NFs of the 5G core network. The AMF uses different interfaces to communicate with the other NFs or nodes. For example, the N11 interface exists between the AMF and Session Management Function (SMF). Each of the AMF interfaces comply to a specific version of the 3GPP specification depending on the compliance version supported.

Figure 9: Interfaces

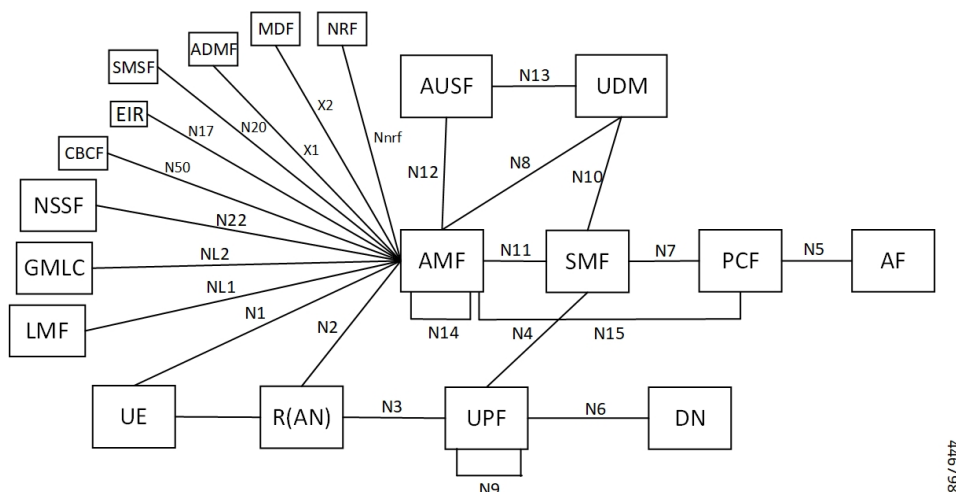


Table 3: Compliance Mapping

Interface	Relationship	3GPP Specification	Version
N1	Between UE and AMF	24.501	Compliance Support: 16.6.0
N2	Between R(AN) and AMF	38.413	Compliance Support: 16.6.0
N8	Between AMF and UDM	29.503	Compliance Support: 16.6.0
N11	Between AMF and SMF	29.502	Compliance Support: 16.6.0
N12	Between AUSF and AMF	29.509	Compliance Support: 16.6.0
N14	Between AMF and AMF	29.518	Compliance Support: 16.6.0
N15	Between AMF and PCF	29.507	Compliance Support: 16.6.0
N17	Between AMF and EIR	29.511	Compliance Support: 16.4.0
N20	Between AMF and SMSF	29.540	Compliance Support: 16.6.0
N22	Between AMF and NSSF	29.531	Compliance Support: 16.3.0
NL1	Between AMF and LMF	29.572 23.273	Compliance Support: 16.4.0
NL2	Between AMF and GMLC	29.515	Compliance Support: 16.4.0
X1	Between AMF and ADMF	103.221-1	Compliance Support: 1.8.1
X2	Between AMF and MDF	103.221-2 33.128	Compliance Support: 1.4.1 16.7.0
Nnrf	Between AMF and NRF	29.510	Compliance Support: 16.9.0



CHAPTER 3

Deploying and Configuring AMF through Ops Center

- [Feature Summary and Revision History, on page 21](#)
- [Feature Description, on page 22](#)
- [Deploying and Accessing AMF, on page 24](#)
- [Configuring Ops Center, on page 25](#)
- [Post Configuration Check, on page 25](#)

Feature Summary and Revision History

Summary Data

Table 4: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled-Always-on
Related Documentation	Not Applicable

Revision History

Table 5: Revision History

Revision Details	Release
First introduced.	2021.04.0

Feature Description

AMF deployment and configuration procedure involves deploying AMF through the Subscriber Microservices Infrastructure (SMI) Cluster Deployer and configuring the settings or customizations through the AMF Ops Center which is based on the Confd CLI.

The AMF configuration includes the NRF profile data configuration and the externally visible IP addresses and ports.

AMF Ops Center

The Ops Center is a system-level infrastructure that provides the following user interface to:

- Trigger the deployment of microservices by providing variable helm chart parameters. These chart parameters control the scale and properties of Kubernetes objects (deployment, pod, services, and so on) associated with the deployment.
- Push application specific configuration to one or more micro-services through Kubernetes configuration maps.
- Issue application-specific execution commands (such as show commands and clear). These commands:
 - Invoke APIs in application-specific pods
 - Display the information returned by the application on the user interface

To view the sample of the web-based CLI, use the following `show` command.

```
show running-config amf-services
amf-services aml
  amf-name          AMF
  validate-Tais     false
  relative-amf-capacity 127
  locality          LOC1
  operator-policy-name local
  guamis mcc 123 mnc 456 region-id 1 set-id 14 pointer 3
  tai-groups test1
exit
slices name s1
  sst 11
  sdt 111111
exit
slices name s2
  sst 2
  sdt 000003
exit
slices name s3
  sst 3
  sdt 000004
exit
exit
```

Prerequisites

Before deploying AMF on the SMI layer:

- Ensure that all the virtual network functions (VNFs) are deployed.

- Run the SMI synchronization operation for the AMF Ops Center and Cloud Native Common Execution Environment (CN-CEE).

AMF Sysctl Tuning Parameters and Hyperthreading Enable

In case the total number of AMF peers exceed 500, the following recommended sysctl parameter values should be configured:

```
net.ipv4.neigh.default.gc_thresh1=4096
net.ipv4.neigh.default.gc_thresh2=8192
net.ipv4.neigh.default.gc_thresh3=8192
net.ipv6.neigh.default.gc_thresh1=4096
net.ipv6.neigh.default.gc_thresh2=8192
net.ipv6.neigh.default.gc_thresh3=8192
```

1. Create a `sysctl.yaml` file and add the following contents:

```
cat sysctl.yaml

---
profiles:
  bios:
    name: cndp_default_settings
    description: "HyperThreading Enabled CIMC BIOS settings for CNDP"
    pids:
      ULTM-C220-M5SX-CM:
        description: "HyperThreading Enabled CIMC BIOS settings for ULTM-C220-M5SX-CM"
        tokens:
          cpuPerformance: hpc
          cpuEnergyPerformance: balanced-performance
          eppProfile: Performance
          intelHyperThreadingTech: enabled
          packageCstateLimit: C0 C1 State
          usbPortInternal: disabled
          usbPortKvm: enabled
          usbPortRear: disabled
          usbPortSdCard: disabled
  linux:
    name: sysctl_settings
    sysctl:
      net.ipv4.neigh.default.gc_thresh1: 4096
      net.ipv4.neigh.default.gc_thresh2: 8192
      net.ipv4.neigh.default.gc_thresh3: 8192
      net.ipv6.neigh.default.gc_thresh1: 4096
      net.ipv6.neigh.default.gc_thresh2: 8192
      net.ipv6.neigh.default.gc_thresh3: 8192
      net.sctp.rto_max: 5000
```

2. Run the following commands:

```
tar -czvf sysctl.tgz ./sysctl.yaml
./sysctl.yaml

sha256sum sysctl.tgz
d3496cd26cbd7a35b06581ad4af7cd507b89000a34f6531b990edc4a14326e26 sysctl.tgz
```

3. Host `sysctl.yaml` file in any HTTP server accessible from the setup.
4. Add the new host-profile in cluster deployer Ops Center configuration.



Note Create a new host profile instance and link it to node. Do not update the existing one.

```
config
software host-profile sysctl
url http://209.165.200.230:9080/sysctl.tgz
allow-dev-image true
sha256 42b64b2860826136079e8c7146086fce3e98fd8933ef837e1484f2682abdb38f
exit
commit
```

5. Link the host profile in each of the nodes using the following in cluster deployer Ops Center:

```
config
clusters <cluster-name> nodes <node-name> host-profile sysctl
clusters <cluster-name> nodes <node-name> os tuned enabled
commit
```

6. After cluster sync is complete, verify whether the changes are complete on each server.

```
sysctl -a | grep -i net.ipv6.neigh.default.gc_thresh

net.ipv6.neigh.default.gc_thresh1 = 4096
net.ipv6.neigh.default.gc_thresh2 = 8192
net.ipv6.neigh.default.gc_thresh3 = 8192

sysctl -a | grep -i net.ipv4.neigh.default.gc_thresh

net.ipv4.neigh.default.gc_thresh1 = 4096
net.ipv4.neigh.default.gc_thresh2 = 8192
net.ipv4.neigh.default.gc_thresh3 = 8192

lscpu | grep Thread
Thread(s) per core: 2
```

Deploying and Accessing AMF

This section describes how to deploy AMF and access the AMF Ops Center.

Deploying AMF

The SMI platform is responsible for deploying and managing the Cloud Native 5G AMF application and other network functions.

For information on how to deploy AMF Ops Center on a vCenter environment, see *Deploying and Upgrading the Product* section in the *Ultra Cloud Core Subscriber Microservices Infrastructure — Operations Guide*.

For information on how to deploy AMF Ops Center on bare metal servers (currently Cisco UCS-C servers) environment, see *Operating the SMI Cluster Manager on Bare Metal* section in the *Ultra Cloud Core Subscriber Microservices Infrastructure — Operations Guide*.

Accessing the AMF Ops Center

You can connect to the AMF Ops Center through SSH or the web-based CLI console.

SSH

1. Log in to the Master node
2. SSH to Ops Center pod IP using the following command:


```
ssh admin@ops_center_pod_ip -p 2024
```

Web-based Console

1. Log in to the Kubernetes Master node
2. Run the following command:

```
kubectl get ingress <namespace>
```

Available ingress connections get listed.
3. Select the appropriate ingress and access the AMF Ops Center.
4. Access the following URL from your web browser:

```
cli.<namespace>-ops-center.<ip_address>.nip.io
```



Note By default, the Day 0 configuration is loaded into the AMF.

Configuring Ops Center

This section describes how to configure the AMF Ops center.

1. Log in to the Master node
2. SSH to Ops Center pod IP using the following command:

```
ssh admin@ops_center_pod_ip -p 2024
```
3. Copy the contents from the configuration file and paste it in the AMF Ops Center CLI to load the configuration.

```
config
  <Paste the contents from configuration file here>
commit
exit
```

Sample Configuration

You can use **show running-config** command to view the sample configuration that is provided only for reference. You must create and modify your own configuration file according to the specific needs of your deployment.

To check the sample configuration file, refer to [Sample Configuration, on page 655](#).

Post Configuration Check

You can use the following commands from the AMF Ops Center to check the AMF status after the configuration.

- **show system**
- **show helm**

Also, log in to the Master node and check the AMF pod health and running state, using the following command:

kubectl get pod -n *amf_namespace*.



CHAPTER 4

Pods and Services Reference

- [Feature Summary and Revision History, on page 27](#)
- [Feature Description, on page 28](#)
- [Associating Pods to the Nodes, on page 33](#)
- [Viewing the Status and Pod Details, on page 34](#)
- [Viewing the Service Summary and Details, on page 38](#)
- [Multiple Service Pods on Multiple Nodes, on page 42](#)
- [GTPC Protocol Endpoint Merge with UDP Proxy Bypass, on page 44](#)

Feature Summary and Revision History

Summary Data

Table 6: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled - Always-on For Multiple Service Pods on Multiple Nodes: Disabled – Configuration required to enable
Related Documentation	Not Applicable

Revision History

Table 7: Revision History

Revision Details	Release
Multiple Service Pods on Multiple Nodes	2023.02.0
First introduced.	2021.04.0


Feature Description

The AMF is built on the Kubernetes cluster strategy, which implies that it has adopted the native concepts of containerization, high availability, scalability, modularity, and ease of deployment. To achieve the benefits offered by Kubernetes, AMF uses the construct that includes the components such as pods and services.

Depending on your deployment environment, the AMF deploys the pods on the virtual machines that you have configured. Pods operate through the services that are responsible for the intrapod communications. If the machine hosting the pods fail or experiences network disruption, the pods are terminated or deleted. However, this situation is transient and AMF spins new pods to replace the invalid pods.

The following workflow provides a high-level visibility into the host machines, and the associated pods and services. It also represents how the pods interact with each other. The representation might defer based on your deployment infrastructure.

Figure 10: Communication Workflow of Pods

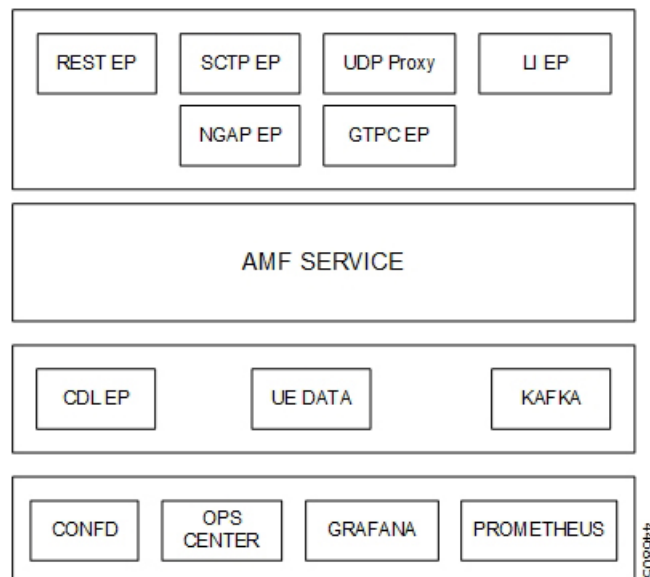

Pods

A pod is a process that runs on your Kubernetes cluster. Pod encapsulates a granular unit known as a container. A pod contains one or multiple containers.

Kubernetes deploys one or multiple pods on a single or multiple nodes which can be a physical or virtual machine. Each pod has a discrete identity with an internal IP address and port space. However, the containers within a pod can share the storage and network resources.

The following tables list the AMF pod names and the Kubernetes node names on which they are deployed depending on the labels that you assign. For information on how to assign the labels, see [Associating Pods to the Nodes](#), on page 33.



Note Maximum number of pods that can be configured per node is 256.



Note In case of separate CDL deployment, CDL pods are visible under CDL namespace.

Table 8: AMF Pods

Pod Name	Description	Kubernetes Node Name
base-entitlement-amf	Supports Smart Licensing feature.	OAM
cache-pod	Operates as the pod to cache any sort of system information that will be used by other pods as applicable.	Protocol
cdl-ep-session-c1	Provides an interface to the CDL.	Session
cdl-index-session-c1	Preserves the mapping of keys to the session pods.	Session
cdl-slot-session-c1	Operates as the CDL Session pod to store the session data.	Session
etcd-amf-etcd-cluster	Hosts the etcd for the AMF application to store information, such as pod instances, leader information, NF-UUID, endpoints, and so on.	OAM
georeplication	Contains business logic for Geographic Redundancy (Currently, GR is not fully supported in AMF).	Protocol
grafana-dashboard-cdl	Contains the default dashboard of CDL metrics in Grafana.	OAM
grafana-dashboard-amf	Contains the default dashboard of AMF-service metrics in Grafana.	OAM
gtpc-ep	Operates as GTPC endpoint of AMF.	Protocol
kafka	Hosts the Kafka details for the CDL replication.	Protocol
nodemgr	Performs node level interactions, such as N4 link establishment, management (heart-beat). It also generates unique identifiers, such as NGAP-ID, TMSI, GUTI and so on.	Service

Pod Name	Description	Kubernetes Node Name
oam-pod	Operates as the pod to facilitate Ops Center actions, such as show commands, configuration commands, monitor protocol monitor subscriber, and so on.	OAM
ops-center-amf-ops-center	Acts as the AMF Ops Center.	OAM
smart-agent-amf-ops-center	Operates as the utility pod for the AMF Ops Center.	OAM
amf-service	Contains main business logic of AMF.	Service
amf-rest-ep	Operates as REST endpoint of AMF for HTTP2 communication.	Protocol
amf-protocol-ep	Processes NGAP/NAS Protocol Messages.	Protocol
amf-gosctp-lb	Operates as SCTP endpoint for AMF.	Protocol
udp-proxy	Operates as proxy for all UDP messages. Owns UDP client and server functionalities.	Protocol
swift-amf-ops-center	Operates as the utility pod for the AMF Ops Center.	OAM
zookeeper	Assists Kafka for topology management.	OAM
li-ep	Responsible for handling LI-IRI events for AMF.	OAM

Services

The AMF configuration is composed of several microservices that run on a set of discrete pods. Microservices are deployed during the AMF deployment. AMF uses these services to enable communication between the pods. When interacting with another pod, the service identifies the pod's IP address to initiate the transaction and acts as an endpoint for the pod.

The following table describes the AMF services and the pod on which they run.



Note In case of separate CDL deployment, CDL related services are visible under CDL namespace.

Table 9: AMF Services and Pods

Service Name	Pod Name	Description
alert-frwd-ops-center	ops-center-amf-ops-center	Responsible for forwarding SNMP alerts.

Service Name	Pod Name	Description
amf-gosctp-lb	amf-gosctp-lb	Responsible for receiving incoming traffic over SCTP from N1 interface.
amf-nrf-service	amf-rest-ep	Responsible for providing API for NRF CLIs.
amf-protocol-ep	amf-protocol-ep	Responsible for inter-pod communication with amf-protocol-ep pod.
amf-rest-ep	amf-rest-ep	Responsible for inter-pod communication with amf-rest-ep pod.
amf-sbi-service	amf-rest-ep	Responsible for routing incoming SBI messages to REST-EP pods.
amf-service	amf-service	Responsible for inter-pod communication with amf-service pod.
base-entitlement-amf	ops-center-amf-ops-center	Supports Smart Licensing feature.
bgpspeaker-pod	georeplication-pod-0	Responsible for providing Geo replication support.
datastore-ep-session	cdl-ep-session	Responsible for the CDL session.
datastore-notification-ep	amf-rest-ep	Responsible for sending the notifications from the CDL to the smf-service through amf-rest-ep.
datastore-tls-ep-session	cdl-ep-session	Responsible for the secure CDL connection.
documentation	documentation	Responsible for the AMF documents.
etcd	etcd-cluster	Responsible for pod discovery within the namespace.
etcd-amf-ins1-etcd-cluster-0	etcd-cluster	Responsible for synchronization of data among the ETCD cluster.
etcd-amf-ins1-etcd-cluster-1	etcd-cluster	Responsible for synchronization of data among the ETCD cluster.
etcd-amf-ins1-etcd-cluster-2	etcd-cluster	Responsible for synchronization of data among the ETCD cluster.
grafana-dashboard-amf	grafana-dashboard-amf	Responsible for the default dashboard of AMF-service metrics in Grafana.
grafana-dashboard-cdl-cdl-amf	grafana-dashboard-cdl	Responsible for the default dashboard of CDL metrics in Grafana.

Service Name	Pod Name	Description
grafana-dashboard-etcd-amf	grafana-dashboard-etcd	Responsible for the default dashboard of ETCD metrics in Grafana.
gtpc-ep	gtpc-ep	Responsible for inter-pod communication with GTP-C pod.
kafka	kafka	Processes the Kafka messages.
local-ldap-proxy-amf-ins1-ops-center	ops-center-amf-ops-center	Responsible for leveraging Ops Center credentials by other applications, such as Grafana.
netconf-ops-center-amf-ins1-ops-center	ops-center-amf-ops-center	Responsible for providing/exposing netconf interface to configure AMF.
nodemgr	nodemgr	Responsible for inter-pod communication with nodemgr pod.
oam-pod	oam-pod	Responsible to facilitate Exec commands on the Ops Center.
ops-center-amf-ops-center	ops-center-amf-ops-center	Operates as the utility pod for the SMF Ops Center.
prometheus-rules-etcd	prometheus-rules-etcd	Responsible for the default Prometheus rules of ETCD in Prometheus.
smart-agent-amf-ops-center	smart-agent-amf-ops-center	Responsible for smart licensing.
ssh-ops-center-amf-ops-center	ops-center-amf-ops-center	To access AMF Ops Center using SSH IP.
zookeeper	zookeeper	Assists Kafka for topology management.
zookeeper-service	zookeeper	Assists Kafka for topology management.

Open Ports and Services

The AMF uses different ports for communication. The following table describes the default open ports and the associated services.

Table 10: Open Ports and Services

Port	Service	Usage
22	SSH	SMI uses TCP port to communicate with the virtual machines.
80	HTTP	SMI uses TCP port for providing Web access to CLI, Documentation, and TAC.
443	SSL/HTTP	SMI uses TCP port for providing Web access to CLI, Documentation, and TAC.

Port	Service	Usage
6443	HTTP	SMI uses port to communicate with the Kubernetes API server.
9100	jetdirect	SMI uses TCP port to communicate with the Node Exporter. Node Exporter is a Prometheus exporter for hardware and OS metrics with pluggable metric collectors. It allows you to measure various machine resources, such as memory, disk, and CPU utilization.
10250	SSL/HTTP	SMI uses TCP port to communicate with Kubelet. Kubelet is the lowest level component in Kubernetes. It is responsible for what is running on an individual machine. It is a process watcher or supervisor focused on active container. It ensures the specified containers are up and running.
10256	HTTP	SMI uses TCP port to interact with the Kube proxy. Kube proxy is a network proxy that runs on each node in your cluster. Kube proxy maintains network rules on nodes. These network rules allow network communication to your pods from network sessions inside or outside of your cluster.
2024	SSH	AMF Ops Center uses this port to provide the ConfD CLI access.
9090	HTTP	AMF REST endpoint pods use this port to expose the APIs to support NRF interface specific CLIs.
8090	HTTP	AMF REST endpoint pods use this port for routing incoming SBI messages to REST-EP pods.
8890	gRPC/HTTP	AMF REST endpoint pods use this port to receive timer notification from CDL.
3179	Tcpwrapped	SMI uses this TCP port for Calico(Kubernetes networking). Calico is used for routing the networking packets to pods.

In addition to the preceding ports, AMF uses the ports that are destined for SMI for routing information between hosts. For more information on SMI ports, see *Ultra Cloud Core Subscriber Microservices Infrastructure Operations Guide*.

Associating Pods to the Nodes

This section describes how to associate a pod to the node based on their labels.

After you have configured a cluster, you can associate pods to the nodes through labels. This association enables the pods to get deployed on the appropriate node based on the key-value pair.

Labels are required for the pods to identify the nodes where they must get deployed and to run the services. For example, when you configure the protocol-layer label with the required key-value pair, the pods are deployed on the nodes that match the key-value pair.

To associate pods to the nodes through the labels, use the following configuration:

```
config
  k8 label
    cdl-layer
      key key_value
      value value
    oam-layer
      key key_value
      value value
    protocol-layer
      key key_value
      value value
    service-layer
      key key_value
      value value
    sctp-layer
      key key_value
      value value
  end
```

NOTES:

- **label { cdl-layer { key key_value | value value } }**—Specify the key value pair for CDL.
- **oam-layer { key key_value | value value } }**—Specify the key value pair for OAM layer.
- **protocol-layer { key key_value | value value } }**—Specify the key value pair for protocol layer.
- **service-layer { key key_value | value value } }**—Specify the key value pair for the service layer.
- **sctp-layer { key key_value | value value } }**—Specify the protocol value. Example: For k8 label sctp-layer key value is smi.cisco.com/node-type-2 value protocol.



Note If you opt not to configure the labels, then AMF assumes the labels with the default key-value pair.

Viewing the Status and Pod Details

If the service requires extra pods, the AMF creates, and deploys those pods.

You can perform the following:

- View the list of pods that are participating in your deployment through the AMF Ops Center.
- Run the **kubectl** command from the Master node to manage the Kubernetes resources.

To view the comprehensive pod details, use the following command:

- **kubectl get pods -n amf_namespace pod_name -o yaml**

The pod details are available in YAML format. The output of this command results in the following information:

- The IP address of the host where the pod is deployed.
- The service and application that is running on the pod.
- The ID and name of the container within the pod
- The IP address of the pod
- The current state and phase in which the pod is.
- The start time from which the pod is in the current state.

Sample Output:

```
kubectl get pod -n amf-ins cache-pod-0 -o yaml
apiVersion: v1
kind: Pod
metadata:
  annotations:
    cni.projectcalico.org/podIP: 209.165.201.3/32
    cni.projectcalico.org/podIPs: 209.165.201.3/32,4141:4141::d32/128
    prometheus.io/port: "10080"
    prometheus.io/scrape: "true"
    sidecar.istio.io/inject: "false"
  creationTimestamp: "2021-10-16T18:03:32Z"
  generateName: cache-pod-
  labels:
    component: cache-pod
    controller-revision-hash: cache-pod-56dc45d7df
    release: amf-ins1-infra-charts
    statefulset.kubernetes.io/pod-name: cache-pod-0
  name: cache-pod-0
  namespace: amf-ins1
  ownerReferences:
  - apiVersion: apps/v1
    blockOwnerDeletion: true
    controller: true
    kind: StatefulSet
    name: cache-pod
    uid: 18dfdb38-ca20-47ab-b525-770be9ace57c
  resourceVersion: "5770907"
  uid: 088c4f8d-143b-4096-ad03-f95409c16db9
spec:
  affinity:
    nodeAffinity:
      requiredDuringSchedulingIgnoredDuringExecution:
        nodeSelectorTerms:
        - matchExpressions:
          - key: smi.cisco.com/node-type-2
            operator: In
            values:
            - protocol
  .
  .
  .
status:
  conditions:
  - lastProbeTime: null
    lastTransitionTime: "2021-10-16T18:03:47Z"
    status: "True"
    type: Initialized
  - lastProbeTime: null
    lastTransitionTime: "2021-10-16T18:04:52Z"
    status: "True"
```

```

    type: Ready
  - lastProbeTime: null
    lastTransitionTime: "2021-10-16T18:04:52Z"
    status: "True"
    type: ContainersReady
  - lastProbeTime: null
    lastTransitionTime: "2021-10-16T18:03:32Z"
    status: "True"
    type: PodScheduled
  containerStatuses:
  - containerID: docker://68f5c45ed73ee311a05a32be4fadca0cb9fda0742a01d303fe5115dfa7573a48

    image:
      docker:209.165.201.29.nip.io/amf.2021.04.m0.i80/mobile-cnat-app-infra/cache-pod/main/
      cache_pod:0.1.0-32e359a
      imageID:
        docker-pullable://docker.209.165.201.29.nip.io/amf.2021.04.m0.i80/mobile-cnat-app-infra/
        cache-pod/main/cache_pod@sha256:d2c82e1af506cf92c04d93f40ef8ca1dfcf830d457bfeabd4dc8aba7b63ce894

    lastState: {}
    name: cache-pod
    ready: true
    restartCount: 0
    started: true
    state:
      running:
        startedAt: "2021-10-16T18:03:49Z"
  hostIP: 209.165.201.29
  phase: Running
  podIP: 209.165.201.3
  podIPs:
  - ip: 209.165.201.3
  - ip: 4141:4141::d32
  qosClass: Burstable
  startTime: "2021-10-16T18:03:47Z"

```

To view the summary of the pod details, use the following command.

• **kubect1 get pods -n amf_namespace -o wide**

Sample Output:

```
kubect1 get pod -n amf-ins3 -o wide
```

NAME	READY	STATUS	RESTARTS
AGE IP NODE	NOMINATED	NODE	READINESS GATES
amf-ins3-amf-gosctp-lb-sctp-1-0	1/1	Running	0
2d16h 209.165.201.29 amf-cndp-tb27d-master-1	<none>		<none>
amf-ins3-amf-gosctp-lb-sctp-1-1	1/1	Running	0
2d16h 209.165.201.30 amf-cndp-tb27d-master-2	<none>		<none>
amf-ins3-amf-protocol-ep-default-0	2/2	Running	0
2d16h 192.203.42.85 amf-cndp-tb27d-master-2	<none>		<none>
amf-ins3-amf-protocol-ep-default-1	2/2	Running	0
2d16h 192.203.236.6 amf-cndp-tb27d-master-1	<none>		<none>
amf-ins3-amf-rest-ep-n0-0	2/2	Running	0
2d19h 192.203.236.55 amf-cndp-tb27d-master-1	<none>		<none>
amf-ins3-amf-rest-ep-n0-1	2/2	Running	0
2d19h 192.203.42.123 amf-cndp-tb27d-master-2	<none>		<none>
amf-ins3-amf-service-n0-0	2/2	Running	1 (2d19h ago)
2d19h 192.203.211.179 amf-cndp-tb27d-master-3	<none>		<none>
amf-ins3-amf-service-n0-1	2/2	Running	0
2d19h 192.203.211.131 amf-cndp-tb27d-master-3	<none>		<none>
amf-ins3-amf-service-n1-0	2/2	Running	1 (2d19h ago)

```

2d19h 192.203.236.62 amf-cndp-tb27d-master-1 <none> <none>
amf-ins3-amf-service-n1-1 2/2 Running 0
2d19h 192.203.236.63 amf-cndp-tb27d-master-1 <none> <none>
base-entitlement-amf-679fd785c-2zrnl 1/1 Running 0
3d12h 192.203.211.149 amf-cndp-tb27d-master-3 <none> <none>
cache-pod-0 1/1 Running 0
2d19h 192.203.236.50 amf-cndp-tb27d-master-1 <none> <none>
cache-pod-1 1/1 Running 0
2d19h 192.203.42.80 amf-cndp-tb27d-master-2 <none> <none>
etcd-amf-ins3-etcd-cluster-0 2/2 Running 0
3d11h 192.203.236.52 amf-cndp-tb27d-master-1 <none> <none>
etcd-amf-ins3-etcd-cluster-1 2/2 Running 0
3d11h 192.203.42.126 amf-cndp-tb27d-master-2 <none> <none>
etcd-amf-ins3-etcd-cluster-2 2/2 Running 0
3d11h 192.203.211.178 amf-cndp-tb27d-master-3 <none> <none>
georeplication-pod-0 1/1 Running 0
3d11h 209.165.201.31 amf-cndp-tb27d-master-2 <none> <none>
grafana-dashboard-amf-774bdd8b6d-6t6kw 1/1 Running 0
3d11h 192.203.211.130 amf-cndp-tb27d-master-3 <none> <none>
grafana-dashboard-etcd-amf-ins3-8597cf9fdc-72z7w 1/1 Running 0
3d11h 192.203.211.170 amf-cndp-tb27d-master-3 <none> <none>
gtpc-ep-n0-0 2/2 Running 0
2d19h 192.203.236.22 amf-cndp-tb27d-master-1 <none> <none>
gtpc-ep-n0-1 2/2 Running 0
2d19h 192.203.42.125 amf-cndp-tb27d-master-2 <none> <none>
li-ep-n0-0 2/2 Running 0
3d11h 192.203.42.108 amf-cndp-tb27d-master-2 <none> <none>
li-ep-n0-1 2/2 Running 0
3d11h 192.203.236.13 amf-cndp-tb27d-master-1 <none> <none>
nodemgr-n0-0 2/2 Running 1 (2d19h ago)
2d19h 192.203.236.44 amf-cndp-tb27d-master-1 <none> <none>
nodemgr-n0-1 2/2 Running 0
2d19h 192.203.211.150 amf-cndp-tb27d-master-3 <none> <none>
oam-pod-0 2/2 Running 0
3d11h 192.203.211.146 amf-cndp-tb27d-master-3 <none> <none>
ops-center-amf-ins3-ops-center-64479bd9d6-zqzzz 4/4 Running 0
3d12h 192.203.42.81 amf-cndp-tb27d-master-2 <none> <none>
prometheus-rules-etcd-57688b5657-5gv5z 1/1 Running 0
3d11h 192.203.211.175 amf-cndp-tb27d-master-3 <none> <none>
smart-agent-amf-ins3-ops-center-798d5f9884-zplrn 1/1 Running 0
3d12h 192.203.42.120 amf-cndp-tb27d-master-2 <none> <none>
udp-proxy-0 1/1 Running 0
2d19h 198.51.100.10 amf-cndp-tb27d-master-1 <none> <none>
udp-proxy-1 1/1 Running 0
2d19h 198.51.100.11 amf-cndp-tb27d-master-2 <none> <none>

```

States

Understanding the pod's state lets you determine the current health and prevent the potential risks. The following table describes the pod's states.

Table 11: Pod States

State	Description
Running	The pod is healthy and deployed on a node. It contains one or more containers

State	Description
Pending	The application is in the process of creating the container images for the pod
Succeeded	Indicates that all the containers in the pod are successfully terminated. These pods cannot be restarted.
Failed	One or more containers in the pod have failed the termination process. The failure occurred as the container either exited with non zero status or the system terminated the container.
Unknown	The state of the pod could not be determined. Typically, this could be observed because the node where the pod resides was not reachable.

Viewing the Service Summary and Details

Use the following commands to view the service summary:

```
kubectl get svc -n amf_namespace
```

Sample Output:

NAME	TYPE	CLUSTER-IP	EXTERNAL-IP	PORT(S)
	AGE			
alert-frwd-ops-center	ClusterIP	209.165.202.130	<none>	
8080/TCP	4d19h			
amf-nrf-service	ClusterIP	209.165.202.140	209.165.202.152	
9090/TCP	37m			
amf-protocol-ep-ngap-1	ClusterIP	209.165.202.151	<none>	
9003/TCP,8080/TCP	37m			
amf-rest-ep	ClusterIP	209.165.202.142	<none>	
9003/TCP,8080/TCP	37m			
amf-sbi-service	ClusterIP	209.165.202.145	209.165.202.146	
8090/TCP	37m			
amf-service	ClusterIP	209.165.202.156	<none>	
9003/TCP,8080/TCP,9909/TCP	37m			
base-entitlement-amf	ClusterIP	209.165.202.144	<none>	
8000/TCP	4d19h			
bgpspeaker-pod	ClusterIP	209.165.202.137	<none>	
9008/TCP,7001/TCP,8879/TCP	37m			
datastore-ep-session	ClusterIP	209.165.202.154	<none>	
8882/TCP	37m			
datastore-notification-ep	ClusterIP	209.165.202.135	<none>	
8890/TCP	37m			
datastore-tls-ep-session	ClusterIP	209.165.202.134	<none>	
8883/TCP	37m			
edr-monitor	ClusterIP	209.165.202.138	<none>	
8080/TCP	37m			
etcd	ClusterIP	None	<none>	
2379/TCP,2380/TCP	37m			
etcd-amf-etcd-cluster-0	ClusterIP	209.165.202.143	<none>	
2380/TCP,2379/TCP	37m			
grafana-dashboard-amf	ClusterIP	209.165.202.139	<none>	
9418/TCP	37m			
grafana-dashboard-cdl-amf	ClusterIP	209.165.202.131	<none>	
9418/TCP	37m			

grafana-dashboard-etcd-amf	ClusterIP	209.165.202.133	<none>
9418/TCP	37m		
kafka	ClusterIP	None	<none>
9092/TCP, 9083/TCP, 5005/TCP, 7070/TCP	37m		
ldap-proxy-amf-infra-charts	ClusterIP	10.111.123.172	<none>
636/TCP, 389/TCP	37m		
ldap-proxy-amf-oam-pod	ClusterIP	10.98.86.168	<none>
636/TCP, 389/TCP	37m		
local-ldap-proxy-amf-ops-center	ClusterIP	10.104.241.224	<none>
636/TCP, 369/TCP	4d19h		
nodemgr	ClusterIP	10.100.29.104	<none>
9003/TCP, 8884/TCP, 8879/TCP, 9201/TCP, 8080/TCP	37m		
oam-pod	ClusterIP	10.105.32.51	<none>
9008/TCP, 7001/TCP, 8879/TCP, 10080/TCP, 8080/TCP	37m		
ops-center-amf-ops-center	ClusterIP	10.108.159.80	<none>
8008/TCP, 8080/TCP, 2024/TCP, 2022/TCP	4d19h		
ops-center-amf-ops-center-expose-cli	LoadBalancer	10.99.138.131	209.165.202.144
2024:26905/TCP	4d19h		
prometheus-rules-cdl	ClusterIP	None	<none>
9419/TCP	37m		
prometheus-rules-etcd	ClusterIP	None	<none>
9419/TCP	37m		
rest-ep	ClusterIP	209.165.202.148	<none>
9201/TCP	37m		
smart-agent-amf-ops-center	ClusterIP	209.165.202.151	<none>
8888/TCP	4d19h		
ssh-ops-center-amf-ops-center	ClusterIP	209.165.202.152	209.165.202.142
2024/TCP	4d19h		
x1-service-1	ClusterIP	209.165.202.129	37.37.37.37
1200/TCP	37m		
zookeeper	ClusterIP	None	<none>
2888/TCP, 3888/TCP	37m		
zookeeper-service	ClusterIP	209.165.202.136	<none>
2181/TCP, 7070/TCP	37m		

Use the following commands to view the comprehensive service details:

```
kubectl get svc -n amf_namespace service_name -o yaml
```

Sample Output:

```
kubectl get svc amf-rest-ep -n amf-ins1 -o yaml
apiVersion: v1
kind: Service
metadata:
  annotations:
    meta.helm.sh/release-name: amf-ins1-amf-rest-ep
    meta.helm.sh/release-namespace: amf-ins1
  creationTimestamp: "2021-10-16T18:00:23Z"
  labels:
    app: amf-rest-ep
    app.kubernetes.io/managed-by: Helm
    chart: amf-rest-ep-0.1.0-main-2464-211014124230-2d34ce7
    component: amf-rest-ep
    heritage: Helm
    release: amf-ins1-amf-rest-ep
  name: amf-rest-ep
  namespace: amf-ins1
  resourceVersion: "5768444"
  uid: 65cb4204-8914-4b71-aa3c-809238dd755e
spec:
  clusterIP: 209.165.202.145
  clusterIPs:
    - 209.165.202.145
  ipFamilies:
```

```

- IPv4
ipFamilyPolicy: SingleStack
ports:
- name: grpc
  port: 9003
  protocol: TCP
  targetPort: 9003
- name: metrics
  port: 8080
  protocol: TCP
  targetPort: 8080
- name: nrffrestep
  port: 9201
  protocol: TCP
  targetPort: 9201
selector:
  component: amf-rest-ep
  release: amf-insl-amf-rest-ep
sessionAffinity: None
type: ClusterIP
status:
  loadBalancer: {}

```

Use the following commands to view the GTPC port details:

```
k describe pod gtpc-ep-n0-1-0 -n amf_namespace service_name
```

Sample Output:

```

Name:          gtpc-ep-n0-1-0
Namespace:     amf
Priority:       1000000000
Priority Class Name: default-application
Service Account: default
Node:          k8-worker2/10.1.38.158
Start Time:    Mon, 07 Oct 2024 06:33:15 +0000
Labels:        apps.kubernetes.io/pod-index=0
               component=gtpc-ep-1-0
               controller-revision-hash=gtpc-ep-n0-1-58f7d5b47f
               instanceId=1
               nID=0
               release=amf-gtpc-ep
               statefulset.kubernetes.io/pod-name=gtpc-ep-n0-1-0
Annotations:   prometheus.io/port: 7079
               prometheus.io/scrape: true
               sidecar.istio.io/inject: false
Status:        Running
IP:            209.165.202.140
IPs:
  IP:          209.165.202.141
Controlled By: StatefulSet/gtpc-ep-n0-1
Environment:
  GOGC:                100
  K8S_NAMESPACE:       amf
  GOTRACEBACK:         crash
  GOMAXPROCS:          12
  CPS_PATCH:
  SERVICE_NAME:        gtpc-ep1
  INFRA_ADMIN_PORT:    7279
  INFRA_DIAG_PORT:     7379
  PPROF_EP_PORT:       7179
  IPC_EP_PORT:         9005
  TLS_IPC_EP_PORT:     23300
  PROXY_KEEPAIVED_PORT: 27000
  ENABLE_ADD_DYNAMIC_BGP_ROUTE: true

```



```

ENABLE_SGW_CACHE:                true
INTERNAL_GTP_IP:                  27.27.27.27
GTPC_SERVICE_USR_NAME:            amf-service
INFRA_PROMETHEUS_PORT:            7079
COVERAGE_BUILD:                   false
INSTANCE_NODE_ID:                  0
APPLICATION_NAME:                  AMF
DATACENTER_NAME:                   dc1
CLUSTER_NAME:                      clu1
GTPC_K8S_SERVICE:                  true
ENABLE_TP_FEATURE:                 true
ENABLE_GO_ENCODER_DECODER:         false
GTPC_UPDATE_LAST_MSG_RECV_TIME_AFTER: 30
GTPC_EP_BGIPC_TO_SERVICE_ENABLED:  true
DONT_DELAY_EP_REMOVAL:             true
NOT_ALLOW_STOPPING_HOST:           true
NOT_ALLOW_APP_STOPPING_OP:         true
POD_IP:                            (v1:status.podIP)
POD_NAME:                          gtpc-ep-n0-1-0 (v1:metadata.name)
GR_INSTANCE_ID:                    1
EP_INSTANCE_ID:                    1
STATS_CTRL_LABEL:                  enabled
TXN_GO_POOL:                       true
BYPASS_PROXY:                      true
ENABLE_HB_STREAM:                  true
PEER_GROUP_ENABLED:                false
NODE_IP:                           (v1:status.hostIP)
BGP_CONFIGURED:                    true
SEND_RC_IN_CSREQ_ENABLED:          true
SEND_RC_IN_CSRSP_ENABLED:          false

```

Use the following commands to view the LI-EP Port Details:

```
k describe pod li-ep-n0-0 -n amf_namespace service_name
```

Sample Output:

```

Name:                             li-ep-n0-0
Namespace:                         amf
Priority:                           100000000
Priority Class Name:                 default-application
Service Account:                    default
Node:                               k8-worker2/10.1.38.158
Start Time:                         Mon, 07 Oct 2024 06:33:15 +0000
Labels:                             apps.kubernetes.io/pod-index=0
                                    component=li-ep
                                    controller-revision-hash=li-ep-n0-548b775b85
                                    instanceId=1
                                    nID=0
                                    release=amf-li-ep
Annotations:                        statefulset.kubernetes.io/pod-name=li-ep-n0-0
                                    prometheus.io/port: 7962
                                    prometheus.io/scrape: true
Status:                             Running
IP:                                 209.165.202.140
IPs:                                IP: 209.165.202.141
Controlled By:                      StatefulSet/li-ep-n0
Environment:
  GOTRACEBACK:                       crash
  GOMAXPROCS:                        12
  K8S_NAMESPACE:                     amf
  CPS_PATCH:                         
  SMF_LI_EP_SERVICE_NAME:             zipkin
  TRACER_TYPE:                       zipkin

```

```

TRACER_ENDPOINT:          jaeger-zipkin:9411
INFRA_PROMETHEUS_PORT:    7962
APPLICATION_NAME:         AMF
CACHE_POD_ADDR:           cache-pod:9005
OAM_POD_ADDR:             oam-pod:9008
ENABLE_TRACE_PERCENT:     100
TRACER_APPEND_MESSAGES:   true
SERVICE_NAME:            li-ep
COVERAGE_BUILD:           false
DATACENTER_NAME:         dcl
CLUSTER_NAME:             clu1
INSTANCE_NODE_ID:         0
NODE_COUNT:               1
NFType:                   AMF
DONT_DELAY_EP_REMOVAL:    true
NOT_ALLOW_STOPPING_HOST:  true
NOT_ALLOW_APP_STOPPING_OP: true
POD_IP:                   (v1:status.podIP)
POD_NAME:                 li-ep-n0-0 (v1:metadata.name)
GR_INSTANCE_ID:           1
UDP_PROXY_BYPASS:         true
INFRA_ADMIN_PORT:         7899
INFRA_DIAG_PORT:          7999
PPOF_EP_PORT:             7870
IPC_EP_PORT:              22500
TLS_IPC_EP_PORT:          23500
LI_KEEPALIVED_PORT:    29000
LI_INTERNAL_IP:           209.165.202.158
LI_OPTIMIZATION:          true
:

```



Note LI_KEEPALIVED_PORT value is 29000 + Logical instance-id.

Multiple Service Pods on Multiple Nodes

Feature Description

This feature helps in bringing up service pods on two or more different nodes.

How it Works

To enable this feature, ensure the following:

- Set the configuration to two nodes and the number of replicas on each node, so that each node in an RU system has the number of configured amf-service replicas.
- When a node gets removed, the system won't be able to spawn a new service replica on the node that already has one.
- If one node (RU) gets removed from the three nodes and one replica configuration, the service pod previously running on the removed node (RU) respawns on the other available node (RU).
- The same changes can be configured for amf-rest-ep also.

Feature Configuration

To configure this feature, use the following sample configuration:

```
config
  instance instance-id instance-id
  endpoint { sbi | service }
  nodes number_of_nodes
  replicas number_of_replicas
end
```

NOTES:

- **instance instance-id instance-id**—Specify the endpoint instance ID.
- **endpoint { sbi | service }**—Specify the endpoint that must be configured.
- **nodes number_of_nodes**—Specify the number of nodes that must be used for resiliency.
- **replicas number_of_replicas**—Specify the number of replicas that must be created for the endpoint, on each node.

Configuration Example

The following is an example configuration.

```
config
  instance instance-id 1
  endpoint service
  nodes 2
  replicas 2
exit
exit
exit
```

Configuration Verification

To verify the configuration:

```
show running-config instance instance-id 1 endpoint service
```



Note To allow the spawning of pods on the nodes, it's necessary to label the nodes appropriately in the cluster.

To verify the label:

```
show running-config k8 label service-layer
```

GTPC Protocol Endpoint Merge with UDP Proxy Bypass

Feature Description

AMF introduces the bypass proxy to enable the GTP packets to directly land on GTPC-EP pod. This bypass process avoids the processing at UDP-proxy and reduces the one hop during the packet forwarding. All the rolling upgrade features supported by existing GTPC-EP and UDP-proxy are integrated in new merged path.

Configuring GTPC EP Merge Mode



Note We recommend deploying the GTPC-EP in merge mode for better performance optimization.

To configure the merge mode for the GTPC EP, use the following sample configuration:

```
config
instance instance-id instance_id
  endpoint endpoint_name
    nodes nodes_count
    retransmission { timeout timeout_value | max-retry retry_count }
    internal-vip ip_address
    vip-ip ip_address
    interface interface_name
      vip-ip ip_address
    exit
```

NOTES:

- **instance instance-id instance_id**: Specifies the creation or configuration of an instance. An instance can be a logical unit or a virtual instance within the device.
- **endpoint endpoint_name**: Specifies the creation or configuration of an endpoint for GPRS Tunneling Protocol (GTP).
- **nodes nodes_count**: Specifies the number of nodes associated with the endpoint.
- **retransmission { timeout timeout_value | max-retry retry_value }**: Specifies the number of nodes associated with the endpoint.
 - **retransmission**: Configures the retransmission settings.
 - **timeout timeout_value**: Specify the retransmission timeout value in seconds.
 - **max-retry retry_count**: Specify the maximum number of retry attempts.
 - Recommended value for retransmission configuration: (max-retry count+1)*retransmission timeout should be < 30 second.
- **internal-vip ip_address**: Specifies the internal virtual IP address for the instance.
- **vip-ip ip_address**: Specifies the virtual IP address for the instance.

- **interface** *interface_name*: Specifies the network interface for which the configuration settings apply.
- **vip-ip** *ip_address*: Specifies the virtual IP address associated with the specified interface.
- Enabling/Disabling this configuration requires pod restart.



CHAPTER 5

Smart Licensing

- [Feature Summary and Revision History, on page 47](#)
- [Smart Software Licensing, on page 47](#)
- [Configuring Smart Licensing, on page 50](#)
- [OAM Support, on page 58](#)

Feature Summary and Revision History

Summary Data

Table 12: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Disabled - Configuration required to enable
Related Documentation	Not Applicable

Revision History

Table 13: Revision History

Revision Details	Release
First introduced.	2021.04.0

Smart Software Licensing

Cisco employs two types of license models - Legacy Licensing and Smart Software Licensing. Legacy Licensing consists of software activation by installing Product Activation Keys (PAK) on to the Cisco product. A Product Activation Key is a purchasable item, ordered in the same manner as other Cisco equipment and

used to obtain license files for feature set on Cisco Products. This traditional licensing does not need any online communication with the Cisco licensing server.

Smart Software Licensing is a cloud-based licensing of the end-to-end platform through the use of a few tools that authorize and deliver license reporting. Smart Software Licensing functionality incorporated into the NFs complete the product registration and authorization. AMF supports the Smart Software Licensing model.

Smart Licensing simplifies the purchase, deployment, and management of Cisco software assets. Entitlements are purchased through your Cisco account through Cisco Commerce Workspace (CCW) and immediately available in your Virtual Account for usage. This approach eliminates the need to install license files on every device. Smart-enabled products communicate directly to Cisco to report consumption. A single location—Cisco Software Central—is available for customers to manage Cisco software licenses. License ownership and consumption are readily available to help make a better purchase decision that is based on consumption or business need.

For more information on Cisco Smart Licensing, see <https://www.cisco.com/c/en/us/buy/smart-accounts/software-licensing.html>.

Cisco Software Central

Cisco Software Central (CSC) enables the management of software licenses and the smart account from a single portal. The CSC interface allows you to enable your product, manage entitlements, renew, and upgrade software. You need a functioning smart account to complete the registration process.

To access Cisco Software Central, see <https://software.cisco.com>.

Smart Accounts and Virtual Accounts

A Smart Account provides a single location for all smart-enabled products and entitlements. It helps in procurement, deployment, and maintenance of Cisco Software. When creating a smart account, you must have the authority to represent the requesting organization. After submission, the request goes through approval process.

A Virtual Account exists as a sub-account within the smart account. Virtual Accounts are customer-defined based on the organizational layout, business function, geography, or any defined hierarchy. Smart account administrator creates and maintains the virtual accounts.

For information on setting up or managing the Smart Accounts, see <https://software.cisco.com>.

Requesting a Cisco Smart Account

A Cisco Smart Account is an account where smart licensing-enabled products are available. A Cisco smart account allows you to manage and activate your licenses to devices, monitor license use, and track Cisco license purchases. Through transparent access, you have a real-time view into your smart licensing products. IT administrators can manage licenses and account users within the organization's smart account through Cisco Software Central. To create a Cisco Smart Account, perform the following steps:

Procedure

Step 1 Visit the following URL:

`https://software.cisco.com`

- Step 2** Log in using your credentials, and click **Request a Smart Account** in the **Administration** area.
The **Smart Account Request** window appears.
- Step 3** Under **Create Account**, select one of the following options:
- **Yes, I have authority to represent my company and want to create the Smart Account.** If you select this option, you agree to authorize to create and manage product and service entitlements, users, and roles, on behalf of the organization.
 - **No, the person specified below will create the account.** If you select this option, you must enter the email address of the person who creates the smart account.
- Step 4** Under **Account Information**,
- a) Click **Edit** beside **Account Domain Identifier**.
 - b) In the **Edit Account Identifier** dialog box, enter the domain, and click **OK**. By default, the domain is based on the email address of the person creating the account, and must belong to the company that will own this account.
 - c) Enter the **Account Name** (typically, the company name).
- Step 5** Click **Continue**.
The Smart Account request will be in pending status until it is approved by the Account Domain Identifier. After the approval, you will receive an email confirmation with instructions for completing the setup process.
-

AMF Smart Licensing

The Smart Licensing feature supports application entitlement for online and offline licensing for all 5G applications (AMF, SMF, and NRF). The application usage is unrestricted during all stages of licensing, including Out of Compliance (OOC) and expired stages.



Note All licenses in use are granted a 90-day evaluation period. Currently, the functionality and operation of the 5G applications is unrestricted even after the end of the evaluation period.

Software Tags and Entitlement Tags

The following sections provide information on software and entitlement tags that are created to identify, report, and enforce licenses.

Software Tags

A Software tag or a Product tag is a unique identifier that helps Smart Licensing system identify the software product family. During the addition of Smart product instance in Cisco Smart Software Manager, the Smart client uses the software/product tag for identification.

The following software tags exist for the AMF.

Product Type / Description	Software Tag
Ultra Cloud Core - Access and Mobility Management Function (AMF), Base Minimum	regid.2020-04.com.cisco.AMF,1.0_d9b74814-21c2-4667-a1b2-e27165bfc533

Entitlement Tags

An Entitlement tag is a part of the software that identifies the features that are being used in a software image. These tags underlay the communication on usage and entitlements of the software products that are installed on the devices. The entitlement tags map to both the PID license and the Software image. Every Smart-enabled PID may contain one or more entitlement tags.

The following entitlement tags identify licenses in use.

Product Type / Description	Entitlement Tag
Ultra Cloud Core - Access and Mobility Management Function (AMF), Base Minimum	regid.2020-04.com.cisco.AMF_BASE,1.0_9aa44be9-ee64-4e65-ac3d-b4040c108180



Note The license information is retained during software upgrades and rollback.

Configuring Smart Licensing

You can configure Smart Licensing after a new AMF deployment.

Users with Access to CSC

This section describes how to configure Smart Licensing if you have access to CSC portal from your environment.

Setting Up the Product and Entitlement in CSC

To set up your product and entitlement in CSC:

1. Log in to your CSC account.
2. Click **Add Product** and enter the following details:
 - **Product name**—Specify the name of the deployed product. Example: AMF.
 - **Primary PM CEC ID**—Specify the primary Project Manager's CEC ID for the deployed product.
 - **Dev Manager CEC ID**—Specify the Development Manager's CEC ID for the deployed product.
 - **Description**—(Optional) Specify a brief description of the deployed product.

- **Product Type**—Specify the product type.
 - **Software ID Tag**—Specify the software ID Tag provided by the Cisco Accounts team.
3. Click **Create**.
 4. Select your product from the **Product/Entitlement Setup** grid.
 5. Click **Entitlement** drop-down list and select **Create New Entitlement**.
 6. Select **New Entitlement** in **Add Entitlement** and enter the following details:
 - **Entitlement Name**—Specify the license entitlement name. Example: AMF_BASE.
 - **Description**—(Optional) Specify a brief description about the license entitlement.
 - **Entitlement Tag**—Specify the entitlement tag provided by the Cisco Accounts team.
 - **Entitlement Type**—Specify the type of license entitlement.
 - **Vendor String**—Specify the vendor name.
 7. Click **Entitlement Allocation**.
 8. Click **Add Entitlement Allocation**.
 9. In **New License Allocation**, provide the following details:
 - **Product**—Select your product from the drop-down list.
 - **Entitlement**—Select your entitlement from the drop-down list.
 10. Click **Continue**.
 11. In **New License Allocation**, enter the following details:
 - **Quantity**—Specify the number of licenses.
 - **License Type**—Specify the type of license.
 - **Expiring Date**—Specify the date of expiry for the license purchased.
 12. Click **Create**.

Registering Smart Licensing

You must register the product that is entitled to the license with CSC. To register, generate an ID token from CSC.

1. Log in to your CSC account.
2. Click **General > New Token** and enter the following details:
 - **Description**—Specify a brief description for the ID token.
 - **Expires After**—Specify the number of days for the token to expire.
 - **Max. Number Users**—Specify the maximum number of users.

3. Click **Create Token**.
4. Select new **ID token** in **Product Instance Registration Token**.
5. Click **Actions > Copy**.
6. Log in to AMF Ops Center CLI and paste the **ID token** using the following command:

```
license smart register idtoken
```

NOTES:

- **license smart register**—Registers Smart Licensing with CSC.
- *idtoken*—Specify the ID token generated from CSC.

Example:

```
license smart register
Value for 'idtoken' (<string>): MTI2Y2FlNTAtOTkMi00YTAXLWE4M2QtOTNhNzNjNjY4ZmFiLlTE2MTc4N
Tky%0AMTA5MDh8ck1jUHNwc3k1ZC9nWFFCSnVEcUp4QU1jTFoxOGxDTU5kQ3lpa25E%0Ab04wST0%3D%0A
```

7. Verify the Smart Licensing status using the following command:

```
show license all
```

Example:

```
show license all
Smart Licensing Status
=====
Smart Licensing is ENABLED

Registration:
  Status: REGISTERED
  Smart Account: CN-5G-NF
  Virtual Account: Default
  Export-Controlled Functionality: Allowed
  Initial Registration: SUCCEEDED on Jun 15 12:12:38 2020 GMT
  Last Renewal Attempt: SUCCEEDED on Jun 15 12:12:38 2020 GMT
  Next Renewal Attempt: Dec 12 12:12:38 2020 GMT
  Registration Expires: Jun 15 12:02:50 2021 GMT

License Authorization:
  Status: AUTHORIZED on Jun 15 12:12:44 2020 GMT
  Last Communication Attempt: SUCCEEDED on Jun 15 12:12:44 2020 GMT
  Next Communication Attempt: Jul 15 12:12:44 2020 GMT
  Communication Deadline: Sep 13 12:09:43 2020 GMT

License Conversion:
  Automatic Conversion Enabled: true
  Status: NOT STARTED

Utility:
  Status: DISABLED

Transport:
  Type: Smart Transport
  Registration URL: null
  Utility URL: null

Evaluation Period:
  Evaluation Mode: Not In Use
  Evaluation Period Remaining: 87 days, 10 hr, 3 min, 3 sec
```

```

License Usage
=====
License Authorization Status: AUTHORIZED as of Jun 15 12:12:44 2020 GMT

AMF_BASE (AMF_BASE)
  Description: 5G AMF Base Entitlement
  Count: 1
  Version: 1.0
  Status: AUTHORIZED
  Export status: NOT RESTRICTED
  Feature Name: <empty>
  Feature Description: <empty>

Product Information
=====
UDI: PID:AMF,SN:JEZZ35Q-ZF6DE7Y

Agent Version
=====
Smart Agent for Licensing: 3.1.4

```

Deregistering Smart Licensing

To deregister Smart Licensing:

1. Log in to AMF Ops Center CLI and use the following command:

```
license smart deregister
```

NOTES:

- **license smart deregister**—Deregisters Smart Licensing from CSC.

2. Verify the Smart Licensing status using the following command:

```
show license all
```

Example:

```

show license all

Smart Licensing Status
=====
Smart Licensing is ENABLED

Registration:
  Status: UNREGISTERED
  Export-Controlled Functionality: Not Allowed

License Authorization:
  Status: EVAL MODE
  Evaluation Period Remaining: 84 days, 22 hr, 58 min, 0 sec
  Last Communication Attempt: NONE

License Conversion:
  Automatic Conversion Enabled: true
  Status: NOT STARTED

Utility:
  Status: DISABLED

Transport:
  Type: Smart Transport

```

```

Registration URL: null
Utility URL: null

Evaluation Period:
  Evaluation Mode: In Use
  Evaluation Period Remaining: 84 days, 22 hr, 58 min, 0 sec

License Usage
=====
License Authorization Status: EVALUATION MODE
  Evaluation Period Remaining: 84 days, 22 hr, 58 min, 0 sec

(AMF_BASE)
  Description: <empty>
  Count: 1
  Version: 1.0
  Status: EVAL MODE
  Export status: NOT RESTRICTED
  Feature Name: <empty>
  Feature Description: <empty>

Product Information
=====
UDI: PID:AMF,SN:5DSFOZQ-DMKWHEA

Agent Version
=====
Smart Agent for Licensing: 3.1.4

```

Users without Access to CSC

The Smart License Reservation feature—Perpetual Reservation—is reserved for customers without access to CSC from their internal environments. Cisco allows customers to reserve licenses from their virtual account and tie them to their devices' Unique Device Identifier (UDI). This enables customers to use their devices with reserved licenses in a disconnected mode.

The subsequent sections describe the procedure involved in reserving Smart License for users without access to CSC from their internal environment.

Enabling Smart License Reservation

To enable Smart License reservation through AMF Ops Center CLI, log in to AMF Ops Center CLI and use the following configuration:

```

config terminal
license smart reservation
exit

```

NOTES:

- **license smart reservation**—Enables license reservation.

Enabling and Generating Smart License Reservation Request Code

To enable and generate the Smart License reservation request code:

1. Log in to AMF Ops Center CLI.
2. To enable reservation, use the following configuration:

```
config terminal
  license smart reservation
exit
```

NOTES:

- **license smart reservation**—Enables license reservation request code.

3. To request for a reservation code, use the following command:

```
license smart reservation request
```

NOTES:

- **license smart reservation request**—Generates the license reservation request code.



Important Copy the generated license request code from the AMF Ops Center CLI to your local machine for further use.

Example:

```
license smart reservation request
reservation-request-code CB-ZAMF:JEZZ35Q-ZF6DE7Y-A5QHppdj5-21
Message from confd-api-manager at 2020-06-15 12:18:47...
Global license change NotifyReservationInProgress reason code Success - Successful.
```

Generating an Authorization Code from CSC

To generate an authorization code from CSC using the license reservation request code:

1. Log in to your CSC account.
2. Click **License Reservation**.
3. Enter the Request Code: Paste the license reservation request code copied from the AMF Ops Center CLI in the **Reservation Request Code** text box.
4. Select the Licenses: Click **Reserve a Specific License** radio button and select *UCC 5G AMF BASE*.



Note In the **Reserve** text box, enter the value *1*.

5. Review your selection.
6. Click **Generate Authorization Code**.
7. Download the response file: The authorization code is generated and displayed on-screen. Click **Download as File** to download the authorization code.
8. Click **Close**.

Reserving Smart Licensing

To reserve Smart License for the deployed product using the authorization code generated in CSC:

1. Log in to AMF Ops Center CLI and use the following command:

```
license smart reservation install authorization_code
```

NOTES:

- **license smart reservation install** *authorization_code*—Installs a Smart License Authorization code.

Example:

```
license smart reservation install
Value for 'key' (<string>): CAACfW-Wb5cMa-jEZjtU-M2KnU5-toCZBA-iaVr
```

2. Verify the smart licensing status using the following command:

```
show license all
```

Example:

```
show license all

Smart Licensing Status
=====
Smart Licensing is ENABLED
License Reservation is ENABLED

Registration:
  Status: REGISTERED - UNIVERSAL LICENSE RESERVATION
  Export-Controlled Functionality: Allowed
  Initial Registration: SUCCEEDED on Mon Jun 15 12:22:25 GMT 2020
  Last Renewal Attempt: None

License Authorization:
  Status: AUTHORIZED - RESERVED on Mon Jun 15 12:22:25 GMT 2020

Utility:
  Status: DISABLED

Transport:
  Type: Smart Transport
  Registration URL: null
  Utility URL: null

Evaluation Period:
  Evaluation Mode: Not In Use
  Evaluation Period Remaining: 87 days, 9 hr, 55 min, 44 sec

License Usage
=====
License Authorization Status:
  Status: AUTHORIZED - RESERVED on Mon Jun 15 12:22:25 GMT 2020
  Last Communication Attempt: SUCCEEDED on Jun 15 12:22:25 2020 GMT
  Next Communication Attempt: NONE
  Communication Deadline: NONE

AMF_BASE (AMF_BASE)
  Description: 5G AMF Base Entitlement
  Count: 1
  Version: 1.0
  Status: AUTHORIZED
  Export status: NOT RESTRICTED
  Feature Name: <empty>
  Feature Description: <empty>

Product Information
```



```

=====
UDI: PID:AMF,SN:JEZZ35Q-ZF6DE7Y

Agent Version
=====
Smart Agent for Licensing: 3.1.14

```

Returning the Reserved License

To return the reserved license, use the following procedure:

1. When the license reservation authorization code is installed in the AMF Ops Center:

- a. Log in to the AMF Ops Center CLI and use the following command:

```
license smart reservation return
```

NOTES:

- **license smart reservation return**—Returns a reserved Smart License.

Example:

```
license smart reservation return
reservation-return-code CACfWm-rdGtXu-kP1YtP-hPNELK-63EC7s-7oK
```

- b. Copy the license reservation return code generated in AMF Ops Center CLI.
 - c. Log in to your CSC account.
 - d. Select your product instance from the list.
 - e. Click **Actions > Remove**.
 - f. Paste the license reservation return code in **Return Code** text box.

2. When the license reservation authorization code is not installed in the AMF Ops Center:

- a. Log in to the AMF Ops Center CLI and use the following command to generate the return code:

```
license smart reservation return
authorization_code
```



Important Paste the license reservation authorization code generated in CSC to generate the return code.

- b. Log in to your CSC account.
 - c. Select your product instance from the list.
 - d. Click **Actions > Remove**.
 - e. Paste the license reservation return code in **Return Code** text box.

3. Verify the smart licensing status using the following command:

```
show license all
```

Example:

```

show license all

Smart Licensing Status
=====
Smart Licensing is ENABLED

Registration:
  Status: UNREGISTERED
  Export-Controlled Functionality: Not Allowed

License Authorization:
  Status: EVAL MODE
  Evaluation Period Remaining: 84 days, 22 hr, 58 min, 0 sec
  Last Communication Attempt: NONE

License Conversion:
  Automatic Conversion Enabled: true
  Status: NOT STARTED

Utility:
  Status: DISABLED

Transport:
  Type: Smart Transport
  Registration URL: null
  Utility URL: null

Evaluation Period:
  Evaluation Mode: In Use
  Evaluation Period Remaining: 84 days, 22 hr, 58 min, 0 sec

License Usage
=====
License Authorization Status: EVALUATION MODE
  Evaluation Period Remaining: 84 days, 22 hr, 58 min, 0 sec

(AMF_BASE)
  Description: <empty>
  Count: 1
  Version: 1.0
  Status: EVAL MODE
  Export status: NOT RESTRICTED
  Feature Name: <empty>
  Feature Description: <empty>

Product Information
=====
UDI: PID:AMF,SN:5DSFOZQ-DMKWHEA

Agent Version
=====
Smart Agent for Licensing: 3.1.4

```

OAM Support

This section describes operations, administration, and maintenance information for this feature.

Use the following show command to view the Smart Licensing information in the AMF Ops Center:

```
show license [ all | UDI | displaylevel | reservation | smart | status |
summary | tech-support | usage ]
```

NOTES:

- **all**—Displays an overview of Smart Licensing information that includes license status, usage, product information, and Smart Agent version.
- **UDI**—Displays Unique Device Identifiers (UDI) details.
- **displaylevel**—Depth to display information.
- **reservation**—Displays Smart Licensing reservation information.
- **smart**—Displays Smart Licensing information.
- **status**—Displays the overall status of Smart Licensing.
- **summary**—Displays a summary of Smart Licensing.
- **tech-support**—Displays Smart Licensing debugging information.
- **usage**—Displays the license usage information for all the entitlements that are currently in use.



CHAPTER 6

AMF Authentication and GUTI Reallocation Configuration Control

- [Feature Summary and Revision History, on page 61](#)
- [Feature Description, on page 62](#)
- [Feature Configuration, on page 63](#)

Feature Summary and Revision History

Summary Data

Table 14: Summary Data

Applicable Products or Functional Area	AMF
Applicable Platforms	SMI
Feature Default Setting	Enabled – Always-on
Related Documentation	UE Configuration Management Procedures, on page 613

Revision History

Table 15: Revision History

Revision Details	Release
First introduced.	2022.01.0

Feature Description

AMF supports the authentication activities and the GUTI (Globally Unique Temporary Identity) reallocation configuration control for call flows.

GUTI

GUTI is used to keep the subscriber's IMSI confidential. AMF allocates a GUTI to the UE. It's composed of PLMN ID, AMF ID, and TMSI. As it's a temporary identifier, its associations aren't fixed to any specific subscriber or mobile. A single 5G-GUTI is used to access the Security Context of 3GPP and non-3GPP technologies within the AMF.

Supported Functions

AMF supports the following functions:

- Authentication and GUTI reallocation counter maintained as per the UE. For each supported type, separate counters are maintained.
- Time reference per UE for network-initiated GUTI reallocation
- GUTI reallocation attempted as per the configuration for a specific time interval.
- Includes the new GUTI in either Registration Accept or Configuration Update Command NAS message
- AMF shows the allocated GUTI and the allocated time in the **show subscriber** command output.



Note Collision of GUTI reallocation in Registration Accept or Configuration Update Command with other procedures isn't supported.

Supported Scenarios

This feature supports the following scenarios based on the UE on time and frequency of access attempts. These scenarios are part of the Registration and Service Request procedure:

- Selective authentication
- GUTI reallocation

The frequency supports access attempts per UE and not across UEs.

Unsupported Scenarios

The following scenario isn't supported:

- Authentication requirements dependent or based on EAP-AKA or EAPAKA' or EAPAKA Prime
- When the latest GUTI isn't acknowledged, the UE is paged simultaneously with the old and the new GUTI.



Note GUTI reallocation process takes place only for the successful procedure.

Feature Configuration

To configure this feature, use the following configuration:

```

config
  call-control-policy ccp_name
    authenticate registration-request type { frequency frequency_count |
periodicity duration }
    no authenticate registration registration-request
    authenticate service-request type { frequency frequency_count |
periodicity duration }
    no authenticate registration service-request
    authenticate all-events { frequency frequency_count | periodicity duration
  }
    no authenticate all-events
    guti-reallocation type { frequency frequency_count | periodicity duration
  }
  no guti-reallocation
end

```

NOTES:

- **call-control-policy** *ccp_name*—Specify the UE-specific name for call control policy. Must be a string.
- **authenticate registration-request** { *normal* | *periodic* | *inter-rat* | *intra-rat* }—Specify the required option to authenticate the registration process.
- **registration-type normal**—Specify the initial registration details with locally allocated GUTI.
- **authenticate service-request** { *data* | *signaling* }—Specify the option to authenticate the service type for the service request.
- **authenticate all-events**—Specify the option to authenticate all events. It's also the default or the fallback authentication option, when the configuration doesn't present for any type.
- **guti-reallocation** { *periodic-registration* | *service-request* }—Specify the options to authenticate the GUTI reallocation process.
- **no authenticate** { [*registration-request*] | [*service-request*] | [*all-events*] | [*guti-reallocation*] }—Specify the option for which the authentication isn't required.
- **frequency** *frequency_count*—Specify the required frequency duration or count for authenticating each option. The frequency range is 0–256. The disabled value is 0.
- **periodicity** *duration*—Specify the time, period, or duration for authenticating the selected option. The periodicity duration range is 0–10800 (minutes). The disabled value is 0.

**Note**

- The AMF does not maintain periodicity and frequency after the context is deleted. If UE context is not available, the frequency and periodicity triggers doesn't work.
For example, if the mobile identifier in the NAS Attach is a foreign GUTI, the AMF doesn't trigger authentication/GUTI reallocation for the subscriber based on frequency/periodicity.
- Inter-rat ReAuth/SelectiveAuth is supported for frequency 1 and periodicity 0 only.
- If the GUTI reallocation and reauthentication need to be configured on the basis of only frequency or only periodicity, then the non-used or disabled configuration parameter (such as periodicity or frequency) must be set as 0.
- The periodicity values in minutes indicate that **Amf ReAuth** or **ReAllocateGuti** time difference between the two successive requests is more than the defined values.
- The periodicity timer configured for any procedure starts on the first occurrence of that procedure.
- The defined frequency value indicates that **Amf ReAuth** or **ReAllocateGuti** for every subscriber.
- When the AMF resets both frequency and periodicity, it indicates the expired value for either frequency or periodicity.
- The default GUTI reallocation is enabled for **periodic-registration**. The following commands are used to disable or enable this option.

config

```
amf-global call-control-policy ccp-name
guti-reallocation periodic-registration disabled
end
```

config

```
amf-global call-control-policy ccp-name
no guti-reallocation periodic-registration disabled
guti-reallocation periodic-registration { frequency count | periodicity
duration }
end
```

Configuration Example

The following is an example configuration.

```
amf-global
call-control-policy local
guti-reallocation periodic-registration frequency 2 periodicity 1
guti-reallocation service-request frequency 0 periodicity 1
authenticate service-request signaling frequency 1 periodicity 20
authenticate registration-request periodic frequency 1 periodicity 0
end
```


Configuration Verification

To verify the configuration:

```
show call-control-policy ccp_name
```




CHAPTER 7

AMF Bulk Statistics and MME Equivalent KPI Support

- [Feature Summary and Revision History, on page 67](#)
- [Feature Description, on page 67](#)
- [How it Works, on page 68](#)
- [OAM Support, on page 68](#)

Feature Summary and Revision History

Summary Data

Table 16: Summary Data

Applicable Products or Functional Area	AMF
Applicable Platforms	SMI
Feature Default Setting	Enabled – Always-on
Related Documentation	Not Applicable

Revision History

Table 17: Revision History

Revision Details	Release
First introduced.	2022.01.0

Feature Description

The bulk statistics and Key Performance Indicators (KPIs) are used for analyzing the AMF performance.

The following is a list of applicable bulk statistics:

- **Gauge:**
 - A snapshot value that shows the statistic at the time of reporting.
 - These statistics values can increment or decrement continuously.
 - **Example:** The number of current PDP contexts, simultaneous Active EPS Bearers, and so on
- **Counter:**
 - A historic value that shows the statistic accumulated for a specific time range.
 - These statistics values can only increment except in the following two scenarios:
 - **Rollover:** Where a counter exceeds its maximum value and rolls over to zero.
 - **Reset:** Where a counter is manually reset to zero.
 - **Example:** The total number of CSR requests received.

How it Works

This section describes how this feature works.

Bulk statistics allows you to configure various schemas for collecting statistics from the system. It also offloads those statistics to a collector for offline review and analysis. They are further processed for the following scenarios:

- Controlling the statistics gathering and reporting
- Collecting and transferring on both the active and the standby chassis
- Providing specific requirements for more selective statistics obtained on standby
- Acting as a subset of the total statistics collected over a specific timeline

OAM Support

This section describes operations, administration, and maintenance support for this feature.

Supported Service Request Counters

All scenarios are supported as per the required references. The following table lists various supported service request counters and their descriptions.

Table 18: Supported Service Request Counters

Name	Description	Trigger
Sctp Outgoing SCTPPacket stats	The total number of SCTP packets sent. Retransmitted DATA chunks are included.	Increments when the AMF sends the SCTP packet to the gNB.
Sctp Incoming SCTPPacket stats	The total number of SCTP packets received. Duplicates are included.	Increments when the AMF receives the SCTP packet from the gNB.
Sctp Init stats	The total number of times that AMF received SCTP INIT and association reached to established state.	Increments when the AMF received SCTP INIT and SCTP association is successfully established.
Sctp Shutdowns stats	The total number of times that associations terminated gracefully from AMF side or gNB.	Increments when the gNB is disconnected from the AMF.
Sctp Fragmented Message stats	The total number of user messages that needs to be fragmented due to the presence of the MTU.	Increments when the SCTP message is fragmented, due to the presence of the MTU.
Sctp Reassembled Message stats	The total number of user messages reassembled, after converting into DATA chunks.	Increments when the SCTP message is reassembled, due to the data fragment received from the gNB.
Ausf Ue eapaka rsp	The total number of EAPAKA or EAP-AKA or EAP-AKA-Prime responses received by the AMF.	Increments when the AMF receives an EAPAKA or EAP-AKA or EAP-AKA-Prime response for the eap-session request.
Ausf Ue eapaka cfm	The total number of EAPAKA or EAP-AKA or EAP-AKA-Prime authorization confirmation sent by the AMF.	Increments when the AMF sends AUSF EAPAKA or EAP-AKA or EAP-AKA-Prime CFM to AUSF.
Ausf Autentication Cfm Rsp Stats	The total numbers of 5g-aka confirm response received from the AUSF.	Increments when the AMF receives 5g-aka authentication confirm response.
Ausf Autentication Cfm Stats	The total numbers of 5g-aka confirm requests sent to the AUSF.	Increments when the AMF sends 5g-aka authentication confirm request to the AUSF.
Ausf Autentication Req Stats	The total number of AUSF authentication requests sent by the AMF.	Increments when the AMF receives authentication request.
Ausf Autentication Rsp Stats	The total number of AUSF authentications responses received by the AMF.	Increments when the AMF receives authentication response from the AUSF.

Name	Description	Trigger
Authentication Mac Failed	The total number of authentication MAC failures received during UE authentications.	Increments when the N1 authentication rejection is sent due to the MAC failure.
Authentication Reject	The total number of authentication rejections sent by the AMF.	Increments when the 5g-aka authentication fails.
Authentication Sync Failed	The total number of AMF authentication rejections due to the sync failure.	Increments when the N1 authentication rejection is sent due to the sync failure.
Ebi Fail Bearers Not Found	The total number of failures in EPS Bearer ID setup failed due to Bearer ID not found.	Increments when the EPS bearer ID allocation fails as the bearer ID isn't found.
Ebi Fail Invalid Pdu Session	The total number of failures due to PDU session ID not found.	Increments when the EPS bearer ID allocation fails as the PDU session ID isn't present.
Ebi Rejected No N26	The total number of failures due to the restriction of EPS bearer ID allocation.	Increments when the EBI allocation failure happens, due to the EBI allocation restriction.
Gnb Ics Fail Stats	The total number of initial context setup requests failed.	Increments when the AMF ICS fails.
Gnb Ics Req Stats	Total number of initial context setup requests sent by the AMF.	Increments when the AMF sends ICS requests.
Gnb Ics Rsp Stats	The total number of initial context setup responses received.	Increments when the AMF receives ICS responses.
Pcf Delete Req Stats	The total numbers of PCF delete requests sent during the PDU release deregistration procedure. It's triggered during clear subscriber process.	Increments when the AMF tried to clear the subscriber requests towards the UDM and the PCF.
Pcf Delete Rsp Stats	The total numbers of PCF delete responses received during the PDU release deregistration procedure.	Increments when the AMF tries to clear the subscriber response towards the UDM and the PCF.
Udm Pcsf Restor Req Stats	The total number of PCSCF restoration requests sent to the UDM.	Increments when the AMF sends the PCSCF restoration request to the UDM.
Udm Pcsf Restor Rsp Stats	The total number of PCSCF restoration responses received from the UDM.	Increments during the PDU modification process, when the PDU map doesn't have an entry, when the AMF receives the PCSCF restoration notification from the UDM.

Name	Description	Trigger
Udm Registration Req Stats	The total number of UDM registration requests sent.	Increments when the AMF sends the UDM registration request.
Udm Registration Rsp Stats	The total number of UDM registration responses received by the AMF.	Increments when the AMF receives the UDM registration response.
Udm Subscriber Data Req Stats	The total number of subscriber data requests sent to the UDM.	Increments when the AMF sends the subscriber data request to the UDM.
Udm Subscriber Data Rsp Stats	The total number of subscriber data response received from the UDM.	Increments when the AMF receives the subscriber data response.
Udm Subscriber Notify Req Stats	The total numbers of subscriber notify requests sent to the UDM.	Increments when subscriber notify requests are sent to the UDM, during the UDM registration procedure.
Udm Subscriber Notify Rsp Stats	The total number of subscribers notify responses received by the AMF.	Increments when the AMF receives the UDM subscriber notify response.
Udm Unsubscriber Notify Req Stats	The total numbers of UDM unsubscriber notify requests sent to the UDM.	During deregistration process, it's the total number of unsubscribe requests sent to the UDM.
Udm Unsubscriber Notify Rsp Stats	The total numbers of UDM response unsubscriber notify statistics received by the UDM.	During deregistration process, it's the total number of unsubscribe responses received from the UDM.
Ue Authentication Req Stats	The total number of UE authentication requests sent.	During the UE authentication procedure, this is incremented, when the UE authentication request is sent.
Ue Authentication Rsp Stats	The total number of UE authentication responses received.	During the UE authentication procedure, this is incremented, when the UE authentication response is received.
Ue Configuration Update Cmd	The total number of UE configuration update commands sent by the AMF.	Increments when the AMF sends the UE configuration update command.
Ue Configuration Update Complete	The total number of UE configuration update responses received with completion note of the procedure.	Increments when the AMF receives the UE config update response, for completion.
Ue Security Cmd Req Stats	The total number of security mode CMD sent from the AMF towards the UE.	Increments when the AMF sends the security mode command to the UE.

Name	Description	Trigger
Ue Security Cmd Rsp Stats	The total number of security mode complete messages received by the AMF.	Increments when the AMF receives the security mode completed messages.
Gtpc Rx Context Ack	The total number of GTPC contexts ACK received from the MME.	Increments when the AMF receives the context ACK from the MME.
Gtpc Rx Context Req	The total number of GTPC context requests received from the MME.	Increments when the AMF receives the GTPC context request from the MME.
Gtpc Rx Context Rsp	The total number of GTPC context request responses received from the MME.	Increments when the AMF receives the GTPC context response from the MME.
Gtpc Rx Fwd Reloc Cmp Ack	The total number of GTPC forward relocations complete ACK received from the MME.	Increments when the AMF receives the GTPC forward relocation complete ACK is received from the MME.
Gtpc Rx Fwd Reloc Req	The total number of GTPC forward relocation requests received from the MME.	Increments when the AMF receives the GTPC forward relocation request from the MME.
Gtpc Rx Fwd Reloc Rsp	The total number of GTPC forward relocation responses received from the MME.	Increments when the AMF receives the GTPC forward relocation response from the MME.
Gtpc Rx Identification Req	The total number of GTPC identification requests received from the MME.	Increments when the AMF receives the GTPC identification requests from the MME.
Gtpc Rx Identification Rsp	The total number of GTPC identification responses received from the MME.	Increments when the AMF receives the GTPC identification response from the MME.
Gtpc Rx Reloc Cancel Req	The total numbers of GTPC cancel requests received from the MME.	Increments when the AMF receives the GTPC cancel request from the MME.
Gtpc Rx Reloc Cancel Rsp	The total numbers of GTPC cancel response received from the MME.	Increments when the AMF receives the GTPC cancel response from the peer MME.
Gtpc Tx Context Ack	The total number of GTPC contexts ACK sent to the MME.	Increments when the AMF sends the GTPC context ACK to the MME.
Gtpc Tx Context Req	The total number of GTPC context requests sent to the MME.	Increments when the AMF sends the GTPC context request to the MME.
Gtpc Tx Context Rsp	The total number of GTPC context responses sent to the MME.	Increments when the AMF sends the GTPC context response to the MME.

Name	Description	Trigger
Gtpc Tx Fwd Reloc Cmp Ack	The total number of GTPC forward relocations complete ACK sent to the MME.	Increments when the AMF sends the GTPC forward relocation complete ACK to the MME.
Gtpc Tx Fwd Reloc Cmp Notf	The total number of GTPC forward relocation complete notifications sent to the MME.	Increments when the AMF sends the GTPC forward relocation complete notification to the MME.
Gtpc Tx Fwd Reloc Req	The total number of GTPC forward relocation requests sent to the MME.	Increments when the AMF sends the GTPC forward relocation request to the MME.
Gtpc Tx Fwd Reloc Rsp	The total number of GTPC forward relocation responses sent to the MME.	Increments when the AMF sends the GTPC forward relocation response to the MME.
Gtpc Tx Identification Req	The total number of GTPC identification requests sent to the MME.	Increments when the AMF sends the GTPC identification request to the MME.
Gtpc Tx Reloc Cancel Req	The total numbers of GTPC cancel relocation requests sent to the MME.	Increments when the AMF sends the GTPC relocation cancel request to the MME.
Gtpc Tx Reloc Cancel Rsp	The total number of GTPC relocations cancel response sent to the MME.	Increments when the AMF sends the GTPC relocation cancel response to the MME.
Gtpc Tx Req	The total number of context requests or identification request failures towards the MME.	Increments when there's a failure in sending the GTPC context request or identification request, due to the peer MME not ready, or epsnas container not present, and so on.
Nas In Identity Response	The total number of identity responses received from the UE.	Increments when the AMF receives an identity response from the UE.
Nas In Ue Deregistration Accept	The total number of network initiated deregistration received.	Increments when the network initiated deregistration is received.
Nas Out Identity Request Imei	The total number of identity requests with IMEI as matching value.	Increments when the IMEI-based identity request is sent.
Nas Out Identity Request Suci	The total number of identity requests with SUCI as matching value.	Increments when the SUCI-based identity request is sent.
Ngap DI Handover Command Msg	The total number of handover commands sent to the source gNB.	Increments when the AMF sends the handover command to the source gNB.

Name	Description	Trigger
Ngap DI Handover Preparation Failure Msg	The total number of handovers prepare failure sent by the AMF.	Increments when the AMF sends the handover preparation failure to the gNB.
Ngap DI Handover Request Msg	The total number of handover request messages sent to the gNB.	Increments when the AMF sends the handover request message to the gNB.
Ngap UI Handover Cancel Msg	The total numbers of handover cancel requests received from the gNB.	Increments when the AMF receives the handover cancel request from the gNB.
Ngap UI Handover Request Ack Msg	The total number of handover ACK messages received by the AMF.	Increments when the AMF receives the handover ACK message from the gNB.
Ngap UI Handover Required Msg	The total number of handover required messages received by the AMF.	Increments when the AMF receives the handover required message from the gNB.
Smf Sm Ctxt Create Req	The total numbers of SMF SM context create request sent to the SMF.	Increments when the AMF sends the SM context create request to the SMF.
Smf Sm Ctxt Create Rsp	The total number of SM contexts create response received from the SMF.	Increments when the AMF receives the SM context create response from the SMF.
Smf Sm Ctxt Retrieve Req	The total number of SM contexts retrieve request sent to the SMF.	Increments when the AMF sends the message to retrieve the context.
Smf Sm Ctxt Update Req	The total number of SMF context updates request sent to the SMF.	Increments when the AMF sends the SM context update request to the SMF.
Smf Sm Ctxt Update Rsp	The total number of SM context update responses received for the update contexted data from the SMF.	Increments when the AMF receives the SM context update response from the SMF.
Udm Initiated Dereg Request	The total number of UDM initiated deregistration request received.	Increments when the AMF receives the UDM initiated deregistration request.
Udm Initiated Dereg Response	The total number of UDM initiated deregistration responses sent to the UDM.	Increments when the AMF sends the UDM-initiated deregistration responses to the SMF.

Bulk Statistics Support

The following are supported bulk statistics in AMF for Attempted, Success, and Failure scenarios:

- Registration
- All procedures and features



CHAPTER 8

AMF Rolling Software Upgrade

- [Feature Summary and Revision History, on page 77](#)
- [Feature Description, on page 77](#)
- [Upgrading AMF, on page 78](#)
- [Rolling Upgrade Optimization, on page 91](#)

Feature Summary and Revision History

Summary Data

Table 19: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Disabled – Configuration required to enable
Related Documentation	Not Applicable

Revision History

Table 20: Revision History

Revision Details	Release
CDL 1.10.3 related updates.	2023.01.0
First introduced.	2022.01.0

Feature Description

The AMF consists of a three-tier architecture as the following:

- Protocol
- Service
- Session

Each tier from this list includes a set of microservices (pods) for a specific functionality. Within these tiers, a Kubernetes Cluster exists. It comprises K8s or Kubernetes nodes such as master node and worker node (which also includes OAM nodes).

For high availability and fault tolerance, each tier requires a minimum of two K8s worker nodes. Each worker node can have multiple replicas for each worker node. Kubernetes orchestrates the pods using the StatefulSets controller. The pods require a minimum of two replicas for fault tolerance.

The following is a list of 12 nodes in the AMF K8s cluster:

- Three master nodes
- Three OAM worker nodes
- Two protocol worker nodes
- Two service worker nodes
- Two session (data store) worker nodes

The K8s cluster supports the following nodes:

- OAM worker nodes—Hosts the Ops Center pods for configuration management and metrics pods for statistics and Key Performance Indicators (KPIs).
- Protocol worker nodes—Hosts the AMF protocol-related pods for the following interfaces:
 - Service-based interfaces (such as N8, N11, N12, N14, N15, NRF)
 - UDP-based protocol interfaces (such as N26)
- Service worker nodes—Hosts the AMF application-related pods that help in processing the perform session management.
- Session worker nodes—Hosts the database-related pods that store the data for the subscriber session.

Upgrading AMF

This section describes how to upgrade the rolling software for AMF.

Rolling Software Upgrade for AMF

The rolling software upgrade uses one of the following processes:

- Upgrading or migrating the build from an older version to a newer version
- Upgrading the patch for the required deployment set of application pods

**Important**

When performing a fresh deployment of AMF 2024.03, it's mandatory to use CDL 1.11.8.

If upgrading an existing AMF deployment, it's recommended to upgrade the CDL to latest version before proceeding with the AMF upgrade.

For more information on the supported CDL versions, contact your Cisco account representative.

The applications must be available all the time, where:

- Any new version (or even multiple newer versions) is expected to get deployed with a new build version or patch.
- Any unstable deployment upgrade is reverted to a previous stable version.
- Rolling upgrade process gets activated with a zero downtime, by incrementally updating pod instances with new ones.

**Note**

The rolling software upgrade is supported from an older version to a newer version within the same major release.

Prerequisites

The prerequisites for upgrading AMF must not have changes to the following functions:

- Set of features supported in the old and new builds
- Addition, deletion, or modification of the existing CLI behavior
- Interface changes within the peer or across the pods

Recommendations

The following is a list of recommendations:

- Configuration changes aren't recommended during the upgrade process.
- All the required configuration changes must be performed, when the upgrade process gets completed.

Failure Handling

It's recommended to use the manual process to downgrade the system to a previous healthy build. The following are some of the failure scenarios:

- Crash, pods deployment, and others during the processes
- New events or procedures after the successful upgrade

Rolling Software Upgrade Using the SMI Cluster Manager

The AMF software upgrade or in-service upgrade procedure uses the K8s rolling strategy to upgrade the pod images. The pods of a StatefulSet are upgraded sequentially to ensure that the ongoing process remains unaffected.

Initially, a rolling upgrade on a StatefulSet causes a single pod instance to terminate. A pod with an upgraded image replaces the terminated pod. This process continues until all the replicas of the StatefulSet are upgraded.

The terminating pods exit gracefully after completing all the ongoing processes. Other in-service pods continue to receive and process the traffic to provide a seamless software upgrade.


You can control the software upgrade process through the Ops Center CLI.



Note Each pod needs a minimum of two replicas for high availability. In a worst-case scenario, the processing capacity of the pod may briefly reduce to 50% while the software update is in progress.

The following figure illustrates the following:

- The AMF rolling upgrade for AMF REST endpoint pods (two replicas) on protocol worker nodes
- Along with AMF service pods (three replicas) on service worker nodes

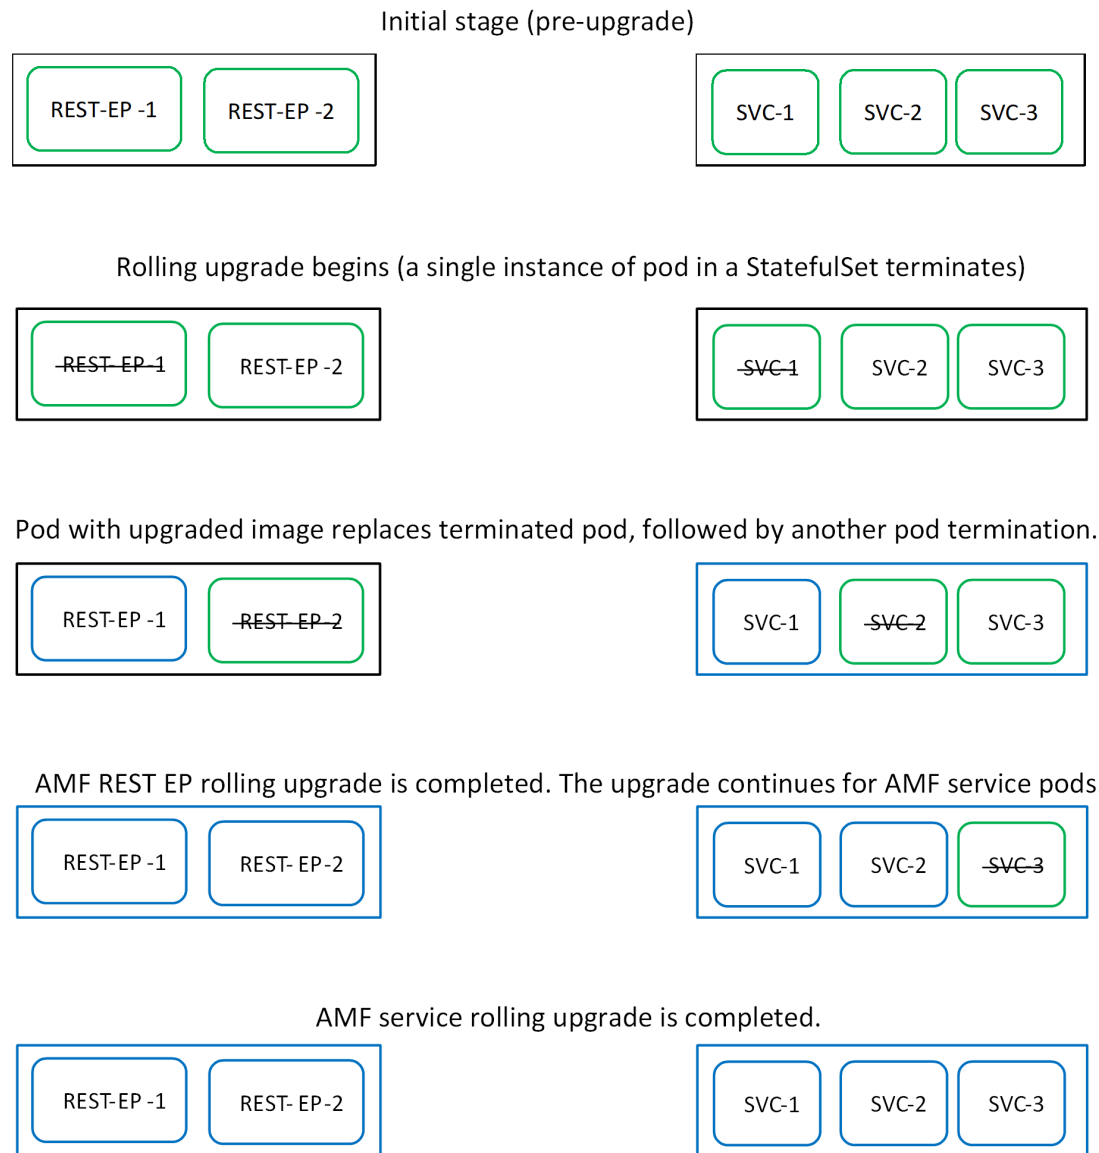Figure 11: AMF Rolling Upgrade

446808

**Important**

ETCD v3.5.x does not support in-service downgrade to 3.4.x. If you're downgrading from 2023.04.0 builds to previous releases, perform system mode shutdown before downgrade.

Prerequisites

The following is a list of prerequisites for updating AMF:

- All the nodes that include all the pods in the node must be up and running.
- A patch version of the AMF software

**Note**

Currently, major versions don't support the rolling upgrade. The major version represents the release year, release number, and maintenance number. The version format is YYYY.RN.MN. For example: 2020.03.0

**Important**

You can trigger rolling upgrade only when the CPU usage of the nodes is less than 50%.

AMF Health Check

To perform a health check and to ensure that all the services are running, and nodes are in the ready state:

- Log on to the Master node.
- Use the following configuration:

```
kubectl get pods -n smi
kubectl get nodes
kubectl get pod --all-namespaces -o wide
kubectl get pods -n amf-wsp -o wide
kubectl get pods -n cee-wsp -o wide
kubectl get pods -n smi-vips -o wide
helm list
kubectl get pods -A | wc -l
```

**Important**

Ensure that all the nodes are in the ready state before you proceed further. Use the command `kubectl get nodes` to display the node states.

Performing the Deployment File Back Up

Before upgrading, back up the configuration, logs, and deployment files.

To back up the deployment files, perform the following steps:

1. Log on to the SMI Cluster Manager Node as a Ubuntu user
2. Create a new directory for deployment.

Example:

```
test@smiamf-cm01:~$ mkdir -p "temp_$(date +%m%d%Y_T%H%M)" && cd "$_"
```

3. Move the amf deployment files into the newly created deployment directory.
4. Untar the amf deployment file.

Example:

```
test@smilamf01-cm01:~/temp_08072019_T1651$ tar -xzf amf.2020.01.0-1.SPA.tgz
./
./amf_REL_KEY-CCO_RELEASE.cer
```

```
./cisco_x509_verify_release.py
./amf.2020.01.0-1.tar
./amf.2020.01.0-1.tar.signature.SPA
./amf.2020.01.0-1.tar.SPA.README
```

5. Verify the downloaded image.

Example:

```
test@smilamf01-cm01:~/temp_08072019_T1651$ cat amf.2020.01.0-1.tar.SPA.README
```



Important Follow the procedure mentioned in the *SPA.README* file to verify the build before proceeding to the next step.

Performing the Ops Center Configuration Back Up

To back up the Ops Center configurations, perform the following steps:

1. Log on to SMI Cluster Manager node as an Ubuntu user
2. To back up the SMI Ops Center configuration to the `/home/ubuntu/smiops.backup` file, use the following command:

```
ssh -p <port_number> admin@$(kubectl get svc -n smi | grep
'.*netconf.*<port_number>' | awk '{ print $4 }') "show run | nomore"
> smiops.backup_$(date +%m%d%Y_T%H%M')
```

3. To back up the CEE Ops Center configuration to the `/home/ubuntu/ceeops.backup` file, use the following command:

```
ssh admin@<cee-vip> "show run | nomore" > ceeops.backup_$(date
+%m%d%Y_T%H%M')
```

4. To back up the AMF Ops Center configuration to the `/home/ubuntu/amfops.backup` file, use the following command:

```
ssh admin@<amf-vip> "show run | nomore" > amfops.backup_$(date
+%m%d%Y_T%H%M')
```

Performing CEE Back Up and AMF Ops Center Configuration

To back up the CEE and AMF Ops Center configuration, perform the following steps:

1. Log on to the Master node as an Ubuntu user
2. Create a directory to back up the configuration files as the following:

```
mkdir backups_$(date +%m%d%Y_T%H%M') && cd "$_"
```
3. Back up the AMF Ops Center configuration and verify the line count of the backup files as the following:

```
ssh -p <port_number> admin@$(kubectl get svc -n $(kubectl get namespaces
| grep -oP 'amf-(\d+|\w+)' | grep <port_number> | awk '{ print $3
}') "show run | nomore" > amfops.backup_$(date +%m%d%Y_T%H%M') && wc
-l amfops.backup_$(date +%m%d%Y_T%H%M')
```

Example:

```
ubuntu@poamf-mas01:~/backups_09182019_T2141$ ssh -p 2024 admin@$(kubectl get svc -n
$(kubectl get namespaces | grep -oP 'amf-(\d+|\w+)') | grep <port_number> | awk '{ print
$3 }') "show run | nomore" > amfops.backup_$(date +%m%d%Y_T%H%M') && wc -l
amfops.backup_$(date +%m%d%Y_T%H%M')
admin@<ipv4address>'s password: amf-OPS-PASSWORD
334 amfops.backup
```

4. Back up the CEE Ops Center configuration and verify the line count of the backup files as the following:

```
ssh -p <port_number> admin@$(kubectl get svc -n $(kubectl get namespaces
| grep -oP 'cee-(\d+|\w+)') | grep <port_number> | awk '{ print $3
}') "show run | nomore" > ceeops.backup_$(date +%m%d%Y_T%H%M') && wc
-l ceeops.backup_$(date +%m%d%Y_T%H%M')
```

Example:

```
ubuntu@poamf-mas01:~/backups_09182019_T2141$ ssh -p <port_number> admin@$(kubectl get
svc -n $(kubectl get namespaces | grep -oP 'cee-(\d+|\w+)') | grep <port_number> | awk
'{ print $3 }') "show run | nomore" > ceeops.backup_$(date +%m%d%Y_T%H%M') && wc -l
ceeops.backup_$(date +%m%d%Y_T%H%M')
admin@<ipv4address>'s password: CEE-OPS-PASSWORD
233 ceeops.backup
```

5. Move the SMI Ops Center backup file (from the SMI Cluster Manager) to the backup directory as the following:

```
scp $(grep cm01 /etc/hosts | awk '{ print $1
}') :/home/ubuntu/smiops.backup_$(date +%m%d%Y_T%H%M') .
```

Example:

```
ubuntu@poamf-mas01:~/backups_09182019_T2141$ scp $(grep cm01 /etc/hosts | awk '{ print
$1 }') :/home/ubuntu/smiops.backup_$(date +%m%d%Y_T%H%M') .
ubuntu@<ipv4address>'s password: SMI-CM-PASSWORD
smiops.backup                                     100% 9346      22.3MB/s
00:00
```

6. Verify the line count of the backup files.

Example:

```
ubuntu@poamf-mas01:~/backups_09182019_T2141$ wc -l *
233 ceeops.backup
334 amfops.backup
361 smiops.backup
928 total
```

Staging a New AMF Image

This section describes the procedure involved in staging a new AMF image before initiating the upgrade.

To stage the new AMF image, perform the following steps:

1. Download and verify the new AMF image.
2. Log on to the SMI Cluster Manager node as an Ubuntu user
3. Copy the images to the uploads directory.

```
sudo mv <amf_new_image.tar> /data/software/uploads
```



Note The SMI uses the new image present in the `uploads` directory to upgrade.

4. Verify whether the image is picked up by the SMI for processing from the `uploads` directory.

```
sleep 30; ls /data/software/uploads
```

Example:

```
ubuntu@poamf-cm01:~/temp_08072019_T1651$ sleep 30; ls /data/software/uploads
ubuntu@poamf-cm01:~/temp_08072019_T1651$
```

5. Verify whether the images were successfully picked up and processed.

Example:

```
auser@unknown:~$ sudo du -sh /data/software/packages/*
1.6G /data/software/packages/cee.2019.07
5.3G /data/software/packages/amf.2019.08-04
16K /data/software/packages/sample
```



Note The SMI must unpack the images into the `packages` directory successfully to complete the staging.

Triggering the Rolling Software Upgrade

AMF utilizes the SMI Cluster Manager to perform a rolling software upgrade.

To upgrade AMF using SMI Cluster Manager, use the following configuration procedures:



Important Before you begin, ensure that the AMF is up and running with the current version of the software.

1. Log on to the SMI Cluster Manager Ops Center
2. Download the latest tarball from the URL, as the following:

```
software-packages download url
```

NOTES:

- **software-packages download url**—Specify the software packages to be downloaded through HTTP/HTTPS.

Example:

```
SMI Cluster Manager# software-packages download <url>
```

3. Verify whether the tarball is loaded.

```
software-packages list
```

NOTES:

- **software-packages list**—Specify the list of available software packages.

Example:

```
SMI Cluster Manager# software-packages list
[ amf-2019-08-21 ]
[ sample ]
```

4. Update the product repository URL with the latest version of the product chart.



Note If the repository URL contains multiple versions, the Ops Center automatically selects the latest version.

```
config
  cluster cluster_name
  ops-centers app_name instance_name
    repository url
  exit
exit
```

NOTES:

- **cluster** *cluster_name*—Specify the K8s cluster name.
- **ops-centers** *app_name instance_name*—Specify the product Ops Center and instance.
app_name is the application name.
instance_name is the name of the AMF instance.
- **repository** *url*—Specify the local registry URL for downloading the charts.

Example:

```
SMI Cluster Manager# config
SMI Cluster Manager(config)# clusters test2
SMI Cluster Manager(config-clusters-test2)# ops-centers amf data
SMI Cluster Manager(config-ops-centers-amf/data)# repository <url>
SMI Cluster Manager(config-ops-centers-amf/data)# exit
SMI Cluster Manager(config-clusters-test2)# exit
```

5. Update the latest version of the product chart using the following command:

```
clusters cluster_name actions sync run
```

NOTES:

- **actions**—Specify the actions performed on the cluster.
- **sync run**—Triggers the cluster synchronization.

Example:

```
SMI Cluster Manager# clusters test2 actions sync run
```

**Important**

- The cluster synchronization updates the AMF Ops Center, which in turn updates the application pods (through the **helm sync** command) one at a time automatically.
- When you trigger rolling upgrade on a specific pod, the AMF avoids routing new calls to that pod.
- The AMF honors in-progress calls by waiting for 30 seconds before restarting the pod where rolling upgrade is initiated. Also, the AMF establishes all the in-progress calls completely within 30 seconds during the upgrade period. The maximum call-setup time is 10 seconds.

Monitoring the Upgrade

You can monitor the status of the upgrade through SMI Cluster Manager Ops Center.

To monitor the upgrade status, use the following configurations:

config

```
clusters cluster_name actions sync run debug true
clusters cluster_name actions sync logs
monitor sync-logs cluster_name
clusters cluster_name actions sync status
exit
```

NOTES:

- **clusters cluster_name**—Specify the information about the nodes to be deployed. *cluster_name* is the name of the cluster.
- **actions**—Specify the actions performed on the cluster.
- **sync run**—Trigger the cluster synchronization.
- **sync logs**—Display the current cluster synchronization logs.
- **sync status**—Display the current status of the cluster synchronization.
- **debug true**—Enter the debug mode.
- **monitor sync logs**—Monitor the cluster synchronization process.

Example:

```
SMI Cluster Manager# clusters test1 actions sync run
SMI Cluster Manager# clusters test1 actions sync run debug true
SMI Cluster Manager# clusters test1 actions sync logs
SMI Cluster Manager# monitor sync-logs test1
SMI Cluster Manager# clusters test1 actions sync status
```

**Important**

You can view the pod details after the upgrade through the CEE Ops Center.

For more information on pod details, see [Viewing the Pod Details, on page 88](#) section.

Viewing the Pod Details

You can view the details of the current pods through the CEE Ops Center.

To view the pod details, use the following command in the CEE Ops Center CLI:

```
cluster pods instance_name pod_name detail
```

NOTES:

- **cluster pods**—Specify the current pods in the cluster.
- *instance_name*—Specify the name of the instance.
- *pod_name*—Specify the name of the pod.
- **detail**—Display the details of the specified pod.

The following example displays the details of the pod named *alertmanager-0* in the *amf-data* instance.

Example:

```
cluster pods amf-data alertmanager-0 detail
details apiVersion: "v1"
kind: "Pod"
metadata:
  annotations:
    alertmanager.io/scrape: "true"
    cnf.projectcalico.org/podIP: "<ipv4address/subnet>"
    config-hash: "5532425ef5fd02add051cb759730047390b1bce51da862d13597dbb38dfbde86"
  creationTimestamp: "2020-02-26T06:09:13Z"
  generateName: "alertmanager-"
  labels:
    component: "alertmanager"
    controller-revision-hash: "alertmanager-67cdb95f8b"
    statefulset.kubernetes.io/pod-name: "alertmanager-0"
  name: "alertmanager-0"
  namespace: "amf"
  ownerReferences:
  - apiVersion: "apps/v1"
    kind: "StatefulSet"
    blockOwnerDeletion: true
    controller: true
    name: "alertmanager"
    uid: "82a11da4-585e-11ea-bc06-0050569ca70e"
  resourceVersion: "1654031"
  selfLink: "/api/v1/namespaces/amf/pods/alertmanager-0"
  uid: "82aee5d0-585e-11ea-bc06-0050569ca70e"
spec:
  containers:
  - args:
    - "/alertmanager/alertmanager"
    - "--config.file=/etc/alertmanager/alertmanager.yml"
    - "--storage.path=/alertmanager/data"
    - "--cluster.advertise-address=$(POD_IP):6783"
    env:
    - name: "POD_IP"
      valueFrom:
        fieldRef:
          apiVersion: "v1"
          fieldPath: "status.podIP"
    image: "<path_to_docker_image>"
    imagePullPolicy: "IfNotPresent"
    name: "alertmanager"
```



```

ports:
- containerPort: 9093
  name: "web"
  protocol: "TCP"
resources: {}
terminationMessagePath: "/dev/termination-log"
terminationMessagePolicy: "File"
volumeMounts:
- mountPath: "/etc/alertmanager/"
  name: "alertmanager-config"
- mountPath: "/alertmanager/data/"
  name: "alertmanager-store"
- mountPath: "/var/run/secrets/kubernetes.io/serviceaccount"
  name: "default-token-kbjnx"
  readOnly: true
dnsPolicy: "ClusterFirst"
enableServiceLinks: true
hostname: "alertmanager-0"
nodeName: "for-smi-cdl-lb-worker94d84de255"
priority: 0
restartPolicy: "Always"
schedulerName: "default-scheduler"
securityContext:
  fsGroup: 0
  runAsUser: 0
serviceAccount: "default"
serviceAccountName: "default"
subdomain: "alertmanager-service"
terminationGracePeriodSeconds: 30
tolerations:
- effect: "NoExecute"
  key: "node-role.kubernetes.io/oam"
  operator: "Equal"
  value: "true"
- effect: "NoExecute"
  key: "node.kubernetes.io/not-ready"
  operator: "Exists"
  tolerationSeconds: 300
- effect: "NoExecute"
  key: "node.kubernetes.io/unreachable"
  operator: "Exists"
  tolerationSeconds: 300
volumes:
- configMap:
    defaultMode: 420
    name: "alertmanager"
  name: "alertmanager-config"
- emptyDir: {}
  name: "alertmanager-store"
- name: "default-token-kbjnx"
  secret:
    defaultMode: 420
    secretName: "default-token-kbjnx"
status:
  conditions:
  - lastTransitionTime: "2020-02-26T06:09:02Z"
    status: "True"
    type: "Initialized"
  - lastTransitionTime: "2020-02-26T06:09:06Z"
    status: "True"
    type: "Ready"
  - lastTransitionTime: "2020-02-26T06:09:06Z"
    status: "True"
    type: "ContainersReady"

```

```

- lastTransitionTime: "2020-02-26T06:09:13Z"
  status: "True"
  type: "PodScheduled"
containerStatuses:
- containerID: "docker://821ed1a272d37e3b4c4c9c1ec69b671a3c3fe6eb4b42108edf44709b9c698ccd"

  image: "<path_to_docker_image>"
  imageID: "docker-pullable://<path_to_docker_image>"
  lastState: {}
  name: "alertmanager"
  ready: true
  restartCount: 0
  state:
    running:
      startedAt: "2020-02-26T06:09:05Z"
  hostIP: "<host_ipv4address>"
  phase: "Running"
  podIP: "<pod_ipv4address>"
  qosClass: "BestEffort"
  startTime: "2020-02-26T06:09:02Z"
cee#

```

Rolling Upgrade Optimization

Table 21: Feature History

Feature Name	Release Information	Description
Rolling Upgrade Optimization	2024.03.0	<p>AMF provides the following support for rolling upgrade optimization:</p> <ul style="list-style-type: none">• Retry mechanism at service and protocol pods during upgrades• Configuration-based rolling upgrade enhancements <p>This optimization helps in reduced session and call events per second (CEPS) loss during the upgrade procedure. The configurable rolling upgrade enhancements enable smooth rollout of the changes.</p> <p>Note It is recommended that you enable the merged mode in the GTPC endpoint configuration to optimize the performance.</p> <p>Command introduced:</p> <ul style="list-style-type: none">• supported-features [app-rx-retx-cache app-tx-retx rolling-upgrade-all rolling-upgrade-enhancement-infra] in AMF service configuration mode.• interface n26 { vip-ip vip_ip_address } in GTP endpoint configuration mode. <p>Default Setting: Disabled – Configuration Required</p>

Feature Description

AMF software version 2024.03.0 and higher supports rolling upgrade with additional optimizations. Rolling upgrade lets you perform graceful upgrade of all pods with minimal impact on sessions and CEPS.

This feature supports the following application-level enhancements:

- Retry mechanisms at protocol pods during service pods upgrade.
- Handling of transient sessions or transactions at service pods and protocol pods during their upgrades.
- Handling of topology and IPC mechanism changes to detect pods that are restarting or inactive. For inactive pods, the retry option is attempted toward other instances of pods.

Upgrading Software to Version with Rolling Upgrade Optimization Support

This section describes how to perform the rolling upgrade and to enable the rolling upgrade enhancements.



Important

Review these important guidelines associated with the rolling upgrade procedure.

- Use the rolling upgrade optimization feature only when upgrading from Release 2024.03.0 or later.
If you are upgrading to Release 2024.03.0 or later from a version earlier than Release 2024.03.0, first perform the shut-start upgrade.
- After the upgrade, enable the rolling upgrade enhancements using the CLI command. Then, the subsequent rolling upgrades to future releases includes the available optimizations.

Rolling Upgrade Considerations

To perform the rolling upgrade optimization, follow these steps:

1. Perform cluster synchronization through sync-phase ops-center to upgrade the HA AMF site to release 2024.03.
2. Apply the recommended configurations to enable the rolling upgrade enhancements.
 - a. Go to Node 1 and log in to the AMF ops-center.
 - b. Stop the ops-center.
 - c. Enable the **rolling upgrade all** feature and **merge mode**.
 - d. To enable the **rolling upgrade all** feature, use the following configuration.

```
config
  amf services service_name
  supported-features [ rolling-upgrade-all ]
end
```

- e. To enable the **merge mode** feature, use the following configuration.

```
config
  instance instance-id instance_id
  endpoint endpoint_name
  nodes nodes_count
  retransmission { timeout timeout_value | max-retry retry_count }
  internal-vip ip_address
  vip-ip ip_address
  interface interface_name
```

```

vip-ip ip_address
exit

```

3. Start the ops-center.

Rolling Upgrade Optimization Limitations

This feature has the following limitations:

- During a rolling upgrade, service pods restart one at a time, resulting in an uneven redistribution of sessions. The service pod that restarts first handles the highest number of sessions, while the service pod that restarts last handles the fewest. This redistribution can temporarily increase the memory requirements for some service pods. The system returns to normal operation once the sessions are removed from the local cache of the service pods.
- During the rolling upgrade, ongoing procedures in service pods continue, but a best-effort mechanism is in place to ensure their successful completion.

Configuring the Supported Features for Rolling Upgrade

To enable the supported features for a rolling upgrade, use the following sample configuration:

```

config
  amf-services service_name
    supported-features [ app-rx-retx-cache | app-tx-retx |
rolling-upgrade-all | rolling-upgrade-enhancement-infra ]
  end

```

NOTES:

- **supported-features [app-rx-retx-cache | app-tx-retx | rolling-upgrade-all | rolling-upgrade-enhancement-infra]**: Specify one of the following options to enable the supported features for the rolling upgrade.
 - **app-rx-retx-cache**: Enable retransmission cache for inbound messages at application.
 - **app-tx-retx**: Enable retransmission for outbound messages at application.
 - **rolling-upgrade-all**: Enable all the rolling upgrade features that are available through **rolling-upgrade-enhancement-infra**, **app-rx-retx-cache**, and **app-tx-retx** keyword options. By default, the rolling upgrade features are disabled.
rolling-upgrade-all is the only recommended option.
 - **rolling-upgrade-enhancement-infra**: Enable infra-level features.



Important

- It is recommended that you do not enable or disable the rolling upgrade features at run time to prevent an impact on the existing sessions.
- It is highly recommended that you use only the **rolling-upgrade-all** option as all the other command options are available only for debugging purpose.

Verifying Rolling Upgrade Optimization

Use the **show running-config amf-services supported-features** command to verify the supported features for a rolling upgrade.

The following is an example output of the **show running-config amf-services supported-features** command.

```
show running-config amf-services supported-features
amf-services aml
  supported-features [ rolling-upgrade-all ]
exit
```



CHAPTER 9

Application-based Alerts

- [Feature Summary and Revision History, on page 95](#)
- [Feature Description, on page 96](#)
- [How it Works, on page 96](#)
- [Configuring the Alert Rules, on page 96](#)
- [Viewing Alert Logger, on page 98](#)
- [Call Flow Procedure Alerts, on page 98](#)
- [Message Level Alerts, on page 100](#)

Feature Summary and Revision History

Summary Data

Table 22: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Disabled – Configuration required to enable
Related Documentation	Not Applicable

Revision History

Table 23: Revision History

Revision Details	Release
First introduced.	2021.04.0

Feature Description

When the system detects an anomaly, it generates an alert notification. The system statistics are the cause for these alert notifications. You can set an expression to trigger an alert when the expression becomes true.

How it Works

This section describes how this feature works.

The Common Execution Environment (CEE) uses the Prometheus Alert Manager for alerting operations. The CEE YANG model - either through CLI or API - allows users to view the active alerts and alert history. Also, the applications can call the alert API directly to add or clear alerts. The Prometheus Alert Manager API (v2) is the standard API used.

The Prometheus Alerts Manager includes the following options:

- **Defining Alert Rules:** This option defines the types of alerts that the Alert Manager should trigger. Use the Prometheus Query Language (PromQL) to define the alerts.
- **Defining Alert Routing:** This option defines the action the Alert Manager should take after receiving the alerts. At present, the SNMP Trapper is supported as the outbound alerting. Also, the CEE provides an Alert Logger for storing the generated alerts.

Configuring the Alert Rules

To configure the alert rules, use the following configuration:

```
config
  alerts rules group alert_group_name
    interval-seconds seconds
  rule rule_name
    expression promql_expression
    duration duration
    severity severity_level
    type alert-type
    annotation annotation_name
    value annotation_value
  end
```

NOTES:

- **alerts rules**—Specify the Prometheus alerting rules.
- **group alert_group_name**—Specify the Prometheus alerting rule group. One alert group can have multiple lists of rules. *alert-group-name* is the name of the alert group. The alert-group-name must be a string in the range of 0–64 characters.
- **interval-seconds seconds**—Specify the evaluation interval of the rule group in seconds.
- **rule rule_name**—Specify the alerting rule definition. *rule_name* is the name of the rule.

- **expression** *promql_expression*—Specify the PromQL alerting rule expression. *promql_expression* is the alert rule query expressed in PromQL syntax.
- **duration** *duration*—Specify the duration of a true condition before it's considered true. *duration* is the time interval before the alert is triggered.
- **severity** *severity_level*—Specify the severity of the alert. *severity_level* is the severity level of the alert. The severity levels are critical, major, minor, and warning.
- **type** *alert_type*—Specify the type of the alert. *alert_type* is the user-defined alert type. For example, Communications Alarm, Environmental Alarm, Equipment Alarm, Indeterminate Integrity Violation Alarm, Operational Violation Alarm, Physical Violation Alarm, Processing Error Alarm, Quality of Service Alarm, Security Service Alarm, Mechanism Violation Alarm, or Time Domain Violation Alarm.
- **annotation** *annotation_name*—Specify the annotation to attach to the alerts. *annotation_name* is the name of the annotation.
- **value** *annotation_value*—Specify the annotation value. *annotation_value* is the value of the annotation.

Configuration Example

The following is an example configuration.

The following example configures an alert that is triggered when the percentage of registration procedure success is less than the specified threshold limit.

```
config
  alerts rules group AMFProcStatus
    interval-seconds 300
    rule UeRegistration
      expression "sum(amf_procedure_total{proc_type='UE
Registration',proc_status='ProcStatusComplete',status='success'}) /
sum(amf_procedure_total{proc_type='UE Registration',status='attempted'}) < 0.95"
      severity major
      type Communications Alarm
      annotation annotation_name
      value summary
    value "This alert is fired when the UE registration procedure success is below specified
threshold"
  end
```

Configuration Verification

To verify the configuration.

```
show running-config alerts rules group AMFProcStatus
alerts rules group AMFProcStatus
  rule UeRegistration
    expression "sum(amf_procedure_total{proc_type='UE
Registration',proc_status='ProcStatusComplete',status='success'}) /
sum(amf_procedure_total{proc_type='UE Registration',status='attempted'}) < 0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the UE registration procedure success is below specified
threshold"
  exit
exit
exit
```

Viewing Alert Logger

By default, alert logger stores all the generated alerts. You can view the stored alerts using the following **show** command.

show alert history [detail | summary] [filtering]

You can narrow down the result using the following filtering options:

- **annotations**—Displays the annotations of the alert.
- **endsAt**—Displays the end time of the alert.
- **labels**—Displays the additional labels of the alert.
- **severity**—Displays the severity of the alert.
- **source**—Displays the source of the alert.
- **startsAt**—Displays the start time of the alert.
- **type**—Displays the type of the alert.

Use the following **show** command to view the history of the alerts configured in the system:

```
show alerts history detail
alerts history detail UEReg 11576e6a86da
severity      major
type          "Communications Alarm"
startsAt      2021-10-24T07:56:24.857Z
endsAt        2021-10-24T08:31:24.857Z
source        System
summary       "fired when ue reg fails"
labels        [ "alertname: UEReg" "cluster: amf-cndp-b19-4_cee-cisco" "monitor: prometheus"
"replica: amf-cndp-b19-4_cee-cisco" "severity: major" ]
annotations   [ "summary: fired when ue reg fails" "type: Communications Alarm" ]
```

You can view the active alerts using **show alerts active** command. The alerts remain active as long as the evaluated expression is true.

```
show alerts active detail
alerts active detail UeRegistration 92b6dcdd8726
severity      major
type          "Communications Alarm"
startsAt      2021-10-24T14:56:42.732Z
source        System
summary       "This alert is fired when the UE registration procedure success is below
specified threshold"
labels        [ "alertname: UeRegistration" "cluster: amf-cndp-b19-4_cee-cisco" "monitor:
prometheus" "replica: amf-cndp-b19-4_cee-cisco" "severity: major" ]
annotations   [ "summary: This alert is fired when the UE registration procedure success is
below specified threshold" "type: Communications Alarm" ]
```

Call Flow Procedure Alerts

This section describes commands that are required to configure alerts related to various call flow procedures.

Paging Success

To configure alerts related to the Paging Success procedure, use the following configuration:

```
alerts rules group AMFProcStatus
rule Paging
expression
"sum(amf_procedure_total{proc_type='Paging',proc_status='ProcStatusComplete',status='success'})
/ sum(amf_procedure_total{proc_type='Paging',status='attempted'}) < 0.95"
severity major
type "Communications Alarm"
annotation summary
value "This alert is fired when the Paging procedure success is below specified threshold"

exit
exit
exit
```

Service Request Success

To configure alerts related to the Service Request Success procedure, use the following configuration:

```
alerts rules group AMFProcStatus
rule ServiceRequest
expression "sum(amf_procedure_total{proc_type='Service
Request',proc_status='ProcStatusComplete',status='success'}) /
sum(amf_procedure_total{proc_type='Service Request',status='attempted'}) < 0.95"
severity major
type "Communications Alarm"
annotation summary
value "This alert is fired when the Service request procedure success is below specified
threshold"
exit
exit
exit
```

UE Deregistration Success

To configure alerts related to the UE Deregistration procedure, use the following configuration:

```
alerts rules group AMFProcStatus
interval-seconds 300
rule UeDeRegistration
expression "sum(amf_procedure_total{proc_type='UE
DeRegistration',proc_status='ProcStatusComplete',status='success'}) /
sum(amf_procedure_total{proc_type='UE DeRegistration',status='attempted'}) < 0.95"
severity major
type "Communications Alarm"
annotation summary
value "This alert is fired when the UE deregistration procedure success is below specified
threshold"
exit
exit
exit
```

UE Registration Success

To configure alerts related to the UE Registration procedure, use the following configuration:

```

alerts rules group AMFProcStatus
interval-seconds 300
rule UeRegistration
expression "sum(amf_procedure_total{proc_type='UE
Registration',proc_status='ProcStatusComplete',status='success'}) /
sum(amf_procedure_total{proc_type='UE Registration',status='attempted'}) < 0.95"
severity major
type "Communications Alarm"
annotation summary
value "This alert is fired when the UE registration procedure success is below specified
threshold"
exit
exit
exit

```

Message Level Alerts

This section describes commands that are required to configure alerts related to various message.

N1 Registration Accept

To configure alerts related to the N1 Registration Accept Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN1RegistrationSuccess
expression
"sum(increase(amf_nas_message_total{message_type=~'N1RegistrationAccept_.*'}[5m])) /
sum(increase(amf_nas_message_total{message_type=~'N1RegRequest_RegType_.*'}[5m])) < 0.95"
severity major
type "Communications Alarm"
annotation summary
value "This alert is fired when the percentage of Registration Accept sent is lesser than
threshold."
exit
exit

```

N1 Service Accept

To configure alerts related to the N1 Service Accept Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN1ServiceRequestSuccess
expression "sum(increase(amf_nas_message_total{message_type='N1ServiceAcc'}[5m])) /
sum(increase(amf_nas_message_total{message_type='N1ServiceReq'}[5m])) < 0.95"
severity major
type "Communications Alarm"
annotation summary
value "This alert is fired when the percentage of Service Accept sent is lesser than
threshold."
exit
exit

```

N1 UE Initiated Deregistration

To configure alerts related to the N1 UE Initiated Deregistration Request, use the following configuration:

```

alerts rules group AMFSvcStatus
  interval-seconds 300
  rule AMFN1UeInitDeregSuccess
    expression
    "sum(increase(amf_nas_message_total{message_type='N1DeRegAccept_UeOriginatingDereg'}[5m]))
    / sum(increase(amf_nas_message_total{message_type='N1DeRegReq_UeOriginatingDereg'}[5m]))
    < 0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Deregistration Accept sent is lesser
    than threshold."
    exit
  exit

```

N1 Network Initiated Deregistration

To configure alerts related to the N1 Network Initiated Deregistration Request, use the following configuration:

```

alerts rules group AMFSvcStatus
  interval-seconds 300
  rule AMFN1NwInitDeregSuccess
    expression
    "sum(increase(amf_nas_message_total{message_type='N1DeRegAccept_UeTerminatedDereg'}[5m]))
    / sum(increase(amf_nas_message_total{message_type='N1DeRegReq_UeTerminatedDereg'}[5m])) <
    0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Deregistration Accept received is lesser
    than threshold."
    exit
  exit

```

N2 ICSR Success

To configure alerts related to the N2 ICSR Success Request, use the following configuration:

```

alerts rules group AMFSvcStatus
  interval-seconds 300
  rule AMFN2IcsrSuccess
    expression
    "sum(increase(amf_ngap_message_total{message_type='N2InitialContextSetupRsp'}[5m])) /
    sum(increase(amf_ngap_message_total{message_type='N2InitialContextSetupReq'}[5m])) < 0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Initial Context Setup Response is lesser
    than threshold."
    exit
  exit

```

N2 PDU Setup Success

To configure alerts related to the N2 PDU Setup Success Request, use the following configuration:

```

alerts rules group AMFSvcStatus
  interval-seconds 300
  rule AMFN2PduSetupRequestSuccess

```

```

    expression
    "sum(increase(amf_ngap_message_total{message_type='N2PduSessResourceSetupRsp'}[5m])) /
    sum(increase(amf_ngap_message_total{message_type='N2PduSessResourceSetupReq'}[5m])) < 0.95"

    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Ngap PDU Setup Response is lesser than
    threshold."
    exit
exit

```

N2 PDU Modify Success

To configure alerts related to the N2 PDU Modify Success Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN2PduModifySuccess
    expression
    "sum(increase(amf_ngap_message_total{message_type='N2PduSessResourceModifyRsp'}[5m])) /
    sum(increase(amf_ngap_message_total{message_type='N2PduSessResourceModifyReq'}[5m])) < 0.95"

    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Ngap PDU Modify Response is lesser than
    threshold."
    exit
exit

```

N2 PDU Release Success

To configure alerts related to the N2 PDU Release Success Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN2PduReleaseSuccess
    expression
    "sum(increase(amf_ngap_message_total{message_type='N2PduSessResourceReleaseRsp'}[5m])) /
    sum(increase(amf_ngap_message_total{message_type='N2PduSessResourceReleaseReq'}[5m])) < 0.95"

    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Ngap PDU Release Response is lesser
    than threshold."
    exit
exit

```

N8 UECM Registration Request

To configure alerts related to the N8 UECM Registration Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN8UecmRegSuccess
    expression "sum(increase(n8_service_stats{message_type='NudmUecmRegistrationRsp',
    status='success'}[5m])) /
    sum(increase(n8_service_stats{message_type='NudmUecmRegistrationReq', status='success'}[5m]))"

```

```

< 0.95"
severity major
type "Communications Alarm"
annotation summary
value "This alert is fired when the percentage of UECM registration responses received
is lesser than threshold."
exit
exit

```

N8 UECM Deregistration Request

To configure alerts related to the N8 UECM Deregistration Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN8UecmDeRegSuccess
expression "sum(increase(n8_service_stats{message_type='NudmUecmDeRegistrationRsp',
status='success'}[5m])) /
sum(increase(n8_service_stats{message_type='NudmUecmDeRegistrationReq',
status='success'}[5m])) < 0.95"
severity major
type "Communications Alarm"
annotation summary
value "This alert is fired when the percentage of UECM deregistration responses received
is lesser than threshold."
exit
exit

```

N8 SDM Data Request

To configure alerts related to the N8 SDM Data Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN8SdmDataReqSuccess
expression "sum(increase(n8_service_stats{message_type='NudmSdmDataRsp',
status='success'}[5m])) / sum(increase(n8_service_stats{message_type='NudmSdmDataReq',
status='success'}[5m])) < 0.95"
severity major
type "Communications Alarm"
annotation summary
value "This alert is fired when the percentage of SDM Data responses received is lesser
than threshold."
exit
exit

```

N8 SDM Subscription Request

To configure alerts related to the N8 SDM Subscription Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN8SdmSubscriptionSuccess
expression "sum(increase(n8_service_stats{message_type='NudmSdmSubscriptionRsp',
status='success'}[5m])) / sum(increase(n8_service_stats{message_type='NudmSdmSubscriptionReq',
status='success'}[5m])) < 0.95"
severity major
type "Communications Alarm"
annotation summary
value "This alert is fired when the percentage of SDM Subscription responses received is

```

```

    lesser than threshold."
    exit
exit

```

N8 SDM Unsubscribe Request

To configure alerts related to the N8 SDM Unsubscribe Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN8SdmUnSubscriptionSuccess
    expression "sum(increase(n8_service_stats{message_type='NudmSdmUnSubscriptionRsp',
status='success'}[5m])) /
sum(increase(n8_service_stats{message_type='NudmSdmUnSubscriptionReq', status='success'}[5m]))
< 0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of SDM UnSubscription responses received
is lesser than threshold."
    exit
exit

```

N8 PCSCF Restoration Request

To configure alerts related to the N8 PCSCF Restoration Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN8PcscfRestorationSuccess
    expression "sum(increase(n8_service_stats{message_type='NudmPcscfRestorationRsp',
status='success'}[5m])) /
sum(increase(n8_service_stats{message_type='NudmPcscfRestorationReq',
status='attempted'}[5m])) < 0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Pcscf Restoration responses sent is
lesser than threshold."
    exit
exit

```

N11 SM Create

To configure alerts related to the N11 SM Create Request, use the following configuration:

```

alerts rules group AMFSvcStatus
interval-seconds 300
rule AMFN11SMCreateSuccess
    expression
"sum(increase(rpc_response_total{msg_type='PostSmCtxtsRequestPB',rpc_name='SMF',status_code='201'}[5m]))/
sum(increase(rpc_response_total{msg_type='PostSmCtxtsRequestPB',rpc_name='SMF'}[5m])) <
0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Update SM context responses received
is lesser than threshold."
    exit
exit

```


N11 SM Release

To configure alerts related to the N11 SM Release Request, use the following configuration:

```
alerts rules group AMFSvcStatus
  interval-seconds 300
  rule AMFN11SMReleaseSuccess
    expression
    "sum(increase(rpc_response_total{msg_type='PostSmCtxtsReleaseRequest',rpc_name='SMF',status_code='204'}[5m]))
    /
    sum(increase(rpc_response_total{msg_type='PostSmCtxtsReleaseRequest',rpc_name='SMF'}[5m]))
    < 0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Release SM context responses received
    is lesser than threshold."
    exit
  exit
```

N11 SM Update

To configure alerts related to the N11 SM Update Request, use the following configuration:

```
alerts rules group AMFSvcStatus
  interval-seconds 300
  rule AMFN11SMUpdateSuccess
    expression
    "sum(increase(rpc_response_total{msg_type='PostSmCtxtsModifyRequestPB',rpc_name='SMF',status_code=~'200|204'}[5m]))
    / sum(increase(rpc_response_total{msg_type='PostSmCtxtsModifyRequestPB',rpc_name='SMF'}[5m]))
    < 0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value This alert is fired when the percentage of Update SM context responses received is
    lesser than threshold."
    exit
  exit
```

N12 UeAuth Req

To configure alerts related to the N12 UeAuth Request, use the following configuration:

```
alerts rules group AMFSvcStatus
  interval-seconds 300
  rule AMFN12UeAuthReqSuccess
    expression "sum(increase(n12_service_stats{message_type='NausfUeAuthRsp',
    status='success'}[5m])) / sum(increase(n12_service_stats{message_type='NausfUeAuthReq',
    status='success'}[5m])) < 0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Ausf UE Auth responses received is
    lesser than threshold."
    exit
  exit
```

N15 AM Policy Control Create

To configure alerts related to the N15 AM Policy Control Create Request, use the following configuration:

```
alerts rules group AMFSvcStatus
  interval-seconds 300
  rule AMFN15PolicyControlCreateSuccess
    expression "sum(increase(n15_service_stats{message_type='NpcfAmPolicyControlCreateRsp',
status='success'}[5m])) /
sum(increase(n15_service_stats{message_type='NpcfAmPolicyControlCreateReq',
status='success'}[5m])) < 0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Policy control create responses received
is lesser than threshold."
    exit
  exit
```

N15 AM Policy Control Delete

To configure alerts related to the N15 AM Policy Control Delete Request, use the following configuration:

```
alerts rules group AMFSvcStatus
  interval-seconds 300
  rule AMFN15PolicyControlDeleteSuccess
    expression "sum(increase(n15_service_stats{message_type='NpcfAmPolicyControlDeleteRsp',
status='success'}[5m])) /
sum(increase(n15_service_stats{message_type='NpcfAmPolicyControlDeleteReq',
status='success'}[5m])) < 0.95"
    severity major
    type "Communications Alarm"
    annotation summary
    value "This alert is fired when the percentage of Policy control delete responses received
is lesser than threshold."
    exit
  exit
```



CHAPTER 10

Attach Rate Throttling

- [Feature Summary and Revision History, on page 107](#)
- [Feature Description, on page 108](#)
- [How it Works, on page 108](#)
- [Feature Configuration, on page 108](#)
- [OAM Support, on page 110](#)

Feature Summary and Revision History

Summary Data

Table 24: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Disabled – Configuration required to enable
Related Documentation	Not Applicable

Revision History

Table 25: Revision History

Revision Details	Release
First introduced.	2022.04.0

Feature Description

Attach rate limit is the maximum number of new connections that AMF can process. The new connections include Initial Registration Request, Namf_Communication_CreateUEContext Request, and N26 Forward Relocation Request.

Setting the rate limit enables the operators to manage the traffic and reduce the signaling on the external nodes.



Note

AMF does not throttle emergency, periodic, and mobility registration.

How it Works

This section describes how this feature works.

When you enable the attach rate throttling feature, AMF buffers and queues new connection requests (excluding Emergency Registration). The AMF prioritizes the processing of these requests in the FIFO (first in, first out) order.

If the queue is full, AMF drops or rejects packets with a cause code which is based on the configured action.

Feature Configuration

To configure this feature, use the following configuration:

```
config
  amf-global
    network-protection-overload
      attach-rate
        rate-limit permitted_connection_count
        queue-size queue_size
        action
          drop
          initial-registration reject-with-cause { congestion |
protocol_error_unspecified }
          in14-create-ue-context reject-with-http-code {403}
          in26-fwd-reloc reject-with-cause { gtpc-entity-congestion
| relocation-failure | no-resources-available }
        end
```

NOTES:

- **amf-global**—Enter the AMF global configuration mode.
- **attach-rate**—Configure the attach rate feature.
- **rate-limit** *permitted_connection_count*—Specify the number of new connections that AMF accepts per second. *permitted_connection_count* must be an integer in the range 50—5000.

- **queue-size** *queue_size*—Specify the size of queue that AMF uses for buffering the packets. AMF uses this queue when the new connection requests exceed the value that you have specified for **rate-limit**.

queue_size must be an integer in the range 50—1000. The default *queue_size* is 50.

- **action**—Configure the action that AMF takes when the queue is full. The default action is Reject for all requests with #default reject cause.

The following options are available for Action:

- **drop**—Configure to drop all the new connection requests.
- **initial-registration reject-with-cause { congestion | protocol_error_unspecified }**—Configure AMF to reject the UE-initiated Initial Registration Request with the one of the following causes in the reject message:
 - **congestion**—The message is congestion (22).
 - **protocol_error_unspecified**—The message is protocol_error_unspecified (111) #default.
- **n14-create-ue-context reject-with-http-code {403}**—Configure AMF to reject the new Namf_Communication_CreateUEContext Request with the HTTP error code. The AMF receives this request in the source AMF during the UE-initiated inter-AMF N2 handover. With the error code as 403, the Cause attribute of the ProblemDetails is set to HANDOVER_FAILURE #default.
- **n26-fwd-reloc reject-with-cause { gtpc-entity-congestion | relocation-failure | no-resources-available }**—Configure AMF to reject the new MME-initiated forward relocation requests through the N26 interface.

If AMF rejects the inbound forward-relocation requests, it uses one of the following cause codes:

- No resources available (73)
- gtpc-entity-congestion (120)
- relocation-failure (81) #default



Note

- AMF does not support dynamic change configuration.
- The configured rate-limit and queue-size are applied to each amf-service pod and not at the aggregation of all service pods.

Configuration Example

The following is an example configuration.

```
amf-global
network-protection-overload attach-rate
  rate-limit 100
  queue-size 100
action
  initial-registration reject-with-cause congestion
  n14-create-ue-context reject-with-http-code 403
  n26-fwd-reloc reject-with-cause relocation-failure
```

```
    exit
exit
exit
amf-global
network-protection-overload attach-rate
    rate-limit 100
    queue-size 100
    action
        drop
    exit
exit
exit
```

OAM Support

This section describes operations, administration, and maintenance support for this feature.

Bulk Statistics Support

AMF supports the following statistics for the Attach Rate Throttling feature.

attach_rate_trottle

Description: The message-level statistics that AMF uses to reject or drop connection requests when the queue is full.

Labels:

- app_name
- message_type: GTPCFwdRelocReq, N14UeContextCreateReq, N1RegistrationRequest
- action: drop, reject



CHAPTER 11

Common Data Layer

- [Feature Summary and Revision History, on page 111](#)
- [Feature Description, on page 111](#)
- [Feature Configuration, on page 113](#)

Feature Summary and Revision History

Summary Data

Table 26: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled - Always-on
Related Documentation	Not Applicable

Revision History

Table 27: Revision History

Revision Details	Release
First introduced.	2021.04.0

Feature Description

Common Data Layer (CDL) can be deployed separately as a common datastore for AMF.

The following are the two different deployment possibilities for CDL pods:

- CDL created locally in the same namespace as that of AMF namespace

- CDL created in a different namespace

Architecture


AMF consists of the following layers as part of the cloud native architecture:

- Protocol Layer—NGAP/NAS over SCTP transport and SBA over REST/HTTP transport
Example: AMF-protocol and AMF REST-EP
- Service Layer—Business logic of AMF functionality
Example: AMF-service pod
- Datastore Layer—Supports session storage
Example: CDL

The management entities Etd, Cache pod, and NodeMgr provide services to the Protocol Layer, Service Layer, and Datastore Layer functionalities.

The following figure explains the architecture of AMF instance with separate namespace of CDL.

Figure 12: AMF Instance Architecture

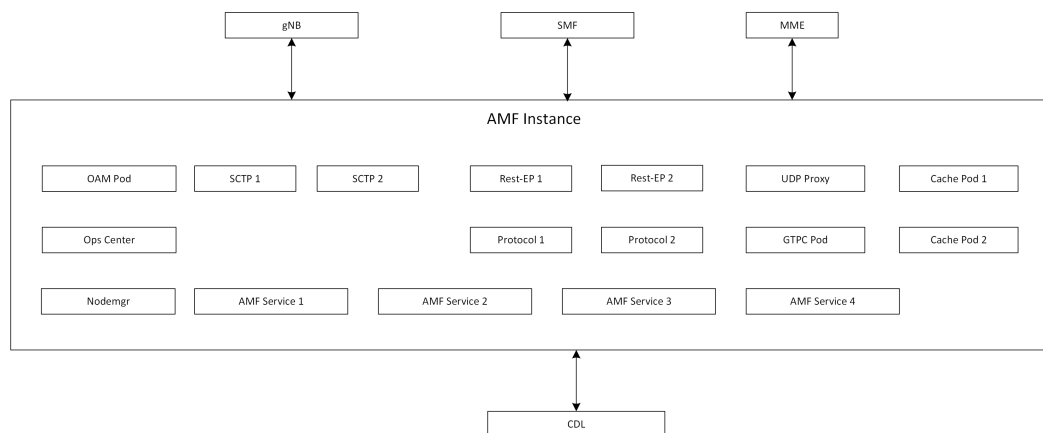

475749

The CDL is deployed as an independent entity which acts as a session store for AMF. The AMF instance performs the following:

The CDL can be configured with slice name as AMF to store the AMF sessions. The AMF instance performs the following:

- Provides instance ID by enhancing the existing session gRPC APIs of CDL or using session-related CDL gRPC APIs.
- Uses the slice name as AMF for session store with CDL.

The CDL exposes the gRPC API to register or deregister notification URI. The AMF instance uses gRPC API to provide the notification URI details to CDL.

The CDL searches for the notification URI in session lookup with instance ID. If the notification URI fails, the CDL picks another URI from the list in round robin.

Feature Configuration

Configuring this feature involves the following steps:

- CDL configuration in same namespace as AMF—This configuration provides the commands to configure CDL locally per AMF in the same namespace. For more information, refer to [Configuring the CDL in same namespace as AMF, on page 113](#).
- CDL configuration in different namespace as AMF—To deploy CDL in different namespace, install CDL Ops Center in a separate namespace. This configuration provides the commands to configure CDL in separate namespace. For more information, refer to [Configuring the CDL in different namespace as AMF, on page 115](#).

Configuring the CDL in same namespace as AMF

The CDL in same namespace as AMF configuration must be done in AMF Ops Center.

To configure CDL in same namespace as AMF, use the following example configuration:

```
cdl label-config session
  endpoint key key_value
  endpoint value endpoint_value
  slot map no_of_slot_maps
    key key_value
    value value
  end
  index map map_number
    key key_value
    value value
  end
cdl logging default-log-level log_level
cdl datastore session
  cluster-id cluster_id
  label-config session
    slice-names cdl_slice_name
    endpoint replica replica_number
    index replica replica_number
    index map map_number
      index write-factor write_factor
    end
    slot replica replica_number
    slot map map_number
      slot write-factor write_factor
    end
  end
end
```

```
end
cdl kafka replica replica_number
cdl kafka storage storage_value
```

NOTES:

- **endpoint key** *key_value*—Specify the key for the endpoint configuration.
- **endpoint value** *endpoint_value*—Specify the value associated with the endpoint key.
- **slot map** *no_of_slot_maps*—Specify the number of partitions to be created for slot. Must be an integer in the range of 1–1024.
- **key** *key_value*—Specify the key for the slot map.
- **value** *value*—Specify the value associated with the slot map key.
- **index map** *map_number*—Specify the number of partitions to be created for index. Must be an integer in the range of 1–1024.
- **key** *key_value*—Specify the key for the index map.
- **value** *value*—Specify the value associated with the index map key.
- **cdl logging default-log-level** *log_level*—Specify the default logging level for the system.
- **cluster-id** *cluster_id*—Specify the the cluster ID for the datastore session.
- **slice-names** *cdl_slice_name*—Specify the CDL slice names. *cdl_slice_name* must be an alphanumeric string from 1 to 16 characters in length.
- **endpoint replica** *replica_number*—Specify the number of replicas to be created. The default value is 1. Must be an integer in the range of 1–16.
- **index replica** *no_of_replicas_per_map*—Specify the number of replicas to be created. The default value is 2. *num_replica* must be an integer in the range of 1–16.
- **index write-factor** *write_factor*—Specify the number of copies to be written before successful response. The default value is 1. *write_factor* must be an integer in the range of 0–16.
- **slot replica** *replica_number*—Specify the number of replicas to be created. The default value is 1. *num_replica* must be an integer in the range of 1–16.
- **slot map** *map_number*—Specify the number of partitions in a slot. The default value is 1. *num_map/shards* must be an integer in the range of 1–1024.
- **slot write-factor** *write_factor*—Specify the number of copies to be written before successful response. The default value is 1. *write_factor* must be an integer in the range of 0–16. Make sure that the value is lower than or equal to the number of replicas..

Configuration Example

Use the `show running-config cdl` command to verify the configuration. The following is an example configuration in CDL Ops Center.

```
cdl label-config session
endpoint key smi.cisco.com/node-type-4
endpoint value cdl
slot map 1
```

```

key smi.cisco.com/node-type-4
value cdl
exit
slot map 2
key smi.cisco.com/node-type-4
value cdl
exit
index map 1
key smi.cisco.com/node-type-4
value cdl
exit
exit
cdl logging default-log-level error
cdl datastore session
cluster-id 1
label-config session
slice-names [ 1 ]
endpoint replica 2
index replica 2
index map 1
index write-factor 1
slot replica 2
slot map 2
slot write-factor 1
slot notification dynamic-provisioning true
exit
cdl kafka replica 3
cdl kafka storage 1

```

Configuring the CDL in different namespace as AMF

To configure CDL in a different namespace as AMF, use the following configuration:

```

cdl label-config session
  endpoint key key_value
  endpoint value endpoint_value
  slot map no_of_slot_maps
    key key_value
    value value
  end
  index map map_number
    key key_value
    value value
  end
cdl logging default-log-level log_level
cdl datastore session
  cluster-id cluster_id
  label-config session
    slice-names cdl_slice_name
    endpoint replica replica_number
    index replica replica_number
    index map map_number
      index write-factor write_factor
    end
    slot replica replica_number
    slot map map_number
      slot write-factor write_factor

```

```

        slot notification dynamic-provisioning true
    end
end
end
cdl kafka replica replica_number
cdl kafka storage storage_value

```

NOTES:

- **endpoint key** *key_value*—Specify the key for the endpoint configuration.
- **endpoint value** *endpoint_value*—Specify the value associated with the endpoint key.
- **slot map** *no_of_slot_maps*—Specify the number of partitions to be created for slot. Must be an integer in the range of 1–1024.
- **key** *key_value*—Specify the key for the slot map.
- **value** *value*—Specify the value associated with the slot map key.
- **index map** *map_number*—Specify the number of partitions to be created for index. Must be an integer in the range of 1–1024.
- **key** *key_value*—Specify the key for the index map.
- **value** *value*—Specify the value associated with the index map key.
- **cdl logging default-log-level** *log_level*—Specify the default logging level for the system.
- **cluster-id** *cluster_id*—Specify the the cluster ID for the datastore session.
- **slice-names** *cdl_slice_name*—Specify the CDL slice names. *cdl_slice_name* must be an alphanumeric string from 1 to 16 characters in length.
- **endpoint replica** *replica_number*—Specify the number of replicas to be created. The default value is 1. Must be an integer in the range of 1–16.
- **index replica** *no_of_replicas_per_map*—Specify the number of replicas to be created. The default value is 2. *num_replica* must be an integer in the range of 1–16.
- **index write-factor** *write_factor*—Specify the number of copies to be written before successful response. The default value is 1. *write_factor* must be an integer in the range of 0–16.
- **slot replica** *replica_number*—Specify the number of replicas to be created. The default value is 1. *num_replica* must be an integer in the range of 1–16.
- **slot map** *map_number*—Specify the number of partitions in a slot. The default value is 1. *num_map/shards* must be an integer in the range of 1–1024.
- **slot write-factor** *write_factor*—Specify the number of copies to be written before successful response. The default value is 1. *write_factor* must be an integer in the range of 0–16. Make sure that the value is lower than or equal to the number of replicas..

Configuration Example

Use the `show running-config cdl` command to verify the configuration. The following is an example configuration in CDL Ops Center.

```
cdl label-config session
  endpoint key smi.cisco.com/node-type-4
  endpoint value cdl
  slot map 1
    key smi.cisco.com/node-type-4
    value cdl
  exit
  slot map 2
    key smi.cisco.com/node-type-4
    value cdl
  exit
  index map 1
    key smi.cisco.com/node-type-4
    value cdl
  exit
exit
cdl logging default-log-level error
cdl datastore session
  cluster-id 1
  label-config session
  slice-names [ 1 ]
  endpoint replica 2
  index replica 2
  index map 1
  index write-factor 1
  slot replica 2
  slot map 2
  slot write-factor 1
  slot notification dynamic-provisioning true
exit
cdl kafka replica 3
cdl kafka storage 1
```




CHAPTER 12

Collision Handling

- [Feature Summary, on page 119](#)
- [Feature Description, on page 119](#)
- [How it Works, on page 120](#)
- [OAM Support, on page 120](#)

Feature Summary

Summary Data

Table 28: Summary Data

Applicable Products or Functional Area	AMF
Applicable Platforms	SMI
Feature Default Setting	Enabled – Always-on
Related Documentation	Not Applicable

Feature Description

The AMF interacts and supports multiple nodes. A few of the nodes are as the following:

- UE/GNB
- UDM
- AUSF
- SMF

When multiple nodes send simultaneous request towards the AMF, there's a possibility of collision at the AMF node.

The AMF collision handling feature supports handling the collision between different procedures at the AMF node.

How it Works

When a collision is detected, any of the following AMF collisions resolver-based procedures get activated:

- Aborts an ongoing procedure and performs peer node cleanup when required.
- Aborts an ongoing procedure and cleans locally without informing peer nodes.
- Discards an incoming message without responding and paving a way for its timeout.
- Allows both procedures to continue and execute one at a time in the FIFO manner.

Examples:

The following are a few examples:

1. The AMF receives a note of the UE-initiated deregistration process, while the initial registration procedure activity is still in progress.

In this case, the AMF aborts the initial registration procedure locally, without informing peer nodes such as UDM, PCF, and so on.

2. The AMF receives a note of another initial registration process, while the current one is still in progress.

In this case, the AMF aborts the older initial registration procedure, and performs the peer node cleanup activity, if required (such as the `AMPolicyControl_Delete` activity).

OAM Support

This section describes operations, administration, and maintenance support for this feature.

Bulk Statistics Support

The following statistics is used in the AMF collision handling.

amf_collision_stats

Description:

This set of statistics is used for tracking and debugging the AMF collision. The statistics include the name of the colliding procedure and the action taken by the collision resolver.

Sample Query:

```
amf_collision_stats{action_type="abort_procl",
app_name="amf",cluster="clu001",data_center="sys001",
instance_id="0",procl="UERegistration",
proc2="Deregistration",service_name="amf-service"} 1
```


When the AMF receives the De-Registration while the UE Registration procedure is in progress, the collision resolver aborts the registration procedure. It includes the names of two colliding procedures and collision resolver actions.

Labels:

- Label: **action_type**

Label Description: Type of the action associated with the AMF collision statistics

Example: **abort_proc1**

- Label: **app_name**

Label Description: The name of the NF-app associated with the AMF collision statistics

Example: **amf**

- Label: **cluster**

Label Description: The name of the cluster associated with the AMF collision statistics

Example: **clu001**

- Label: **data_center**

Label Description: The name of the data center associated with the AMF collision statistics

Example: **sys001**

- Label: **instance_id**

Label Description: The instance ID associated with the AMF collision statistics

Example: **0**

- Label: **proc1**

Label Description: The procedure type associated with the AMF collision statistics This label refers as one of the procedures or as the primary procedure.

Example: **UERegistration**

- Label: **proc2**

Label Description: The procedure type associated with the AMF collision statistics This label refers as one of the procedures or as the secondary procedure.

Example: **Deregistration**

- Label: **service_name**

Label Description: Name of the NF service associated with the AMF collision statistics

Example: **amf-service**

For more information on bulk statistics support for AMF, see the *UCC 5G AMF Metrics Reference* document.



CHAPTER 13

CMAS Service Support

- [Feature Summary and Revision History, on page 123](#)
- [Feature Description, on page 123](#)
- [How it Works, on page 124](#)
- [Configure the Cache Validity Timer, on page 130](#)

Feature Summary and Revision History

Summary Data

Table 29: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled - Always-on
Related Documentation	Not Applicable

Revision History

Table 30: Revision History

Revision Details	Release
First introduced.	2021.04.0

Feature Description

This feature describes broadcasting of warning messages. CBE (Cell Broadcast Entity) broadcasts the warning message to multiple AMFs. Each AMF sends list of gNB or TAI to broadcast the message. One or more

NG-RAN nodes schedule the broadcast of the new message and the repetitions in each cell. After the NG-RAN broadcast the warning message, a report is sent back to the AMF from where the message received.

How it Works

This section describes how this feature works.

Call Flows

This section describes the key call flow for this feature.

CMAS Subscription, Message Delivery, and Notification Call Flow

This section describes the CMAS Subscription, Message Delivery, and Notification call flow.

Figure 13: CMAS Subscription, Message Delivery, and Notification Call Flow

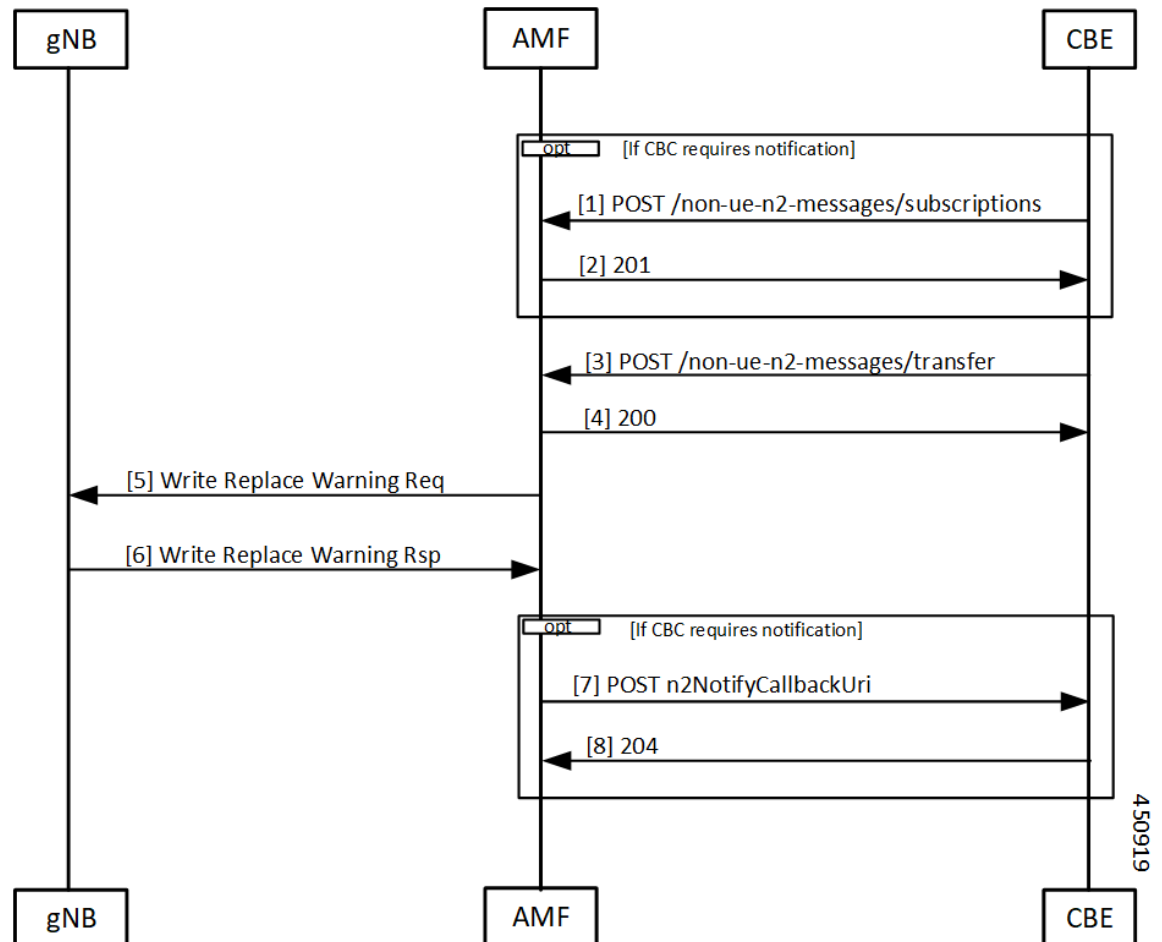


Table 31: CMAS Subscription, Message Delivery, and Notification Call Flow Description


Step	Description
1	The Cell Broadcast Center (CBC) creates and sends a NonUeN2InfoSubscribe to the AMF to be notified by the NG-RANs for the UE coverage of warning messages sent. The message type is the subscription parameter. The Cell Broadcast Entity (CBE) cannot subscribe a subset of warning messages.
2	The AMF creates a subscription and returns the location of the subscription to the CBE. The CBCF uses this location if it needs to modify or cancel the subscription.
3	<p>The CBCF creates a Write Replace Warning Request NG-RAN message containing the warning message to broadcast. The message contains the following:</p> <ul style="list-style-type: none"> • Message Identifier • Serial Number • List of NG-RAN TAIs • Warning Area List NG-RAN • CWM Indicator • Send Write-Replace-Warning-Indication • Global RAN Node ID • Warning Area Coordinates <p>This becomes a binary part to a Non-UE Message Transfer request to the AMF. The CBCF also optionally sends a list of TAI or a list of gNBs to AMF that need to receive this message.</p>
4	The AMF responds to the CBCF that sending of warning messages to the gNodeB has started.
5	The AMF determines the set of gNB that need the message to send. This could be a list of gNB (if the CBCF sends the list), all gNB in a list of TAI, or all the gNB that are connected to the AMF. The AMF doesn't interpret the binary information that is part of the request. The AMF then sends a Write Replace warning request to the gNB.
6	The gNB responds to the warning message after broadcasting it.
7	If the CBCF has registered for notifications, the AMF notifies the CBCF. Each message that is sent by the gNB becomes an individual notification, as multiple binary payloads are not allowed in a single message.
8	The CBCF responds to the notification from the AMF.

Non-UE N2 Messages Subscription Call Flow

This section describes the Non-UE N2 Messages Subscription call flow.

Handling of subscriptions from various peer nodes are identical, irrespective of the requesting entity a CBCF, an LMF, or a peer AMF. Handling of these subscriptions takes place as per message category.

Figure 14: Non-UE N2 Messages Subscription Call Flow

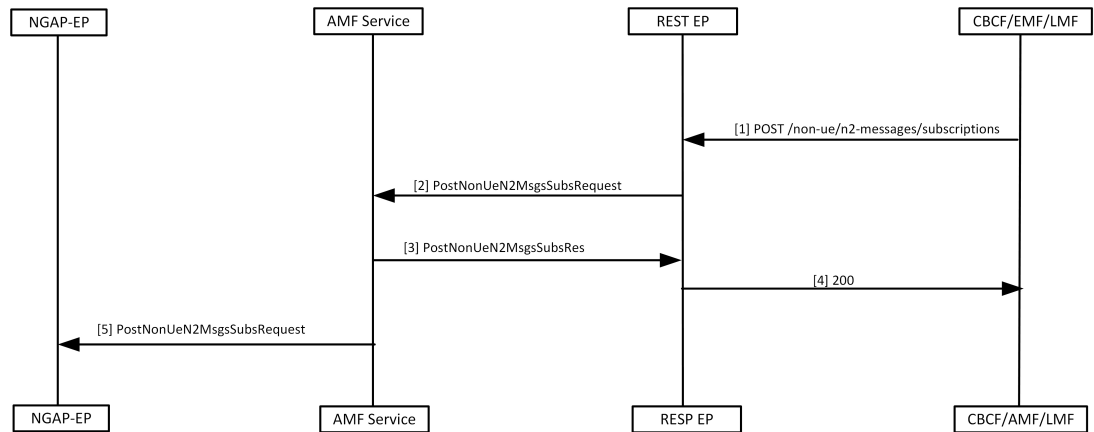

448191

Table 32: Non-UE N2 Messages Subscription Call Flow Description


Step	Description
1	The peer node sends a subscription request to the AMF, which reaches the REST-EP. This message is either a PWS-BCAL (Broadcast Completed Area List or Broadcast Canceled Area List) or PWS-RF (Restart Indication or Failure Indication).
2	The REST-EP forwards this message to the AMF service.
3	The AMF service saves the subscription to the database and sends a success response to REST-EP. The saved subscription contains the URI of the remote node and the parameters for the subscriptions. The AMF creates a unique location URI for this subscription and includes it in the response.
4	The REST-EP responds with a 201 message to the peer node.
5	The AMF service forwards this information to the NGAP-EP.

Non-UE N2 Messages Transfer Call Flow

This section describes the Non-UE N2 Messages Transfer call flow.

The AMF does not analyze the binary contents of the received message from any of its peer nodes.

Figure 15: Non-UE N2 Messages Transfer Call Flow

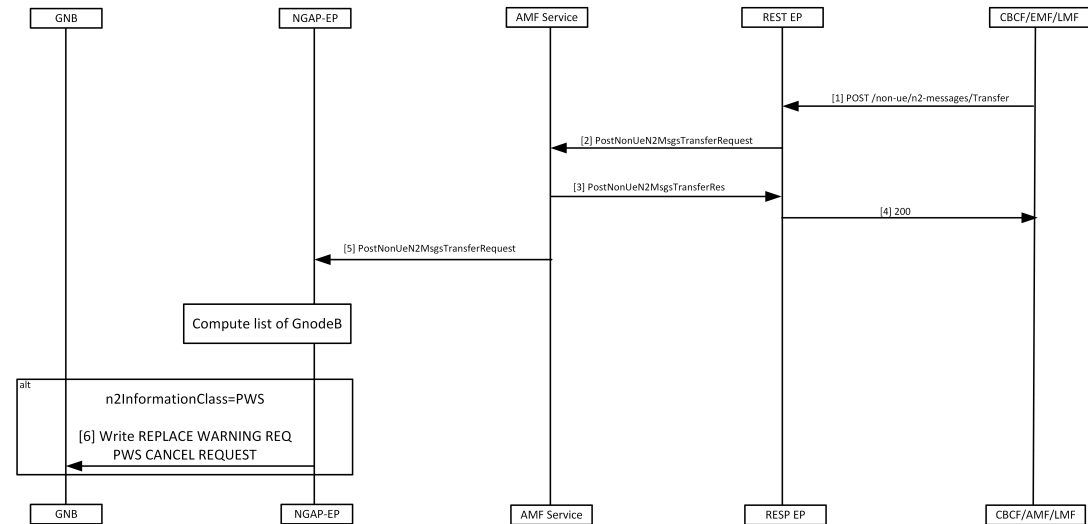

448192

Table 33: Non-UE N2 Messages Transfer Call Flow Description

Step	Description
1	The peer node sends a NonUEN2MsgeTransferRequest to the AMF. The REST-EP receives this request and forwards the message to the AMF service.
2	AMF does the following while handling the warning messages (these messages may contain filters, for example, gNB or TAIs that must match): <ul style="list-style-type: none"> On receiving the warning message, AMF service checks for protocol errors and returns error response, if there is any. If the warning message contains filters, the AMF forwards the message to all NG-RANS that match the filters. If the warning message doesn't contain filters, the AMF forwards the message to all NG-RANS connected to this AMF. If the warning message contains filters but no matching NG-RANS, the AMF doesn't send any message.
3	The AMF sends NonUEN2MsgeTransferResponse to the REST-EP. <ul style="list-style-type: none"> The AMF saves PWS messages to obtain correlation in responses, if the CBCF requests the responses to be send.
4	The REST-EP sends the response to the peer that sent the request.
5	The AMF service forwards the NonUEN2MsgeTransferRequest to the NGAP-EP. The NGAP-EP uses the parameters of the request to find the list of gNodeB to send these messages.

Step	Description
6	<p>The NGAP-EP forwards the message to gNB with the following scenarios:</p> <ul style="list-style-type: none"> • The NGAP copies the N2 payload without any changes and forwards it to the gNB, when the message has the N2InformationClass set to PWS. • The AMF performs the following actions, when the sendRanResp field in PWS information is set to true. <ul style="list-style-type: none"> • Saves the msgIdentifier and the serial number of the message. • Saves the notification control block for PWS information. • AMF stores the send RAN response indication for CMAS broadcast messages in the cache. To configure the timer value for cache validity, see Configure the Cache Validity Timer, on page 130. The default value for cache validity is 2 hours.

Non-UE Message Notification Call Flow

This section describes Non-UE Message Notification call flow.

Figure 16: Non-UE Message Notification Call Flow

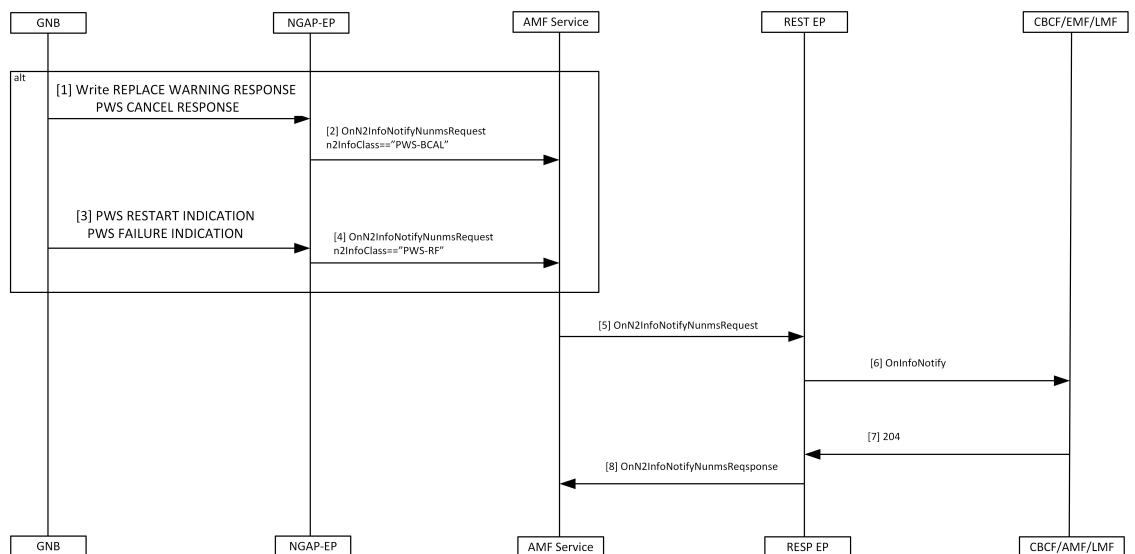


Table 34: Non-UE Message Notification Call Flow description

Step	Description
1	The gNB sends a Write Replace Warning Response or PWS Cancel Response to NGAP-EP.


Step	Description
2	The NGAP-EP generates a callback with n2InfoClass set to PWS-BCAL with the following conditions. <ul style="list-style-type: none"> Subscription for notification for this event is available. Serial number corresponds to a request originally send with sendRanResponse as True.
3	If the gNB sends a PWS Restart Indicator or a PWS Failure Indication, it reaches the NGAP-EP.
4	If there's a subscription for notification of the PWS events, the NGAP-EP generates a callback with n2InfoClass set to PWS-RF.
5	The AMF service forwards the onN2InfoNotifyRequest to REST-EP.
6	The REST-EP sends the message to the peer node.
7	The peer node responds with a 204 OK.
8	The REST-EP forwards the onN2InfoNotifyResponse to the AMF.

Non-UE Notification Subscription Deletion Call Flow

This section describes the Non-UE Notification Subscription Deletion call flow.

On receiving the non-UE events notification in the AMF, the existing subscription gets deleted.

Figure 17: Non-UE-Notification Subscription Deletion Call Flow

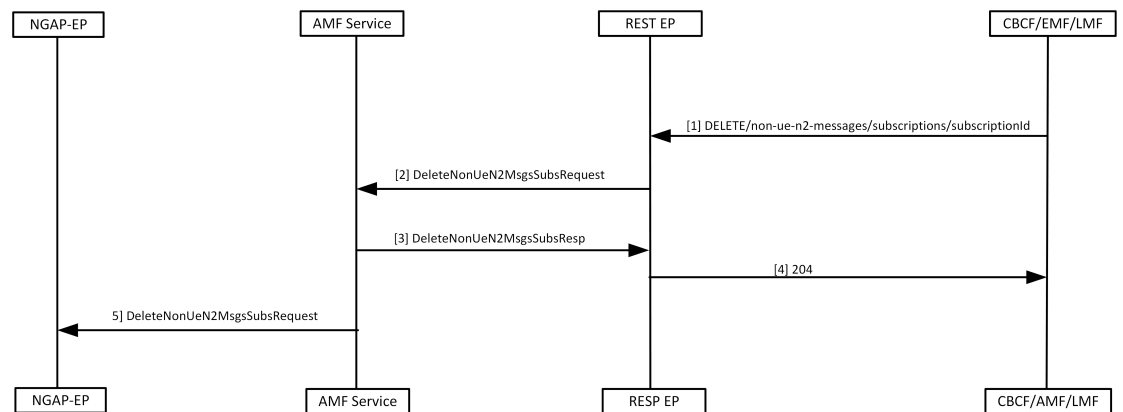

448194

Table 35: Non-UE Notification Subscription Deletion Call Flow Description

Step	Description
1	The peer node sends a Delete message to the AMF with the ID assigned during the subscription process .
2	The REST-EP forwards the request to the AMF service.

Step	Description
3	The AMF service deletes the subscription information from the database before sending the response to the REST-EP.
4	The REST-EP forwards the response as 204 to the peer node.
5	The AMF service sends the request to NGAP-EP to remove the existing subscription from the NGAP-EP.

Configure the Cache Validity Timer

Procedure

Step 1 Enter the call-control-policy configuration mode.

call-control-policy *policy_name*

Step 2 Configure the cache validity timer for storing the send ran response indication for CMAS broadcast messages.

timers cmas-send-response value *timer_value*

Specify the timer value in seconds. If no timer value is explicitly configured, the default cache timer value is 2 hours.

Example:

```
[amf] amf(config)# amf-global
[amf] amf(config-amf-global)# call-control-policy local
[amf] amf(config-call-control-policy-local)# timers cmas-send-response?
Possible completions:
cmas-send-response    cache timer(in seconds) for storing the send response indication for cmas
broadcast, default value is 2hours
[amf] amf(config-call-control-policy-local)# timers cmas-send-response value ?
Possible completions:
<unsignedInt, 3600 .. 86400>[7200]
[amf] amf(config-call-control-policy-local)# timers cmas-send-response value 86400
[amf] amf(config-call-control-policy-local)# commit
```

Step 3 Save and commit the configuration.



CHAPTER 14

Compliance to 3GPP Specifications

- [Feature Summary and Revision History, on page 131](#)
- [Feature Description, on page 132](#)
- [How it Works, on page 133](#)

Feature Summary and Revision History

Summary Data

Table 36: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Not Applicable
Related Documentation	Not Applicable

Revision History

Table 37: Revision History

Revision Details	Release
First introduced.	2021.04.0

Feature Description

Table 38: Feature History


Feature Name	Release Information	Description
AMF Compliance to 3GPP R16 Version	2025.01.0	AMF 3GPP R16 support allows the AMF to handle and send additional information elements in existing supported messages. This feature is crucial for maintaining compatibility with the latest 3GPP standards, ensuring that the AMF can effectively communicate and manage mobility and session contexts in a 5G network.

The Access and Mobility Management Function (AMF) supports the "3GPP specifications - Release 16" on all the interfaces.

In the 5G network, the AMF offers services to the other AMF, PCF, NSSF, NRF, NEF, UDM, and AF via the Namf service-based interface (see 3GPP TS 23.501 and 3GPP TS 23.502).

The SMF, PCF, NRF, AUSF and UDM interfaces are currently supported from AMF. For more information, see https://www.3gpp.org/ftp/Specs/archive/29_series/29.518/29518-g60.zip.

The following reference diagram represents a high-level network containing AMF with supported interfaces.

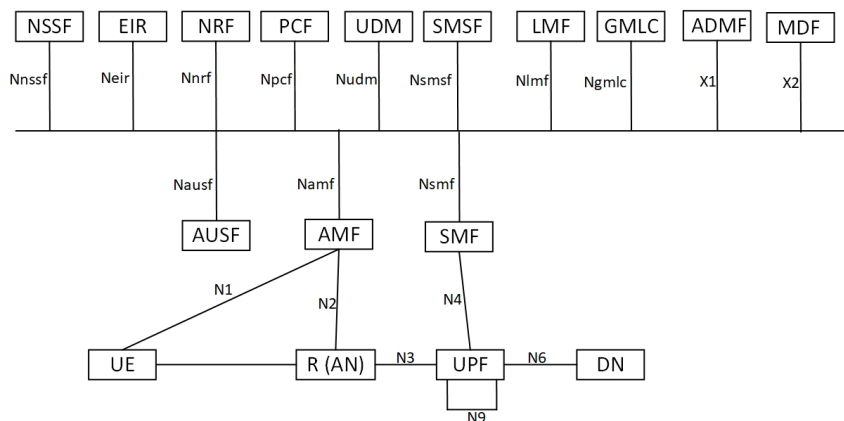

432242

Standards Compliance

Cisco AMF complies with the 3GPP standards. For more information, refer to [Standards Compliance](#), on page 18.

How it Works

This section describes how this feature works.

Call Flows

This section describes the key call flows of compliance to 3GPP specifications.

UE Registration

To enable UE tracking and reachability, a UE must register with the network to be authorized to receive services.

Initial Registration Request Call Flow

This section describes the Initial Registration Request call flow.

Figure 18: Initial Registration Request Call Flow

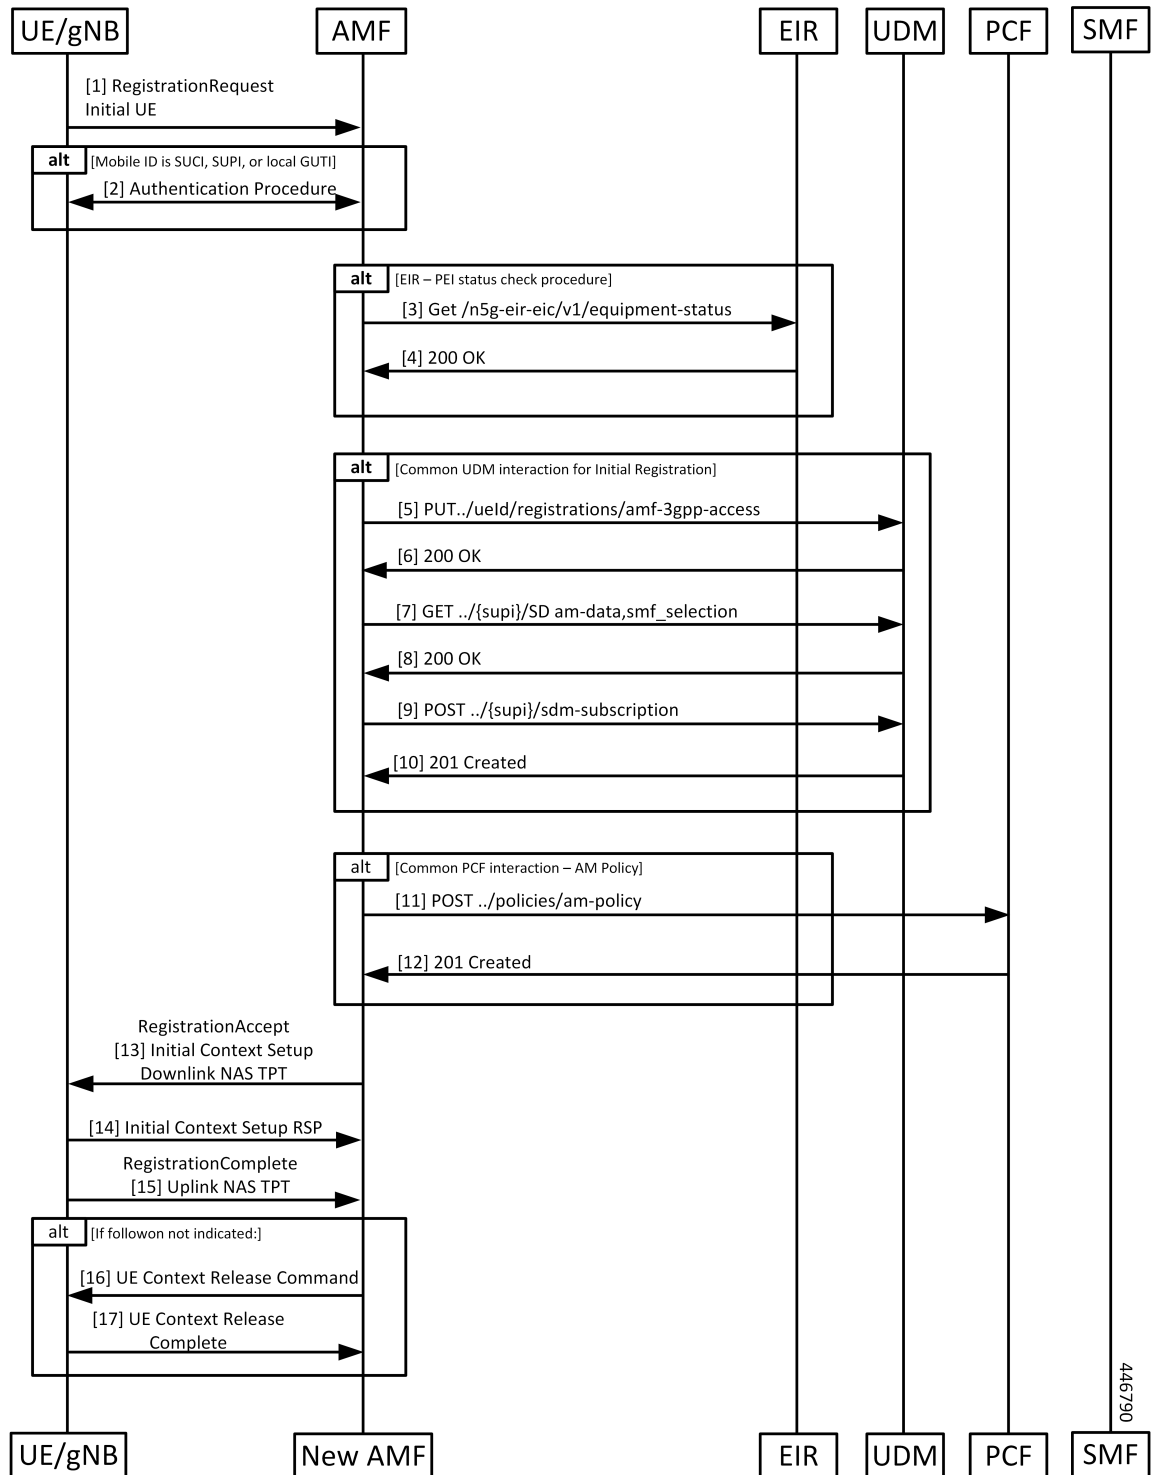


Table 39: Initial Registration Request Call Flow Description

Step	Description
1	<p>An UE which wants to register itself with the 5G core sends a Registration-Request N1 message towards AMF with the following contents:</p> <ul style="list-style-type: none"> • Registration type • SUCI or 5G-GUTI • Last visited TAI (if available) • Security parameters • Requested NSSAI • UE radio capability • UE MM core network capability • PDU session status • List of PDU sessions to be activated • Follow on request <p>If the subscriber is unknown, AMF allocates AMF-NGAP-id to the NGAP connection and subscriber data-store. The AMF-NGAP-id to AMF-Service is stored in etcd so that subsequent messages over the NGAP connection reach same AMF-Service. gNB selects an AMF and forwards the registration-request message to AMF.</p>
2	If the identity received from the UE was either a SUCI, SUPI, or GUTI allocated by this AMF, the AMF authenticates the UE as presented in the authentication procedure.
3	If the AMF is configured to do EIR checks during registration, the AMF retrieves the PEI from the UE during security mode command procedure. It then checks the status of the equipment during registration procedure.
4	Depending on the status of the equipment from EIR, the AMF either rejects the registration or proceeds with the call. Actions to be taken when the status is grey listed is configurable on the call control policy currently active for the UE.
5	The AMF selects an UDM based on the PLMN information through NRF query or via static configuration and registers the UE with the UDM using Nudm_UECM_Registration.
6	The UDM stores the AMF identity and responds to the AMF request.
7	The AMF requests from the UDM the Access and Mobility Subscription, and SMF Selection Subscription Data using Nudm_SDM_Get and using multiple data set names. If integrity check passes and UDM subscription data already exist in UE context, AMF skips Steps 7 - 10.
8	The UDM responds to the request from the AMF. The AMF stores the subscription information.
9	The AMF subscribes to be notified using Nudm_SDM_Subscribe when the data requested is modified.

Step	Description
10	The UDM registers the AMF and responds to the AMF.
11	<p>The AMF selects PCF based on PLMN-info and slice-info and performs a policy association establishment. PCF sends policy data to AMF with restrictions and other policies to be applied for the UE.</p> <p>Note If the integrity check passes and PCF subscription data already exist in UE context, AMF skips this step.</p>
12	The PCF responds to the AMF request along with AM-Policy configurations for the subscriber.
13	The AMF sends a Registration Accept message to the UE indicating that the Registration Request has been accepted. Registration Accept contains (registration area, mobility restrictions, PDU session status, allowed NSSAI, configured NSSAI for the serving PLMN, periodic registration update timer, emergency service support indicator, accepted DRX parameters).
14	If the AMF sends an Initial Context Setup Request, the gNB responds with an Initial Context Setup Response. This message could come after the message in Step 12.
15	The UE sends a Registration Complete message to the AMF to acknowledge that a new 5G-GUTI was assigned if a new 5G GUTI was included in the Registration Accept message.
16	If the UE did not include a follow-on indication in the request, the AMF releases the UE gNB context by sending a UE Context Release Command to the gNB
17	The gNB responds with a UE Context Release Complete message to the AMF.

Mobility Updating or Periodic Registration without AMF Change Call Flow

This section describes the Mobility Updating or Periodic Registration without AMF Change call flow.

Figure 19: Mobility Updating or Periodic Registration without AMF Change Call Flow

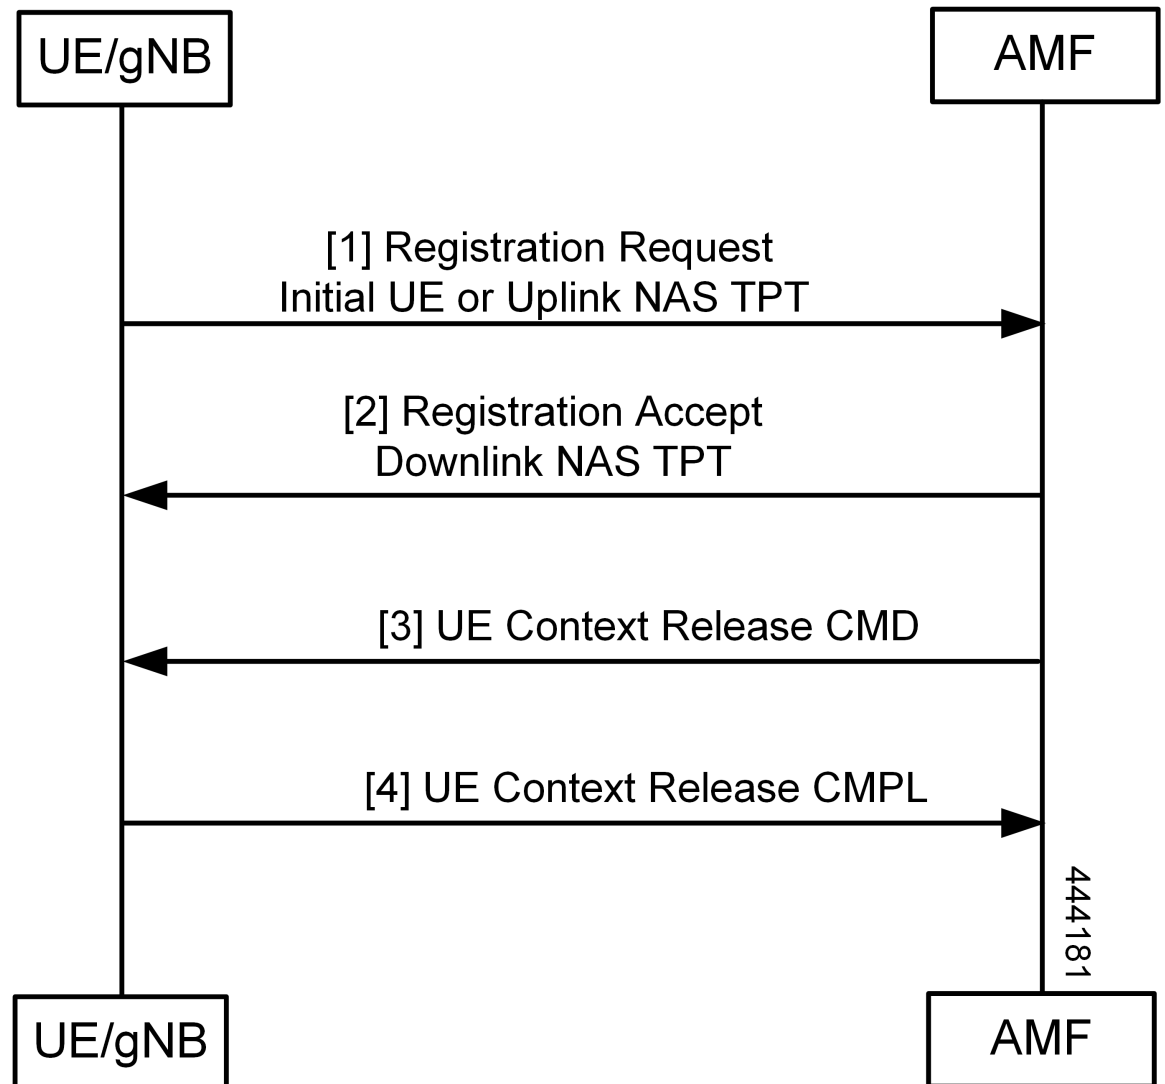


Table 40: Mobility Updating or Periodic Registration without AMF Change Call Flow Description

Step	Description
1	<p>The UE triggers the Mobility Updating or Periodic Registration procedure under the following conditions:</p> <ol style="list-style-type: none"> 1. The Periodic Registration timer in the UE expires. The UE sets up the registration type as Periodic in this case, and the message arrives on the AMF as an Initial UE NGAP message. 2. The UE is in idle state and moves to an area that is not currently part of its Tracking Area List. In this case, the UE sets the type to Mobility Updating, and the NGAP message is the Initial UE message. 3. After or during handover, the UE is in an area that is not part of the current Tracking Area List. In this case, the UE sets the type to Mobility Updating, and the NGAP message is the Uplink NAS Transport.
2	If the Registration Type is Mobility Updating, the AMF computes a new Tracking Area List for the UE. The AMF then adds this to a Registration Accept and uses a Downlink NAS Transport NGAP message to send it to the UE.
3	<p>If the registration request in the initial UE message registration type is not Mobility Updating, and the FollowOn IE was not set by the UE, the AMF sends a UE Context Release Command to the gNB to release the resources at the gNB.</p> <p>If the registration type is Mobility Updating, AMF service ignores FollowOn IE and doesn't initiate UE Context Release Command.</p>
4	The gNB responds with a UE Context Release Complete.

PDU Session Establishment Call Flow

This section describes the PDU Session Establishment call flow.

The UE receives data services through a PDU session, which is a logical connection between the UE and core network.

During the PDU session establishment, UE establishes a PDU session for accessing data services. Unlike EPS, where a default PDU session is always created while the UE registers to the network, in 5G, the UE can establish a PDU session when the service is needed.

Figure 20: PDU Session Establishment Call Flow

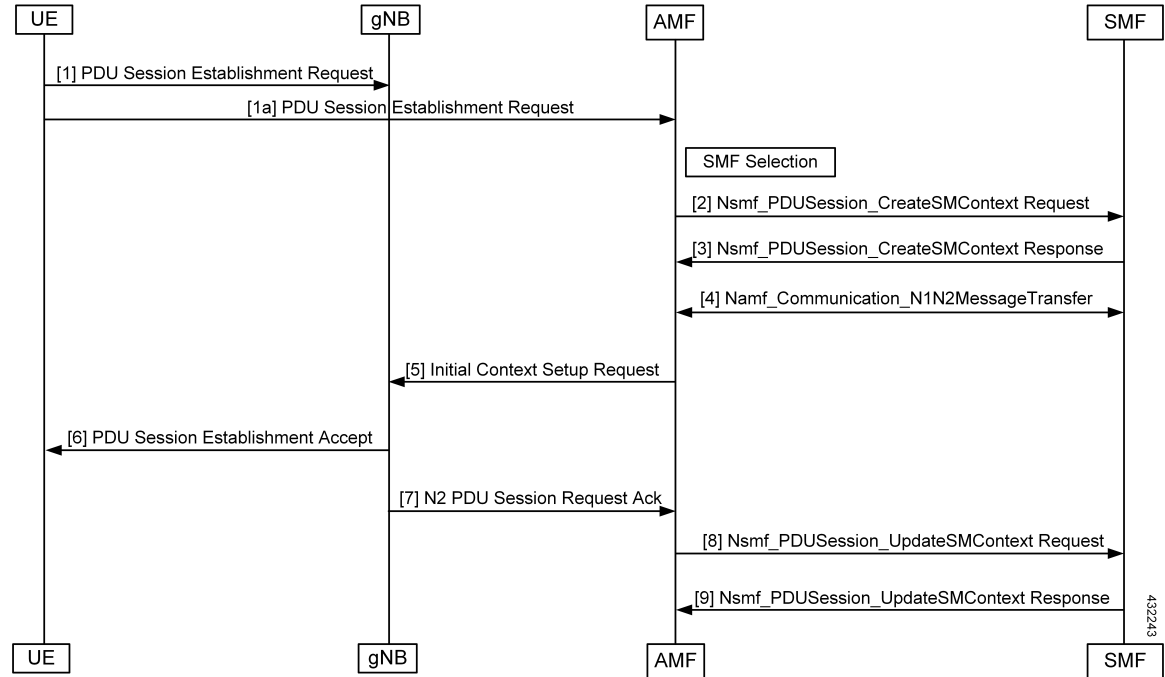


Table 41: PDU Session Establishment Call Flow Description

Step	Description
1	In order to establish a new PDU Session, the UE generates a new PDU Session ID and initiates the PDU Session Establishment procedure by the transmission of a NAS message containing a PDU Session Establishment Request within the N1 SM container. The PDU Session Establishment Request includes a PDU session ID, Requested PDU Session Type, Requested SSC mode, 5GSM Capability PCO, SM PDU DN Request Container, and Number of Packet Filters.
2	The AMF selects SMF based on slice-info and plmn-info provided by UE. SMF is selected by NRF query or by static configuration. AMF invokes the Nsmf_PDUSession_CreateSMContext Request towards SMF with SUPI, DNN, single or multiple S-NSSAIs, PDU Session ID, AMF ID, Request Type, PCF ID, Priority Access, N1 SM container (PDU Session Establishment Request), User location information, Access Type, PEI, GPSI, UE presence in LADN service area, Subscription For PDU Session Status Notification, DNN Selection Mode. Subscriber data-store is modified to store PDU information. The AMF-service stickiness is maintained for the subscriber for the PDU establishment transaction.
3	The SMF creates an SM context and responds to the AMF by sending Nsmf_PDUSession_CreateSMContext Response (Cause, SM Context ID or N1 SM container (PDU Session Reject (Cause))).
4	The SMF sends Namf_Communication_N1N2MessageTransfer to the AMF. The N2 SM information carries information that the AMF shall forward to the RAN. The N1 SM container contains the PDU Session Establishment Accept that the AMF provides to the UE. The Namf_Communication_N1N2MessageTransfer contains the PDU Session ID allowing the AMF to know which access towards the UE to use.

Step	Description
5	The AMF sends the NAS message containing PDU Session ID and PDU Session Establishment Accept targeted to the UE and the N2 SM information received from the SMF within the N2 PDU Session Request to the RAN.
6	The RAN forwards the NAS message (PDU Session ID, N1 SM container (PDU Session Establishment Accept)) to the UE.
7	The gNB sends the N2 PDU Session Request Ack to the AMF. The N2 PDU Session Response included PDU Session ID, Cause, N2 SM information (PDU Session ID, AN Tunnel Info, List of accepted/rejected QFI(s), User Plane Enforcement Policy Notification).
8	The AMF sends the Nsmf_PDUSession_UpdateSMContext Request (N2 SM information, Request Type) to the SMF. The AMF forwards the N2 SM information received from the RAN to the SMF.
9	The SMF sends the Nsmf_PDUSession_UpdateSMContext Response to the AMF.

PDU Session Establishment with Initial Context Call Flow

This section describes the PDU Session Establishment with Initial Context call flow.

Figure 21: PDU Session Establishment with Initial Context Call Flow

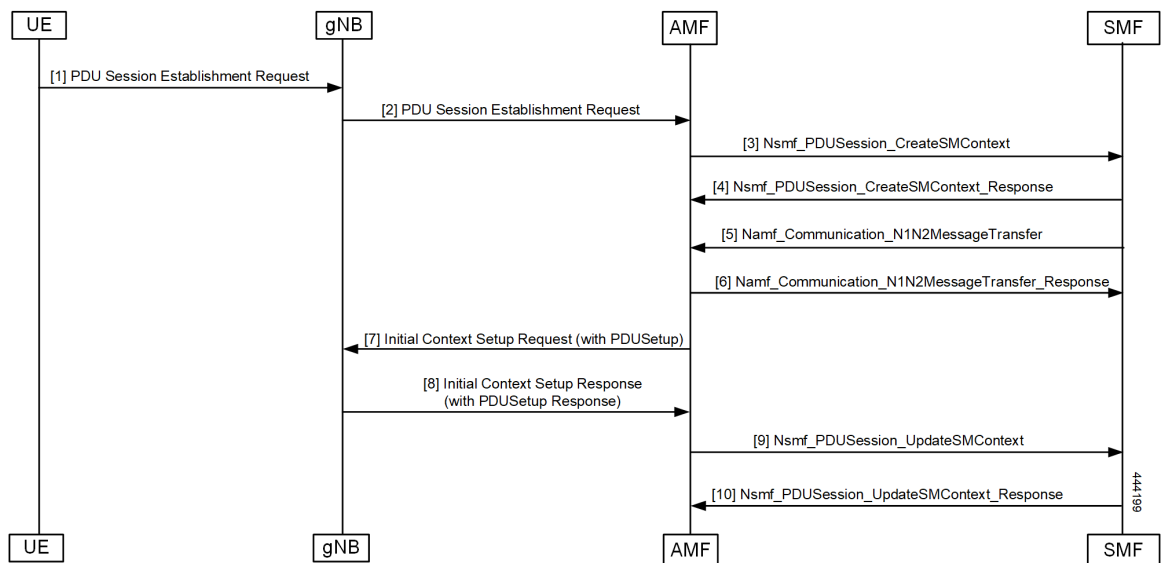


Table 42: PDU Session Establishment for Existing PDU Call Flow Description

Step	Description
1	<p>In order to establish a new PDU Session, the UE generates a new PDU Session ID and initiates the PDU Session Establishment procedure by the transmission of a NAS message containing a PDU Session Establishment Request within the N1 SM container. The PDU Session Establishment Request includes the following:</p> <ul style="list-style-type: none"> • PDU session ID • Requested PDU Session Type • Requested SSC mode • 5GSM Capability PCO • SM PDU DN Request Container • Number of Packet Filters
2,3,4	<p>If the PDU exists, then clean up at AMF and SMF (SmContextReleaseRequest) is done and PDU establishment is performed.</p>
5, 6	<p>The AMF selects SMF based on slice-info and plmn-info provided by UE. SMF is selected by NRF query or by static configuration. The AMF invokes the Nsmf_PDUSession_CreateSMContext Request towards SMF with SUPI, DNN, S-NSSAIs, PDU Session ID, AMF ID, Request Type, PCF ID, Priority Access, N1 SM container (PDU Session Establishment Request), User location information, Access Type, PEI, GPSI, UE presence in LADN service area, Subscription For PDU Session Status Notification, DNN Selection Mode. Subscriber data-store is modified to store PDU information. The AMF service stickiness is maintained for the subscriber for the PDU establishment transaction.</p> <p>The SMF creates an SM context and responds to the AMF by sending Nsmf_PDUSession_CreateSMContext Response (Cause, SM Context ID or N1 SM container (PDU Session Reject (Cause))).</p> <p>The SMF sends Namf_Communication_N1N2MessageTransfer to the AMF. The N2 SM information carries information that the AMF forwards to the RAN. The N1 SM container contains the PDU Session Establishment Accept that the AMF provides to the UE. The Namf_Communication_N1N2MessageTransfer contains the PDU Session ID allowing the AMF to know which access towards the UE to use.</p> <p>The SMF receives Namf_Communication_N1N2MessageTransfer response from the AMF.</p>
7	<p>The gNB sends the Initial Context Setup Request to the AMF.</p> <p>The RAN forwards the NAS message (PDU Session ID, N1 SM container (PDU Session Establishment Accept)) to the UE.</p>
8	<p>The AMF responds with the Initial Context Setup Response to the gNB.</p> <p>The response includes the N2 PDU Session Response (PDU Session ID, Cause, N2 SM information (PDU Session ID, AN Tunnel Info, List of accepted/rejected QFI(s), User Plane Enforcement Policy Notification)).</p>


Step	Description
9	The AMF sends Nsmf_PDUSession_UpdateSMContext Request to the SMF The Nsmf_PDUSession_UpdateSMContext Request includes the N2 SM information and Request Type. The AMF forwards the N2 SM information received from RAN to the SMF.
10	The SMF sends the Nsmf_PDUSession_UpdateSMContext Response to the AMF.

PDU Session Establishment for Existing PDU Call Flow

This section describes the PDU Session Establishment for Existing PDU call flow.

If the UE starts the PDU Establishment Request for an existing PDU, the AMF performs local PDU release and sends the PDU release to SMF. It also initiates PDU Resource Setup Request. If the PDU release fails at SMF, the AMF sends the PDU reject.

Figure 22: PDU Session Establishment for Existing PDU Call Flow

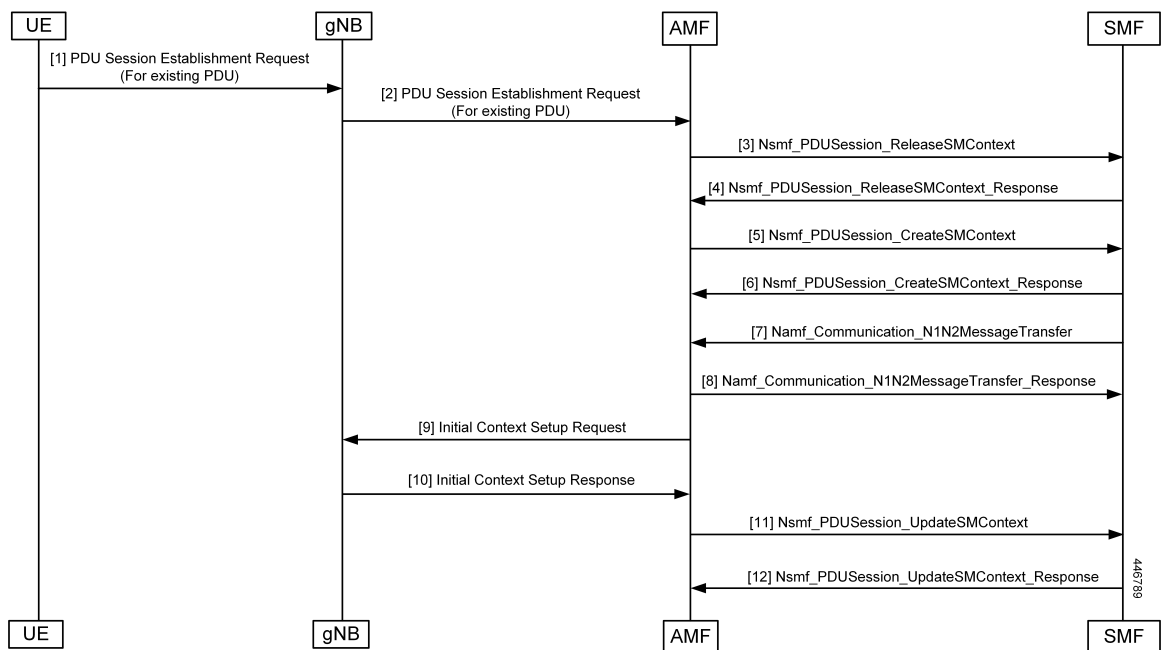

The UE receives data services through a PDU session, which is a logical connection between the UE and the core network. The PDU Session Establishment procedure describes the procedures by which UE establishes a PDU session for accessing data services. In 5G, the UE can establish a PDU session when service is needed.

Table 43: PDU Session Establishment for Existing PDU Call Flow Description

Step	Description
1	<p>In order to establish a new PDU session, the UE generates a new PDU Session ID and starts the PDU Session Establishment procedure by the transmission of a NAS message containing a PDU Session Establishment Request within the N1 SM container. The PDU Session Establishment Request includes the following:</p> <ul style="list-style-type: none"> • PDU session ID • Requested PDU Session Type • Requested SSC mode • 5GSM Capability PCO • SM PDU DN Request Container • Number of Packet Filters
2,3,4	If PDU exists, then clean up at AMF and SMF (SmContextReleaseRequest) is done and PDU Session Establishment procedure is performed.
5	The AMF selects SMF based on slice-info and plmn-info provided by UE. The SMF is selected by NRF query or static configuration. The AMF invokes the Nsmf_PDUSession_CreateSMContext Request towards the SMF with SUPI, DNN, S-NSSAIs, PDU Session ID, AMF ID, Request Type, PCF ID, Priority Access, N1 SM container (PDU Session Establishment Request), User location information, Access Type, PEI, GPSI, UE presence in LADN service area, Subscription For PDU Session Status Notification, and DNN Selection Mode. The subscriber data store is modified to store the PDU information. The AMF service stickiness is maintained for the subscriber for the PDU establishment transaction.
6	The SMF creates an SM context and responds to the AMF by sending Nsmf_PDUSession_CreateSMContext Response (Cause, SM Context ID or N1 SM container (PDU Session Reject (Cause))).
7	The SMF sends Namf_Communication_N1N2MessageTransfer to AMF. The N2 SM information carries information that the AMF forwards to the RAN. The N1 SM container contains the PDU Session Establishment Accept that the AMF provides to the UE. The Namf_Communication_N1N2MessageTransfer contains the PDU Session ID allowing the AMF to know which access towards the UE to use.
8	<p>The AMF sends the NAS message containing PDU Session ID and PDU Session Establishment Accept targeted to the UE and the N2 SM information received from the SMF within the N2 PDU Session Request to the RAN.</p> <p>If the Initial Context Setup is incomplete, the AMF sends the NAS message information as a part of the Initial Context Setup Request.</p>
9	<p>The AMF sends the Initial Context Setup Request to the gNB.</p> <p>The RAN forwards the NAS message (PDU Session ID, N1 SM container (PDU Session Establishment Accept)) to the UE.</p>

Step	Description
10	The gNB sends the Initial Context Setup Response to the AMF with the N2 PDU Session Response (PDU Session ID, Cause, N2 SM information (PDU Session ID, AN Tunnel Info, List of accepted or rejected QFIs, User Plane Enforcement Policy Notification)).
11	The AMF forwards the N2 SM information received from RAN to the SMF. The Nsmf_PDUSession_UpdateSMContext Request includes the N2 SM information and Request Type.
12	The SMF responds with the Nsmf_PDUSession_UpdateSMContext_Response to the AMF.

PDU Session Modification

The PDU Session Modification procedure is used when one or several of the QoS parameters exchanged between the UE and the network are modified.

In this release, only UE and SMF-initiated PDU session modification is supported. The RAN-initiated PDU session modification is not supported.

UE-Initiated PDU Session Modification Call Flow

This section describes the UE-Initiated PDU Session Modification call flow.

The PDU Session Modification is required when one or several of the QoS parameters exchanged between the UE and the network needs to be modified.

Figure 23: UE-Initiated PDU Session Modification Call Flow

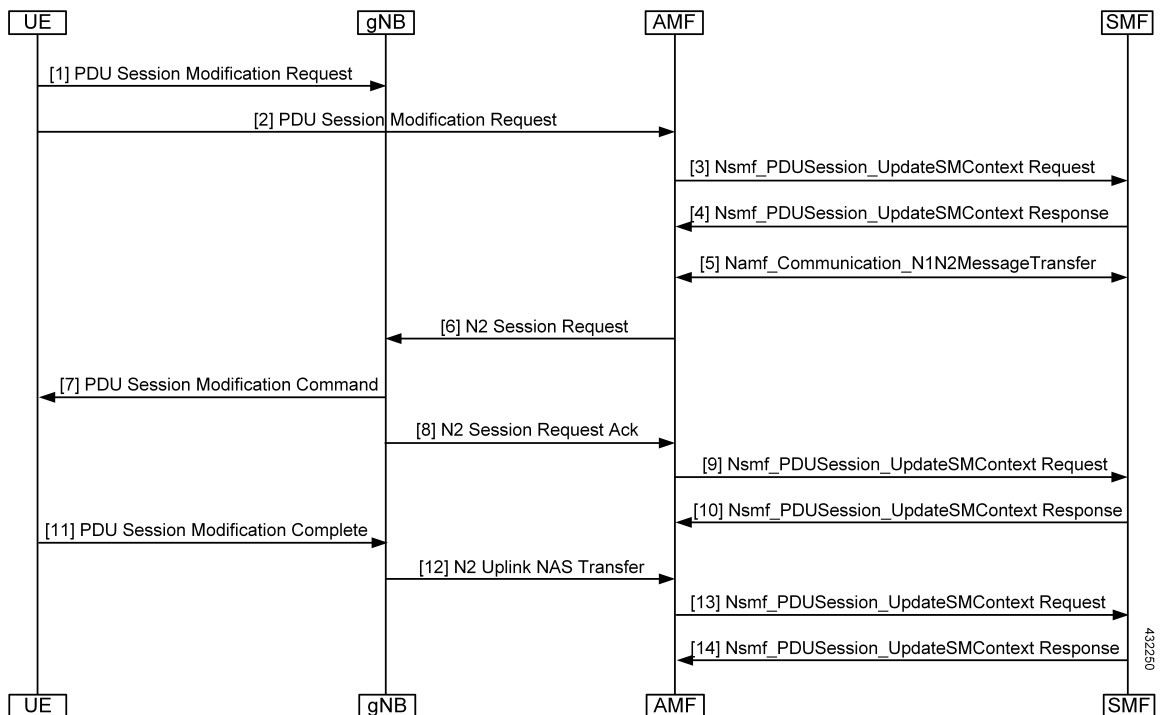


Table 44: UE-Initiated PDU Session Modification Call Flow Description

Step	Description
1, 2, 3	The UE initiates the PDU Session Modification procedure by the transmission of an NAS message (N1 SM container (PDU Session Modification Request (PDU session ID, Packet Filters, Operation, Requested QoS, Segregation, 5GSM Core Network Capability)), and PDU Session ID) message. The AMF invokes the Nsmf_PDUSession_UpdateSMContext Request towards the SMF.
4	The SMF responds to the AMF through Nsmf_PDUSession_UpdateSMContext (N2 SM information (PDU Session ID, QFI(s), QoS Profile(s), Session-AMBR), N1 SM container (PDU Session Modification Command (PDU Session ID, QoS parameters, Session-AMBR))). The N2 SM information carries information that the AMF provides to the RAN. It may include the QoS profiles and the corresponding QFIs to notify the RAN that one or more QoS flows were added, or modified. It may include only QFI(s) to notify the RAN that one or more QoS flows were removed. The N2 SM information provided to the RAN includes information for establishment of User Plane resources. The N1 SM container carries the PDU Session Modification Command that the AMF provide to the UE.
5	The SMF invokes Namf_Communication_N1N2MessageTransfer (N2 SM information (PDU Session ID, QFI(s), QoS Profile(s), Session-AMBR), N1 SM container (PDU Session Modification Command (PDU Session ID, QoS rule(s), QoS parameters, and Session-AMBR).
6	The AMF sends N2 PDU Session Request (N2 SM information received from SMF, NAS message (PDU Session ID, N1 SM container (PDU Session Modification Command)) Message to the RAN.
7	The RAN issues AN-specific signaling exchange with the UE that is related with the information received from SMF.
8	The RAN acknowledges N2 PDU Session Request by sending a N2 PDU Session Ack (N2 SM information (List of accepted/rejected QFI(s), AN Tunnel Info, PDU Session ID), User location Information) Message to the AMF.
9, 10	The AMF forwards the N2 SM information and the User location Information received from the AN to the SMF through Nsmf_PDUSession_UpdateSMContext service operation. The SMF replies with a Nsmf_PDUSession_UpdateSMContext Response.
11	The UE acknowledges the PDU Session Modification Command by sending a NAS message (PDU Session ID, N1 SM container (PDU Session Modification Command Ack)) message.
12	The RAN forwards the NAS message to the AMF.
13	The AMF forwards the N1 SM container (PDU Session Modification Command Ack) and User Location Information received from the AN to the SMF through Nsmf_PDUSession_UpdateSMContext service operation. The SMF replies with a Nsmf_PDUSession_UpdateSMContext Response.

SMF-Initiated PDU Session Modification Call Flow

This section describes the SMF-Initiated PDU Session Modification call flow.

The PDU Session Modification is required when one or several of the QoS parameters exchanged between the UE and the network need to be modified.

Figure 24: SMF-Initiated PDU Session Modification Call Flow

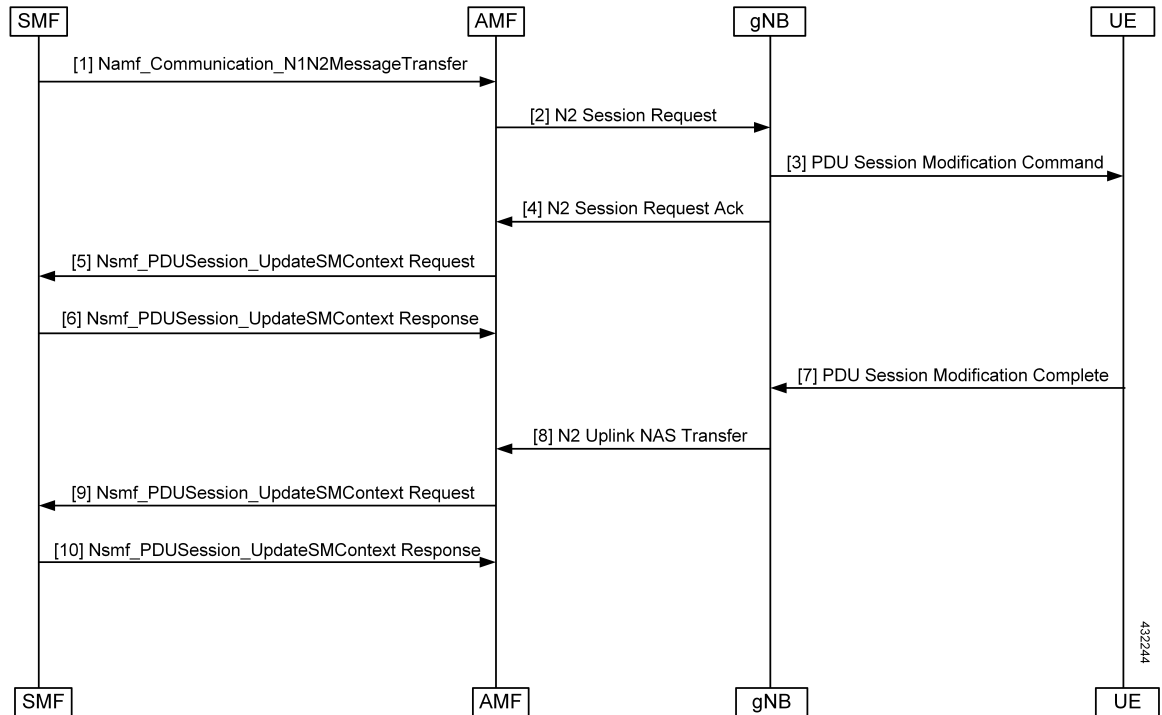


Table 45: SMF-Initiated PDU Session Modification Call Flow Description

Step	Description
1	The SMF starts the PDU Session Modification to the AMF through Nsmf_PDUSession_UpdateSMContext (N2 SM information (PDU Session ID, QFI(s), QoS Profile(s), Session-AMBR), N1 SM container (PDU Session Modification Command (PDU Session ID, QoS parameters, Session-AMBR))). The N2 SM carries information that the AMF provides to the RAN. It includes the QoS profiles and the corresponding QFIs to notify the RAN that one or more QoS flows were added, or modified. It can also include only QFI(s) to notify the RAN that one or more QoS flows were removed. The N2 SM information provided to the RAN includes information for establishment of User Plane resources. The N1 SM container carries the PDU Session Modification Command that the AMF provides to the UE.
2	The SMF invokes Namf_Communication_N1N2MessageTransfer (N2 SM information (PDU Session ID, QFI(s), QoS Profile(s), Session-AMBR), N1 SM container (PDU Session Modification Command (PDU Session ID, QoS rule(s), QoS parameters, Session-AMBR))).
3	The AMF sends the N2 PDU Session Request (N2 SM information received from SMF, NAS message (PDU Session ID, N1 SM container (PDU Session Modification Command))) Message to the RAN.
4	The RAN issues AN-specific signaling exchange with the UE that is related with the information received from SMF.

Step	Description
5	The RAN acknowledges N2 PDU Session Request by sending a N2 PDU Session Ack (N2 SM information (List of accepted/rejected QFI(s), AN Tunnel Info, PDU Session ID), User location Information) Message to the AMF.
6	The AMF forwards the N2 SM information and the User location Information received from the AN to the SMF through Nsmf_PDUSession_UpdateSMContext service operation. The SMF replies with a Nsmf_PDUSession_UpdateSMContext Response.
7	If the RAN rejects QFI(s) the SMF is responsible of updating the QoS rules and QoS Flow level QoS parameters if needed for one or more QoS Flows associated with one or more QoS rules in the UE accordingly.
8	The UE acknowledges the PDU Session Modification Command by sending a NAS message (PDU Session ID, N1 SM container (PDU Session Modification Command Ack)) message.
9	The RAN forwards the NAS message to the AMF.
10	The AMF forwards the N1 SM container (PDU Session Modification Command Ack) and User Location Information received from the AN to the SMF through Nsmf_PDUSession_UpdateSMContext service operation. The SMF replies with a Nsmf_PDUSession_UpdateSMContext Response.

PDU Session Release

The PDU Session Release procedure is used to release all the resources associated with a PDU session.

In this release, UE and SMF-initiated PDU session release is supported.

UE-Initiated PDU Session Release Call Flow

This section describes the UE-Initiated PDU Session Release call flow.

The PDU Session Release procedure is used to release all the resources associated with a PDU session.

Figure 25: UE-Initiated PDU Session Release Call Flow

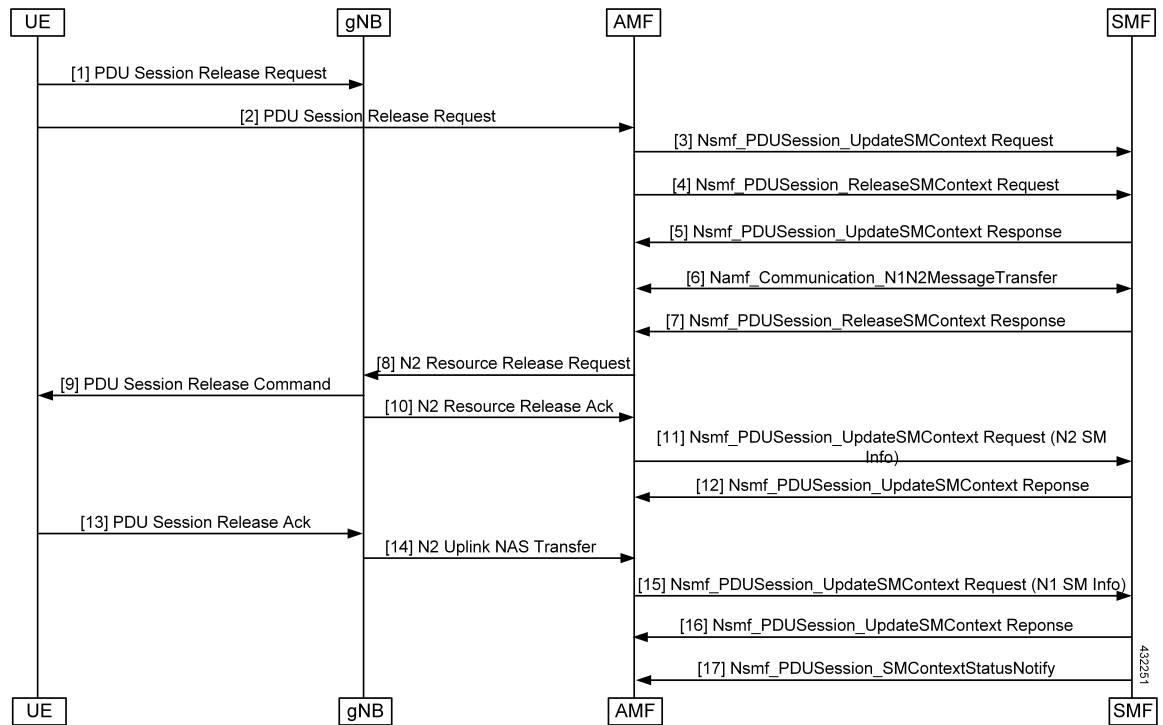


Table 46: UE-Initiated PDU Session Release Call Flow Description

Step	Description
1, 2	The UE initiates the UE Requested PDU Session Release procedure by the transmission of an NAS message (N1 SM container (PDU Session Release Request (PDU session ID)), PDU Session ID) message. The NAS message is forwarded by the RAN to the AMF with an indication of User Location Information. This message is relayed to the SMF corresponding to the PDU Session ID through N2 and the AMF.
3	The AMF invokes the Nsmf_PDUSession_UpdateSMContext service operation and provides the N1 SM container to the SMF together with User Location Information (ULI) received from the RAN.
4	The AMF may invoke the Nsmf_PDUSession_ReleaseSMContext service operation to request the release of the PDU session in case of mismatch of PDU session status between UE and AMF.
5	The SMF responds to the AMF with the Nsmf_PDUSession_UpdateSMContext response (N2 SM Resource Release request, N1 SM container (PDU Session Release Command)).
6	If the UP connection of the PDU session is active, the SMF shall also include the N2 Resource Release request (PDU Session ID) in the Namf_Communication_N1N2MessageTransfer, to release the RAN resources associated with the PDU session.
7	The SMF responds to the AMF with the Nsmf_PDUSession_ReleaseSMContext response.

Step	Description
8	The AMF transfers the SM information received from the SMF (N2 SM Resource Release request, N1 SM container) to the RAN.
9	When the RAN has received an N2 SM request to release the AN resources associated with the PDU session, it issues AN specific signaling exchanges with the UE to release the corresponding AN resources.
10	The RAN sends any NAS message (N1 SM container (PDU Session Release Command)) received from the AMF.
11	The AMF invokes the Nsmf_PDUSession_UpdateSMContext (N2 SM Resource Release Ack, User Location Information) to the SMF.
12	The SMF responds to the AMF with an Nsmf_PDUSession_UpdateSMContext response.
13	The UE acknowledges the PDU Session Release Command by sending a NAS message (PDU Session ID, N1 SM container (PDU Session Release Ack)) message over the RAN.
14	The RAN forwards the NAS message from the UE by sending a N2 NAS uplink transport (NAS message (PDU Session ID, N1 SM container (PDU Session Release Ack)), User Location Information) to the AMF.
15	The AMF invokes the Nsmf_PDUSession_UpdateSMContext (N1 SM container (PDU Session Release Ack, User Location Information) to the SMF.
16	The SMF responds to the AMF with an Nsmf_PDUSession_UpdateSMContext response.
17	The SMF invokes Nsmf_PDUSession_SMContextStatusNotify to notify AMF that the SM context for this PDU session is released. The AMF releases the association between the SMF ID and the PDU Session ID, DNN, and S-NSSAI.

SMF-Initiated PDU Release Call Flow

This section describes the SMF-Initiated PDU Release call flow.

The PDU Session Release procedure is used to release all the resources associated with a PDU session.

Figure 26: SMF-Initiated PDU Release Call Flow

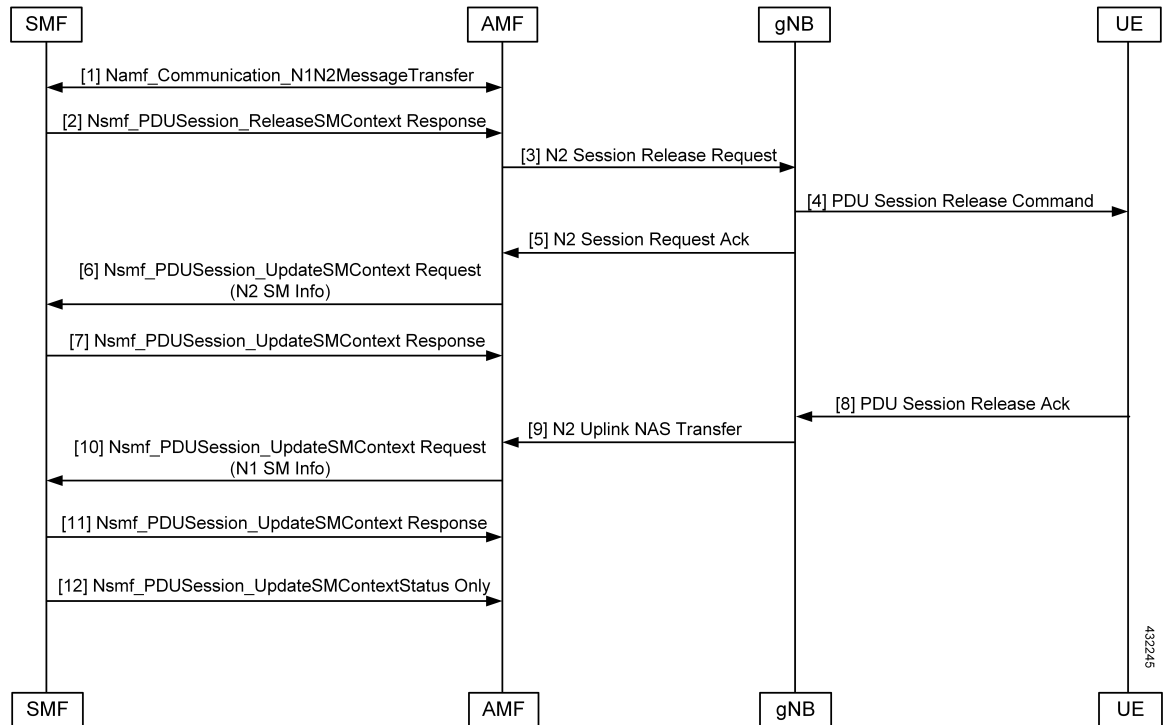


Table 47: SMF-Initiated PDU Release Call Flow Description

Step	Description
1	If the UP connection of the PDU session is active, the SMF includes the N2 Resource Release Request (PDU Session ID) in the Namf_Communication_N1N2MessageTransfer, to release the RAN resources associated with the PDU session.
2	The SMF responds to the AMF with the Nsmf_PDUSession_ReleaseSMContext response.
3	The AMF transfers the SM information received from the SMF (N2 SM Resource Release request, N1 SM container) to the RAN.
4	When the RAN has received an N2 SM request to release the AN resources associated with the PDU session, it issues AN-specific signaling exchanges with the UE to release the corresponding AN resources.
5	The RAN sends any NAS message (N1 SM container (PDU Session Release Command)) received from the AMF.
6	The AMF invokes the Nsmf_PDUSession_UpdateSMContext (N2 SM Resource Release Ack, User Location Information) to the SMF.
7	The SMF responds to the AMF with an Nsmf_PDUSession_UpdateSMContext response.
8	The UE acknowledges the PDU Session Release Command by sending a NAS message (PDU Session ID, N1 SM container (PDU Session Release Ack)) message over the RAN.

Step	Description
9	The RAN forwards the NAS message from the UE by sending a N2 NAS uplink transport (NAS message (PDU Session ID, N1 SM container (PDU Session Release Ack)), User Location Information) to the AMF.
10	The AMF invokes the Nsmf_PDUSession_UpdateSMContext (N1 SM container (PDU Session Release Ack, User Location Information) to the SMF.
11	The SMF responds to the AMF with an Nsmf_PDUSession_UpdateSMContext response.
12	The SMF invokes Nsmf_PDUSession_SMContextStatusNotify to notify AMF that the SM context for this PDU session is released. The AMF releases the association between the SMF ID and the PDU Session ID, DNN, and S-NSSAI.

UE-Initiated Deregistration Call Flow

This section describes the UE-Initiated Deregistration call flow.

The deregistration procedure allows the UE to inform the network that it does not want to access the 5G data services.

Figure 27: UE-Initiated Deregistration Call Flow

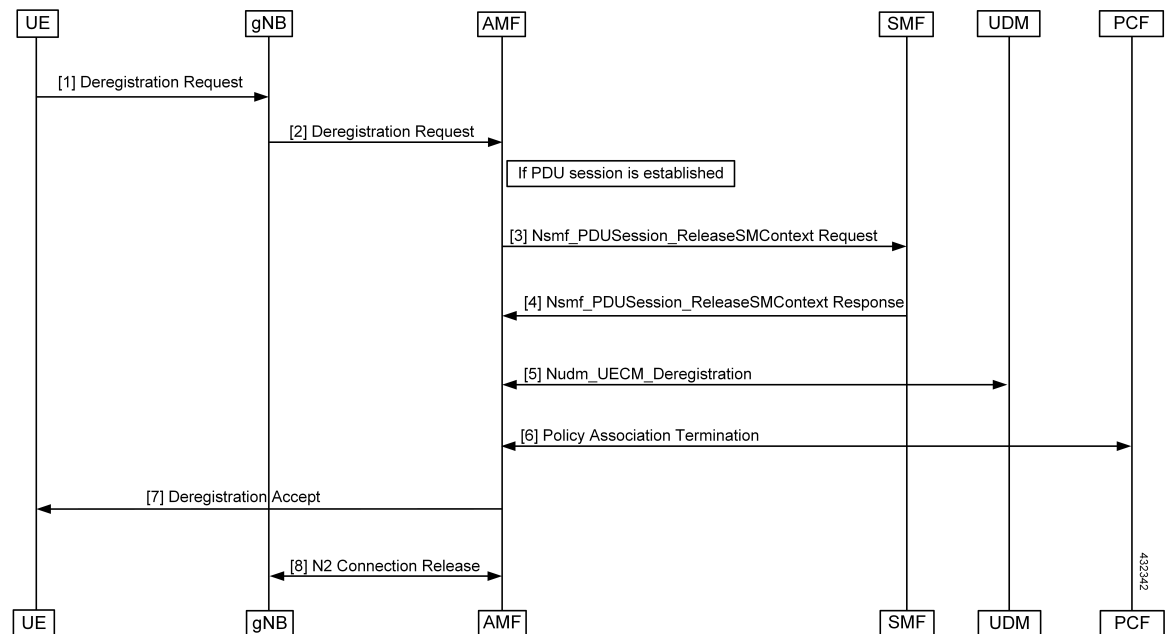


Table 48: UE-Initiated Deregistration Call Flow Description

Step	Description
1, 2	The UE sends the NAS message Deregistration Request (5G-GUTI, Deregistration type, Access Type) to the AMF.

Step	Description
3	If the PDU session has been established, the AMF sends Nsmf_PDUSession_ReleaseSMContext (SUPI and PDU Session ID) to SMF. All the PDU sessions over the target access, which belong to the UE are released by the AMF by sending Nsmf_PDUSession_ReleaseSMContext Request (SUPI, PDU Session ID) message to the SMF for each PDU session.
4	The SMF releases all resources (for example, the IP address or prefixes that were allocated to the PDU session) and the corresponding User Plane resources. The SMF responds with Nsmf_PDUSession_ReleaseSMContext Response message.
5	The AMF invokes the Nudm_UECM_Deregistration service operation so that the UDM removes the association it had stored.
6	If there is any association with the PCF for this UE and the UE is no more registered over any access, the AMF performs an AMF-initiated AM Policy Association Termination procedure.
7	The AMF sends NAS message Deregistration Accept to UE depending on the Deregistration type i.e. if Deregistration type is switch-off, AMF does not send Deregistration Accept message.
8	The gNB exchanges the N2 UE Context Release with the AMF.

UDM-Initiated Deregistration Call Flow

This section describes the UDM-Initiated Deregistration call flow.

The UDM starts the deregistration process for an UE if the subscription is withdrawn for the UE. The UDM starts this procedure for operator-determined purposes to request the removal of a subscriber's RM context and PDU sessions of the UE.

Figure 28: UDM-Initiated Deregistration Call Flow

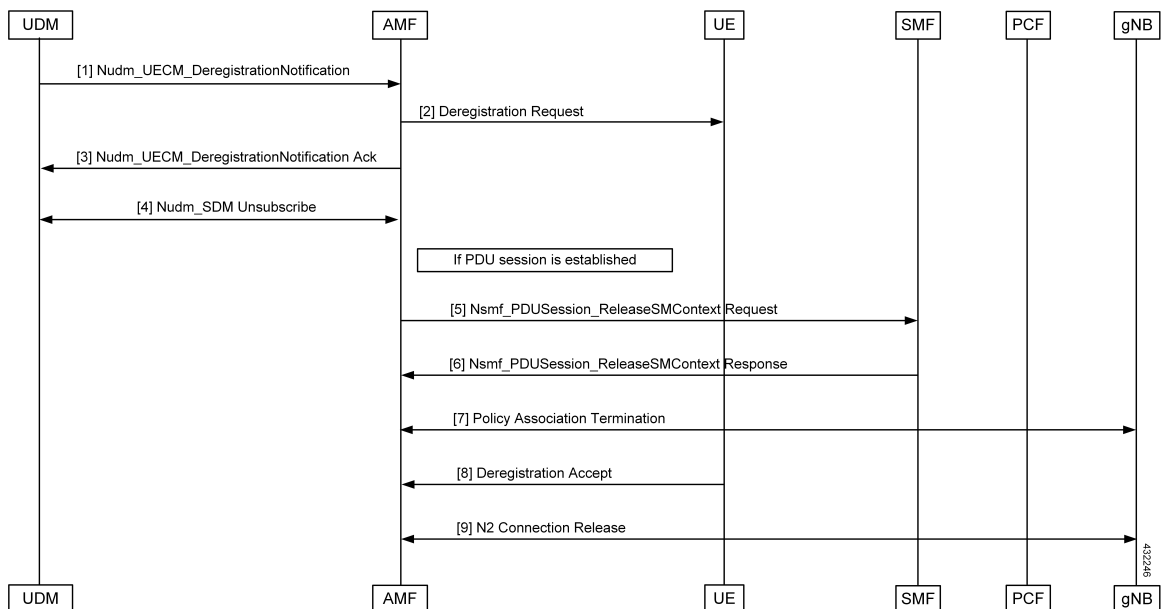


Table 49: UDM-Initiated Deregistration Call Flow Description


Step	Description
1	If the UDM wants to request the immediate deletion of a subscriber's contexts and PDU sessions, the UDM sends a Nudm_UECM_DeregistrationNotification (SUPI, Access Type, Removal Reason) message with Removal Reason set to Subscription Withdrawn to the registered AMF. If the AMF receives Nudm_UECM_DeregistrationNotification with Removal Reason as Subscription Withdrawn, the AMF executes the deregistration procedure over the access.
2	The AMF may explicitly deregister the UE by sending a Deregistration Request message (Deregistration type, Access Type) to the UE. The deregistration type may be set to Reregistration in which case the UE should reregister at the end of the deregistration procedure. If the Deregistration Request message is sent over 3GPP access and the UE is in CM-IDLE state in 3GPP access, the AMF pages the UE.
3	If the deregistration procedure is triggered by UDM, the AMF acknowledges the Nudm_UECM_DeRegistrationNotification to the UDM.
4	The AMF unsubscribes with the UDM using Nudm_SDM_Unsubscribe service operation.
5, 6	If the UE has any established PDU sessions, the UE-initiated Deregistration is performed.
7	If there is any association with the PCF for this UE and the UE is no more registered over any access, the AMF performs a AMF-initiated AM Policy Association Termination procedure
8	If the UE receives the Deregistration Request message from the AMF, the UE sends a Deregistration Accept message to the AMF. The NG-RAN forwards this NAS message to the AMF along with the TAI and cell identity of the cell which the UE is using.
9	The AMF exchanges the N2 UE Context Release with gNB.

AMF-Initiated Deregistration Call Flow

This section describes the AMF-Initiated Deregistration call flow.

If implicit detach timer expires, the AMF performs deregistration.

Figure 29: AMF-Initiated Deregistration Call Flow

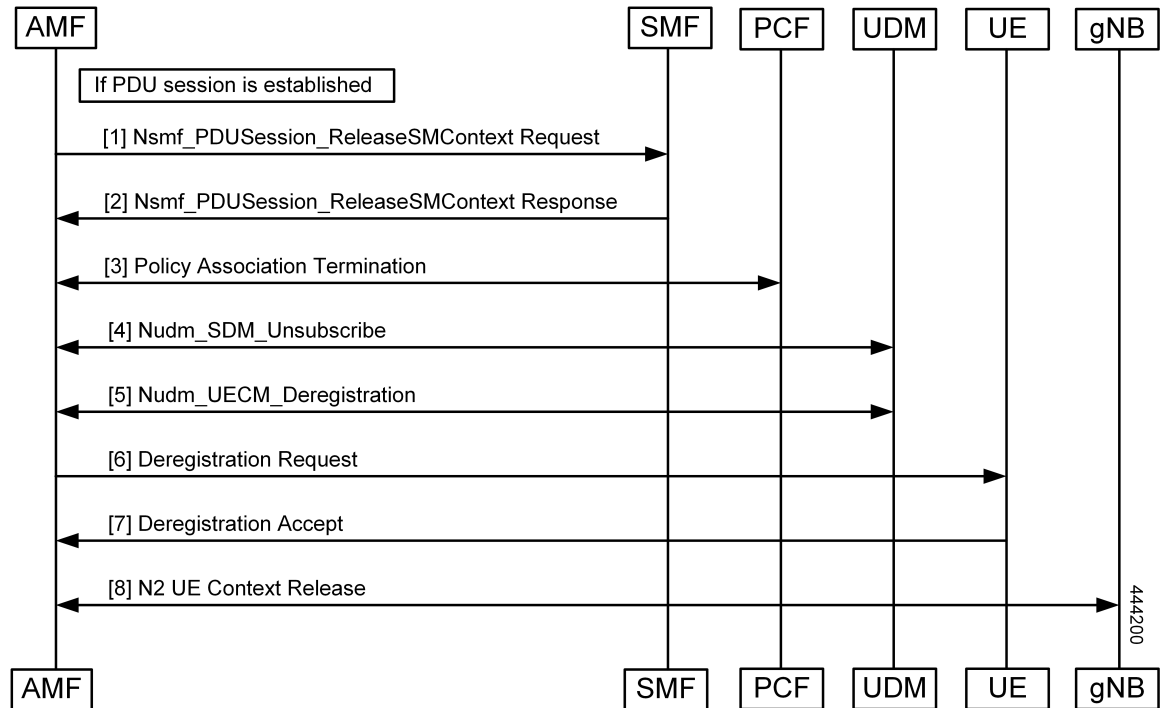

In case of a clear subscriber, the AMF starts a deregistration procedure.

Table 50: AMF-Initiated Deregistration Call Flow Description

Step	Description
1	If the PDU session is established, the AMF sends Nsmf_PDUSession_ReleaseSMContext (SUPI, PDU, and Session ID) to SMF. All PDU sessions over the target access, which belong to the UE are released by the AMF by sending Nsmf_PDUSession_ReleaseSMContext Request (SUPI, PDU Session ID) message to the SMF for each PDU Session.
2	The SMF releases all resources (for example, the IP address/Prefixes that were allocated to the PDU Session) and the corresponding User Plane resources. The SMF responds with Nsmf_PDUSession_ReleaseSMContext Response message.
3	If there is any association with the PCF for this UE and the UE is no more registered over any access, the AMF performs an AMF-initiated AM Policy Association Termination procedure.
4	The AMF unsubscribes the UDM using the Nudm_SDM_Unsubscribe service operation.
5	The AMF invokes the Nudm_UECM_Deregistration service operation so that the UDM removes the association it had stored.
6	The AMF may explicitly deregister the UE by sending a Deregistration Request message (Deregistration type, Access Type) to the UE. The deregistration type may be set to reregistration in which case the UE should reregister at the end of the deregistration procedure. If the Deregistration Request message is sent over 3GPP access and the UE is in CM-IDLE state in 3GPP access, the AMF pages the UE.

Step	Description
7	After the UE receives the Deregistration Request message from the AMF, the UE sends a Deregistration Accept message to the AMF. The NG-RAN forwards this NAS message to the AMF along with the TAI and cell identity of the cell which the UE is using.
8	The AMF and gNB exchanges the N2 UE Context Release.

UE Identity Procedure for Authentication Failure Call Flow

This section describes the UE Identity Procedure for Authentication Failure call flow.

When the authentication fails at the Step 5 mentioned in the following call flow, the AMF triggers the Identity Request towards UE. Authentication is proceeded with the new UE identity.

Figure 30: UE Identity Procedure for Authentication Failure Call Flow

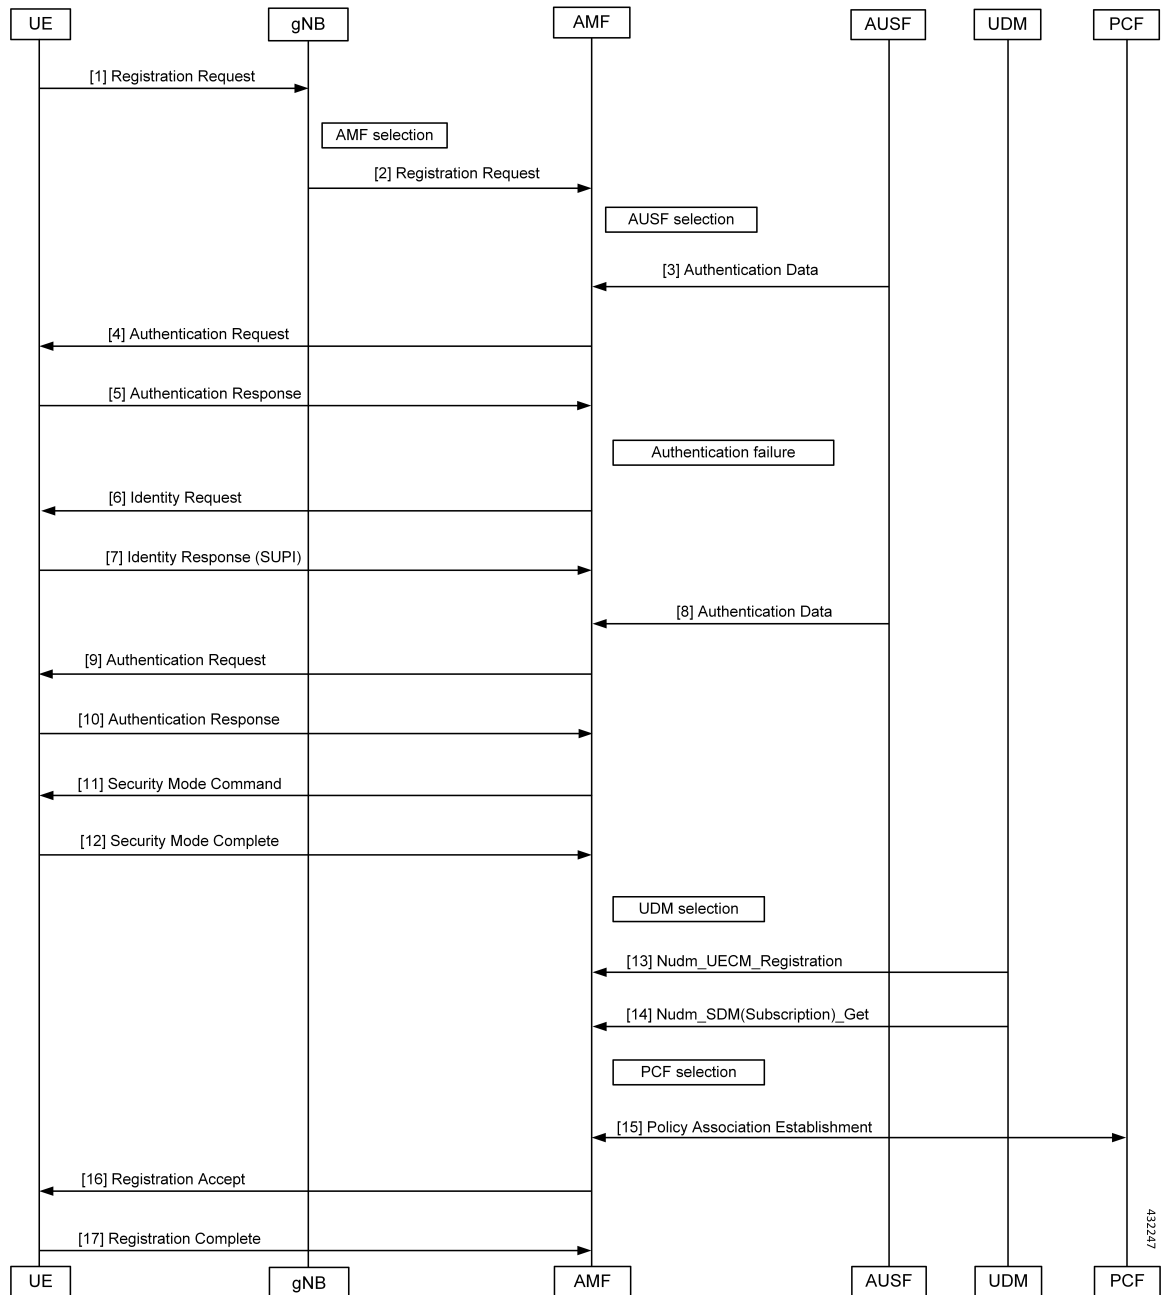


Table 51: UE Identity Procedure for Authentication Failure Call Flow Description

Step	Description
1	The UE sends a Registration Request to the gNB.
2	The gNB forwards the Registration Request with the AMF selection to the AMF.
3	The AUSF sends the authentication data along with the AUSF selection to the AMF.

Step	Description
4	The AMF sends an Authentication Request to the UE.
5	During the registration procedure when Authentication Response is received from the UE, the AMF examines the Authentication Response parameters and confirms that the authentication has failed. In such a case, the AMF triggers Identity Request to UE asking for its SUCI.
6	The UE sends the Identity Request message to AMF.
7	The UE responds with its SUCI in the Identity Response message to the AMF.
8	The AMF extracts fresh authentication data from AUSF using the SUCI of the subscriber.
9	The AMF sends Authentication-Request to the UE to initiate authentication of the UE identity.
10	The UE sends Authentication Response to the AMF to deliver a calculated authentication response to the network. The AMF verifies that the result received and if the result is as expected then the registration procedure starts.
11	The NAS security initiation is performed.
12	After the NAS security function setup is complete, the AMF starts the NGAP procedure to provide the 5G-AN with security context. The 5G-AN stores the security context and notifies it to the AMF. The 5G-AN uses the security context to protect the messages exchanged with the UE.
13	The AMF selects an UDM based on the PLMN info through the NRF query or static configuration and registers the UE with the UDM using Nudm_UECM_Registration. The UDM stores the AMF identity associated to the Access Type.
14	The AMF retrieves the Access and Mobility Subscription data using Nudm_SDM_Get. The AMF subscribes to be notified using Nudm_SDM_Subscribe when the data requested is modified.
15	The AMF selects PCF based on PLMN-info and slice- info and performs a Policy Association Establishment. The PCF sends policy data to the AMF with restrictions and other policies to be applied for the UE. The policies are not applied for UE and are stored in AMF.
16	<p>The AMF sends a Registration Accept message to the UE indicating that the Registration Request is accepted. Registration Accept contains the following:</p> <ul style="list-style-type: none"> • 5G-GUTI • Registration Area • Mobility restrictions • PDU Session status • Allowed NSSAI • Configured NSSAI for the Serving PLMN • Periodic Registration Update timer • Emergency Service Support indicator • Accepted DRX parameters

Step	Description
17	The UE sends a Registration Complete message to the AMF to acknowledge that a new 5G-GUTI was assigned.

UE Identity Procedure for Unknown Subscribers Call Flow

This section describes the UE Identity Procedure for Unknown Subscribers call flow.

When a Registration Request is received with unknown GUTI then AMF triggers an Identity Request towards UE and requests for an UE identity. Registration proceeds with the new UE identity.

Figure 31: UE Identity Procedure for Unknown Subscribers Call Flow

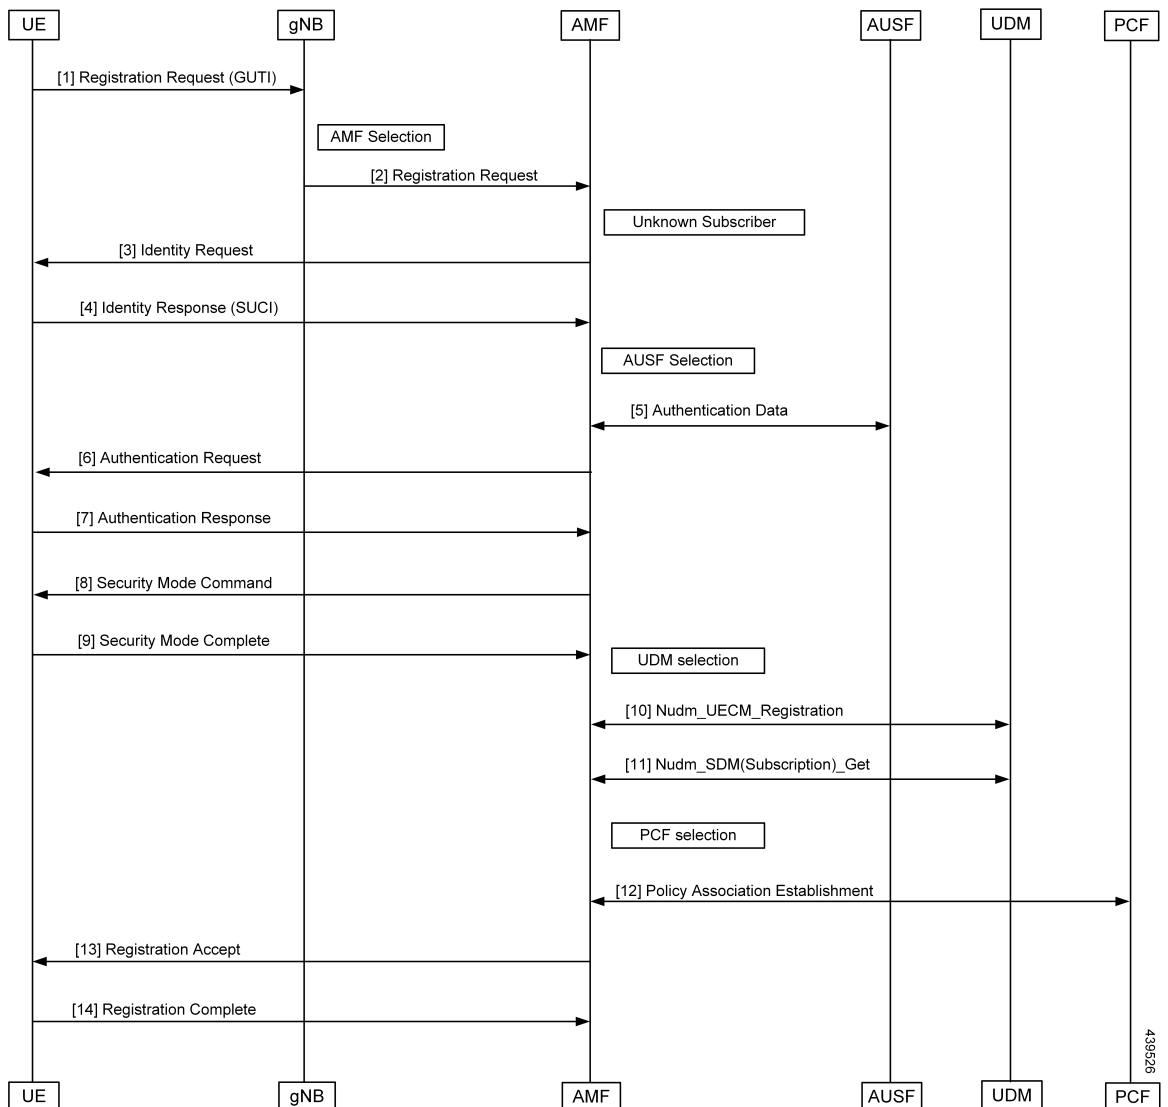


Table 52: UE Identity Procedure for Unknown Subscribers Call Flow Description

Step	Description
1	The UE sends the Registration Request with the GUTI to the gNB.
2	During the registration procedure, the AMF determines that the received GUTI is of a subscriber who is not present in AMF. In such case, AMF triggers an identity-request to UE asking for its SUCI.
3	The UE sends the identity-request message to the AMF.
4	The UE responds with its SUCI in the identity-response message to the AMF.
5	The AMF extracts fresh authentication data from the AUSF using the SUCI of subscriber.
6	The AMF sends Authentication Request to the UE to initiate authentication of the UE identity.
7	The UE sends Authentication Response to the AMF to deliver a calculated authentication response to the network. The AMF verifies that the result received and if the result is as expected then the registration procedure is proceeded.
8	The NAS security initiation is started.
9	After the NAS security function is set up, the AMF initiates the NGAP procedure to provide the 5G-AN with security context. The 5G-AN stores the security context and notifies it to the AMF. The 5G-AN uses the security context to protect the messages exchanged with the UE.
10	The AMF selects an UDM based on the PLMN info through the NRF query or static configuration and registers the UE with the UDM using Nudm_UECM_Registration. The UDM stores the AMF identity associated to the Access Type.
11	The AMF retrieves the Access and Mobility Subscription data using Nudm_SDM_Get. The AMF subscribes to be notified using Nudm_SDM_Subscribe when the data requested is modified.
12	The AMF selects PCF based on PLMN-info and slice-info and performs a Policy Association Establishment. The PCF sends policy data to AMF with restrictions and other policies to be applied for the UE. Currently the policies are not applied for UE and are stored in AMF.

Step	Description
13	<p>The AMF sends a Registration Accept message to the UE indicating that the Registration Request has been accepted. The Registration Accept contains the following:</p> <ul style="list-style-type: none">• 5G-GUTI• Registration Area• Mobility restrictions• PDU Session status• Allowed NSSAI• Configured NSSAI for the Serving PLMN• Periodic Registration Update timer• Emergency Service Support indicator• Accepted DRX parameters
14	<p>The UE sends a Registration Complete message to the AMF to acknowledge that a new 5G-GUTI was assigned.</p>



CHAPTER 15

DSCP Marking

Table 53: Feature History

Feature Name	Release Information	Description
DSCP Marking	2025.03.0	<p>AMF applies DSCP marking to outgoing packets on the N2/SCTP and N26/GTPC interfaces, ensuring that traffic is handled appropriately.</p> <p>Command introduced:</p> <ul style="list-style-type: none">• config { instance instance-id instance_id { endpoint sctp { dscp dscp_value } } }— Used to configure the DSCP value for N2-SCTP interface.• config { instance instance-id instance_id { endpoint gtp { dscp dscp_value } } }— Used to configure the DSCP value for N26-GTPC interface. <p>Default Setting: Disabled – Configuration Required</p>

Differentiated Services Code Point (DSCP) marking allows network devices to prioritize different types of traffic based on their DSCP value. AMF supports updating the IP headers with configured DSCP information on outgoing packets on N2/SCTP interface and N26/GTPC interface.

- [Usage Guidelines for DSCP Marking, on page 161](#)
- [Configure DSCP for N2/SCTP Interface, on page 162](#)
- [Configure DSCP for N26/GTPC Interface, on page 163](#)

Usage Guidelines for DSCP Marking

To configure DSCP marking:

- Use CLI commands to set DSCP values for N2/SCTP and N26/GTPC interfaces.

- DSCP values can be configured as hexadecimal (e.g., 0x0-0x3F) or decimal (range: 0-63).
- If DSCP value is not specified in the configuration then the default DSCP value is set to 0.
- Configured values apply to all outgoing requests and responses on the specified interface.
- DSCP marking is configured per interface, not per peer or session.
- Supports runtime changes to DSCP values.

Configure DSCP for N2/SCTP Interface

Procedure

Step 1 Enter the instance configuration mode.

instance **instance-id** *instance_id*

Step 2 Configure the endpoint for the instance.

endpoint *endpoint_name*

Specify sctp as the endpoint type for the instance.

Step 3 Configure the DSCP value for the SCTP endpoint.

dscp *dscp_value*

DSCP value is either in hexadecimal string (range 0x0-0x3F) eg:0x3F or decimal value (range 0-63) eg:12.

Following is an example of the sample CLI output for the DSCP marking.

```
[amf] amf# show running-config instance instance-id 1 endpoint sctp
instance instance-id 1
  endpoint sctp
    replicas      2
    nodes         1
    internal-vip  29.29.29.29
    dscp          10
  service sctp-1
    interface sctp
      internal-port metrics 9705 admin 9703 ipc 9701 pprof 9707 keepalived 29001
      internal-vip 29.29.29.29
      vip-ip 29.29.29.29 vip-port 1000
    exit
  exit
service sctp-2
  interface sctp
    internal-port metrics 9715 admin 9713 ipc 9711 pprof 9717 keepalived 29011
    internal-vip 29.29.29.29
    vip-ip 29.29.29.29 vip-port 1001
  exit
exit
exit
exit
exit
```

Step 4 Save and commit the configuration.

Configure DSCP for N26/GTPC Interface

Procedure

Step 1 Enter the instance configuration mode.

instance *instance-id* *instance_id*

Step 2 Configure the endpoint for the instance.

endpoint *endpoint_name*

Specify gtp as the endpoint type for the instance.

Step 3 Configure the DSCP value for the GTPC endpoint.

dscp *dscp_value*

DSCP value is either in hexadecimal string (range 0x0-0x3F) eg:0x3F or decimal value (range 0-63) eg:12.

Following is an example of the sample CLI output for the DSCP marking.

```
[amf] amf# show running-config instance instance-id 1 endpoint gtp
instance instance-id 1
endpoint gtp
  nodes 2
  retransmission timeout 4 max-retry 5
  internal-vip 27.27.27.27
  dscp 46
  vip-ip 27.27.27.27
  interface n26
    vip-ip 27.27.27.27
  exit
exit
exit
```

Step 4 Save and commit the configuration.



CHAPTER 16

Dynamic Configuration Change Support for SCTP and SBI Endpoints

- [Feature Summary and Revision History, on page 165](#)
- [Feature Description, on page 165](#)
- [Feature Configuration, on page 166](#)

Feature Summary and Revision History

Summary Data

Table 54: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled - Always-on
Related Documentation	Not Applicable

Revision History

Table 55: Revision History

Revision Details	Release
First introduced.	2021.04.0

Feature Description

AMF allows you to configure the SCTP and SBI endpoints dynamically.

This feature supports the following dynamic configurations:

- VIP-IP, Port addition and removal in SCTP endpoint
- TAI addition and removal in SBI
- Slice addition and removal in SBI

Feature Configuration

Configuring this feature involves the following steps:

- **SCTP Endpoint Configuration**—This configuration provides new SCTP VIP-IP and port addition, removal of existing SCTP VIP-IP and port information. For more information, refer to [Configuring the SCTP Endpoint, on page 166](#) and [Configuring the SCTP VIP-IP Port Removal , on page 167](#).
- **SBI Endpoint Configuration**—This configuration enables the NRF Registration, Deregistration, or NRF Update using internal VIP. For more information, refer to [Configuring the SBI Endpoint, on page 167](#).
- **Internal VIP-IP for the UDP Proxy Configuration**—This configuration enables internal communication between UDP proxy and GTPC-EP using internal VIP-IP. For more information, refer to [Configuring the Internal VIP-IP for the UDP Proxy, on page 170](#).

Configuring the SCTP Endpoint

To configure the SCTP endpoint, use the following configuration:

```
config
  instance instance-id instance_id
  endpoint sctp
    vip-ip existing_ipv4_address offline
    vip-ip new_ipv4_address vip-port port_number
    vip-ipv6 existing_ipv6_address offline
    vip-ipv6 new_ipv6_address vip-ipv6-port port_number
  end
```

NOTES:

- **endpoint sctp**—Specify the endpoint name as sctp.
- **vip-ip existing_ipv4_address offline**—Specify IPv4 address and mark it as offline.
- **vip-ip new_ipv4_address vip-port port_number**—Specify the new IPv4 address and port number.
- **vip-ipv6 existing_ipv6_address offline**—Specify the IPv6 parameters of the pod on which VIP is enabled.
- **vip-ipv6 new_ipv6_address vip-ipv6-port port_number**—Specify new IPv6 address and port number.

Use the following procedure to update the SCTP VIP-IP and port:

1. Add the new VIP-IP port.
2. Modify the gNB configuration to refer to the new VIP-IP and port.
3. When all gNBs refer to new VIP-IP, remove the old VIP-IP and port.

**Note**

- Post VIP-IP changes, AMF supports only resuming of IDLE mode subscribers with EEA0/EIA0 as the security algorithm.
- The change in the SCTP IP address isn't supported dynamically but the port change is supported.
- For any addition, deletion, or update of a new IP to the existing SCTP service requires the AMF restart.

Configuration Example

The following is an example configuration for IPv4.

```
config
  instance instance-id 1
  endpoint sctp
    vip-ip 209.165.200.226 offline
    vip-ip 209.165.200.228 vip-port 1000
  end
```

The following is an example configuration for IPv6.

```
config
  instance instance-id 1
  endpoint sctp
    vip-ip 209.165.202.158 vip-port 1001
    vip-ipv6 2001:420:54ff:a4::139:251 vip-ipv6-port 1000
  end
```

Configuring the SCTP VIP-IP Port Removal

When the gNB refers to the new VIP-IP port, remove the older ports.

To configure the SCTP VIP-IP port removal, use the following configuration.

```
config
  instance instance-id instance_id
  endpoint sctp
    no vip-ip existing_ip
  end
```

NOTES:

- **instance instance-id *instance_id***—Specify the instance ID.
- **endpoint sctp**—Specify the endpoint as sctp.
- **no vip-ip *existing_ip***—Specify the old IPv4 address and port number that must be removed.

Configuring the SBI Endpoint

Configuring the SBI endpoint involves the following steps:

- **Endpoint Configuration**—This configuration provides the commands to configure the endpoint. For more information, refer to [Configuring the Endpoint, on page 168](#).

- **AMF Registration with NRF**—This configuration provides the commands to configure AMF Registration, Deregistration with NRF. For more information, refer to [Configuring AMF Registration with NRF](#), on page 168.
- **NRF Profile Update**—This configuration provides the commands to configure the trigger to NRF Profile Update. For more information, refer to [Configuring the Trigger to NRF Profile Update](#), on page 169.

Configuring the Endpoint

SBI endpoint changes don't result in the pod restart.

After an existing IP is marked as offline and the new IP is added, the existing sessions continue, and callback URI is considered based on the previously configured IP. After this IP change, the newly registered subscribers have the callback URI based on the new IP.

To configure the SBI endpoint, use the following configuration:

```
config
  instance instance-id instance_id
  endpoint sbi
    vip-ip existing_ip offline
    vip-ip new_ip vip-port port_number
  end
```

NOTES:

- **endpoint sbi**—Specify the endpoint name as sbi.
- **vip-ip existing_ip offline**—Specify the IPv4 address and mark it as offline.
- **vip-ip new_ip vip-port port_number**—Specify the new IPv4 address.



Note This feature doesn't support multiple SBI endpoint IP configurations during the start of the system.

Configuration Example

The following is an example configuration.

```
config
  endpoint sbi
    vip-ip 209.165.200.226 offline
    vip-ip 209.165.200.225
  end
```

Configuring AMF Registration with NRF

If AMF has no active registration towards NRF, and when AMF adds or removes an SBI endpoint from offline mode, AMF sends a Registration Request towards NRF by sending its NF profile in the Registration Request.

To trigger the AMF registration with NRF when the VIP-IP is offline, use the following configuration:

```
config
  instances instance-id instance_id
  endpoint sbi
```



```
no vip-ip vip_ip_address offline
end
```

NOTES:

- **instances instance-id** *instance_id*—Specify the instance ID.
- **endpoint sbi**—Specify the endpoint name as SBI.
- **no vip-ip** *vip_ip_address* **offline**—Specify the VIP-IP address for SBI to remove this endpoint from offline mode.

Configuring the Trigger to NRF Profile Update

When a TAI or slice is added or removed, the AMF notifies the NRF by sending an NF Update request. The request contains the profile with the new TAI or slice information.

Configuring the NRF profile update involves the following steps:

- **TAI Addition and Removal**—This configuration enables the addition or removal of TAI. For more information, refer to [Configuring the TAI Addition and Removal, on page 169](#).
- **Slice Addition**—This configuration enables the addition of a slice. For more information, refer to [Configuring the Slice Addition, on page 169](#).
- **Slice Removal**—This configuration enables the removal of a slice. For more information, refer to [Configuring the Slice Removal, on page 170](#).

Configuring the TAI Addition and Removal

To configure the TAI addition or removal, use the following configuration:

```
config
  tai-group name tai_group_name
  tais name tai_list_name
  mcc mcc
  mnc mnc
  tac list updated_tac_list
end
```

NOTES:

- **tai-group name** *tai_group_name*—Specify the TAI group name to which the list of TAIs must be added.
- **tais name** *tai_list_name*—Specify the list of TAIs.
- **mcc** *mcc*—Specify the three-digit Mobile Country Code. Must be an integer with three digits.
- **mnc** *mnc*—Specify the two or three-digit Mobile Country Network. Must be an integer with three digits.
- **tac list** *updated_tac_list*—Specify the modified Tracking area code (TAC) list.

Configuring the Slice Addition

To configure an addition of a Slice, use the following configuration:

```
config
  amf-services service_name
```

```

slices name slice_name
  sst sst
  sdt sdt
end

```

NOTES:

- **amf-services** *service_name*—Specify the AMF service.
- **slices name** *slice_name*—Specify the slice name that must be added to the service.
- **sst** *sst*—Specify the slice or service type to signify the expected network slice behaviour in terms of features and services. Must be an integer in the range of 0–255.
- **sdt** *sdt*—Specify the slice differentiator value. It complements one or more slice or service types to allow differentiation among multiple network slices of the same slice or service type. Must be a hexadecimal.

Configuring the Slice Removal

To configure removal of a Slice, use the following configuration:

```

config
  no amf-services service_name
  slices name slice_name
end

```

NOTES:

- **amf-services** *service_name*—Specify the AMF service name.
- **slices name** *slice_name*—Specify the slice name that must be removed from the service.

Configuring the Internal VIP-IP for the UDP Proxy

When the internal VIP-IP is configured for the UDP-proxy (protocol) pod, the internal communication between the GTPC-EP and UDP-proxy happens over this IP address. The internal VIP-IP provides a secure channel for communication.



Note The VIP-IP doesn't support dynamic change. To update a VIP-IP, reconfigure the VIP-IP.

To configure the Internal VIP-IP for the UDP proxy, use the following configuration:

```

config
  instance instance-id instance_id
  endpoint protocol
    internal-vip vip_address
  end

```

NOTES:

- **endpoint protocol**—Specify the endpoint name as protocol.
- **instance instance-id** *instance_id*—Specify the instance ID.
- **internal-vip** *vip_address*—Specify the virtual IP address.



CHAPTER 17

EAP and AKA Authentication

- [Feature Summary and Revision History, on page 171](#)
- [Feature Description, on page 171](#)
- [How it Works, on page 172](#)

Feature Summary and Revision History

Summary Data

Table 56: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled - Always-on
Related Documentation	Not Applicable

Revision History

Table 57: Revision History

Revision Details	Release
First introduced.	2021.04.0

Feature Description

AMF supports the handling of Extensible Authentication Protocol(EAP)-AKA Prime(AKA') authentication at the AMF.

AMF interacts with the UE and the AUSF while performing the UE registration procedure.

EAP-AKA' authentication is carried over the N12 interface with the AUSF.

When the AMF receives the Authentication Response from the AUSF, it carries the EAP payload back and forth between the AUSF and the UE. The AMF carries this payload until it's successful or failed.

AMF supports optional message of Authentication Response from the AUSF.



Note The notification received after a successful Authentication Response isn't supported.

How it Works

This section describes how this feature works.

Call Flows

This section describes the key call flows for this feature.

EAP-AKA'-based Authentication Call Flow

This section describes the EAP-AKA'-based Authentication basic call flow.

Figure 32: EAP-AKA'-based Authentication Call Flow

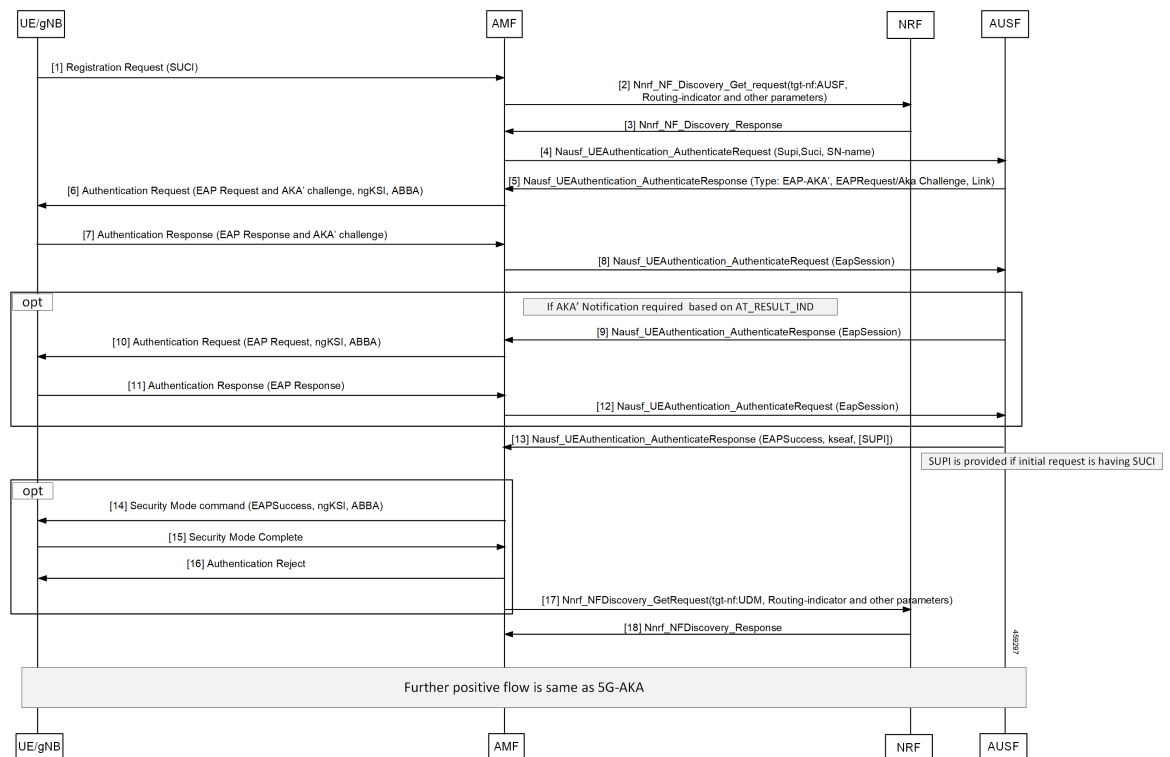


Table 58: EAP-AKA'-based Authentication basic Call Flow Description

Step	Description
1	The gNB sends the Registration Request along with SUCI information to the AMF.
2	AMF sends Nnrf_NF_Discovery_Get_request with tgt-nf: AUSF, Routing-indicator, and other parameters to the NRF.
3	The AMF receives Nnrf_NF_Discovery_Response from the NRF.
4	The AMF sends Nausf_UEAuthentication_AuthenticateRequest with SUPI, SUCI, and SN-name to the AUSF.
5	The AMF receives Nausf_UEAuthentication_AuthenticateResponse with type: EAP-AKA', EAPRequest or AKA' challenge, and link from the AUSF.
6	The AMF sends the Authentication Request (EAP Request or AKA' challenge, ngKSI, ABBA) to the UE.
7	The AMF receives the Authentication Response with the EAP Response or AKA' challenge from the UE.
8	AMF sends the Nausf_UEAuthentication_AuthenticateRequest (EapSession) to the AUSF.
9	The AMF receives Nausf_UEAuthentication_AuthenticateResponse (EapSession) from the AUSF.
10	The AMF sends the Authentication Request with EAP Request/ngKSI, ABBA to the UE.
11	The AMF receives the Authentication Response (EAP Response) from the UE.
12	AMF sends the Nausf_UEAuthentication_AuthenticateRequest (EapSession) to the AUSF.
13	The AMF receives the Nausf_UEAuthentication_AuthenticateResponse with EAPSuccess, kseaf, and SUPI from the AUSF.
14	The AMF sends the Security Mode command with EAPSuccess, ngKSI, ABBA to UE.
15	The AMF receives the Security Mode Complete from the UE.
16	The AMF sends the Authentication Reject to the UE for Authentication Failure.
17	The AMF sends Nnrf_NFDiscovery_GetRequest with tgt-nf: UDM, Routing-indicator, and other parameters to the NRF.
18	The AMF receives Nnrf_NFDiscovery_Response from the NRF.



CHAPTER 18

Encryption and Integrity Protection

- [Feature Summary and Revision History, on page 175](#)
- [Feature Description, on page 175](#)
- [How it Works, on page 176](#)
- [Feature Configuration, on page 181](#)
- [OAM Support, on page 182](#)

Feature Summary and Revision History

Summary Data

Table 59: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled – Always-on
Related Documentation	Not Applicable

Revision History

Table 60: Revision History

Revision Details	Release
First introduced.	2021.04.0

Feature Description

The AMF supports the following encryption and integrity protection algorithms to enable encryption and integrity protection on the N1/N2 interface:

- NEA0/NIA0
- 128-NEA1/128-NIA1
- 128-NEA2/128-NIA2

How it Works

This section describes how this feature works.

The UE Security Capability IE, received from the UE in Registration Request, is used by the network to indicate which security algorithms are supported by the UE for NAS security. The AMF creates a new security context for the UE and does the negotiation of encryption and integrity protection algorithms. These algorithms are configurable along with the priority of negotiation. The AMF compares the algorithms supported by the UE with configuration priority and selects the algorithms to be used for encryption and integrity protection. When integrity protection is disabled, ciphering is also auto-disabled.

In addition, the NasSubscriber database is a new database that stores the UE security context for both the AMF application and the protocol layer to access. The AMF application stores the derived keys and negotiated algorithms in the NasSubscriber database before sending the security mode command to the UE. The AMF protocol encodes the packets received from the AMF application and initiates the encryption and integrity protection based on the negotiated algorithm and the downlink Nas count.

The AMF extracts the security header from the packets to verify integrity protection in the uplink path. After verification, the AMF protocol deciphers the packets before sending it to the AMF application.

Call Flows

This section describes the key call flows for this feature.

UE Registration with Encryption/Integrity Protection Call Flow

The section describes the UE registration procedure with encryption/integrity protection call flow.

Figure 33: UE Registration with Encryption/Integrity Protection Call Flow

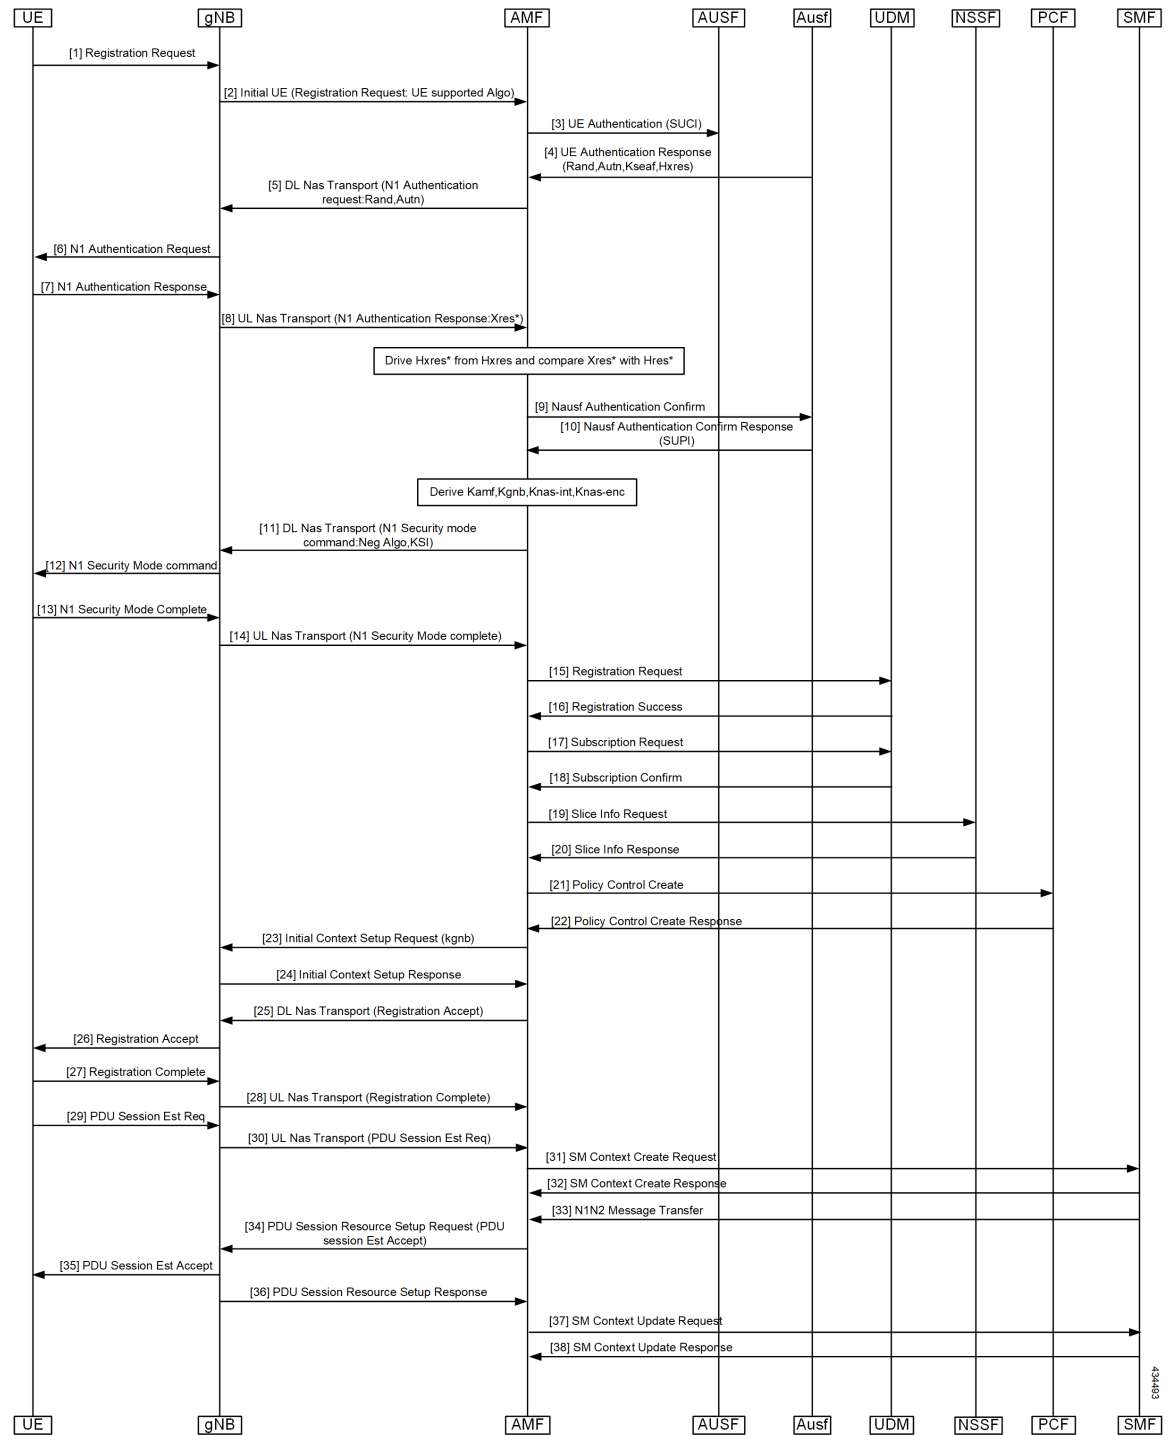


Table 61: UE Registration with Encryption/Integrity Protection Call Flow Description

Step	Description
1	UE Registration with Encryption/Integrity Protection UE sends registration request to gNB.
2	gNB sends Initial UE Registration Request to AMF.
3	AMF sends UE Authentication (SUCI) to AUSF.
4	AUSF sends UE Authentication Response with Rand, Autn, Kseaf and Hxres information to AUSF.
5	AMF sends DL Nas Transport with N1 Authentication request with Rand and Autn to gNB.
6, 7	gNB sends N1 authentication request to UE and receives N1 Authentication Response from it.
8	gNB sends UL Nas Transport message N1 Authentication Response:Xres* to AMF.
9, 10	AMF derives HXres* from HXres and compares Xres* with Hres*. It sends Nausf authentication Confirm to AUSF and receives response with SUPI from it.
11	AMF derives Kamf, Kgnb, Knas-int and Knas-enc. It sends DL Nas Transport (N1 Security mode command:Neg Algo,KSI) to gNB.
12	gNB sends N1 Security mode command to UE.
13	UE sends N1 Security Mode Complete to gNB.
14	gNB sends UL Nas Transport (N1 Security Mode complete) to AMF.
15, 16	AMF sends Registration Request to UDM and receives Registration Success from it.
17, 18	AMF sends Subscription Request to UDM and receives Subscription Confirm from it.
19, 20	AMF sends Slice Info Request to NSSF and receives Slice Info Response from it.
21, 22	AMF sends Policy Control Create to PCF and receives Policy Control Create Response from it.
23, 24	AMF sends Initial Context Setup request (kgnb) to gNB and receives response from it.
25, 26	AMF sends DL Nas Transport (Registration Accept) message to gNB. gNB forwards it to UE.
27, 28	UE sends Registration Accept to gNB. gNB forwards this message in UL Nas Transport to AMF.
29, 30	UE sends PDU Session Establishment Request message to gNB. gNB forwards this message in UL Nas Transport to AMF.
31, 32	AMF sends SM context Create Request message to SMF and receives response from it.
33	SMF sends N1N2 Message Transfer message to AMF.
34	AMF sends PDU Session Resource setup request (PDU session Estb Accept) to gNB.
35, 36	gNB sends PDU Session Resource setup request to UE and receives PDU Session resource setup response from it.

Step	Description
37, 38	AMF sends SM Context Update Request to SMF and receives response from it.

UE Access and Authentication Request Call Flow

The section describes the UE access and Authentication Request procedure call flow.

Figure 34: UE Access and Authentication Request Call Flow

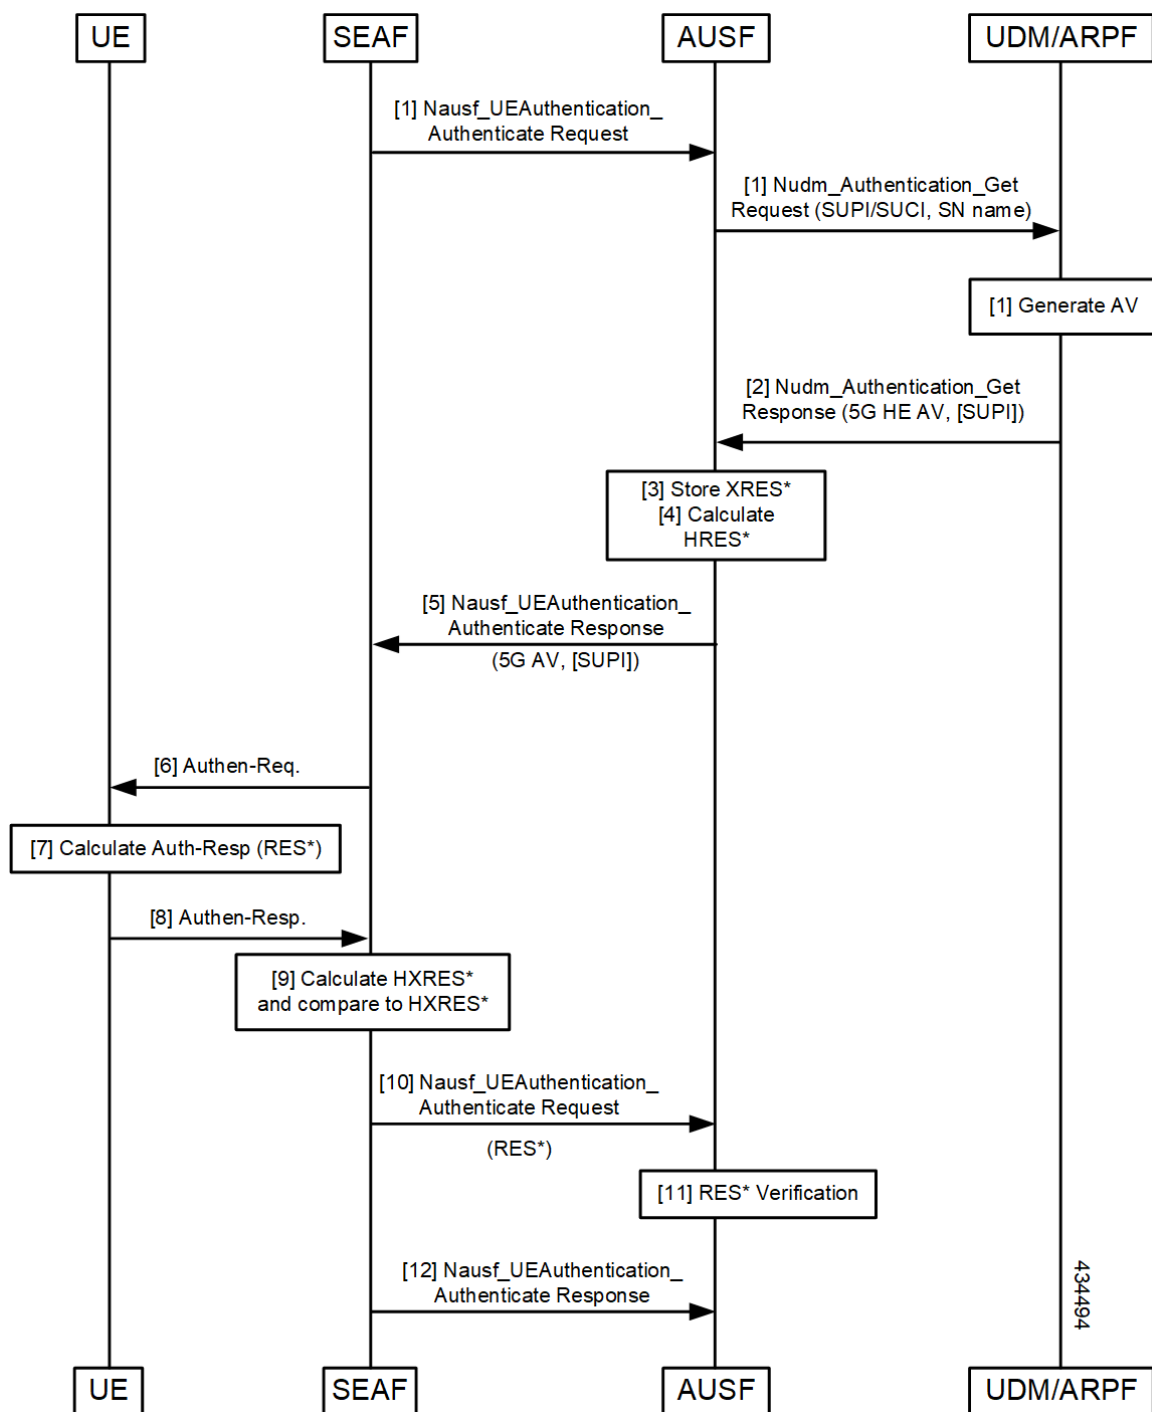


Table 62: UE Access and Authentication Request Call Flow Description

Step	Description
1	SEAF sends Nausf_UE_Authentication Request to AUSF. AUSF sends Nausf_UE_Authentication_Get Request with SUPI/SUCI and SN name to UDM/ARPF.
2	UDM/ARPF sends Nudm_Authentication_Get response to AUSF.
3, 4, 5	AUSF stores XRES and calculates HRES. It sends Nudm_Authentication_Get response to SEAF.
6	SEAF sends Authentication Response to UE.
7, 8	UE calculates Auth-Rsp and sends Authentcation response to SEAF.
9, 10	SEAF sends HXRES* and sends Nausf_UEAuthentication_Authenticate Request to AUSF.
11, 12	AUSF does RES* verification and sends Nausf_UEAuthentication_Authenticate Response to SEAF.

Feature Configuration

This section describes how to configure AMF Ciphering Algorithm.

This feature is configured under the amf-global configuration.

The supi-policy is configured per subscriber or for a group of subscribers. It's done by associating the supi/supi-prefix with the supi policy. The operator policy name is configured under supi-policy and the call-control profile is configured under operator policy. Under call-control policy, authentication timer, retry, and security algorithms are configured.

To configure this feature, use the following configuration.

```

config
  amf-global
    call-control-policy call_control_policy_name
      timers t3560
        value time_value
        retry retry_value
      exit
      security-algo security_algo_priority
        ciphering-algo [5G-EA0 | 128-5G-EA1 | 128-5G-EA2]
        integrity-prot-algo [5G-IA0 | 128-5G-IA1 | 128-5G-IA2]
      exit
    operator-policy operator_policy_name
      ccp-name ccp_name
    exit
    supi-policy supi_policy_name
      operator-policy-name operator_policy_name
    end

```

NOTES:

- **call-control-policy** *call_control_policy_name*—Specify the call control policy name.

- **security-algo** *security_algo_priority*—Specify the priority of security algorithms. Its values are 1, 2, 3.
- **ciphering-algo** [5G-EA0 | 128-5G-EA1 | 128-5G-EA2]—Specify the Ciphering algorithm to use.
- **integrity-prot-algo** [5G-IA0 | 128-5G-IA1 | 128-5G-IA2]—Specify the Integrity protocol algorithm to use.
- **operator-policy** *operator_policy_name*—Specify the operator policy name.
- **supi-policy** *supi_policy_name*—Specify the SUPI policy name. SUPI policy name is the number which represents PLMN ID.

Example: `amf-global supi-policy 223556 operator-policy-name local`

Configuration Example

The following is an example configuration.

```
config
  amf-global
    call-control-policy local
    timers t3560
    value 10
    retry 3
    security-algo 1
    ciphering-algo 128-5G-EA1
    ciphering-algo 128-5G-EA1
  exit
  operator-policy local
    ccp-name local
  exit
  supi-policy 123
    operator-policy-name local
  end
```

OAM Support

This section describes operations, administration, and maintenance support for this feature.

Bulk Statistics Support

The following statistics are supported for this feature.

amf_nas_security_algos_total

Description: Captures the integrity and confidentiality algorithms that are used in AMF for processing the NAS messages and failure or errors that are associated with the security algorithms.

Labels:

- Label: `algos_lang`
Label Description: The language type as go or c.
- Label: `algos_type`

Label Description: The algorithm type. Example: 128-5G-EA1

- Label: message_direction

Label Description: The message direction as inbound or outbound.

- Label: message_type

Label Description: The message type.

- Label: reason

Label Description: The reason for the failure.

- Label: status

Label Description: The status as success or failure.

amf_nas_security_algos_seconds_total

Description: Captures the time spent processing the security algorithms.

Labels:

- Label: algos_lang

Label Description: The language type as go or c.

- Label: algos_type

Label Description: The algorithm type. Example: 128-5G-EA1

- Label: message_direction

Label Description: The message direction as inbound or outbound.

- Label: message_type

Label Description: The message type.

- Label: reason

Label Description: The reason for the failure.

- Label: status

Label Description: The status as success or failure.



CHAPTER 19

Equipment Identity Register

- [EIR Feature Description, on page 185](#)
- [How EIR Works, on page 186](#)
- [Enabling EIR Check for the UE, on page 187](#)
- [Configuring EIR Network Element Profile List, on page 188](#)
- [Configuring EIR Profile Network Element, on page 188](#)
- [Configuring NF Pair Profile for EIR, on page 189](#)
- [Configuring NF Client Profile for EIR, on page 189](#)
- [Configuring Failure Handling Template for EIR, on page 190](#)
- [OAM Support for EIR, on page 191](#)

EIR Feature Description

Table 63: Feature History

Feature Name	Release Information	Description
Equipment Identity Register (EIR)	2024.03.0	<p>This feature allows the AMF to interact with EIR to validate the UE identity during the UE registration procedure. EIR check enhances the network management by tracking and managing the status of the devices.</p> <p>Command introduced: eir-check { enabled emergency-registration deny-greylisted initial-registration }</p> <p>Default Setting: Disabled – Configuration Required</p>

The EIR check feature ensures the legitimacy of devices accessing your network. This system categorizes devices into three distinct lists:

- **Whitelisted Devices:** AMF allows the UE registration.

- **Greylisted Devices:** AMF allows or denies the UE registration on the basis of CLI configuration.
- **Blacklisted Devices:** AMF denies the UE for registration.

AMF supports the EIR check using:

- NRF Discovery
- Local configuration without NRF discovery

How EIR Works

AMF uses the N17 interface to retrieve equipment status for registration requests when the registration type is set to one of the following:

- Initial Registration
- Mobility Updating with AMF Change
- Emergency Registration

EIR Check Call Flow During Registration Procedure

Following call flow describes the various message exchanges that happens between the UE and AMF during the EIR check.

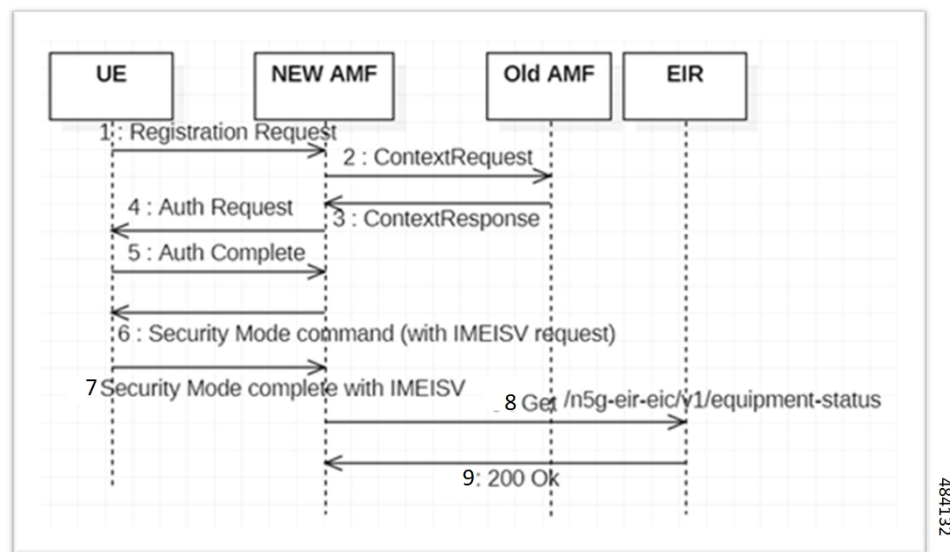


Table 64: EIR Check Call Flow Description

Steps	Description
1	The UE sends a registration request to AMF.

Steps	Description
2	For mobility registration with AMF change request type, AMF identifies an MME/Old AMF and sends a context requests.
3	The old AMF/MME responds with a ContextResponse.
4, 5	The AMF authenticates the UE as presented in the authentication procedure.
6	<p>If Permanent Equipment Identifier (PEI) is not available from peer AMF/MME in ContextResponse, AMF fetches the PEI using either security mode command (with International Mobile Equipment Identity Software Version - IMEISV request) or using IdentityRequest.</p> <p>Note PEI sent to EIR is either IMEI or IMEISV (whichever is already available in the AMF).</p>
7	UE responds with security mode complete/identity response with IMEISV value.
8	AMF initiates EIR check using IMEISV.
9	<p>On successful verification, EIR responds with 200 OK. AMF takes one of the following actions on the basis of EIR response:</p> <ul style="list-style-type: none"> • If the EIR status is whitelisted: AMF allows the UE registration. • If the EIR status is greylisted: AMF allows or denies the UE registration on the basis of CLI configuration. • If the EIR status is blacklisted: AMF denies the UE for registration. <p>On Failures responses (4xx,5xx), AMF either continues with registration or sends a Registration Reject based on FHT configuration (i.e. continue if retry-and-ignore).</p>

Enabling EIR Check for the UE

To enable EIR check for the UE, use the following configuration.

```

config
    amf-global
        call-control-policy
            eir-check {enabled | emergency-registration | deny-greylisted |
initial-registration}
        end

```

NOTES:

- **call-control-policy**—Specify the policies related to call control within the AMF. It encompasses various rules and behaviors that the AMF must follow when handling calls and registrations.
- **eir check**—Specifies the conditions under which the AMF performs an EIR check. The EIR check is used to verify the status of a mobile device by querying the EIR, which contains information about whether devices are blacklisted, greylisted, or whitelisted.

- **enabled**—Enables the EIR check for initial and mobility registration.
- **emergency-registration**—Enables the EIR check specifically for emergency registration scenarios. By default, EIR check is not done for emergency registration.
- **deny-greylisted**—This option configures the AMF to deny registration requests from devices that are greylisted.
- **initial-registration**—This option selects only initial registrations for EIR checks. Without this configuration, the system selects both initial registrations and mobility registrations involving an MME/AMF change for EIR checks.

Configuring EIR Network Element Profile List

To configure a new EIR element within an operator's policy, use the following configuration.

```
config
  operator-policy local
    ccp-name local
      network-element-profile-list eir eir_profile_list_name
    end
```

NOTES:

- **operator-policy local**—Specifies the settings that applies to a local operator policy. It sets the context for defining policies specific to the operator's network.
- **ccp-name local**—Specifies the name of the call control policy (CCP) being configured. Here, "local" is the name of the policy, indicating that it applies locally within the operator's domain.
- **network-element-profile-list eir eir_profile_list_name**—Specifies the new EIR element to be added in the network element profile list.

Configuring EIR Profile Network Element

To configure the EIR profile network element, use the following configuration:

```
config
  profile network-element eir eir_name
    nf-client-profile nf_client_profile_name
    failure-handling-profile failure_handling_profile_name
    query-params [ target-plmn ]
  end
```

NOTES:

- **profile network-element eir eir_name**—Specify the profile name for the network element.
- **nf-client-profile nf_client_profile_name**—Specify the network function client profile name.
- **failure-handling-profile failure_handling_profile_name**—Specify the failure handling profile name.

- **query-params [target-plmn]**—Specifies the target Public Land Mobile Network (PLMN). This defines the particular mobile network to which the EIR queries are directed, allowing the EIR to check equipment statuses relevant to that specific network.

Configuring NF Pair Profile for EIR

To configure a network function (NF) pair profile for an EIR, use the following configuration. This setup includes NRF discovery, locality preferences, and caching behavior.

```
config
  profile nf-pair nf-type nf_type_name
    nrf-discovery-group nrf_discovery_group_name
    locality client client_locality_name
    locality preferred-server preferred_server_name
    locality geo-server geographic_server_location
    cache invalidation true
end
```

NOTES:

- **profile nf-pair nf-type nf_type_name**—Specifies the type and identifier of the network function.
- **nrf-discovery-group nrf_discovery_group_name**—Assigns the NF pair to a Network Resource Function (NRF) discovery group.
- **locality client client_locality_name**—Specify the locality for the client-side of the NF pair.
- **locality preferred-server preferred_server_name**—Specifies the preferred server locality for the NF pair.
- **locality geo-server geographic_server_location**—Specifies a geographic server locality for the NF pair.
- **cache invalidation true**—Specifies that cache invalidation is enabled. This ensures that outdated or stale data in the cache is invalidated, maintaining the accuracy of information.

Configuring NF Client Profile for EIR

To configure a NF client profile for an EIR, use the following configuration. This setup specifies the EIR profile, its locality, service parameters, and endpoint configurations.

```
config
  profile nf-client nf-type profile_nf-client_nf_type_name
    eir-profile eir_profile_name
    locality locality_name
    priority priority_value
    service name type service_name_type
    endpoint-profile endpoint_profile_name
    capacity capacity_value
    uri-scheme uri_scheme_name
    endpoint-name endpoint_name
    priority priority_value
```

```

capacity capacity_value
primary ip-address ipv4_address
primary ip-address port port_ip_address
end

```

NOTES:

- **profile nf-client nf-type** *profile_nf-client_nf_type_name*—Specifies the type and identifier of the network function.
- **eir-profile** *eir_profile_name*—Associates the EIR profile with the NF client.
- **locality** *locality_name*—Specify the locality for the EIR profile.
- **priority** *priority_value*—Specifies the priority for the locality.
- **service name type** *service_name_type*—Specifies the service name and type associated with the EIR profile.
- **endpoint-profile** *endpoint_profile_name*—Specifies the endpoint profile name.
- **capacity** *capacity_value*—Specify the capacity for the endpoint profile.
- **uri-scheme** *uri_scheme_name*—Specify the URI scheme for the endpoint profile.
- **endpoint-name** *endpoint_name*—Specify the specific endpoint within the endpoint profile.
- **priority** *priority_value*—Specify the priority for the endpoint.
- **capacity** *capacity_value*—Specify the capacity for the endpoint.
- **primary ip-address** *ipv4_address*—Specify the primary IP address for the endpoint.
- **primary ip-address port** *port_ip_address*—Specify the port number for the primary IP address of the endpoint.

Configuring Failure Handling Template for EIR

To configure a failure handling template for EIR, use the following configuration. This configuration includes specific actions and retry mechanisms for different failure scenarios.

```

config
  profile nf-client-failure nf-type nf_type_name
    profile failure-handling failure_handling_profile_name
      service name type service_name_type
      responsetimeout responsetimeout_value
      message type message_type
      status-code httpv2 httpv2_status_code
      retry retry_count
      action retry-and-terminate
    end
  end

```

NOTES:

- **profile nf-client-failure nf-type** *nf_type_name*—Specify the failure handling profile for an EIR NF client.

- **profile failure-handling** *failure_handling_profile_name*—Associates a failure handling profile with the NF client.
- **service name type** *service_name_type*—Specify the service name and type associated with the failure handling profile.
- **responsetimeout** *responsetimeout_value*—Specifies response timeout value for the service.
- **message type** *message_type*—Specify the type of message for which the failure handling actions are being configured.
- **status-code httpv2** *httpv2_status_code*—Specify the HTTP status codes that triggers the failure handling actions.
- **retry** *retry_count*—Specify the number of retry attempts for the specific status codes.
- **action retry-and-terminate** —Specify the action to take after the retry attempts are exhausted.

OAM Support for EIR

This section describes operations, administration, and maintenance support for this feature.

Bulk Statistics Support for EIR

The following statistics are supported for the EIR feature.

n17_service_stats

Following are the stats records under n17_service_stats.

Messages	Metrics Message Type
CheckEquipmentIdentity Req & Rsp	N17EquipmentStatusCheckReq N17EquipmentStatusCheckRsp

Following are the examples of stats output:

- `N17_service_stats{app_name="AMF", cluster="clu1", data_center="dc1", instance_id="0", message_type="N17EquipmentStatusCheckReq", reason="", roaming_status="HOMER", service_name="amf-service", slice_data="_2-333333", status="success"} 1`
- `N17_service_stats{app_name="AMF", cluster="clu1", data_center="dc1", instance_id="0", message_type="N17EquipmentStatusCheckRsp", reason="BLACKLISTED", roaming_status="HOMER", service_name="amf-service", slice_data="_2-333333", status="success"} 1`



CHAPTER 20

Event Data Records

- [EDR Feature Description, on page 193](#)
- [Configuring EDRs, on page 231](#)
- [OAM Support for EDR Logging, on page 237](#)

EDR Feature Description

Table 65: Feature History

Feature Name	Release Information	Description
Event Data Record (EDR) Support	2024.03.0	<p>AMF supports the storage of the EDR files in the EDR monitor pods. You can use the EDR files for debugging and troubleshooting.</p> <p>Command introduced: edr reporting { enable [all subscribers file [transaction transaction-collision]] disable file [transaction transaction-collision] } to enable EDR in AMF.</p> <p>Default Setting: Disabled – Configuration Required</p>

Event Data Records (EDRs) collect information that you can use to perform the following functions:

- Debug and monitor the AMF application behavior
- Diagnose issues with call flows for specific subscribers

AMF supports generation of EDRs for all the messages exchanged on:

- N1 & N2 interface
- UE specific events only

The AMF generates EDR files in comma-separated value (CSV) file format. The CSV files can be optionally compressed before sending to an external server.

EDR Format

AMF generates EDR with certain common transaction fields and also adds procedure-id and event-id along with respective field values. AMF defines the procedure-id, event-id, and field-id for individual messages. This mapping is used to format the CSV event entry in the EDR. Each event entry consists of comma-separated procedure-id, event-id, and field-value. These registered mappings can also be used in CLI commands to disable EDRs at procedure, event, or field level.

Transaction EDR Format

[Transaction-EDR-Fields, list of event-entries.](#)

Event Entries

AMF generates EDRs with procedure-level details, event-level details, and field-level details. These granular details help in debugging errors and issues.

The following is a sample transaction entry along with a list of events in the CSV format.

```
Version, Field-Count, Transaction-id-value, Start-Time, Elapsed-Time, .....,
Procedure-id1, event-id1, field-id1-value, field-id2-value.....,
Procedure-id1, event-id2, field-id1-value, field-id2-value.....,
Procedure-id1, event-id3, field-id1-value, field-id2-value.....
```



Note There might be different set of fields for a combination of procedure-id and event-id. You can enable or disable the EDRs dynamically during runtime by using a CLI command. For configuration details, see the [Configuring Transaction Level EDR Generation, on page 232](#) section in this guide.

EDR File Storage Location

This section provides details on the archival location of EDR files in AMF service pod and EDR monitor pod.

EDR Files in AMF Service Pod

The EDR file is generated in each AMF service pod where the subscriber sessions and events are processed. Based on the EDR file size, the files are archived periodically in non-persistent volume, that is, the AMF service pod. A new file is created before archiving the existing file.

The format of the transaction EDR file name and transaction collision EDR file name are as follows:

<pod-name>_<pod_instance>_<PodStartTime>.transaction.csv

<pod-name>_<pod_instance>_<PodStartTime>.transaction_collision.csv

The directory path of service pod is `/tmp/edr/`.

Example:

amf-service-n0-0_0_20220730233455.transaction.csv

Where the pod name is amf-service-n0-0, pod instance is 0, and the pod start time "20220730181014" means 30th July 2022 18:10:14 UTC.

The format of compressed file name is as follows:

<pod-name>_<pod_instance>_<PodStartTime>.transaction.csv.<fileArchivedTime>.<FileRotationCounter>.gz

Example:

example-service-n0-0_1_20220730181014.transaction.csv.20220730181844.1.gz

EDR Files in EDR Monitor Pod

The AMF service pod sends all the EDR files to edr-monitor pod every 30 seconds. The EDR files remain in edr-monitor pod persistent directory as .csv file. When the total size of all the files exceeds the configured maximum file size, the oldest file is deleted.

The format of file name in edr-monitor pod is *<pod-name>_<pod_instance>_<PodStartTime>.transaction.csv*.

Example:

edr-monitor pod-n0-0_0_20220730233455.transaction.csv

The directory path of edr-monitor pod is */logs/edr/*.

The EDR file size, maximum archived EDR file count, and maximum persistent volume size are configured through CLI commands. For information on the configuration commands, see the [Configuring EDR Parameters, on page 233](#) section.

To access the files in the persistent volume of EDR monitor pod, log on to the Ops center with required credentials, and use the edr-monitor pod ingress URL.

To determine the ingress URL, use the following command:

kubectl get ingress -n *namespace* | grep edr

Example:

cloud-user@svi-cndp-tb41-gr-setup-amf-cluster-2-cndp-server-1:~\$ kubectl get ingress -n amf-amf | grep edr

edr-archives-amf-amf nginx edr-archives.amf-amf.172.18.128.82.nip.io 10.109.13.65 80, 443 4d5h

EDR Transaction File

The EDR transaction file dumps the transaction information at the end of the transaction. By default, the file generation is disabled.

The following table provides the information that is stored in the file.

Table 66: EDR Transaction File Fields

Field Number	Field Name	Field Description
1	Version	EDR version number. Default value is v1. Note The version will change only when there is a change in the encoding order of transaction header fields or change in encoding procedure of any individual field.
2	Field Count	Total number of fields in transaction EDR header. The default value is 15.
3	Transaction ID	Transaction ID

Field Number	Field Name	Field Description
4	Start Time	The transaction start time in yyyy/MM/dd HH:mm:ss.SSS format.
5	Elapsed Ms	The time taken for transaction to end in milliseconds.
6	Subscriber ID	The subscriber ID. For example, imsi-123456789012345
7	Transaction Type	The transaction type (integer) which is defined internally in the application.
8	Transaction Description	The transaction description in string format.
9	Session Primary Key	The primary key of the session.
10	Session Unique Keys	The unique keys for the session separated by .
11	Session Non Unique Keys	The non-unique keys for the session separated by .
12	Status	The transaction status (success or error).
13	Status Code	The transaction status code to indicate the failure reason.
14	Procedure Name	The procedure name for which the transaction is submitted.
15	Sub Procedure Name	The sub procedure name for which the transaction is submitted.

Field Number	Field Name	Field Description
16	State	The transaction state. It can be: <ul style="list-style-type: none"> • Started • New • Ready • Active • Pending • Suspend • SuspendWaitingForResponse • SuspendWaitingForLock • Abort • Finished • Timeout • Unknown
17	Execution stages	The list of stages the transaction went through its lifecycle separated by

NOTES:

- Each field is separated by comma (,).
- Fields session_uks, session_nuks, execution_stages are a list. These fields are separated by pipe (|). For example, session_uks is denoted as uk1|uk2|uk3.

CSV Format Examples:

```
V1,15,16,2023/11/02 15:36:21.156,9,imsi-123456789012345,
101,N1RegistrationRequest,supi:123456789012345,
guti:12345601038301000001|guti:12345601038301000002|
stmsi:038301000002|ngapId:4|guti:12345601038301000003|
stmsi:038301000003,imei:123456789012345|gpsi:msisdn-8899776655|
ranId:4194304123456,success,success,UERegistration,
N1RegistrationRequest,Active,init_done|finished,
guti:12345601038301000002|supi:123456789012345|
ranId:4194304123456|ngapId:4|guti:12345601038301000003|stmsi:038301000003
```

Procedure Level EDR Generation

The Event Logging feature captures procedure-level information per subscriber. Upon completing a procedure, either successfully or unsuccessfully, the AMF generates event data records capturing the details of procedures and events.

The EDR generation per procedure is configurable. For configuration details, see the [Configuring Transaction Level EDR Generation, on page 232](#) section in this guide.

The following table lists the supported procedures and the corresponding IDs.

Table 67: Procedure List

Procedure	Procedure-ID
UE Registration	3
DE-Registration	4
Service Request (Idle to Active)	5
UE Context release (Active to Idle)	6
Paging	7
PDU N2 Response Note This procedure captures the events for the N2 responses generated as a part of service request procedure.	11
Xn Handover	14
N2 (Intra AMF) interface	15



Note At the end of each procedure, AMF logs a Metadata event with event id as 3099.

Fields prefixed with "n1ul" or "n2ul" indicate the fields that are present in messages received by AMF.

Fields prefixed with "n1dl" or "n2dl" indicate the fields that are initiated by AMF.

Further, the AMF captures event-level information per procedure. The following table provides details on the subscriber events and the respective event IDs.

The events captured per procedure are configurable. For configuration details, see the [Configuring Transaction Level EDR Generation, on page 232](#) section in this guide.

The following tables list the detailed event records for:

- UE Registration
- DE-Registration
- Service Request (Idle to Active)
- UE Context Release (Active to Idle)
- PDU N2 Response
- Paging, Xn Handover
- N2 (Intra AMF) Interface

N1 Registration Message

AMF supports the following fields for the N1 registration message. The fields are in the same sequence as in the table.

IE Name	Sample Format
Procedure	3
Event	101 [Registration Request]
version	V1
field-count	24
n2ul-msgtype	15
n2ul-amf-ue-ngapid	123
n2ul-ran-ue-ngapid	12346
n1ul-msgtype	101
n1ul-regtype	For VgsRegistrationTypeValue
n1ul-ngksi	Tsc NasKeySetIdentifierValue
n1ul-mobileid	VTypeOfIdentity-IdentityType For Guti – VTypeOfIdentity-Mcc;Mnc VAMFRegionId VAMFSetId VAMFPointer VGTmsi
n1ul-noncurr-naksi	Tsc NasKeySetIdentifierValue
n1ul-mmcapability	Lpp Ho S1Mode
n1ul-uesec-capability	Encryption Integrity
n1ul-reqnssai	Sst;Sdt;MapCfgSst;MapCfgSdt
n1ul-lastvisted-reg-tai	Mcc1Mcc2Mcc3 Mnc1Mnc2Mnc3 TAC,
n1ul-uestatus	N1ModeReg S1ModeReg
n1ul-ue-usage-setting	1
n1ul-req-drxparam	1
n1ul-payload-cont-type	1
n1ul-nw-slicing-ind	Dcn Nssci
n1ul-updatetype	NgRanDcu SmsRequested

IE Name	Sample Format
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI: Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example:ECGI:123;456;30 TAI:567;789;30 1705848410</p>
n2ul-rrc-est-cause	3
n2ul-contextrequest	1
n2ul-allowed-nssai	Sst;Sd Sst;Sd
n1ul-uplink-datastatus	PSI0 PSI1 PSI2 PSI3 PSI4 PSI5 PSI6 PSI7 PSI8 PSI9 PSI0 PSI11 PSI2 PSI3 PSI4 PSI5,
n1ul-pdusess-status	PSI0 PSI1 PSI2 PSI3 PSI4 PSI5 PSI6 PSI7 PSI8 PSI9 PSI0 PSI11 PSI2 PSI3 PSI4 PSI5,

AMF doesn't support any additional fields apart from the fields captured in the preceding table.



Note

- UE Context Request:
 - 1 – UE context was requested.
 - 0 – UE context wasn't requested.
- AMF does not support the functionalities of the following Information Elements (IEs); however, it still records these IEs in the EDR
 - NonCurrentNativeNASKsi
 - LastVisitedRegisteredTai
- When you enable the EDR for individual SUPIs, the AMF captures EDR messages only after it identifies the SUPI during the Initial UE Registration procedure.

The following is the sample CSV message format for the N1 registration procedure:

```
,3,101,V1,24,15,,12347,101,126,0,1|2,0|1,guti-123;
456|1|14|3|33554439,,,e0|e0,2;333333;2;333333,,
1|0,0,,,NrLoc|TAI;plmnId_123_456;30|
NCGI;plmnId_123_456;1|1700142239,3,0,,,
```


Authentication Request and Response

Authentication request and response (success or failure) are combined events, and AMF logs the details of these events under the registration procedure.

The following table captures the details for the authentication request and successful response.

CLI Fields	Sample Format
Procedure	3
Event	151
Version	V1
Field-Count	15
status	Success
n2dl-msgtype	4
n2-amf-ue-ngapid	16
n2-ran-ue-ngapid	12346
n1dl-msgtype	86
n1dl-ngksi	0 1
n2ul-msgtype	46
n1ul-msgtype	87
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI: Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example:ECGI:123;456;30 TAI:567;789;30 1705848410</p>
n2ul-vgmmcause	
n2ul-failparam	

The following table captures the details for the authentication request with failed response.

CLI Fields	Sample Format
Procedure	3
Event	151
Version	V1
Field-Count	15
status	Failure
n2dl-msgtype	4

CLI Fields	Sample Format
n2-amf-ue-ngapid	5
n2-ran-ue-ngapid	12347
n1dl-msgtype	86
n1dl-ngksi	0 2
n2ul-msgtype	46
n1ul-msgtype	89
n2ul-userloc-info	The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC Format: NCGI:Mcc;Mnc;CellId TAI: Mcc;Mnc;Tac Timestamp Example: NCGI:123;456;30 TAI:567;789;30 1705848410 Example: ECGI:123;456;30 TAI:567;789;30 1705848410
n2ul-vgmmcause	20
n2ul-failparam	0 0 0 0 0 0 0 0 0 0 0 0 48

Authentication Reject

Upon failure of the authentication procedure, AMF initiates the authentication reject with the following details:

CLI Fields	Sample Format
Procedure	3
Event	151
Version	V1
Field-Count	15
n2dl-msgtype	4
n2dl-amf-ue-ngapid	16
n2dl-ran-ue-ngapid	12346
n1dl-msgtype	88
n1dl-eap-msg	0 0 0 0 0 0 0 0 0 0 0 0 48

Security Mode Command

The Security Mode Command and its Complete/Reject response are logged as a combined event by the AMF under the registration procedure. The following table lists the details of a successful Security Mode Command and Complete message, as well as for a Security Mode Command and Reject message.

CLI Fields	Sample Format
Procedure	3
Event	164
Version	V1
Field-Count	19
status	Success/Failure
n2dl-msgtype	4
n2-amf-ue-ngapid	1
n2-ran-ue-ngapid	12346
n1dl-msgtype	93
n1dl-sel-nassec-algo	0 1
n1dl-ngksi	0 1
n1dl-replay-uesec-capability	e0 e0
n1dl-imeisv-req	1
n1dl-sel-eps-nassec-algo	2 2
n2ul-msgtype	46
n1ul-msgtype	94
n1ul-imeisv	imeisv-3520990017614823
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI: Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example:ECGI:123;456;30 TAI:567;789;30 1705848410</p>
n1ul-cause Note This field is populated for Security Mode Reject.	23

Registration Accept

CLI-Name	Sample Format
Procedure	3
Event	154 Registration Accept
version	V1
field-count	29
n2dl-msgtype	4
n2dl-amf-ue-ngapid	123
n2dl-ran-ue-ngapid	12346
n1dl-msgtype	66
n1dl-vgsregresult	EmergencyRegistered NssaaPerformed SmsAllowed VgsRegistrationResultValue
n1dl-5gguti	VTypeOfIdentity-Mcc;Mnc VAMFRegionId VAMFSetId VAMFPointer VGTmsi Example: guti-123;456 1 14 3 33554450
n1dl-tai-list	type;numberOfElements;mcc_mnc_tac1%tac2 or type;numberOfElements;mcc_mnc_Startingtac 00;3;123_456_10%20%30 01;5;123_456_100
n1dl-allowed-nssai	Sst;sd sst;sd Example: 0b;111111 02;
n1dl-rejected-nssai	Sst;sd;cause Sst;sd;cause Example: 02;111999;0 ff;;0 04;300000;1 ff;;1
n1dl-configured-nssai	Sst;sd sst;sd Example: 0b;111111 02;
n1dl-vgsnetworkfeatsupport	Mpsi IwkN26 Emf Emc ImsVopsN3GPP ImsVops3GPP Mcsi Emcn3 Example: 0 1 1 1 0 1 0 0
n1dl-pdusess-status	PSI0 PSI1 PSI2 PSI3 PSI4 PSI5 PSI6 PSI7 PSI8 PSI9 PSI0 PSI11 PSI2 PSI3 PSI4 PSI5, Example: 0 0 0 0 0 1 1 0 0 0 0 0 0 0 0 0

CLI-Name	Sample Format
n1dl-pdusessreactivateres	PSI0 PSI1 PSI2 PSI3 PSI4 PSI5 PSI6 PSI7 PSI8 PSI9 PSI0 PSI11 PSI2 PSI3 PSI4 PSI5, Example: 0 0 0 0 0 1 1 0 0 0 0 0 0 0 0
n1dl-pdusessreactivatereserrcause	SessionId:CauseValue Example: 5:28 6:28
n1dl-nw-slicing-ind	Dcn Nssci
n1dl-servarealist	allowedType;TypeofList;NumberOfElements; mcc_mnc_tac1%tac2 or allowedType;TypeofList;NumberOfElements; mcc_mnc_startingTac or allowedType;TypeofList;NumberOfElements; mcc_mnc Examples: 1;00;2;123_456_30%20 1;01;2;123_456_65534 Or 0;01;2;123_456_65534 Or 0;11;1;123_456
n1dl-t3512	29
n1dl-t3502	2c
n1dl-emergencylist	numberOfElemet svcCatageory_number; svcCatageory_number Example: 2 1_100;2_109
n1dl-extemergency-numlist	numberOfElement subsvc_number; subsvc_number Example: 2 sos.uk_555;_9999
n1dl-sorttranscontainer	SorDataType; ListIndication;ListType;Ack Example: 0;1;1;1
n1dl-nssaiinclusionmode	1
n1dl-negotiated-drx-param	3

CLI-Name	Sample Format
n1dl-epsbrrctx-status	PSI0 PSI1 PSI2 PSI3 PSI4 PSI5 PSI6 PSI7 PSI8 PSI9 PSI0 PSI11 PSI2 PSI3 PSI4 PSI5,
n2dl-oldamf	string
n2dl-mobrestrictions	See Mobility Restriction List
n2dl-allowed-nssai	Sst;sd sst;sd Example: 03;000004 0b;111111

Registration Reject

CLI-Name	Sample Format
Procedure	3
Event	155 Registration Reject
version	V1
field-count	11
n2dl-msgtype	4
n2dl-amf-ue-ngap-id	123
n2dl-ran-ue-ngap-id	12346
n1dl-msgtype	68
n1dl-5gmm-cause	11
n1dl-t3346	2c
n1dl-t3502	2c
n1dl-rejected-nssai	Sst;sd;cause Sst;sd;cause Example: 02;111999;0 ff;;0 04;300000;1 ff;;1
n2dl-old-amf	string



Note AMF logs the UE context release sent after a registration reject or registration complete as a separate event.

Registration Complete

CLI-Name	Sample Format
Procedure	3
Event	102 Registration Complete

CLI-Name	Sample Format
version	V1
field-count	9
status	Success or Failure
n2ul-msgtype	46
n2ul-amf-ue-ngap-id	12346
n2ul-ran-ue-ngap-id	101
n1ul-msgtype	67
n1ul-sorttranscontainer	SorDataType;;; Example: 0;0;0;0 -> SorDatatype;ListIndication;ListType;Ack 1;;; -> SorDatatype;;;
N2ul-user-loc-info	NrLoc TAI;plmnId_123_456;30 NCGI; plmnId_123_456;1 1701489704

**Note**

- AMF logs the following events in a single line:
Registration Request, Authentication, Security Mode, ICSR, and Registration Accept.
- Registration complete is a separate entry in EDR.

Initial Context Setup Request

CLI-Name	Sample Format
Procedure	3
Event	3000 Initial Context Setup Request
version	V1
field-count	14
n2dl-msgtype	14
n2dl-amf-ue-ngap-id	10
n2dl-ran-ue-ngap-id	123456
n2dl-old-amf	string
n2dl-ueAggMBR	Integer Integer
n2dl-guami	123;456 3 14 1

CLI-Name	Sample Format
n2dl-sessressetupctxreq	Format - PDUSessionId;SSt;Sd;PayloadConttype; Backofftimer;Cause PDUSessionId1;SSt1;Sd1;PayloadConttype1; Backofftimer1;Cause1 Note AMF derives the payload container type, backoff timer, and cause value from NAS PDU.
n2dl-allowed-nssai	02;333333
n2dl-ue-security-capabilities	c0;00 c0;00 00;00 00;00
n2dl-security-key	32 a776370429201fd6ac20212ac7f62bda 6ff2bc58b523e908c085f3026be7a0c
n2dl-mobrestrictions	See Mobility Restriction List
n2dl-emergencyFBIId	1 1
n2dl-redirectionVoiceFallback	0

Initial Context Setup Response

CLI-Name	Sample Format
Procedure	3
Event	3001 Initial Context Setup Response
version	V1
field-count	5
n2ul-msgtype	14
n2ul-amf-ue-ngap-id	10
n2ul-ran-ue-ngap-id	12345
n2ul-PDUSessResSetupRsp	<u>Single PDU:</u> “PDU session ID” Example: 5 <u>List of PDUs: (for Ex:2)</u> “PDU session ID” “PDU session ID” Example: 5 6

CLI-Name	Sample Format
n2ul-PDUSessResSetupfail	<p><u>Single PDU:</u></p> <p>“PDU session ID”</p> <p>Example: 5</p> <p><u>List of PDUs: (for Ex:2)</u></p> <p>“PDU session ID” “PDU session ID”</p> <p>Example: 5 6</p>

Initial Context Setup Failure

CLI-Name	Sample Format
Procedure	3
Event	3002 Initial Context Setup Failure
version	V1
field-count	6
status	Failure
n2ul-msgtype	14
n2ul-amf-ue-ngap-id	10
n2ul-ran-ue-ngap-id	12345
n2ul-PDUSessResSetupfail	<p><u>Single PDU:</u></p> <p>“PDU session ID”</p> <p>Example: 5</p> <p><u>List of PDUs: (for Ex:2)</u></p> <p>“PDU session ID” “PDU session ID”</p> <p>Example: 5 6</p>
n2ul-cause	0 23

UE Context Release Request

The following table list the event details for a gNB initiated UE context release request towards AMF.

CLI-Name	Sample Format
Procedure	6
Event	3003 UE Context Release Request
version	V1
field-count	5
n2ul-msgtype	42

CLI-Name	Sample Format
n2ul-amf-ue-ngapid	2099211
n2ul-ran-ue-ngapid	12346
n2ul-pduSessRsrcList	5 6
n2ul-cause	Cause_group Value 0 0

UE Context Release Command

This event encompasses both UE context release and complete commands and is part of multiple procedures, such as registration, deregistration, and service requests. In certain cases, the AMF does not wait for the UE Context Release Complete and, therefore, does not update the status field in such instances.

CLI-Name	Sample Format
Procedure	3 [Refer Note]
Event	3004 UE Context Release Command
version	V1
field-count	8
Status	Success, Failure, or empty
n2-msgtype	41
n2-amf-ue-ngapid	4567
n2-ran-ue-ngapid	1234
n2dl-cause	Cause_group Value 2 0
n2ul-userloc-info	The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC Format: NCGI:Mcc;Mnc;CellId TAI: Mcc;Mnc;Tac Timestamp Example: NCGI:123;456;30 TAI:567;789;30 1705848410 Example:ECGI:123;456;30 TAI:567;789;30 1705848410

CLI-Name	Sample Format
n2ul-recommendedCellRanNodes-paging	NCGI:Mcc_Mnc_CellId;TimeStayedInCell Mcc1_Mnc1_CellId1;TimeStayedInCell1 ECGI:Mcc_Mnc_CellId;TimeStayedInCell Mcc1_Mnc1_CellId1;TimeStayedInCell1 Example - NCGI:214_365_00000002d;35 NCGI:214_365_00000002e;36 Example - ECGI:214_365_000001f;5 ECGI:123_456_000002f;12
n2ul-pduSessRsrcList	5 6



Note Procedure code varies based on the parent procedure under which this event is enabled.

UE Initiated Deregistration

CLI-Name	Sample Format
Procedure	4
Event	104
version	V1
field-count	13
Status	Success/Failure
n2ul-msgtype	46
n2-amf-ue-ngapid	1
n2-ran-ue-ngapid	12346
n1ul-msgtype	69
n1ul-dereg-type	0 0 1
n1ul-ngksi	0 1
n1ul-mobileid	guti-123;456 1 14 3 16777217

CLI-Name	Sample Format
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI: Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example:ECGI:123;456;30 TAI:567;789;30 1705848410</p>
n2dl-msgtype	4
n1dl-msgtype	70

UDM Initiated Deregistration

CLI-Name	Sample Format
Procedure	4
Event	158
version	V1
field-count	12
Status	Success/Failure
n2dl-msgtype	4
n2dl-amf-ue-ngapid	2
n2dl-ran-ue-ngapid	12346
n1dl-msgtype	71
n1-dereg-type	0 0 1
n1dl-cause	23
n1dl-t3346	1
n2ul-msgtype	46
n1ul-msgtype	72

Deregistration DL NAS Transport

CLI-Name	Sample Format
Procedure	4
Event	158
version	V1

CLI-Name	Sample Format
field-count	8
n2dl-msgtype	0
n2dl-amf-ue-ngapid	1
n2dl-ran-ue-ngapid	12346
n1dl-msgtype	104
n1dl-pdu-sessid	5
n1dl-payload-cont-type	1
n1dl-t3346	1
n2dl-cause	2c

Xn-HandOver

CLI-Name	Sample Format
Procedure	14
Event	3006
version	V1
field-count	18
status	Success/ Failure
n2ul-msgtype	25
n2ul-src-amf-ue-ngapid	136314888
n2ul-ran-ue-ngapid	12346
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI: Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example:ECGI:123;456;30 TAI:567;789;30 1705848410</p>
n2ul-ue-security-capabilities	00;01 00;01 00;01 00;01
n2ul-pdu-session-resource-to-be-switched-list	<p>“PDU session ID” “PDU session ID”</p> <p>Example: 5 6</p>
n2ul-pdu-session-resource-failed-setup-list	<p>“PDU session ID” “PDU session ID”</p> <p>Example: 7 8</p>

CLI-Name	Sample Format
n2dl-msgtype	25
n2dl-amf-ue-ngapid	136314889
n2dl-ran-ue-ngapid	22346
n2dl-ue-security-capabilities	00;00 00;00 00;00 00;00
n2dl-security-context	Ncc nh Example: 2 e90712066cc7e598809fc11534ae7b8c4ce 6d1866f855ae77a62c96cd8b430d8
n2dl-pdu-session-resource-switched-list	“PDU session ID” “PDU session ID” Example: 5 6
n2dl-pdu-session-resource-released-list	“PDU session ID” “PDU session ID” Example: 7 8
n2dl-allowed-nssai	02;333333
n2dl-redirectionVoiceFallback	1
n2dl-pdu-session-resource-failed-release-list	“PDU session ID” “PDU session ID” Example: 5 6

N1 Identity Request

AMF logs the N1 identity request and response as combined events and captures the IE details under the registration procedure.

CLI Fields	Sample Format
Procedure	3
Event	162
Version	V1
Field-Count	12
status	Success
n2dl-msgtype	4
n2-amf-ue-ngapid	16
n2-ran-ue-ngapid	12346
n1dl-msgtype	86
n1dl-identity-type	SUCI
n2ul-msgtype	46
n1ul-msgtype	87

CLI Fields	Sample Format
n1ul-mobileid	suci-0-123-456-0-0-0-789012345
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI: Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example:ECGI:123;456;30 TAI:567;789;30 1705848410</p>

N1 Request and Failure Response

CLI Fields	Sample Format
Procedure	3
Event	162
Version	V1
Field-Count	12
status	Failure
n2dl-msgtype	4
n2-amf-ue-ngapid	16
n2-ran-ue-ngapid	12346
n1dl-msgtype	86
n1dl-identity-type	SUCI
n2ul-msgtype	
n1ul-msgtype	
n1ul-mobileid	
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI: Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example:ECGI:123;456;30 TAI:567;789;30 1705848410</p>

Meta Data Information

Following are the procedure level information captured for the meta data.

CLI Fields	Sample Format
Procedure	3
Event	3099
Version	V1
Field-Count	9
proc-start-time	2024/02/09 14:36:31.559
proc-end-time	2024/02/09 14:36:31.811
proc-status	Success
ue-5gmm-state	MM_REGISTERED
ue-roaming-status	HOMER
ue-serving-area	UNKNOWN_AREA
ue-neg-security-capabilty	5G-EA0 128-5G-IA1
ue-gnb-data	12346 4 1663 123_456;4194304
ue-initial-ctx-setup-done	1
ue-nas-dl-ul-count	2 2

Following are the detailed level information captured for the meta data.

proc-start-time	Procedure Start Time: Format :(Year/Month/Day Hour: Min: Second: Milliseconds)
proc-end-time	Procedure End Time: Date time format :(Year/Month/Day Hour: Min: Second: Milliseconds)
proc-status	Procedure status can be either Success or Failure)
ue-5gmm-state	5GMM state <ul style="list-style-type: none"> • MM_DEREGISTERED • MM_COMM_PROC_INIT • MM_REGISTERED • MM_DEREGISTRATION_INIT • MM_IDLE
ue-roaming-status	Following are the possible values for roaming status: <ul style="list-style-type: none"> • HOMER • ROAMER • UNKNOWN

ue-serving-area	<p>UE serving area represent currently UE has been imposed service area restriction or not.</p> <p>Following are the possible values for SAR:</p> <ul style="list-style-type: none"> • ALLOWED • NOT ALLOWED • UNKNOWN_AREA 	
ue-neg-security-capabilty	<p>AMF logs the following fields as part of negotiated Security capability:</p> <ul style="list-style-type: none"> • 5G-NegEA : Negotiated Encryption Algorithms. Example: 5G-EA0. • 5G-NegIA: Negotiated Integrity Algorithms, Example : 128-5G-IA1. 	
ue-gnb-data	AMF captures the following details as part of UE-gNB-data:	
	<p>Sub-field</p> <ul style="list-style-type: none"> • RAN-UE-NGAP-ID • AMF-UE-NGAP-ID • NGAP-conn-ID • GNB ID 	<p>Data Type</p> <ul style="list-style-type: none"> • Integer type • Integer type • Integer type <ul style="list-style-type: none"> • PLMN ID - mcc, BYTE[] • Ran-Ngap-Gnb-Id - Integer type <p>Example: 12346 4 1663 123_456;4194304</p>
ue-initial-ctx-setup-done	<p>Initial Context Setup done (1 or 0)</p> <p>1 means initial context setup done</p> <p>0: Initial Context Setup not done</p>	
ue-nas-dl-ul-count	DL NAS Count UL NAS Count	

Paging Request

N2 paging request IE is an individual event and the following are the fields listed for the paging procedure.

CLI Fields	Sample Format
Procedure	7
Event	3009
version	V1

CLI Fields	Sample Format
field-count	6
n2dl-msgtype	22
n2dl-uepagingIdentity	3 14 16777238
n2dl-pagingdrx	2
n2dl-pagingpriority	5
n2dl-assistancedatapaging	NCGI:Mcc_Mnc_CellId_TimeStayedInCell; Mcc1_Mnc1_CellId1_TimeStayedInCell1 PagingAttemptCount;IntendedNumberOfPagingAttempts; NextPagingAreaScope ECGI:Mcc_Mnc_CellId_TimeStayedInCell; Mcc1_Mnc1_CellId1_TimeStayedInCell1 PagingAttemptCount;IntendedNumberOfPagingAttempts; NextPagingAreaScope Example - NCGI:214_365_00000002d_35 ; NCGI:214_365_00000002e_36 1;2;0 Example - ECGI:214_365_000001f_5 ; ECGI:123_456_000002f_12 1;5;5
n2dl-tailistpaging	TAI:Mcc;Mnc;Tac TAI:123;456;30 TAI:440;784;10

N2 Handover

AMF supports the EDR storage only for intra-N2 handover.

Handover Required

CLI Fields	Sample Format
Procedure	15
Event	3010
version	V1
field-count	8
n2ul-msgtype	12
n2ul-amf-ue-ngapid	2097153
n2ul-ran-ue-ngapid	12346
n2ul-handoverType	0

CLI Fields	Sample Format
n2ul-cause	Cause_group Value 0 3
n2ul-targetId	Global RAN Node ID: GnbId (Global gNB ID) added as prefix to denote NG-RAN choice. gNB: mcc_mnc_cellIdentity (Example: GnbId:123_456_4194305) Selected TAI: mcc_mnc_tac (Example: 123_456_30) Prefix "0:" for NG-RAN added as prefix for TargetId. Sample Value: NG-RAN – 0;GnbId:123_456_4194305 TAI:123_456_30
n2ul-direct-frwr -path-avail	0
n2ul-pdu-session -resource-list	"PDU session ID" "PDU session ID" 5 6

Handover Request/Acknowledgement/Failure

CLI Fields	Sample Format
Procedure	15
Event	3011
version	V1
field-count	18
status	Success/Failure
n2dl-msgtype	13
n2-amf-ue-ngapid	12346
n2dl-handoverType	0 (intra5gs)
n2dl-cause	Cause_group Value 0 3
n2dl-ueAggMaxBitRate	256000 256000
n2dl-ue-security-capabilities	00;01 00;01 00;01 00;01
n2dl-security-context	Ncc nh Example: 2 e90712066cc7e598809fc11534ae7b8c4ce6d1866f855ae77a62c96cd8b430d8

CLI Fields	Sample Format
n2dl-pdu-session-resource-list	“PDU session ID” “PDU session ID” Example: 5 6
n2dl-allowed-nssai	2;333333
n2dl-mobrestrictions	See Mobility Restriction List
n2dl-guami	123;456 3 14 1
n2dl-redirectionVoiceFallback	1
n2ul-msgtype	13
n2-ran-ue-ngapid	12345
n2ul-pdu-session-resource-admitted-list	“PDU session ID” “PDU session ID” Example: 5 6
n2ul-pdu-session-resource-failed-list	“PDU session ID” “PDU session ID” Example: 5 6
n2ul-cause	0 13

Handover Preparation Failure

CLI Fields	Sample Format
Procedure	15
Event	3014
version	V1
field-count	4
n2dl-msgtype	12
n2dl-amf-ue-ngapid	12346
n2dl-ran-ue-ngapid	335
n2dl-cause	Cause_group Value 0 3

Handover Command

CLI Fields	Sample Format
Procedure	15
Event	3013
version	V1
field-count	4
n2dl-msgtype	12

CLI Fields	Sample Format
n2dl-amf-ue-ngapid	12346
n2dl-ran-ue-ngapid	335
n2dl-handoverType	0 - means intra handover type
n2dl-pdu-session-resource-ho-list	5 6
n2dl-pdu-session-resource-rel-list	6 (empty when not present)

Handover Notify

CLI Fields	Sample Format
Procedure	15
Event	3015
version	V1
field-count	4
n2ul-msgtype	11
n2ul-amf-ue-ngapid	12346
n2ul-ran-ue-ngapid	335
n2ul-userloc-info	NCGI:123;456;1 TAI:123;456;20

Uplink RAN Status Transfer

CLI Fields	Sample Format
Procedure	15
Event	3016
version	V1
field-count	4
n2ul-msgtype	49
n2ul-amf-ue-ngapid	12346
n2ul-ran-ue-ngapid	335

Downlink RAN Status Transfer

CLI Fields	Sample Format
Procedure	15
Event	3017
version	V1
field-count	4
n2dl-msgtype	7

CLI Fields	Sample Format
n2dl-amf-ue-ngapid	12346
n2dl-ran-ue-ngapid	335

Handover Cancel and Handover Cancel Acknowledge

CLI Fields	Sample Format
Procedure	15
Event	3019
version	V1
field-count	5
status	Success
n2-msgtype	10
n2-amf-ue-ngapid	12346
n2-ran-ue-ngapid	335
n2ul-cause	0 5

Service Request

CLI Fields	Sample Format
Procedure	5
Event	105
version	V1
field-count	14
n2ul-msgtype	46
n2ul-amf-ue-ngapid	5
n2ul-ran-ue-ngapid	12346
n1ul-msgtype	76
n1ul-ngksi	0 1
n1ul-servicetype	4
n1ul-stmsi	stmsi-3 14 16777219
n1ul-uplink-datastatus	0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0
n1ul-pdusess-status	0 0 0 0 0 1 0 0 0 0 0 0 0 0 0 0

CLI Fields	Sample Format
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI:Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example: ECGI:123;456;30 TAI:567;789;30 1705848410</p>
n2ul-rrc-est-cause	3
n2ul-contextrequest	1
n2ul-allowed-nssai	<p>Sst;sd sst;sd</p> <p>Example: 03;000004 0b;111111</p>

Service Accept

CLI Fields	Sample Format
Procedure	5
Event	159
version	V1
field-count	9
n2dl-msgtype	0
n2dl-amf-ue-ngapid	15
n2dl-ran-ue-ngapid	12346
n1dl-msgtype	78
n1dl-pdusess-status	0 0 0 0 0 1 1 0 0 0 0 0 0 0 0
n1dl-pdusessreactivateres	0 0 0 0 0 1 0 0 0 0 0 0 0 0 0
n1dl-pdusessreactivatereserrcause	0 0 0 0 0 1 0 0 0 0 0 0 0 0 0
n2dl-mobrestrictions	See Mobility Restriction List

Service Reject

CLI Fields	Sample Format
Procedure	5
Event	160
version	V1
field-count	8

CLI Fields	Sample Format
n2dl-msgtype	0
n2dl-amf-ue-ngapid	8
n2dl-ran-ue-ngapid	12346
n1dl-msgtype	77
n1ul-cause	28
n1dl-pdusess-status	0 0 0 0 0 1 0 0 0 0 0 0 0 0 0
n1dl-t3346	2c

UE Context Modification

CLI Fields	Sample Format
Procedure	5
Event	3021
version	V1
field-count	4
n2dl-msgtype	38
n2dl-amf-ue-ngapid	36
n2dl-ran-ue-ngapid	12346
n2dl-emergencyFBIId	0 0

PDU Session Resource Setup Request

CLI Fields	Sample Format
Procedure	5
Event	3022
version	V1
field-count	5
n2dl-msgtype	29
n2dl-amf-ue-ngapid	36
n2dl-ran-ue-ngapid	12346

CLI Fields	Sample Format
n2dl-pdusess-res-setup-req-item	Format - PDUSessionId;SSt;Sd;PayloadConttype; Backofftimer;Cause PDUSessionId1;SSt1;Sd1;PayloadConttype1; Backofftimer1;Cause1 Note AMF derives the payload container type, backoff timer, and cause value from NAS PDU.
n2dl-ueAggMBR	25600 25600

PDU Session Resource Setup Modify Request

CLI Fields	Sample Format
Procedure	5
Event	3023
version	V1
field-count	4
n2dl-msgtype	26
n2dl-amf-ue-ngapid	8
n2dl-ran-ue-ngapid	12346
n2dl-pdusessres-mod	Format - PDUSessionId;PayloadConttype;Backofftimer;Cause PDUSessionId1;PayloadConttype1;Backofftimer1;Cause1 Note AMF derives the payload container type, backoff timer, and cause value from NAS PDU. Example – 5;1;10;3 6;2;;

PDU Session Resource Release Command

CLI Fields	Sample Format
Procedure	5
Event	3024
Version	V1

CLI Fields	Sample Format
field-count	4
n2dl-msgtype	38
n2dl-amf-ue-ngapid	7
n2dl-ran-ue-ngapid	12346
n2dl-pdusessres-rellist	PduSessionID0 PduSessionId1 5 6
n2dl-nas pdu	PayloadConttype backofftimer Cause 1 10 3

PDU N2 Response Procedure

PDU N2 response events are recorded in the EDR upon the occurrence of the following events:

- When the AMF initiates requests as part of PDU procedures, such as creation, modification, or release.
- During service request procedures, including PDU setup, ICSR, and UE context modification.
- During registration procedures, such as reactivation.

PDU Session Resource Setup Response

CLI Fields	Sample Format
Procedure	11
Event	3025
version	V1
field-count	5
n2ul-msgtype	29
n2ul-amf-ue-ngapid	2097155
n2ul-ran-ue-ngapid	12346
n2ul-pdu-session-resource-setup-response-list	<u>Single PDU:</u> "PDU session ID" Example: 5 <u>List of PDUs: (for Ex:2)</u> "PDU session ID" "PDU session ID" Example: 5 6

CLI Fields	Sample Format
n2ul-pdu-session-resource-setup-failure-list	<p><u>Single PDU:</u></p> <p>“PDU session ID”</p> <p>Example: 6</p> <p><u>List of PDUs: (for Ex:2)</u></p> <p>“PDU session ID” “PDU session ID”</p> <p>Example: 5 6</p>

PDU Session Resource Modify Response

CLI Fields	Sample Format
Procedure	11
Event	3026
version	V1
field-count	6
n2ul-msgtype	26
n2ul-amf-ue-ngapid	2097155
n2ul-ran-ue-ngapid	12346
n2ul-pdu-session-resource-modify-response-list	<p><u>Single PDU:</u></p> <p>“PDU session ID”</p> <p>Example: 5</p> <p><u>List of PDUs: (for Ex:2)</u></p> <p>“PDU session ID” “PDU session ID”</p> <p>Example: 5 6</p>
n2ul-pdu-session-resource-modify-failure-list	<p><u>Single PDU:</u></p> <p>“PDU session ID”</p> <p>Example: 6</p> <p><u>List of PDUs: (for Ex:2)</u></p> <p>“PDU session ID” “PDU session ID”</p> <p>Example: 5 6</p>

CLI Fields	Sample Format
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI:Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example: ECGI:123;456;30 TAI:567;789;30 1705848410</p>

PDU Session Resource Release Response

CLI Fields	Sample Format
Procedure	11
Event	3027
Version	V1
field-count	5
n2ul-msgtype	28
n2ul-amf-ue-ngapid	2097153
n2ul-ran-ue-ngapid	12346
n2ul-pdu-session-resource-release-response-list	<p><u>Single PDU:</u></p> <p>“PDU session ID”</p> <p>Example: 5</p> <p><u>List of PDUs: (for Ex:2)</u></p> <p>“PDU session ID” “PDU session ID”</p> <p>Example: 5 6</p>
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI:Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example: ECGI:123;456;30 TAI:567;789;30 1705848410</p>

UE Context Modification Response

CLI Fields	Sample Format
Procedure	11
Event	3028
version	V1
field-count	7
status	Success/Failure
n2ul-msgtype	40
n2ul-amf-ue-ngapid	2097154
n2ul-ran-ue-ngapid	12346
n2ul-rrc-state	0
n2ul-userloc-info	<p>The NCGI denotes the NRLOC and ECGI denotes the EUTRANLOC</p> <p>Format: NCGI:Mcc;Mnc;CellId TAI: Mcc;Mnc;Tac Timestamp</p> <p>Example: NCGI:123;456;30 TAI:567;789;30 1705848410</p> <p>Example:ECGI:123;456;30 TAI:567;789;30 1705848410</p>
n2ul-cause	<p>Cause_group Value</p> <p>0 0</p>

Mobility Restriction List

SUB IE's	SUB-SUB IE's	Printing Format in EDR
ServingPLMN	Mcc -> string Mnc -> string	servingplmn:mcc;mnc
EquivalentPLMNs	List 0: Mcc -> string Mnc -> string List 1: Mcc -> string Mnc -> string Etc	Single list: equiplmn:mcc_mnc Multiple List: equiplmn:mcc0_mnc0;mcc1_mnc1

RATRestrictions	List of PBRATRestrictionsItem List 0: Mcc Mnc string List 1: Mcc Mnc string etc	Single List: ratrest:mcc_mnc_val Multiple List: ratrest:mcc_mnc_val1;mcc1_mnc1_val2
ServiceAreaInformation	List of PBServiceAreaInformationItem List 0: Mcc Mnc []byte []byte List 1: Mcc Mnc []byte []byte etc	Single List: SAInfo:mcc1_mnc1_alltac% alltac%alltac_nalltac%nalltac Multiple List: SAInfo:mcc1_mnc1_alltac %alltac%alltac_nalltac%nalltac ; mcc2_mnc2_alltac11%alltac12%alltac12 _nalltac12%nalltac12

Each SUB IE under mobility restriction list is separated by “|” delimiter.

```
servingplmn:mcc;mnc|
equiplmn:mcc_mnc;mcc1_mnc1|
ratrest:mcc_mnc_val1;mcc1_mnc1_val2|
SAInfo:mcc1_mnc1_alltac%alltac%alltac_nalltac%nalltac ;
mcc2_mnc2_alltac11%alltac12%alltac12_nalltac12%nalltac12
```

Examples:

- For single list - servingplmn:123;456||ratrest:123_456_80|SAInfo:123_456_10%20_40%50|
- For multiple list:
servingplmn:123;456||ratrest:123_456_80;123_456_40|SAInfo:123_456__10%20%30;123_456_40%50%60_|

EDR Transaction Collision

For collision, AMF provides collision related information in a separate file. This file is present only for debugging and is for internal use. For validation of collision cases, it is recommended to validate contents of the EDR transaction file having content present in the amf-service.

EDR Limitations

The EDR Logging feature has the following limitations:

- Event record generation does not work for the following scenario:
 - All handover (HO) procedures except Xn HO and intra AMF N2 HO. Further, AMF logs the EDR details only for messages exchanged on N1 and N2 interface.
- AMF supports EDR reporting exclusively based on the IMSI (SUPI) identifier.
- The AMF currently supports EDR generation in CSV format. The EDR file storage format is not configurable.
- AMF doesn't support EDRs for messages on AUSF (N12), UDM (N8), SMF (N11), PCF (N14), MME (N26), and AMF (N14) interfaces.

Configuring EDRs

This section describes how to configure the EDR Logging feature.

Configuring EDR Reporting



Note EDR generation occurs after you configure the subscriber ID. Then, you can enable EDR reporting for a specific subscriber or for all the subscribers. If you have enabled the EDR reporting for all the subscribers, then the AMF ignores the individual subscriber ID configuration.



Note To optimize the performance, it is recommended to enable EDR reporting only for a subset of subscribers with specific procedure ID. You can enable or disable the EDRs dynamically during runtime. The existing EDR records remain the same and the runtime changes get reflected only in the newly generated EDR records.

To enable or disable the EDR generation for subscribers, use the following sample configuration:

```
config
    edr reporting { enable [ all subscribers | file [ transaction |
transaction-collision ] ] | disable file [ transaction |
transaction-collision ] }
    edr all subscribers
end
```

NOTES:

- **edr reporting { enable [all subscribers | file [transaction | transaction-collision]] | disable file [transaction | transaction-collision] }**—Specify this keyword to configure the EDR reporting on AMF. Use the **edr reporting enable** command to enable the EDR reporting functionality. Use the **edr reporting disable file** command to disable the EDR reporting functionality for a specific file. By default, the EDR reporting is disabled.

For **transaction-collision** details, see [EDR Transaction Collision, on page 231](#).

- Use the **edr reporting enable all subscribers** command or **edr all subscribers** to enable the EDR for all the subscribers.



Note

- To enable EDR reporting for a subscriber, use the **edr subscribers subscriber_id** command. *subscriber_id* must be an alphanumeric string. The default value is empty. Ensure to specify the exact subscriber key in this command. The AMF supports only IMSI (SUPI)-based EDR reporting.
- Configure a minimum of one subscriber upon enabling the EDR reporting.
- You can configure a maximum of 10 subscribers for generation of transaction collision EDRs.

Configuring Transaction Level EDR Generation

Use the following sample configuration to generate the EDR events at transaction level.

```
config
  edr file { transaction | transaction-collision }
    procedure-id procedure_value
    event-id event_value
    field-id field_value
  end
```

- **edr file { transaction | transaction-collision }**: Specify to generate EDR files with transaction or transaction-collision level details for subscriber sessions. For **transaction-collision**, see [EDR Transaction Collision, on page 231](#)
- **procedure-id procedure_value**: Specify the procedure ID or procedure name for which the event reporting must be enabled.
- **event-id event_value**: Specify the event ID or event name for which the event reporting must be enabled.
- **field-id field_value**: Specify the field ID or field name for which the event reporting must be enabled.
- All procedure IDs, event IDs, and field IDs registered by application, are enabled by default.
- If one or more procedures are enabled, then all the other procedures will be disabled and will not be populated in the transaction EDR. Similarly, if one or more events are enabled under a procedure, all other events under that procedure will be disabled and will not be populated in the transaction EDR.
- If a procedure-id is disabled, no event start, add field, or event-end will be honored for the procedure-id.
- If an event-id is disabled within a procedure id, then event-start, event-end, or add field will not be honored for the procedure-id and event-id combination.

- If a field-id is disabled for an event-id, then add-field will not be honored, and a blank entry will be present instead of value in CSV entry.

Example Configuration:

```
edr file transaction
  procedure-id 24 32
  procedure-id 25
    event-id 5 7 8
    event-id 5
      field-id 10 12 14
```

In the preceding example, **event-id 5 7 8** means enable the event-id 5, 7, and 8 for procedure-id 25. The **field-id 10 12 14** means enable the field-id 10, 12, and 14 for procedure-id 25 and event-id 5.

Configuring EDR Parameters

To define the EDR parameters, use the following sample configuration:

```
config
  edr file transaction
    flush interval file_flush_interval
    limit [ size file_size | count file_count | storage edr_storage_size ]
    procedure procedure_value event event_value field field_value
    rate rate_value
    reporting [ disable | enable ]
    threshold [ cpu cpu_threshold | session session_threshold ]
  end
```

NOTES:

- **flush interval** *file_flush_interval*—Specify the time interval, in milliseconds, to flush the EDR files. The default value is 1000 ms.
- **limit** [**size** *file_size* | **count** *file_count* | **storage** *edr_storage_size*]—Specify the file-related limits.
 - Use the **limit size** *file_size* command to specify the maximum size of an EDR file, after which the EDR file is compressed and new CSV file is created. The default file size is 100 MB. The *file_size* must be an integer in the range of 1 to 2048.



Note

The system periodically monitors the size of an EDR file once per second or after the configured flush interval, whichever value is higher. After the EDR file reaches its maximum size, it's compressed and new CSV file is created. However, in some scenarios, the data is being continuously written to the EDR file just before the system performs a periodic check based on the previously mentioned threshold limits. This results in an EDR file that might slightly exceed the configured maximum file size.

- Use the **limit count** *file_count* command to specify the maximum number of EDR files to be preserved. The default file count is 10.

The *file_count* must be an integer in the range of 2 to 128.

When the configured file count is reached, the file is moved to persistent volume and then deleted.

- Use the **limit storage** *edr_storage_size* command to specify the EDR storage size of persistent volume in GiB.

The *edr_storage_size* must be an integer in the range of 1 to 24. The default storage size is 4 GiB.

- Use the **limit storage** *edr_storage_size* command to specify the EDR storage size of persistent volume in GiB.

The *edr_storage_size* must be an integer in the range of 0 to 64. Set the value to 0 to disable persistent volume in edr-monitor pod. The default storage size is 24 GiB.



Important

The storage limit can be changed only in “system mode shutdown” mode. Hence, disabling of persistent volume can be done only when the system is in shutdown state.

- **procedure** *procedure_value* **event** *event_value* **field** *field_value*—Specify the transaction-level procedure ID configuration information. The *procedure_value* must be a procedure ID or a procedure name. The *event_value* must be an event ID or an event name along with a field value.



Note

- By default, all the procedure IDs, event IDs, and field IDs, which are registered during the application-start, are enabled.
- If one or more procedures are enabled, then all other procedures are disabled and are not populated in the transaction EDR.
- If one or more events are enabled in a procedure, then all other events in that procedure are disabled and are not populated in the transaction EDR.
- If one or more fields are enabled in an event, then all other fields in that event are disabled and are not populated in the transaction EDR.
- For the disabled procedure IDs, no event-start, add field, or event-end are honored.
- For the disabled event IDs in a procedure ID, no event-start, event-end, or add field are honored for the procedure ID and event ID combination.
- For a disabled field ID within an event ID, no add-field is honored, and a blank entry is available instead of value in CSV entry.

- **rate** *rate_value*—Specify the allowed rate per second to generate EDR records. The default rate is 4096. *rate_value* must be an integer in the range of 32 to 65535.

When the EDR generation rate limit is reached, transaction EDRs are dropped and a metric is added to track EDR generated, dropped, drop reason, and so on. Note that the rate limiting is performed per service (amf-service) pod instance.

- **reporting** [**disable** | **enable**]—Specify the file for which you have to enable or disable reporting.



Important The `edr-monitor` pods are spawned only when the transaction `edr` is enabled.

- **threshold** [`cpu` *cpu_threshold* | `session` *session_threshold*]—Specify the threshold to limit the EDR generation.
 - Use the **threshold** `cpu` *cpu_threshold* command to configure the CPU threshold in percentage. If the threshold is breached for a AMF service pod instance, then the application stops generating EDRs. The *cpu_threshold* must be an integer in the range of 1 to 100, with default value of 80%.
 - Use the **threshold** `session` *session_threshold* command to configure session threshold per GR instance. If the threshold is breached for a GR instance, then the application stops generating EDRs. The *session_threshold* must be an integer in the range of 0 to 1,000,000, with default value of 100,000.



Note If the rack is running with active-active mode, the session threshold is applied individually for both the GR instances.

Verifying EDR Transactions

Use the following show commands to display the currently registered procedures, events, and fields for the application along with their respective IDs.

```
show edr transaction-procedure procedure_id event event_id
```

```
show edr event event_id
```

You can provide all the procedures and events. Otherwise, you can provide a particular procedure name and event name or procedure-id and event-id.



Note The show command output is based on the mapping registered by the application.

The following is an example of the show command output.

```
Procedure-id 20, Procedure-Name: xyz
  Event-id 1, Event-Name: abc
    1 - Field1-Name
    2 - Field2-Name
    ...
    ...
  Event-id 2, Event-Name: efgh
    1 - Field1-Name
    2 - Field2-Name
    ...
    ...
...
...
Procedure-id 21, Procedure-Name: bbbb
  Event-id 1, Event-Name: cccc
```

```

1 - Field1-Name
2 - Field2-Name
...
...
...
Event-id 2, Event-Name: dddd
1 - Field1-Name
2 - Field2-Name
...
...
...

```

This output helps the operator to know current CSV format of a particular procedure-id and event-id pair.

OAM Support for EDR Logging

This section describes operations, administration, and maintenance information for this feature.

Bulk Statistics for EDR Transactions and EDR Reporting

The AMF maintains the following bulk statistics as part of this feature.

- `edr_error_total`

Labels:

- `error_code` – The EDR writing error code

This metric is pegged whenever an error occurs during EDR writing. This metric displays "EdrQueueFull" as the `error_code` when the writing queue is full and the EDR is dropped.

Following metric is used to monitor the EDR count and status.

- `edr_total`

Labels:

- `name` – Name of the transaction EDR.
- `status` – Status of the EDR transaction if it is successful or has any errors.
- `status_code` – The following status codes are supported:
 - `EdrReportingDisabled`
 - `EdrTxnReportingDisabled`
 - `EdrSessThreshold`
 - `EdrCpuThreshold`
 - `EdrRateLimitExceeded`
 - `EdrFileWriteFailed`
 - `EdrInvalidEdrId`
 - `EdrQueueFull`
 - `EdrIgnored_NoEventRecorded`

OAM Support for EDR Logging

This section describes operations, administration, and maintenance information for this feature.

Bulk Statistics for EDR Transactions and EDR Reporting

The AMF maintains the following bulk statistics as part of this feature.

- `edr_error_total`

Labels:

- `error_code` – The EDR writing error code

This metric is pegged whenever an error occurs during EDR writing. This metric displays "EdrQueueFull" as the `error_code` when the writing queue is full and the EDR is dropped.

Following metric is used to monitor the EDR count and status.

- `edr_total`

Labels:

- `name` – Name of the transaction EDR.
- `status` – Status of the EDR transaction if it is successful or has any errors.
- `status_code` – The following status codes are supported:
 - `EdrReportingDisabled`
 - `EdrTxnReportingDisabled`
 - `EdrSessThreshold`
 - `EdrCpuThreshold`
 - `EdrRateLimitExceeded`
 - `EdrFileWriteFailed`
 - `EdrInvalidEdrId`
 - `EdrQueueFull`
 - `EdrIgnored_NoEventRecorded`



CHAPTER 21

Event Exposure for UE Location Reporting

Table 68: Feature History

Feature Name	Release Information	Description
UE Location Reporting	2024.04.0	<p>The event exposure functionality enables the AMF to provide specific event notifications to peer Network Functions (NFs) or external clients, such as the Gateway Mobile Location Center (GMLC). This functionality allows the AMF to expose certain events related to UE to subscribed clients, enabling them to receive updates about these events. This feature provides location information of the UE to GMLC using AMF event exposure mechanism. GMLC subscribes for one time location event report from AMF through UDM.</p> <p>Command introduced:</p> <p>enable ngran-location reporting— Used in AMF global configuration mode to enable UE location reporting.</p> <p>Default Setting: Disabled – Configuration Required</p>

- [UE Location Reporting - Feature Description, on page 240](#)
- [UE Location Reporting - Limitations, on page 240](#)
- [Enable NG-RAN Location Reporting, on page 241](#)
- [GMLC Profile Configuration, on page 241](#)
- [View Active Event Subscription, on page 245](#)
- [OAM Support for Event Exposure - Cell-ID, on page 246](#)

UE Location Reporting - Feature Description

AMF provides the subscriber's location information to the GMLC using the event exposure mechanism. The GMLC subscribes to a one-time location event report from the AMF through the UDM by invoking the event exposure service of the UDM. Subsequently, the UDM initiates the event exposure subscription API towards the AMF.

After sending a response to the UDM, if the subscription request is for an immediate location, the AMF provides the last known user location to the GMLC and deletes the subscription locally, as it is a one-time report. If the subscription request is for the current location, the AMF, based on the UE state, either invokes NG-RAN location reporting procedures towards the gNB or performs paging to fetch the current location of the UE and sends the location report to the GMLC accordingly. If the system fails to fetch the current location, the AMF sends the last known user location to the GMLC.

This feature supports the reporting of UE location for non-emergency subscribers. Following are the key points for this feature to work:

- If the feature is not enabled through configuration or unsupported combinations are used, AMF rejects the request with a 403, UNSPECIFIED error.
- AMF supports SUPI, GPSI, and PEI as UE identifiers, with SUPI being preferred option. AMF supports only one GPSI per UE.
- Although SUPI, PEI, and GPSI are considered conditional IEs according to the specifications, the AMF treats at least one of them as mandatory for its functionality. Therefore, the AMF requires at least one of these IEs to be present.
- AMF starts a timer for 50 seconds when location reporting control is sent to gNB. In case of no response from gNB and if session exists, AMF sends the last known location to GMLC.
- If AMF receives a new subscription request from the same peer NF (same NF ID) while an older subscription is still active, AMF deletes the older subscription and proceed with processing of new request.

UE Location Reporting - Limitations

Following are the limitations of this feature:

- The event exposure functionality is available exclusively for location report triggers under the following conditions:
 - UE Type: Single UE
 - Report Type: One-time report
 - Location Filter: Cell-ID only
- AMF does not support UE location reporting in roaming scenarios.
- AMF does not support modify and delete operations for subscribed events.

Enable NG-RAN Location Reporting

Follow the steps to enable NG-RAN location reporting under the AMF global configuration mode.

Procedure

- Step 1** Enter the AMF configuration mode.
- config**
- Example:**
- ```
[amf] amf# config
```
- Step 2** Access AMF Global Location Configuration.
- amf-global location**
- This command displays the possible completion as:
- ```
{ ngran-reporting | positioning }
```
- Step 3** Enable NG-RAN location reporting.
- nggran-reporting enabled**
- Step 4** Save and commit the configuration.

GMLC Profile Configuration

GMLC profile configuration includes:

- Operator Policy Network Element Profile Configuration
- NF Client Profile Configuration for Mutual Transport Layer Security (mTLS)
- GMLC Profile Configuration
- Failure Handling Profile Configuration



Note

- AMF sends out the event notifications without a GMLC profile also, but it does not support FHT/MTLS functionality in the absence of GMLC profile configuration.

Configure GMLC in Network Element Profile List

Follow the steps to configure GMLC network element profile under the operator policy configuration mode.

Procedure

- Step 1** Enter the AMF configuration mode.
- config**
- Example:**
- ```
[amf] amf# config
```
- Step 2** Access AMF Global Configuration.
- amf-global**
- Step 3** Specify the operator policy under the AMF global configuration.
- operator-policy** *policy\_name*
- The operator policy defines specific rules and configurations that apply to the network elements under this policy. Replace *policy\_name* with the actual name of the policy you want to configure.
- Step 4** Configure the Network Element Profile List under the Operator Policy.
- network-element-profile-list gmlc** *gmlc\_name*
- The GMLC profile is used for location-based services.
- Step 5** Save and commit the configuration.
- 

## Configure GMLC Profile

Follow the steps to configure the GMLC profile with an NF client profile and a failure handling profile, which are required for mTLS and failure handling. This setup ensures that the GMLC can securely and reliably provide location services within the network.

### Procedure

---

- Step 1** Enter the AMF configuration mode.
- config**
- Example:**
- ```
[amf] amf# config
```
- Step 2** Enter Network Element Profile Configuration Mode for GMLC.
- profile network-element gmlc** *gmlc_profile_name*
- This command creates or modifies a network element profile for the GMLC. This profile contains specific configurations for the GMLC.
- Step 3** Set the NF Client Profile

nf-client-profile *nf_client_profile_name*

This command sets the NF client profile to specified name. This is required only if Mutual Transport Layer Security (mTLS) is being used. The NF client profile contains the necessary configurations for mutual authentication and secure communication between network functions.

Step 4 Set the Failure Handling Profile

failure-handling-profile *failure_handling_profile_name*

This command sets the failure handling profile to specified name. This is required only if specific failure handling mechanisms are needed. The failure handling profile defines how the system should respond to various types of failures, ensuring robustness and reliability.

Step 5 Save and commit the configuration.

Configure NF Client Profile for GMLC

Follow the steps to configure the NF client profile for GMLC. You need to create and associate this profile to GMLC for Mutual Transport Layer Security (mTLS). This ensures a higher level of security by verifying the identities of both the client and the server.

Procedure

Step 1 Enter the AMF configuration mode.

config

Example:

```
[amf] amf# config
```

Step 2 Create a NF Client Profile.

profile nf-client nf-type gmlc

Step 3 Specify GMLC Profile.

gmlc-profile *gmlc_profile_name*

This GMLC profile is associated with the NF Client Profile.

Step 4 Define a locality within the GMLC profile.

locality *locality_name*

Step 5 Set the priority for the specified locality.

priority *priority_value*

Step 6 Define the type of service name for the locality.

service name type ngmlc-loc

Step 7 Specify the endpoint profile.

endpoint-profile *profile_name*

- Step 8** Set the capacity for the specified endpoint profile.
capacity *capacity_value*
- Step 9** Set the priority for the specified endpoint profile.
priority *priority_value*
- Step 10** Define the URI scheme to be used for the endpoint profile.
uri-scheme *uri_scheme_name*
- Step 11** Specify the server name for the endpoint profile
server-name *server_name*
- Step 12** Specify the endpoint name within the endpoint profile.
endpoint-name *endpoint_name*
- Step 13** Set the priority for the specified endpoint.
priority *priority_value*
- Step 14** Configure the primary IPv4/IPv6 address for the endpoint.
primary ip-address { **ipv4 address** *ipv4_address* | **ipv6 address** *ipv6_address* }
- Step 15** Configure the port number for the primary IP address.
primary ip-address port *ipv4_port_number*
- Step 16** Save and commit the configuration.

Configure Failure Handling Profile for GMLC

Follow the steps to configure the Failure Handling profile for GMLC.

Procedure

- Step 1** Enter the AMF configuration mode.
config
Example:
[amf] amf# **config**
- Step 2** Create a NF Client Failure Handling Profile.
profile nf-client-failure nf-type gmlc
- Step 3** Specify the failure handling profile to be used.
profile failure-handling *failur_hanling_profile_name*
This GMLC profile is associated with the NF Client Profile.

- Step 4** Define the type of service name for the failure handling profile.
service name type ngmlc-loc
- Step 5** Set the response timeout value for the service.
responsetimeout *responsetimeout_value*
- Step 6** Specify the message type for the failure handling profile.
message type AmfEventNotification
- Step 7** Set the status code for the specified message type.
status-code *status_codetype*
- Step 8** Set the number of retransmission attempts for the specified status code.
retransmit *retransmit_count*
- Step 9** Set the interval between retransmission attempts.
retransmit-interval *retransmit_interval*
- Step 10** Specify the action to be taken when the specified status code is encountered.
action retry-and-ignore
retry-and-ignore indicates that the system retries the operation and then ignore the failure if it persists.
- Step 11** Save and commit the configuration.
-

View Active Event Subscription

Following is an example of show command to view the active event subscription.

```
[amf] amf# show subscriber supi 123456789012345

  "EventSubscriptionData": [
    {
      "EventList": [
        {
          "Type": "LOCATION_REPORT",
          "LocationFilterList": [
            "CELL_ID"
          ],
          "RefId": 100
        }
      ],
      "EventNotifyUri": "http://10.1.14.150:9110/namf-evts/v1/eventNotificationUrl",
      "NotifyCorrelationId": "ngmlc-evt-supi-XXXX-XXXXX",
      "Options": {
        "Trigger": "ONE_TIME"
      },
      "SubscriptionId": "amfevt-1717581907694157698-imsi-123456789012345",
      "NfType": "UDM"
    }
  ]
```

OAM Support for Event Exposure - Cell-ID

This section describes operations, administration, and maintenance support for this feature.

Bulk Statistics Support for Event Exposure - UE Location Reporting

AMF supports the following statistics for the event exposure for UE location reporting.

UDM STATS Under n8_service_stats

Following are the UDM STATS records under n8_service_stats.

Messages	Metrics Message Type
Create Event Subscription Req & Rsp	NudmAMFCreateSubscriptionReq NudmAMFCreateSubscriptionRsp

Following is the example of stats output:

- n8_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="3",message_type="NudmAMFCreateSubscriptionReq",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="success"}
1
- n8_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="3",message_type="NudmAMFCreateSubscriptionRsp",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="success"}
1

GMLC STATS Under nl2_service_stats

Following are the GMLC STATS records under nl2_service_stats.

Messages	Metrics Message Type
Event Notification Req & Rsp	NgmlcEventNotificationReq NgmlcEventNotificationRsp

Following is the example of stats output:

- nl2_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="3",message_type="NgmlcEventNotificationReq",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="success"}
1
- nl2_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="3",message_type="NgmlcEventNotificationRsp",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="success"}
1

NGAP STATS Under n2_service_stats

Following are the NGAP STATS records under n2_service_stats.

Messages	Metrics Message Type
Location Procedure Messages	N2LocationReport N2LocationReportingControl N2LocationReportingFailureIndication

Following is the example of stats output:

- `n2_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="3",message_type="N2LocationReport",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="success"}
2`
- `n2_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="3",message_type="N2LocationReportingControl",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-051615",status="success"}
1`
- `n2_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="0",message_type="N2LocationReportingFailureIndication",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="success"}
1`

NGAP STATS Under AMF Protocol

Following are the NGAP STATS records under `amf_ngap_message_total`.

Messages	Metrics Message Type
Location Procedure Messages	N2LocationReport N2LocationReportingControl N2LocationReportingFailureIndication

Following is the example of stats output:

- `amf_ngap_message_total{app_name="AMF",cluster="clul",data_center="dc1",instance_id="3",message_direction="inbound",message_type="N2LocationReport",service_name="amf-protocol-ep"} 1`
- `amf_ngap_message_total{app_name="AMF",cluster="clul",data_center="dc1",instance_id="3",message_direction="outbound",message_type="N2LocationReportingControl",service_name="amf-protocol-ep"} 1`
- `amf_ngap_message_total{app_name="AMF",cluster="clul",data_center="dc1",instance_id="3",message_direction="inbound",message_type="N2LocationReportingFailureIndication",service_name="amf-protocol-ep"} 1`



CHAPTER 22

Evolved Packet System Fallback Support

- [Feature Summary and Revision History, on page 249](#)
- [Feature Description, on page 249](#)
- [Feature Configuration, on page 250](#)

Feature Summary and Revision History

Summary Data

Table 69: Summary Data

Applicable Products or Functional Area	AMF
Applicable Platforms	SMI
Feature Default Setting	Enabled – Always-on
Related Documentation	Not Applicable

Revision History

Table 70: Revision History

Revision Details	Release
First introduced.	2021.04.0

Feature Description

Based on the presence or absence of the N26 interface, Evolved Packet System (EPS) Fallback opts to switch or redirect to EPS.

The AMF performs and involves in the following activities:

- It supports the IMS voice over PS (VoPS) session and indicates towards the UE during the Registration procedure.
- It sends the value of **redirection-eps-fallback** information elements towards the gNodeB.
- The **redirection-eps-fallback** IE is based on the UE 5GMM capability to support Request Type flag **handover** and CLI configuration for **redirection-eps-fallback**.

This feature supports the following functionalities:

- 5GS interworking without N26 interface indicator in Registration Accept.
- Redirection for EPS fallback for voice as part of the ICSR
- Handover Request and Path Switch Request ACK to fill Redirection IE.
- N26, Xn, and N2 handovers

Feature Configuration

To configure this feature, use the following configuration:

```
config
  amf-global
    call-control-policy ccp_name
      feature-support-ie
        [no] iwk-n26-supported
        [no] redirection-eps-fallback { not-supported | supported }
      end
```



Note As a default action, the AMF doesn't send the redirection information element (Redirection IE). It's an action sent only to RAN, which is based on the value of CLI, and the capability of UE.

NOTES:

- **call-control-policy** *ccp_name*—Specify and configure the Call Control Policy or Profile, as applicable.
- **feature-support-ie**—Configure and specify about supported or unsupported AMF or 5GC features.
- **iwk-n26-supported**—Specify the "Interworking without N26" indicator supported within the 5GS network functionality support. It gets applied only when the "Interworking without N26" indicator in the 5GS network functionality is in a supported state. When not supported, the "unsupported status" doesn't have a reference to the status.
- **redirection-eps-fallback { not-supported | supported }**—Configure the UE support and redirection for the EPS Fallback for voice, as a part of ICSR.
- **not-supported | supported**—Specify if the support is available or not. The nonsupported option indicates the disabled 5G VoPS 3GPP support.
- **5G IMS Voice over Packet-Switched (VoPS) 3GPP Sessions**—Specify if the UE capability support gets enabled or not. Also, to specify, if the enabled UE configuration is with the UE Radio capability or not. The default value is true, indicating it's a supported value.

Configuration Example

The following is an example configuration.

```
config
  amf-global
    call-control-policy CCP1
    feature-support-ie iwk-n26-supported
    feature-support-ie redirection-eps-fallback supported
  end
```




CHAPTER 23

Failure and Error Handling Support

- [Feature Summary and Revision History, on page 253](#)
- [Feature Description, on page 254](#)
- [How it Works, on page 254](#)
- [Feature Configuration, on page 261](#)

Feature Summary and Revision History

Summary Data

Table 71: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled – Always-on
Related Documentation	Not Applicable

Revision History

Table 72: Revision History

Revision Details	Release
Supported the following failure handling message types: <ul style="list-style-type: none">• UdmSdmGetUeAmSubscriptionData• AmfCommReleaseUeContext	2023.03.0
Introduced local cause code support for the ims-vops-failure condition.	2022.02.0

Revision Details	Release
First introduced.	2022.01.0

Feature Description

AMF supports the error handling for the following interfaces:

- SBI—AMF interaction across various 5G NF's
- REST-EP—AMF interaction to NGAP, and NAS (towards UE)

AMF validates the syntax and semantic errors for each attribute during SBI message validation. It evaluates the mandatory, conditional, and optional attributes in the following:

- NGAP content
- NAS content
- Each SBI interface message



Note You can define the local cause code-mapping values for Mobility-Management, while rejecting the NAS messages under failure scenarios.

Validation of the NGAP and NAS optional IEs aren't supported.

How it Works

This section describes how this feature works.

Error Handling on SBI Interface

AMF supports the failure handling for SBI interfaces to continue or to terminate the call. This failure handling is supported as per the actions defined under each service, message-type, and status code.

NRF library provides the failure handling template for each NF to handle statistical and dynamical endpoint information. This library integrates with the REST endpoint to handle SBI message requests or responses.

AMF performs failure handling in the following scenarios:

- When the remote SBI endpoint responds with HTTP error code, it performs the retry procedure as per the failure handling template configuration.
- When the remote SBI endpoint does not respond within the timeout value, it considers it as an error and proceeds with failure handling.
- When failure is detected, the REST endpoint checks for retry count in the Failure Handling profile and performs retries.
- When retries are exhausted or retries aren't configured, it performs the failure action as configured.

Retransmit happens to the same configured URI.

You can configure response timeout under Failure Handling profile. The default timeout value is 2000 ms.

When multiple status codes are received, the number of retries defined for the first received status code is considered.

For terminate process, the UE context is cleared without any peer communication.



Note

- AMF supports the primary, secondary, and tertiary IP addresses that are defined in NF-client profile. If the primary address returns an error or times out, try the secondary address. If the secondary address returns an error or times out, try the tertiary address.
- **Retry-and-ignore** is supported only for the SMSF interface.

The peer NFs send cause codes to the AMF for each SBI interface. The AMF handles these cause codes received from any SBI interface in each response message as per UE context.

Table 73: SBI Supported Failure Actions

Parameter	Failure Action
continue	<ul style="list-style-type: none"> • Continues the session • Rejects the call
terminate	<ul style="list-style-type: none"> • Terminates the session • Rejects the call
retry-and-terminate	Perform retry as configured <ul style="list-style-type: none"> • If retries are not exhausted, continues the session and the call. • If retries are exhausted, terminates the session and rejects the call.
retry-and-continue	Perform retry as configured <ul style="list-style-type: none"> • If retries are not exhausted, continues the session and the call. • If retries are exhausted, terminates the session and rejects the call.
retry-and-ignore	Perform retry as configured <ul style="list-style-type: none"> • If retry is passed, continues the session, and continues the call. • If retries are exhausted, continues the session, and continues the call (provided no dependency).

SBI Supported Interfaces and Messages

Table 74: Feature History Table

Feature Name	Release Information	Description
New Failure Handling Messages	2023.03	<p>AMF supports the following new message types as part of the failure handling template configuration.</p> <ul style="list-style-type: none"> • UdmSdmGetUeAmSubscriptionData • AmfCommReleaseUeContext

Table 75: SBI Supported Interfaces and Messages

Interface	Messages
AMF	<p>Service: namf-comm</p> <ul style="list-style-type: none"> • AmfCommUeContextTransfer • AmfCommUeContextTransferUpdate • AmfCommCreateUeContext • AmfCommReleaseUeContext
AUSF	<p>Service: nausf-auth</p> <ul style="list-style-type: none"> • AusfAuthenticationReq • AusfAuthenticationCfm
PCF	<p>Service: npcfc-am-policy-control</p> <ul style="list-style-type: none"> • PcfAmfPolicyControlCreate • PcfAmfPolicyControlDelete
SMF	<p>Service: nsmf-pdusession</p> <ul style="list-style-type: none"> • SmfSmContextCreate • SmfSmContextUpdate • SmfSmContextDelete
SMSF	<p>Service: nsmsf-sms</p> <ul style="list-style-type: none"> • SmsfActivationReq • SmsfDeactivationReq • SmsfSendSms

Interface	Messages
UDM	Service: nudm-sdm <ul style="list-style-type: none"> • UdmSubscriptionReq • UdmUnSubscriptionReq • UdmSdmGetUeAmSubscriptionData Service: nudm-uecm <ul style="list-style-type: none"> • UdmRegistrationReq • UdmDeRegistrationReq

SBI Message Validation

AMF performs the message validation for the SBI interfaces.

Table 76: Handling of Inbound Request Messages

Action	Inbound Request Message
Lookup	<ul style="list-style-type: none"> • Performs look up for the presence of mandatory or conditional attributes. • REST endpoint fills the appropriate cause code and sends to the peer NF when inbound message isn't qualified. • REST endpoint doesn't forward the failure request process to the AMF-service pod.
Validation	<ul style="list-style-type: none"> • Validates syntax and semantic errors in mandatory or conditional attributes. • REST endpoint fills the appropriate cause code and sends to the peer NF, when any failure of message parsing or decoding occurs. • REST endpoint doesn't forward the failure request process to the AMF-service pod.
Optional Attributes	<ul style="list-style-type: none"> • Validates optional attributes in SBI messages. • Checks the syntax and semantic errors of optional attributes present in the SBI message. • REST endpoint ignores the validation of failed optional attributes and forwards the request to the AMF-service pod. The AMF-service pod handles the requested message as per the call model.



Note Validation of incoming inbound request message from UDM, SMF, and SMSF to AMF is supported on the REST endpoint.

Error handling on NGAP and NAS

NGAP error handling:

- Mandatory IE's presence and length checks are performed for the NGAP message validation.

NAS error handling:

- Mandatory IE's presence and length checks are performed for NAS message validation. Conditional IE validations for NAS are also performed.

Local Cause Code Mapping

You can ignore the default EPS Mobility Management (EMM) cause code and configure a preferred EMM cause code to send to a UE in response to a procedural failure.

For example, you can instruct the AMF to return one of the six different EMM cause codes other than the default value, when the AMF receives an authentication error from an AUSF. A list local cause code mappings are created at the global configuration level. A desired list name is specified in the Call Control Profile or in the AMF services or both.

The order of Cause Code selection is as follows:

- Call Control Profile
- AMF Services
- Default

You can configure the local cause codes either or both in the AMF-service or in the Call Control profile.

[Table 77: Local Cause Code Mapping condition and 5GMM Cause Codes, on page 259](#) explains the local cause code-mapping conditions, and 5GMM cause codes with its default value.

Table 77: Local Cause Code Mapping condition and 5GMM Cause Codes

Local Cause Code Mapping Condition	5GMM Cause Codes
auth-failure	<ul style="list-style-type: none"> • illegal-ms • no-suitable-cells-in-tracking-area • plmn-not-allowed • restricted-service-area • roaming-not-allowed-in-this-tracking-area • tracking-area-not-allowed <p>Default Value: illegal-ms</p>
clear-subscriber	<ul style="list-style-type: none"> • plmn-not-allowed • 5GS-services-not-allowed • no-suitable-cells-in-tracking-area • restricted-service-area • roaming-not-allowed-in-this-tracking-area • tracking-area-not-allowed <p>Default Value: plmn-not-allowed</p>
ctxt-xfer-fail	<ul style="list-style-type: none"> • ue-identity-not-derived • no-suitable-cells-in-tracking-area • plmn-not-allowed • restricted-service-area • roaming-not-allowed-in-this-tracking-area • tracking-area-not-allowed <p>Default Value: ue-identity-not-derived</p>
ims-vops-failure	<ul style="list-style-type: none"> • redirection-to-epc-required • no-suitable-cells-in-tracking-area <p>Default Value: redirection-to-epc-required</p>

Local Cause Code Mapping Condition	5GMM Cause Codes
peer-node-unknown	<ul style="list-style-type: none"> • ue-identity-not-derived • no-suitable-cells-in-tracking-area • plmn-not-allowed • restricted-service-area • roaming-not-allowed-in-this-tracking-area • tracking-area-not-allowed <p>Default Value: ue-identity-not-derived</p>
registration-restriction	<ul style="list-style-type: none"> • plmn-not-allowed • 5GS-service-not-allowed • no-suitable-cells-in-tracking-area • restricted-service-area • roaming-not-allowed-in-this-tracking-area • tracking-area-not-allowed <p>Default Value: plmn-not-allowed</p>
rat-type-restriction	<ul style="list-style-type: none"> • plmn-not-allowed • no-suitable-cells-in-tracking-area • restricted-service-area • roaming-not-allowed-in-this-tracking-area • tracking-area-not-allowed <p>Default Value: plmn-not-allowed</p>
restricted-zone-code	<ul style="list-style-type: none"> • no-suitable-cells-in-tracking-area • 5GS-services-not-allowed • plmn-not-allowed • restricted-service-area • roaming-not-allowed-in-this-tracking-area • tracking-area-not-allowed <p>Default Value: no-suitable-cells-in-tracking-area</p>

Local Cause Code Mapping Condition	5GMM Cause Codes
udm-unavailable	<ul style="list-style-type: none"> • no-suitable-cells-in-tracking-area • plmn-not-allowed • restricted-service-area • roaming-not-allowed-in-this-tracking-area • tracking-area-not-allowed <p>Default Value: no-suitable-cells-in-tracking-area</p>

Feature Configuration

Configuring this feature involves the following steps:

1. Local Cause Code Mapping at Global Configuration—This configuration supports the commands to configure local cause code mapping at Global configuration. For more information, see [Configuring the Local Cause Code Mapping at Global Configuration, on page 261](#).
2. Local Cause Code Mapping under Call Control Policy Configuration. —This configuration supports the commands to configure local cause code mapping under Call Control Policy. For more information, see [Configuring the Local Cause Code Mapping under Call Control Policy, on page 262](#).
3. Local Cause Code Mapping under AMF Service Configuration—This configuration supports the commands to configure local cause code mapping under AMF-service. For more information, see [Configuring the Local Cause Code Mapping under AMF Service, on page 262](#).

Configuring the Local Cause Code Mapping at Global Configuration

To configure this feature, use the following configuration:

```

config
  local-cause-code-map name cause_code_map_name cause_code_type cause-code-5gmm
    cause_code_5gmm_type
end
```

NOTES:

- **local-cause-code-map name** *cause_code_map_name* *cause_code_type*—Specify a name for Cause Code Map.

The *cause_code_type* includes one of the following:

- **auth-failure**—UE authentication failure
- **clear-subscriber**—UE subscriber clear condition type
- **ctxt-xfer-fail**—Context transfer failure between AMF and MME
- **ims-vops-failure**—IMS voice-centric UE registration failure
- **peer-node-unknown**—No response from peer node

- `rat-type-restriction`—Restriction with RAT type
- `registration-restriction`—Restriction with Registration
- `restricted-zone-code`—Restricted zone code
- `udm-unavailable`—UDM not available

cause-code-5gmm *cause_code_5gmm_type*—Specify the *cause_code_5gmm_type*. For the values of *cause_code_5gmm_type*, see *Local Cause Code Mapping condition and 5GMM Cause Codes* table.

Configuration Example

The following are the example configurations.

```
config
  local-cause-code-map name lc1 auth-failure cause-code-5gmm
no-suitable-cells-in-tracking-area
end

config
  local-cause-code-map name lc2 ctxt-xfer-fail cause-code-5gmm restricted-service-area
end

config
  local-cause-code-map name example ims-vops-failure { no-suitable-cells-in-tracking-area
| redirection-to-epc-required }
end
```

Configuring the Local Cause Code Mapping under Call Control Policy

```
config
  call-control-policy policy_name
    local-cause-code-map cause_code_map_name
  end
```

NOTES:

- **call-control-policy** *policy_name*—Specify the Call Control Policy name.
- **local-cause-code-map** *cause_code_map_name*—Specify the *cause_code_map_name* which is configured at *Configuring the Local Cause Code Mapping at Global Configuration*.

Configuration Example

The following is an example configuration.

```
config
  amf-global
    call-control-policy ccpl
      local-cause-code-map lc1
    end
```

Configuring the Local Cause Code Mapping under AMF Service

To configure this feature, use the following configuration:

```

config
  amf-services service_name
    local-cause-code-map cause_code_map_name
  end

```

NOTES:

- **local-cause-code-map** *cause_code_map_name*—Specify the *cause_code_map_name* which is configured at [Configuring the Local Cause Code Mapping at Global Configuration, on page 261](#).

Configuration Example

The following is an example configuration.

```

config
  amf-services amf
    local-cause-code-map lc2
  end

```

Failure Handling Template

Configuring the response timeout for failure handling involves the following steps:

- **Response Timeout Configuration at Endpoint**—This configuration provides the commands to configure response timeout at endpoint. For more information, see [Configuring the Response Timeout at Endpoint, on page 263](#).
- **Response Timeout Configuration at Failure Profile**—This configuration provides the commands to configure response timeout at failure profile level. For more information, see [Configuring the Response timeout at Failure Profile, on page 264](#).

The following is an example of the failure handling template configuration for the AUSF. This configuration is similar for all other interfaces.

Configuring the Response Timeout at Endpoint

To configure the response timeout at endpoint level, use the following configuration:

```

config
  profile nf-client nf-type name_of_nf_type
    ausf-profile profile_name
    locality locality_name
    service name type service_name
    responsetimeout timeout_value
  end

```

NOTES:

- **profile nf-client nf-type** *name_of_nf_type*—Specify the NF.
- **ausf-profile** *profile_name*—Specify a name for AUSF profile.
- **locality** *locality_name*—Specify a name for locality.
- **service name type** *service_name*—Specify a name for service type.
- **responsetimeout** *timeout_value*—Specify the timeout value in seconds. Must be an integer.

Configuration Example

The following is an example configuration.

```
config
  profile nf-client nf-type ausf
    ausf-profile AUP1
      locality LOC1
        service name type nausf-auth
          responsetimeout 2000
        end
      end
    end
```

Configuration Verification

To verify the configuration:

```
show running-config profile nf-client nf-type ausf | details
profile nf-client nf-type ausf
  ausf-profile AUP1
    locality LOC1
      priority 30
      service name type nausf-auth
        responsetimeout 2000
      endpoint-profile EP1
        capacity 30
        priority 1
        uri-scheme http
        endpoint-name EP1
        priority 56
        primary ip-address ipv4 209.165.200.229
        primary ip-address port 9047
        secondary ip-address ipv4 209.165.200.229
        secondary ip-address port 9047
        tertiary ip-address ipv4 209.165.200.229
        tertiary ip-address port 9047
      exit
    exit
  exit
exit
exit
```

Configuring the Response timeout at Failure Profile

When the request is failed and the failure profile is selected, the response time is considered from the failure handling profile.

To configure the response timeout at failure profile level, use the following configuration:

```
config
  profile nf-client-failure nf-type name_of_nf_type
    profile failure-handling failure_handling_name
      service name type service_name
        responsetimeout timeout_value
      end
    end
```

NOTES:

- **profile nf-client-failure nf-type *name_of_nf_type***—Specify the NF.
- **profile failure-handling *failure_handling_name***—Specify a name for failure handling.
- **service name type *service_name***—Specify a name for service type.

- **responsetimeout** *timeout_value*—Specify the timeout value in seconds. Must be an integer.

Configuration Example

The following is an example configuration:

```
config
  profile nf-client-failure nf-type ausf
  profile failure-handling FH1
    service name type nausf-auth
    responsetimeout 1000
  end
```

Configuration Verification

To verify the configuration:

```
show running-config profile nf-client-failure nf-type ausf | details
profile nf-client-failure nf-type ausf
profile failure-handling FH1
  service name type nausf-auth
  responsetimeout 1000
  message type AusfAuthenticationReq
    status-code httpv2 503
    retry 3
    retransmit 2
    retransmit-interval 25
    action retry-and-terminate
  exit
exit
message type AusfAuthenticationCfm
  status-code httpv2 503
  retry 3
  retransmit 2
  retransmit-interval 25
  action retry-and-terminate
  exit
exit
exit
exit
exit
```

Behavior for Multiple Failure Cause Code Configuration

If multiple status codes return one after another matches the failure handling profile, the following known behavior is observed:

- Example—When retry count is configured and retransmit value is not configured.

```
config
  profile nf-client-failure nf-type smsf
  profile failure-handling FH5
    service name type nsmsf-sms
    responsetimeout 1000
    message type SmsfActivationReq
      status-code httpv2 500
      retry 3
      retransmit-interval 2000
      action retry-and-ignore
    exit
    status-code httpv2 504
    retry 2
    retransmit-interval 2000
```

```

    action retry-and-ignore
end

```

For the example mentioned,

- If AMF receives 500 response for the first try, then it performs a second retry.
- In the second retry, if AMF gets 504 response, AMF tries twice.
- When this retry count (for 504 response) is exhausted, AMF doesn't resume the retry count for first one (500 response).
- The maximum retries depend on the maximum number of endpoints configured (primary, secondary, tertiary) or NRF discovered ones.
- Example—When retry count and retransmit value are configured.

```

config
  profile nf-client-failure nf-type smsf
  profile failure-handling FH5
    service name type nsmsf-sms
    responsetimeout 1000
    message type SmsfActivationReq
    status-code httpv2 504
    retransmit 3
    retry 2
    action retry-and-terminate
end

```

For the example mentioned,

- If both retransmit value and retry count are configured, retransmit happens first and then retry. Retransmission is done thrice and if it fails, retry to done for secondary endpoint. If retry returns 504 response, retransmission is done three times and if it fails, retry is done for tertiary endpoint.



Note Retries are always done to another endpoint, while retransmission is done always to same endpoint.



CHAPTER 24

Failure/Exception Handling Framework Support

- [Feature Summary and Revision History, on page 267](#)
- [Support for Failure/Exception Handling Framework, on page 268](#)
- [Error Handling on UDM Interface, on page 268](#)
- [Error Handling on AUSF Interface, on page 270](#)
- [Internal Errors on UDM/AUSF Interfaces, on page 271](#)
- [Error Handling for Protocol Data – NAS, on page 271](#)

Feature Summary and Revision History

Summary Data

Table 78: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled – Always-on
Related Documentation	Not Applicable

Revision History

Table 79: Revision History

Revision Details	Release
First introduced.	2021.04.0

Support for Failure/Exception Handling Framework

AMF can now handle errors that occur during procedures. The messaging between the AMF-Service and the protocols have enough information so that when an error reaches the AMF-Service, it can determine:

- Whether the error was internal (for example, node selection failure, NRF discovery failure) or a NOT OK status code was returned by a protocol.
- The protocol or entity that generated the error.
- An error code itself

Error Handling on UDM Interface

SDM Errors

The following errors are expected on UDM interface during the GET Operation, and causes the actions described below:

Table 80: SDM Errors - 1

Application Error	Description	NAS Cause Code	Action
404 Not Found			
DATA_NOT_FOUND	The requested UE subscription data is not found/does not exist. This error is applicable to all Nudm_SDM GET operations.	#7, 5GS services not allowed	Registration Reject
USER_NOT_FOUND	The user does not exist.	#7, 5GS services not allowed	Registration Reject

The following errors are not expected. If they occur, it is either due to a logic miss or a complicated race condition.

Table 81: SDM Errors - 2

Application Error	Description	Response to UE
404 Not Found		
CONTEXT_NOT_FOUND	It is used during the modification of an existing subscription when no corresponding context exists.	Need to respond with cause #9, UE Identity Not Derived By Network

UECM Errors

The following errors are expected on UECM interface during the POST Operation, and causes the actions described below:

Table 82: UECM Errors - 1

Application Error	Description	NAS Cause Code/Action
403 Forbidden		
UNKNOWN_5GS_SUBSCRIPTION	No 5GS subscription is associated with the user.	#7, 5GS services not allowed
NO_PS_SUBSCRIPTION	No PS (5GS, EPS, GPRS) subscription is associated with the user.	#7, 5GS services not allowed
ROAMING_NOT_ALLOWED	The subscriber is not allowed to roam within that PLMN.	#13, Roaming not allowed in the tracking area
ACCESS_NOT_ALLOWED	Access type is not allowed for the user.	#7, 5GS services not allowed
RAT_NOT_ALLOWED	RAT is not allowed for the user.	#7, 5GS services not allowed
INVALID_GUAMI	The AMF is not allowed to modify the registration information stored in the UDM as it is not the registered AMF.	#15, No suitable cells in tracking area
404 Not Found		
USER_NOT_FOUND	The user does not exist in the HPLMN.	#7, 5GS services not allowed
CONTEXT_NOT_FOUND	It is used when no corresponding context exists.	#15, No suitable cells in tracking area

The following errors are not expected. If they occur, it is due to a logic error. Since AMF always rejects a message in this state, the error should be logged, and the call must be rejected with NO SUITABLE CELLS IN TRACKING AREA.

Table 83: UECM Errors - 2

Application Error	Description	Response to UE
422 Unprocessable Entity		
UNPROCESSABLE_REQUEST	The request cannot be processed due to semantic errors when trying to process a patch method.	Registration Reject with Cause #111, protocol error unspecified

Error Handling on AUSF Interface

Table 84: AUSF Interface Errors

Application Error	Description	NAS Cause Code	Response to UE
403 Forbidden			
SERVING_NETWORK_NOT_AUTHORIZED	The serving network is not authorized. For example, serving PLMN	#11, PLMN not allowed	Registration Reject
AUTHENTICATION_REJECTED	The user cannot be authenticated with this authentication method. For example, only SIM data available	#3, Illegal UE	Registration Reject
INVALID_HN_PUBLIC_KEY_IDENTIFIER	Invalid HN public key identifier received.	#3, Illegal UE	Registration Reject
INVALID_SCHEME_OUTPUT	SUCI cannot be decrypted with received data.	#3, Illegal UE	Registration Reject
404 Not Found			
CONTEXT_NOT_FOUND	The AUSF cannot find the resource corresponding to the URI provided by the NF Service Consumer.	#7, 5GS services not allowed	Registration Reject
USER_NOT_FOUND	The user does not exist in the HPLMN.	#7, 5GS services not allowed	Registration Reject
501 Not implemented			
UNSUPPORTED_PROTECTION_SCHEME	The received protection scheme is not supported by HPLMN.	#11, PLMN not allowed	Registration Reject

The following errors are temporary. The AMF rejects the request from the UE so that it can try another network.

Table 85: Temporary Errors

AUSF Application Error	HTTP Status Code	Description
UPSTREAM_SERVER_ERROR	504 Gateway Timeout	Registration Reject with cause #15, No suitable cells in tracking area

AUSF Application Error	HTTP Status Code	Description
NETWORK_FAILURE	504 Gateway Timeout	Registration Reject with cause #15, No suitable cells in tracking area
AV_GENERATION_PROBLEM	500 Internal Server Error	Registration Reject with cause #15, No suitable cells in tracking area

Internal Errors on UDM/AUSF Interfaces

Table 86: Internal Errors

Error	Description	Reject Cause/Action
Timeout	The AMF does not get a response from UDM.	Registration Reject with cause #15, No suitable cells in tracking area
Timeout	5The AMF does not get a response from AUSF.	Drop the message

Error Handling for Protocol Data – NAS

Table 87: NAS Error Handling

Protocol Data Error	AMF Handling
N1 message is too short to contain a complete message type information element.	Ignore the message.
N1 message with message type not defined or not implemented.	Return a status message with cause #97, message type non-existent or not implemented.
AMF cannot parse N1 message. It is a request message.	AMF formulates a reject message and sends it to UE.
AMF cannot parse N1 message as mandatory IE is missing. It is a response message.	Stop retransmission timer and treat it as transmission failure. Formulate and send 5GMM status message to UE with cause #96, invalid mandatory information.
Limit on repetition of information elements is exceeded.	AMF handles the contents of the information elements appearing first up to the limit of repetitions and ignores all subsequent repetitions of the information element.
N1 message with optional IEs that have incorrect syntax.	AMF ignores optional IEs and accepts rest of the message.

Protocol Data Error	AMF Handling
Conditional IE errors.	For Conditional IE handling, AMF sends MM status message with cause #100 CONDITIONAL_IE_ERROR



CHAPTER 25

High Availability Services

- [Feature Summary and Revision History, on page 273](#)
- [Feature Description, on page 274](#)
- [AMF High Availability Service, on page 274](#)
- [NGAP and NAS High Availability Service, on page 275](#)
- [SCTP High Availability Service, on page 276](#)

Feature Summary and Revision History

Summary Data

Table 88: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled - Always-on
Related Documentation	Not Applicable

Revision History

Table 89: Revision History

Revision Details	Release
Changes to spawning of protocol endpoint pods in a single-server deployment scenario	2023.03.0
Sub-feature introduced. SCTP High Availability Service	2022.01.0
First introduced.	2021.04.0

Feature Description

High Availability (HA) is the ability of a system to operate continuously for a designated time without significant down time.

HA uses two pods, one as active and other one as standby. Whenever the active pod goes down, the standby pod becomes active and handles the traffic.

This feature supports the following HA services:

- AMF
- NGAP and NAS
- SCTP

AMF High Availability Service

Feature Description

The High Availability feature ensures the following functionalities for AMF-service:

- No session loss when AMF-service pods get killed or restarted.
- During restart, the AMF-service pods don't:
 - Fail any procedures
 - Increase in call processing time
 - Result in call failure of the retried calls
 - Restart or crash other pods
 - Downgrade the performance

NGAP and NAS High Availability Service

Table 90: Feature History

Feature Name	Release Information	Description
Protocol Endpoint Pod Spawn in Single-server Deployment	2023.03	<p>In a single-server deployment scenario, AMF allows spawning of two protocol endpoint pod replicas on the same node to support resiliency.</p> <p>AMF achieves this functionality by enabling the following command in the AMF Ops center.</p> <p>k8s single-node true</p> <p>For information on deploying AMF on a single server, contact your Cisco account representative.</p>

Feature Description

The AMF protocol pod maintains the security context cache, NAS UL, and DL counter information for subscribers. Whenever this information is modified in the cache, the same information gets replicated to the peer protocol pod to ensure high availability.



Note It is recommended to support a maximum of two protocol pod replicas for high availability. If both protocol pod replicas go down back to back or together, the security context data gets lost.

Typically, the two replicas of protocol endpoint pods are spawned on active-standby mode on different servers to achieve redundancy and resiliency.



Note In a single server deployment of AMF, two replicas of protocol-ep pods can be spawned on the same node by enabling the **k8s single-node true** command in the AMF Ops-center. For more information on single server deployment of AMF, contact your Cisco account representative.

The AMF protocol pods determine among themselves who is the leader by using the Etcd for electing a leader. The leader information gets registered in the topology management module in the Etcd. The leader selection upgradation helps with replicating the security context cache to the other AMF protocol pod. If the leader pod goes down, the other (follower) pod becomes active and handles the traffic. The follower pod works with the replicated security context cache, UL, and DL counters from the leader.

The AMF-SCTP and the AMF-service pods query the leader information for the AMF protocol pod before making any IPC call. When the leader pod goes down, the other pod gets selected as a leader and the subsequent IPC request goes to the selected protocol pod.

If a pod comes up, the security context cache gets synced with the peer before the pod becomes ready.

Feature Configuration

To configure this feature, use the following configuration:

```
config
  instance instance-id instance_id
  endpoint ngap replicas replica_count
end
```

NOTES:

- **endpoint ngap replicas replica_count**—Specify the number of NGAP replicas per node.

Configuration Example

The following is an example configuration.

```
config
  instance instance-id 1
  endpoint ngap replicas 2
end
```

SCTP High Availability Service

Feature Description

SCTP uses virtual IP (VIP) to support HA. This feature supports two SCTP endpoints.

The SCTP pod starts and listens on VIP. If one SCTP pod goes down, traffic moves to the other SCTP pod using VIP.

Feature Configuration

To configure this feature, use the following configuration procedure:

1. Configure the k8 node labels, on which the SCTP pod should run.

k8 label sctp-layer key smi.cisco.com/node-type value sctp



Note The label must have a minimum number of two K8 nodes for active or standby pods to work.

2. Configure the two replicas as active and standby pod for SCTP. The active pod receives the traffic.

```
config
  instance instance-id instance_id
  endpoint sctp
    replicas replica_count
  end
```

NOTES:

- **replicas** *replica_count*—Specify the number of SCTP replicas per node.

3. Configure the VIP for IPv4 and IPv6 using the following commands:

```

config
  instance instance-id instance_id
    endpoint sctp
      vip-ip ipv4_addressoffline { vip-interface interface_name | vip-port
port_number }
      vip-ipv6 ipv6_address { offline | vip-ipv6-port ipv6_port_number
}
    end

```

NOTES:

- **vip-ip** *ipv4_address* [**offline** | **vip-interface** *interface_name* | **vip-port** *port_number*]—Specify the IPv4 address of the pod on which VIP is enabled, interface, and the port number. This configuration marks VIP-IP as offline (standby).
- **vip-ipv6** *ipv6_address* [**offline** | **vip-ipv6-port** *ipv6_port_number*]—Specify the IPv6 address of the pod on which VIP is enabled. This configuration marks VIP-IP as offline (standby) if you specify as offline.


Configuration Example

The following is an example configuration.

```

config
  instance instance-id 1
    endpoint sctp
      replicas 2
      instancetype IPv6
      vip-ipv6 0001:000:00c1::4 vip-ipv6-port 1000
    end

```

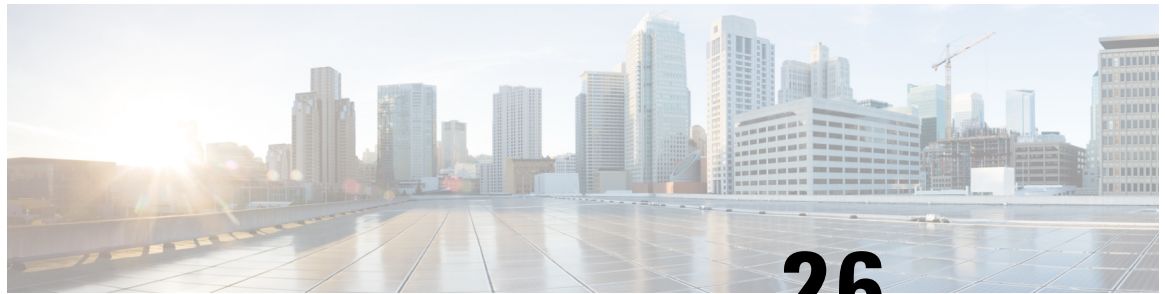CHAPTER 26

Idle Entry Procedure

- [Feature Summary and Revision History, on page 279](#)
- [Feature Description, on page 279](#)
- [How it Works, on page 280](#)

Feature Summary and Revision History

Summary Data

Table 91: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled - Always-on
Related Documentation	Not Applicable

Revision History

Table 92: Revision History

Revision Details	Release
First introduced.	2020.01

Feature Description

The AMF supports transitioning the UE from ECM_CONNECTED to ECM_IDLE state.

How it Works

This section describes how this feature works.

Call Flows

This section describes the key call flow for this feature.

gNB-Initiated UE Context Release Procedure Call Flow

This section describes the gNB-Initiated UE Context Release Procedure call flow.

Figure 35: gNB-Initiated UE Context Release Procedure Call Flow

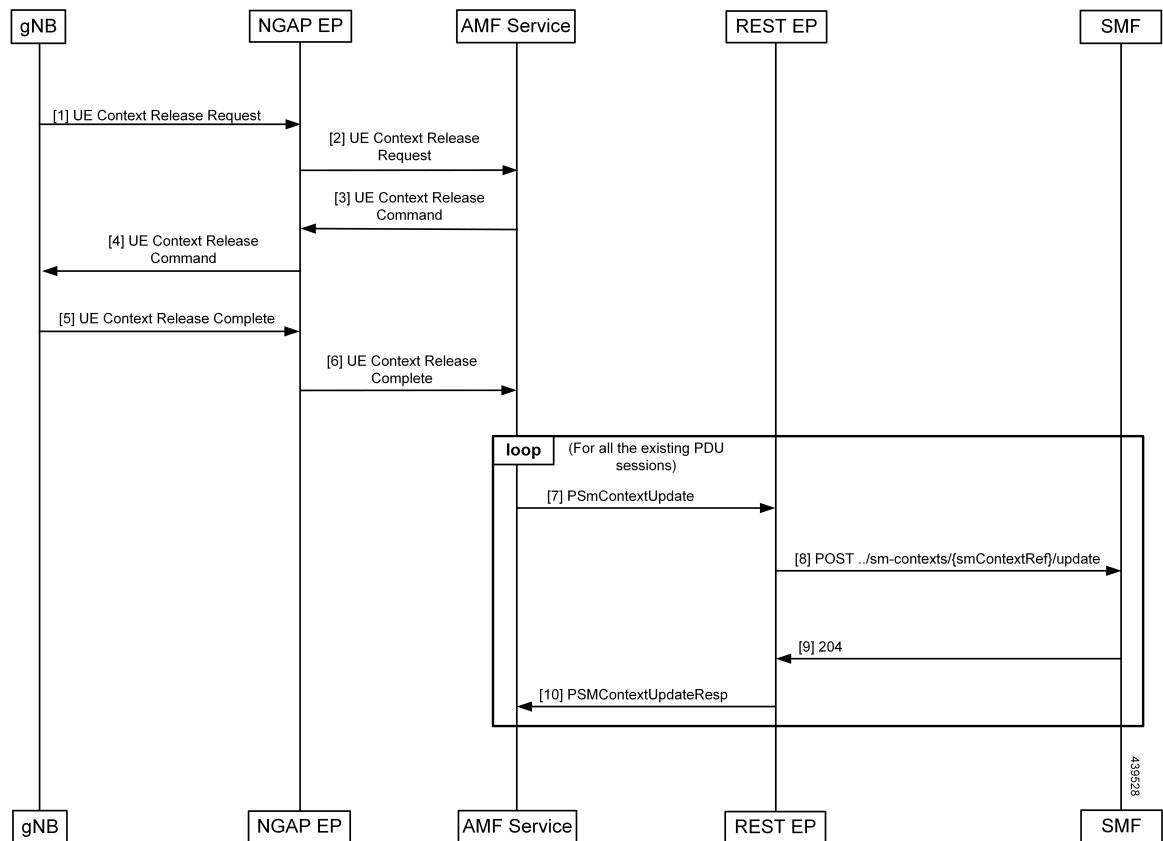


Table 93: gNB-Initiated UE Context Release Procedure Call Flow Description


Step	Description
1	The AMF receives the UE Context Release Request from the gNB.
2	The AMF sends the UE Context Release Command to the gNB.
3	The AMF receives the UE Context Release Complete from the gNB.

Step	Description
4	The SmContextUpdate procedure is started for all the existing PDU sessions of the subscriber.
5	Once the SmContextUpdate is complete, the UE is moved to the IDLE state.
6	The NGAP EP sends the Context Release Complete to the AMF Service. The T3512 timer is started when processing this message.
7	On expiry of the T3512 timer, the UE Detach Timer is started.
8	On expiry of the UE Detach Timer, the deregistration procedure is triggered.
9	The SMF sends the 204 message to the REST EP.
10	The REST EP sends the PSM Context Update Response message to the AMF Service.

UE or NW-Initiated Deregistration followed by UE Release Procedure Call Flow

This section describes the UE or NW-Initiated Deregistration followed by UE Release Procedure call flow.

Figure 36: UE or NW-Initiated Deregistration followed by UE Release Procedure Call Flow

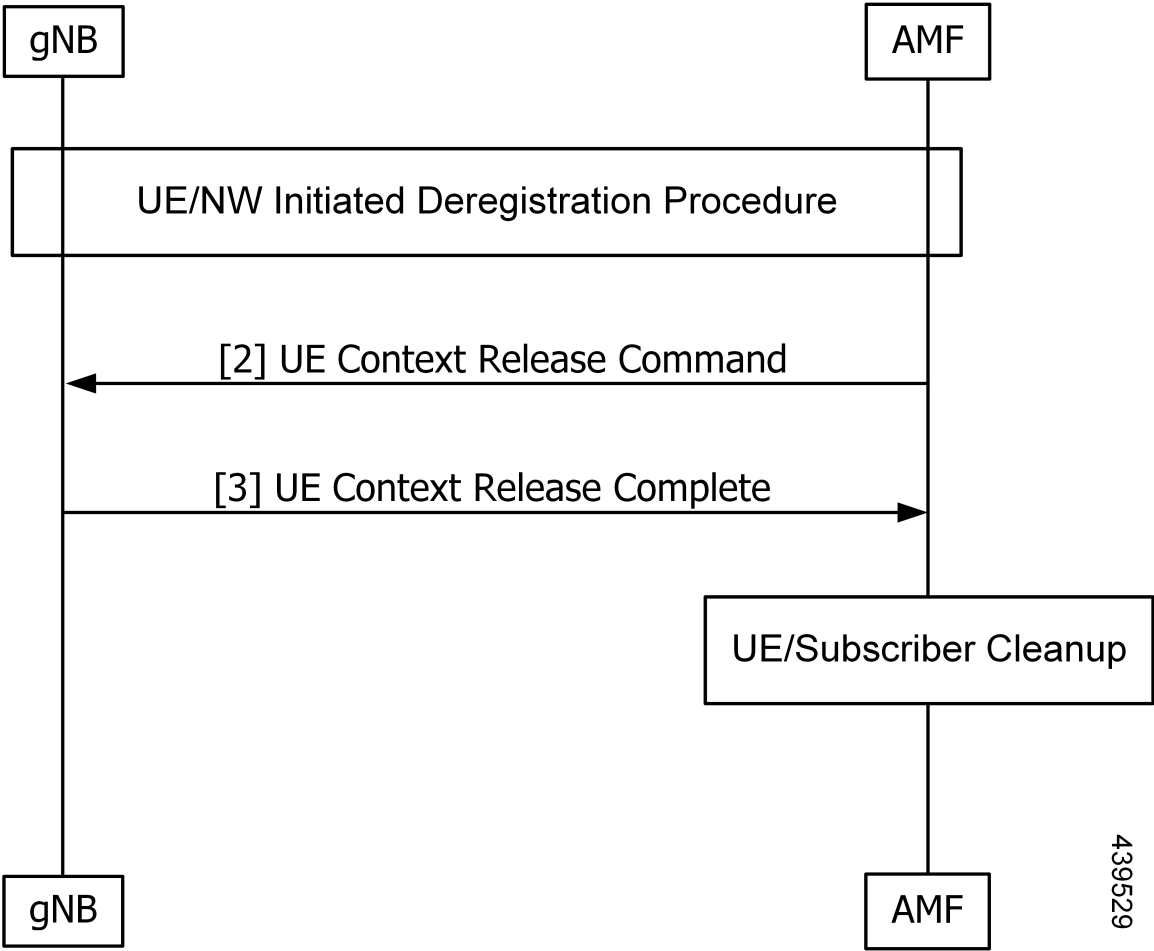

439529

Table 94: UE or NW-Initiated Deregistration followed by UE Release Procedure Call Flow Description

Step	Description
1	The UE or NW-Initiated Deregistration procedure is completed. The Deregistration Request or Accept is completed and the UE is moved to the deregistered state.
2	The AMF sends the UE Context Release Command to the gNB.
3	The AMF receives the UE Context Release Complete from the gNB.
4	As the UE deregistration is already complete and the UE is moved to the deregistered state, the UE Context or subscriber Cleanup is triggered, and the subscriber and session is deleted from CDL.



SCP Model-D

- [SCP Model-D - Feature Description, on page 283](#)
- [SCP Model D - Key Parameters, on page 284](#)
- [Deployment Specific API Prefix, on page 285](#)
- [FQDN, on page 286](#)
- [Dead SCP detection, on page 286](#)
- [SCP Model-D Limitations, on page 287](#)
- [SCP Model-D Configuration, on page 287](#)
- [OAM Support, on page 297](#)

SCP Model-D - Feature Description

Table 95: Feature History

Feature Name	Release Information	Description
NF Discovery based on Preferred Locality	2025.03.0	<p>AMF includes the "3gpp-Sbi-Discovery-preferred-locality" HTTP header when communicating with the SCP. By populating this header, AMF enables more efficient NF selection based on locality during peer NF discovery, resulting in optimized network function interactions and improved service delivery.</p> <p>Note This feature is not fully qualified in this release. For more information, contact your Cisco Account representative.</p>

Feature Name	Release Information	Description
Service Communication Proxy (SCP) Model-D for Peer Node Communication	2025.01.0	<p>SCP is the routing control point that mediates all signaling and control plane messages in the network core. SCP is responsible for optimizing routing of NF discovery requests to the Network Repository Function (NRF), load balancing, traffic prioritization, and message management.</p> <p>Command introduced:</p> <p>nf-selection-model <i>nf_model_priority</i> [local nrf-query scp] — Used for selection of NF model and its priority for NF peer communication.</p> <p>Default Setting: Disabled – Configuration Required</p>

SCP Model-D

Service Communication Proxy (SCP) Model-D is a communication model where the SCP handles discovery and selection of suitable NF instances on behalf of the consumer NF. This model simplifies the configuration for the consumer and enhances routing efficiency. SCP Model-D support enables the AMF to use an SCP for discovering and routing requests to the appropriate NF instances. The SCP performs discovery with an NRF and routes the request based on the discovery result.



Note AMF supports indirect communication using SCP with AUSF, UDM, PCF, SMF, LMF, GMLC, SMSF, EIR, CBCF peers, and another AMF.

SCP Model D - Key Parameters

Following are the key parameters for SCP model-D:

Authority Header

AMF includes the authority HTTP header in the messages to SCP. This header is populated:

- If the scheme is "http," the authority carries either the FQDN or the IP address, with priority given to the IP address configuration.

3GPP-SBI-Discovery Header

AMF includes 3gpp-Sbi-Discovery for each of the query parameters configured under the network element profile in the following format:

3gpp-Sbi-Discovery-<query-param>

3gpp-Sbi-Discovery-notification-type is used for notifications corresponding to default notification subscriptions.

Example: N1_MESSAGES used for N1MessageNotify.

3GPP-SBI-target-apiroot

While sending notification to peer NF, AMF replaces the "api root" of the "target api" with the "scp api root" and includes the "target api root" in the "3gpp-sbi-target-apiRoot" header.

3GPP-SBI-Callback Header

AMF populates the "3gpp-Sbi-Callback" header in callback requests with the callback service name to allow the SCP to provide differentiated services.

Following is the format for "3gpp-Sbi-Callback" header:

"N<NF>_<service name>_<name of the callback service operation in the corresponding OpenAPI specification file>"

Server Header

AMF includes a Server header in all error responses to peer NFs to indicate the source of the error.

Server header format: AMF-"nf-instance-id"

Example: AMF-"54804518-4191-46b3-955c-ac631f953ed8"

When AMF acts as a client and receives an error response, it extracts the NFType from the server header and triggers SCP failure handling. See [Configure SCP Model-D Failure Handling](#) for configuration details.

3GPP-SBI-Producer-Id and 3GPP-SBI-Discovery-target-nf-instance-id

The 3gpp-producer-id received from the NF peer is included by the AMF in subsequent messages to the peer NF for the same service and session.

Deployment Specific API Prefix

AMF supports deployment-specific API Prefixes for SCP model-D.

- Configuration for the AMF's deployment-specific API Prefix is included under the amf-service. See [Configure AMF Deployment Prefix API](#) for configuration details.
- The peer NF configuration must provide an option to specify the deployment-specific API prefix for SCP peer. See [Configure SCP for Peer NF Communication](#) for configuration details.

FQDN

AMF supports SCP model D for peer NF communication using IP address or FQDN address. This section describes about the FQDN support in AMF.

FQDN support simplifies network management and enhances security by using domain names instead of IP addresses for communication between NFs.

Following are the key consideration for FQDN interaction with SCP Model-D.

- NRF registration with FQDN: Register AMF with the Network Repository Function (NRF) using FQDN.
- FQDN support for default notification subscription: Ensure FQDN is used during NRF registration for notification subscriptions.
- Callback URI: Include both FQDN and the deployment-specific API prefix in the callback URI.
- Port Inclusion with FQDN: AMF appends the port to the FQDN in all callback URIs. This is relevant for the default subscription and the path specified in the HTTP location header, configured under vip-port or vip-ipv6-port within endpoint-sbi.
- AMF stores the FQDN address received in the location header. When sending messages to a peer NF via SCP, AMF includes the FQDN in the 3gpp-sbi-target-apiRoot for subsequent messages.

A configuration update in SCP introduces the option to [set up the SCP peer FQDN](#) within the endpoint configuration.



Note AMF provides the capability to configure a port alongside the FQDN. If a port is not specified, the system uses the standard port by default.

- If the SCP peer URI scheme is configured as HTTP, AMF prioritizes the IP address. AMF uses FQDN only if the IP address is not configured.
- AMF performs DNS resolution to obtain the SCP peer IP address. Core DNS must be configured with the DNS server address to facilitate this resolution. AMF randomly selects the servers returned by core DNS. For more information, see [UCC SMI Operations Guide > clusters configuration command reference](#) for configuration details.
- AMF prioritizes an endpoint-profile with a resolved FQDN over one with an unresolved FQDN. See [Configure SCP for Peer NF Communication, on page 288](#) for configuration details.
- If the selected endpoint profile is not able to resolve IP for the FQDN, then [Failure handling configuration](#) is applied while sending the message to the peer NF.

Dead SCP detection

The existing dead peer detection framework in AMF is extended to detect a dead SCP. Following is the sample configuration for dead SCP detection:

```
client outbound host ping timeout 3000
client outbound host ping interval 5000
```

```
client outbound interface scp
host ping timeout 3000
host ping interval 5000
exit
```

SCP Model-D Limitations

Following are the limitations of this feature:

- AMF does not support discovery of the SCP peer. SCP peer must be configured statically.
- AMF does not support roaming functionality for SCP Model D deployment.
- AMF failure handling does not support fallback to Model B from Model D.
- AMF does not support TLS, MTLS, and OAuth for SCP Model D deployment.
- To enable or disable SCP Model-D functionality, system shutdown and restart is required.
- AMF supports FQDN deployment with SCP Model-D only and not with Model-A and Model-B.
- AMF failure handling does not support fallback to Model A from Model D for FQDN deployment.
- DNS cache is not preserved in case of pod restart. Hence, subsequent message require DNS resolution.

SCP Model-D Configuration

By default, AMF does NRF discovery to select the NF Peer like UDM, AUSF, PCF, SMF, and so on. If NRF discovery fails and if local configuration is available for the peer, AMF selects the local configured peer.

For Model D implementation, configuration is provided where operator can configure to invoke Model-D based communication with peer.

Configure SCP Profile and Associate Profile with Operator Policy

The operator policy includes a configuration to associate an SCP profile. If the network-element profile has the nf-selection-model priority set to <scp>, it uses the SCP profile associated with the operator policy for that session. If no SCP profile is associated, it falls back to model-A.

Procedure

-
- | | |
|---------------|--|
| Step 1 | Enter the operator-policy configuration mode.
operator-policy <i>policy_name</i> |
| Step 2 | Configure the network-element-profile-list for SCP under operator-policy.
network-element-profile-list scp <i>profile_name</i> |
| Step 3 | Save and commit the configuration. |
-

Configure SCP Network Element Profile

To configure a "network-element" profile for SCP and associate the scp "nf-client-profile" and "failure-handling-profile", Use the following configuration:

Procedure

-
- Step 1** Enter the profile network-element configuration mode.
- profile network-element scp** *scp_profile_name*
- Specify the SCP as the network element profile. *scp_profile_name* must be an alphanumeric string representing the corresponding network element profile name.
- Step 2** Configure the nf-client-profile for SCP under profile network-element.
- nf-client-profile** *scp_client_profile_name*
- Specify the SCP client profile. *scp_client_profile_name* must be an alphanumeric string representing the corresponding NF client profile name.
- Step 3** Configure the failure-handling-profile for SCP under profile network-element.
- failure-handling-profile** *failure_handling_scp_profile_name*
- Specify the SCP failure handling network profile for the configured SCP. *failure_handling_scp_profile_name* must be an alphanumeric string representing the corresponding SCP failure handling network profile name.
- Step 4** Configure the discovery-params option under profile network-element scp.
- discovery-params** [*service-names*]
- The "3gpp-Sbi-Discovery-service-names" HTTP header is sent as a plain string to the SCP, but only when you configure the discovery-params [*service-names*] within the SCP network element profile.
- Example:**
- 3gpp-sbi-discovery-service-names : nsmf-pdusession
- Step 5** Save and commit the configuration.
-

Configure SCP for Peer NF Communication

To configure SCP for NF communication, use the following configuration:

Procedure

-
- Step 1** Enter the configuration mode and define the nf-client nf-type profile.
- profile nf-client nf-type scp**
- Step 2** Configure the scp-profile under nf-client nf-type profile.

scp-profile *scp_profile_name*

Example:

scp-profile *scp-profile1*

Step 3 Configure the locality details for SCP profile.

locality *locality_name*

Example:

locality *LOC1*

Step 4 Configure the priority value of the locality.

priority *priority_value*

Example:

priority *30*

Step 5 Configure the service name type.

service name type *service_name_type_value*

Example:

service name type *nudm-sdm*

Step 6 Configure the responsetimeout value for the service.

responsetimeout *responsetimeout_value*

Example:

responsetimeout *4000*

Step 7 Configure the endpoint-profile for the service.

endpoint-profile *endpoint-profile_name*

Example:

endpoint-profile *EP1*

Step 8 Configure the capacity value for the endpoint profile.

capacity *capacity_value*

Example:

capacity *30*

Step 9 Configure the priority value for the endpoint profile.

priority *priority_value*

Example:

priority *10*

Step 10 Configure the api-root to specify the deployment-specific API prefix for SCP peer under the endpoint configuration.

api-root *prefix*

Step 11 Configure the uri-scheme for the endpoint profile.

uri-scheme *uri_scheme_value*

Example:

- Step 12** **uri-scheme** *http*
Configure the endpoint-name for the endpoint profile.
endpoint-name *endpoint_name*
Example:
endpoint-name *EPI*
- Step 13** Configure the priority value for the endpoint name.
priority *priority_value*
Example:
priority *10*
- Step 14** Configure the capacity value for the endpoint name.
capacity *capacity_value*
Example:
capacity *30*
- Step 15** Configure the capacity value for the endpoint name.
capacity *capacity_value*
Example:
capacity *30*
- Step 16** Configure the ipv4 address for the endpoint name.
primary ip-address ipv4 *ipv4_address*
Example:
primary ip-address ipv4 *209.165.202.133*
- Step 17** Configure the ipv4 port for the endpoint name.
primary ip-address port *port_number*
Example:
primary ip-address port *8080*
Note
If SCP peer FQDN is known, you can configure FQDN instead of primary/secondary IP address.
- Step 18** Configure the fqdn for the endpoint name.
fqdn *fqdn_address* | **port** *fqdn_port*
Port is an optional configuration.
- Step 19** Save and commit the configuration.
This command lets you to either commit or ignore the configurations. Entering **yes** allows you to save or modify the configurations.
-

Configure SCP Model-D Failure Handling



Note SCP Model-D failure handling is applicable for both IP and FQDN deployments.

Under nf-client-failure, a new nf-type called SCP is added. In this context, you can configure AMF actions for each message type (like UdmRegistrationReq) under each service type (like nudm-uecm) when you receive an HTTP error status code. You can also specify the action for the behavior when the server header indicates SCP, and you can define the nf-action for the behavior when the server header indicates NF peers such as UDM or AUSF.

AMF identifies the source of an error by examining the server header field in the error response.

- In case of HTTP timeout or the HTTP server header is missing or includes SCP:
 - The AMF selects a different SCP endpoint and retries if the retry count is at least 1 and the action is set to either retry-and-continue, retry-and-ignore, retry-and-terminate, or retry-and-fallback.
 - If all retry attempts fail, the AMF falls back from model-D to model-A, provided the action in SCP failure handling is retry-and-fallback and the nf-client configuration for the peer exists. Once it falls back, any failure is managed according to the NF failure handling configuration.
- If the HTTP server header includes target NF:
 - AMF handles the failure based on nf-action configured. If retry-and-* is configured and retry count value is at least one, then AMF executes the retry action.
- In case of NF discovery errors between the SCP and NRF, the SCP may set the cause as NRF_NOT_REACHABLE or NF_DISCOVERY_ERROR. In such cases, AMF falls back to Model-A, if configured.

To configure SCP Model-D failure handling, use the following configuration:

Procedure

Step 1 Enter the configuration mode to configure the NF type required after the NF client failure.

profile nf-client-failure nf-type scp

Step 2 Configure the failure handling profile for the NF client.

profile failure-handling *failure_handling_profile_name*

Example:

profile failure-handling *FH1*

Step 3 Configure the service name type for the NF client.

service name type *service_name_type_value*

Example:

service name type *nausf-auth*

Step 4 Configure the responsetimeout value for the service.

responsetimeout *responsetimeout_value*

Example:

responsetimeout 1500

Step 5 Configure the message type for the service.

message type *message_type*

Example:

message type *AusfAuthenticationReq*

Step 6 Configure the httpv2 status-code for the service.

status-code httpv2 *status_code*

Example:

status-code httpv2 504

Status code can have the following variations:

- Single value, example: 504
- Range, example: 500-509
- Multiple, example: 404,500,504

Step 7 Configure the retry value for the service.

retry *retry_value*

Example:

retry 1

Step 8 Configure the various action if the source of error is SCP.

action {continue | **retry-and-continue** | **retry-and-fallback** | **retry-and-ignore** | **retry-and-terminate** | **terminate**}

Step 9 Configure the NF failure action if server header indicates that the source of error is from target NF peer.

nf-action [continue | **retry-and-fallback** | **retry-and-ignore** | **terminate**]

Step 10 Save and commit the configuration.

This command lets you to either commit or ignore the configurations. Entering **yes** allows you to save or modify the configurations.

Configure DNS Failure Handling

AMF applies the failure handling procedures to determine further actions in the event of a DNS resolution failure.

- Failure handling applies when sending a message to the peer NF if the selected endpoint profile cannot resolve an IP address for the FQDN.
- The retry action applies from starting while resolving the next FQDN.
- Retrying to the next unresolved FQDN is considered if the configured action includes any retry actions.

- If DNS query returns multiple IP address, then retransmission is attempted to other IPs in the list in random order without any specific priority.
- If multiple endpoints are configured, then AMF resolves the FQDN configured under other endpoints if the retry attempt configuration permits it.
- If failure handling is configured with retry and DNS resolution does not return an alternate address, the AMF takes the post-retry action.

To configure the DNS failure handling, use the following configuration.

Procedure

-
- Step 1** Enter the configuration mode to configure the NF type required after the NF client failure.
profile nf-client-failure nf-type scp
- Step 2** Configure the failure handling profile for the NF client.
profile failure-handling *failure_handling_profile_name*
Example:
profile failure-handling *FH1*
- Step 3** Configure the service name type under the failure-handling profile.
service name type *service_name_type*
- Step 4** Configure the message type under the service name type.
message type *message_type*
- Step 5** Set the status code under the message type.
status-code dns *any*
- Step 6** Set the retry count for failure handling.
retry *number_of_retries*
- Step 7** Configure the actions for the failure handling.
action [terminate | retry-and-continue | retry-and-ignore]
- Step 8** Save and commit the configuration.
 This command lets you to either commit or ignore the configurations. Entering **yes** allows you to save or modify the configurations.
-

Configure AMF FQDN

AMF supports FQDN configuration under the endpoint SBI, as shown in the following sample configuration.

Procedure

- Step 1** Enter the instance configuration mode.
instance **instance-id** *instance_id*
- Step 2** Configure the endpoint for the instance.
endpoint *endpoint_name*
 Specify *sbi* as the endpoint type for the instance.
- Step 3** Set the URI scheme for the instance.
uri-scheme *uri_scheme_name*
 Choose either *http* or *https* as the URI protocol for the instance.
- Step 4** Configure the VIP IP and port for the instance.
vip-ip *vip_ip_address* | **vip-port** *port_number*
Example:
vip-ip *1.1.1.1* | **vip-port** *8091*
 Default value for port is 8090 if no port is configured.
- Step 5** Configure the VIP IPV6 and port for the instance.
vip-ipv6 *vip_ipv6_address* | **vip-ipv6-port** *port_number*
Example:
vip-ipv6 *1::1* | **vip-port** *8090*
 Default value for port is 8090 if no port is configured.
- Step 6** Set the FQDN for AMF instance.
fqdn *fqdn_address*
- Step 7** Save and commit the configuration.
 This command lets you to either commit or ignore the configurations. Entering **yes** allows you to save or modify the configurations.
-

Enable SCP Model-D

Use this procedure to enable the SCP model-D for peer communication at the network-element profile level.

Procedure

- Step 1** Enter the network-element profile configuration mode.

profile network-element *network_element_name*

Example:

```
[amf] amf# config
[amf] amf(config)# profile network-element smf SMF1
```

Step 2 Configure the NF client profile under network-element profile.

nf-client-profile *client_profile_name*

Note

nf-client-profile is applicable for Model A.

Example:

nf-client-profile *SMF1*

Step 3 Configure the failure handling profile under network-element profile.

failure-handling-profile *failure_handling_profile_name*

Note

failure-handling-profile is applicable for Model A and Model B.

Example:

failure-handling-profile *FH1*

Step 4 Specify the NF selection model and its priority under network-element profile.

nf-selection-model *nf_model_priority* [**local** | **nrf-query** | **scp**]

Following are the details of commands that are listed in the preceding CLI:

- **local**: Refers to Model-A.
- **nrf-query**: Refers to Model-B.
- **scp**: Refers to Model-D.

Example:

nf-selection-model 1 scp

Step 5 Specify the additional query parameters for the network element configuration.

query-params [*queryparam1 queryparam2*]

Example:

query-params [*dnn target-plmn snssais pgwfqdn requester-plmn*]

Step 6 Save and commit the configuration.

This command lets you to either commit or ignore the configurations. Entering **yes** allows you to save or modify the configurations.

Configure AMF Deployment Prefix API

To configure AMF's deployment prefix API, use the following steps:

Procedure

- Step 1** Enter the service configuration mode.
amf-service *service_name*
- Step 2** Configure the API root for the deployment.
api-root *deployment_prefix*
- Step 3** Save and commit the configuration.
 This command lets you to either commit or ignore the configurations. Entering **yes** allows you to save or modify the configurations.
-

Enable Preferred Locality

To enable the "3gpp-Sbi-Discovery-preferred-locality" header for SCP, ensure that the "locality client" configuration parameter in the "profile nf-pair" for the target NF, such as AUSF or UDM, matches the "locality client" configuration parameter in "amf-services".

To configure the preferred locality under the **profile nf-pair**, use the following configuration:

Procedure

- Step 1** Enter the configuration mode to configure the NF pair with the specified NF type.
profile nf-pair nf-type *nf_type_name*
- Step 2** Configure the locality for the client-side of the NF pair.
locality client *client_locality_name*
- Step 3** Configure the preferred server locality for the NF pair.
locality preferred-server *preferred_server_name*
- Step 4** Configure the geographic server locality for the NF pair.
locality geo-server *geographic_server_location*
- Step 5** Save and commit the configuration.

Note

To disable the header to SCP for the designated target NF, simply remove the **locality preferred-server** configuration from the **profile nf-pair** settings for that target NF.

OAM Support

This section describes operations, administration, and maintenance information regarding the SCP mdel-D and FQDN feature in AMF.

Bulk Statistics Support

• SCP Model-D Stats:

Support is added for NfType=SCP in existing stats for number of message sent through SCP to target NF.

Example:

```
nf_endpoint_selections_total{message_type="SmfSmContextCreate",
nf_type="scp",svc_name="nsmf-pdusession",host="172.16.186.10:8030",
result="result_201"}

nf_resp_sent_messages_total{nf_type="SCP",svc_name="nsmf-pdusession",
message_type="SmfSmContextCreate",result="SendSuccess",status_code="201"}
```



Note For DNS failure in "nf_resp_sent_messages_total" stats, status_code is dns_failure.

• FQDN Stats

If you configure the following CLI then FQDN label in stats is populated, if not configured then FQDN label is not populated and is empty in the stats.

```
infra metrics verbose application
metrics fqdn_dns_msg_total
granular-labels [ fqdn ]
exit
```

• Metrics for Request Sent to CoreDNS for DNS Resolution:

- dns_request_total: Monitors the number of requests sent to CoreDNS.
- dns_response_total: Monitors the number of successful and failed responses received from CoreDNS.

Example: Following are the examples of "dns_request_total" and "dns_responseq_total" stats.

```
dns_request_total{app_name="AMF", attempt="first",
cluster="clul", data_center="dc1", fqdn="cisco.udm.scp.org",
instance_id="1", method_name="get", service_name="amf-rest-ep", type="ipv6"}
dns_request_total {app_name="AMF", attempt="retry",
cluster="clul", data_center="dc1",fqdn="cisco.udm.scp.org",
instance_id="1", method_name="unresolved-get",
service_name="amf-rest-ep",type="ipv4"}
dns_request_total{app_name="AMF",attempt="second",
cluster="clul",data_center="dc1", fqdn="cisco.udm.scp.org",
instance_id="1", method_name="get", service_name="amf-rest-ep", type="ipv4"}
dns_request_total{app_name="AMF" ,attempt="third",
cluster="clul",data_center="dc1", fqdn="cisco.udm.scp.org", instance_id="1",
method_name="get", service_name="amf-rest-ep", type="ipv4"}

dns_response_total{app_name="AMF",attempt="first",
cluster="clul",data_center="dc1", fadn="cisco.udm.scp.org",
```

```
instance_id="0",method_name="get",service_name="amf-rest-ep" ,
status="success" , status_code="",type="ipv4"}
dns_response_total {app_name="AMF",attempt="retry",
cluster="clul", data_center="dc1",fadn="cisco.udm.scp.org",
instance_id="0",method_name="unresolved-get" ,
service_name="amf-rest-ep" ,status="error",
status_code="Ipv6NotFound",type="ipv6"}
dns_response_total {app_name="AMF", attempt="retry",
Cluster="clul",data_center="dc1",fadn="cisco.udm.scp.org",
instance_id="0", method_name="unresolved-get" , service_name="amf-rest-ep" ,
status="error", status_code="read udp 192.168.12.42:55049->10.96.0.10:53:
i/o timeout",type="ipv4"}
dns_response_total{app_name="AMF",attempt="third",
cluster="clul",data_center="dc1",fadn="cisco.udm.scp.org",
instance_id="0", method_name="get",service_name="amf-rest-ep" ,
status="success" , status_code="",type="ipv4"}
```

• DNS Resolution Stats at Service Level:

- `fqdn_dns_msg_total`: Tracks the Attempted/Success/Failure status of FQDNs by the application.

When the status is "attempted" or "success", the error stat field is empty. It contains a code only when the status is "failure".

When the value for label "req" is "resolution" in the stats, it indicates that the AMF performed a DNS query to resolve the FQDN. On the other hand, if the value for label "req" is "cache" means that the IP address for the FQDN is already present in the internal cache.

Following is an example of the sample metrics:

```
fqdn_dns_msg_total{app_name="AMF",cluster="AMF",data_center="DC",
error="",fqdn="host1.satya-test.com",instance_id="1",nf_type="SCP",req="resolution",
service_name="rest-ep",status="attempted",svc_name="nudm-sdm"}

fqdn_dns_msg_total{app_name="AMF",cluster="AMF",data_center="DC",
error="",fqdn="host1.satya-test.com",instance_id="1",nf_type="SCP",
req="resolution",service_name="rest-ep",status="success",svc_name="nudm-sdm"}

fqdn_dns_msg_total{app_name="AMF",cluster="AMF",data_center="DC",
error="8312",fqdn="seth.com",instance_id="1",nf_type="SCP",req="resolution",
service_name="rest-ep",status="failure",svc_name="nudm-uecm"}
```



CHAPTER 28

Internode Registration Support

- [Feature Summary and Revision History, on page 299](#)
- [Feature Description, on page 299](#)
- [Internode Initial Registration, on page 300](#)
- [Internode Mobility Registration, on page 301](#)

Feature Summary and Revision History

Summary Data

Table 96: Summary Data

Applicable Product(s) or Functional Area	5G-AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled - Always-on
Related Documentation	Not Applicable

Revision History

Table 97: Revision History

Revision Details	Release
Updates on context-transfer-guard timer details	2023.02.0
First introduced.	2021.04.0

Feature Description

This feature supports the following:

- Internode Initial Registration
- Internode Mobility Registration

Internode Initial Registration

Feature Description

AMF now supports registering a UE when it gets a registration request with type set to initial registration with identifier GUTI allocated by a peer node.

The case of this AMF being the “old” node during initial registration or attach procedure is described in [Registration with AMF Change, on page 305](#) section.

How it Works

This section describes how this feature works.

Call Flows

This section describes the key call flows for this feature.

Identification with Peer Node Call Flow

This section describes Identification with Peer Node call flow.

Figure 37: Identification with Peer Node Call Flow

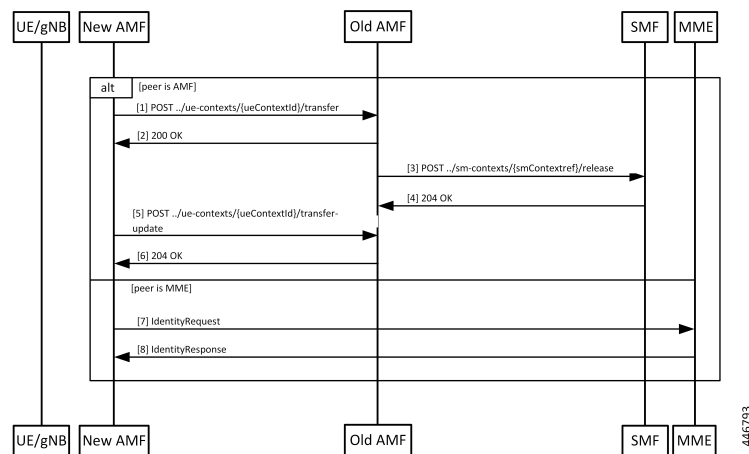


Table 98: Identification with Peer Node Call Flow Description

Step	Description
1	If the peer node is an AMF, then new AMF sends a transfer request to the old AMF, with type set to “INITIAL REGISTRATION”, including the whole registration request received by it.

Step	Description
2	The old AMF checks the integrity protection of the request, and if integrity checks pass, responds with the UE context, but without any SMF information.
3	The old AMF checks the integrity of the message that is received from the new AMF. If the integrity check passes, the old AMF packages the attributes of the UE that is available in the response to the transfer request. If the request was for mobility updating, PDU session information present in the old AMF is sent to the new AMF.
4	AMF releases any resources that the UE held at any SMF.
5	SMF responds to the AMF request.
6	The new AMF sends a transfer update message to the old AMF.
7	The old AMF responds with a “204 OK” indicating that the transfer is successful.
8	If the old node is an MME, then AMF sends an identity request message to MME along with the registration request received.
9	MME checks the integrity of the message it receives. If integrity checks pass, the MME returns the MM context.

At the end of a successful transfer from a peer node, AMF issues a security mode command with a mapped security context (from LTE) or a non-current security context (5G) towards the UE.

Limitations

Additional GUTI in the registration request is not supported.

Internode Mobility Registration

Feature Description

This feature supports the following:

- Idle Mode Registration from Peer MME to AMF
- AMF to MME Idle Mode Handoff
- Registration with AMF Change

Idle Mode Registration from Peer MME to AMF

Feature Description

AMF now supports using the N26 interface to retrieve a context from an MME for handling registration request with type set to Mobility Updating and a foreign GUTI. AMF then uses a mapped security context from the MME to use with the UE.

How it Works

This section describes how this feature works.

Call Flows

This section describes the key call flows for this feature.

Idle Mode Registration to AMF from MME Call Flow

This section describes the Idle Mode Registration to AMF from MME call flow.

Figure 38: Idle Mode Registration to AMF from MME Call Flow

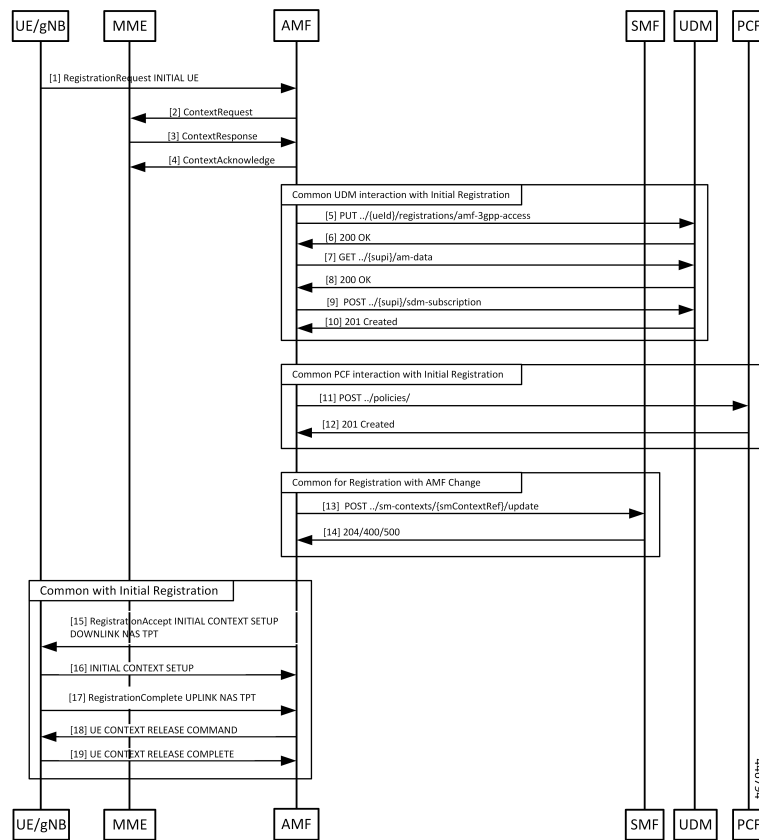


Table 99: Identification with Peer Node Call Flow Description

Step	Description
1	The UE sends a Registration Request with a GUTI assigned by an MME.
2	The AMF analyzes the GUTI, identifies an MME and sends a context request.
3	The MME responds with a ContextResponse.
4	The AMF sends a ContextAcknowledge to the MME.

Step 5 to Step 18 are same as mentioned in the call flow for [Registration with AMF Change](#), on page 305.

AMF to MME Idle Mode Handoff

Feature Description

AMF supports idle mode handoff to MME for 5GS to EPS Idle mode mobility using N26 interface.

- Context Request: MME sends the Context Request message to the AMF to get the MM and EPS bearer Contexts for the UE.
- Retrieve SM Context service operation: Retrieves an individual SM context, for a given PDU session associated with 3GPP access from the SMF.

Currently, the following are not supported:

- Handling of timeouts from SMF during Retrieve Request
- Handling of negative response from SMF during Retrieve Request

How it Works

This section describes how this feature works.

Call Flows

This section describes the key call flows for this feature.

AMF to MME Idle Mode Handoff Call Flow

This section describes the AMF to MME Idle Mode Handoff call flow.

The following call flow shows the messaging that happens in the network.

Figure 39: AMF to MME Idle Mode Handoff Call Flow

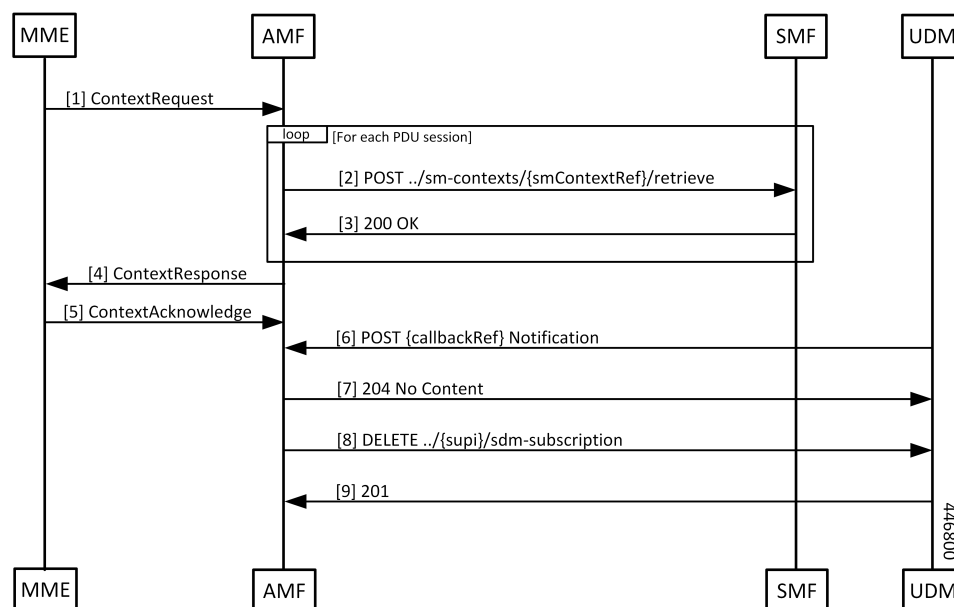


Table 100: AMF to MME Idle Mode Handoff Call Flow Description

Step	Description
1	A UE that was previously registered on an AMF in 5GC moves to EPC, and sends a TAU request to an MME. From the GUTI sent by the UE, the MME finds the identity of the AMF, and sends a ContextRequest over N26.
2	<p>The ContextRequest reaches the AMF. MME sends the full TAU Request message as a part of the ContextRequest. The AMF does integrity checks on the request to ascertain the validity of the request.</p> <p>If the request from the MME indicates that the MME has authorized the UE, AMF doesn't do security checks on the received message.</p> <p>If integrity checks fail, AMF rejects the request. Or else, the AMF retrieves the PDU sessions information from each of the SMFs that host PDUs for this UE and has allocated EBI for their sessions from the AMF.</p>
3	The SMF responds to the SmContext Retrieve Request from the AMF.
4	<p>AMF responds to MME by sending a ContextResponse message when AMF receives all the expected responses from SMFs.</p> <p>It starts context-transfer-guard timer (configured with greater than zero (0)). On expiry of the context-transfer-guard timer, the source AMF performs the following:</p> <p>Triggers the UDM Deregistration internally to clear the local ueContext.</p>
5	The MME sends a ContextAcknowledgement message to the AMF. The AMF starts a guard timer to clear allocated resources in case the notification from the UDM to clear the registration doesn't come through.
6	Since the MME is now the owner of the registration, the UDM notifies the AMF that the registration for 3GPP access is cancelled.
7	<p>The AMF releases any local resources, and responds to the UDM.</p> <p>If the guard timer is not running, the AMF releases any local resources, and responds to the UDM.</p> <p>Otherwise amf responds to the UDM, and waits for the guard timer to expire before cleaning up the UEcontext.</p>
8	The AMF clears the subscription to changes in subscription data at the UDM.
9	The UDM responds to the request from the AMF.

Feature Configuration

To configure this feature, use the following configuration:

```

config
  amf-global
    call-control-policy policy_name
    timers
      context-transfer-guard

```



```
n26-interface value guard_time_value
end
```

NOTES:

- **call-control-policy** *policy_name*—Configure the Call Control Policy.
- **context-transfer-guard**—Specify the context transfer guard timer. The AMF starts this timer on receiving the TransferUpdate. On expiry, the AMF clears the PDUs locally.
- **n26-interface value** *guard_time_value*—Specify the interface n26-interface value in seconds. It must be an integer in the range of 0—35712000. The default value is zero (0).

Registration with AMF Change

Feature Description

AMF now supports registration with Mobility Updating and AMF Change. Currently, AMF only supports GUTI based relocations.

REST Endpoint

To support changes at the old AMF, endpoints are needed for the following:

- Transfer requests from the new AMF
- Transfer-Update requests from the new AMF
- Notifications from the UDM

Client code for Transfer Requests and Transfer Update Requests are required in the new AMF.

How it Works

This section describes how this feature works.

Call Flows

This section describes the key call flows for this feature.

Registration with AMF Change Call Flow

This section describes the Registration with AMF Change call flow.

The diagram illustrates the Initial Registration and UE Context Release procedures between the UE/gNB, New AMF, Old AMF, UDM, PCF, and SMF.

Initial Registration Procedure:

- UE/gNB sends [1] RegistrationRequest INITIAL UE UPLINK NAS TPT to New AMF.
- New AMF sends [2] POST ./ue-contexts/{ueContextId}/ to Old AMF.
- Old AMF sends [3] 200 OK to New AMF.
- New AMF sends [4] POST ./ue-contexts/{ueContextId}/transfer-update to Old AMF.
- Old AMF sends [5] 200 OK to New AMF.
- New AMF sends [6] POST (callbackRef) Notification to UDM.
- UDM sends [7] 204 No Content to New AMF.
- New AMF sends [8] Delete ./supi/sdm-subscription to UDM.
- UDM sends [9] 201 to New AMF.
- New AMF sends [10] POST ./policies/ to PCF.
- PCF sends [11] 201 Created to New AMF.
- New AMF sends [12] POST ./sm-contexts/{smContextRef}/update to SMF.
- SMF sends [13] 204/400/500 to New AMF.

Common UDM interaction with Initial Registration:

- PUT ./{ueId}/registrations/amf-3gpp-access
- 200 OK
- GET ./{supi}/am-data
- 200 OK
- POST ./{supi}/sdm-subscription
- 201 Created

Common with Initial Registration:

- RegistrationAccept
- INITIAL CONTEXT SETUP
- DOWNLINK NAS TPT
- INITIAL CONTEXT SETUP
- RegistrationComplete
- UPLINK NAS TPT
- UE CONTEXT RELEASE COMMAND
- UE CONTEXT RELEASE COMPLETE

UE Context Release Procedure:

- UE/gNB sends UE CONTEXT RELEASE COMMAND to New AMF.
- New AMF sends UE CONTEXT RELEASE COMPLETE to Old AMF.

Step	Description
1	UE builds a registration message with type set to Mobility Updating or Initial Registration and sends it to the gNB. At gNB, the message becomes the payload of an INITIAL UE message (if the UE is in ECM_IDLE) or an UPLINK NAS TRANSPORT message when the UE is in ECM_CONNECTED (Only for Mobility Updating). When the UE is in ECM_CONNECTED, there's a N2 handover procedure that precedes this part, and the context transfer steps of the call flow are omitted.
2	The new AMF analyses the GUTI that is send by the UE and determines whether it's allocated by a different AMF. The new AMF determines the old AMF using parameters from the GUTI and constructs a transfer request. The whole message body that is received by the new AMF is part of the request to the old AMF. The new AMF sets the type of transfer request based on whether the UE is registering for initial registration or mobility updating.

Step	Description
3	The old AMF checks the integrity of the message that is received from the new AMF. If the integrity check passes, the old AMF packages the attributes of the UE that is available in the response to the transfer request. If the request was for mobility updating, PDU session information present in the old AMF is sent to the new AMF.
4	The new AMF sends a transfer update message to the old AMF.
5	If the new AMF decides not to use the current PCF, the old AMF clears the PCF associations created by it. In the case of initial updating, the AMF clears all the PDU sessions. The new AMF interacts with UDM to register as the node responsible for the UE. The AMF also interacts with the UDM to register for changes to subscription data for the UE, and these steps are the same as the one executed by the AMF during initial registration.
6	Once the new AMF registers with the UDM, the UDM notifies the old AMF that its registration has been cancelled.
7	The old AMF acknowledges the notification from the UDM.
8	Since the old AMF is no longer interested in changes to the subscription information, it sends a cancel for subscription for changes to SDM subscription.
9	The UDM clears the subscription and responds to the old AMF. The old AMF clears any state it has on the UE. The new AMF sets up policies in the PCF, and these steps are the same as those done during initial registration.
10	If AMF policies are to be set up with the PCF, the AMF sends a request to create the policies in the PCF.
11	PCF responds to the AMF request.
12	For each PDU session that the new AMF has taken over, it sends a message to the SMF to change the AMF for the session.
13	SMF responds to the AMF.
14	AMF sends a Registration Accept to the UE with new GUTI and a Tracking Area List. These steps are same as done during the AMF initial registration.
15	If the registration type is Mobility Updating, AMF ignores FollowOn IE and does not initiate UE CONTEXT RELEASE COMMAND.

Limitations

The following scenarios are currently not supported:

- Activation of bearers during Registration
- Steering of Roaming information
- UE Policy Information
- Integrity check failure

- Optional authentication of the UE
- Change of PCF during mobility
- Rejection/Clearing of PDU sessions

OAM Support

This section describes operations, administration, and maintenance information for this feature.

Bulk Statistics Support

- Message level statistics for new SBA messages, on a per peer AMF basis.
- Procedure level statistics for new and old AMF procedures, with Attempted, Success and Failure.



CHAPTER 29

IPv6 Support on SBI Interface

- [Feature Summary and Revision History, on page 309](#)
- [Feature Description, on page 309](#)
- [Feature Configuration, on page 310](#)

Feature Summary and Revision History

Summary Data

Table 102: Summary Data

Applicable Product(s) or Functional Area	AMF
Applicable Platform(s)	SMI
Feature Default Setting	Enabled - Always-on
Related Documentation	Not Applicable

Revision History

Table 103: Revision History

Revision Details	Release
First introduced.	2021.04.0

Feature Description

AMF supports IPv6 on the Service based interface (SBI).

The SBI endpoint can be configured with instance type as IPv6 or IPv4. The default type is IPv4.



Note SBI endpoint does not support the Dual instance type.

Feature Configuration

To configure this feature, use the following configuration:

```
config
  instance instance-id instance_id
    endpoint sbi
      replicas replicas_count
      loopbackPort port_number
      instancetype { IPv4 { vip-ip ipv4_address vip-port ipv4_port } |
IPv6 { vip-ipv6 ipv6_address vip-ipv6-port ipv6_port } }
    end
```

NOTES:

- **replicas** *replicas_count*—Specify the number of replicas.
- **loopbackPort** *port_number*—Specify the loopback port number.
- **vip-ip** *ipv4_address* **vip-port** *ipv4_port*—Specify the IPv4 address and port details.
- **vip-ipv6** *ipv6_address* **vip-ipv6-port** *ipv6_port*—Specify the IPv6 address and port details.
- **instancetype** { **IPv6** | **IPv4** }—Specify the SBI endpoint interface type and details of IPv4 or IPv6.

Configuration Example

The following is an example configuration for IPv4.

```
config
  instance instance-id 1
    endpoint sbi
      replicas 2
      loopbackPort 1000
      instancetype IPv4 vip-ip 209.165.200.224 vip-port 1001
    end
```

The following is an example configuration for IPv6.

```
config
  instance instance-id 1
    endpoint sbi
      replicas 2
      loopbackPort 1000
      instancetype IPv6 vip-ipv6 209:165:200:225::4 vip-ipv6-port 1001
    end
```



CHAPTER 30

Location Services

- [Feature Description - Location Services, on page 311](#)
- [Call Flows, on page 314](#)
- [Standard Compliance, on page 315](#)
- [Enable Location Services, on page 316](#)
- [Configure Compliance Profile, on page 320](#)
- [Associate Compliance Profile with AMF Service, on page 321](#)
- [Configure MME Name and MME realm for AMF Services, on page 322](#)
- [Configure GMLC in Network Element Profile List, on page 323](#)
- [Configure GMLC Profile, on page 323](#)
- [OAM Support, on page 327](#)

Feature Description - Location Services

Table 104: Feature History

Feature Name	Release Information	Description
MT-LR Location Services	2024.02.0	<p>AMF supports the MT-LR location services using the Location Management Function (LMF) to determine the accurate position and location of the UE. AMF supports the MT-LR location services for regulatory requirements.</p> <p>Command introduced:</p> <p>location lmf-positioning mt-lr— Used to enable MT-LR for location services.</p> <p>Default Setting: Disabled – Configuration Required</p>

Table 105: Feature History

Feature Name	Release Information	Description
Network Induced Location Request (NI-LR)	2025.02.0	<p>AMF now includes functionality to facilitate location services for Network Induced Location Requests, ensuring compliance and improving service capabilities.</p> <p>Command introduced:</p> <p>location lmf-positioning ni-lr— Used to to enable NI-LR for location services.</p> <p>Default Setting: Disabled – Configuration Required</p>
Location Services - Compliance to 3GPP Specification Revision 18	2025.02.0	<p>MT-LR and NI-LR supports revision 18.6 of the 3GPP specification. This update with the latest revision ensures compliance with the most current regulatory requirements.</p> <p>Command introduced:</p> <p>profile compliance <code>compliance_profile_name { service service_name { version spec 3gpp_spec_version } }</code>— Used to configure the 3gpp spec compliance version for namf-loc and nlmf-loc.</p> <p>Default Setting: Disabled – Configuration Required</p>

Supported Location Request Types

AMF supports various types of location requests to accurately determine the location of UE. These include:

- Network Induced Location Request (NI-LR)
- Mobile-Terminated Location Request (MT-LR)

Network Induced Location Request (NI-LR)

In NI-LR, when an emergency call goes to AMF, the serving AMF initiates the process to determine the location of the UE. This type of request is typically triggered by network operations or regulatory requirements, where the AMF actively seeks location information to ensure compliance with legal obligations. AMF coordinates with the LMF to accurately ascertain and update the location details of the UE to GMLC.

NI-LR-based location services are supported for both emergency-registered subscribers and normal subscribers with emergency PDU. This ensures that location information is readily available in critical situations to support emergency services.

Mobile-Terminated Location Request (MT-LR)

AMF supports location services to fulfill regulatory requirements, such as emergency calls and lawful intercepts.

In MT-LR, the Gateway Mobile Location Center (GMLC) initiates a request for location services. It forwards this request to the AMF, which utilizes the Location Management Function (LMF) to determine the location of the UE. Once the location is identified, the information is sent back to the GMLC.

AMF also supports queries from GMLC using the Generic Public Subscription Identifier (GPSI) to obtain location information.

AMF supports, "current location" and "current or last known location" for MT-LR. In case of "current or last known location" if the paging for UE fails or positioning fails due to any of the associated nodes, such as: LMF, UE, or gNB, then AMF returns the last known saved location if available.



Note AMF does not support concurrent location request for the same UE. AMF aborts the processing of previous request and continues with the new request.


Architecture

Location Service consists of the following layers as part of the non-roaming location services architecture:

- UE: The UE represents end-user devices, such as smart phones, tablets, or IoT devices. These devices interact with the network.
- GMLC: GMLC provides the location information services related to mobile devices.
- LCS Client: The LCS client is an external entity or application that requests location information for a specific mobile device.
- LRF: The LRF is a component within the Location Services (LCS) architecture in cellular networks. LRF retrieves and provides the location information for mobile devices or user equipment (UE).
- LMF: The LMF determines the geographical location of the UE.
- AMF: The AMF is a key component in 5G networks. It manages mobility, session management, and security for user devices.
- UDM: The UDM handles user-related data, including authentication, authorization, and subscription information.
- RAN: The RAN connects user devices to the core network. It includes base stations and antennas.
- N1 Interface: The N1 interface connects the UE and the RAN. It carries user data and control signaling.
- N2 Interface: The N2 interface connects the AMF and the RAN. It handles signaling and data transfer between the core network and the RAN.
- NL1 Interface: NL1 interface connects the LMF to the UE.
- NL2 Interface: NL2 interface connects the AMF to the GMLC.

The following diagram describes the high level architecture for location services.

Figure 41: Non-roaming Location Services

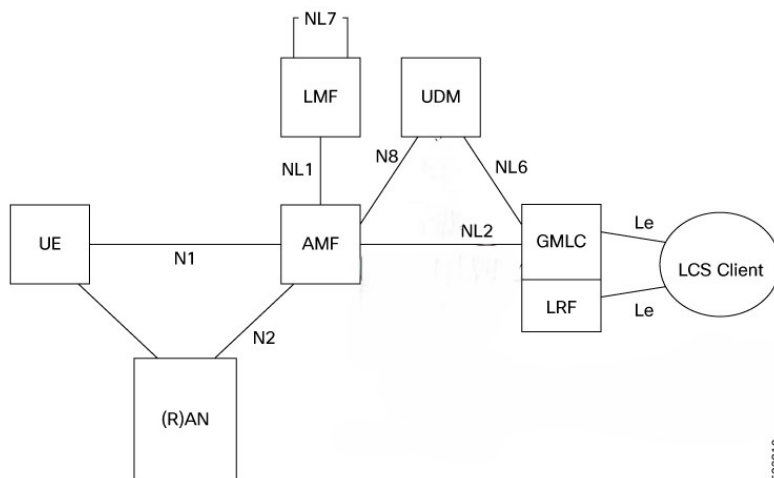


Call Flows

This section describes the key call flows for this feature.


MT-LR Location Service Call Flow

The following call flow and messages between the various nodes complies with the 3GPP TS 123.273.

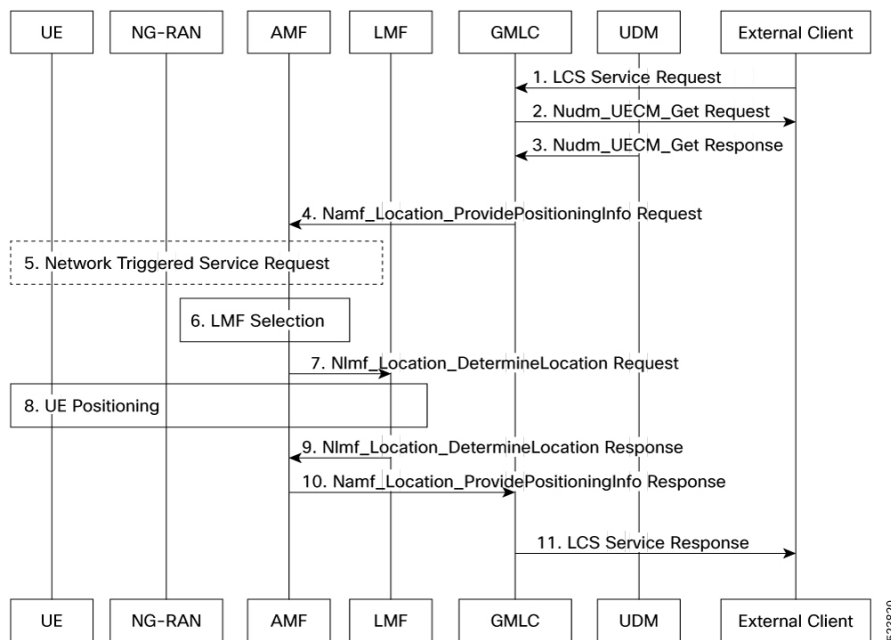


NI-LR Location Service Call Flow

The following call flow and messages between the various nodes complies with the 3GPP TS 123.273.

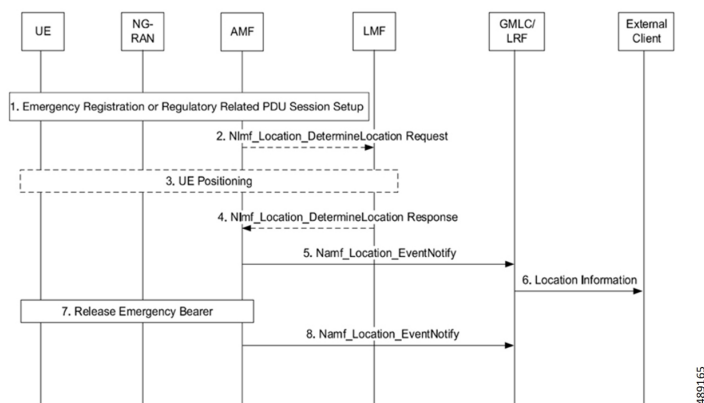

UE Positioning Call Flow

The following call flow and messages between the various nodes complies with the 3GPP TS 123.273.

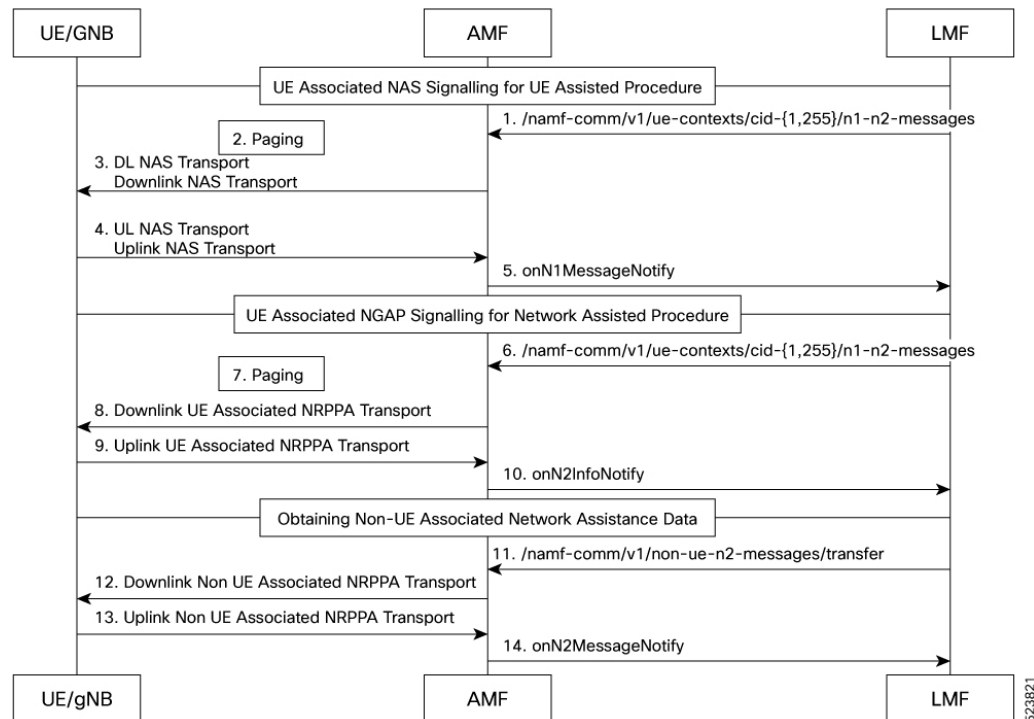

Standard Compliance

This feature complies with the following standards specifications:

- 3GPP TS 23.271 “*Description of Location Services (LCS)*”

- 3GPP TS 23.502 “*Procedures for the 5G System (5GS)*”
- 3GPP 23.273 v16.4 “*5G System (5GS) Location Services (LCS)*”
- 3GPP TS 29.515 “*5G System; Gateway Mobile Location Services*”
- 3GPP TS 29.518 “*5G System; Access and Mobility Management Services; Stage 3*”
- 3GPP TS 29.572 “*5G System; Location Management Services*”
- 3GPP TS 38.413 “*NG-RAN; NG Application Protocol (NGAP)*”

Enable Location Services



Note The **amf-global location positioning** is deprecated. Use **amf-global location lmf-positioning** instead for enabling the MT-LR and NI-LR feature.

Follow the steps to enable MT-LR and NI-LR location services under the AMF global configuration mode.

Procedure

-
- Step 1** Enter the AMF configuration mode.
- config**
- Example:**
- ```
[amf] amf# config
```
- Step 2** Access AMF Global Location Configuration.
- amf-global location lmf-positioning**
- This command displays the possible completion as:
- ```
{ mt-lr | ni-lr }
```
- Step 3** To enable MT-LR, use the following command.
- amf-global location lmf-positioning mt-lr**
- Step 4** To enable NI-LR, use the following command.
- amf-global location lmf-positioning ni-lr**
- Step 5** Save and commit the configuration.
-

Configuring LMF in Network Element Profile List

To configure LMF in the network element profile list, use the following configuration:

```

config
  amf-global
    operator-policy policy_name
      ccp-name ccp_name
      network-element-profile-list lmf lmf_name
    end
  end

```

NOTES:

- **ccp-name** *ccp_name*—Specify the Configuration Control Point (CCP) name. The CCP is used for managing and controlling configuration settings.
- **network-element-profile-list lmf** *lmf_name*—Specify the name of LMF with the network element profile.

Configuring the Profile NF Client

To configure the profile NF-client, use the following configuration:

```

config
  profile nf-client nf-type lmf
    lmf-profile lmf_profile_name
    locality locality_name
      priority priority_value
      service name type nlmf-loc
        endpoint-profile profile_name
          capacity capacity_value
          priority priority_value
          uri-scheme uri_scheme_name
          endpoint-name end_point_name
          priority priority_value
          primary ip-address ipv4 ipv4_address
          primary ip-address port ipv4_port_number
          default-notification-subscriptions subscriptions_name
          notification-type notification_message_type
          callback-uri callback_uri_url
          n1-message-class n1_message_class_type
        end
      end
    end
  end

```

NOTES:

- **profile nf-client nf-type** *nf_client_name*—Specify the profile name of the NF client.
- **lmf-profile** *profile_name*—Specify the profile name for the LMF.
- **locality** *locality_name*—Specify the locality name within the LMF profile.
- **priority** *priority_value*—Specify the priority value of the locality name within the LMF profile.
- **endpoint-profile** *profile_name*—Specify the associated end point profile name.
- **capacity** *capacity_value*—Specify the capacity of the endpoint profile.
- **priority** *priority_value*—Specify the priority of the endpoint profile.

- **uri-scheme** *uri_scheme_name*—Specify the uri scheme associated with the endpoint profile.
- **endpoint-name** *endpoint_name*—Specify the associated end point name.
- **priority** *priority_value*—Specify the priority of the endpoint name.
- **primary ip-address ipv4** *ipv4_address*—Specify the primary ipv4 address.
- **primary ip-address port** *ipv4_port_number*—Specify the primary ipv4 port.
- **default-notification-subscriptions** *default_notification_subscriptions_name* —Specify the name of the default notification subscriptions.
- **notification-type** *notification_message_type* —Specify the type of notification message.
- **callback-uri** *callback_uri_url* —Specify the URL for the callback uri.
- **n1-message-class** *n1_message_class_type* —Specify the n1 message class.

Configuration Example

Following is an example configuration.

```
profile nf-client nf-type lmf
  lmf-profile LMF1
  locality LOC1
  priority 56
  service name type nlmf-loc
  endpoint-profile EP1
  capacity 30
  priority 30
  uri-scheme http
  endpoint-name EP1
  priority 30
  primary ip-address ipv4 172.16.186.13
  primary ip-address port 8047
  default-notification-subscriptions n1
  notification-type N1_MESSAGES
  callback-uri <URL>
  n1-message-class LPP
exit
```

Configuring the Profile Network Element

To configure the profile network element, use the following configuration:

```
config
  profile network-element lmf lmf_name
  nf-client-profile nf_client_name
  failure-handling-profile failure_handling_profile_name
  query-params [ target-plmn | snssais | an-nodetype | rat-type |
  client-type | lmf-id | target-nf-instance-id ]
end
```

NOTES:

- **profile network-element lmf** *lmf_name*—Specify the profile name for the network element.
- **nf-client-profile** *nf_client_name*—Specify the network function client profile name.

- **failure-handling-profile** *failure_handling_profile_name*—Specify the failure handling profile name.
- **query-params** [**target-plmn** | **snssais** | **an-nodetype** | **rat-type** | **client-type** | **lmf-id** | **target-nf-instance-id**]—specifies the query parameters that can be used with the network element. These parameters allow for detailed querying and filtering based on specific criteria.
 - **target-plmn** —specify PLMN identifier used to target specific mobile networks.
 - **snssais** —specify single network slice selection assistance Information, used for network slicing.



Note Only the configuration of SNSSAI is allowed, and it is not used during LMF discovery.

- **an-nodetype** —specify the type of node in the network.
- **rat-type** —specify the radio access technology type.
- **client-type** —specify the type of client interacting with the network element.
- **lmf-id** —specify the identifier for the location management function.
- **target-nf-instance-id** —specify the instance id for target NF.

Configuring Failure Handling Profile

To configure the profile NF-client-failure, use the following configuration:

```
config
  profile nf-client-failure nf-type lmf lmf_name
  profile failure-handling failure_handling_profile_name
  service name type nlmf-loc
  responsetimeout timeout_value
  message type LmfDetermineLocation
  status-code httpv2 503
  retry retry_count
  action retry-and-ignore
end
```

NOTES:

- **profile nf-client-failure nf-type lmf lmf_name**—Specify NF client failure profile.
- **profile failure-handling failure_handling_profile_name**—Specify failure-handling profile name.
- **responsetimeout timeout_value**—Specify the response timeout for the specified services.
- **retry retry_count**—Specify the retry count for the status code.

The following is an example configuration.

```
profile nf-client-failure nf-type lmf
profile failure-handling FH1
service name type nlmf-loc
responsetimeout 10
message type LmfDetermineLocation
```

```

status-code httpv2 403
  retry 3
  action retry-and-continue
exit
message type LmfN1MessageNotify
  status-code httpv2 403
  retransmit 3
  retransmit-interval 2000
  action retry-and-continue
exit
message type LmfN2InfoNotify
  status-code httpv2 403
  retransmit 3
  retransmit-interval 2000
  action retry-and-continue
exit
exit
exit
exit
exit

```

Configuring the Profile NF-pair NF-type

To configure the profile NF-pair NF-type, use the following configuration:

config

```

profile nf-pair nf-type nf_type_name
  locality client client_name
  locality preferred-server server_name
  locality geo-server server_name
end

```

NOTES:

- **profile nf-pair nf-type** *nf_type_name*—Specify NF (Network Function) type name.
- **locality client** *client_name*—Specify the locality name for the client.
- **locality preferred-server** *server_name*—Specify the server name as the preferred server locality.
- **locality geo-server** *server_name*—Specify the geographical location for the geo-server.



Note

Each endpoint-profile can contain multiple endpoints. Each endpoint contains defaultNotificationCallback under endpoint-name. So, instead of configuring primary and secondary within one endpoint, it is advisable to configure them under different endpoint names in an endpoint profile to ensure separate defaultNotificationCallback for each endpoint.

Configure Compliance Profile

Follow the steps to configure 3gpp spec compliance profile.

Procedure

- Step 1** Define the compliance profile.
profile compliance *compliance_profile_name*
- Step 2** Define the service name for which you want to configure the 3gpp compliance version.
service *service_name*
- Step 3** Configure the 3gpp spec version for the specified service.
version spec *3gpp_spec_version*
- Note**
AMF doesn't support runtime spec version changes in the configuration.
- Step 4** Save and commit the configuration.
-

Example

Following is an example configuration for the compliance profile:

```
profile compliance comp1
  service nlmf-loc
    version spec 18.6.0
  exit
  service namf-loc
    version spec 18.6.0
  exit
exit
profile compliance comp2
  service nlmf-loc
    version spec 16.4.0
  exit
  service namf-loc
    version spec 16.4.0
  exit
exit
```

Associate Compliance Profile with AMF Service

Follow the steps to associate the compliance profile with specific AMF service.

Procedure

- Step 1** Configure AMF Services.
amf-services *amf_services_name*

Step 2 Associate compliance profile with AMF Services.
compliance-profile *compliance_profile_name*

Step 3 Save and commit the configuration.

Configure MME Name and MME realm for AMF Services

Follow the steps to configure the mme-name and mme-realm for the AMF service.

Procedure

Step 1 Enter AMF services configuration mode.

amf-services *amf_service_name*

Step 2 Enter the peer MME TAI match command to initiate the configuration for a peer MME TAI match.

peer-mme tai-match

Step 3 Configure the priority value for the peer MME.

priority *priority_value*

Step 4 Configure the mobile country code (mcc) for the peer MME.

mcc *mcc_value*

Specify the three-digit Mobile Country Code. Must be an integer with three digits.

Step 5 Configure the mobile network country (mnc) for the peer MME.

mnc *mnc_value*

Specify the two or three-digit Mobile Country Network. Must be an integer with three digits.

Step 6 Configure the Tracking Area Code (TAC) for the peer MME.

tac *tac_value*

Specify the Tracking Area Code value. Must be an integer in the range of 1-65535.

Step 7 Configure the MME IP address for the peer MME.

address *mme_address*

Specify the Tracking Area Code value. Must be an integer in the range of 1-65535.

Step 8 Configure the MME name.

mme-name *mme_name*

Example:

mme-1.cisco.com

Step 9 Configure the MME realm.

```
mme-realm mme_realm
```

Example:

```
MME-realm.cisco.com
```

- Step 10** Save and commit the configuration.
-

Configure GMLC in Network Element Profile List

Follow the steps to configure GMLC network element profile under the operator policy configuration mode.

Procedure

- Step 1** Enter the AMF configuration mode.
- ```
config
```
- Example:**
- ```
[amf] amf# config
```
- Step 2** Access AMF Global Configuration.
- ```
amf-global
```
- Step 3** Specify the operator policy under the AMF global configuration.
- ```
operator-policy policy_name
```
- The operator policy defines specific rules and configurations that apply to the network elements under this policy. Replace *policy_name* with the actual name of the policy you want to configure.
- Step 4** Configure the Network Element Profile List under the Operator Policy.
- ```
network-element-profile-list gmlc gmlc_name
```
- The GMLC profile is used for location-based services.
- Step 5** Save and commit the configuration.
- 

## Configure GMLC Profile

Follow the steps to configure the GMLC profile with an NF client profile and a failure handling profile.

**Procedure**

---

- Step 1** Enter the AMF configuration mode.

**config****Example:**

```
[amf] amf# config
```

**Step 2** Enter Network Element Profile Configuration Mode for GMLC.

```
profile network-element gmlc gmlc_profile_name
```

This command creates or modifies a network element profile for the GMLC. This profile contains specific configurations for the GMLC.

**Step 3** Set the NF Client Profile

```
nf-client-profile nf_client_profile_name
```

This command sets the NF client profile to specified name.

**Step 4** Set the Failure Handling Profile.

```
failure-handling-profile failure_handling_profile_name
```

This command sets the failure handling profile to specified name. This is required only if specific failure handling mechanisms are needed. The failure handling profile defines how the system should respond to various types of failures, ensuring robustness and reliability.

**Step 5** Configure the query parameters for GMLC discovery.

```
query-params [target-plmn | client-type]
```

**Step 6** Save and commit the configuration.

## Configure Profile NF-pair NF-type

Follow the steps to configure the profile NF-pair NF-type.

### Procedure

**Step 1** Configure the network function pair profile name.

```
profile nf-pair nf-type nf_type_name
```

**Step 2** Configure the NRF discovery group.

```
nrf-discovery-group nrf_discovery_group_name
```

**Step 3** Configure locality for client.

```
locality client locality_client_name
```

**Step 4** Configure preferred server locality.

```
locality preferred-server locality_preferred_server_name
```

**Step 5** Configure Geo server locality.

**locality geo-server** *locality\_geo\_server\_name*

**Step 6** Enable cache invalidation by setting it to true.

**cache invalidation** **true**

**Step 7** Save and commit the configuration.

---

## Configure NF Client Profile for GMLC

Follow the steps to configure the NF client profile for GMLC. You need to create and associate this profile to GMLC.

### Procedure

---

**Step 1** Enter the AMF configuration mode.

**config**

**Example:**

```
[amf] amf# config
```

**Step 2** Create a NF Client Profile.

**profile nf-client nf-type gmlc**

**Step 3** Specify GMLC Profile.

**gmlc-profile** *gmlc\_profile\_name*

This GMLC profile is associated with the NF Client Profile.

**Step 4** Define a locality within the GMLC profile.

**locality** *locality\_name*

**Step 5** Set the priority for the specified locality.

**priority** *priority\_value*

**Step 6** Define the type of service name for the locality.

**service name type ngmlc-loc**

**Step 7** Specify the endpoint profile.

**endpoint-profile** *profile\_name*

**Step 8** Set the capacity for the specified endpoint profile.

**capacity** *capacity\_value*

**Step 9** Define the URI scheme to be used for the endpoint profile.

**uri-scheme** *uri\_scheme\_name*

- Step 10** Specify the endpoint name within the endpoint profile.  
**endpoint-name** *endpoint\_name*
- Step 11** Set the priority for the specified endpoint name.  
**priority** *priority\_value*
- Step 12** Set the capacity for the specified endpoint name.  
**capacity** *capacity\_value*
- Step 13** Configure the default notification subscription name for the specified endpoint name.  
**default-notification-subscriptions** *default\_notification\_subscriptions\_name*
- Step 14** Specify the notification-type for default notification subscription.  
**notification-type** *notification\_type*
- Step 15** Specify the callback-uri address.  
**callback-uri** *callback\_uri\_address*
- Step 16** Configure the primary IPV4 address for the endpoint.  
**primary ipv4-address** *ipv4\_address*
- Step 17** Configure the port number for the primary IP address.  
**primary ip-address port** *ipv4\_port\_number*
- Step 18** Save and commit the configuration.
- 

## Configure Failure Handling Profile for GMLC

Follow the steps to configure the Failure Handling profile for GMLC.

### Procedure

---

- Step 1** Enter the AMF configuration mode.  
**config**  
**Example:**  
[amf] amf# **config**
- Step 2** Create a NF Client Failure Handling Profile.  
**profile nf-client-failure nf-type gmlc**
- Step 3** Specify the failure handling profile to be used.  
**profile failure-handling** *failur\_hanling\_profile\_name*  
This GMLC profile is associated with the NF Client Profile.

- Step 4** Define the type of service name for the failure handling profile.  
**service name type** `ngmlc-loc`
- Step 5** Specify the message type for the failure handling profile.  
**message type** `NotifiedPosInfo`
- Step 6** Set the status code for the specified message type.  
**status-code** `status_codetype`
- Step 7** Set the number of retry attempts for the specified status code.  
**retry** `retry_count`
- Step 8** Set the number of retransmission attempts for the specified status code.  
**retransmit** `retransmit_count`
- Step 9** Set the interval between retransmission attempts.  
**retransmit-interval** `retransmit_interval`
- Step 10** Specify the action to be taken when the specified status code is encountered.  
**action** `retry-and-ignore` indicates that the system retries the operation and then ignore the failure if it persists.
- Step 11** Save and commit the configuration.
- 

## OAM Support

This section describes operations, administration, and maintenance support for this feature.

## Bulk Statistics Support

The following statistics are supported for the MTLR Location Services feature.

### LMF STATS Under `nl1_service_stats`

Following are the LMF STATS records under `nl1_service_stats`.

| Messages            | Metrics Message Type                                                                                                                |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Determine Req & Rsp | NlmfDetermineLocReq<br>NlmfDetermineLocRsp                                                                                          |
| N1N2MessageTransfer | NlmfN1N2MessageTransferReq<br>NlmfN1N2MessageTransferRsp<br>NlmfNonUEN2MessageTransferRequest<br>NlmfNonUEN2MessageTransferResponse |

| Messages                  | Metrics Message Type                                                                                                 |
|---------------------------|----------------------------------------------------------------------------------------------------------------------|
| N1 Message Notify         | NlmfN1MessageNotifyRequest<br>NlmfN1MessageNotifyResponse                                                            |
| N2 Message Notify         | NlmfN2InfoNotifyRequest<br>NlmfN2InfoNotifyResponse<br>NlmfNonUEN2InfoNotifyRequest<br>NlmfNonUEN2InfoNotifyResponse |
| N1N2 Failure Notification | NlmfN1N2MessageTransferfailurenotifyReq<br>NlmfN1N2MessageTransferfailurenotifyRsp                                   |

Following are the examples of stats output:

- `nl1_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="0",message_type="NlmfN1N2MessageTransferReq",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="success"} 2`
- `nl1_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="2",message_type="NlmfN1N2MessageTransferReq",reason="Invalid Input",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="failures"} 2`
- `nl1_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="2",message_type="NlmfN1N2MessageTransferReq",reason="Invalid LCS Correlation ID",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="failures"} 3`
- `nl1_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="2",message_type="NlmfN1N2MessageTransferfailurenotifyReq",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="success"} 3`
- `nl1_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="2",message_type="NlmfN1N2MessageTransferfailurenotifyRsp",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="success"} 3`
- `nl1_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="0",message_type="NlmfNonUEN2MessageTransferRequest",reason="",roaming_status="",service_name="amf-service",slice_data="",status="success"} 1`

### GMLC STATS Under nl2\_service\_stats

Following are the GMLC STATS records under nl2\_service\_stats for MT-LR.

| Messages                   | Metrics Message Type                                          |
|----------------------------|---------------------------------------------------------------|
| Provide position Req & Rsp | NgmlcRequestPositioningInfo<br>NgmlcProvidePositioningInfoRsp |

Following is the example of stats output:

```
nl2_service_stats{app_name="AMF",cluster="clul",data_center="dc1",instance_id="0",message_type="NgmlcProvidePositioningInfoRsp",reason="",roaming_status="HOMER",service_name="amf-service",slice_data="_2-333333",status="success"} 1
```



Following are the GMLC STATS records under nl2\_service\_stats for NI-LR.

| Messages                  | Metrics Message Type                               |
|---------------------------|----------------------------------------------------|
| Namf_Location_EventNotify | NgmlcNotifiedPosInfoReq<br>NgmlcNotifiedPosInfoRsp |

### NGAP Service Stats Under n2\_service\_stats

Following are the NGAP service stats records under n2\_service\_stats

| Messages             | Metrics Message Type                                                                                                               |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------|
| NRPPA based messages | DIUeAssociatedNRPPaTransport<br>UIUeAssociatedNRPPaTransport<br>DINonUeAssociatedNRPPaTransport<br>UINonUeAssociatedNRPPaTransport |

Following is the example of stats output:

```
n2_service_stats{app_name="AMF",cluster="clu1",data_center="dc1",instance_id="0",
message_type="DIUeAssociatedNRPPaTransport",reason="",roaming_status="HOMER",
service_name="amf-service",slice_data="_2-333333",status="success"} 1

n2_service_stats{app_name="AMF",cluster="clu1",data_center="dc1",instance_id="0",
message_type=" DINonUeAssociatedNRPPaTransport ",reason="", roaming_status="",
service_name="amf-service",
slice_data="",status="success"} 1
```

### Nas Message Total

Location service based UplinkNasTransport and DownlinkNasTransport is recorded under message type N1DINasTransport\_LPP, N1UINasTransport\_LPP.

Following is the example of stats output:

```
amf_nas_message_total{app_name="AMF",cluster="clu1",data_center="dc1",instance_id="0",
message_direction="outbound",message_type="N1DlNasTransport_LPP",
service_name="amf-service",slice_data="_2-333333"} 2
```





## CHAPTER 31

# Low Mobility Handover (Xn/N2)

- [Feature Summary and Revision History, on page 331](#)
- [Feature Description, on page 331](#)
- [How It Works, on page 332](#)

## Feature Summary and Revision History

### Summary Data

**Table 106: Summary Data**

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

**Table 107: Revision History**

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.01.0 |

## Feature Description

The low mobility handover feature supports the following functions:

- Handover cancel for N2 without AMF change
- Handover cancel for N2 with source and target AMF change

- Handover failure procedure with and without AMF change

AMF doesn't support the following:

- Collision
- Non-3GPP access
- Trace
- Event subscription
- PCF interactions

## How It Works

This section describes how this feature works.

## Call Flows

This section describes the key call flows for this feature.

### N2 Handover Cancel Call Flow

This section describes the N2 Handover cancel call flow.

The source NG-RAN sends the Handover Cancel Request to the source AMF, before sending the Handover command to the UE.

It sends this request when it observes the following:

- Timer expiry
- Internal failure within the source NG-RAN
- UE return to source cell

The Handover Cancel Request releases the handover reserved resources in the target system.

Figure 42: N2 Handover Cancel Call Flow

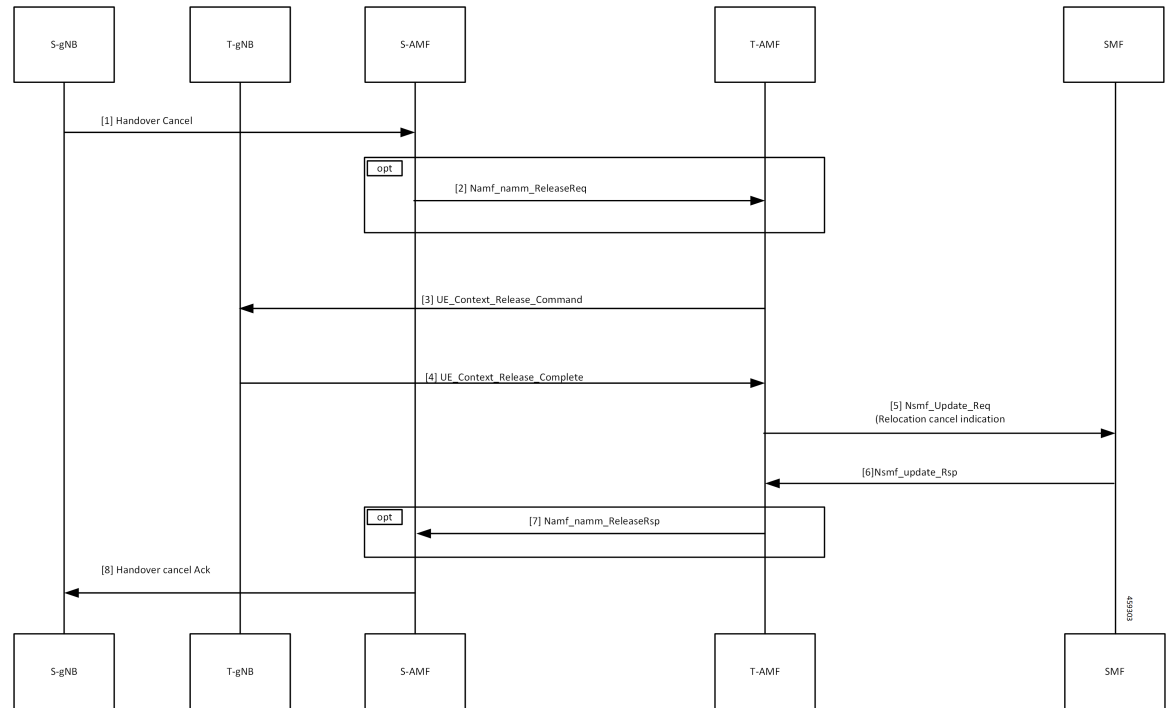


Table 108: N2 Handover Cancel Call Flow Description

| Step | Description                                                                                                            |
|------|------------------------------------------------------------------------------------------------------------------------|
| 1    | The S-gNB (source gNB) sends the Handover Cancel to the S-AMF (source AMF).                                            |
| 2    | The S-AMF sends the Namf_Comm_ReleaseReq to the T-AMF (target AMF).                                                    |
| 3, 4 | The T-AMF sends the UE Context Release Command to the T-gNB (target gNB) and receives the UE Context Release Complete. |
| 5    | The T-AMF sends the Relocation Cancel Indication (Nsmf_Update_Req) to the SMF.                                         |
| 6    | The SMF sends Nsmf_update_Rsp to the T-AMF.                                                                            |
| 7    | The S-AMF receives Namf_Comm_ReleaseRsp from the T-AMF.                                                                |
| 8    | The S-AMF sends Handover Cancel ACK to the S-gNB.                                                                      |





## CHAPTER 32

# Mobile Equipment Identity Check Procedures

- [Feature Summary and Revision History, on page 335](#)
- [Feature Description, on page 335](#)
- [How it Works, on page 336](#)

## Feature Summary and Revision History

### Summary Data

*Table 109: Summary Data*

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

*Table 110: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

## Feature Description

The AMF initiates the Mobile Equipment (ME) Identity Check procedures in case of authentication failure and unknown GUTI registration.

# How it Works

This section describes how this feature works.


## Call Flows

This section describes the key call flows for this feature.

### UE Identity Procedure for Authentication Failure Call Flow

The section describes the UE Identity Procedure for Authentication Failure call flow.

**Figure 43: UE Identity Procedure for Authentication Failure Call Flow**

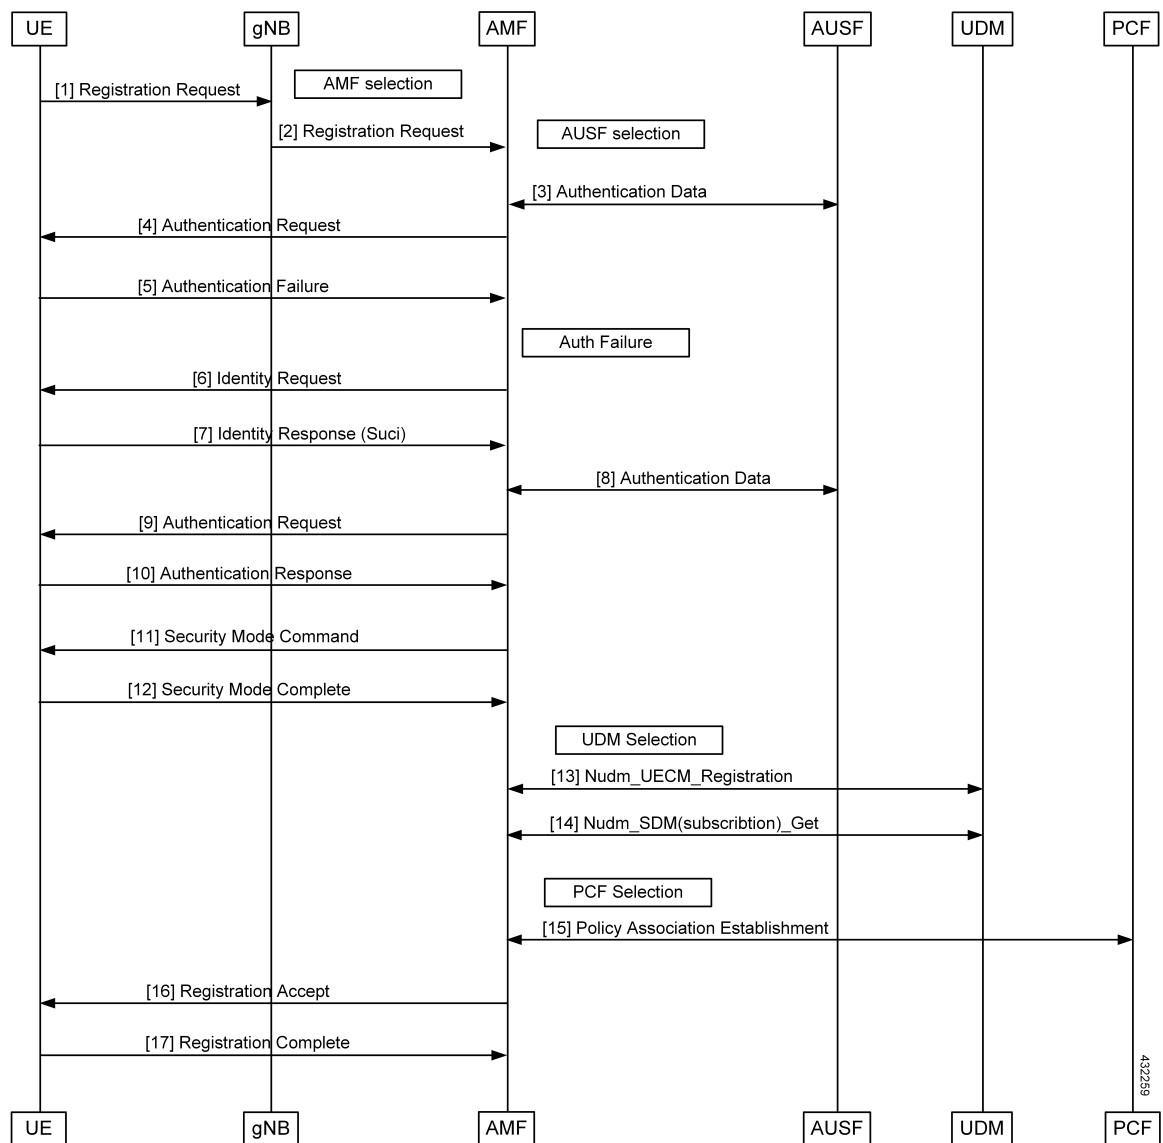




**Table 111: UE Identity Procedure for Authentication Failure Call Flow Description**

| Step | Description                                                                                                                                                                                                                                                                                                                                                                           |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE that wants to register itself with the 5G core sends the Registration Request N1 message towards AMF.                                                                                                                                                                                                                                                                          |
| 2    | The gNB selects an AMF and forwards the Registration Request message to AMF.                                                                                                                                                                                                                                                                                                          |
| 3    | The AMF selects an AUSF based on the PLMN information through NRF query or through static configuration. The AMF fetches authentication data from AUSF for the UE.                                                                                                                                                                                                                    |
| 4    | The AMF sends the Authentication Request message to the UE to initiate authentication of the UE identity.                                                                                                                                                                                                                                                                             |
| 5    | Upon failure of authentication, the AMF will trigger Identity Request towards the UE and request for an UE identity. Authentication will be proceeded with the new UE identity.                                                                                                                                                                                                       |
| 6    | The UE sends the Identity Request message to the AMF.                                                                                                                                                                                                                                                                                                                                 |
| 7    | The UE responds with its SUCI in the Identity Response message to the AMF.                                                                                                                                                                                                                                                                                                            |
| 8    | The AMF extracts fresh authentication data from AUSF using the SUCI of the subscriber.                                                                                                                                                                                                                                                                                                |
| 9    | The AMF sends Authentication Request to the UE to initiate authentication of the UE identity.                                                                                                                                                                                                                                                                                         |
| 10   | The UE sends Authentication Response to the AMF to deliver a calculated authentication response to the network. The AMF verifies the result received and if the result is as expected, then the registration procedure is proceeded.                                                                                                                                                  |
| 11   | The NAS security initiation is performed.                                                                                                                                                                                                                                                                                                                                             |
| 12   | Upon completion of NAS security function setup, the AMF initiates NGAP procedure to provide the 5G-AN with security context. The 5G-AN stores the security context and acknowledges to the AMF. The 5G-AN uses the security context to protect the messages exchanged with the UE.                                                                                                    |
| 13   | The AMF selects an UDM based on the PLMN information through NRF query or through static configuration and registers the UE with the UDM using Preregistration. The UDM stores the AMF identity associated to the Access Type.                                                                                                                                                        |
| 14   | The AMF retrieves the Access and Mobility Subscription data using Misjudgement. The AMF subscribes to be notified using Nudm_SDM_Subscribe when the data requested is modified.                                                                                                                                                                                                       |
| 15   | The AMF selects the PCF based on PLMN-info and slice-info, and performs a Policy Association Establishment. The PCF sends policy data to the AMF with restrictions and other policies to be applied for the UE. Currently the policies are not applied for the UE and are just stored in the AMF.                                                                                     |
| 16   | The AMF sends a Registration Accept message to the UE indicating that the Registration Request has been accepted. Registration Accept contains these parameters - 5G-GUTI, Registration Area, Mobility restrictions, PDU Session status, Allowed NSSAI, Configured NSSAI for the Serving PLMN, Periodic Registration Update timer, Emergency Service Support indicator, Accepted DRX. |
| 17   | The UE sends a Registration Complete message to the AMF to acknowledge that a new 5G-GUTI was assigned.                                                                                                                                                                                                                                                                               |

## UE Identity Procedure for Unknown GUTI Registration Call Flow

This section describes the UE Identity procedure for unknown GUTI registration call flow.

**Figure 44: UE Identity Procedure for Unknown GUTI Registration Call Flow**

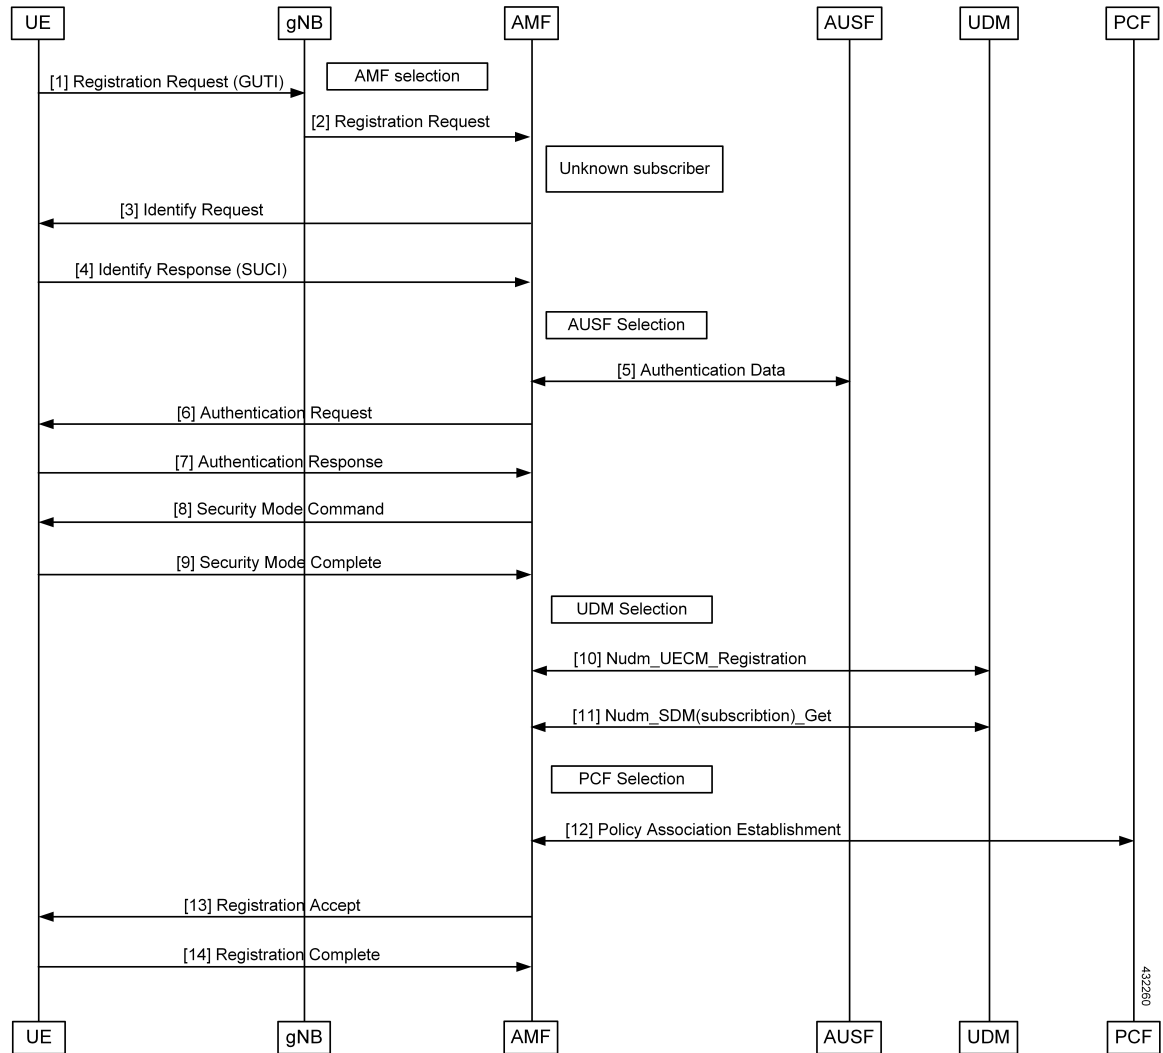

**Table 112: UE Identity Procedure for Unknown GUTI Registration Call Flow Description**

| Step | Description                                                                                                                                                                                               |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | When Registration Request is received with unknown GUTI, AMF triggers the Identity Request towards the UE and request for an UE identity. The registration is proceeded with the new UE identity.         |
| 2    | During the registration procedure, the AMF determines that the received GUTI is of the subscriber and not present in the AMF. In such cases, AMF triggers the Identity Request to UE asking for its SUCI. |
| 3    | The UE sends the Identity Request message to the AMF.                                                                                                                                                     |

| Step | Description                                                                                                                                                                                                                                                                                                                                                                           |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4    | The UE responds with its SUCI in the Identity Response message to the AMF.                                                                                                                                                                                                                                                                                                            |
| 5    | The AMF extracts fresh authentication data from the AUSF using the SUCI of the subscriber.                                                                                                                                                                                                                                                                                            |
| 6    | The AMF sends Authentication Request to the UE to initiate authentication of the UE identity.                                                                                                                                                                                                                                                                                         |
| 7    | The UE sends Authentication Response to the AMF to deliver a calculated authentication response to the network. The AMF verifies the result received and if the result is as expected, then the registration procedure is proceeded.                                                                                                                                                  |
| 8    | The NAS security initiation is performed.                                                                                                                                                                                                                                                                                                                                             |
| 9    | Upon completion of the NAS security function setup, the AMF initiates NGAP procedure to provide 5G-AN with security context. The 5G-AN stores the security context and acknowledges the AMF. The 5G-AN uses the security context to protect the messages exchanged with the UE.                                                                                                       |
| 10   | The AMF selects an UDM based on the PLMN information through NRF query or through static configuration, and registers the UE with the UDM using Nudm_UECM_Registration. The UDM stores the AMF identity associated to the Access Type.                                                                                                                                                |
| 11   | The AMF retrieves the Access and Mobility Subscription data using Nudm_SDM_Get. The AMF subscribes to be notified using Nudm_SDM_Subscribe when the data requested is modified.                                                                                                                                                                                                       |
| 12   | The AMF selects the PCF based on PLMN-info and slice-info, and performs a Policy Association Establishment. The PCF sends policy data to the AMF with restrictions and other policies to be applied for the UE. Currently the policies are not applied for the UE and are just stored in the AMF.                                                                                     |
| 13   | The AMF sends a Registration Accept message to the UE indicating that the Registration Request has been accepted. Registration Accept contains these parameters - 5G-GUTI, Registration Area, Mobility restrictions, PDU Session status, Allowed NSSAI, Configured NSSAI for the Serving PLMN, Periodic Registration Update timer, Emergency Service Support indicator, Accepted DRX. |
| 14   | The UE sends a Registration Complete message to the AMF to acknowledge that a new 5G-GUTI was assigned.                                                                                                                                                                                                                                                                               |





## CHAPTER 33

# Mutual TLS (mTLS) Support and Validation

- [Feature Summary and Revision History, on page 341](#)
- [Feature Description, on page 342](#)
- [How it Works, on page 342](#)
- [Server Configuration in AMF, on page 343](#)
- [Client Configuration in AMF, on page 344](#)

## Feature Summary and Revision History

### Summary Data

**Table 113: Summary Data**

|                                        |                                                                                         |
|----------------------------------------|-----------------------------------------------------------------------------------------|
| Applicable Products or Functional Area | AMF                                                                                     |
| Applicable Platforms                   | SMI                                                                                     |
| Feature Default Setting                | Disabled – Configuration required to enable                                             |
| Related Documentation                  | For related information, see the <i>TLS Transport Support</i> chapter in this document. |

### Revision History

**Table 114: Revision History**

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.04.0 |

# Feature Description

The AMF supports the mutual TLS secure channel for SBI interfaces. With the mTLS Support for SBI interfaces, the AMF performs the following:

- Handles mutual TLS requests from the server and the client
- Supports HTTP2 over the TLS secure channel for all NF interfaces

This feature also supports in generating alarms when the certificates expire within a configured threshold period.

## Relationships

The mTLS support for SBI interfaces feature has the relationship with TLS transport support feature. The following are the roles associated with the AMF:

- [Server Configuration in AMF, on page 343](#)
- [Client Configuration in AMF, on page 344](#)

For related information, see the *TLS Transport Support* chapter in this document.

## Prerequisites

The mTLS Support for SBI interfaces feature has the following prerequisite:

- The user must procure and configure the following:
  - Certificate Authority (CA) certificates
  - Other certificates or keys necessary for the server and the client
- For more information on the following topics, see the *TLS Transport Support* chapter in this document.
  - For the client, and the server certificate configuration
  - For the ca-certificate configuration
  - For uri-scheme https, in the profile nf-client configuration

## How it Works

This section describes how this feature works. It has the following synopsis:

- The TLS protocol is used for transport layer protection.
- The AMF supports TLS versions 1.2 and 1.3 for all inbound and outbound HTTPS, and outbound TCP transport.
- The AMF supports enabling mutual TLS for the SBI endpoint.

## Limitations

This feature has the following limitations:

- The mTLS secure channel support feature for the AMF provides transport layer encryption between nodes for security compliance purposes only.
- The AMF doesn't support NF security requirements as per 3GPP specifications of 5G.
- The AMF supports L1-X1 over the UDP in Cisco format only. As a result, the AMF doesn't support the mTLS on the L1-X1 interface.
- The AMF doesn't support dynamic mTLS CLI change configuration.

## Server Configuration in AMF

The AMF acts as the server for all peer NFs over the SBI interface.

The SBI interface servers characteristics are determined by **instance instance-id endpoint sbi** configurations.

The server certificates get configured at the SBI endpoint.

## Feature Configuration

To configure this feature, use the following configuration:

```
config
 instance instance-id instance_id
 endpoint sbi
 uri-scheme {http | https}
 mtls-enable {false | true}
 certificate-name certificate_name
 end
```

### NOTES:

- **instance instance-id instance\_id**—Specify the instance ID.
- **endpoint sbi**—Specify the endpoint as *sbi*.
- **uri-scheme {http | https}**—Specify the uri-scheme as https. The default value is http.
- **mtls-enable {false | true}**—Specify the mTLS configuration as either true or false.
- **certificate-name certificate\_name**—Specify the certificate name for the server which is used by AMF for HTTPS messages. The list of certificate names is obtained from the **nf-tls** command.

## Configuration Example

The following is an example configuration.

```
config
 instance instance-id 1
 endpoint sbi
 uri-scheme https
```

```

mtls-enable true
certificate-name serv-cert
exit
exit
exit

```

## Configuration Verification

To verify the configuration, use the following command:

```
amf# show running-config instance instance-id 1 endpoint sbi
```

## Client Configuration in AMF

The AMF acts as client-to-peer NFs while sending notifications or updates. The characteristics of the client configurations are determined by using the **endpoint-profile** configuration. The server name gets configured, when the URI scheme is in a secured (HTTPS) environment for locally configured NF profiles and NRF-related configurations.

## Feature Configuration

To configure this feature, use the following configuration. The following commands help in enabling the mTLS option along with the server name at the NF and NRF-related configurations:

```

config
 profile nf-client
 nf-type ausf
 ausf-profile AUP1
 locality LOC1
 service type nausf-auth
 endpoint-profile ep_profile_name
 type EP1
 locality LOC1
 uri-scheme https
 server-name server_name
 group nrf
 mgmt MGMT_name
 service type nrf nnrf-nfm
 endpoint-profile ep_profile_name
 name mgmt-prof
 uri-scheme https
 server-name server_name
 group nrf
 discovery udmdiscovery
 service type nrf nnrf-disc
 endpoint-profile ep_profile_name
 name EP1
 uri-scheme https
 server-name server_name
 end

```

NOTES:



- **profile nf-client nf-type ausf ausf-profile AUP1**—Specify the required NF client profiles and provide the local configuration.
- **service type nausf-auth | service type nrf nnrf-nfm | service type nrf nnrf-disc**—Specify the service names as per the 3GPP standards.
- **group nrf mgmt MGMT\_name**—Specify the NRF self-management group configurations.
- **instance instance-id instance\_id**—Specify the instance ID.
- **endpoint-profile ep\_profile\_name**—Specify the endpoint-profile name.
- **uri-scheme {http | https}**—Specify the uri-scheme as https. The default value is http.
- **server-name server\_name**—Specify the **DNS name** (FQDN) of the peer NF and the **server-name** must match the DNS attribute of the **subjectAltName** field in the peer NF certificates.

## Configuration Example

The following is an example configuration.

```
config
group nrf mgmt MGMT
 service type nrf nnrf-nfm
 endpoint-profile
 name mgmt-prof
 uri-scheme https
 server-name server_name
 endpoint-name mgmt-1
 primary ip-address ipv4 209.165.201.1
 primary ip-address port 9051
 exit
exit
exit
exit
profile nf-client nf-type ausf
 ausf-profile AUP1
 locality LOC1
 priority 30
 service name type nausf-auth
 endpoint-profile EP1
 capacity 30
 uri-scheme https
 server-name server_name
 endpoint-name EP1
 priority 56
 primary ip-address ipv4 209.165.201.1
 primary ip-address port 9047
 exit
exit
exit
exit
exit
exit
```

## Configuration Verification

To verify the configuration, use the following command:

```
amf(config)# show full-configuration profile
```





## CHAPTER 34

# N1N2 Message Transfer

- [Feature Summary and Revision History, on page 347](#)
- [Feature Description, on page 348](#)
- [How it Works, on page 348](#)

## Feature Summary and Revision History

### Summary Data

**Table 115: Summary Data**

|                                          |                                                                                                                   |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Applicable Product(s) or Functional Area | AMF                                                                                                               |
| Applicable Platform(s)                   | SMI                                                                                                               |
| Feature Default Setting                  | Enabled - Always-on<br>SMS over the Non-Access Stratum Procedures:<br>Enabled - Configuration required to disable |
| Related Documentation                    | Not Applicable                                                                                                    |

### Revision History

**Table 116: Revision History**

| Revision Details                                      | Release   |
|-------------------------------------------------------|-----------|
| Introduced ability to send SMS over the NAS procedure | 2022.01.0 |
| First introduced.                                     | 2021.04.0 |

# Feature Description

The NF service consumer uses the N1N2MessageTransfer service operation to transfer N1 or N2 information, or both to the UE or 5G-AN, or both.

AMF now supports the following procedures:

- Network triggered Service Request
- PDU Session Establishment
- PDU Session Modification
- PDU Session Release
- Session continuity, service continuity, and UP path management
- Inter NG-RAN node N2 based handover
- SMS over NAS
- UE assisted and UE-based positioning
- Network assisted positioning
- UE Configuration Update for transparent UE policy delivery



---

**Note** AMF only supports SM messages.

---

## How it Works

This section describes how this feature works.

## Call Flows

This section describes the key call flows for this feature.

### N1N2 Message Transfer Request Call Flow

This section describes the N1N2 Message Transfer Request call flow.

Figure 45: N1N2 Message Transfer Request Call Flow

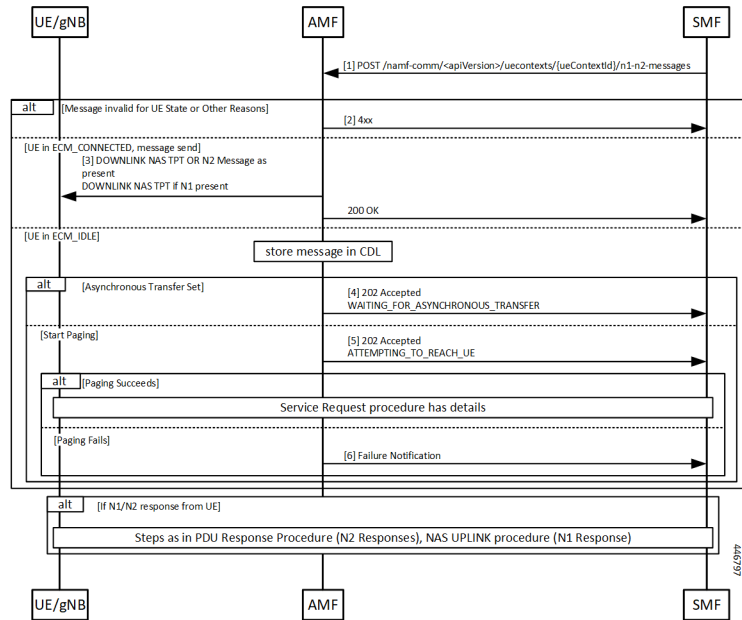


Table 117: N1N2 Message Transfer Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                    |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The peer node sends an N1N2MessageTransfer Request Call Flow message to the AMF.                                                                                                                                                                                                                                                                                                               |
| 2    | AMF checks if the message is acceptable. If there's an exception, the AMF rejects the message with an appropriate cause code.                                                                                                                                                                                                                                                                  |
| 3    | If the UE is in ECM_CONNECTED state, AMF forwards the message to the UE or gNB. The N2 message received from the peer node determines the N2 message type. If there's a N1 message, it's sent as a payload to the N2 message. AMF then responds with a 200 OK to the peer node.                                                                                                                |
| 4    | If the UE is in ECM_IDLE state and the Asynchronous Transfer flag is set, AMF stores the message in a known location in CDL. AMF adds the location header to the response and a 202 response is sent with WAITING_FOR_ASYNCHRONOUS_TRANSFER as a diagnostic. The saved message is sent to the UE as the UE transitions to ECM_CONNECTED. The AMF doesn't page the UE in this case.             |
| 5    | If the UE is in ECM_IDLE state and the SkipInd flag is set in the received N1N2TransferReq message, AMF skips sending the N1 message to UE. AMF sends a 200 OK response with N1_MSG_NOT_TRANSFERRED as a diagnostic. The message isn't sent to the UE as the UE transitions to ECM_CONNECTED and paging isn't done in this scenario.                                                           |
| 6    | If the UE is in ECM_IDLE and the Asynchronous Transfer flag isn't set, AMF stores the message in a known location. AMF adds the location header to the response and a 202 response is sent with ATTEMPTING_TO_REACH_UE as a diagnostic. The saved message is sent to the UE as the UE transitions to ECM_CONNECTED.<br><br>If paging fails, AMF sends a Failure Notification to the peer node. |





## CHAPTER 35

# N2 Handover Procedure

- [Feature Summary and Revision History, on page 351](#)
- [Feature Description, on page 351](#)
- [N2 Handover without AMF Change, on page 352](#)
- [N2 Handover with AMF Change, on page 353](#)

## Feature Summary and Revision History

### Summary Data

*Table 118: Summary Data*

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

*Table 119: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

## Feature Description

This feature supports the following:

- N2 handover without AMF change

- N2 handover with AMF change

## N2 Handover without AMF Change

### Feature Description

For N2 handover without AMF change, the UE uses the source gNB to trigger the handover. The message from the source gNB has the ID of the target gNB.

### How it Works

This section describes how this feature works.

### Call Flows

This section describes the key call flows for this feature.

#### N2 Handover without AMF Change Call Flow

This section describes the N2 Handover without AMF Change call flow.

**Figure 46: N2 Handover without AMF Change Call Flow**

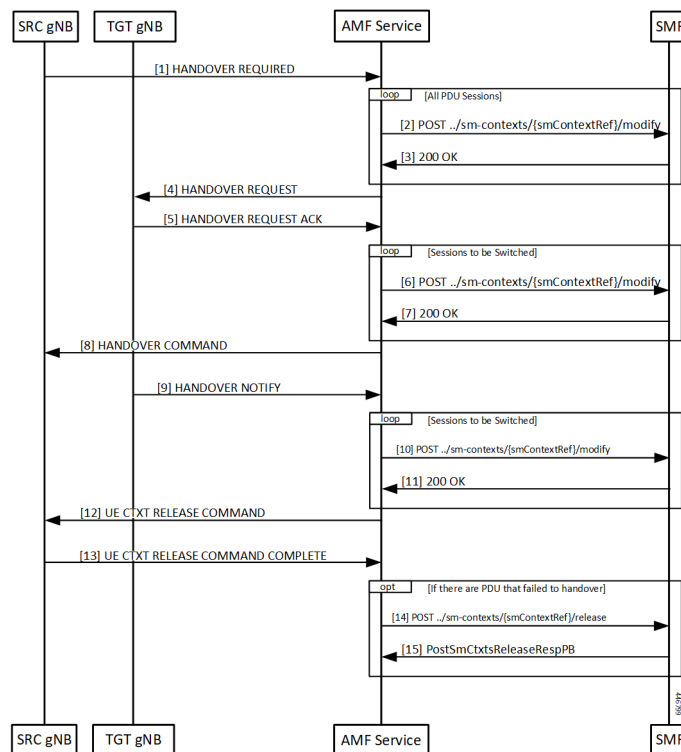




Table 120: N2 Handover without AMF Change Call Flow Description

| Step | Description                                                                                                                                                                             |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | With signaling from the UE, the source gNB starts the handover procedure by sending a HANDOVER REQUIRED message to the AMF.                                                             |
| 2    | The AMF finds a gNB that can support the signaled TargetId from the gNB. AMF rejects the message when it can't find gNB. The AMF creates a ModificationRequest and sends it to the SMF. |
| 3    | The SMF analyzes the TargetID and takes appropriate actions. The SMF then responds.                                                                                                     |
| 4    | The AMF finds the gNB corresponding to the Target ID, and the NGAP EP that serves that gNB. The AMF then sends a handover required message to the target gNB.                           |
| 5    | Target gNB sets up the resources required for the handover and responds with an ACK message. This ACK message contains the PDU resources that failed to setup as well.                  |
| 6    | The AMF constructs a Sm Context Modify message to update the target gNB tunnel endpoint IDs to the SMF. The AMF starts a guard timer and forwards the message to the SMF.               |
| 7    | The SMF updates the information in associated UPFs and responds to the AMF.                                                                                                             |
| 8    | The AMF builds a HandoverCommand message and sends it to the source gNB.                                                                                                                |
| 9    | The UE now completes the handover at the target gNB. The target gNB sends a HANDOVER NOTIFY message to the AMF.                                                                         |
| 10   | The AMF constructs a Sm Context Modify request to inform the SMF that the handover is complete.                                                                                         |
| 11   | SMF responds to the update.                                                                                                                                                             |
| 12   | The Handover procedure ends. The source gNB receives a UE context release command.                                                                                                      |
| 13   | If there are PDU sessions that fail to setup at the target gNB are now released at the SMF.                                                                                             |

## N2 Handover with AMF Change

### Feature Description

AMF supports N2 handover whenever there's a change in AMF.

#### Unsupported Scenarios

The following scenarios aren't supported:

- Handover cancelation
- Secondary RAT usage data signaling
- Timeouts from SMF
- Suspend/resume of running procedures

- Handover restrictions
- Service area restrictions
- S-NSSAI checks
- Tracing requirements
- PCF reselection

## How it Works

This section describes how this feature works.

## Call Flows

This section describes the key call flows for this feature.

### N2 Handover with AMF Change Call Flow

This section describes the N2 Handover with AMF change call flow.

This call flow is similar to the N2 Handover without AMF change except the creation of the context on the new AMF and splitting up of the steps between the two nodes.

Figure 47: N2 Handover with AMF Change Call Flow


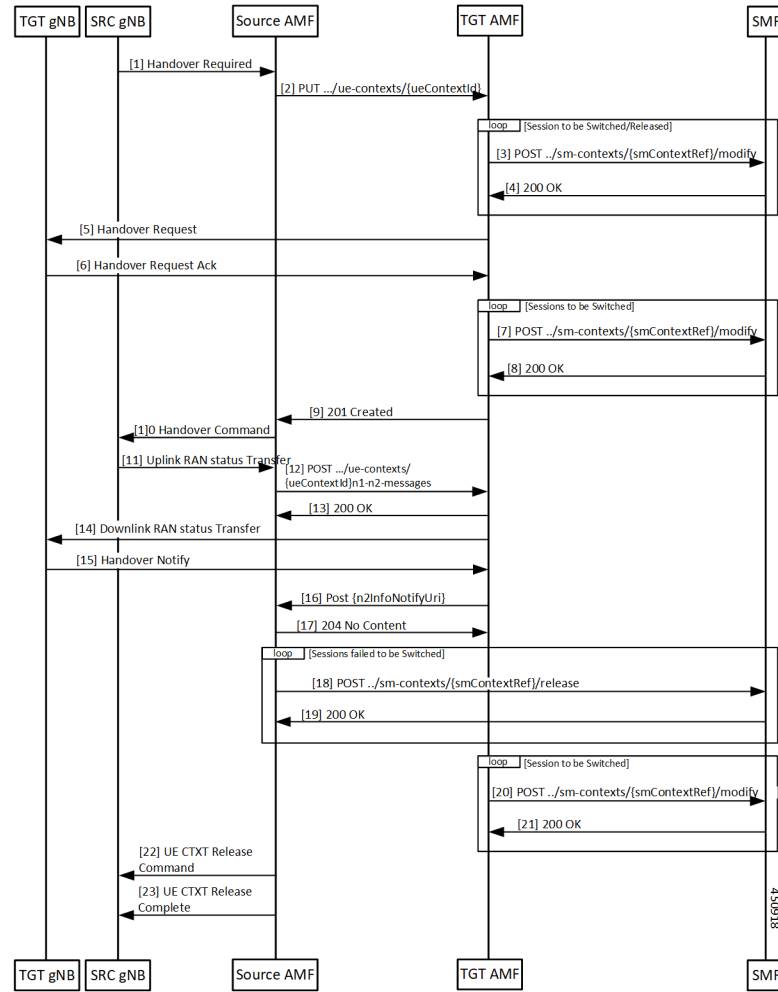


Table 121: N2 Handover with AMF Change Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The source gNB sends a HANDOVER REQUIRED message to the AMF.                                                                                                                                                                                                                                               |
| 2    | <p>The AMF analyses the target identifier and recognizes that it's not a target it serves.</p> <p>The AMF selects a new AMF to serve the UE and sends it a CreateUE Context message.</p> <p><b>Note</b><br/>In the CreateUE Context message, ncc remains absent, in the instance, when the value is 0.</p> |
| 3    | <p>The target AMF receives the message and verifies that it can serve the UE.</p> <p>For each PDU session that must be handed over, the AMF sends a Modify SM Context message to the SMF.</p>                                                                                                              |

| Step | Description                                                                                                                                                                                                                                                                                            |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4    | The SMF does all the necessary procedures that are required to handle the UE in the new target and responds to the AMF.                                                                                                                                                                                |
| 5    | The target AMF identifies the gNB that is going to handle the UE and sends a HANDOVER REQUEST to the gNB.                                                                                                                                                                                              |
| 6    | Once the necessary resources are allocated by the target gNB, the target gNB responds with a HANDOVER REQUEST ACK.                                                                                                                                                                                     |
| 7    | The AMF updates the SMF with the message transfer IE in the gNB.                                                                                                                                                                                                                                       |
| 8    | The SMF responds to the requests in the AMF.                                                                                                                                                                                                                                                           |
| 9    | The target AMF responds to the source AMF and includes any Target to Source container in the response.<br><br>This response also includes any PDU sessions that have failed to set up in the target AMF due to any condition.                                                                          |
| 10   | The source AMF sends a HANDOVER COMMAND to the source gNB.                                                                                                                                                                                                                                             |
| 11   | The handover completes in the UE and the target gNB sends a HANDOVER NOTIFY to the target AMF.                                                                                                                                                                                                         |
| 12   | The target AMF indicates receipt of the HANDOVER NOTIFY to the source AMF.<br><br>This causes the source AMF to start a timer the expiry of which leads to the release of resources in the source gNB.                                                                                                 |
| 13   | The source AMF responds to the target.                                                                                                                                                                                                                                                                 |
| 14   | The source AMF clears any PDU sessions that have failed to set up at the target.                                                                                                                                                                                                                       |
| 15   | The SMF responds to the release request in the source AMF.                                                                                                                                                                                                                                             |
| 16   | The target AMF update the SMF on the completion of the handover.                                                                                                                                                                                                                                       |
| 17   | The SMF acknowledges the message in the AMF.                                                                                                                                                                                                                                                           |
| 18   | When the timer expires for clearing of resources (or eventually when the UDM notifies the source that the registration for UECM isn't valid), the source AMF releases resources both locally and at the gNB.<br><br>The AMF releases the resources at the gNB by sending a UE CONTEXT RELEASE COMMAND. |
| 19   | The source gNB responds with a UE CONTEXT RELEASE COMPLETE message.                                                                                                                                                                                                                                    |

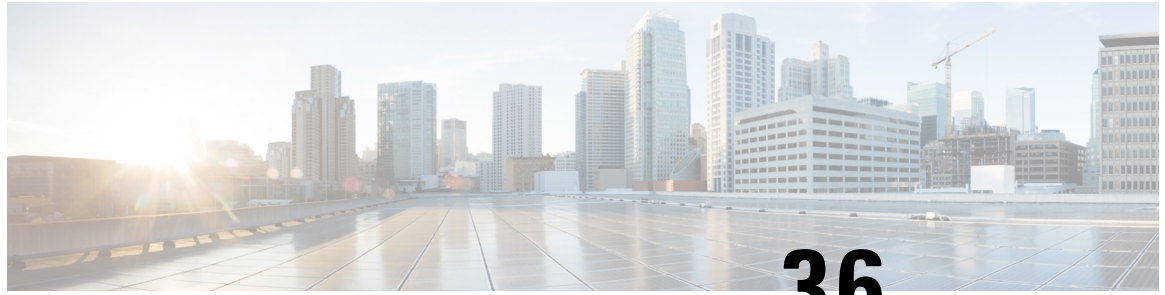

# CHAPTER 36

## N26 Stack Integration Support

- [Feature Summary and Revision History, on page 357](#)
- [Feature Description, on page 357](#)
- [UDP Proxy and GTPC Endpoint, on page 358](#)
- [EBI Allocation and Reallocation Support, on page 358](#)

### Feature Summary and Revision History

#### Summary Data

Table 122: Summary Data

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

#### Revision History

Table 123: Revision History

| Revision Details  | Release |
|-------------------|---------|
| First introduced. | 2020.04 |

### Feature Description

This feature supports the following:

- UDP Proxy and GTPC Endpoint

- EBI Allocation and Reallocation Support

# UDP Proxy and GTPC Endpoint

## Feature Description

AMF supports interworking procedures to work with EPS. The procedures use the GTP-C based N26 interface between AMF and MME. Interworking procedures with N26 provides IP address continuity on inter-system mobility to UEs that support 5GC NAS and EPS NAS and operate in single registration mode. Interworking procedures using the N26 interface enables the exchange of MM and SM states between the source and target network.

To support N26 interface, AMF needs to support UDP proxy and GTPC Endpoint.

- **UDP Proxy:** Single instance of UDP proxy running on the system. UDP proxy receives/sends the UDP packets to/from GTPC Endpoint.
- **GTPC Endpoint:** The GTPC Endpoint (GTPC EP) POD handles the GTPC messages between AMF and MME. In order to enable interworking between EPC and the NG core, N26 interface is used as an inter-CN interface between the MME and 5GS AMF.

# EBI Allocation and Reallocation Support

## Feature Description

AMF supports assigning EBI service for the requests received from NF consumer service. Also, partial fulfillment of requests is supported. When no resources are available on AMF, the request are rejected by AMF

## Standard Compliance

- 3GPP TS 23.502 version 15.5.1 Release 15, Section 4.11.1.4
- 3GPP TS 29.518 version 15.4.0 Release 15, Sections 5.2.2.6, 6.1.3.2.4.3

## Limitations

In this release, priority-based eviction of already assigned EBI is not supported.

## How it Works

This section describes how this feature works.

## Call Flows

This section describes the key call flow of EBI Allocation and Reallocation Support feature.

The EBIAssignment service operation is used during the following procedures (see 3GPP TS 23.502 [3], clause 4.11.1.4):


- UE requested PDU Session Establishment including Request Types **Initial Request** and **Existing PDU Session** (Non-roaming and Roaming with Local Breakout (see 3GPP TS 23.502 [3], Section 4.3.2.2.1).
- UE requested PDU Session Establishment including Request Types **Initial Request** and **Existing PDU Session** (Home-routed Roaming (see 3GPP TS 23.502 [3], Section 4.3.2.2.2).
- UE or network requested PDU Session Modification (non-roaming and roaming with local breakout) (see 3GPP TS 23.502 [3], Section 4.3.3.2).
- UE or network requested PDU Session Modification (home-routed roaming) (see 3GPP TS 23.502 [3], Section 4.3.3.3).
- UE Triggered Service Request (see 3GPP TS 23.502 [3], Section 4.2.3.2) to move PDU Session(s) from untrusted non-3GPP access to 3GPP access.
- Network requested PDU Session Modification, when the SMF needs to release the assigned EBI from a QoS flow (see 3GPP TS 23.502 [3], Section 4.11.1.4.3).

The EBI Assignment service operation is sent by the SMF towards the AMF, to request the AMF to allocate EPS bearer ID(s) towards EPS bearer(s) mapped from QoS flow(s) for an existing PDU Session for a given UE. EBI allocation applies only to PDU Session(s) via 3GPP access supporting EPS interworking with N26. EBI allocation does not apply to PDU Session(s) via 3GPP access supporting EPS interworking without N26 or PDU Session(s) via non-3GPP access supporting EPS interworking.

SMF performs EBI Assignment service operation by invoking **assign-ebi** custom operation on the **individual ueContext** resource.

The following call flow shows the messaging that happens in the network. The components of the AMF are not specified here.

**Figure 48: EBI Assignment Call Flow**

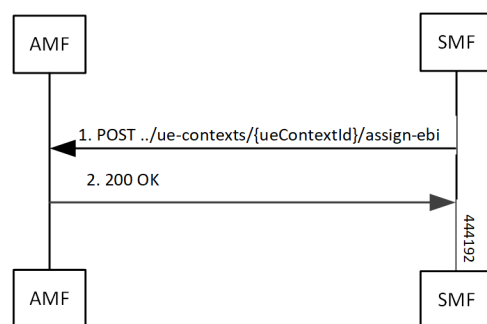

**Table 124: EBI Assignment Call Flow Description**

| Step | Description                            |
|------|----------------------------------------|
| 1    | SMF sends Assign-ebi request to AMF.   |
| 2    | AMF sends 200 <i>OK</i> message to AMF |







## CHAPTER 37

# N26-based Handover Procedures - EPC Interworking

- [Feature Summary and Revision History, on page 361](#)
- [Feature Description, on page 361](#)
- [How it Works, on page 362](#)
- [Feature Configuration, on page 366](#)

## Feature Summary and Revision History

### Summary Data

**Table 125: Summary Data**

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

**Table 126: Revision History**

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.01.0 |

## Feature Description

The N26 interface supports the following handover procedures:

- 5G to 4G (EPC) Handover
- 4G to 5G Handover

## How it Works


This section describes how this feature works.

## Call Flows

This section describes the key call flows for this feature.

### 5G to 4G Handover Call Flow

This section describes the 5G to 4G handover call flow.

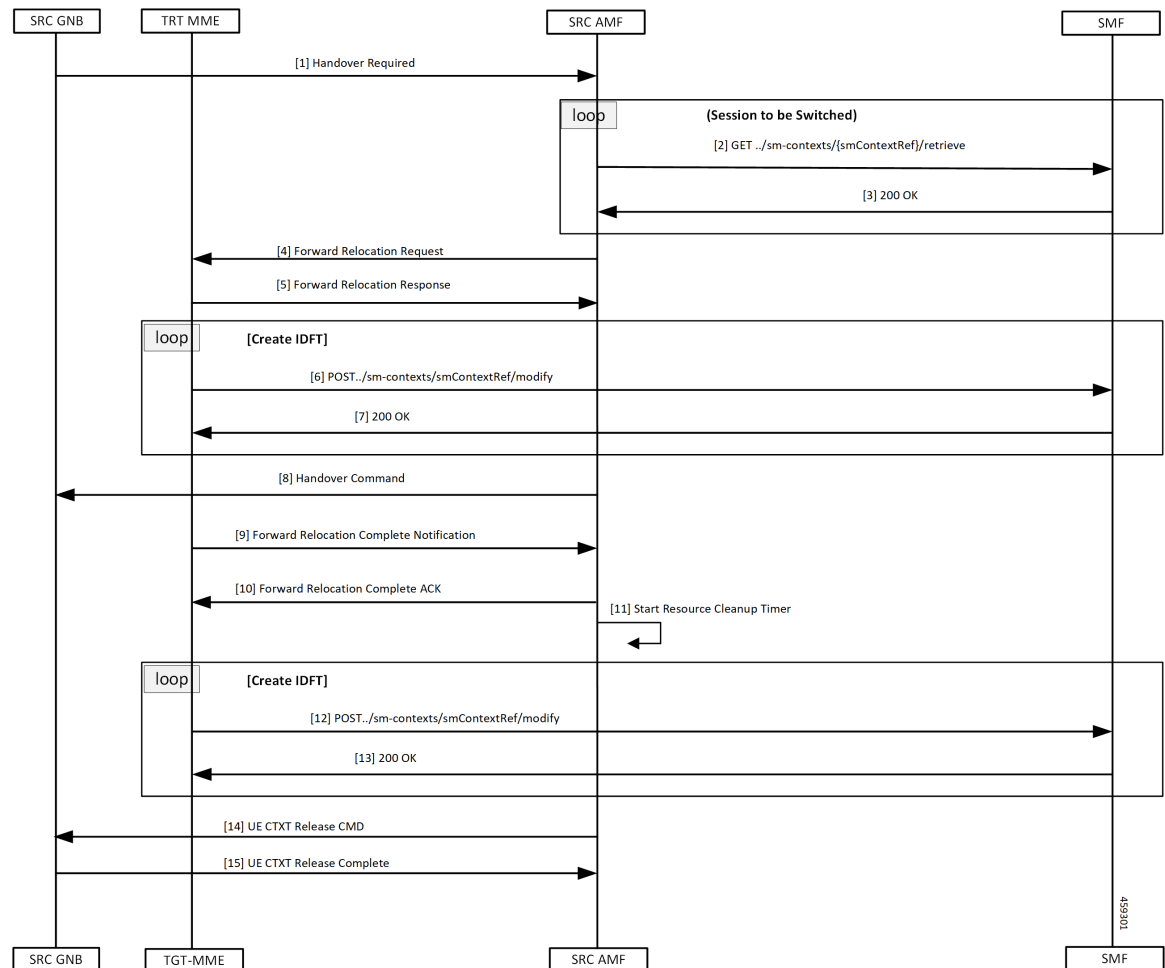

**Table 127: 5G to 4G Handover Call Flow Description**

|        |                                                                                                                                                                   |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1      | The SRC GNB (source gNB) sends a Handover Required message to the SRC AMF (source AMF).                                                                           |
| 2, 3   | The source AMF finds MME based on the received target ID. AMF finds the MME IP address through the AMF configuration or NRF discovery for the matching target ID. |
| 4      | When source AMF finds the IP address, it sends a Forward Relocation Request to the TGT-MME (target MME).                                                          |
| 5      | The target MME sets up resources at the enodeB, updates the S-GW, and responds to the source AMF with Forward Relocation Reponse.                                 |
| 6, 7   | AMF requests SMF to setup Indirect Forwarding Tunnels.<br>The SMF responds to the request from the AMF.                                                           |
| 8      | The source AMF sends a Handover Command to the source gNB.                                                                                                        |
| 9      | As the handover completes on the MME, the target MME notifies the source AMF by sending a Forward Relocation Complete Notification.                               |
| 10     | The source AMF responds with a Forward Relocation Complete ACK to target MME.                                                                                     |
| 11     | The AMF starts a timer to clean up all the local resources and indirect tunnels.                                                                                  |
| 12, 13 | The AMF requests the SMF to clean up the IDFT tunnels created.<br>The SMF responds to the AMF request.                                                            |
| 14     | The source AMF sends a UE Context Release Command to the source gNB to clean up all the resources at source gNB.                                                  |
| 15     | The source gNB responds with a UE Context Release Complete to the source AMF.                                                                                     |

## 4G to 5G Handover Call Flow

This section describes the 4G to 5G handover call flow.

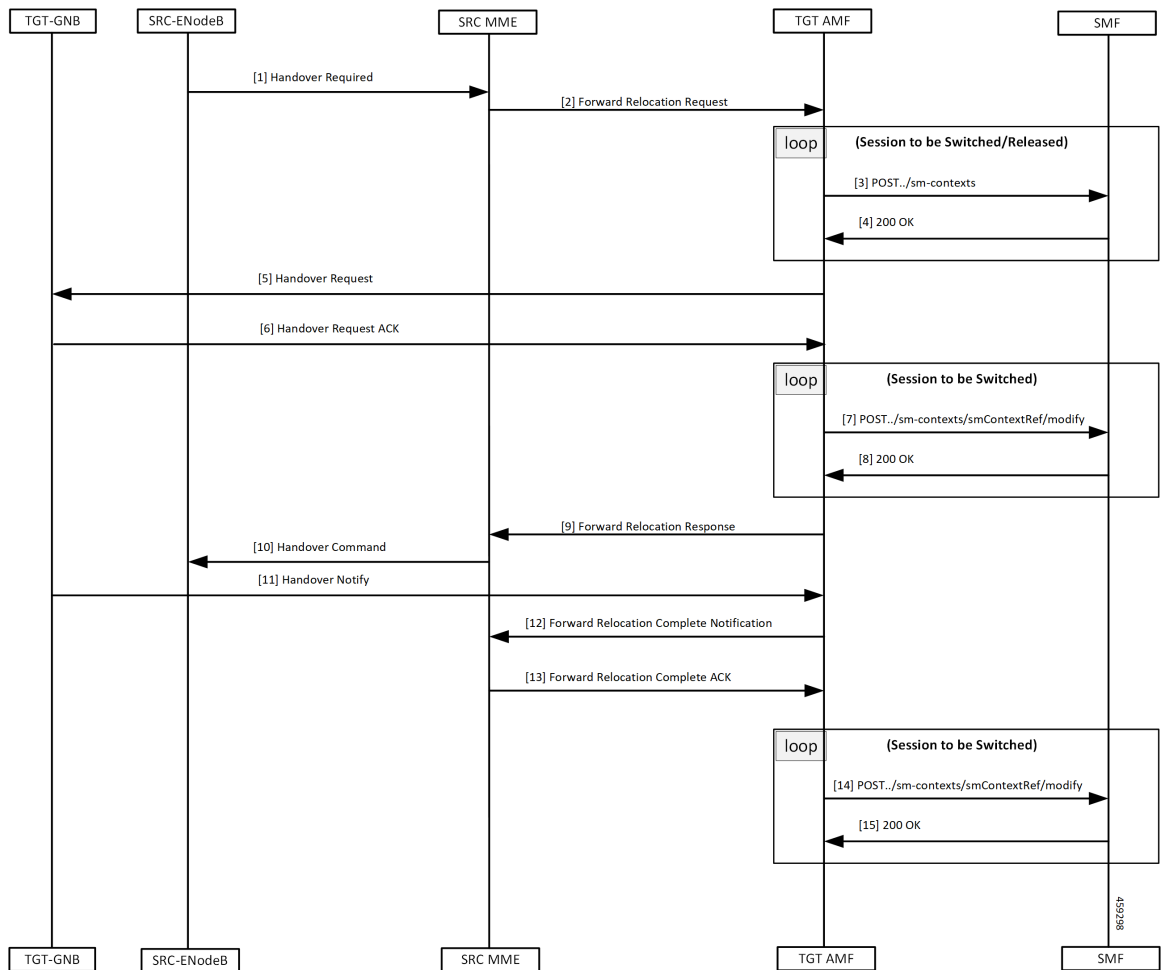


Table 128: 4G to 5G Handover Call Flow Description

| Step | Description                                                                                                                                           |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | As the UE transitions to 5GC, the SRC-ENodeB (source eNB) sends a Handover Required message to the SRC MME (source MME).                              |
| 2    | The MME does target-ID analysis, and chooses the TGT AMF (target AMF). The source MME sends a Forward Relocation Request to the TGT AMF (target AMF). |
| 3    | The target AMF creates associations with the SMF for the PDU sessions that are acceptable on the target AMF.                                          |
| 4    | The SMF responds to the Create Request from the target AMF.                                                                                           |
| 5    | The target AMF selects the TGT GNB (target gNB) that serves the UE, and sends a Handover Request to the target GNB.                                   |
| 6    | After the GNB has allocated resources to the UE, it responds with a Handover Request ACK to the target AMF.                                           |

| Step   | Description                                                                                                  |
|--------|--------------------------------------------------------------------------------------------------------------|
| 7, 8   | The target AMF updates the SMF with information from the target GNB.                                         |
| 8      | The SMF responds to the target AMF.                                                                          |
| 9      | The target AMF responds to the request from the source MME using a Forward Relocation Response message.      |
| 10     | The source MME sends a Handover Command to the SRC ENodeB (source eNB) to complete the handover.             |
| 11     | Target gNB sends a Handover Notify to the target AMF when the UE handover gets completed.                    |
| 12     | The target AMF notifies the source MME using a Forward Relocation Complete notification.                     |
| 13     | The source MME acknowledges the message with a Forward Relocation Complete acknowledge.                      |
| 14, 15 | The target AMF notifies the SMF on the completion of the handover.<br>The SMF acknowledges the notification. |

**Note**

When AMF receives the Registration Request message, it performs the following:

- When the message is received in Uplink NAS Transport, it assumes that the HO is successful and doesn't send the Context Request to the MME.
- When the message is received in Initial UE message, it sends the Context Request to the MME.

## Standards Compliance

This feature complies with the following standards specifications:

- *3GPP TS 23.401 "General Packet Radio Service (GPRS) enhancements for Evolved Universal Terrestrial Radio Access Network (E-UTRAN) access"*
- *3GPP TS 23.502 "Procedures for the 5G System (5GS)"*
- *3GPP TS 29.274 "3GPP Evolved Packet System (EPS); Evolved General Packet Radio Service (GPRS) Tunnelling Protocol for Control plane (GTPv2-C); Stage 3"*

## Limitations

N26-based handover doesn't support the following:

- Handling of PGW-C-initiated and SMF-initiated N2 request by AMF, when other handover is in progress
- Non-IP PDN type
- Home routed roaming
- Direct tunneling

- Emergency fallback
- N3 Interworking Function

In this release, AMF doesn't capture GTPC messages as part of `monitor subscriber output`.

## Feature Configuration

Configuring this feature involves the following steps:

- Configure 4G to 5G handover—This configuration provides the commands for the handover between EPC to 5GC. For more information, refer to [Configuring the Handover from 4G to 5G, on page 366](#).
- Configure 5G to 4G handover—This configuration provides the commands for the handover between 5GC to EPC. For more information, refer to [Configuring the Handover from 5G to 4G, on page 366](#).

## Configuring the Handover from 4G to 5G

To configure this feature, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 default-slice name n26 sst sst_value sdt sdt_value
 end
```

### NOTES:

- **call-control-policy *policy\_name***—Specify the policy name.
- **default-slice name n26 sst *sst\_value* sdt *sdt\_value***—Specify the Slice/Service type (SST) value and Slice Differentiator Type (SDT) value respectively. SST value must be an integer in the range of 0-255. SDT value must be a string.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy ccpl
 default-slice name n26 sst 12 sdt 123456
 end
```

## Configuring the Handover from 5G to 4G

To configure this feature, use the following configuration:

```
config
 amf-services service_name
 peer-mme tai-match priority priority_value mcc mcc_value mnc mnc_value tac
 tac_value [to end_tac_value] address mme_address
 exit
```

```

instance instance-id instance_id
 endpoint protocol
 vip-ip ip_address
 exit
 endpoint gtp
 nodes node_replicas
 retransmission { max-retry maximum_number_of_retries | timeout
retransmission_timeout_value }
 end

```

**NOTES:**

- **peer-mme tai-match priority** *priority\_value* **mcc** *mcc\_value* **mnc** *mnc\_value* **tac** *tac\_value* [ **to** *end\_tac\_value* ] **address** *mme\_address*
  - **peer-mme tai-match priority** *priority\_value*—Specify the priority value.
  - **mcc** *mcc\_value*—Specify the three-digit Mobile Country Code. Must be an integer with three digits.
  - **mnc** *mnc\_value*—Specify the two or three-digit Mobile Country Network. Must be an integer with three digits.
  - **tac** *tac\_value*—Specify the Tracking Area Code value. Must be an integer in the range of 1-65535.
  - **to** *end\_tac\_value*—Specify the Tracking Area Code range for peer MME.
  - **address** *mme\_address*—Specify the peer MME address.
- **nodes** *node\_replicas*—Specify the replica nodes for resiliency.
- **max-retry** *maximum\_number\_of\_retries*—Specify the number of request retry attempts. Must be an integer in the range 0–5 (default value: 3). To disable retransmission, set this value to zero (0).
- **timeout** *retransmission\_timeout\_value*—Specify the retransmission interval in seconds. Must be an integer in the range 0–10 (default value: 2). To disable retransmission, set this value to zero (0).

## Configuration Example

The following is an example configuration.

```

config
 amf-services amf1
 peer-mme tai-match priority 1 mcc 311 mnc 480 tac 30 address 209.165.200.224
 exit
 instance instance-id
 endpoint protocol
 vip-ip 209.165.200.225
 exit
 endpoint gtp
 nodes 1
 retransmission timeout 2 max-retry 5
 end

```







## CHAPTER 38

# Network-Initiated Deregistration Request

- [Feature Summary and Revision History, on page 369](#)
- [Feature Description, on page 369](#)
- [How it Works, on page 370](#)
- [Feature Configuration, on page 371](#)

## Feature Summary and Revision History

### Summary Data

Table 129: Summary Data

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

Table 130: Revision History

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

## Feature Description

AMF marks the UE state as DE-REGISTERED when it receives Deregistration Request from any of the following:

- UE
- AMF CLI admin (Clear Subscribe Request)
- IDT Timer expiry (implicit detach procedure)

AMF prepares the Deregister Accept (N1-Downlink message) towards the UE and waits for the Deregister Complete message from the UE. During this process AMF performs the following functions:

- Checks the configured purge time value.
- Unsubscribes the PCF for am-policy data.
- Completes the UE Context Release Request towards N1.

AMF starts CDL purge timer and holds purging of subscribers data until the timer expires. When the purge timer expires AMF performs the following actions:

- Pushes the CDL timer expiry notification on REST-EP.
- Stops the purge timer.
- Starts purging procedures such as Unsubscribe Or Deregister towards UDM.



#### Note

- This feature doesn't support the Emergency registration, and the non-3GPP trusted or untrusted scenarios.
- If UE with existing SUPI performs re-registration while purge timer is running, the purge timer gets reset when the UE triggers re-deregistration.

## How it Works

This section describes how this feature works.

## Call Flows

This section describes the key call flow for this feature.

### Purge of Subscriber Data Call Flow

This section describes the Purge of Subscriber Data in AMF call flow.

Figure 49: Purge of Subscriber Data in AMF Call Flow

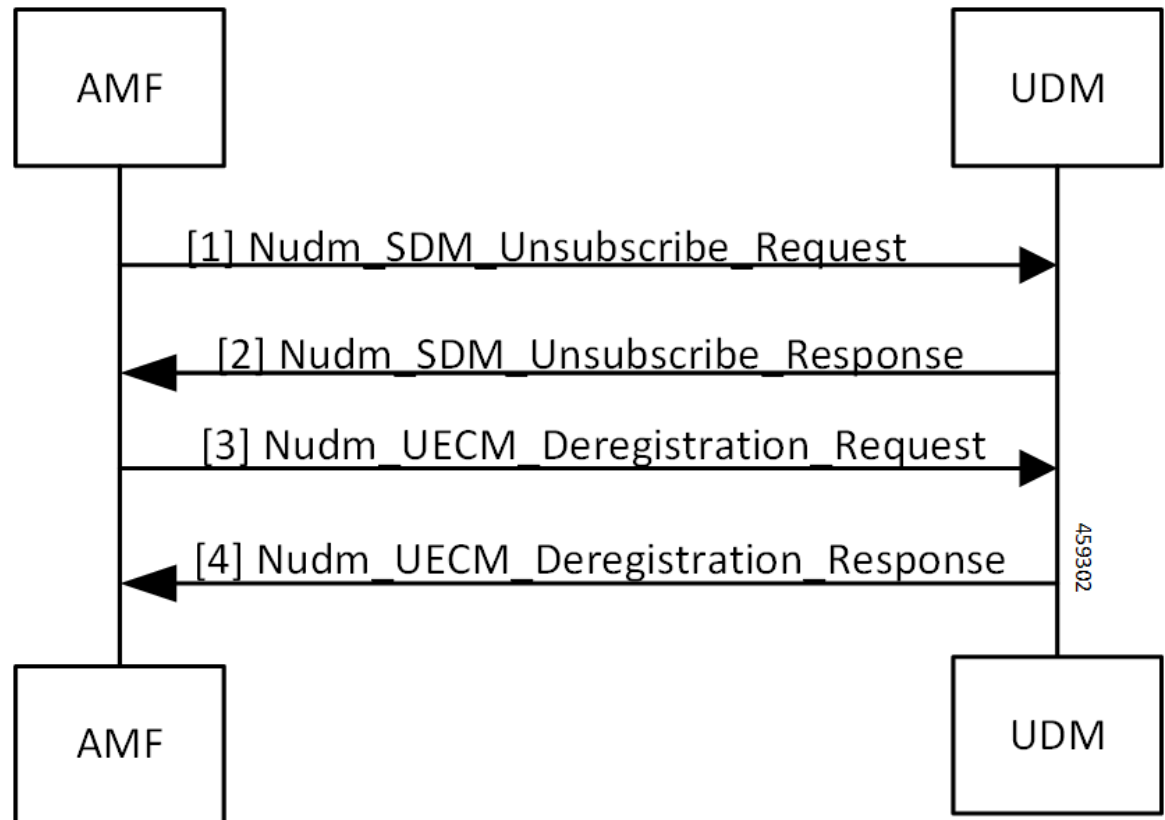


Table 131: Purge of Subscriber Data in AMF Call Flow Description

| Step | Description                                                                                                                                                                         |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1, 2 | When AMF receives the Deregistration Request from the UE, it sends SDM Unsubscribe and UE CM Deregistration triggers on purge timer expiry. AMF receives the response from the UDM. |
| 3, 4 | AMF sends the UE CM Deregistration Request to the UDM and receives response from it.                                                                                                |

## Feature Configuration

To configure this feature, use the following configuration:

```

config
 amf-global
 call-control-policy call_control_policy_name
 timers tpurge value purge_value
 end

```

### NOTES:

- **call-control-policy** *call\_control\_policy\_name*—Specify the call control policy name.

- **timers tpurge value** *purge\_value*—Specify the purge timer value in seconds.

Default purge timer value is 86400 seconds.

To disable the purge timer value, provide its value as zero.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy local
 timers tpurge value 100
 end
```



## CHAPTER 39

# Network Slicing Support

Table 132: Feature History

| Feature Name            | Release Information | Description                                                                                                                                 |
|-------------------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| Network Slicing Support | 2024.01             | Cisco AMF allows the slice selection and reallocation during the UE registration.<br><br>Default Setting: Disabled – Configuration Required |

- [Feature Summary and Revision History, on page 373](#)
- [Feature Description, on page 374](#)
- [How it Works, on page 374](#)
- [Limitations, on page 384](#)
- [Feature Configuration, on page 384](#)
- [Bulk Statistics, on page 393](#)

## Feature Summary and Revision History

### Summary Data

Table 133: Summary Data

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

## Revision History

*Table 134: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2023.04.0 |

## Feature Description

Slice selection is the process of choosing a specific network slice supported by the network. The AMF supports the network slice selection during the registration. The AMF selects the slice based on the requested NSSAI, subscription data from UDM, locally configured slices, and slicing information received from NSSF. Upon successful UE registration, the AMF conveys the allowed NSSAIs to both the AN (gNB) and the UE, so that UE uses the appropriate slice to access the required services.

If AMF is unable to serve any of the slices requested by the UE, the AMF initiates the re-allocation functionality. AMF supports redirection of registration request message through the direct signaling to selected target AMF (received in NSSF response) or by rerouting the NAS message to target AMF through RAN.

When the AMF receives an indication from the UDM about change in slice subscription, the AMF informs the UE with new allowed/rejected and configured slices using UE configuration update procedure.


## How it Works

This section describes how this feature works.

## Call Flows

This section describes about the various call flows pertaining to this feature:

Figure 50: Slice Selection

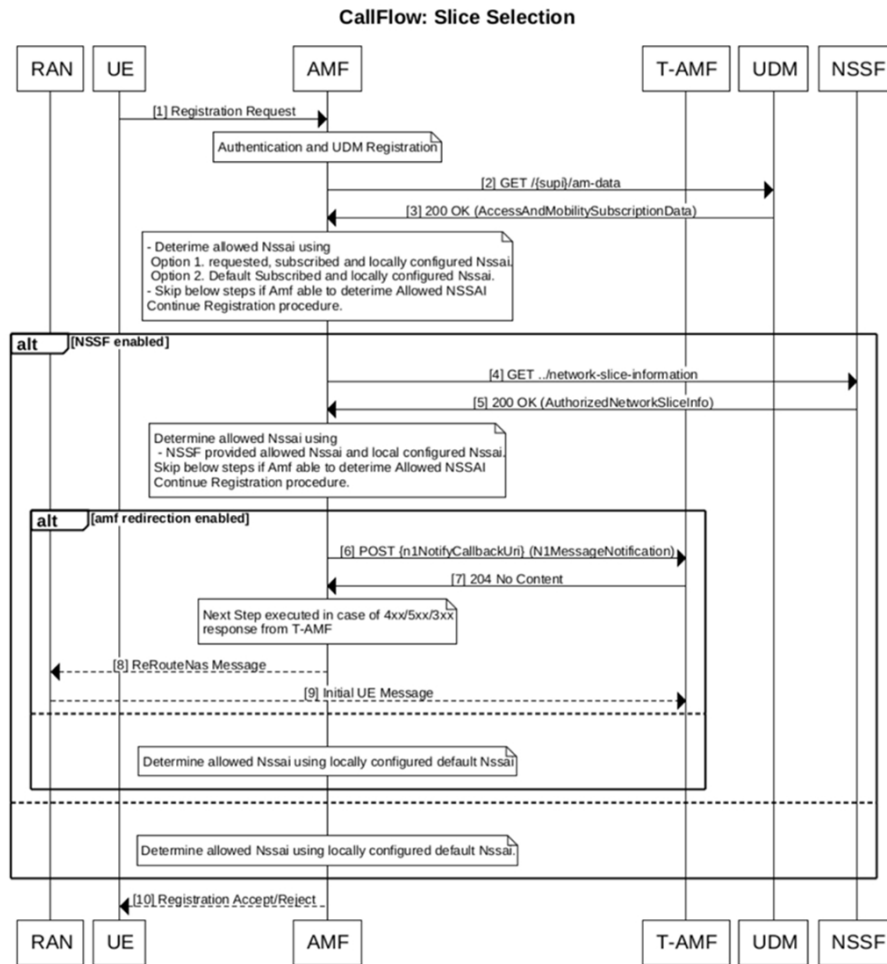

478358

Table 135: AMF Slice Selection

| Step | Description                                                                                                                                                                        |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | UE Requested NSSAI are matched with local configuration and with the subscribed SNSSAI received from UDM. For local configuration, AMF service level NSSAI needs to be configured. |
| 2    | If there is no match, then next step is to match the default SNSSAI from UDM with local slice configuration.                                                                       |

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3    | <p>If there is no match, and if the NSSF interaction is enabled then query NSSF and make slice selection request:</p> <ul style="list-style-type: none"> <li>• Get allowed NSSAI list and configured NSSAI from slice selection response and match with local configured slice.</li> <li>• If NSSF interaction is not enabled, accept the subscriber with locally configured default-NSSAI.</li> </ul> <p><b>Note</b><br/>NSSF is locally configured in the AMF.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| 4    | <p>If there is no match, and if AMF redirection is enabled, use targetAmfSet or candidateAMF from slice selection response and proceed with AMF relocation else accept subscriber with locally configured default-NSSAI.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| 5    | <p>If slice matches, continue with registration procedure.</p> <p><b>Note</b><br/>The Global/PLMN level slices information are considered as local configuration.</p> <p>1. If UDM doesn't provide subscribed S-NSSAIs, it considers the default S-NSSAIs for comparison.</p> <ul style="list-style-type: none"> <li>• Allowed NSSAIs in registration accept: The matching S-NSSAIs are considered as allowed NSSAIs and are filled in registration accept message.</li> <li>• Rejected NSSAIs in registration accept: The AMF may include this IE to inform the UE of one or more S-NSSAIs that were included in the requested NSSAI in the REGISTRATION REQUEST message but were rejected by the network.</li> <li>• Configured NSSAIs in registration accept: The AMF may include a new configured NSSAI for the current PLMN in the REGISTRATION ACCEPT message if: <ul style="list-style-type: none"> <li>• The REGISTRATION REQUEST message doesn't include the requested NSSAI.</li> <li>• The REGISTRATION REQUEST message includes the requested NSSAI containing a S-NSSAI that is not valid in the serving PLMN.</li> <li>• The REGISTRATION REQUEST message includes the network slicing indication IE with the default configured NSSAI indication bit set to "Requested NSSAI created from default configured NSSAI".</li> </ul> </li> </ul> |
| 6    | <p>The AMF obtains the configured S-NSSAI by utilizing locally configured PLMN-level slice and subscription details.</p> <p><b>Note</b><br/>In case of registration reject due to the cause set to 62 - "No network slices available". The AMF provides rejected NSSAI in registration accept/reject with the cause "S-NSSAI not available in the current PLMN or SNPN" unless calculated by NSSF.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |




| Step | Description                                                                                                                                                                               |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7    | If UDM includes “provisioningTime” (in NSSAI IE) in subscription response. The AMF provides acknowledgment (/am-data/subscribed-nssais-ack) to UDM after receiving registration complete. |

### AMF Reallocation

Following are the call flows for the reallocation procedure.

**Figure 51: Source AMF**

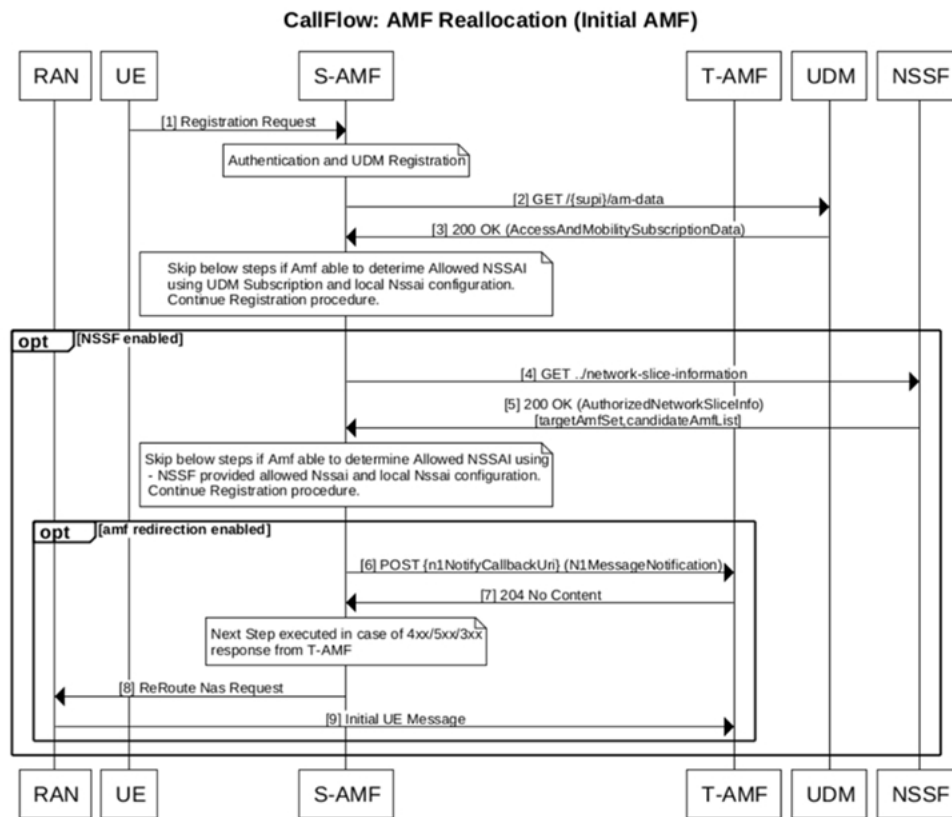

478359

**Table 136: Source AMF**

| Step | Description                                                                                                                             |
|------|-----------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The AMF redirection uses the "N1MessageNotify" message which is callback API (that means, it uses notification-subscription framework). |

| Step | Description                                                                                                                                                                                                                                                                                                                                  |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2    | All AMFs needs to be pre-registered with NRF with “defaultNotificationSubscription”. It includes callback URL for N1MessageNotify.                                                                                                                                                                                                           |
| 3    | The AMF uses the locally configured NRF (not received from NSSF) in slice selection response.                                                                                                                                                                                                                                                |
| 4    | From the discovered AMFs, the source AMF sends N1MessageNotify message to callback URL.                                                                                                                                                                                                                                                      |
| 5    | If multiple instance Id’s are received as part of candidate AMF List, then the S-AMF initiates a N1 message notify to T-AMF selected based on first instance id and if receives status other than 204 in N1 Message Notify Response, then it initiates the request again to target selected based on next instance id in candidate AMF List. |
| 6    | In case NRF is not available, local configuration is supported for destination AMF IOT only: <ul style="list-style-type: none"> <li>• TargetAmfSet” needs to be configured as endpoint-profile name and</li> <li>• “CandidateAMF” needs to be configured as endpoint-name under NF-client profile.</li> </ul>                                |
| 7    | The AMF reroutes the message through the RAN (REROUTE NAS REQUEST)if direct signaling to target AMF fails.                                                                                                                                                                                                                                   |

Figure 52: Destination AMF

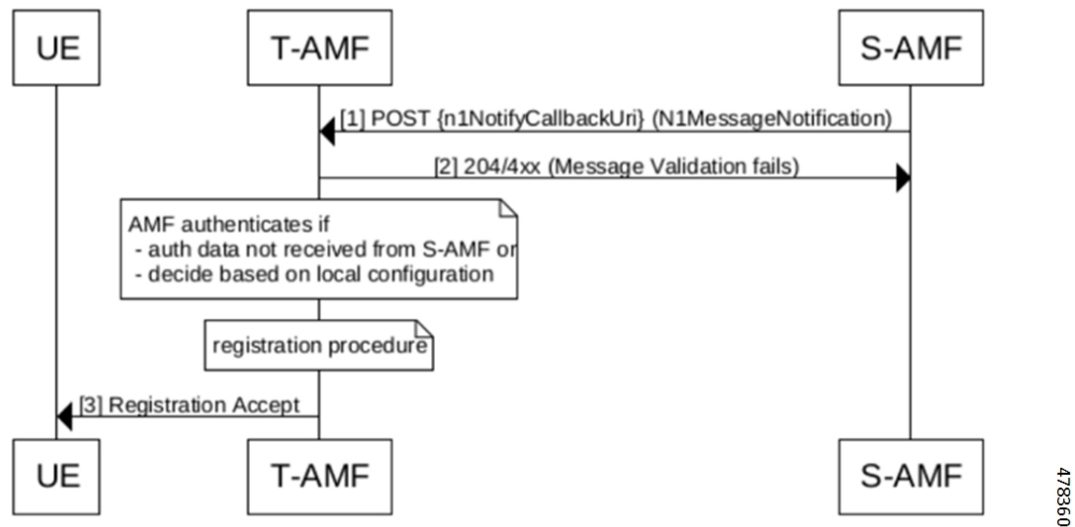


Table 137: Destination AMF


| Step | Description                                                                                                                              |
|------|------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The target AMF upon receiving N1Message notify decodes the message and extracts the UEContext, location information, and gNB information |

| Step | Description                                                                                                                                                                                                                                                                                               |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2    | <p>The AMF authenticates the subscriber based on local configuration and in case authentication data is not received from source AMF then it continues with the registration procedure with details received.</p> <p><b>Note</b><br/>If gNB is not connected to the AMF, then the registration fails.</p> |

### Slice Update Notification

Following are the call flows for the slice update notification.

**Figure 53: UE Configuration Update for UDM Subscription Change**

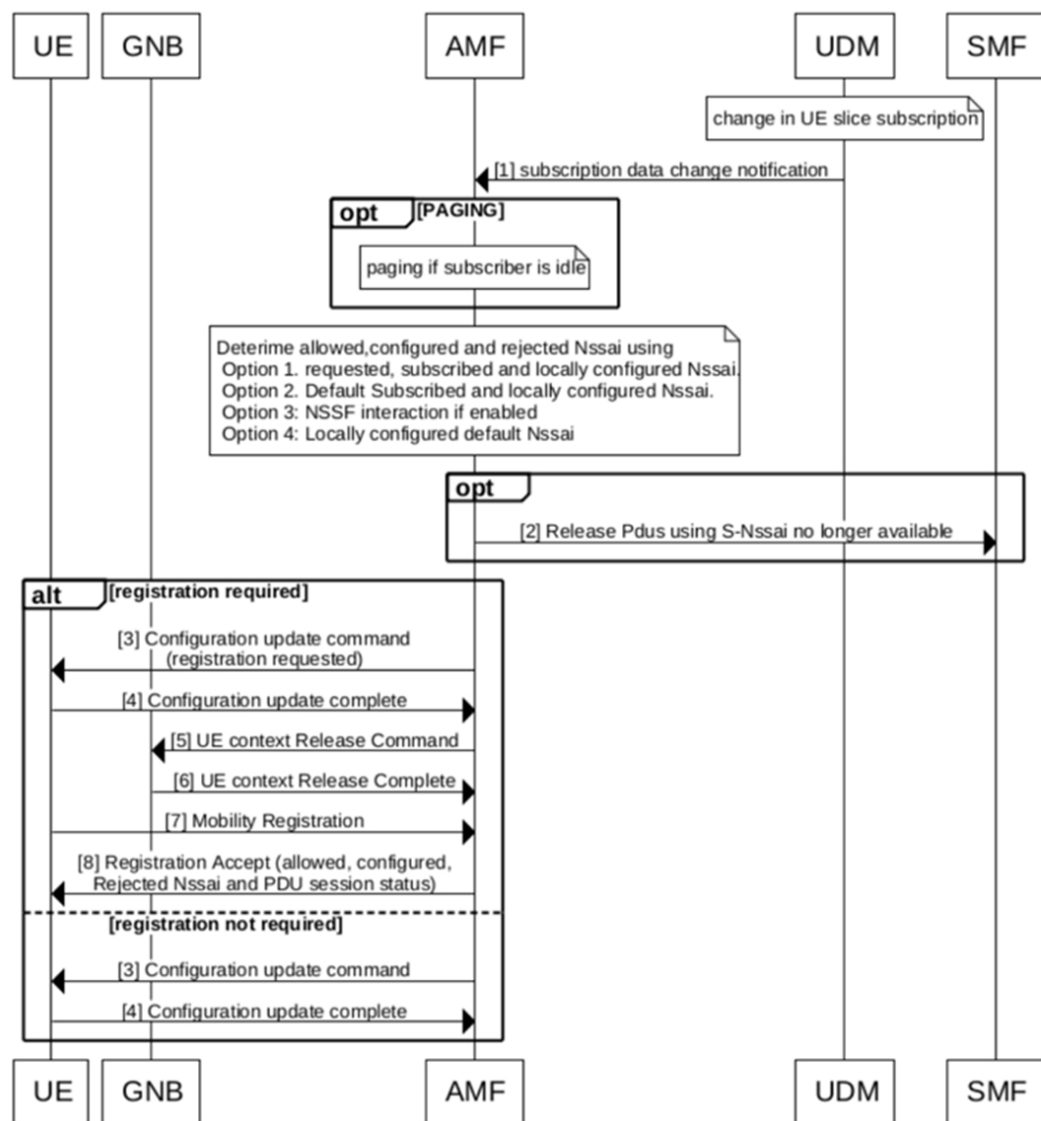

478361


Table 138: UE Configuration Update for UDM Subscription Change

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UDM sends the notification to AMF when “subscription data for network slicing changes”.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 2    | <p>The AMF re-calculates the slice information based on local configuration or using NSSF. If there is any change in slice (allowed-NSSAI, rejected-NSSAI, and configured NSSAI), then the amf-service sends the UE configuration update. The AMF provides UE with:</p> <ul style="list-style-type: none"> <li>• an indication that the acknowledgment from UE is required.</li> <li>• Allowed S-NSSAIs, configured S-NSSAIs for the Serving PLMN (if required), rejected S-NSSAI(s) (if required).</li> <li>• If the changes to the allowed NSSAI require the UE to perform immediate registration procedure because they affect the existing connectivity to network slices. The serving AMF indicates to the UE the need for the UE to perform a registration procedure.</li> </ul> |
| 3    | <p>When a network slice used for a one or multiple PDU Sessions is no longer available for a UE, the following applies:</p> <ul style="list-style-type: none"> <li>• The AMF releases a non-emergency PDU session for which network slice is no longer available and indicates SMF to release such PDUs.</li> <li>• The AMF modifies the PDU session status correspondingly. The PDU session(s) context is locally released in the UE after receiving the PDU session status in the registration accept message.</li> </ul>                                                                                                                                                                                                                                                            |
| 4    | If UE is in the connected mode then UE configuration Update is sent else AMF triggers paging.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 5    | After receiving the acknowledgment, the AMF releases the NAS signaling connection for the UE in case of registration requested by AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 6    | If there are established PDU session (s) associated with emergency services, then the serving AMF indicates to the UE the need for the UE to perform a registration procedure but doesn't release the NAS signaling connection to the UE. The UE performs the registration procedure only after the release of the PDU session (s) used for the emergency services.                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 7    | The AMF rejects any NAS Message from the UE carrying PDU session establishment request for a non emergency PDU session before the required registration procedure has been successfully completed by the UE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 8    | <p>In case configuration update fails (example, subscriber not reachable):</p> <ul style="list-style-type: none"> <li>• The AMF releases a non-emergency PDU session for which network slice is no longer available and indicates SMF to release such PDUs.</li> <li>• The new calculated slice is provided when subscriber perform initial/mobility registration.</li> <li>• In case N1N2 or service request comes, the AMF sends the configuration update after handling the incoming message.</li> </ul>                                                                                                                                                                                                                                                                            |



**Note** The configuration update doesn't happen for emergency subscriber.

**Figure 54: Idle Time Expiry**

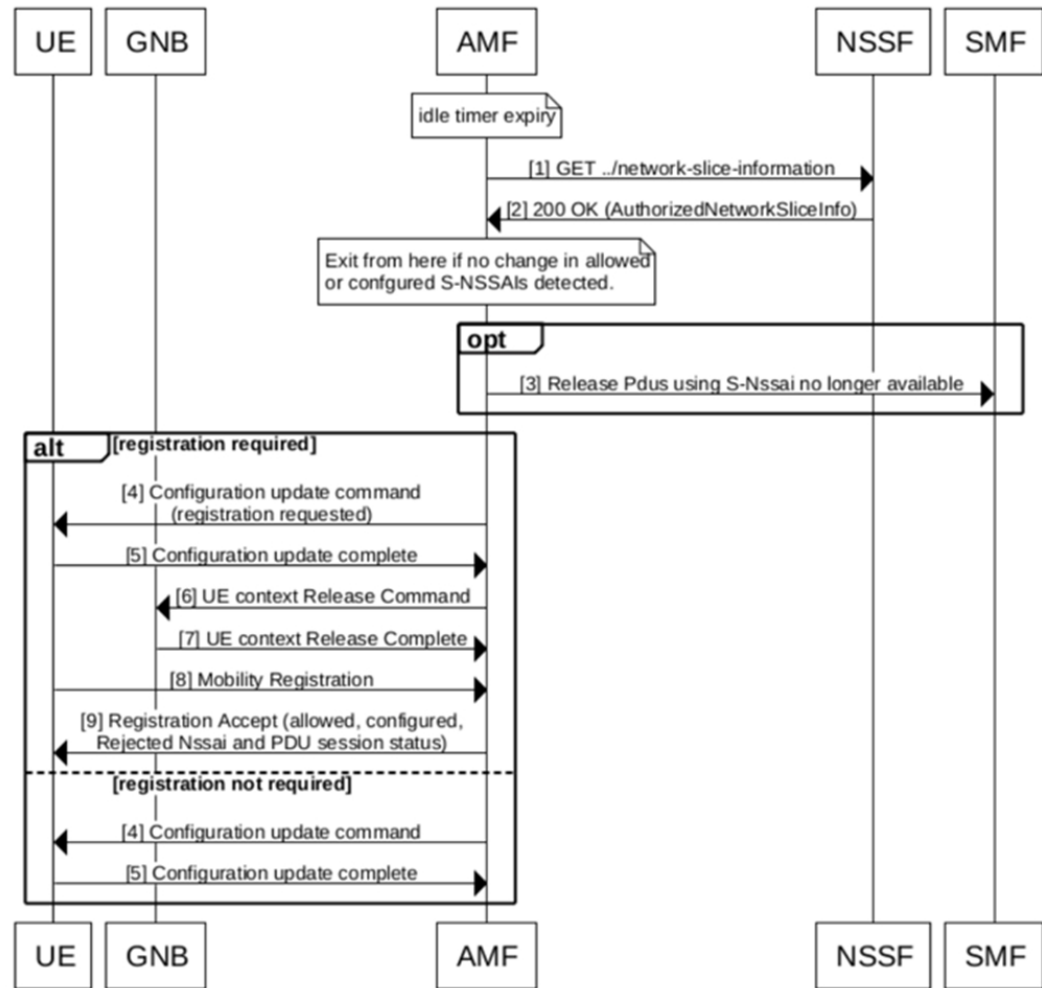


478362

**Table 139: Idle Time Expiry**

| Step | Description                                                                                                                                                                             |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | On idle timer expiry, The AMF re-calculates the slice information using NSSF.<br><b>Note</b><br>prerequisite is to enable the configuration for "Enabling the UE Configuration Update". |
| 2    | The UE configuration update is sent only for those subscriber for which the NSSF was used previously for slice selection.                                                               |

Figure 55: Slice Configuration Change

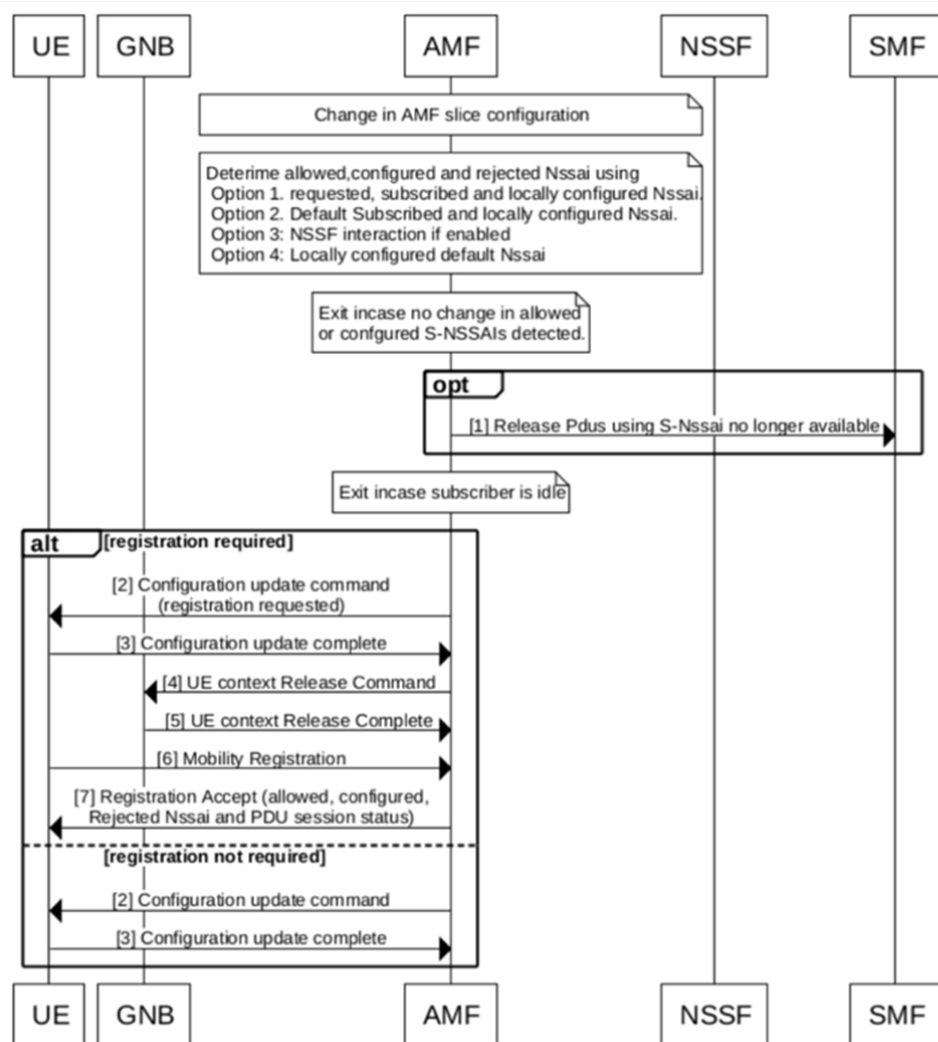

478363




**Note** The AMF sends indication about the network slicing subscription change in UE configuration update, only in case of UDM subscription data changes notification.

Table 140: Slice Configuration Change

| Step | Description                                                                                                                                                            |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The AMF updates all non-emergency subscriber for which old slice information is no longer valid.                                                                       |
| 2    | The behavior is same as the "UDM Change notification for subscriber in connected mode".                                                                                |
| 3    | For idle subscriber (no paging), The AMF releases the non-emergency PDU session for which network slice is no longer available and indicates SMF to release such PDUs. |

### AMF Configuration Update

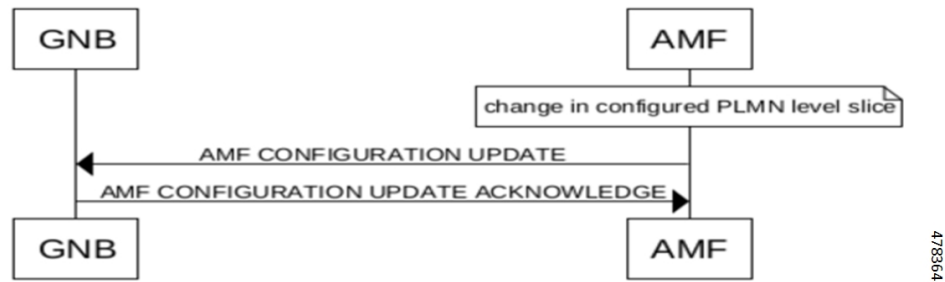

Changes in the slice configuration per PLMN is notified to GNBs using AMF configuration update message.

### NRF Registration or Modification

During the NRF registration/modification, the AMF sends the slice information in nfProfile which is configured at AMF.


| Attribute Name | Data Type      | Description                                                                                                                                                                                 |
|----------------|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| sNssais        | array (Snssai) | S-NSSAIs of the network function. If not provided, the NF can serve any S-NSSAI. When present this IE represents the list of S-NSSAIs supported in all the PLMNs listed in the plmnList IE. |



**Note** The TAI level information and NSI-list is not sent to NRF during registration or modification.

### Peer NF Discovery through NRF

The AMF supports the discovery of peer NFs based on the slice data. The “SNSSAIS” is configured in the query-params CLI. The AMF, while sending the discovery request to NRF, must include the SNSSAIS for the filter criteria in the query parameters.

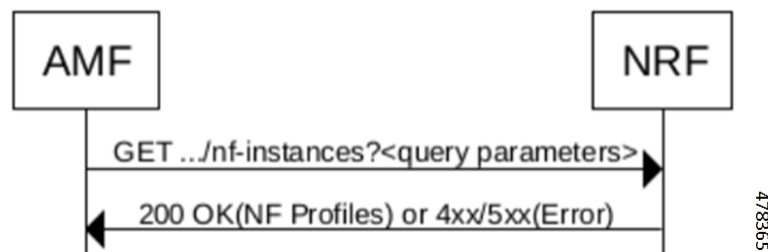

| Attribute Name | Data type       | Description                                                                                                                                                                                                                                     |
|----------------|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SNSSAIS        | array (SNSSAIS) | If included, this IE contains the list of S-NSSAIs that are served by the NF (service) instances being discovered. The NRF returns those NF profiles/NF services of NF (service) instances that have at least one of the S-NSSAIs in this list. |

## Limitations

Following are the limitations for this feature:

- The AMF doesn't support the slice selection for roaming subscriber (Mapped NSSAI).
- The AMF doesn't support the network slice specific authentication and authorization (NSSAA).
- The AMF doesn't support the slice selection for handover scenario (Xn and N2).
- The AMF doesn't support the reallocation for the roaming subscribers and registration with the foreign-5g-GUTI.
- The AMF doesn't support the PDU establishment using NSSF.
- The AMF doesn't support discovery of peer AMF using SNSSAI as query parameter.
- The AMF supports reallocation only for the initial registration.

## Feature Configuration

Configuring this feature involves the following steps:

- Slice Selection Enable and Slice Migration—This configuration enables the slice selection. For more information, refer to [Configuring the AMF Reallocation, on page 385](#).
- Inclusion Mode—This configuration provides the commands for Inclusion mode configuration. For more information, refer to [Configuring the Inclusion Mode, on page 386](#).
- Enabling UE Update—This configuration enables the UE update. For more information, refer to [Enabling the UE Configuration Update, on page 387](#).
- Query Parameters for AMF Discovery—This configuration provides the Query parameters commands for AMF discovery. For more information, refer to [Configuring the Query Parameters for AMF Discovery, on page 387](#).
- NSSF—This configuration provides the commands for NSSF configuration. For more information, refer to [Configuring the NSSF, on page 388](#).
- Local AMF—This configuration provides the Local AMF configuration. For more information, refer to [Configuring the Local AMF, on page 391](#).



## Configuring the AMF Reallocation

To configure the reallocation, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 policy amf-redirectation use-source-key { false | true }
 policy amf-redirectation horizontal-key-derivation { false | true }
 }

 policy nssf-interaction { disabled | enabled }
 end
```

### NOTES:

- **call-control-policy** *policy\_name*—Specify the call control policy name.
- If the NSSF interaction is disabled, and slice selection fails, in that case AMF falls back to the default slice configuration on AMF and registration accept is sent with the default slice in the allowed NSSAI. If the default slice configuration is absent (which is less likely since it is mandatory for the N26 HandIn to succeed), only then AMF sends the registration reject.
- In case amf-redirectation is disabled, then S-AMF doesn't reroute to T-AMF and initiates registration reject with cause code set to 62 - "No network slices available".
- Use-source-key: If true, then T-AMF uses the key received from S-AMF.
- horizontal-key-derivation: If true, then S-AMF generates a new key and sends newly generated keys in N1MsgNotify.
- The AMF-redirectation is enabled by configuring use-source-key/horizontal-key-derivation or both with true/false and if none of the options are configured then AMF-redirectation is considered to be in disabled state.

## Configuring the AMF Slice

The following is the global level slice configuration representing system level slice configuration supported by AMF.

```
config
 amf-services amf_service_name
 nssai name slice_name
 sst sst_value
 sdt sdt_value
 end
```

### NOTES:

- **nssai name** *slice\_name* - Specify the slice name.
- **sst** *sst\_value* - Specify the SST value.
- **sdt** *sdt\_value* - Specify the SDT name.




---

**Note** The AMF supports a maximum of eight slices.

---

## Configuring the Emergency Slice

When you configure the emergency slice, then the AMF sends this slice in the registration accept message for emergency subscriber.

```
config
 emergency-profile profile_name
 nssai
 sst sst_value
 sdt sdt_value
 end
```

### NOTES:

- **emergency-profile***profile\_name* - Specify the emergency profile name.
- **sst** *sst\_value* - Specify the SST value.
- **sdt** *sdt\_value* - Specify the SDT name.




---

**Note** You must associate an emergency profile to amf-service or operator policy to enable this configuration.

---

## Configuring the Inclusion Mode

When you configure this CLI, the inclusion mode is sent in registration accept.

To configure the Inclusion mode, use the following CLI:

```
config
 amf-global
 call-control-policy policy_name
 policy slicing inclusion-mode policy_inclusion_mode
 end
```

### NOTES:

- **call-control-policy** *policy\_name*—Specify the call control policy name.
- **policy slicing inclusion-mode** *policy\_inclusion\_mode*—Specify the policy inclusion mode for slicing. The possible values for the inclusion mode is - A, B, C, and D.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy local
```

```
policy slicing inclusion-mode B
end
```

## Configuring Default Slice

Use the following CLI to configure the default slice in AMF:

```
config
 amf-global
 call-control-policy policy_name
 default-nssai
 sst sst_value
 sdt sdt_value
 end
```

### NOTES:

- **sst** *sst\_value* - Specify the SST value.
- **sdt** *sdt\_value* - Specify the SDT value.

## Enabling the UE Configuration Update

When you configure this CLI, the AMF sends the configuration update command to UE upon idle timer expiry if there are any changes in the slices (configured or allowed S-NSSAIs) for any subscriber.

```
config
 amf-global
 call-control-policy policy_name
 policy ue-cfg-update on-nssf-slice-change { true | false }
 end
```

### NOTES:

- **call-control-policy** *policy\_name*—Specify the call control policy name.
- **policy ue-cfg-update on-nssf-slice-change { true | false }**—Enable or disable the UE configuration update.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy local
 policy ue-cfg-update on-nssf-slice-change true
 end
```

## Configuring the Query Parameters for AMF Discovery

To configure the query parameters for AMF discovery, use the following configuration:

```
config
 profile network-element amf amf_name
```

```

nf-client-profile nf_client_name
failure-handling-profile profile_name
query-params { target-plmn | amf-set-id | target-nf-instance-id }
end

```

**NOTES:**

- **profile network-element amf** *amf\_name*—Specify the name of AMF network element.
- **nf-client-profile** *nf\_client\_name*—Specify the name of NF client.
- **failure-handling-profile** *profile\_name*—Specify the name of failure handling profile name.
- **query-params** { **target-plmn** | **amf-set-id** | **target-nf-instance-id** }—Specify the query parameters for AMF discovery.

## Configuration Example

The following is an example configuration.

```

config
 amf-global
 profile network-element amf amf1
 nf-client-profile nf1
 failure-handling-profile FH5
 query-params [target-plmn amf-set-id target-nf-instance-id]
 end

```

## Configuring the Query Parameter for Slice Data in NF Discovery

To configure the query parameters in NF discovery, use the following configuration:

```

config
 profile network-element { pcf | smf }
 failure-handling-profile profile_name
 query-params { snssais }
 end

```

**NOTES:**

- **profile network-element** *profile\_name*—Specify the network profile name.
- **failure-handling-profile** *profile\_name*—Specify the name of failure handling profile name.
- **query-params** { **snssais** }—select SNSSAIS as query parameter in network function discovery.

## Configuring the NSSF

Configuring the NSSF involves the following configurations:

1. **Network Element Profile List**—This configuration provides the commands to configure the Network element profile list. For more information, refer to [Configuring the Network Element Profile List, on page 389](#).
2. **Profile Network Element**—This configuration provides the commands to configure the profile networkElement. For more information, refer to [Configuring the Profile Network Element, on page 389](#).

3. Profile NF-client—This configuration provides the commands to configure the profile NF-client. For more information, refer to [Configuring the Profile NF-client, on page 389](#).
4. Profile NF-client-failure—This configuration provides the commands to configure the Profile NF-client-failure. For more information, refer to [Configuring the Profile NF-client-failure, on page 390](#).
5. Profile NF-pair NF-type—This configuration provides the commands to configure the Profile NF-pair NF-type. For more information, refer to [Configuring the Profile NF-pair NF-type, on page 391](#).

## Configuring the Network Element Profile List

To configure the network element profile list, use the following configuration:

```
config
 amf-global
 operator-policy policy_name
 ccp-name ccp_name
 network-element-profile-list nssf nssf_name
 end
```

### NOTES:

- **operator-policy** *policy\_name*—Specify the operator profile name.
- **ccp-name** *ccp\_name*—Specify the Configuration Control Point (CCP) name. The CCP is used for managing and controlling configuration settings.
- **network-element-profile-list** *nssf nssf\_name*—Specify the NSSF with the network element profile.

## Configuring the Profile Network Element

To configure the profile network element, use the following configuration:

```
config
 profile network-element nssf nssf_name
 nf-client-profile nf_client_name
 failure-handling-profile failure_handling_profile_name
 end
```

### NOTES:

- **profile network-element** *nssf nssf\_name*—Specify the profile name for the network element.
- **nf-client-profile** *nf\_client\_name*—Specify the network function client profile name.
- **failure-handling-profile** *failure\_handling\_profile\_name*—Specify the failure handling profile name.

## Configuring the Profile NF-client

To configure the profile NF-client, use the following configuration:

```
config
 profile nf-client nf-type nf_client_name
 nssf-profile profile_name
 locality locality_name
 priority priority_value
```

```

service name type nssf-nssselection
 endpoint-profile profile_name
 capacity capacity_value
 uri-scheme uri_scheme_name
 version
 uri-version uri_version
 exit
exit
endpoint-name end_point_name
 priority priority_value
 primary ip-address ipv4 ipv4_address
 primary ip-address port ipv4_port_number
 secondary ip-address ipv4 secondary_ipv4_address
 secondary ip-address port secondary_ipv4_port_number
 tertiary ip-address ipv4 tertiary_ipv4_address
 tertiary ip-address port tertiary_ipv4_port_number
 end

```

**NOTES:**

- **profile nf-client nf-type** *nf\_client\_name*—Specify the profile name of the NF client.
- **nssf-profile** *profile\_name*—Specify the profile name for the NSSF.
- **locality** *locality\_name*—Specify the locality name within the NSSF profile.
- **priority** *priority\_value*—Specify the priority value of the locality name within the NSSF profile.
- **endpoint-profile** *profile\_name*—Specify the associated end point profile name.
- **capacity** *capacity\_value*—Specify the capacity of the endpoint.
- **uri-scheme** *uri\_scheme\_name*—Specify the uri scheme associated with the endpoint.
- **uri-version** *uri\_version*—Specify the uri version associated with the endpoint.

## Configuring the Profile NF-client-failure

To configure the profile NF-client-failure, use the following configuration:

```

config
 profile nf-client-failure nf-type nssf nssf_name
 profile failure-handling failure_handling_profile_name
 service name type nssf-nssselection
 responsetimeout timeout_value
 message type NssfNSSelectionReq
 status-code httpv2 503
 retry retry_count
 action retry-and-ignore
 end
 end
 end

```

**NOTES:**

- **profile nf-client-failure nf-type nssf** *nssf\_name*—Specify NF (Network Function) client failure profile.
- **profile failure-handling** *failure\_handling\_profile\_name*—Specify failure-handling profile name.

- **responsetimeout** *timeout\_value*—Specify the response timeout for the specified services.
- **retry** *retry\_count*—Specify the retry count for the status code.

## Configuring the Profile NF-pair NF-type

To configure the profile NF-pair NF-type, use the following configuration:

```
config
 profile nf-pair nf-type nf_type_name
 locality client client_name
 locality preferred-server server_name
 locality geo-server server_name
 end
```

### NOTES:

- **profile nf-pair nf-type** *nf\_type\_name*—Specify NF (Network Function) type name.
- **locality client** *client\_name*—Specify the locality name for the client.
- **locality preferred-server** *server\_name*—Specify the server name as the preferred server locality.
- **locality geo-server** *server\_name*—Specify the geographical location for the geo-server.




---

**Note** The failure handling configuration leading to the session delete is not valid for NSSF.

---

## Configuring the Local AMF

It's optional configuration when real NRF isn't available.

The following is an example configuration.

```
profile nf-client nf-type amf
 amf-profile AMF1
 locality LOC1
 priority 56
 service name type namf-comm
 endpoint-profile EP1
 capacity 30
 priority 30
 uri-scheme http
 endpoint-name EP1
 priority 30
 primary ip-address ipv4 10.81.70.232
 primary ip-address port 9052
 default-notification-subscriptions s1
 notification-type N1_MESSAGES
 callback-uri http://xx.xx.xx.xx:xxxx/namf-comm/v1/callbacks/n1-message-notify
 n1-message-class 5GMM
 end
```

## Configuring Label Slice Data Filters in Metrics

you can enable or disable the slice data filters for the slices only in metrics by using the following CLIs:

Use the following CLI for disabling the slice data filter:

```
config
 amf-global
 metric-label-filter
 slice-data disabled
 end
```

Use the following CLI for enabling the slice data filter:

```
config
 amf-global
 metric-label-filter
 slice-data slices [sst-sdt sst-sdt sst]
 end
```




---

**Note** A maximum of eight slices can be configured and there is no validation to check the sst/sd format.

---

### NOTES:

- **metric-label-filter**—To define and configure the metric label filters.
- **slice-data** *slices [ sst-sdt sst-sdt sst ]*—Specify the slices to configure the metric label filter.

## Configuring Clear Subscriber with Slice Filter

By using the **clear subscriber** command, you can configure the new slice filter to clear all subscribers with specified slice in accepted slice list. This is not applicable to emergency subscribers or non-emergency subscribers with emergency PDUs.



- 
- Note**
- You can specify only one slice at a time.
  - There is no validation to check the sst/sd format.
- 

Following is the example of the clear subscriber configuration:

```
clear subscriber nssai
Description: Specify slice value. Format sst-sd or sst (e.g. 4-abc12e or 123)
Possible completions: <string>

[amf] amf# clear subscriber nssai 4-123546
result
ClearSubscriber Request submitted
```



# Bulk Statistics

## **amf\_ngap\_message\_total**

The `amf_ngap_message_total` metric tracks the total number of NGAP Next Generation Application Protocol (NGAP) messages sent by the AMF. These messages are categorized based on different attributes:

- `app_name`: Specifies the name of the application (AMF).
- `message_direction`: Indicates the direction of the message (example, "outbound").
- `message_type`: Specifies the type of NGAP message (example, "N2ReRouteNasRequest").
- `service_name`: Identifies the service name (example, "amf-protocol-ep").

Example usage:

```
amf_ngap_message_total{app_name="AMF", message_direction="outbound",
message_type="N2ReRouteNasRequest", service_name="amf-protocol-ep"}
```

## **n2\_service\_stats**

The `n2_service_stats` metric provides statistics related to N2 service operations in the AMF. These statistics include:

- `app_name`: Specifies the name of the application (AMF).
- `message_type`: Indicates the type of N2 service operation (example, "N2ReRouteNasRequest").
- `service_name`: Identifies the service name (example, "amf-service").
- `status`: Indicates the status of the service operation (example, "success").

Example usage:

```
n2_service_stats{app_name="AMF", message_type="N2ReRouteNasRequest",
service_name="amf-service", status="success"}
```

## **n22\_service\_stats**

The `n22_service_stats` metric provides statistics related to N22 service operations in the AMF. These statistics include:

- `app_name`: Specifies the name of the application (AMF).
- `message_type`: Indicates the type of N22 service operation (example, "NssfGetNetworkSliceInformationReq").
- `service_name`: Identifies the service name (example, "amf-service").
- `status`: Indicates the status of the service operation (example, "success/failure").

Example usage:

```
n22_service_stats{app_name="AMF", message_type="NssfGetNetworkSliceInformationReq",
service_name="amf-service", status="success"}
```

### **n14\_service\_stats**

The `n14_service_stats` metric provides statistics related to N14 service operations in the AMF. These statistics include:

- `app_name`: Specifies the name of the application (AMF).
- `message_type`: Indicates the type of N14 service operation (example, "N14N1MessageNotifyClientRequest").
- `service_name`: Identifies the service name (example, "amf-service").
- `status`: Indicates the status of the service operation (example, "success/failure").
- `reason`: Provides additional information about the operation's status.

Example usage:

```
n14_service_stats{app_name="AMF", message_type="N14N1MessageNotifyClientRequest",
service_name="amf-service"}
```



## CHAPTER 40

# NF Discovery and Management

---

- [Feature Description, on page 395](#)
- [NF Management, on page 395](#)
- [NF Discovery, on page 413](#)
- [Static Configuration for Peer NF Management, on page 431](#)
- [Failure Handling, on page 436](#)

## Feature Description

The Network Function (NF) Repository Function (NRF) supports the following functionality:

- Maintains the NF profile of available NF instances and their supported services.
- Allows other NF instances to subscribe to, and get notified about, the registration in NRF of new NF instances of a given type.
- Supports service discovery function. It receives NF Discovery Requests from NF instances, and provides the information of the available NF instances fulfilling certain criteria (for example, supporting a given service).

## NF Management

### Feature Description

This section describes the NF management procedures and their configurations that AMF supports. These procedures are NF registration, NF deregistration, NF heartbeat, and NF Update. The NF registration, update, and heartbeat are sent from only one of the rest-ep pods, which is the elected primary node. After this node is elected, the instance remains as primary node for the NF management activities till the pod crashes or is removed.

NF management supports dynamic configuration change. With this feature, if the configurations were modified in the middle of the transaction or procedure, the ongoing transactions are not impacted.

The dynamic configuration change feature supports the following:

- NRF transaction or procedure picks a configuration version (v1) and uses the same version until the NRF transaction or procedure completes.
- If you change the configuration during an ongoing NRF transaction, then a new configuration version (v2) is created. However, the new configuration is applied in the new transaction.

The dynamic configuration changes apply to the following data structures:

- NrfFailureProfileSt
- NrfCIntProfileSt
- NrfGrpSt
- NrfPairProfileSt
- NrfMgmtGrpSt

## Registration

AMF registers with NRF. During registration with NRF, AMF includes at least one of the addressing parameters, such as FQDN, IPv4 or IPv6 address in the NF profile. Including at least one of the addressing parameters in the NF profile registration is mandatory. If AMF supports "https" uri scheme, then AMF provides FQDN in the NFProfile or NFService.

## Configuring NRF Endpoints Profile Parameters for NF Management

The AMF provides CLI for configuring NRF endpoints for **nnrf-nfm** (NF Management).



**Note** For NF management, you can configure only the **nnrf-nfm** service.

The CLI configuration allows configuring multiple endpoints under each endpoint profile. The AMF uses the priority and capacity parameters to load balance between these endpoints. Primary, secondary, and tertiary hosts [ip:port] can be configured within each endpoint. Both IPv4 and IPv6 addresses can be specified. If both are specified, then the IPv4 address is preferred.

A URI uniquely identifies a resource. In the 5GC SBI APIs, when a resource URI is an absolute URI, its structure is specified as follows:

```
{apiRoot}/{apiName}/{apiVersion}/{apiSpecificResourceUriPart}
```



**Note** In this release of the specification, both HTTP and HTTPS scheme URIs are allowed. See the *3GPP TS 33.501, subclause 13.1* for more information on security of service-based interfaces.

"apiRoot" is a concatenation of the following parts: scheme ("http" or "https")

- fixed string "://"
- authority (host and optional port) as defined in IETF RFC 3986
- an optional deployment-specific string (API prefix) that starts with a "/" character [api-root in CLI]

To configure the NRF endpoints for different services supported by NRF, use the following sample configuration.

```

config
 group nrf mgmt mgmt_name
 service type nrf nnrf-nfm
 endpoint-profile epprofile_name
 priority priority_value
 capacity capacity
 api-root api_string
 api-uri-prefix uri_prefix_string
 uri-scheme { http | https }
 endpoint-name ep_name { capacity capacity | primary ip-address
 { ipv4 ipv4_address | ipv6 ipv6_address | port port_num }
 | secondary ip-address { ipv4 ipv4_address | ipv6 ipv6_address
 | port port_num } | tertiary ip-address { ipv4 ipv4_address
 | ipv6 ipv6_address | port port_num } }
 version [uri-version version_num full version version_num]
 end
 end

```

#### NOTES:

- **group nrf mgmt** *mgmt\_name* : Show the NRF self-management group configurations.
- **api-root** *api\_string*: Specify the deployment-specific service API prefix that is used within the { apiRoot }.
- **api-uri-prefix** *uri\_prefix\_string*: Specify the {apiName}. If not configured, it takes the standard API name for the service as per the specification.
- **capacity** *capacity*: Specify the profile capacity.
- **endpoint-name** *ep\_name* { **capacity** *capacity* | **primary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } | **secondary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } | **tertiary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } } : Specify the endpoint name. You can configure the primary, secondary, and tertiary hosts (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both the IPv4 and IPv6 addresses. However, the AMF gives preference to the IPv4 address.
- **capacity** *capacity*: Specify the node capacity for the endpoint. *capacity* must be an integer in the range of 0-65535.
- The endpoint selection for sending the message is based on probabilistic load-balancing algorithm (IETF RFC 2782) using the priority and capacity parameters.
- **primary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } : Specify the primary endpoint IPv4 address, IPv6 address, or port.
- **secondary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } : Specify the secondary endpoint IPv4 address, IPv6 address, or port.
- **tertiary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } : Specify the tertiary endpoint IPv4 address, IPv6 address, or port.
- **priority** *priority\_value*: Specify the priority for the service to select the appropriate profile using the load-balancing logic. *priority* must be an integer in the range of 0-65535.

- **uri-scheme { http | https }**: Specify the URI scheme as **http** or **https**.
- **version [ uri-version version\_num full version version\_num ]**: Specify the api/version. The full version format is <Major-version>.<Minor-version>.<patch-version>.[alpha-<draft-number>].

## Verifying the NF Endpoint Profile Parameters for NF Management

Use the **show running-config group nrf** command to verify the NF endpoint profile parameters for NF management.

```
show running-config group nrf
group nrf mgmt mgmt_group
service type nrf nnrf-nfm
endpoint-profile epprof
uri-scheme http
endpoint-name EP1
priority 2
primary ip-address ipv4 209.165.200.231
primary ip-address port 8082
secondary ip-address ipv4 209.165.200.232
secondary ip-address port 8082
exit
endpoint-name EP2
priority 10
primary ip-address ipv4 209.165.200.231
primary ip-address port 8082
secondary ip-address ipv4 209.165.200.232
secondary ip-address port 8082
exit
exit
exit
exit
```

## AMF Deregistration with NRF

### Feature Description

The AMF supports the deregistration of Network Function (NF) Repository Function (NRF), wherein the NF deregister service operation of the AMF removes the profile of a network function that is registered in the NRF.

The AMF starts the NF deregister service operation in the following scenarios:

- When the Service Based Interface (SBI) endpoint is not configured and all the rest endpoints stop functioning.
- When all the configured SBI endpoints VIP IP and N11 VIP IPs are offline.



#### Note

AMF can't perform NRF deregistration when all the REST endpoints abruptly stop functioning. Only the REST endpoints can perform registration or deregistration of NRF.

## How it Works

The NF deregister service operation deletes the specific resource based on its NF instance ID. The NF deregistration starts when the Uniform Resource Identifier (URI) receives a request to delete a specific NF instance.

The recommended AMF shutdown process involves the following steps:

1. All N11 and SBI VIP IPs are marked as offline. After these endpoints appear offline, the NF deregistration request is sent to the NRF. The NRF notifies the peer NFs, such as SMF, about the AMF shutdown and its unavailability for traffic.
2. Wait for a grace period to allow convergence and perform a "system mode shutdown" to stop all the pods.

When the endpoint SBI is not configured, the system deletes the rest-ep pod immediately and avoids proper convergence. Implementing the system mode shutdown without taking the SBI and N11 VIP IPs offline also avoids convergence.

## Call Flows


This section describes the following call flows:

- NRF deregistration call flow
- NRF deregistration trigger events call flow

### NRF Deregistration Call Flow

This section describes the NF deregistration call flow.

**Figure 56: NRF Deregistration Call Flow**

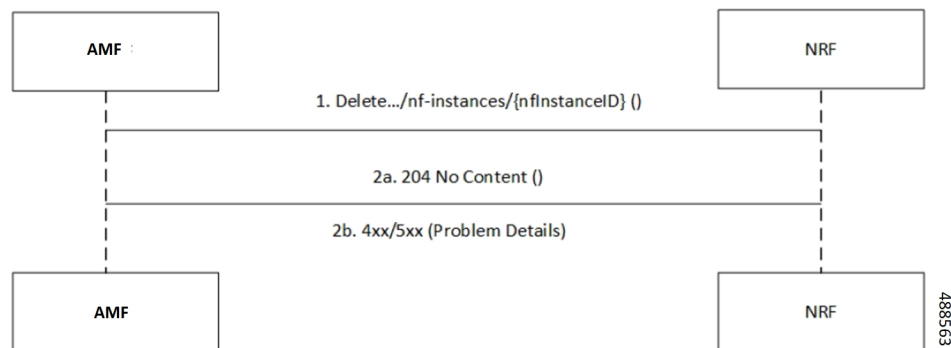

**Table 141: NRF Deregistration Call Flow Description**


| Step | Description                                                                                                                     |
|------|---------------------------------------------------------------------------------------------------------------------------------|
| 1    | The AMF sends a Delete request to the resource URI that indicates the NF instance. The request body is empty.                   |
| 2a   | If the deletion of the specified resource is successful, the "204 No Content" message appears. The response body remains empty. |

| Step | Description                                                                                                                                                                                                         |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2b   | If the NF instance, which is identified with the NF instance ID, does not exist in the list of registered NF instances in the NRF database, the NRF sends the "404 Not Found" status code with the problem details. |

### NF Deregistration Trigger Events Call Flow

This section describes the NF deregistration trigger events call flow.

**Figure 57: NF Deregistration Trigger Events Call Flow**

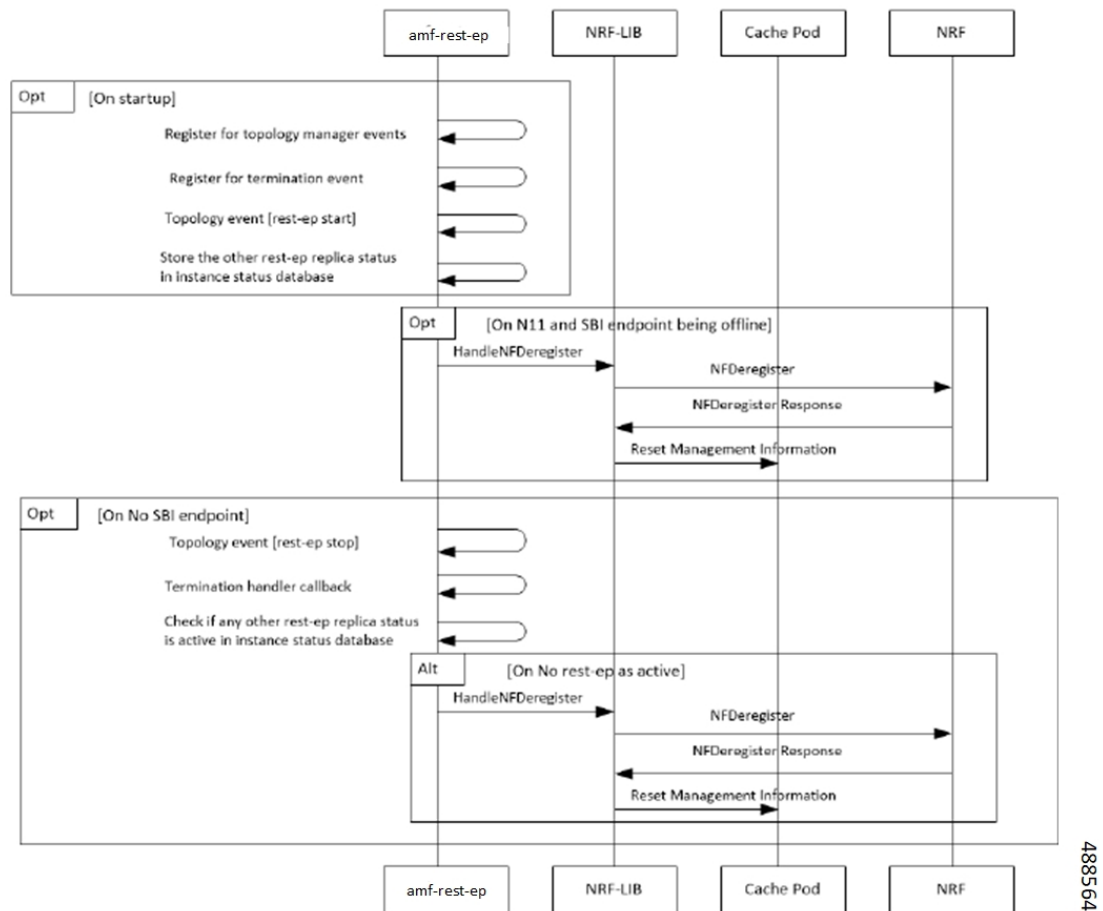

**Table 142: NF Deregistration Trigger Events Call Flow Description**

| Step       | Description                                                                                                                                                                                                                                                                                         |
|------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| On startup |                                                                                                                                                                                                                                                                                                     |
| 1          | The AMF rest-ep registers for topology manager events to identify the state of other rest-ep instances and keeps a track of these instances in an instance state database.                                                                                                                          |
| 2          | The AMF rest-ep registers for the termination handler with the application infrastructure for receiving notification when the application infrastructure stops functioning. As part of the termination handler, the AMF rest-ep monitors the instance state database for any other working rest-ep. |



| Step                                       | Description                                                                                                         |
|--------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| 3                                          | The AMF rest-ep starts the topology event.                                                                          |
| 4                                          | The AMF rest-ep saves the status of other rest-ep replicas in the instance state database.                          |
| When the N11 and SBI endpoints are offline |                                                                                                                     |
| 5                                          | The AMF rest-ep sends the Handle NF deregister message to the NRF-Lib.                                              |
| 6                                          | When all the SBI and N11 VIP IP endpoints are offline, the AMF rest-ep sends the deregistration request to the NRF. |
| 7                                          | The NRF sends the NF deregister response to the NRF-Lib.                                                            |
| 8                                          | The NRF-Lib resets all the management information that is configured in the cache pod.                              |
| When no SBI endpoint exists                |                                                                                                                     |
| 9                                          | The AMF rest-ep starts the topology event to stop the other rest-ep.                                                |
| 10                                         | The AMF rest-ep starts the termination handler callback.                                                            |
| 11                                         | The AMF rest-ep checks the instance status database for any other working rest-ep.                                  |
| When no rest-ep is functional              |                                                                                                                     |
| 12                                         | The AMF rest-ep sends the Handle NF deregister message to the NRF-Lib.                                              |
| 13                                         | The AMF rest-ep sends the deregistration request to the NRF.                                                        |
| 14                                         | The NRF sends the NF deregistration response to the NRF-Lib.                                                        |
| 15                                         | The NRF-Lib resets all the management information that is configured in the cache pod.                              |

## Standards Compliance

The AMF deregistration with NRF feature complies with the following standards:

- *3GPP TS 29.510 version 15.4.0 — 5G System; Network function repository services; Stage 3*

## Limitations

The AMF deregistration with NRF feature has the following limitation:

- When N11 and SBI VIP IPs are not marked offline, the NF deregistration is not sent for the system mode shutdown because no specific order for pod deletion exists. In addition, no monitoring procedure exists to check if the rest-ep pods are working.

# NF Heartbeat

## Feature Description

The NF Heartbeat feature enables the NFs to notify the NRF that the NF is operational. Each NF registered with the NRF contacts the NRF periodically by invoking the NF Update service operation. The time interval at which the NRF is contacted is deployment-specific and is returned by the NRF to the AMF as a result of a successful registration.

AMF sends the NF status and load parameter as part of NF heartbeat to NRF. AMF provides a CLI to configure the interval between periodic NF heartbeat. If the heartbeat value is configured in the NF registration response, the same value is used instead of another configured value.

## NF Heartbeat Interval

The AMF NF Heartbeat feature notifies the NRF that the AMF is operational. The default heartbeat interval is once in 10 seconds. With the **heartbeat interval** CLI command, you can configure the interval (in seconds) between the heartbeats. If NRF returns a different heartbeat time value as part of NF registration response or heartbeat response, then the same interval is used for subsequent heartbeats. As part of the heartbeat, NRF sends the HTTP PATCH Request to the resource URI representing the NF instance. The payload body of the PATCH Request contains a "replace" operation on the "nfStatus" attribute of the NF profile of the NF instance, and configures it to the "REGISTERED" value. This release does not support parameters, such as load and capacity.



**Note** AMF uses the configured heartbeat. If the heartbeat is not configured, AMF uses the locally configured heartbeat.

## How it Works

### Call Flows

#### NF Heartbeat Call Flow

The following figure illustrates the NF heartbeat call flow.

**Figure 58: NF Heartbeat Call Flow**

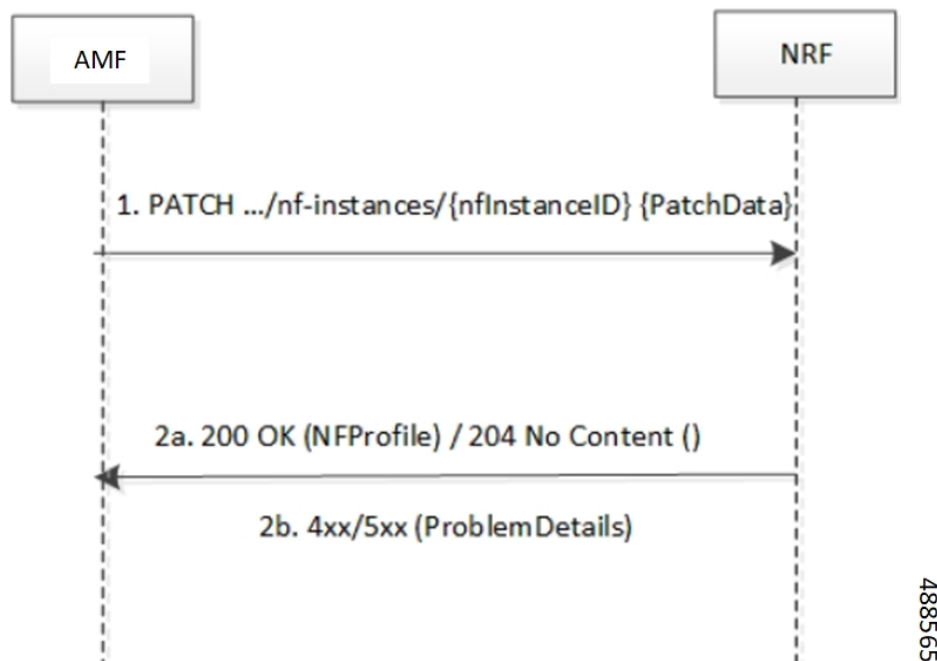


Table 143: NF Heartbeat Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The NF Service Consumer sends a PATCH request to the resource URI representing the NF instance. The payload body of the PATCH request contains a replace operation on the nfStatus attribute of the NF Profile of the NF instance, and set it to the value REGISTERED.                                                                                                                                                                                                                                                                       |
| 2    | On success, if the NF Profile changes, the NRF returns "200 OK" along with the full NF Profile data in the response body; otherwise, "204 No Content" is returned.                                                                                                                                                                                                                                                                                                                                                                           |
| 3    | <p>If the NF instance, identified by the "nfInstanceId", is not found in the list of registered NF instances in the NRF's database, the NRF returns "404 Not Found" status code with the ProblemDetails IE providing details of the error. Example:</p> <pre> PATCH .../nf-instances/4947a69a-f61b-4bc1-b9da-47c9c5d14b64 Content-Type: application/json-patch+json [   {"op": "replace", "path": "/nfStatus", "value": "REGISTERED"} ] HTTP/2 204 No Content Content-Location: .../nf-instances/4947a69a-f61b-4bc1-b9da-47c9c5d14b64 </pre> |

## Standards Compliance

The NF Heartbeat feature complies with the following standards:

- 3GPP TS 29.510, version 15.4.0 (2019-07) — 5G System; Network function repository services; Stage 3

## Configuring NRF Heartbeat Interval

This section describes how to configure the NRF heartbeat interval.

```

config
 group nf-mgmt nf_mgt_name
 heartbeat interval heartbeat_interval
 end

```

### NOTES:

- **group nf-mgmt** *nf\_mgt\_name*: Specify the group name of NF management.
- **heartbeat interval** *heartbeat\_interval*: Specify the interval of heartbeat between the heartbeats. The value of heartbeat interval is in seconds.



### Note

If NRF returns a different heartbeat interval value as part of NF registration response or heartbeat response, the same value is used for subsequent heartbeats.

# NRF Support for AMF Subscription and Notification

## Feature Description

The AMF uses the NRF-provided Subscription service to subscribe to NF status changes that the NF receives as a discovery response. This feature helps in updating the cached NF discovery responses.

The AMF honors only the notification changes in load, capacity, status at the NF level, and at the service level. It ignores all other parameter changes in the notification.

After the successful subscription for notification service, the AMF receives notifications of registration and deregistration of NF Instances, or notifications of NF profile changes for a given NF Instance.

The AMF supports the "NFProfile" field and "ChangeItem" field in the "NotificationData". If the notification event type is set to "NF\_PROFILE\_CHANGED", the AMF receives notification about the profile-level changes or a list of individual change items for the NFProfile parameters along with nfInstanceUri.

The "ChangeItem" field includes the following parameters:

- op—Indicates the type of change that happens to the resource.
- path—Contains the JSON pointer value which indicates the target location within the resource.
- from—Indicates the path of the JSON element that is moved or copied to the location indicated by the "path" attribute. It is present if the "op" attribute is of value "MOVE".
- origValue—Indicates the original value at the target location within the resource specified in the "path" attribute.
- newValue—Indicates a new value at the target location within the resource specified in the "path" attribute.



**Note** The AMF currently supports only the ADD, REPLACE, and REMOVE operations as part of the "op" parameter.

The following is an example of the notification payload sent from the NRF when an NF instance has changed its profile by updating the IP address value and the TCP port for the first endpoint of the first NF service.

Example 1:

```
{
 "event": "NF_PROFILE_CHANGED",
 "nfInstanceUri": ".../nf-instances/4947a69a-f61b-4bc1-b9da-47c9c5d14b64",
 "profileChanges": [
 {
 "op": "REPLACE",
 "path": "/nfServices/0/ipEndpoints/0/ipAddress", ==> Change ipAddress to ipv4Address

 "newValue": "209.165.201.10"
 },
 {
 "op": "REPLACE",
 "path": "/nfServices/0/ipEndpoints/0/port",
 "newValue": 8080
 }
]
}
```

Example 2:

```
{
 "event": "NF_PROFILE_CHANGED",
 "nfInstanceUri": ".../nf-instances/4947a69a-f61b-4bc1-b9da-47c9c5d14b64",
 "nfProfile": <Newly updated complete profile>
}
```

## How it Works

This feature uses the NF Subscribe service to subscribe to changes on the status of NF instances that the NF receives as discovery responses. The AMF sends a subscription for the response validity period for each of the NF profiles that it receives in the discovery response. The AMF checks if an existing NF instance subscription time needs an extension or not depending on the current response time validity. If a subscription needs an extension, a subscription PATCH is sent with the extended validity time.

During subscription, the NRF may respond with a modified validity time. This validity time might differ from the AMF validity time request. In such a scenario, the AMF tracks the required subscription time and the actual subscription time returned by the NRF.

The AMF periodically (every two minutes) checks in database if there is any subscription with the actual subscription time ending soon (as in next five minutes) but has required validity time more than the actual validity time. In this scenario, the AMF sends a PATCH subscription to extend the subscription validity time.

The AMF fills the Status Notification URI based on the interface NRF configuration that is specified in the configuration. The notification VIP IP and VIP port are used to frame the status notification URI.

```
http://{nrfinterface.vip-ip}:{ nrfinterface.vip-port}/{notifResourceURI}
```

On status notification, the AMF updates the local cache and the external cache (cache pod) with the changed attributes.

## Call Flows

This section describes the call flows for the AMF Subscription and Notification feature.

### Subscription (PATCH) Call Flow

The NRF updates the subscription to notifications on NF instances to refresh the validity time, when the specified time is due to expire. The AMF can request a new validity time to the NRF. If the operation is successful, the NRF can assign and provide a new validity time to the NF.

Updating the "subscriptionID" resource, initiates the Subscription (PATCH) operation. The operation starts on issuing an HTTP PATCH request on the URI representing the individual resource.

The following figure illustrates the call flow for subscription to NF instances in the same PLMN.

**Figure 59: Subscription (PATCH) Call Flow**

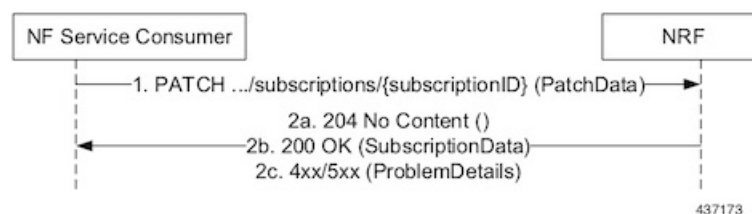


Table 144: Subscription (PATCH) Call Flow

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The AMF sends a PATCH request to the resource URI identifying the individual subscription resource. The payload body of the PATCH request contains a "replace" operation on the "validityTime" attribute of the SubscriptionData structure. The request also contains a new suggested value for the "validityTime" attribute. This replace operation does not replace any other attribute of the resource. |
| 2a   | When a subscription is successful, the NRF sends a "204 No Content" response. This response indicates that the NRF accepts: <ul style="list-style-type: none"> <li>• Extension of the subscription lifetime</li> <li>• Value of the "validityTime" attribute</li> </ul>                                                                                                                                    |
| 2b   | If the subscription fails due to errors in the JSON Patch object in the request body, the NRF returns a "400 Bad Request" status code with the problem details.                                                                                                                                                                                                                                            |
| 2c   | If the subscription fails due to internal errors in the NRF, the NRF returns a "500 Internal Server Error" with the problem details.<br><br>Example:<br><br><pre>PATCH ../subscriptions/2a58bf47 Content-Type: application/json-patch+json [   { "op": "replace", "path": "/validityTime", "value": "2018-12-30T23:20:50Z" }, ]</pre>                                                                      |

### Subscription (POST) Call Flow

The Subscription service operation allows to:

- Create a subscription so that the AMF can request notification (depending on certain filters) in the following scenarios:
  - When there is a registration or deregistration in the NRF.
  - When there is a modification to a profile.
- Create a subscription to a specific NF instance such that the AMF can request notification in the following scenarios:
  - When there is a modification to an NF instance.
  - When there is a deregistration of an NF instance.

**Important**

Currently, AMF only supports the subscription of NF instances that the NF receives as its discovery response.

The following figure illustrates the call flow for subscription to NF instances in the same PLMN.

**Figure 60: Subscription (POST) Call Flow**

Implementing the subscription to notifications on NF instances creates a new individual resource under the collection resource "subscriptions." Issuing a POST request starts the operation on the Uniform Resource Identifier (URI) representing the "subscriptions" resource.

**Table 145: Subscription (POST) Call Flow Description**

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>The NF Service Consumer sends a POST request to the resource URI representing the "subscriptions" collection resource.</p> <p>The request body includes data that indicates the type of notifications that the AMF has subscribed to receive. It also contains a callback URI, where the AMF prepares to receive the actual notification from the NRF. The notification contains the AMF suggested validity time, which represents the time span during which the subscription remains active.</p> <p>The subscription request may also include more parameters indicating the list of attributes in the NF Profile to monitor (or to exclude from monitoring). This request determines if the NRF must send a notification, when there is a change in any of the profile attributes.</p> <p>The subscription data also includes the <b>reqNfType</b> attribute, which contains the NF type of the NF Service Consumer that requests the creation of the subscription. The NRF uses it for authorizing the request.</p> |
| 2a   | <p>When a subscription is successful, the NRF sends a "201 Created" response. This response contains newly created subscription data that includes the NRF-determined validity time beyond which, the subscription is invalid. When the subscription expires, the AMF creates a new subscription in the NRF to continue receiving status notifications.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 2b   | <p>If the subscription fails due to errors in the subscription data, the NRF returns a "400 Bad Request" status code with the problem details.</p> <p>If the subscription fails due to internal errors in the NRF, the NRF returns a "500 Internal Server Error" with the problem details.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

### NFStatus Notify Call Flow

When a POST request is issued to each callback URI of the various subscribed NF instances, the AMF initiates the NFStatus Notify operator.

The following figure illustrates the NFStatus Notify call flow.

Figure 61: NFStatus Notify Call Flow

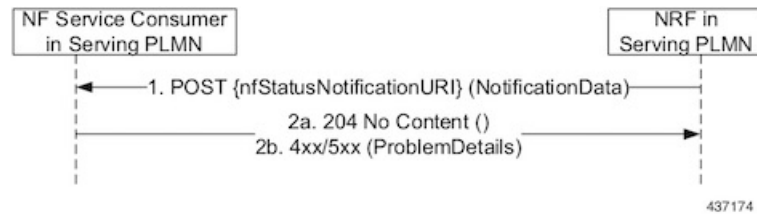


Table 146: NFStatus Notify Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>The NRF sends a POST request to the callback URI.</p> <p>The request body for a profile change notification request includes the following:</p> <ul style="list-style-type: none"> <li>• <b>event</b>—This attribute indicates the notification type. It can be one of the following: <ul style="list-style-type: none"> <li>• NF_REGISTERED</li> <li>• NF_DEREGISTERED</li> <li>• NF_PROFILE_CHANGED</li> </ul> </li> <li>• <b>nfInstanceUri</b>—Uniform Resource Identifier (URI) of the NF instance associated to the notification event.</li> <li>• <b>nfProfile</b>—Indicates the new or updated NF profile.</li> <li>• <b>profileChanges</b>—This attribute identifies changes on the profile of the NF instance associated to the notification event. This attribute is available when the event notification type is "NF_PROFILE_CHANGED".</li> </ul> |
| 2a   | When the notification is successful, the NRF sends a "204 No content" response.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| 2b   | If the AMF disregards "nfStatusNotificationURI" as a valid notification URI, the AMF returns a "404 Not Found" status code with the problem details. For example, if the URI does not belong to any of the existing subscriptions that the AMF has created in the NRF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## Limitations

This feature has the following limitations:

- NF status notification supports only NF profile load, NF profile capacity, NF profile status, service load, service capacity, and service status parameter changes.
- AMF supports only the NFProfile field in the "NotificationData." It does not support the "Change item" field.
- The AMF supports notification of the following parameter changes:
  - nfProfile
  - nfStatus
  - ipv4Address



- ipv6Address
- priority
- capacity
- load
- nfService
- version



**Note** Change to a new version is permitted but not the deletion and modification of the existing version.

- scheme



**Note** Currently, http is only supported

- nfServiceStatus
- ipEndPoints
- apiPrefix
- capacity
- load
- priority

- The AMF currently supports only the ADD, REPLACE, and REMOVE operations as part of the "op" parameter in the "ChangeItem" field.

## Configuring NRF for Subscription and Notification

This section describes how to configure the NRF for subscription and notification.



**Note** For the subscription and notification to work, it is mandatory to configure the NRF interface within SBI interface.

When discovery is done with NRF, a subscription message for the discovered NF instances is sent. The AMF fills the Status Notification URL based on the NRF interface configuration that is specified in the configuration. The notification VIP IP and VIP port are used to frame the status notification URL. The AMF uses the URL that is included in the subscription request message for status notifications.

To configure the NRF interface, vip-ip, vip-port, and loopback port to open the server endpoints for the NF status notification, use the following sample configuration.

```

config
 instance instance-id gr_instance_id
 endpoint sbi
 replicas replica_num
 vip-ip ip_address
 interface nrf
 vip-ip ip_address
 vip-port port_number
 loopbackPort port_number
 end

```

**NOTES:**

- **interface nrf:** Specify the interface as NRF.
- **vip-ip ip\_address:** Specify the virtual IP address of the virtual host. The AMF uses this as the listening IP address for the status notification.
- **vip-port port\_number:** Specify the port number of the virtual host. The AMF uses this as the listening port for the status notification.
- **loopbackPort port\_number:** Specify the internal port number of the loopback host. The AMF uses this port for the NF status notification.

## Standard Compliance

This feature complies to *3GPP TS 29.510, Version 16.4.0*.

## NF Profile Update

### Feature Description

The AMF invokes the NF Update service operation when there are changes to the NF registration parameters due to the AMF profile configuration change.

The NF Update service updates the NF profile that was previously registered in the NRF by providing the updated profile of the requesting NF to the NRF.

The update operation can be one of the following:

- A whole NF profile update (complete replacement of the existing profile with a new profile)
- An update to only a subset of the NF profile parameters (adding, deleting, or replacing services to the NF profile)

### How it Works

This section describes the NF profile update procedure.

### Call Flows

This section describes the following call flows:


- [NF Profile Complete Replacement Call Flow, on page 411](#)

- [NF Registration and NF Update Call Flow, on page 411](#)

### NF Profile Complete Replacement Call Flow

The following figure illustrates a call flow representing the complete NF profile replacement.

**Figure 62: NF Profile Complete Replacement**

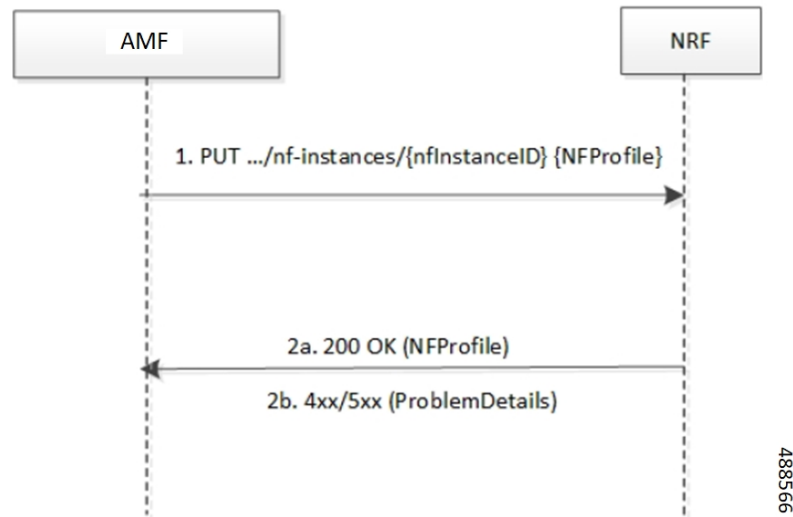


**Table 147: NF Profile Complete Replacement Call Flow Description**

| Step | Description                                                                                                                                                                                                                      |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The AMF sends a PUT request to the resource URI representing the NF instance. The payload body of the PUT request contains an update operation on the NF Profile of the NF instance.                                             |
| 2a   | On success, if the NF Profile changes, the NRF returns "200 OK" along with the full NF Profile data in the response body.                                                                                                        |
| 2b   | If the NF instance, identified by the "nfInstanceId", is not found in the list of registered NF instances in the NRF database, the NRF returns 4xx or 5xx status code with the ProblemDetails IE providing details of the error. |

### NF Registration and NF Update Call Flow

The following figure illustrates the call flow representing the NF registration and NF update messaging from AMF on NF profile change trigger from REST-EP.

Figure 63: NF Registration and NF Update Call Flow

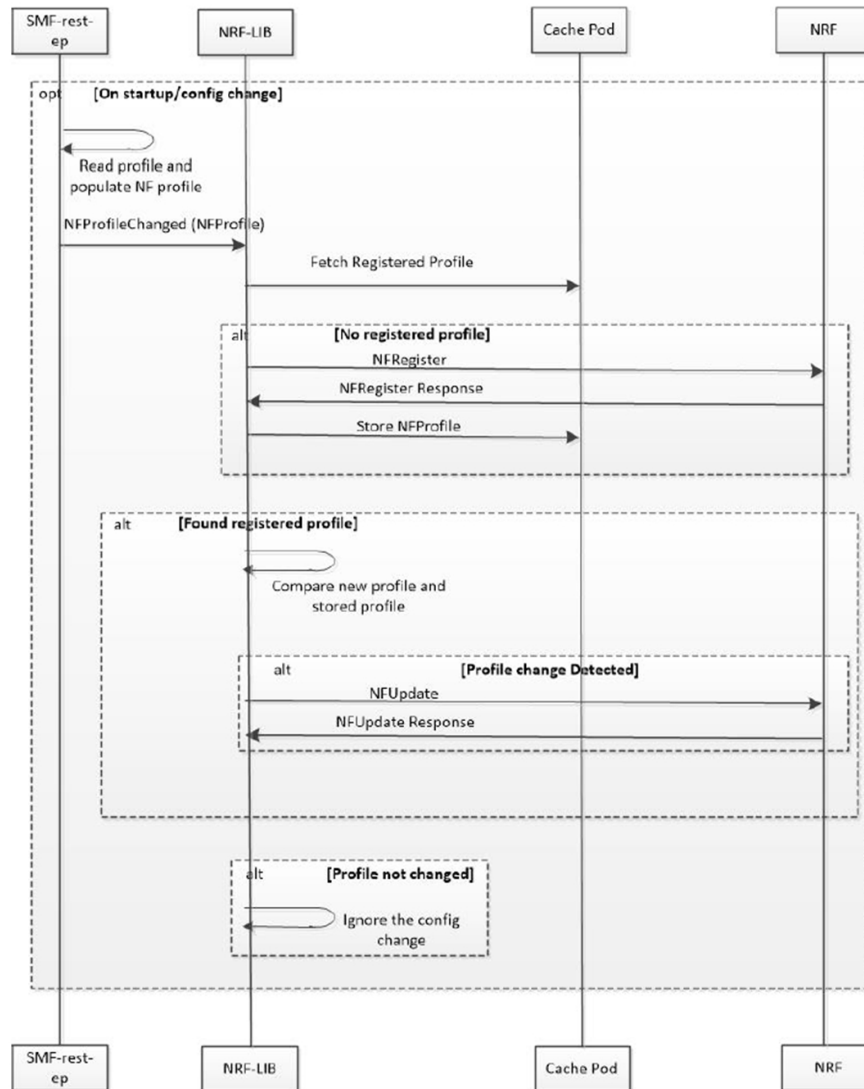

1. The AMF REST-EP, on start-up, reads the AMF profile configuration and accordingly populates the NF management profile. The REST-EP then triggers AMF to indicate the NF Profile change.
2. The AMF maintains the NF registration status and the registered profile in an external cache pod. The AMF detects whether the NF registration with NRF is completed. If the AMF detects that the registration is not completed during NF profile change handling, perform Step 3. If the NF registration is complete, perform Step 4.
3. The AMF sends NF Register to NRF. It allows an NF instance to register its NF profile in the NRF. It includes the registration of the general parameters of the NF instance along with the list of services exposed by the NF instance.
4. The AMF fetches the registered NF profile and then compares it with the new profile.
5. The AMF sends NF update (PUT) request to the NRF when any of the parameters in the NF management profile changes due to AMF profile configuration change.

Load parameter is not set as part of the PUT message. Heartbeat is set as the current active heartbeat interval.

6. The AMF ignores the trigger if there is no change detected.



---

**Important** The NF update is sent only from the elected AMF.

---

## Standards Compliance

The NF Profile Update feature complies with the following standards:

- *3GPP TS 29.510, Version 15.4.0 (2019-07) – 5G System; Network function repository services; Stage 3*

## Limitations

The NF Profile Update feature has the following limitation:

- Supports only the complete replacement of NF profile.
- Doesn't support capacity.

# NF Discovery

## Feature Description

The AMF uses the NRF-provided, NF discovery service to discover network functions (NFs), such as Access and Mobile Function (AMF), Unified Data Management (UDM), and Policy Control Function (PCF). The AMF configures the preferred locality as provided in the "profile nf-pair" configuration of Network Repository Function (NRF) in the discovery query.

For each NF, the query parameters, also known as filters, are configurable. Based on these parameters, NRF returns all the NFs matching the query criteria for the AMF to discover NF profiles.



---

**Note** The NF discovery and load-balancing capabilities are available only for UDM, PCF, CHF, and AMF.

---

NF discovery supports dynamic configuration change. With this feature, if the configurations were modified in the middle of the transaction or procedure, the ongoing transactions are not impacted.

The dynamic configuration change feature supports the following:

- NRF transaction or procedure picks a configuration version (v1) and uses the same version until the NRF transaction or procedure completes.
- If you change the configuration during an ongoing NRF transaction, then a new configuration version (v2) is created. However, the new configuration is applied in the new transaction.

The dynamic configuration changes apply to the following data structures:

- NrfFailureProfileSt
- NrfClntProfileSt
- NrfGrpSt
- NrfPairProfileSt
- NrfMgmtGrpSt

## How it Works

The service operation is executed by querying the "nf-instances" resource. The request is sent to an NRF in the same PLMN of the AMF.


## Call Flows

This section describes the call flow associated with this feature.

### Service Discovery Request Call Flow

This section describes the service discovery request call flow.

**Figure 64: Service Discovery Request Call Flow**

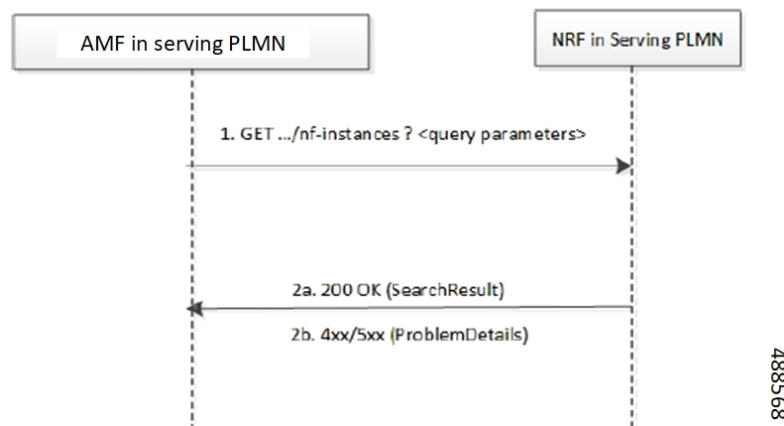

**Table 148: Service Discovery Request Call Flow Description**

| Step | Description                                                                                                                                                                                                                                                                   |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The AMF sends an HTTP GET request to the resource URI "nf-instances" collection resource. The input filter criteria for the discovery request exists in query parameters.                                                                                                     |
| 2a   | On success, "200 OK" is returned. The response body contains a validity period, during which the AMF caches the search result, and an array of NF profile object that satisfy the search filter criteria. For example, all NF instances displaying a certain NF Service name. |

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2b   | <p>If the AMF is not allowed to discover the NF services for the requested NF type provided in the query parameters, the NRF returns "403 Forbidden" response.</p> <p>If the discovery request fails at the NRF due to errors in the input data in the URI query parameters, the NRF returns "400 Bad Request" status code with the "ProblemDetails" IE providing details of the error.</p> <p>If the discovery request fails at the NRF due to NRF internal errors, the NRF returns "500 Internal Server Error" status code with the "ProblemDetails" IE providing details of the error.</p> |

The NF profile objects that are returned in a successful result contains generic data of each NF instance, applicable to any NF type. These objects can also contain NF-specific data, for those NF instances belonging to a specific type (for example, the attribute "udrInfo" exists in the NF profile when the type of the NF instance takes the "UDR" value). In addition, the attribute "customInfo" exists in the NF profile for NF instances with custom NF types. For NF instances, the NRF returns the "customInfo" attribute, if available, as part of the NF profiles returned in the discovery response.

The AMF service communicates with different NFs, such as UDM, SMF, PCF, and CHF, when the session is active. The NF discovery is based on set of filters, also called query parameters, which are associated with the session. The AMF service discovers the NFs, matching the filter criteria for the session, to send messages to NF.

The AMF supports the following filters:

- Dnn
- Tai
- TargetNfFqdn
- TargetPlmnList
- TargetNfInstanceId
- Snssais
- Preferred locality

The discovered NFs are cached with the filter as the key. The endpoint selection for sending the message is based on probabilistic load balancing algorithm (IETF RFC 2782) using the priority and capacity parameters. The NF discovery response carries a validity time, which decides the cache validity period.

AMF sends the messages to a target based on the Location header URL in response to initial messages sent to NF.

AMF supports stickiness wherein the endpoint, service instance, and NF instance details of the selected endpoint for a message that is sent, will be provided to the application or REST-EP so that the same can be specified in subsequent message (instead of discovery filter). This operation helps in maintaining stickiness for a session to the selected NF.

## Standards Compliance

The NF Discovery feature complies with the following standards:

- *3GPP TS 29.510 version 15.4.0 (2019-07) – 5G; 5G System; Network function repository services; Stage 3*

## Limitations

The NRF Discovery feature has the following limitations:

- The cache maintained is local to the library. In case of deployment with multiple replicas of REST-EP, if two Discovery or Send messages with the same discovery filter land on different pods, then both the pods trigger NF discovery.
- This feature supports only the UDM, PCF, CHF, and SMF discovery, and load balancing. It does not support UPF discovery.

## Configuring NRF for Discovery

This section provides the configurations that are required to perform the NF discovery.

### Registering NRF

To register an NRF, use the following sample configuration.

```
config
nssai name nssai_name
 sst sst sst sst
 dnn dnn_name_value
end
```

#### NOTES:

- **nssai name nssai\_name**: Configure the NSSAI name value for the slice. The *nssai\_name* value must be a string.




---

**Note** AMF supports a maximum of 512 slices to be sent toward NRF.

---

#### Configuration Example

The following is an example configuration of the NRF registration.

```
nssai name slice1
 sst 02
 sdt Abf123
 dnn [dnn1 intershat intershat1 intershat2 intershat3 intershat4 intershat5 intershat6
intershat7 starosupf]
exit

nssai name slice2
 sst 02
 sdt Abf124
 dnn [dnn1 intershat intershat1 intershat2 intershat3 intershat4 intershat5 intershat6
intershat7 starosupf]
exit
```

### Discovering NRF

To configure the NRF discovery, use the following sample configuration:



```

config
 profile network-element [smf amf_profile_name | chf chf_profile_name | pcf
pcf_profile_name | udm udm_profile_name | upf upf_profile_name]
 query-params requester-snssais
 exit

```

**NOTES:**

- **query-params requester-snssais**: Specify the list of Single Network Slice Selection Assistance Information (S-NSSAIs) as the query parameter in the NF discovery request towards the NRF.

**Configuration Example**

The following is an example configuration.

```

config
 profile network-element udm udm1
 query-params requester-snssais
 exit
 profile network-element pcf pcf1
 query-params requester-snssais
 exit
 profile network-element chf chf1
 query-params requester-snssais
 exit
 profile network-element upf upf1
 query-params requester-snssais
 exit
 profile network-element amf amf1
 query-params requester-snssais
 exit

```

**Configuring NF Client Profile**

To configure the NF endpoints for SMF, CHF, PCF, and UDM, use the following sample configuration:

```

config
 profile nf-client { nf-type { smf smf-profile | chf chf-profile | pcf
pcf-profile | udm udm-profile } nf_profile_name }
end

```

**NOTES:**

- **profile nf-client { nf-type { smf smf-profile | chf chf-profile | pcf pcf-profile | udm udm-profile } nf\_profile\_name }**: Specify the required NF client profiles and provide the local configuration for any of the following configured NFs:
  - **smf**: Enable the SMF local configuration
  - **chf**: Enable the CHF local configuration
  - **pcf**: Enable the PCF local configuration
  - **udm**: Enable the UDM local configuration

For example, if you are configuring the **smf smf-profile** keyword, this command enables the SMF local configuration. The same approach applies for the other configured NFs.

*nf\_profile\_name* must be an alphanumeric string representing the corresponding NF client profile name.

- You can configure multiple NF profiles within a given service.
- To disable the configuration, use the **no profile nf-client { nf-type { smf smf-profile | chf chf-profile | pcf pcf-profile | udm udm-profile } nf\_profile\_name }** command.

## Configuration Example

The following is an example configuration.

```
profile nf-client nf-type pcf
pcf-profile pcf-profile
 locality LOC1
 priority 1
 service name type npcf-smpolicycontrol
 endpoint-profile epprof
 capacity 10
 priority 1
 uri-scheme http
 endpoint-name ep1
 priority 1
 capacity 10
 primary ip-address ipv4 209.165.202.133
 primary ip-address port 8080
 exit
 endpoint-name ep2
 priority 1
 capacity 10
 primary ip-address ipv4 209.165.201.1
 primary ip-address port 8080
 exit
exit
exit
exit
exit
profile nf-client nf-type pcf
pcf-profile pcf-profile
 locality LOC1
 priority 1
 service name type npcf-smpolicycontrol
 endpoint-profile epprof
 capacity 10
 priority 1
 uri-scheme http
 endpoint-name ep1
 priority 1
 capacity 10
 primary ip-address ipv4 209.165.201.2
 primary ip-address port 8080
 exit
```

## Associating a Discovery Group with NF Type

To pair a discovery group with NF types, use the following sample configuration.

```
config
 profile nf-pair nf-type nf_type
 nrf-discovery-group nrfdisc_group_name
 end
```

NOTES:

- **nf-type** *nf\_type*: Specify the NF client type value as AMF.
- **nrf-discovery-group** *nrfdisc\_group\_name*: Specify the NRF discovery group name. Discovery group is the logical link to the NRF endpoint groups (nrf-group). For each NF type, you can associate a discovery group and the locality information.

## Configuring NF Endpoint Profile Parameters in NRF Discovery Group

The AMF provides CLI for configuring NF endpoints for **nnrf-nfd** (NF discovery).



**Note** For a discovery group, you can configure only the **nnrf-disc** service.

The CLI configuration allows configuring multiple endpoints under each endpoint profile. The AMF uses the priority and capacity parameters to load balance between these endpoints. All endpoints under an endpoint profile share the session context. That is, when selecting an endpoint profile for initial message of a session, then the AMF sends the subsequent messages (for example, update, delete, and so on) of the session to any of the endpoints in the endpoint profile.

Primary, secondary, and tertiary hosts [ip:port] can be configured within each endpoint. Both IPv4 and IPv6 addresses can be specified. If both are specified, then the IPv4 address is preferred.

AMF provides APIs to discover and send a message to an NF matching a set of filter parameters.

A URI uniquely identifies a resource. In the 5GC SBI APIs, when a resource URI is an absolute URI, the structure is specified as follows:

```
{apiRoot}/{apiName}/{apiVersion}/{apiSpecificResourceUriPart}
```

apiRoot is a concatenation of the following parts:

- scheme ("http" or "https")



**Note** Both HTTP and HTTPS scheme URIs are allowed. See the *3GPP TS 33.501, subclause 13.1* for more information on security of service-based interfaces.

- fixed string "://"
- authority (host and optional port) as defined in IETF RFC 3986
- an optional deployment-specific string (API prefix) that starts with a "/" character [api-root in CLI]

To configure the NRF endpoints for different services supported by NRF, use the following sample configuration:

```
config
group nrf discovery discovery_name
 service type nrf nnrf-disc
 endpoint-profile
 name eprofile_name
 api-root api_string
 api-uri-prefix uri_prefix_string
 uri-scheme { http | https }
```

```

 endpoint-name ep_name { capacity capacity | primary ip-address {
ipv4 ipv4_address | ipv6 ipv6_address | port port_num } | secondary ip-address {
 ipv4 ipv4_address | ipv6 ipv6_address | port port_num } | tertiary ip-address
{ ipv4 ipv4_address | ipv6 ipv6_address | port port_num } }
 version [uri-version version_num full version version_num]
 end

```

**NOTES:**

- **group nrf discovery** *discovery\_name* : Configure the NRF discovery group.
- **api-root** *api\_string*: Specify the deployment-specific service API prefix that is used within the { apiRoot }.
- **api-uri-prefix** *uri\_prefix\_string*: Specify the {apiName}. If not configured, it takes the standard API name for the service as per the specification.
- **endpoint-name** *ep\_name* { **capacity** *capacity* | **primary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } | **secondary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } | **tertiary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } } : Specify the endpoint name. You can configure the primary, secondary, and tertiary hosts (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both the IPv4 and IPv6 addresses. However, the AMF gives preference to the IPv4 address.
  - **capacity** *capacity*: Specify the node capacity for the endpoint. *capacity* must be an integer in the range of 0-65535.
  - The endpoint selection for sending the message is based on probabilistic load-balancing algorithm (IETF RFC 2782) using the priority and capacity parameters.
  - **primary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } : Specify the primary endpoint IPv4 address, IPv6 address, or port.
  - **secondary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } : Specify the secondary endpoint IPv4 address, IPv6 address, or port.
  - **tertiary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } : Specify the tertiary endpoint IPv4 address, IPv6 address, or port.
  - **priority** *priority\_value*: Specify the priority for the service to select the appropriate profile using the load-balancing logic. *priority* must be an integer in the range of 0-65535.
- **uri-scheme** { **http** | **https** } : Specify the URI scheme as **http** or **https**.
- **version** [ **uri-version** *version\_num* **full version** *version\_num* ] : Specify the API URI version. The full version format is <Major-version>.<Minor-version>.<patch-version>.[alpha-<draft-number>].

**Verifying the NRF Endpoints Profile Parameters for NF Discovery**

This section describes how to verify the configuration of the NRF endpoints profile parameters.

```

show running-config group nrf
group nrf discovery udmdiscovery
service type nrf nnrf-disc
endpoint-profile epprof
capacity 10
priority 1
api-uri-prefix nudm-sdm

```

```

api-root root
uri-scheme http
version
 uri-version v1
 full-version 209.165.200.225
exit
exit
endpoint-name endpointName
priority 1
capacity 100
primary ip-address ipv4 209.165.200.237
primary ip-address port 3021
exit
exit
exit
exit

```

## Configuring Locality for NF Types

The AMF provides locality aware NF discovery.

A pair profile has the locality values configured with NF type as AMF. A locality has the following values:

- **client**—Specify the client locality information.
- **geo-server**—Specify the geo-service locality information.
- **preferred-server**—Specify the preferred server locality information.

For a profile selection, only the preferred-server and geo-server locality values are considered. Following are the scenarios of these locality values configuration:

- If both the preferred-server and geo-server locality values are configured, then the profiles, which exist in discovery response, matching these locality values are selected. In addition, the profiles with empty locality value are selected. Any other profile with locality other than preferred-server and geo-server locality values are not considered.
- If only the preferred-server locality value is configured, then the profiles, which exist in discovery response, matching this value is selected. In addition, the profiles with an empty locality value are selected. Any other profile with locality other than preferred-server locality value is not considered.
- If only geo-server locality value is configured then the profiles, which exist in discovery response, matching this geo-server locality value is selected. In addition, the profiles with empty locality value is selected. Any other profile with locality other than geo-server locality value is not considered.
- If both preferred-server and geo-server locality values are not configured then all the profiles, which exist in discovery response, are selected.

To configure the locality for NF types, use the following sample configuration.

```

config
 profile nf-pair nf-type nf_type
 locality { client client_name | geo-server geoserver_name | preferred-server
prefserver_name }
 end

```

### NOTES:

- **client** *client\_name*: Specify the client locality information. Client locality is the AMF locality and is a mandatory parameter.

- **preferred-server** *prefserver\_name*: Specify the preferred server locality information. The preferred server locality is the locality that should be considered as the locality of preference during the corresponding NF discovery.
- **geo-server** *geoserver\_name*: Specify the geo-server locality information. The geo-server locality is the geo redundant site for the preferred locality and is generally used as the next best server locality after preferred locality, during NF discovery.




---

**Note** **geo-server** *geoserver\_name* is not fully qualified.

---

## Verifying the Association of the Discovery Group and Locality Configuration

This section describes how to verify the discovery group association and locality configuration for NF.

```
show running-config profile nf-pair
profile nf-pair nf-type UDM
 nrf-discovery-group DISC1
 locality client LOC1
 locality preferred-server PREF_LOC
 locality geo-server GEO
exit
```

## Configuring Locality for AMF

To configure the locality for AMF, use the following sample configuration.

This is a mandatory configuration if the AMF performs the NF discovery using the NRF.

```
config
 profile AMF AMF_profile_name
 locality value
 end
```

### NOTES:

- **locality** *value*: Specify the AMF locality. *value* must be an alphanumeric string representing the deployed AMF locality. By default, this CLI command is disabled.
- To disable this configuration, use the **no locality** *value* command.

## Configuring NF Profiles for a DNN

To configure the NF profile that the configured Data Network Name (DNN) uses, use the following sample configuration.

```
config
 profile dnn dnn_profile_name
 network-element-profiles { smf | chf | pcf | udm } nf_profile_name
 end
```

### NOTES:

- **network-element-profiles { smf | chf | pcf | udm } *nf\_profile\_name***: Specify one or more NF types, such as SMF, CHF, PCF, and UDM as the network element profile. *nf\_profile\_name* must be an alphanumeric string representing the corresponding network element profile name.

- This is an optional configuration. By default, this CLI command is disabled.
- You can configure multiple profiles within a given service.
- To disable the configuration, use the **no network-element-profiles { smf | chf | pcf | udm } nf\_profile\_name** command.

## Defining Locality within NF Profile

This section describes how to define the locality of the NF endpoints. For the NF endpoint selection, the AMF first considers the preferred locality that is configured with the **profile nf-pair** CLI command. The admin determines the preferred locality based on the proximity of the locality and the network function. The AMF then uses the geo-server locality configurations as the next preferred locality for the NF discovery. For information on the **profile nf-pair** command, see [Configuring Locality for NF Types, on page 421](#) in the [NRF Selection per Peer NF Type, on page 425](#) section.

The AMF selects the other locality endpoints if the **profile nf-pair** CLI command does not include the preferred server locality configuration, or if the **profile nf-client** CLI command does not include the endpoint configured with the preferred server or geo-server locality. For the other locality endpoint selection, the AMF uses the **priority** configuration within the **locality** CLI command.

To define the locality of the NF endpoints, use the following sample configuration.

```
config
 profile nf-client { nf-type { smf smf-profile | chf chf-profile | pcf
pcf-profile | udm udm-profile } nf_profile_name }
 locality locality_name [priority priority | service name type service_types
{ endpoint-profile epprofile_name }]
 end
```

### NOTES:

- **locality locality\_name**: Specify the locality of the NF endpoint. The AMF uses the locality configurations (that is, the preferred server locality and geo-server locality) to select the appropriate NF endpoints.
- **priority priority**: Specify the priority for the locality configuration.
- **service name type service\_types**: Specify the configured NF service types. The service types vary depending on the configured service.
  - SMF service supports "nsmf-comm" as peer communication type.
  - PCF service supports "npcf-am-policy-control" as peer communication type.
  - UDM service supports "nudm-sdm" and "nudm-uecm" as peer communication type.
  - SMF service supports "nsmf-pdusession" as peer communication type.
  - EIR service supports "n5g-eir-eic" as peer communication type.
  - NSSF service supports "nssf-nssselection" as peer communication type.
  - SMSF service supports "nsmf-sms" as peer communication type.
  - LMF service supports "nlmf-loc" as peer communication type.
  - GMLC service supports "ngmlc-loc" as peer communication type.
  - AUSF service supports "nausf-auth" as peer communication type.

- **endpoint-profile** *epprofile\_name*: Specify the endpoints at a per NF service level. The NF specific services are available within the locality configuration.
- You can configure multiple endpoints per profile name for the configured NF.

## Configuring NF Endpoint Profile Parameters in NF Client Profile

This section describes how to configure the NF endpoint profiles within the service and its associated parameters.

The CLI configuration allows configuring multiple endpoints under each endpoint profile. The AMF uses the priority and capacity parameters to load balance between these endpoints. All endpoints under an endpoint profile share the session context. That is, when selecting an endpoint profile for initial message of a session, then the AMF sends the subsequent messages (for example, update, delete, and so on) of the session to any of the endpoints in the endpoint profile.

AMF provides APIs to discover and send a message to an NF matching a set of filter parameters.

A URI uniquely identifies a resource. In the 5GC SBI APIs, when a resource URI is an absolute URI, the structure is specified as follows:

```
{apiRoot}/{apiName}/{apiVersion}/{apiSpecificResourceUriPart}
```

apiRoot is a concatenation of the following parts:

- scheme ("http" or "https")



**Important** Both HTTP and HTTPS scheme URIs are allowed. See *3GPP TS 33.501, subclause 13.1* for more information on security of service-based interfaces.

- fixed string "://"
- authority (host and optional port) as defined in *IETF RFC 3986*
- an optional deployment-specific string (API prefix) that starts with a "/" character [api-root in CLI]

To configure the NF endpoint profiles within the service and its associated parameters, use the following sample configuration:

**config**

```
profile nf-client { nf-type { smf smf-profile | chf chf-profile | pcf
pcf-profile | udm udm-profile } nf_profile_name } locality locality_name
[priority priority | service name type service_type]
 endpoint-profile epprofile_name
 api-root api_string
 api-uri-prefix uri_prefix_string
 capacity capacity
 endpoint-name ep_name { capacity capacity | primary ip-address {
ipv4 ipv4_address | ipv6 ipv6_address | port port_num } | secondary ip-address {
ipv4 ipv4_address | ipv6 ipv6_address | port port_num } | tertiary ip-address {
ipv4 ipv4_address | ipv6 ipv6_address | port port_num } }
 priority priority_value
 uri-scheme { http | https }
```



```

version [uri-version version_num full version version_num]
end

```

**NOTES:**

- **api-root** *api\_string*: Specify the deployment-specific service API prefix that is used within the { apiRoot }.
- **api-uri-prefix** *uri\_prefix\_string*: Specify the {apiName}. If not configured, it takes the standard API name for the service as per the specification.
- **capacity** *capacity*: Specify the profile capacity.
- **endpoint-name** *ep\_name* { **capacity** *capacity* | **primary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } | **secondary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } | **tertiary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* } }: Specify the endpoint name. You can configure the primary, secondary, and tertiary hosts (IP: Port) within each endpoint for NF server failover handling. The server failover configuration accepts both the IPv4 and IPv6 addresses. However, the AMF gives preference to the IPv4 address.
  - **capacity** *capacity*: Specify the node capacity for the endpoint. *capacity* must be an integer in the range of 0–65535.  
The endpoint selection for sending the message is based on probabilistic load balancing algorithm (*IETF RFC 2782*) using the priority and capacity parameters.
  - **primary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* }: Specify the primary endpoint IPv4 address, IPv6 address, or port.
  - **secondary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* }: Specify the secondary endpoint IPv4 address, IPv6 address, or port.
  - **tertiary ip-address** { **ipv4** *ipv4\_address* | **ipv6** *ipv6\_address* | **port** *port\_num* }: Specify the tertiary endpoint IPv4 address, IPv6 address, or port.
- **priority** *priority\_value*: Specify the priority for the service to select the appropriate profile using the load balancing logic. *priority* must be an integer in the range 0–65535.
- **uri-scheme** { **http** | **https** }: Specify the URI scheme as **http** or **https**.
- **version** [ **uri-version** *version\_num* **full version** *version\_num* ]: Specify the API URI version. The full version format is <Major-version>.<Minor-version>.<patch-version>.[alpha-<draft-number>].

## NRF Selection per Peer NF Type


### Feature Description

The Network Repository Function (NRF) deployment can be logically segmented as global, regional, and so on, for a reliable network management. You can accomplish this segmentation by specifying different NRF endpoint groups for the discovery of different network functions.

For example, the AMF interacts with Region 1 NRF endpoints for management and AMF discovery. For UDM, CHF, and PCF discovery, the AMF communicates with the global NRF endpoints.

The following figure illustrates the NRF deployment.

Figure 65: NRF Deployment

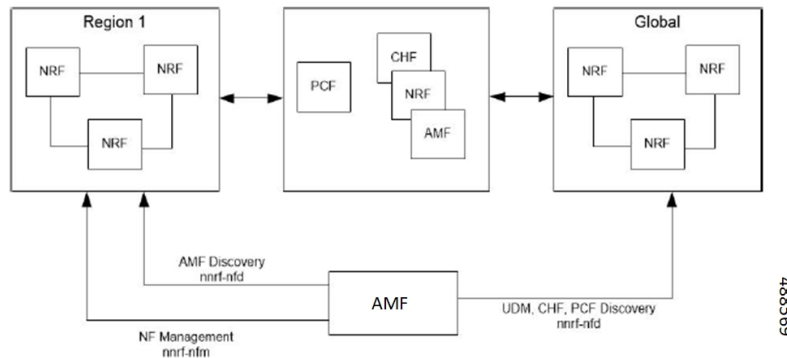

## Standards Compliance

This feature complies with the following standard:

- 3GPP TS 29.510 version 15.4.0—5G System; Network function repository services; Stage 3

## Configuring the NRF Selection per Peer NF Type

This section describes how to configure the NRF selection per peer NF type.

### Associating NRF Management and AMF Locality to NRF Endpoint

To configure the NRF management (nrf-group) and AMF locality, and associate them to NRF endpoint, use the following sample configuration.

```
config
 group nf-mgmt mgmt_name
 nrf-mgmt-group nrf_group_name
 locality locality_name
 message-handling-profile message_handling_profile_name
 end
```

#### NOTES:

- **nrf-mgmt-group** *nrf\_group\_name*: Specify the NRF management group.
- **locality** *locality\_name*: Specify the locality information.
- **message-handling-profile** *message\_handling\_profile\_name*: Specify the message handling profile for NRF.

### Verifying the Association of the NRF Management and AMF Locality to NRF Endpoint

This section describes how to verify the configuration that associates the NRF management and AMF locality to NRF endpoint.

```
show running-config group nf-mgmt
group nf-mgmt NFMGMT1
 nrf-mgmt-group MGMT
 locality LOC1
exit
```

## Configuring Locality for AMF

To configure the locality for AMF, use the following sample configuration.

This is a mandatory configuration if the AMF performs NF discovery using the NRF.

```
config
 profile AMF AMF_profile_name

 locality value
 end
```

### NOTES:

- **locality *value***: Specify the AMF locality. *value* must be an alphanumeric string representing the deployed AMF locality. By default, this CLI command is disabled.
- To disable the configuration, use the **no locality *value*** command.

## Configuring NF Profiles for a DNN

To configure the NF profile used by the configured Data Network Name (DNN), use the following sample configuration.

```
config
 profile dnn dnn_profile_name

 network-element-profiles { smf | chf | pcf | udm } nf_profile_name
 end
```

### NOTES:

- **network-element-profiles { smf | chf | pcf | udm } *nf\_profile\_name***: Specify one or more NF types, such as SMF, CHF, PCF, and UDM as the network element profile. *nf\_profile\_name* must be an alphanumeric string representing the corresponding network element profile name.
- This is an optional configuration. By default, this CLI command is disabled.
- You can configure multiple profiles within a given service.
- To disable the configuration, use the **no network-element-profiles { smf | chf | pcf | udm } *nf\_profile\_name*** command.

## Configuring Network Element Profile Parameters for the NF

To configure the network element profile parameters for the configured NF, use the following sample configuration.

```
config

 profile network-element { { smf | chf | pcf | udm } nf_profile_name }
 nf-client-profile profile_name
 query-params { dnn | limit | max-payload-size | requester-snssais |
supi | tai | target-nf-instance-id | target-plmn }
 end
```

### NOTES:

- **nf-client-profile** *profile\_name*: Specify the local NF client profile. *profile\_name* must be an alphanumeric string representing the corresponding NF client profile name.
- **query-params** { **dnn** | **limit** | **max-payload-size** | **requester-snssais** | **supi** | **tai** | **target-nf-instance-id** | **target-plmn** }: Specify one of the following query parameters to include in the NF discovery request towards the NRF.
  - **dnn**: Specify the DNN as the query parameter in the NF discovery request towards the NRF.
  - **limit**: Specify the limit for the maximum number of profiles that the NRF sends in the NF discovery response.
  - **max-payload-size**: Specify the maximum payload size as the query parameter in the NF discovery request towards the NRF.
  - **requester-snssais**: Specify the list of Single Network Slice Selection Assistance Information (S-NSSAIs) as the query parameter in the NF discovery request towards the NRF.
  - **supi**: Specify the SUPI as the query parameter in the NF discovery request towards the NRF.
  - **tai**: Specify the TAI as the query parameter in the NF discovery request towards the NRF.
  - **target-nf-instance-id**: Specify the target NF instance identifier as the query parameter in the NF discovery request towards the NRF.
  - **target-plmn**: Specify the target PLMN as the query parameter in the NF discovery request towards the NRF.
- This is an optional configuration. By default, the CLI commands are disabled.
- To disable this configuration, use the **no** variant of these commands. For example, **no nf-client-profile** CLI command.

### Verifying the Local Configuration for the NRF Interface Per Endpoint

This section describes how to verify the configuration for the NRF interface per endpoint.

The following is an example of the NRF endpoint configuration.

```
show running-config profile dnn cisco
profile dnn cisco
network-element-profiles chf chf1
network-element-profiles amf amf1
network-element-profiles pcf pcf1
network-element-profiles udm udm1
ssc-mode 2 allowed [3]
session type IPV4 allowed [IPV4V6]
upf apn intershat
exit

profile smf smf1
node-id 12b888e1-8e7d-49fd-9eb5-e2622a57722
locality LOC1
bind-address ipv4 209.165.200.227
bind-port 8008
instances 1 fqdn cisco.com.apn.epc.mnc456.mcc123
plmn-id mcc 123
plmn-id mnc 456
exit
```

```

profile network-element amf amf1
 nf-client-profile AMF-L1
 failure-handling-profile FH1
 query-params [target-nf-instance-id]
exit
profile network-element pcf pcfl
 nf-client-profile PCF-L1
 failure-handling-profile FH1
exit
profile network-element udm udml
 nf-client-profile UDM-L1
 failure-handling-profile FH1
exit
profile network-element chf chfl
 nf-client-profile CHF-L1
 failure-handling-profile FH2
exit
end

```

## Caching for Discovered NF Profiles

### Feature Description

The AMF provides caching support for discovered caching profiles. It uses the NF discovery (nnrf-disc) function to discover profiles, such as SMF, UDM, PCF, and CHF. The received discovery response is associated with validity time. AMF caches the discovery response and uses the same response for future NF selections until the cache is valid. This caching support helps in reducing the number of NRF interactions during an ongoing session.

### Relationships

Caching support for NF Discovery has functional relationship with the following features:

- NRF Support for AMF Subscription and Notification
- NRF Selection per Peer NF Type

### How it Works

The AMF maintains the cache data in a cache pod. It uses the cache pod to share the NF discovery cache across multiple instances of SBI pods. The SBI pod periodically updates the cache pod on receiving an NF discovery response. All SBI pods refresh its cache data periodically with the help of the cache pod.

If a message is sent to an NF that meets a specific criterion, the AMF looks up the cache data for further processing. During a cache lookup:

- On a cache hit without an expired entry, the selected cached NF response sends a message for an endpoint selection.
- On a cache hit with an expired entry, the AMF sends NF discovery requests to the NRF to fetch a new list of NF discovery responses.
- If there is a cache miss, the AMF sends NF discovery request to the NRF to retrieve a new list of NF discovery responses.

## Call Flows

### Cache Lookup Call Flow

This section describes the call flow for Cache Lookup.

AMF maintains a local cache and updates the external cache (cache-pod). The key for a cache is a combination of nfType and filter, which is a string that is prepared from multiple filter parameters in "key1=value, key2=value2" format.

On startup, AMF retrieves all the cache entries that were modified since epoch from cache-pod so that it can build the local cache. After the local cache is built, the same cache is used in the send message flow for lookup. A periodic refresh routine is initiated to refresh the local cache using the cache-pod. Local cache is periodically refreshed by getting all records from the cache-pod that were modified since last refresh. The resultant record list is traversed and the local cache is updated.

When AMF-rest-ep (SBI) triggers a send message to UDM, the AMF looks up the local cache for the cache entry with the nfType and filter key. The NF profiles are load-balanced and a message is sent to the selected endpoint.

## Standards Compliance

This feature complies with the following standards:

- *3GPP TS 29.510 version 15.4.0 — 5G System; Network function repository services; Stage 3*

## NF Discovery Cache Invalidation

### Feature Description

AMF gives higher priority to the NFs that are discovered from NRF over the locally configured NFs. AMF uses the locally configured NFs only if the NRF endpoints are not configured or if no NFs are available as part of the NF discovery response. This response appears after the query filter criteria are met. Each NF discovery response has an associated validity time and AMF caches the NF discovery response, uses the cache for subsequent session activation. AMF performs NF discovery only if matching entries are unavailable for the query filter in its NF discovery response cache or if the entry in cache exists, however with the expired validity.

### How it Works

AMF provides configuration to determine the behaviour when the NRF is unreachable and has an expired cache entry. The CLI provides the following options to determine:

- If the cache entry needs to invalidate on expiry.
- If the cache entry needs to be invalidated, along with the duration to retain the cache entry after the validity expiry.

These options are applicable only if the NRF is inactive. The configuration is according to the nf-pair profile. The configuration determines if AMF should use expired cache in case NRF becomes inactive and if it uses the expired cache, along with the duration to retain the cache entry after the validity expiry.

### Configuring NF Discovery Cache Invalidation (Purge)

To configure the cache entry invalidation (purge) for the NF discovery cache, use the following sample configuration.

**config**

```
profile nf-pair nf-type { smf | chf | pcf | udm }
 cache invalidation { false | true [timeout integer] }
end
```

**NOTES:**

- **cache invalidation { false | true [ timeout integer ] }**: Configure the interval and cache invalidation rule. The default value is false.
  - **false**: Specify that the cache entry will never be invalidated.
  - **true timeout integer**: Specify that the cache entry will be invalidated. **timeoutinteger** specifies the time period in milliseconds (ms) for controlling the usage of the expired cache entry (when NRF is unreachable). The default value is 0 ms.

The following configuration is an example that sets the cache invalidation to false for the UDM discovery:

```
profile nf-pair nf-type UDM
 cache invalidation false
end
```

The following configuration is an example that sets the cache invalidation to true for the UDM discovery:

```
profile nf-pair nf-type UDM
 cache invalidation true timeout 10
end
```

# Static Configuration for Peer NF Management

## Fallback to Static IP Address Support

### Feature Description

The AMF follows a priority order for different NF selection options. The AMF prioritizes the NF discovered from the NRF over the local configuration. The AMF uses the locally configured NFs when the NF discovery response has no valid NFs.

Depending on the deployment, the preferred server and geo locality server are configured for each of the NFs. The general rule is to select NFs in the preferred server locality followed by NFs in the geo locality server in case the preferred server NFs fail.

For each NF, the AMF provides an option to configure preferred and geo server locality through the **profile nf-pair** parameter. For more details, see [Configuring Locality for NF Types, on page 421](#) in the [NRF Selection per Peer NF Type, on page 425](#) section.

In addition, each NF discovery response comes with associated validity time. The AMF caches this NF discovery response and uses it to fetch subsequent sessions.

The AMF performs the NF discovery in the following conditions:

- The NF discovery response cache has no matching entries.
- The NF discovery response cache has matching entries, but the validity has expired.

## Relationships

The Fallback to Static IP Address feature has functional relationships with the following features:

- Caching Support for NF Discovery
- NF Discovery, NF Selection, and Load Balancing
- NRF Selection per Peer NF Type

## How it Works

The AMF follows this sequence for NF selection if an NRF discovery group is configured:

1. It looks up the local cache (NF discovery response cache) for the NF.
2. If the NF is a valid entry (not expired), it uses that entry. Else, AMF proceeds to Step 3.
3. The AMF reaches NRF for discovery [see, NRF Discovery (Priority 1)]. Else, AMF moves to Step 4.
4. If AMF cannot use the NRF for discovery, it uses the expired NF cache [see, Expired NF Cache ( Priority 2)]. If expired NF cache is not available, AMF moves to Step 5.
5. If AMF does not find the NF in the local cache nor is it able to get it in the NRF discovery response, it uses the locally-configured NF [see, NF Local configuration (Priority 3)].

The priority order for NF selection is as follows:

### 1. NRF Discovery (Priority 1)

The SMS uses the NRF-provided, NF discovery service to discover NFs like AMF, UDM, and PCF. The AMF sets the preferred locality as provided in the "**profile nf-pair**" configuration in the discovery query. (For more details about the "**profile nf-pair nf-type**" CLI configuration, see [Configuring Locality for NF Types, on page 421](#) in the [NRF Selection per Peer NF Type, on page 425](#) section.) For each NF, the query parameters are configurable. (For more details, see [Configuring Network Element Profile Parameters for the NF, on page 427](#) in the [NRF Selection per Peer NF Type, on page 425](#) section). The NRF returns all the NFs matching the query criteria. When available, the NRF prefers NF profiles with a locality attribute that matches the preferred-locality. The NRF could return more NFs in the response, which are not matching the preferred target NF location. This occurs when there is no NF profile that is found matching the preferred target NF location. To avoid this, the NRF could set a lower priority for any additional NFs on the response not matching the preferred target NF location than those matching the preferred target NF location. The locality-aware NF selection logic of AMF is as follows:

- a. If the NF has both the preferred and geo locality server configurations, all the NFs in the response that are matching these are cached. AMF ignores the balance NFs. The load-balancing logic first selects the preferred locality NFs. If the preferred locality NFs fail, AMF picks the geo locality NFs for a retry. If N retry is allowed, N-1 retries are on the preferred locality and the last retry is on the geo locality NF. If the N-1 endpoints are unavailable in the preferred locality, AMF attempts all the endpoints of the preferred locality. Else, AMF picks up the geo locality endpoints for the remaining retries. Multiple retries on the same host (port) is not attempted.
- b. If the NF has only the preferred locality configuration, all the NFs in the response that match the preferred locality are cached. The load-balancing logic selects the endpoints from these NFs.
- c. If the NF does not have the preferred locality or geo locality configuration, then SMS caches all the discovery response NFs. The load-balancing logic selects from these NFs.



**Note**

- The load-balancing logic is based on priority, capacity, and load. The logic is similar to server selection as defined in IETF RFC 2782. However, the weight is considered as "capacity \* (100 - load)".
- If AMF selects the NRF-discovered NFs (in any of the three cases), even when all attempts to reach preferred and geo locality fail, the AMF does not fall back to the local configuration NFs for a retry.

## 2. Expired NF Cache (Priority 2)

The AMF performs an NF discovery only in the following scenarios:

- If the matching entries are not available for the query filter in its NF discovery cache
- If matching entries are available in its NF discovery cache. However, these entries have expired validity.

The retention of an expired cache entry is configuration-based. If the expired cache entry is available and the NRF is not reachable or returns an error, then AMF uses the expired cache entry for NF selection. You can configure the AMF to control the cache entry usage with the following options:

- Invalidate the cache entry on expiration of validity.
- Use the invalidated cache entry for a configurable time period (timeout) and fallback to the static configuration after the timeout expires.

**Note**

The AMF controls the cache entry usage - only when the NRF is down - through these options. The configurations are based on the **profile nf-pair**. Additionally, the AMF provides flexibility in configuring different cache usage rule for different NFs. For instance, the AMF always uses the expired cache to discover PCF when the NRF is down. But, for discovering the UDM, the AMF uses the expired cache for a timeout period of 10 milliseconds (ms) when the NRF is down.

## 3. NF Local Configuration (Priority 3)

The locally configured NFs are the last option for NF endpoint selection. The local configuration too considers the preferred and geo server locality for NF selection. The priority order is as follows:

- a. If the preferred server is configured for the NF [ in **profile nf-pair** ], AMF selects the NF endpoints under the preferred locality, first. The load-balancing logic is applicable for endpoint profiles and endpoints within the locality as per the configured priority and capacity values.
- b. If the geo locality is configured for the NF [ in **profile nf-pair** ], AMF selects the NF endpoints under the geo locality as the fallback option. That is, if the preferred server locality NF endpoints fail or preferred server locality endpoints are not configured. The load-balancing logic is applicable for endpoint profiles and endpoints within the locality as per the configured priority and capacity values.
- c. If the preferred server and geo locality server are not applicable, AMF picks up the locality based on the priority that is configured for each locality in the local NF configuration. The load-balancing logic is applicable for endpoint profiles and endpoints within the locality as per the configured priority and capacity values.



**Note** The priority under locality is applicable only if the preferred and geo locality servers are not applicable.

The failure template is configurable for each of the NFs. Also, the message type in the template can set the retry count and action for the possible HTTP return codes.

## Standards Compliance

The Fallback to Static IP Address feature complies with the following standards:

- *3GPP TS 29.510 version 15.4.0 (2019-07) – 5G System; Network function repository services; Stage 3*

## Configuring Fallback to Static IP Address

This section describes how to configure the support for Fallback to Static IP Address.

### Configuring NF Client Profile

To configure the NF endpoints for SMF, CHF, PCF, and UDM, use the following sample configuration:

```
config
 profile nf-client { nf-type { smf smf-profile | chf chf-profile | pcf
pcf-profile | udm udm-profile } nf_profile_name }
end
```

#### NOTES:

- **profile nf-client { nf-type { smf smf-profile | chf chf-profile | pcf pcf-profile | udm udm-profile } nf\_profile\_name }**: Specify the required NF client profiles and provide the local configuration for any of the following configured NFs:

- **smf**: Enable the SMF local configuration
- **chf**: Enable the CHF local configuration
- **pcf**: Enable the PCF local configuration
- **udm**: Enable the UDM local configuration

For example, if you are configuring the **smf smf-profile** keyword, this command enables the SMF local configuration. The same approach applies for the other configured NFs.

*nf\_profile\_name* must be an alphanumeric string representing the corresponding NF client profile name.

- You can configure multiple NF profiles within a given service.
- To disable the configuration, use the **no profile nf-client { nf-type { smf smf-profile | chf chf-profile | pcf pcf-profile | udm udm-profile } nf\_profile\_name }** command.

### Configuration Example

The following is an example configuration.

```

profile nf-client nf-type pcf
pcf-profile pcf-profile
 locality LOC1
 priority 1
 service name type npcfsmpolicycontrol
 endpoint-profile epprof
 capacity 10
 priority 1
 uri-scheme http
 endpoint-name ep1
 priority 1
 capacity 10
 primary ip-address ipv4 209.165.202.133
 primary ip-address port 8080
 exit
 endpoint-name ep2
 priority 1
 capacity 10
 primary ip-address ipv4 209.165.201.1
 primary ip-address port 8080
 exit
 exit
exit
exit
exit
profile nf-client nf-type pcf
pcf-profile pcf-profile
 locality LOC1
 priority 1
 service name type npcfsmpolicycontrol
 endpoint-profile epprof
 capacity 10
 priority 1
 uri-scheme http
 endpoint-name ep1
 priority 1
 capacity 10
 primary ip-address ipv4 209.165.201.2
 primary ip-address port 8080
 exit
 exit

```

### Configuring Network Element Profile Parameters for the NF

To configure the network element profile parameters for the configured NF, use the following sample configuration.

#### config

```

network-element-profiles { { smf | chf | pcf | udm } nf_profile_name }
 nf-client-profile profile_name
 query-params { dnn | limit | max-payload-size | requester-snssais
 | supi | tai | target-nf-instance-id | target-plmn }
 end

```

#### NOTES:

- **nf-client-profile** *profile\_name*: Specify the local NF client profile. *profile\_name* must be an alphanumeric string representing the corresponding NF client profile name.


- **query-params { dnn | limit | max-payload-size | requester-snssais | supi | tai | target-nf-instance-id | target-plmn }**: Specify one of the following query parameters to include in the NF discovery request towards the NRF.
  - **dnn**: Specify a DNN as the query parameter in the NF discovery request towards the NRF.
  - **limit**: Specify a limit for the maximum number of profiles that the NRF sends in the NF discovery response.
  - **max-payload-size**: Specify the maximum payload size as the query parameter in the NF discovery request towards the NRF.
  - **requester-snssais**: Specify the list of Single Network Slice Selection Assistance Information (S-NSSAIs) as the query parameter in the NF discovery request towards the NRF.
  - **supi**: Specify a SUPI as the query parameter in the NF discovery request towards the NRF.
  - **tai**: Specify a TAI as the query parameter in the NF discovery request towards the NRF.
  - **target-nf-instance-id**: Specify a target NF instance Identifier as the query parameter in the NF discovery request towards the NRF.
  - **target-plmn**: Specify a target PLMN as the query parameter in the NF discovery request towards the NRF.
- This is an optional configuration. By default, the CLI commands are disabled.
- To disable the configuration, use the **no** variants of these commands. For example, **no nf-client-profile** CLI command.

## Failure Handling

AMF uses the NF registration messages for tracking the liveness of management NRF group. If AMF detects a failure in one of the NRFs in the management group, it uses the NRF failure handling mechanism.

Failure handling template is available for each of the NFs and its message types to set the retry count and action for the possible HTTP return codes.

For more information on failure handling, see the [Failure/Exception Handling Framework Support, on page 267](#) section.

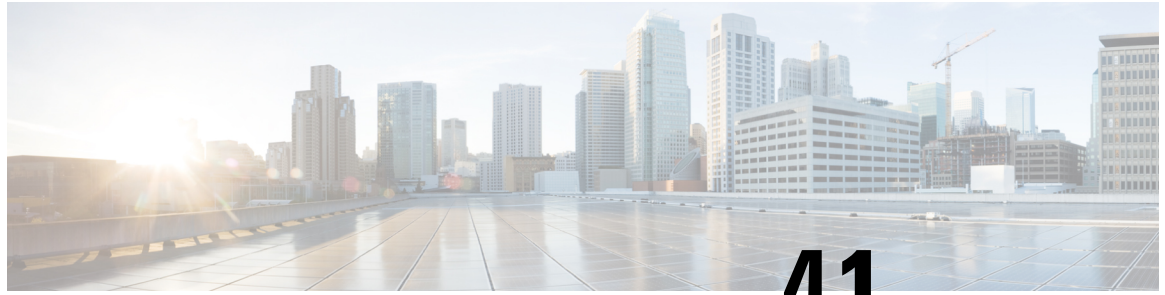

# CHAPTER 41

## Node Manager Endpoint Onboarding Support

- [Feature Summary and Revision History, on page 437](#)
- [Feature Description, on page 437](#)
- [Feature Configuration, on page 438](#)

### Feature Summary and Revision History

#### Summary Data

Table 149: Summary Data

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

#### Revision History

Table 150: Revision History

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

### Feature Description

An NGAP ID and a Serving-Temporary Mobile Subscriber Identity (S-TMSI) are assigned to a UE within AMF. Using these unique values, the UE is distinguished over the NG interface. The Node Manager (NodeMgr) pod manages these unique IDs by generating and allocating them to the UE through the request and response messages.

# Feature Configuration

To configure this feature, use the following configuration:

```

config
 instance instance-id instance-id
 endpoint { bgpspeaker | geo | gtp | li | ngap | nodemgr | protocol
 | sbi | sctp | service }
 instancetype { Dual | IPv4 | IPv6 }
 interface { bfd | bgp | geo-external | geo-internal | nrf }
 internal base-port start port_number
 loopbackEth host_address_port_number
 loopbackPort port_number
 nodes number_of_nodes
 range { vip-ipv6 ipv6_address | offline offline | vip-ipv6-port
ipv6_address }
 replicas number_of_nodes
 system-health-level { crash | critical | warn }
 uri-scheme { http | https }
 vip-ip ipv4_address
 vip-ipv6 ipv6_address
 end

```

## NOTES:

- **instance instance-id instance-id**—Specify the endpoint instance ID.
- **endpoint { bgpspeaker | geo | gtp | li | ngap | nodemgr | protocol | sbi | sctp | service }**—Specify the endpoint that must be configured. For configuring NodeMgr, use **nodemgr**.
- **instancetype { Dual | IPv4 | IPv6 }**—Specify the endpoint's local interface type.
- **interface { bfd | bgp | geo-external | geo-internal | nrf }**—Specify the endpoint interfaces.
- **internal base-port start port\_number**—Specify the internal base-port to start the endpoint.
- **loopbackEth host\_address\_port\_number**—Specify the local interface name or host IP address of the endpoint.
- **loopbackPort port\_number**—Specify the endpoint local port.
- **nodes number\_of\_nodes**—Specify the number of nodes replicas that must be configured for resiliency.
- **range { vip-ipv6 ipv6\_address | offline offline | vip-ipv6-port ipv6\_address }**—Specify the range of the NodeMgr endpoint.
- **replicas number\_of\_nodes**—Specify the number of replica nodes that must be created for the endpoint.
- **system-health-level { crash | critical | warn }**—Specify the message to indicate the health of the system.
- **uri-scheme { http | https }**—Specify the URI scheme as HTTP or HTTPS.
- **vip-ip ipv4\_address**—Specify the IPv4 address for the endpoint.
- **vip-ipv6 ipv6\_address**—Specify the IPv6 address for the endpoint.



## CHAPTER 42

# NRF (Network Function Repository) Services

- [Feature Summary and Revision History, on page 439](#)
- [Feature Description, on page 439](#)
- [How it Works, on page 441](#)
- [OAM Support, on page 443](#)
- [Troubleshooting Information, on page 445](#)

## Feature Summary and Revision History

### Summary Data

**Table 151: Summary Data**

|                                        |                     |
|----------------------------------------|---------------------|
| Applicable Products or Functional Area | AMF                 |
| Applicable Platforms                   | SMI                 |
| Feature Default Setting                | Enabled – Always-on |
| Related Documentation                  | Not Applicable      |

### Revision History

**Table 152: Revision History**

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.01.0 |

## Feature Description

Network Repository Function (NRF) functions as a centralized repository for all the 5G network functions (NFs). It performs the following:

- Provides NF service registration and discovery, in the operator network
- Enables NFs to identify appropriate services in each or one another
- Supports the service discovery function
- Receives NF Discovery Request from an NF instance
- Provides information about discovered NF instances

The AMF functions and benefits the user in multiple activities such as the following:

- Supports and sends the following:
  - **registration**
  - **heartbeat**
  - **update**
  - **deregistration**
  - **NF Discovery-Request**
- Includes the following:
  - **nf-type**
  - **plmn-info**
  - **slice-data**
  - **ddn**
- Sends the **NFDiscovery** request towards the NRF during the discovery of network elements
- Enables or disables the parameters through the **NFDiscovery** request

The AMF checks and queries NF discovery APIs of the NRF. It helps when they aren't configured locally. It further discovers or locates the following network functions:

- **AUSF**
- **UDM**
- **PCF**
- **SMF**
- **SMSF**
- **NSSF**
- **Peer AMF**

The AMF supports the following NRF functionalities for GR-based instances:

- Creating, updating, and deleting a subscription
- Receiving a notification when the NF instance profile is either modified or deregistered from the NRF.



- Subscribing to notifications and receiving notifications, which were previously subscribed for registration or deregistration or profile changes of NF instances.

## How it Works

This section describes how this feature works.

With the current GR-based AMF, the existing AMF NRF functionality *NewNrfLibApi* gets invoked. During this process, when *NewNrfLibApi* is associated with GR, the AMF needs to pass a valid *grInstanceID* to initiate the transaction.

The following list of procedures is supported for multiple transactions with required instance and validity details:

- **nrf init**
- **update**
- **registration**
- **heartbeat**
- **deregistration**
- **subscription**
- **notification**

### NRF Interfaces

The AMF supports the following NRF interfaces and instances with their enhanced functionalities:

- NRF interface supports **TS 29.510 V15.4.0 TS 29.510 V16.9.0** specifications and adapts to the changes in 3GPP specifications for the already implemented interfaces. The supported list includes:
  - **discovery**
  - **register towards NRF**
  - **deregistration**
  - **update**
  - **notify**
  - **subscribe**
  - **heartbeat**
- NRF interface supports the enhanced version of the Subscribe for Notifications.
- NRF interface handles and receives the registration and deregistration notifications that were previously subscribed.

## NRF Solutions

The AMF configures and supports the following NRF interfaces and instances with their enhanced solutions:

- In Yang model, this feature supports the following CLI configuration:
  - Repositories of endpoints or base URLs of the NRF
  - Profile discovery
  - NRF endpoints for the registration of ownership service profile
  - The local set of endpoints of **NFType** for the given **ServiceName**.
- Registers own **NFProfile** to the configured NRF.
- Checks for the cached **NFProfile** for the required service and accessibility.
- Discovers the **NFProfile** using the configured discovery repository for the **ServiceName** when the service can't be found or accessed.
- Uses the local configuration for the service, when **NFProfile** isn't discovered or found.
- Subscribes to NF instances, using the NRF Management interface, at the **init** and the AMF configuration change. It includes the following:
  - In **SubscriptionData**, the following can be filled:
    - **nfStatusNotificationUri**
    - **SubscrCond**
    - **nfInstanceId**
    - **validityTime**
  - Responses have the following subscription values:
    - **subscriptionId**
    - **validityTime**
  - Subscription has the following values:
    - The discovery of the **NFProfile**
    - On the same **NRF EP** used for discovery as well
- Resubscribes or avails the **PATCH** option to the **NFProfile**. It also changes the notification, using the NRF management interface on the expiry of **validityTime**. It includes the following:
  - Sends the proposed **validityTime** as **PatchItem**.
  - When NRF accepts the proposed **validityTime**, it responds with **returnCode 204**.
  - When NRF has an alternate **validityTime**, it responds with **returnCode 200**, and **validityTime** in **SubscriptionData**.
- Unsubscribes or removes the **DELETE** option for the subscription, before the shutdown.



**Note** This activity isn't supported, before the shutdown. Only the VIP offline scenario is supported.

- Deregisters the **NFProfile** at NRF before the shutdown.



**Note** This activity isn't supported, before the shutdown. Only the VIP offline scenario is supported.

- Handles the notification and cache, for the received **NFProfile**. It also includes the following:
  - When the added event is **NF\_REGISTERED**, it also adds the received **NFProfile** to the cache.
  - When the removed event is **NF\_DEREGISTERED**, it also removes the received **NFProfile** from the cache.

## OAM Support

This section describes operations, administration, and maintenance information for this feature.

The following show commands are used to view and trace NRF options in the AMF Ops Center.

```
show nrf [discovery-info | registration-info | subscription-info]
```

### NOTES:

- *discovery-info*—Shows discovery filter Information.
- *registration-info*—Shows Registration Information.
- *subscription-info*—Shows NF Subscription Information.

## Statistics Support

The following counters-related or metrics-related statistics are supported for the Enhancing NRF Functionalities feature. It includes the following:

- **nf\_discover\_messages\_total**
- **nf\_management\_stats\_total**
- **nrf\_subscription\_send\_messages\_total**

### **nf\_discover\_messages\_total**

Description: Discover Messages statistics

Sample Query: `nf_discover_messages_total{nf_type=\"udm\", host=\"209.165.201.9:8082\", svc_name=\"nudm-sdm\", version=\"v1\", result=\"timeouOrRPCError\"}`

## Labels:

- Label: `nf_type`  
Label Description: Network Function type  
Example: nrf, udm, amf, pcf, chf, ciscocontrol
- Label: `host`  
Label Description: End-Point address  
Example: 209.165.201.9:8082
- Label: `svc_name`  
Label Description: Network function service name  
Example: nudm-sdm, namf-comm
- Label: `version`  
Label Description: Api version info  
Example: v1, v2,
- Label: `result`  
Label Description: result of discover message.  
Example: 200, 201, 204, success, timeout\_rpc\_error, response\_parse\_failure

**nf\_management\_stats\_total**

Description: NF management messages statistics

Sample Query: `nf_management_stats_total{host="209.165.201.9:8082", svc_name="nudm-sdm", version="v1", direction="outbound", message_type="registration", result="timeouOrRPCError" }`

## Labels:

- Label: `host`  
Label Description: End-Point address  
Example: 209.165.201.9:8082
- Label: `svc_name`  
Label Description: Network function service name  
Example: nudm-sdm, namf-comm
- Label: `version`  
Label Description: Api version info  
Example: v1, v2,
- Label: `direction`  
Label Description: Direction indicates about the message going out or coming in.  
Example: inbound, outbound

- Label: `message_type`

Label Description: Type of Message

Example: registration, heartbeat, subscription, notification

- Label: `result`

Label Description: result of discover message.

Example: 200, 201, 204, success, timeout\_rpc\_error, response\_parse\_failure

### **nrf\_subscription\_send\_messages\_total**

Description: NRF Subscription send messages total.

Sample Query: `nrf_subscription_send_messages_total{host=\"209.165.201.9:8082\", message_type=\"subscription\", req=\"initial\"}`

Labels:

- Label: `host`

Label Description: End-Point address

Example: 209.165.201.9:8082

- Label: `message_type`

Label Description: subscription message type

Example: unsubscription, subscription, updateSubscription

- Label: `req`

Label Description: req type

Example: resourceUri, initial, retry\_2

## Troubleshooting Information

This section describes troubleshooting information for this feature.

### Trouble Ticket Content Data Collection

The following data are relevant when debugging issues with this feature.

Check the output of the following commands while debugging. The following is the list:

- **kubectl get pods -n namespace**
- **helm list**
- **helm get service -n namespace**
- **kubectl describe services nrf-service -n namespace**
- **show** full-configuration/running-configuration output from Ops Center

- `kubectrl get pods -o yaml -n namespace restep pod_name`



## CHAPTER 43

# OAuth2 Client Authorization Support to NRF

- [Feature Summary and Revision History, on page 447](#)
- [Feature Description, on page 448](#)
- [AMF as NF Producer, on page 448](#)
- [AMF as NF Consumer, on page 450](#)
- [OAM Support, on page 454](#)

## Feature Summary and Revision History

### Summary Data

*Table 153: Summary Data*

|                                        |                                             |
|----------------------------------------|---------------------------------------------|
| Applicable Products or Functional Area | AMF                                         |
| Applicable Platforms                   | SMI                                         |
| Feature Default Setting                | Disabled – Configuration required to enable |
| Related Documentation                  | Not Applicable                              |

### Revision History

*Table 154: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.04.0 |

## Feature Description

This feature describes the authorization controls that are required for implementing all the network functions. The OAuth2 client authorization to NRF supports requesting AccessToken to NRF and validating AccessToken in the incoming requests.

All the network functions in the 5G core interact with each other using REST APIs. All these APIs are accessed without any authorization. These interactions between multiple network functions are processed without any access control mechanism. As per 3GPP standards, OAuth2 standards must be implemented for all the network functions to secure the access of REST APIs between these network functions.

As a mandatory security measure and as an upgraded requirement to protect the network function accessibility, the REST APIs are now accessed with an enhanced authorization mechanism, using OAuth2 standards.

## Relationships

The network function of AMF can take two different roles, as the following:

- **NF Producer:** When a peer NF tries to access some of the service at AMF, it acts as NF producer.

For more information, see [AMF as NF Producer, on page 448](#).

- **NF Consumer:** When AMF as a client invokes a service at a peer NF, it acts as NF consumer.

For more information, see [AMF as NF Consumer, on page 450](#).

## AMF as NF Producer

The AMF as an NF producer provides multiple services to the peer NFs. The following scenarios are processed for a successful communication to be established:

- The AMF must get registered with the NRF for a successful communication.
- Based on the configuration, the AMF Rest-EP must send the `oauth2Required` field set in the NF Service profile in the NF registration toward the NRF.
- The signing algorithm used to encrypt the token at the NRF must be configured using `access-token-jws-algo`. Currently, the following three algorithms are supported:
  - HS256—Where the shared secret key is provided at AMF.
  - RS256—Where private or public key is provided depending on the configuration at NRF.
  - ES256—Where private or public key is provided depending on the configuration at NRF.
- The AMF token validation is done by using a shared secret key or public key. It can be configured using `access-token-jws-key`.

## How it Works

This section describes how this role works.



The AMF supports AccessToken validation in the incoming request. It is processed as in the following procedures:

- If an OAuth2 token is present in an incoming request from an NF consumer (such as SMF, UDM, peer AMF, and others), the AMF as an NF producer validates the token that is received in the incoming request.
- The signing algorithm used to encrypt the token at NRF can be accessed from `access-token-jws-algo`, and the respective shared secret key or public key can be accessed using `access-token-jws-key`.
- The AMF rejects an API request without the AccessToken or an API request with an invalid AccessToken. It returns the `status code 401` together with the `www-authenticate` header, with an error note as `invalid_token`.
- The AMF rejects an API request with an AccessToken validation token, for not having the required scopes to invoke the service operation. It returns the `status code 403` together with the `www-authenticate` header, with an error note as `insufficient_scope`.

## Limitations

This feature has the following limitations:

- The AMF does not support the CLI changes for the NF-producer over the fly. They must be configured before the pod start-up.
- The AMF does not support the NSSF selection through NRF discovery and the access token will not be sent for NSSF.

## Feature Configuration

To configure this feature, use the following configuration:



**Note** This configuration must be enabled in `amf-services` to register the AMF with NRF for the enablement of OAuth2 client authorization.

```
amf-services service_name
 amf-name amf_name
 locality locality_name
 oauth2-enabled
 access-token-jws-algo { HS256 | ES256 | RS256 }
 access-token-jws-key { shared_secret_key | public_key }
 exit
```

### NOTES:

- **amf-services** *service\_name*—Specify the name of the AMF service.
- **amf-name** *amf\_name*—Specify the name of AMF.
- **locality** *locality\_name*—Specify a name for the locality.
- **oauth2-enabled**—Enable the OAuth2 client authorization to register the AMF with NRF. The default value is false.

- **access-token-jws-algo { HS256 | ES256 | RS256 }**—Specify the type of the access token for the JWS Algorithm authorization.
- **access-token-jws-key { shared\_secret\_key | public\_key }**—Specify the type of the access token for the JWS Key authorization.



**Note** When the OAuth2-enabled feature is configured, the options **access-token-jws-algo** and **access-token-jws-key** are mandatory.

## Configuration Example

The following is an example configuration.

```
amf-services am1
amf-name amf1
validate-Tais false
locality LOC1
oauth2-enabled
access-token-jws-algo { HS256 }
access-token-jws-key { public key }
operator-policy-name pem-file
guamis mcc 123 mnc 456 region-id 1 set-id 14 pointer 3
tai-groups test1
exit
```

## Configuration Verification

To verify the configuration:

```
show running-config amf-service am1
```

## AMF as NF Consumer

The AMF as an NF consumer uses multiple services offered by the peer NFs.

The following scenarios are processed for a successful communication to be established:

- The AMF as a consumer looking for OAuth2-enabled profiles from NRF, must enable the AccessToken that is required in each `profile nf-client nf-type` configuration.
- The AMF as a consumer communicates with any of the applicable `nf-types`, such as AMF, PCF, UDM, AUSF, SMF, and SMSF.
- The AMF as a consumer sends the `Nnrf_AccessToken` request to the NRF server based on the `nf-client` configuration.
- The AMF as a consumer sends a request with an AccessToken to `nf-producer`. If it gets rejected due to the AccessToken validation failure, then the AMF failure handling template (FHT) handles those responses appropriately.

## How it Works

This section describes how this role works. The AMF supports OAuth2 client authorization to NRF. This process gets executed with the following procedures:

- Only when the `nf-client` profile gets configured with `OAuth2-Enabled`, where the value gets set as `true` for a `nf-type`, the AMF considers those profiles with `OAuth2-Enabled` as `true` value.
- The AMF internally sends the `AccessToken` request to the NRF server, stores the received token in the cache. The same token gets reused until it expires.
- When the profile gets selected and the token also received, the application includes the `AccessToken` in the `Authorization` header in the request toward NF producer.
- If the `nf-client` profile doesn't get configured, that's when OAuth2 gets disabled on the consumer side. The AMF ignores those profiles with the `oauth2Required` and selects the producer among the rest of the profiles received in the discovery response.
- For AMF to send an `AccessToken` request to NRF, endpoints must get configured in the CLI for service type `OAuth2` and the same must be set in the profile `nf-pair` for each type, wherever OAuth2 already enabled.
- When the `OAuth2-Enabled` gets set as `true` in the CLI and none of the discovered profiles from NRF has `oauth2Required`, then no profiles from the discovery get selected. It then reverts to the locally configured profiles. The `AccessToken` requests not sent as a locally configured profile, as it gets assumed as a base for the local trust policy. The NRF has no information about this development.
- When the `OAuth2-Enabled` gets set to `false` status in the CLI and all the discovered profiles get `oauth2Required` enabled, then none of these profiles in the discovery get selected. It then reverts to the locally configured profiles. If none of these profiles get configured locally, then the call fails.
- During the traffic running with the OAuth feature enabled, minimal numbers of 401-Unauthorized errors could be seen on the AMF side. To mitigate this risk, you can configure the failure handling template for all the possible causes (such as 401 error codes) to avoid any failed scenario of an end-to-end call.

## Feature Configuration

To configure this feature, use the following configuration:

The following configuration is enabled only when the AMF sends the `Nnrf_AccessToken` request to the NRF server, when the `nf-client` is configured.

```
profile nf-client nf-type nf_type_name
 oautheabled { true | false }
 nf-type-profile nf_type_profile_name
 locality locality_name
 priority priority_number
 service name type service_name type_npcf_am_policy_control
 endpoint-profile endpoint_profile_details
 capacity capacity_number
 uri-scheme http
 endpoint-name endpoint_name
 priority priority_number
 primary ip-address ipv4 ipv4_address
```

```
primary ip-address port port_address
exit
```

The following configuration must be done for an NRF endpoint, to which the AMF will send the AccessToken request.

```
group nrf auth nrf_group_name
 service type nrf oauth2
 endpoint-profile endpoint_profile_details
 capacity capacity_number
 uri-scheme http
 endpoint-name endpoint_name
 priority priority_number
 primary ip-address ipv4 ipv4_address
 primary ip-address port port_address
 exit
```

The following configuration must be used to specify auth-groups containing the NRF endpoint details for each NF type.

```
profile nf-pair nf-type nf_type_name
 nrf-auth-group nrf_auth_group_name
 nrf-discovery-group nrf_discovery_group_name
 locality client client_name
 locality preferred-server server_name
 locality geo-server geo_server_name
 cache invalidation { true | false } timeout timeout_number
 exit
```

#### NOTES:

- **profile nf-client nf-type nf\_type\_name**—Specify the NF and the profile name.
- **oauthenabed { true | false }**—Enable the oauthenabed profile configuration. The default value is false.
- **nf-type-profile nf\_type\_profile\_name**—Specify the NF profile name.
- **locality locality\_name**—Specify the locality.
- **priority priority\_number**—Specify the priority request. Must be in numbers.
- **service name type service\_name type\_npcf\_am\_policy\_control**—Specify the service name and the type.
- **endpoint-profile endpoint\_profile\_details**—Specify the endpoint profile details.
- **capacity capacity\_number**—Specify the capacity requirement in number.
- **uri-scheme http**—Specify the URI scheme.
- **endpoint-name endpoint\_name**—Specify the endpoint name.
- **primary ip-address ipv4 ipv4\_address**—Specify the primary IPv4 address.
- **primary ip-address port port\_address**—Specify the primary port address.
- **group nrf auth nrf\_group\_name**—Specify the NRF group name to authenticate. Must be a string.
- **service type nrf oauth2**—Specify the service and the type of NRF, which must be authenticated to enable the OAuth2 profile configuration.

- **profile nf-pair nf-type** *nf\_type\_name*—Specify the nf-type in the profile name to authenticate. Must be a string.
- **nrf-auth-group** *nrf\_auth\_group\_name*—Specify the nrf-auth-group name.
- **nrf-discovery-group** *nrf\_discovery\_group\_name*—Specify the nrf-discovery-group name.
- **locality client** *client\_name*—Specify the client name in the locality details.
- **locality preferred-server** *server\_name*—Specify the preferred-server or client name in the locality details.
- **locality geo-server** *geo\_server\_name*—Specify the geo-server name in the locality details.
- **cache invalidation { true | false }**—Enable the cache invalidation configuration. The default value is false.
- **timeout** *timeout\_number*—Specify the timeout duration in seconds.

## Configuration Example

The following is an example configuration.

```
profile nf-client nf-type pcf
 oauthenabled { true }
 pcf-profile PP1
 locality LOC1
 priority 30
 service name type npcf-am-policy-control
 endpoint-profile EP1
 capacity 30
 uri-scheme http
 endpoint-name EP1
 priority 56
 primary ip-address ipv4 209.165.201.30
 primary ip-address port 9049
 exit
 exit
exit
exit
exit
exit
exit
group nrf auth oauthep
 service type nrf oauth2
 endpoint-profile EP1
 capacity 30
 uri-scheme http
 endpoint-name EP1
 priority 56
 primary ip-address ipv4 209.165.201.30
 primary ip-address port 9049
 exit
exit
exit
profile nf-pair nf-type PCF
 nrf-auth-group oauthep
 nrf-discovery-group udm discovery
 locality client LOC1
 locality preferred-server LOC1
 locality geo-server GEO
```

```
cache invalidation true timeout 1000
exit
```

## Configuration Verification

To verify the configuration:

```
show profile nf-client nf-type pcf
```

# OAM Support

This section describes operations, administration, and maintenance support for this feature.

## Bulk Statistics Support

The following statistics are supported for the [OAuth2 Client Authorization Support to NRF](#), on page 447 feature.

### NF AccessToken Statistics

Total AccessToken Message count:

- Labels:

```
nf_oauth_messages_total
```

- Host:

Refers to the host information (IP: Port) of the URL to which the access token request is being sent.

- Service Name: NF AccessToken service

Example: **nnrf-oauth**

- Version: API version

Example: **v1**

- NfType:

```
peer nf type
```

- GrInstanceID:

```
gr-instance-id
```

- Result:

```
[Success | error response status code | RPC/Timeout error | Request
parse failure | Response parse failure | Invalid notification event |
Invalid Nf instance URI | Internal Error]
```

### Token Validation Statistics for AMF as Producer

App infra statistics for outgoing responses:

- Labels: **outgoing\_response\_total**

- Invalid token format or signature mismatch:

```
{app_name="AMF", protocol="http", service_name="amf-rest-ep",
status="error", status_code="invalid_token"}
```

- Token payload verification fail:

- Invalid scope:

```
{app_name="AMF", protocol="http", service_name="amf-rest-ep",
status="error", status_code="app_invalid_scope"}
```

- Other IE failures:

```
{app_name="AMF", protocol="http", service_name="amf-rest-ep",
status="error", status_code="app_invalid_token"}
```

For more information on bulk statistics support for AMF, see the *UCC 5G AMF Metrics Reference* document.

## Data Type Support

The following statistics are supported for the [OAuth2 Client Authorization Support to NRF, on page 447](#) feature.

### AccessTokenReq

- grant\_type
- nfInstanceId
- nfType
- targetNfType
- scope

For information on data type support for AMF, see the *UCC 5G AMF Metrics Reference* document.







## CHAPTER 44

# Overload Control for N2 and NAS

- [Feature Summary and Revision History, on page 457](#)
- [Feature Description, on page 458](#)
- [How it Works, on page 458](#)
- [Feature Configuration, on page 462](#)
- [OAM Support, on page 464](#)

## Feature Summary and Revision History

### Summary Data

**Table 155: Summary Data**

|                                          |                                             |
|------------------------------------------|---------------------------------------------|
| Applicable Product(s) or Functional Area | AMF                                         |
| Applicable Platform(s)                   | SMI                                         |
| Feature Default Setting                  | Disabled – Configuration required to enable |
| Related Documentation                    | Not Applicable                              |

### Revision History

**Table 156: Revision History**

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.03.0 |

## Feature Description

The congestion control feature lets you define the system conditions which when matched impacts the system's performance. To prevent an impact of the congestion on the subscriber sessions, you can configure the system policies that are to be invoked when facing congestion.

Congestion control monitors the system to detect situations that match the conditions which may potentially degrade the system's performance when it is under heavy load. Typically, these conditions are transient (for example, high CPU or memory utilization) and gets resolved faster. However, if these conditions persist longer or they occur frequently during the specific time interval, a severe congestion occurs.

The congestion control feature monitors the system resources, such as CPU usage, memory, the number of active sessions, and the number of Go routines.



---

**Note** AMF does not provide a configuration to set the congestion control threshold for system CPU usage, memory usage, and maximum number of goroutine processes.

---

## How it Works

This section describes how this feature works.

### N2 Overload Control

When the congestion control feature is enabled, and a congestion threshold is exceeded, the AMF invokes congestion control policies. The AMF informs the control policies to the gNB, which throttles the traffic using the NGAP Overload Start or Stop messages. The AMF sends an NGAP Overload Start message to the gNBs to which it is connected. In the Overload Response IE that the AMF sends to gNBs, the AMF requests the gNBs to reject or allow certain sessions.

After the congestion is cleared, the AMF sends the NGAP Overload Stop message to the NG-RAN node indicating that AMF is resuming regular operations.

### NAS Congestion Control

In the overload condition, the AMF rejects the NAS messages from a UE using a 5G-RAN. When AMF rejects a NAS request due to congestion, AMF sends the T3346 IE using the specified T3346 value. With the Mobility Management back-off timer running, the UE can initiate only the Deregistration procedures and procedures that are not affected by the congestion control, such as emergency services and mobile-terminated services.

During a congestion situation, AMF rejects the following requests with the 5GMM cause as Congestion and the T3346 timer value in the Registration Request (including Mobility and Periodic Registration Request) and service requests. The AMF includes the timer value in the Deregistration Request, which UE invokes during the admin clear subscriber process.

Suppose the AMF rejects a Registration Request or service request with the T3346 timer value higher than the sum of the UE's Periodic Registration Update timer T3512 and the Implicit Deregistration timer. In that case, the AMF adjusts the mobile reachable timer and the implicit deregistration timer, or both. With this adjustment, the AMF does not implicitly deregister the UE while the Mobility Management back-off timer is in-progress.

The AMF does not preserve the back-off-timer value which is sent to UE.

For information on the T3346 timer, see the [Session Timers, on page 533](#) chapter.

With the Overload Control feature configured:

- The protocol-ep pod has X minute timer running locally. On expiry of the timer, the protocol-ep pod identifies the system overload state and accordingly sends the overload start or stop message.
- On configuration change, AMF sends overload Stop if overload start was sent earlier. Further, AMF continues to monitor the overload state and send stop/start messages accordingly.
- When the standby Protocol-ep pod becomes active, it collects the system load, determines the overload state, and sends the corresponding message. If AMF identifies an overload situation, the Protocol-ep pod sends an Overload Start message, else, sends the overload stop message if AMF is no longer overloaded.


## Call Flows

This section describes the key call flows for this feature.

### Overload Start Message Call Flow

This section describes the Overload Start Message call flow.


**Figure 66: Overload Start Message Call Flow**

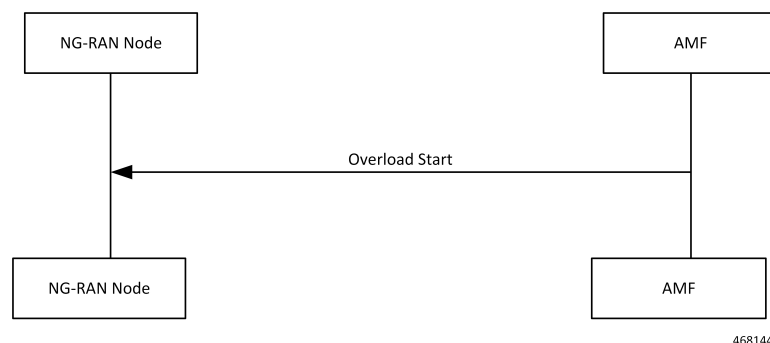

When the overload control is configured and the congestion threshold is reached, the AMF sends an Overload Start Message to the NG-RAN Node.

### Overload Stop Message Call Flow

This section describes the Overload Stop Message call flow.

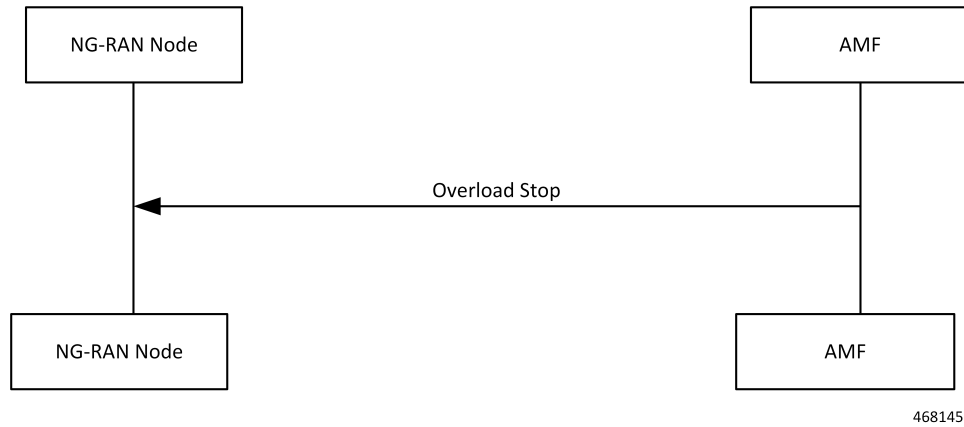**Figure 67: Overload Stop Message Call Flow**

After the overload situation is resolved, the AMF sends an Overload Stop Message to the NG-RAN node indicating that the AMF is ready to resume the process the sessions.

## NAS Congestion Control Call Flow

This section describes the NAS Congestion Control call flow.

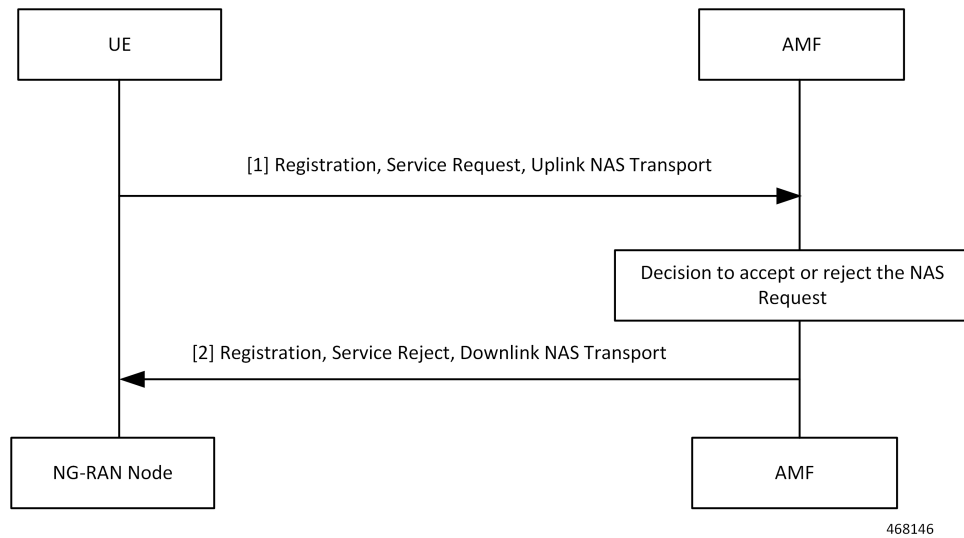
**Figure 68: NAS Congestion Control Call Flow**

Table 157: NAS Congestion Control Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>UE sends the Registration Request, Service Request, and Uplink NAS Transaction Request to AMF.</p> <p>When the NAS congestion configuration is enabled, the AMF accepts the following:</p> <ul style="list-style-type: none"> <li>• Requests received for emergency services.</li> <li>• De-Registration Request that originated in the UE.</li> <li>• Mobility Registration Update requests received when UE is in the CM-CONNECTED state.</li> <li>• Service request received when UE is in the CM-CONNECTED state.</li> <li>• Service request that is received in response to a paging request.</li> <li>• UL NAS Transport (Payload container type: N1 SM information) PDU Release.</li> </ul> |
| 2    | <p>Depending on AMF's overload capacity, it may reject the following requests:</p> <ul style="list-style-type: none"> <li>• Service request received when UE is in CM-IDLE state.</li> <li>• Periodic Registration Requests.</li> <li>• Mobility Registration Update requests received when UE is in the CM-IDLE state.</li> <li>• Nonemergency Initial Registration Requests.</li> <li>• Uplink NAS Transport requests with payload container type as N1 SM information.</li> <li>• Uplink NAS Transport requests with payload container type as SMS) dropped on AMF.</li> </ul>                                                                                                                     |

## Standards Compliance

This feature complies with the following standards specifications:

- *3GPP TS 23.501 "System architecture for the 5G System (5GS)"*
- *3GPP TS 38.413 "NG-RAN; NG Application Protocol (NGAP)"*
- *3GPP TS 24.501 "Non-Access-Stratum (NAS) protocol for 5G System (5GS)"*
- *3GPP TS 24.008 "Mobile radio interface Layer 3 specification; Core network protocols"*

## Limitations

This feature has the following limitations in this release:

- The N2 Overload Control is applied at the system-level and not supported at individual S-NSSAI.
- The NAS Congestion Control is not supported per DNN, S-NSSAI, DNN—S-NSSAI, and at certain UE groups.
- Overload Control does not support congestion clearance of the REST interface.

# Feature Configuration

Configuring this feature involves the following steps:

1. Configure the action profile, system load threshold and define the load stages as critical, major, and minor.

The Protocol-ep pod periodically fetches the current system load and identifies the system overload state (minor, major, critical) and associated action profile. The Protocol-ep pod compares the new system load with last recorded system load, updates the locally stored overload information, and sends the determines whether to send the overload start or stop message.

For more information, see [Configuring Congestion Control Threshold, on page 462](#).

2. Configure the actions that must take an effect when the overload situation arises in N2 and NAS. For more information, see [Configuring Congestion Action Profile, on page 463](#).

## Configuring Congestion Control Threshold

To configure this feature, use the following configuration:

```
config
 amf-global congestion-control-threshold { critical | major | minor }
 action-profile action_profile value integer_value
 end
```

### NOTES:

- **amf-global**—Enter the AMF global configuration mode.
- **congestion-control-threshold { critical | major | minor }**—Specify the system load stage for which the threshold is set.
- **action-profile action\_profile**—Specify the action profile name.
- **value integer\_value**—Specify the threshold value in the range 1–100. The **value** is associated with the system load stage that you have configured using **congestion-control-threshold**.

## Configuration Example

The following is an example configuration:

```
config
 amf-global congestion-control-threshold critical
 action-profile sample_profile value 15
 end
```

## Configuration Verification

To verify the configuration:

```
show running-config amf-global congestion-control-threshold
```

### Sample Output

```
amf-global
 congestion-control-threshold critical value 95 action-profile critcal_profile
```

```

congestion-control-threshold major value 90 action-profile major_profile
congestion-control-threshold minor value 85 action-profile minor_profile
exit

```

## Configuring Congestion Action Profile

To configure this feature, use the following configuration:

```

config
 congestion-action-profile action-profile action_profile_name
 n2-overload
 report-overload {
 permit-emergency-sessions-and-mobile-terminated-services-only |
 permit-high-priority-sessions-and-mobile-terminated-services-only |
 reject-new-sessions | reject-non-emergency-sessions }
 traffic-load-reduction load_reduction_percentage
 nas-congestion-enabled
 end

```

### NOTES:

- **congestion-action-profile**—Enter the congestion action configuration mode.
- **action-profile** *action\_profile\_name*—Specify the action profile name that is mapped to the system load stage.
- **n2-overload**—Configure parameters that must be applied when N2 is overloaded.
- **report-overload**—Configure the overload response message that AMF sends to gNB.

The **report-overload** includes the following options:

- **permit-emergency-sessions-and-mobile-terminated-services-only**—Configure to permit only emergency sessions and mobile-terminated services to access AMF during the overload situation.
- **permit-high-priority-sessions-and-mobile-terminated-services-only**—Configure to permit only high priority or emergency sessions and mobile-terminated services that AMF sends to the gNBs.
- **reject-new-sessions**—Configure to reject all new connection requests except emergency requests sent to the AMF during the overload situation.
- **reject-non-emergency-sessions**—Configure to reject all nonemergency or nonhigh priority Sessions Creation Requests during the overload situation.
- **traffic-load-reduction** *load\_reduction\_percentage*—Specify the percentage of traffic load to be reduced at gNB. *load\_reduction\_percentage* must be an integer in the range 1–99.
- **nas-congestion-enabled**—Enable the congestion control feature for NAS. **nas-congestion-enabled** is disabled by default.

## Configuration Example

The following is an example configuration:

```

config
 congestion-action-profile action-profile sample_profile
 n2-overload

```

```
 report-overload { permit-emergency-sessions-and-mobile-terminated-services-only |
 permit-high-priority-sessions-and-mobile-terminated-services-only | reject-new-sessions |
 reject-non-emergency-sessions }
 traffic-load-reduction 20
 nas-congestion-enabled
 end
```

## Configuration Verification

To verify the configuration:

**show running-config congestion-action-profile**

### Sample Output

```
congestion-action-profile critical_profile
n2-overload traffic-load-reduction 98
n2-overload report-overload reject-new-sessions
nas-congestion-enabled
exit
```

## OAM Support

This section describes operations, administration, and maintenance support for this feature.

## Bulk Statistics Support

The following statistics are supported for the Overload Control for N2 and NAS feature:

### amf\_overload\_status

Description: The counter indicates the overload status as:

- Minor
- Major
- Critical

Example:

```
amf_overload_status{app_name="AMF",cluster="clu1",data_center="dc1",instance_id="2",service_name="amf-protocol-ep"}
2
```





## CHAPTER 45

# Paging Overload Protection

- [Feature Summary and Revision History, on page 465](#)
- [Feature Description, on page 465](#)
- [How it Works, on page 466](#)
- [Feature Configuration, on page 466](#)
- [OAM Support, on page 467](#)

## Feature Summary and Revision History

### Summary Data

**Table 158: Summary Data**

|                                          |                                             |
|------------------------------------------|---------------------------------------------|
| Applicable Product(s) or Functional Area | AMF                                         |
| Applicable Platform(s)                   | SMI                                         |
| Feature Default Setting                  | Disabled - Configuration required to enable |
| Related Documentation                    | Not Applicable                              |

### Revision History

**Table 159: Revision History**

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.03.0 |

## Feature Description

Congestion control is a proactive mechanism where AMF lets you configure the number of paging requests that are sent for each gNB. When a congestion is detected, AMF drops the new paging requests.

## How it Works

This section describes how this feature works.

The AMF provides a configuration that regulates the number of paging requests that the AMF sends for each gNB. If the paging requests count exceeds the configured value, the AMF ignores the new requests regardless of their type and priority.

## Feature Configuration

To configure this feature, use the following configuration:

```
config
 amf-global
 network-protection-overload rate-limit paging { rate paging_rate |
burst number_messages_allowed }
 end
```

### NOTES:

- **network-protection-overload rate-limit paging**—Configure the overload protection parameters.
- **rate *paging\_rate***—Specify the number of paging request messages that AMF sends to the gNB per second. *paging\_rate* accepts values in the range 1–65535.
- **burst *messages\_allowed***—Specify the number of paging messages that AMF must process before applying the threshold. The gNB drops the messages that are received after the threshold value matches the configured value. *messages\_allowed* accepts values in the range 1–65535.

## Configuration Example

The following is an example configuration:

```
config
 amf-global
 network-protection-overload rate-limit paging { rate 50000 | burst 45000 }
 end
```

## Configuration Verification

To verify the configuration:

```
show running-config amf-global network-protection-overload
amf-global
 network-protection-overload rate-limit paging
 rate 1000
 burst 250
 exit
exit
```

# OAM Support

This section describes operations, administration, and maintenance support for this feature.

## Bulk Statistics Support

The following statistics are supported for the Paging Overload Protection feature.

### **RateLimitPaging\_Dropped**

Description: The total count of NGAP messages that are dropped after applying the paging limit range.

Sample Query:

```
amf_ngap_message_total{message_direction=\"outbound\",
message_type=\"RateLimitPaging_Dropped\"}
```

For information on bulk statistics support for AMF, refer *UCC 5G AMF Metrics Reference*.





# CHAPTER 46

## Paging Support

- [Feature Summary and Revision History, on page 469](#)
- [Feature Description, on page 469](#)
- [Feature Configuration, on page 473](#)

### Feature Summary and Revision History

#### Summary Data

Table 160: Summary Data

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

#### Revision History

Table 161: Revision History

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

### Feature Description

AMF uses the paging procedure when the network requires to signal the UE which is in CM-IDLE state. For example, N1 signaling to UE, or User Plane connection activation for PDU sessions (to deliver mobile terminated user data). AMF supports paging strategies to minimize the paging load.

Paging Request triggers the UE-initiated Service Request procedure and the paging procedure has the following three essential functionalities:

- Paging Initiation
- Selecting a paging profile
- Paging procedure

## Paging Initiation

Paging is done in response to the network needing to communicate with a UE that is in CM-IDLE state. The first step in the process is to analyze the messages from a peer node and decide whether paging is needed or not. The operator policy can decide that paging isn't required under certain circumstances.

When AMF receives the N1N2MsgTransfer from SMF for a UE in CM-IDLE mode, it decides whether to trigger paging or not based on the following checks:

- PPF flag set to true, which indicates mobile reachability timer isn't expired.
- Incoming request doesn't have *skipind* attribute set in *N1N2MsgTransferReqData* IE.
- Incoming request doesn't indicate to transfer a N2 PDU Session Resource Release Command.
- Asynchronous type communication isn't activated at AMF.
- ARP-based paging priority comparisons for the newly received N1N2Msg from SMF with the previous N1N2Msg for which paging is already in progress.

AMF updates the SMF with the appropriate cause. When AMF is satisfied with the preceding checks, it selects paging profile based on the incoming triggers.

AMF doesn't perform any check, when the paging is triggered to Deregister a UE.

## Selecting a Paging Profile

AMF supports multiple paging profiles. Paging usually happens in stages, with each stage having its own algorithm configured.

AMF selects the operator policy based on SUPI-prefix. If the SUPI-prefix match isn't found, it selects the operator-policy associated with the AMF-service.

The paging-map can be associated with the operator-policy. Each paging-map has a list of trigger-to-paging profile mapping to support unique precedence for each trigger. The available trigger types are:

- 5QI
- PPI
- DEREQ
- DNN
- ARP

Paging profile selection is based on the configured precedence with matching trigger and value pair. When multiple trigger-value pair matches, AMF selects based on the higher precedence. Lower the value, higher the precedence.

Each paging profile has a list of stages with each stage defining a paging-algorithm to use.

## Paging Procedure

Paging in AMF minimizes the load on the network and locates the UE with minimal area of paging and attempts.

The first response message from the UE terminates the paging.




---

**Note** AMF considers only service request from UE as response to paging.

---

AMF initiates the paging procedure in the following three scenarios:

- **Clear Subscriber at AMF:** AMF triggers paging, when a subscriber in CM-IDLE state gets cleared through AMF CLI. Paging is followed by the AMF-initiated UE deregistration procedure.
- **UDM-initiated UE Deregistration:** AMF initiates paging when UDM sends Deregistration notification (UDM-initiated UE Deregistration) to AMF for a subscriber which is in CM-IDLE state. If UE doesn't respond, AMF Deregisters the UE and clears the UE in SMF and in PCF. If there's no paging response, no response is sent back to UDM.
- **N1N2MsgTransfer received from SMF:** AMF initiates paging when it receives N1N2MsgTransfer from SMF for a subscriber that is in CM-IDLE state. If UE doesn't respond, AMF sends N1N2MsgTxfrFailNotification back to SMF over the callback URI.

AMF performs the following procedures during paging:

- Filling of the following IEs in NGAP messages other than mandatory IEs:
  - Paging Discontinuous Reception (DRX)
 

It's filled based on the requested DRX parameters received from the UE during registration.
  - Assistance Data for Paging
    - Assistance Data for Recommended Cells is derived from the *Information on Recommended Cells and RAN Nodes for Paging* IE. AMF receives this IE as part of the UE Context Release Complete message from gNB.
    - AMF fills the *Paging Attempt Information* IE based on the paging algorithm used for the respective paging stage. Whenever there's a change in the paging stage, AMF marks *Next Paging Area Scope* as changed. AMF doesn't fill *Next Paging Area Scope* for the last attempt of the last paging stage.
- Paging priority
 

It's applicable if paging trigger is from SMF and priority mapping is configured.
- Handling of the new incoming N1N2Msg when paging is in progress for previous N1N2Msg:

- **Precedence Calculation:** AMF calculates the precedence (lower values considered as higher precedence) as per the incoming parameters along with the paging map configuration. It computes this precedence for the incoming N1N2Msg and performs the following:
  - If new precedence value is lower than ongoing precedence, AMF selects the new paging profile as per the new precedence.
  - If new precedence value is same or greater than ongoing precedence, no new profile is selected and AMF continues with the ongoing paging profile.
- **Priority Comparison:** Paging priority comparison is based on incoming ARP value and its mapped NGAP paging priority under AMF configuration. AMF compares the paging priority (lower values considered as higher priority) of ongoing paging with the new incoming paging, and performs the following:
  - AMF rejects the incoming N1N2 with the cause HIGHER\_PRIORITY\_REQUEST\_ONGOING as part of N1N2MsgTransferError when:
    - The ongoing paging has high or same priority as incoming paging.
    - The incoming paging doesn't have any paging priority mapped to it.

In this scenario, AMF doesn't select any new paging profile. AMF fills N1N2MsgTxfrErrDetail as part of the N1N2MsgTransferError. AMF fills the *retryAfter* attribute, based on the ongoing and pending paging stages.

- If incoming N1N2Msg has high priority, AMF triggers a new paging message with a new paging priority value. AMF triggers new paging as part of the ongoing paging attempt of the ongoing paging stage.



#### Note

- Paging profile selection and triggering of new paging with new priority are independent of each other.
  - AMF supports handling of new N1N2 messages when UE is in IDLE mode and paging is already triggered due to a previous N1N2 message. AMF doesn't support handling of simultaneously received multiple N1N2 messages when UE is in IDLE mode and paging is not yet triggered.
- 
- Sending a PAGING message to each gNB (belonging to the UE tracking areas) based on the actions configured under paging algorithm for respective paging stages
  - Paging in stages, where each stage defines the scope of paging. Each paging stage is associated with a paging algorithm that consists of paging action.
- AMF supports the following paging actions:
- PAGING\_LAST\_GNB\_LAST\_TAI
  - PAGING\_LAST\_N\_GNB\_LAST\_TAI
  - PAGING\_ALL\_GNB\_LAST\_TAI
  - PAGING\_ALL\_GNB\_ALL\_TAI



- PAGING\_ALL\_GNB\_REM\_TAI\_ALL
- PAGING\_ALL\_GNB\_REM\_TAI\_SEQ

PAGING\_LAST\_GNB\_LAST\_TAI - As part of this action, AMF pages the last gNB in the last Tracking Area Identifier (TAI) from which UE contacted AMF.

PAGING\_LAST\_N\_GNB\_LAST\_TAI - As part of this action, AMF pages the last n gNB in the last TAI from which UE contacted AMF.

PAGING\_ALL\_GNB\_LAST\_TAI - As part of this action, AMF pages all the gNBs in the last TAI from which UE contacted AMF.

PAGING\_ALL\_GNB\_ALL\_TAI - As part of this action, AMF pages all the gNBs in all the TAIs as part of UE restricted area.

PAGING\_ALL\_GNB\_REM\_TAI\_ALL - As part of this action, AMF pages the remaining TAIs (Except the last known TAI) all together.

Example: If UE's registration area contains TAI A, B, C, and the last known TAI is A, AMF pages gNBs in TAI B, C together at the same time.

PAGING\_ALL\_GNB\_REM\_TAI\_SEQ - As part of this action, AMF pages the remaining TAIs (Except the last known TAI) in a sequential manner. There's no specific order in which AMF selects the TAI when paging is sequential.

Example: If UE's registration area contains TAI A, B, C, and the last known TAI is A, AMF first pages gNBs in TAI B. When no response is received for paging after reaching the maximum attempts, AMF proceeds to page gNBs in TAI C.



#### Note

AMF doesn't support PAGING\_ALL\_GNB\_REM\_TAI\_ALL and PAGING\_ALL\_GNB\_REM\_TAI\_SEQ as first stage of paging profile.

The t3513 timeout value and number of retries at a given stage is configurable as part of paging-algo. The maximum number of gNB to page is also configurable and it is applicable only to paging action PAGING\_LAST\_N\_GNB\_LAST\_TAI.

AMF uses default paging-algo, when no paging map or profile or algo or matching triggers are configured for the incoming paging trigger.

Default paging-algo has only one stage and has the following parameters:

- action is all\_gnb\_last\_tai, which is configured automatically.
- max-paging-attempts and timeout value is fetched from the configured t3513 timer under Call Control Profile.

The default value of the t3513 timer is set to five seconds and the default paging retry count is set to two.

## Feature Configuration

Configuring this feature involves the following steps:

1. Operator Policy—AMF allows you to configure the Operator defined policies. This configuration provides the commands to configure the operator defined policies for UE. For more information, refer to [Configuring the Operator Policy, on page 474](#).
2. Paging Map—AMF allows you to map the precedence, trigger (traffic-type), trigger-value, and its profile name to the paging. This configuration provides the commands to configure the paging map for UE. For more information, refer to [Configuring the Paging Map, on page 475](#).
3. Paging Profile—AMF allows you to configure paging stage and paging algorithm in paging profile. This configuration provides the commands to configure the paging profile for UE. For more information, refer to [Configuring the Paging Profile, on page 476](#).
4. Paging Algorithm—AMF allows you to configure paging algorithm with its name, action and with other associated parameters. This configuration provides the commands to configure the paging algorithm for UE. For more information, refer to [Configuring the Paging Algorithm, on page 477](#).
5. Paging Priority—AMF allows you to configure a map of ARP values to NGAP paging priority. This configuration provides the commands to configure the priority for the paging. For more information, refer to [Configuring the Paging Priority, on page 478](#).

## Configuring the Operator Policy

To configure the Operator Policy, use the following configuration:

```
config
 amf-global
 operator-policy operator_policy_name
 paging-map-name paging_map_name
 end
```

### NOTES:

- **operator-policy** *operator\_policy\_name*—Specify the operator policy name.
- **paging-map-name** *paging\_map\_name*—Specify the name of paging map. Must be a string in the size of 1–64 characters.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 operator-policy local
 paging-map-name pm1
 end
```

## Configuration Verification

To verify the configuration:

```
show full-configuration amf-global operator-policy local
amf-global
operator-policy local
 ccp-name local
 paging-map-name pm1
```

## Configuring the Paging Map

To configure the Paging Map, use the following configuration:

```

config
 amf-global
 paging-map paging_map_name
 precedence precedence_count
 trigger-type
 5qi { fiveqi-value fiveqi_value | paging-profile-name
profile_name }
 arp { arp-value arp_value | paging-profile-name profile_name
}
 dereg { dereg-value { amf_init paging-profile-name
profile_name | udm_init paging-profile-name profile_name } | paging-profile-name
profile_name }
 dnn { dnn-value dnn_value | paging-profile-name profile_name
}
 ppi { ppi-value ppi_value | paging-profile-name profile_name
}
 end

```

### NOTES:

- **paging-map** *paging\_map\_name*—Specify the paging map.

Based on the fetched paging map from the operator policy, a matching paging map is selected from paging-map list configured in amf-global.

Each paging-map is a list of triggers having unique precedence associated with them. Based on the high precedence value matched trigger (with trigger value), the associated paging-profile is selected.

- **precedence** *precedence\_count* —Specify the map precedence level. Must be an integer in the range of 1–255. 1: High and 255: Low.
- **paging-profile-name** *profile\_name*—Specify the paging profile name. Must be a string of 1–64 characters.
- **trigger-type**—Specify the trigger type. Trigger can be the traffic type. Must be one of the following:
  - 5qi - 5G QoS Identifier, received as part of N1N2 message from SMF.
  - dereg - Paging Policy Indicator, received as part of N1N2 message from SMF.
  - ppi - Paging triggered due to Deregistration by UDM or AMF.
  - dnn - DNN for which paging is triggered.
  - arp - Allocation and Retention Priority, received as part of N1N2 message from SMF.
- **fiveqi-value** *fiveqi\_value* —Specify QoS Indicator value. Must be an integer in the range of 1–85.
- **arp-value** *arp\_value*—Specify the allocation and retention priority value. Must be an integer in the range of 1–15.
- **dereg-value**—Specify the deregistration trigger value which is either amf\_init or udm\_init.
- **dnn-value** *dnn\_value*—Specify the Data Network Name value. Must be a string of 1–64 characters.

- **ppi-value** *ppi\_value*—Specify the Paging Policy Indicator value. Must be an integer in the range of 1–7.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 paging-map pml
 precedence 1
 trigger-type 5qi
 fiveqi-value 5
 paging-profile-name ppn1
 end
```

## Configuration Verification

To verify the configuration:

```
show full-configuration amf-global paging-map pml
amf-global
 paging-map pml
 precedence 1
 triggertype 5qi
 fiveqi-value 5
 paging-profile-name ppn1
```

## Configuring the Paging Profile

To configure the Paging profile, use the following configuration:

```
config
 amf-global
 paging-profile paging_profile_name
 paging-stage paging_stage_count
 end
```

### NOTES:

- **paging-profile** *paging\_profile\_name*—Specify the paging profile name. Each paging profile is a list of paging stages wherein stages are selected in increasing order of their number. Once paging stage is selected, paging algorithm associated with paging stage is selected.
- **paging-stage** *paging\_stage\_count*—Specify the paging stage precedence value in the range of 1-5. 1: High, 5: Low. Paging profile can have multiple stages. Stage defines the scope of paging.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 paging-profile pp1
 paging-stage 1
 paging-algo pal
 end
```

## Configuration Verification

To verify the configuration:

```
show full-configuration amf-global paging-profile ppl
amf-global
paging-profile ppl
paging-stage 1
paging-algo pal
```

## Configuring the Paging Algorithm

To configure Paging algorithm, use the following configuration:

```
config
 amf-global
 paging-algo paging_algorithm_name
 action { all_gnb_all_tai | all_gnb_last_tai |
all_gnb_remaining_tai_all | all_gnb_remaining_tai_seq | last_gnb_last_tai
| last_n_gnb_last_tai }
 max-n-gnb max_n_gnb_count
 max-paging-attempts attempts_count
 t3513-timeout timeout_value
 end
```

### NOTES:

- **paging-algo** *paging\_algorithm\_name*—Specify the paging algorithm.
- **action** { **all\_gnb\_all\_tai** | **all\_gnb\_last\_tai** | **all\_gnb\_remaining\_tai\_all** | **all\_gnb\_remaining\_tai\_seq** | **last\_gnb\_last\_tai** | **last\_n\_gnb\_last\_tai** }—Specify the paging action.
- **max-n-gnb** *max\_n\_gnb\_count*—Specify the number of gNBs to page. It's the number of last gNBs from which UE contacted AMF. Must be an integer in the range of 1–5.  
AMF uses **max-n-gnb** when paging action is **last\_n\_gnb\_last\_tai**.
- **max-paging-attempts** *attempts\_count*—Specify the maximum number of paging attempts. It's an integer in the range of 1–5.
- **t3513-timeout** *timeout\_value*—Specify the paging timeout in seconds. Stops paging if all retries are done otherwise it performs retry. Must be an integer in the range of 1–10.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 paging-algo pal
 action last_gnb_last_tai
 max-n-gnb 5
 max-paging-attempts 2
 t3513-timeout 5
 end
```

## Configuration Verification

To verify the configuration:

```
show full-configuration amf-global paging-algo pal
amf-global
paging-algo pal
action last_gnb_last_tai
max-n-gnb 5
t3513 5
max-paging-attempts 2
```

## Configuring the Paging Priority

To configure the Paging priority, use the following configuration:

```
config
 amf-global
 call-control-policy call_control_policy_name
 paging-priority map arp arp_value ngap-paging-priority priority_value
 end
```

### NOTES:

- **call-control-policy** *call\_control\_policy\_name*—Specify the operator policy name.
- **paging-priority map arp** *arp\_value* **ngap-paging-priority** *priority\_value*—Specify the paging priority mapping value for ARP and NGAP. The NGAP paging priority value must be an integer in the range of 0-7.

AMF allows you to map incoming ARP value from SMF to NGAP paging priority.

When configured, AMF does the following:

- Populates the paging priority IE in PAGING message and sends to gNB.
- Handles new incoming N1N2 message as per the configuration, when paging is already in progress.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy local
 paging-priority map arp 5 ngap-paging-priority 1
 paging-priority map arp 8 ngap-paging-priority 2
 end
```

## Configuration Verification

To verify the configuration:

```
show full-configuration amf-global call-control-policy local paging-priority
amf-global
call-control-policy local
paging-priority map arp 5 ngap-paging-priority 1
paging-priority map arp 8 ngap-paging-priority 2
```

## AMF Paging Configuration Example

The following is an example configuration.

```
config
amf-global
operator-policy local
 ccp-name local
 paging-map-name pm1
 ..
exit
paging-map pm1
 precedence 1
 trigger-type arp
 arp-value 5
 paging-profile-name pp3
 exit
 precedence 2
 trigger-type dereg
 dereg-value udm_init
 paging-profile-name pp4
 exit
 precedence 3
 trigger-type ppi
 ppi-value 7
 paging-profile-name pp1
 exit
 precedence 4
 trigger-type 5qi
 fiveqi-value 5
 paging-profile-name pp4
 exit
 precedence 5
 trigger-type dereg
 dereg-value amf_init
 paging-profile-name pp4
 exit
 precedence 6
 trigger-type ppi
 ppi-value 6
 paging-profile-name pp5
 exit
 precedence 9
 trigger-type dnn
 dnn-value starent1.com
 paging-profile-name pp4
 exit
exit
paging-profile pm1
exit
paging-profile pp1
 paging-stage 1
 paging-algo pa1
 exit
exit
paging-profile pp2
 paging-stage 1
 paging-algo pa2
 exit
exit
paging-profile pp3
 paging-stage 2
 paging-algo pa4
 exit
```

```

paging-stage 3
 paging-algo pa1
exit
paging-stage 4
 paging-algo pa2
exit
paging-stage 5
 paging-algo pa3
exit
exit
paging-profile pp4
 paging-stage 1
 paging-algo pa1
 exit
 paging-stage 2
 paging-algo pa2
 exit
 paging-stage 3
 paging-algo pa3
 exit
 paging-stage 4
 paging-algo pa6
 exit
 paging-stage 5
 paging-algo pa4
 exit
exit
paging-profile pp5
 paging-stage 5
 paging-algo pa5
 exit
exit
paging-algo pa1
 action last_gnb_last_tai
 max-n-gnb 3
 t3513-timeout 2
 max-paging-attempts 1
exit
paging-algo pa2
 action last_n_gnb_last_tai
 max-n-gnb 3
 t3513-timeout 3
 max-paging-attempts 2
exit
paging-algo pa3
 action all_gnb_last_tai
 max-n-gnb 5
 t3513-timeout 4
 max-paging-attempts 3
exit
paging-algo pa4
 action all_gnb_all_tai
 max-n-gnb 5
 t3513-timeout 5
 max-paging-attempts 5
exit
paging-algo pa5
 action all_gnb_all_tai
 max-n-gnb 5
 t3513-timeout 10
 max-paging-attempts 5
exit
paging-algo pa6
 action all_gnb_remaining_tai_all

```



```
max-n-gnb 5
t3513-timeout 5
max-paging-attempts 1
end
```





## CHAPTER 47

# gNB-Initiated Reset Procedure

- [Feature Summary and Revision History, on page 483](#)
- [Feature Description, on page 483](#)
- [How it Works, on page 484](#)

## Feature Summary and Revision History

### Summary Data

**Table 162: Summary Data**

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled – Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

**Table 163: Revision History**

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

## Feature Description

If a failure occurs at the NG-RAN node, it causes data loss in all or part of the transaction reference information. In order to recover from the failure, the gNB initiates a reset procedure towards AMF to release the resources. This procedure initializes or reinitializes the RAN, and provides an opportunity for new transactions.

The NG reset procedure resets all the UE sessions; during partial reset, you can reset particular UE sessions by using the partOfNG-Interface IE when sending NG Application Protocol (NGAP) ID for those sessions.

A sample partial reset IE:


```
IE Type: id-ResetType(88)
{'ResetType': {'choice-Extensions': None,
'nG-Interface': None,
'partOfNG-Interface': {0: {'UE-associatedLogicalNG-connectionItem': {'aMF-UE-NGAP-ID':
4194359,
'iE-Extensions': None,
'rAN-UE-NGAP-ID': 12346}}}}}
```

## How it Works

The gNB sends a Reset message to AMF when an event fails on the NG-RAN node. On receiving the message, the AMF releases all the allocated resources specified (implicitly and explicitly) in the Reset message. AMF allocates the resources related to UE associations on the NG node. The AMF also erases the NGAP ID assigned to the UE associations. After resetting the resources, the AMF sends a Reset Acknowledgment message to gNB indicating that the procedure is complete.

The following figure illustrates the reset procedure between gNB and AMF.

**Figure 69: Reset Procedure Initiated from gNB to AMF**

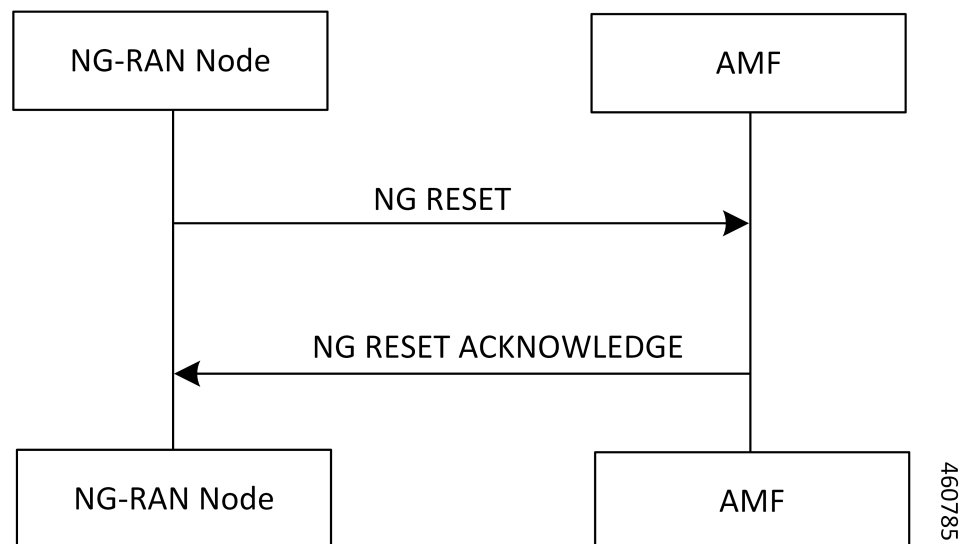



## CHAPTER 48

# Periodic Registration Support

- [Feature Summary and Revision History, on page 485](#)
- [Feature Description, on page 485](#)
- [How it Works, on page 486](#)
- [Feature Configuration, on page 489](#)
- [OAM Support, on page 490](#)

## Feature Summary and Revision History

### Summary Data

*Table 164: Summary Data*

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

*Table 165: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

## Feature Description

The Access and Mobility Management Function (AMF) supports periodic registration to the UE to confirm its availability. The procedure is controlled in the UE by the periodic registration update timer, T3512.

The timer that is run in the AMF is called the Mobile Reachability (MR) timer. It is configurable but is different from T3512. T3512 is configured in the UE, and the MR timer is set to 4 minutes higher than T3512.

The MR timer in the AMF is restarted every time the UE moves to IDLE state, and stopped when the AMF receives any message from the UE.

When the MR timer expires, the AMF stops paging the UE.

The periodic registration timer (T3512) is supported as per *3GPP TS 24.501 v15.0.0*. Currently, in AMF, the T3512 timer expiry supports implicit deregistration.

The AMF sends the T3512 timer value in the Registration Accept or Registration Reject message to the UE and the UE uses this value to send the periodic registration information.

## How it Works

This section describes how this feature works.

## Call Flows

This section describes the key call flows of Periodic Registration feature.

### Periodic Registration without Authentication Call Flow

This section describes the Periodic Registration without Authentication call flow.

Figure 70: Periodic Registration without Authentication Call Flow

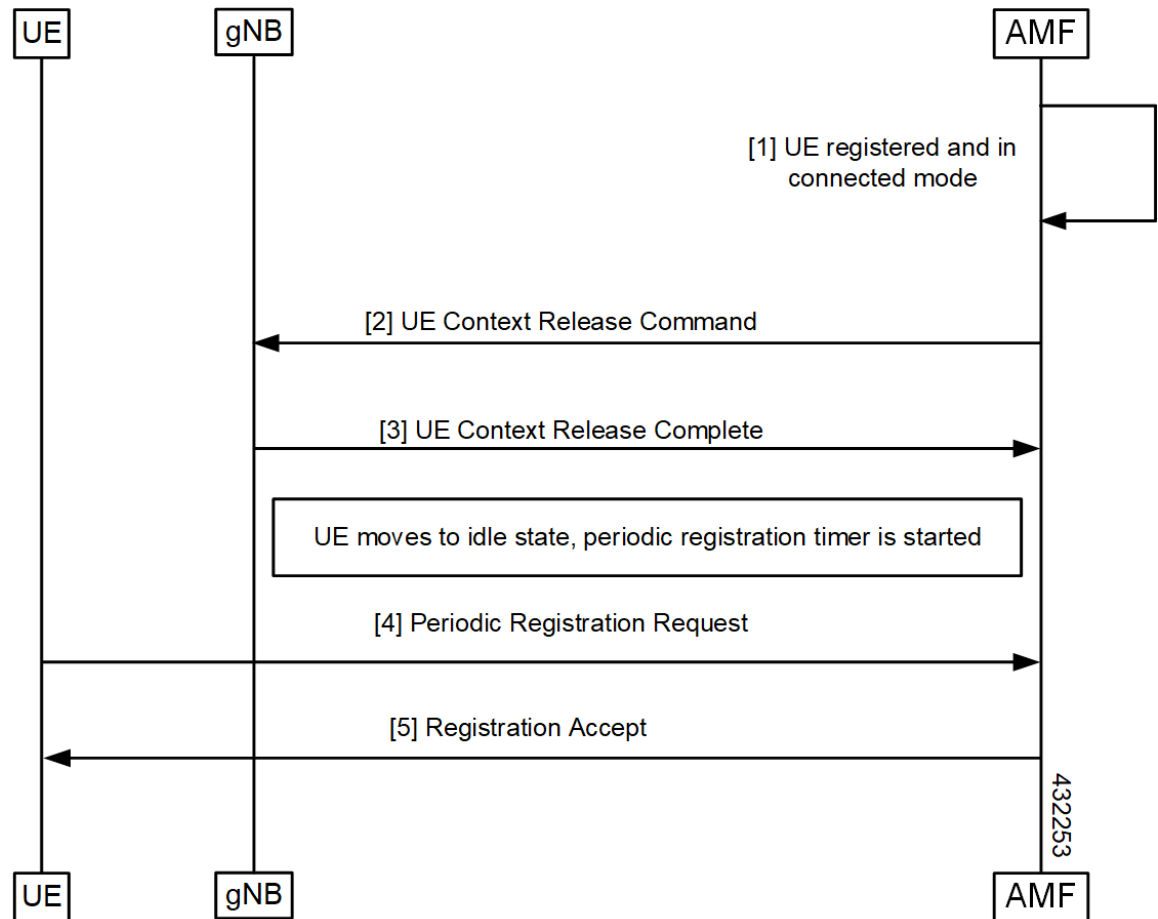


Table 166: Periodic Registration without Authentication Call Flow Description

| Step | Description                                                                                                  |
|------|--------------------------------------------------------------------------------------------------------------|
| 1    | The UE registered with the network and it's in CONNECTED mode.                                               |
| 2    | The AMF sends the Context Release Command to the gNB.                                                        |
| 3    | The AMF receives the Context Release Complete from the gNB.                                                  |
| 4    | When UE moves to IDLE state, a periodic timer started and UE sends periodic registration request to the AMF. |
| 5    | The UE receives Registration Accept from the AMF.                                                            |

## Periodic Registration with Authentication Call Flow

This section describes the Periodic Registration with Authentication call flow.

Figure 71: Periodic Registration with Authentication Call Flow

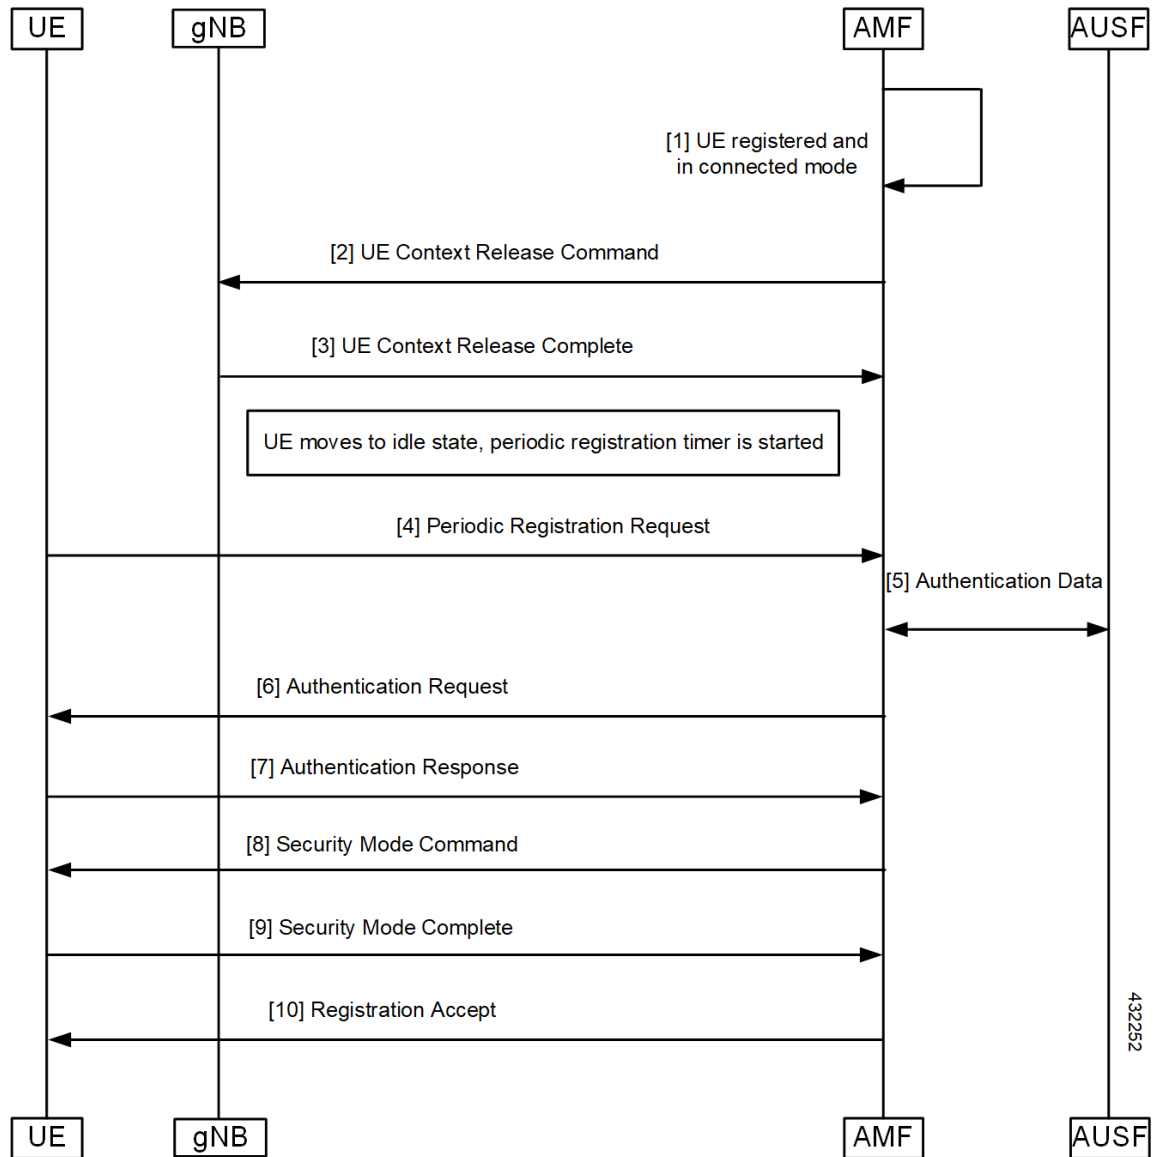


Table 167: Periodic Registration with Authentication Call Flow Description

| Step | Description                                                                                             |
|------|---------------------------------------------------------------------------------------------------------|
| 1    | Periodic Registration with Authentication<br>UE registered with the network and it's in CONNECTED mode. |
| 2    | The AMF sends the Context Release Command to the gNB.                                                   |
| 3    | The AMF receives the Context Release Complete from the gNB.                                             |



| Step | Description                                                                                                              |
|------|--------------------------------------------------------------------------------------------------------------------------|
| 4    | When the UE moves to IDLE state, a periodic timer started and the UE sends the Periodic Registration Request to the AMF. |
| 5    | Authentication data exchanged between the AMF and the AUSF.                                                              |
| 6    | The AMF sends the Authentication Request to the UE.                                                                      |
| 7    | The AMF receives the Authentication Response from the UE.                                                                |
| 8    | The AMF sends the Security Mode Command to the UE.                                                                       |
| 9    | The AMF receives the Security Mode Complete Command from the UE.                                                         |
| 10   | The AMF sends the Registration Accept to the AMF.                                                                        |

## Feature Configuration

Configuring this feature involves the following steps.

- T3512 timer is configured in the call-control profile. For more information, refer to [Configuring the T3512 Timer, on page 489](#).
- Periodic registration is enabled in the call-control profile. For more information, refer to [Configuring Authentication Enable, on page 489](#).

## Configuring the T3512 Timer

To configure the T3512 timer, use the following configuration.

```
config
 amf-global
 call-control-policy policy_name
 timers t3512 value value_in_seconds
 end
```

### NOTES:

- **call-control-policy *policy\_name***—Specify the UE call control policy name.
- **timers t3512 value *value\_in\_seconds***—Specify the T3512 timer value in seconds. It's an unsigned integer in the range from 0-35712000.

## Configuring Authentication Enable

To enable the authentication, use the following configuration.

```
configure
 amf-global
 call-control-policy policy_name
```

```
enable-auth-periodic-reg [false | true]
end
```

**NOTES:**

- **call-control-policy** *policy\_name*—Specify the UE call control policy name.
- **enable-auth-periodic-reg** [false | true]—Allows to set enabling authenticated periodic registration request as true or false.

## OAM Support

This section describes operations, administration, and maintenance information for this feature.

## Bulk Statistics Support

The following statistics are supported for the periodic registration feature

- **periodic\_registration\_request** - The number of Periodic Registration Request messages received.
- **NumPeroidicRegTimerExpiry** - The number of Periodic Registration timer expires.



## CHAPTER 49

# Relative Capacity Configuration Update

- [Feature Summary and Revision History, on page 491](#)
- [Feature Description, on page 491](#)
- [How it Works, on page 492](#)
- [Feature Configuration, on page 494](#)

## Feature Summary and Revision History

### Summary Data

*Table 168: Summary Data*

|                                        |                     |
|----------------------------------------|---------------------|
| Applicable Products or Functional Area | AMF                 |
| Applicable Platforms                   | SMI                 |
| Feature Default Setting                | Enabled – Always-on |
| Related Documentation                  | Not Applicable      |

### Revision History

*Table 169: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.04.0 |

## Feature Description

The AMF supports modification of relative AMF capacity and notifies to the connected gNodeBs. The AMF also provides an option to control the rate at which existing sessions can be cleared in the AMF.

## How it Works

This section describes how this feature works.

When the AMF detects changes in the Relative AMF Capacity configurations, it performs the following actions:

- The AMF triggers the configuration updates toward all the gNBs and each request has a timeout value of 30 seconds, which is a hardcoded value.
- The AMF waits for all the responses and timeout to occur for all the requests toward gNBs.
- The AMF consolidates the completed list of gNBs from which failure is received with TimeToWait IE from gNB. The IE indicates the minimum time, for which the AMF must wait before retransmitting.
- The AMF calculates the maximum value of TimeToWait, received across all the failure responses as the waiting time, before it retransmits to all the failed gNBs.
- The AMF retransmits only to those gNBs which have sent TimeToWait IE and retransmission will be done only once. No further action will be taken on further failure responses.
- If there are new configuration changes and if there is already an AMF configuration update procedure in progress, then the ongoing configuration is prioritized. The AMF handles the new configuration changes, only after the completion of the ongoing AMF configuration update procedure.

### Clear Sub

Operators can clear the existing sessions at specific rate by issuing **clear sub all** command along with the rate option.

## Call Flows

This section describes the key call flows for this feature.

### AMF Configuration Updates Call Flow

This section describes the AMF Configuration Updates call flow.

Figure 72: AMF Configuration Updates Call Flow

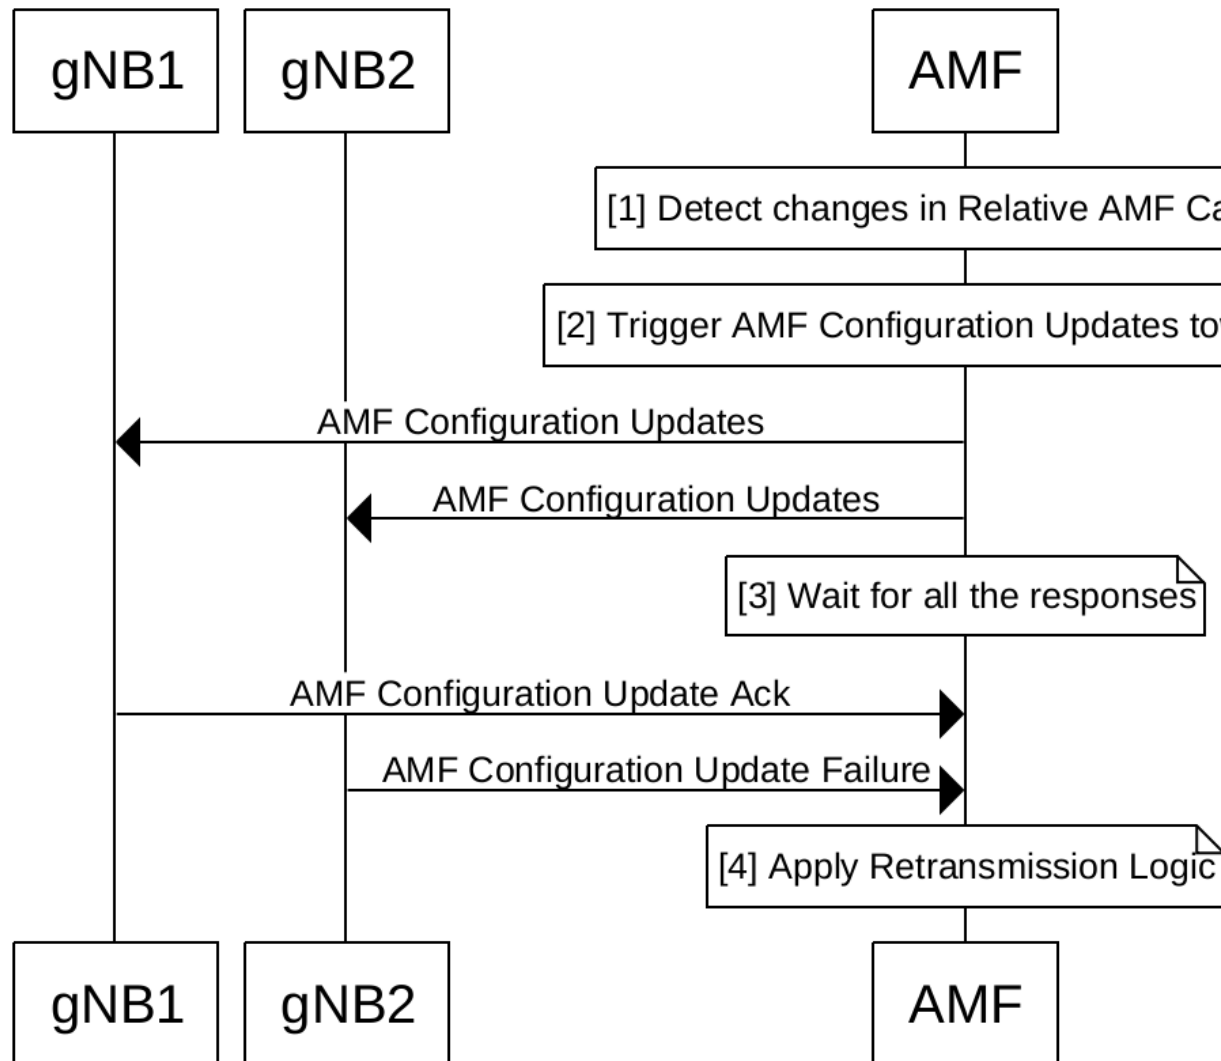


Table 170: AMF Configuration Updates Call Flow Description

| Step | Description                                                                                                        |
|------|--------------------------------------------------------------------------------------------------------------------|
| 1    | The configuration for the relative AMF capacity is detected and modified.                                          |
| 2    | The modified AMF configuration updates are triggered toward all the available gNBs, such as gNB1, gNB2, and so on. |
| 3    | The AMF waits and consolidates responses from gNBs.                                                                |

| Step | Description                                                                                                                                                                                                                                               |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4    | <p>Calculates overall wait time as the Maximum of all incoming TimeToWait and starts retransmissions. Retransmission is done toward those gNBs, which have responded with the TimeToWait IE.</p> <p><b>Note</b><br/>Retransmission is done only once.</p> |



- Note** The following are important feature-related references:
- The AMF does not update any capacity changes toward the NRF, as part of this feature.
  - If there is a protocol pod restart, the ongoing AMF configuration updates procedure will be aborted, and not resumed.

## Feature Configuration

Configuring this feature involves the following steps:

- Clearing Subscribers with Rate
- Configuring Relative AMF Capacity

### Clearing Subscribers with Rate

To clear Subscribers with Rate, use the following command:

```
clear subscriber all rate rate
```

### Configuring Relative AMF Capacity

To configure Relative AMF Capacity, use the following configuration:

```
config
 amf-services service_name
 relative-amf-capacity capacity_number
```

#### NOTES:

- **subscriber**—Specifies the UE subscriber clear condition type.
- **all**—Clears all the subscriber sessions.
- **rate *rate***—Specifies the rate at which the AMF attempts to clear the existing sessions, within the range of 100-500. The default value is 100.
- **relative-amf-capacity *capacity\_number***—Specifies the AMF capacity, within the range of 0–255. The default value is 127.

## Configuration Example

The following is an example configuration.

```
clear subscriber all rate 300
```

## Configuration Verification

To verify the configuration:

```
show running-config amf-services service_name
relative-amf-capacity 100
```







## CHAPTER 50

# Retrieving IMEI from the UE

- [Feature Summary and Revision History, on page 497](#)
- [Feature Description, on page 497](#)
- [How it Works, on page 498](#)
- [Viewing the Retrieved IMEI, on page 501](#)
- [OAM Support, on page 501](#)

## Feature Summary and Revision History

### Summary Data

**Table 171: Summary Data**

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled – Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

**Table 172: Revision History**

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.02.0 |

## Feature Description

Completion of the registration procedure includes retrieving the International Mobile Equipment Identity (IMEI) or International Mobile Equipment Identity – Software Version (IMEI-SV) from the UE. The AMF

retrieves the IMEI or IMEI-SV from the UE by sending the Identity Request or Security Mode Command message. The AMF communicates the retrieved IMEI or IMEI-SV to its peer NFs.

## How it Works

This section describes how this feature works.

## Call Flows


This section describes the key call flows for this feature.

### Registration Procedure Call Flow

This section describes the Registration Procedure call flow.

During the initial registration procedure, the PEI is obtained from the UE. The AMF operator may check the PEI with an EIR. After receiving the PEI (IMEI-SV), the AMF communicates it to the UDM, SMF, and PCF. The UDM stores the PEI in the UDR by sending the Nudr\_SDM\_Update message.

**Figure 73: Registration Procedure Call Flow**

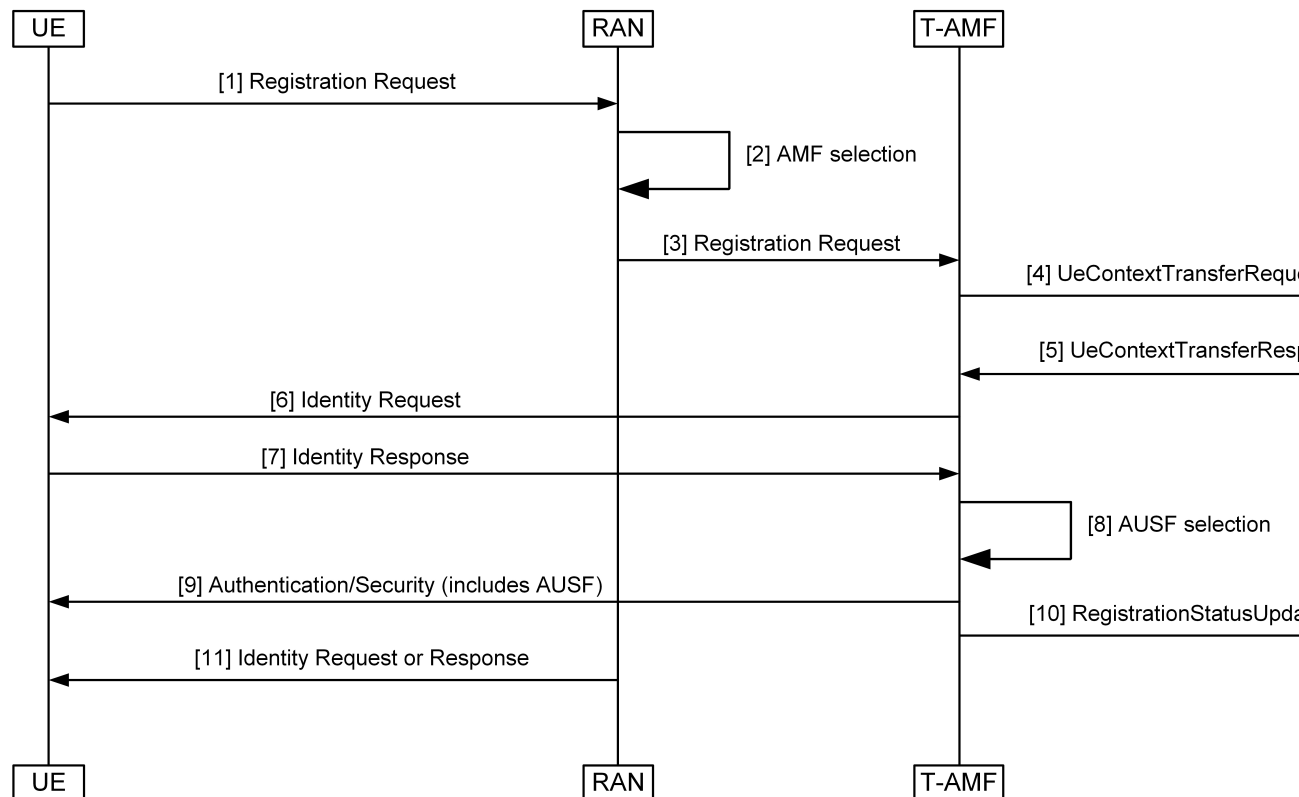

**Table 173: Registration Procedure Call Flow Description**

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE sends a Registration Request to the RAN.<br><br>The Registration Request message includes PEI as part of N2 information. If the PEI is not available, the AMF sends an Identity Request message to retrieve IMEI-SV.                                                                                                                                                                                                                                                                                                                                                                 |
| 2    | The RAN performs the AMF selection procedure.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| 3    | The RAN sends the Registration Request to the T-AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 4    | The T-AMF sends a UeContextTransferRequest to the S-AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 5    | The S-AMF responds to the AMF with UeContextTransferResponse.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| 6    | The T-AMF sends the Identity Request message to the UE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| 7    | The UE sends the Identity Response message to the T-AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 8    | The T-AMF performs the AUSF selection procedure.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 9    | The T-AMF sends the Authentication or Security message to the UE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 10   | The T-AMF sends the RegistrationStatusUpdate message to the S-AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 11   | <p>The T-AMF sends the Identity Request or Response (PEI) message to the UE.</p> <p>The AMF initiates the Identity Request procedure by sending an Identity Request message to the UE to retrieve the PEI when:</p> <ul style="list-style-type: none"> <li>• The UE does not provide the PEI.</li> <li>• The UE cannot retrieve the PEI from the old AMF.</li> </ul> <p>The AMF transfers an encrypted PEI unless the UE performs an Emergency Registration. For Emergency Registration, the UE includes the PEI in the Registration Request so that the PEI retrieval step is skipped.</p> |

## Idle or Connected Mode Mobility Call Flow

This section describes the Idle or Connected Mode Mobility call flow.

Figure 74: Idle or Connected Mode Mobility Call Flow

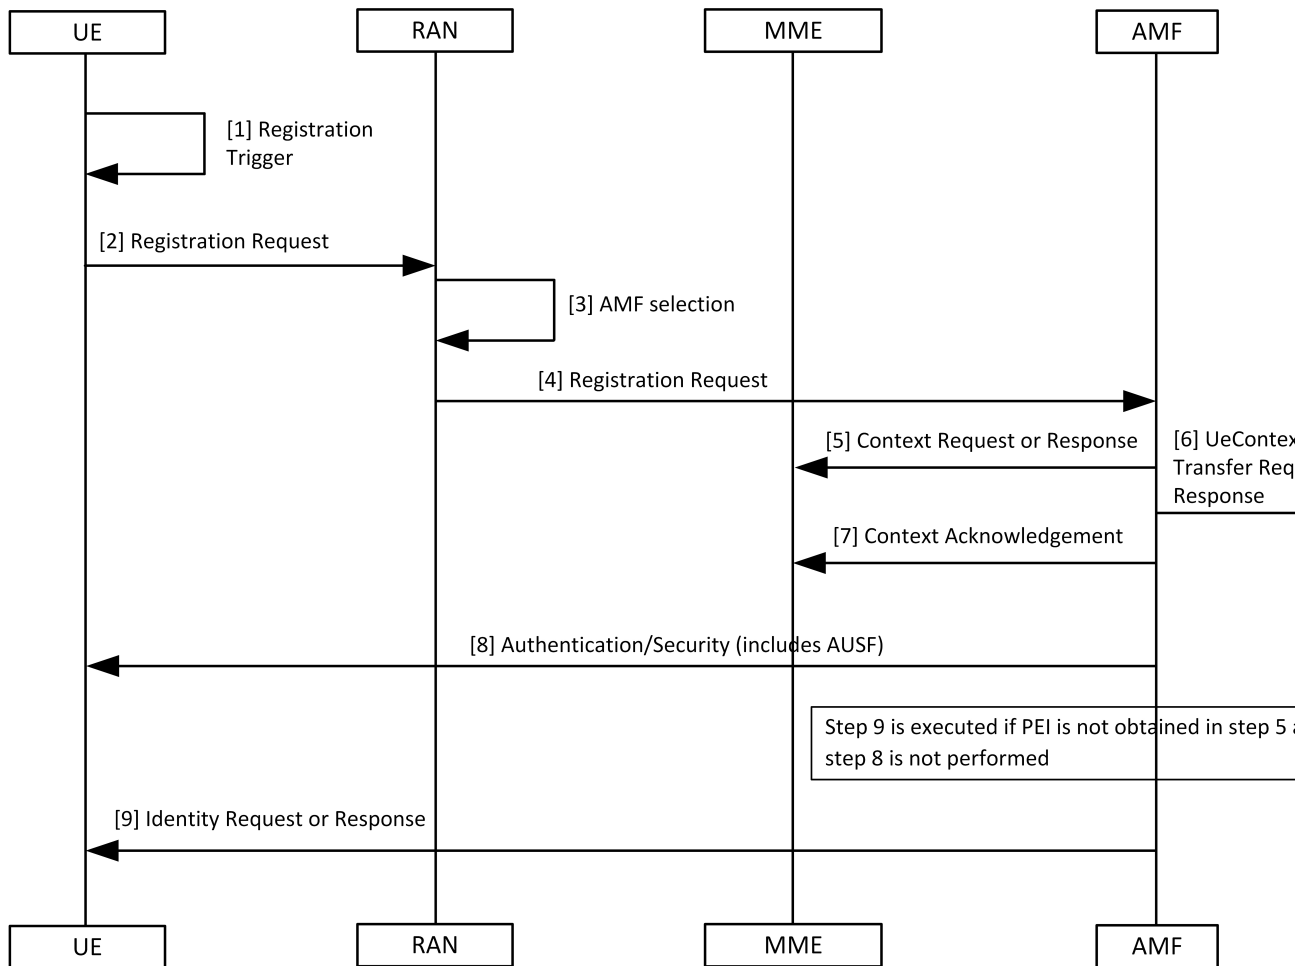


Table 174: Idle or Connected Mode Mobility Call Flow Description

| Step | Description                                                           |
|------|-----------------------------------------------------------------------|
| 1    | The UE sends a Registration Trigger.                                  |
| 2    | The UE sends a Registration Request to the RAN.                       |
| 3    | The RAN performs an AMF selection.                                    |
| 4    | The RAN sends a Registration Request to the AMF.                      |
| 5    | The AMF sends a Context Request or Response message to the MME.       |
| 6    | The AMF sends a UeContextTransfer Request or Response to the Old AMF. |
| 7    | The AMF sends the Context Acknowledgement message to the MME.         |
| 8    | The AMF sends an Authentication or Security message to the UE.        |

| Step | Description                                                       |
|------|-------------------------------------------------------------------|
| 9    | The AMF sends the Identity Request or Response message to the UE. |

## Standards Compliance

This feature complies with the following standards specifications:

- 3GPP 29.502 "5G System; Session Management Services; Stage 3"
- 3GPP 29.503 "5G System; Unified Data Management Services; Stage 3"
- 3GPP 23.502 "Procedures for the 5G System (5GS)"
- 3GPP 24.501 "Non-Access-Stratum (NAS) protocol for 5G System (5GS); Stage 3"
- 3GPP 23.003 "Numbering, addressing and identification"

## Viewing the Retrieved IMEI

To view the IMEI or IMEI-SV that AMF retrieved:

```
show subscriber supi 123456789012345
subscriber-details
{
 "subInfo": {
 "GenericInfo": {
 "RanUeNGAPID": 12346,
 "AmfUeNGAPID": 201328650,
 "NGAPConnID": 21472,
 "Supi": "123456789012345",
 "Imei": "imei-352099001761480",
 "UeId": "supi:123456789012345",
 }
 }
}

show subscriber supi 123456789012345
subscriber-details
{
 "subInfo": {
 "GenericInfo": {
 "RanUeNGAPID": 12346,
 "AmfUeNGAPID": 201328650,
 "NGAPConnID": 21472,
 "Supi": "123456789012345",
 "Imei": "imeisv-3520990017614856",
 "UeId": "supi:123456789012345",
 }
 }
}
```

## OAM Support

This section describes operations, administration, and maintenance support for this feature.

## Bulk Statistics Support

The following statistic is supported for the Retrieving IMEI from the UE feature:

**n1\_service\_stats**

Description: The AMF UE service statistics.

**Sample Query:**

```
n1_service_stats{message_type="IdentityRequest_Imeiv",status="success",reason="key Mismatch",slice_data="2-333333"}
```

**Labels:**

- Label: `message_type`

Label Description: The message type associated with a UE service.

Example: IdentityRequest\_Imeiv, N1SecurityModeComplete, N1AuthenticationRsp, N1SecurityModeCommand, N1AuthenticationReq, N1AuthFail\_SyncFailure, N1AuthenticationReject, N1AuthFail\_MacFailure, IdentityRequest\_Imei, IdentityRequest\_Suci, N1DeRegAccept\_UeTerminatedDereg, N1UeConfigurationUpdCmd.

- Label: `status`

Label Description: Overall status.

Example: success, failures, attempted

- Label: `reason`

Label Description: The reason associated with an UE service.

Example: Suspend, Suspend for Async, Unable to get rsp, Unable to retrieve msg from rsp, Supi mismatch, Internal Error, Sync Failed, Timeout, Others, No Security Context from Peer, Peer Provided Sec Context Failed, NgKsi Already In Use, Scheduled ipc action in background, Unable to retrieve identity rsp, Unable to get Supi, key Mismatch

- Label: `slice_data`

Label Description: Slice data.

Example: 2-333333



# CHAPTER 51

## Roaming Support

- [Feature Summary and Revision History, on page 503](#)
- [Feature Description, on page 503](#)
- [N9 and S8 Roaming, on page 504](#)
- [Configuring the 5GC Inter-PLMN Roaming, on page 509](#)

## Feature Summary and Revision History

### Summary Data

*Table 175: Summary Data*

|                                          |                                                                                                     |
|------------------------------------------|-----------------------------------------------------------------------------------------------------|
| Applicable Product(s) or Functional Area | AMF                                                                                                 |
| Applicable Platform(s)                   | SMI                                                                                                 |
| Feature Default Setting                  | Enabled - Always-on                                                                                 |
| Related Documentation                    | <a href="#">Steering of Roaming, Roaming Restrictions, and Operator Policy Support, on page 569</a> |

### Revision History

*Table 176: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.01.0 |

## Feature Description

AMF supports the following roaming types:

- Inter-operator roaming
- Roaming on N9 and S8 interface
- Steering of roaming, roaming restrictions and operator Policy Support

# N9 and S8 Roaming

## Feature Description

**Table 177: Feature History**

| Feature Name                                 | Release Information | Description                                                                                                                                                                 |
|----------------------------------------------|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Local Break Out (LBO) Support for N9 Roaming | 2024.01.1           | AMF supports local breakout for N9 roaming irrespective of presence of NRF configuration. This LBO support ensures a seamless network connectivity for roaming subscribers. |

AMF checks if the subscriber is a roamer or homer, during registration. For a roamer subscriber, AMF selects one of the following roaming procedures:

- Home-routed roaming: This procedure enables the subscribers to access the visited network through the home PDN gateway (H-PGW) and obtain services provided by their home networks.
- Local Break Out (LBO) roaming: This procedure enables the subscribers to obtain visitor network provided services. LBO routes the traffic to the visited network, without routing through the home network before sending to or from the end destination.

AMF discovers the following NFs using NRF services, as per the selection of homer or roamer:

- AUSF
- PCF
- UDM
- SMF

### Prerequisites

NRF configuration must be available.

## How it Works

This section describes how this feature works.




## Call Flows

This section describes the key call flows for this feature.

### N9 Home Routed Roaming Call Flow

This section describes the N9 Home Routed Roaming call flow.

**Figure 75: N9 Home Routed Roaming Call Flow**

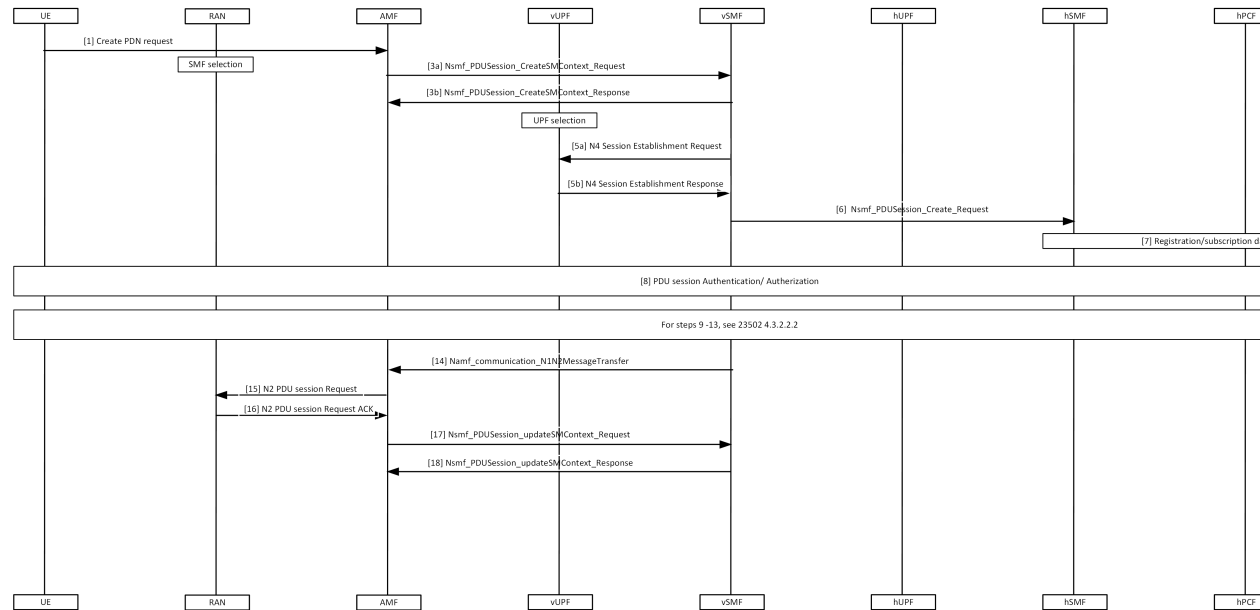

**Table 178: N9 Home Routed Roaming Call Flow Description**

| Step      | Description                                                                                                     |
|-----------|-----------------------------------------------------------------------------------------------------------------|
| 1         | The UE sends the Create PDN Request to AMF.                                                                     |
| 2, 3a, 3b | AMF performs the SMF selection and sends Nsmf_PDUSession_CreateSMContext_Request to vSMF and receives response. |
| 4         | vUPF performs the UPF selection.                                                                                |
| 5a, 5b    | vSMF sends the N4 Session Establishment Request to vUPF and receives a response from it.                        |
| 6         | vSMF sends Nsmf_PDUSession_Create_Request to the hSMF.                                                          |
| 7         | Registration or subscription data retrieval is performed.                                                       |
| 8         | PDU session Authentication or Authorization procedure is performed.                                             |
| 9-13      | See 3GPP TS 23502, version 15.4.0, section 4.3.2.2.2.                                                           |
| 14        | vSMF sends Namf_communication_N1N2MessageTransfer to SMF.                                                       |
| 15, 16    | AMF sends N2 PDU Session Request to RAN and receives a response.                                                |

| Step   | Description                                                                        |
|--------|------------------------------------------------------------------------------------|
| 17, 18 | AMF sends Nsmf_PDUSession_updateSMContext_Request to vSMF and receives a response. |



**Note** For Local Breakout, the AMF uses the local SMF configuration in the absence of an NRF configuration.

## S8 Home Routing Call Flow

This section describes the S8 Home Routing call flow.

For the preparation phase, see *3GPP TS 23502, Release 15.4.0, section 4.11.1.2.2.2-1*—EPS to 5GS (4G to 5G) handover using N26 interface.

The home-routed roaming scenarios support the following functionalities:

- H-PLMN supports the following nodes:
  - PGW-C and SMF
  - UPF and PGW-U
- AMF selects a default vSMF per PDU session, and invokes the Nsmf\_PDUSession\_CreateSMContext service operation with the following:
  - UE PDN connection contexts
  - AMF ID
  - SMF
  - PGW-C address
  - S-NSSAI
- The S-NSSAI is configured for interworking and is associated with default vSMF.
- The default vSMF puts S-NSSAI in the N2 SM information container.
- AMF selects PGW-C and SMF through NRF from S8 FQDN (obtained from the MME).

## Standards Compliance

This feature complies with the following standards specifications:

- *3GPP TS 23.501 "System Architecture for the 5G System"*
- *3GPP TS 23.502 "Procedures for the 5G System"*
- *3GPP TS 24.501 "Non-Access-Stratum (NAS) protocol for 5G System"*
- *3GPP TS 29.503 "Unified Data Management Services"*
- *3GPP TS 29.513 "Policy and Charging Control signalling flows and QoS parameter mapping"*
- *3GPP TS 29.518 "Access and Mobility Management Services"*

## Feature Configuration

Configuring this feature involves the following steps:

- Configure the LBO—This configuration provides the commands to configure LBO roaming. For more information, refer to [Configuring the LBO, on page 507](#).
- Configure the MNC digits in SUPI—This configuration provides the commands to configure the number of MNC digits in SUPI. For more information, refer to [Configuring the MNC bits in SUPI, on page 508](#).  
Configure the MNC bits in SUPI to discover the exact peer NF in roaming.
- Configure the Globally Unique AMF ID (GUAMI) for AMF selection—This configuration provides the commands to configure the GUAMI. For more information, refer to [Configuring the GUAMI for AMF Selection, on page 508](#).

### Configuring the LBO

To configure Local Break Out, use the following configuration:

```
config
 amf-global
 dnn-policy policy_name
 lbo-roaming-allowed { true | false }
 end
```

#### NOTES:

- **dnn-policy *policy\_name***—Specify the DNN policy name.
- **lbo-roaming-allowed { true | false }**—Specify LBO roaming allowed or not. Configuring **lbo-roaming-allowed** has minimum priority. The priorities are as follows:
  1. When UE includes a DNN name in the PDU Establishment Request, the DNN name is validated with the UDM subscription data. The LBO flag in the UDM subscription data has maximum priority.
  2. When UE doesn't include DNN name in PDU Establishment Request, AMF checks for the default DNN in UDM subscription. If the default DNN is available in the UDM subscription, the LBO flag is considered from the UDM subscription data.
  3. When UE doesn't include DNN name and UDM doesn't provide any default DNN, AMF checks for the configured default DNN. The corresponding DNN policy is checked for the configured default DNN and the LBO is configured using *Configuring the LBO*.

When **lbo-roaming-allowed** configured as true, or UDM sends this flag, LBO roaming is considered. Otherwise Home-routed roaming is considered.



#### Note

AMF provides a **lbo-roaming-allowed** CLI within the DNN Policy. This CLI allows overriding the LBO flag sent in the UDM subscription. Specifically, when the LBO flag is false or missing, you can configure the override CLI to true.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 dnn-policy dn1
 lbo-roaming-allowed true
 end
```

## Configuring the MNC bits in SUPI

To configure the MNC bits in SUPI, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 supi
 mnc number_of_mnc_bits
 end
```

### NOTES:

- **call-control-policy *policy\_name***—Specify the call control policy name.
- **mnc *number\_of\_mnc\_bits***—Specify the number of MNC bits. Must be either 2 or 3.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy local
 supi
 mnc 2
 end
```

## Configuration Verification

To verify the configuration:

```
show running-config amf-global call-control-policy local
amf-global
call-control-policy local
supi mnc 2
```

## Configuring the GUAMI for AMF Selection

To configure the GUAMI for AMF selection, use the following configuration:

```
config
 profile network-element amf amf_name
 query-params guami
 end
```

### NOTES:

- **profile network-element amf *amf\_name***—Specify AMF name. Must be a string.
- **query-params guami**—Specify query parameters as GUAMI.

## Configuration Verification

To verify the configuration:

```
show running-config profile network-element amf amf1 query-params
profile network-element amf amf1
query-params guami
```

# Configuring the 5GC Inter-PLMN Roaming

To configure this feature, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 local-cause-code-map registration-restriction cause-code-5gmm
 plmn-not-found
 end
```

### NOTES:

- **call-control-policy *policy\_name***—Specify the call control policy name.
- **local-cause-code-map registration-restriction cause-code-5gmm plmn-not-found**—When the subscriber is a roamer and has registration restrictions, the AMF rejects the subscriber with the **plmn-not-found** cause setting.





# CHAPTER 52

## SCTP Multihoming and Stack Parameters Support

- [Feature Summary and Revision History, on page 511](#)
- [Stream Control Transmission Protocol \(SCTP\) Multihoming, on page 512](#)
- [SCTP Multihoming and Stack Parameters Support, on page 513](#)

### Feature Summary and Revision History

#### Summary Data

Table 179: Summary Data

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

#### Revision History

Table 180: Revision History

| Revision Details                                                                                                                                                                                                                               | Release   |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| The following enhancements were introduced: <ul style="list-style-type: none"><li>• Support to configure SCTP stack parameters.</li><li>• Support for multiple SCTP and protocol pod pairs</li><li>• Support for show SCTP peers CLI</li></ul> | 2022.01.0 |
| First introduced.                                                                                                                                                                                                                              | 2020.03.0 |

# Stream Control Transmission Protocol (SCTP) Multihoming

Stream Control Transmission Protocol (SCTP) is a message-oriented, reliable, transport protocol. SCTP directly supports multihoming transport protocol that runs on top of an IP network. SCTP used as a protocol with pods, services, and network policy.

Multihoming is the ability of an SCTP association to support multiple IP paths to its peer endpoint.


## Feature Description

AMF supports a single SCTP pod (single instance) for SCTP multihoming, where the SCTP stack comes up with a list of supported host IPs. As part of the association formation, the association ID corresponds to the list of IPs, instead of a single IP.

The stack also supports multihoming for one-to-many and many-to-many connections. This support continues until any of IPs are available on either side of the SCTP end points (AMF and gNB). At the same time, traffic over multiple IPs is also possible.

The following figure represents the support structure for SCTP Multihoming:

**Figure 76: SCTP Multihoming Support**

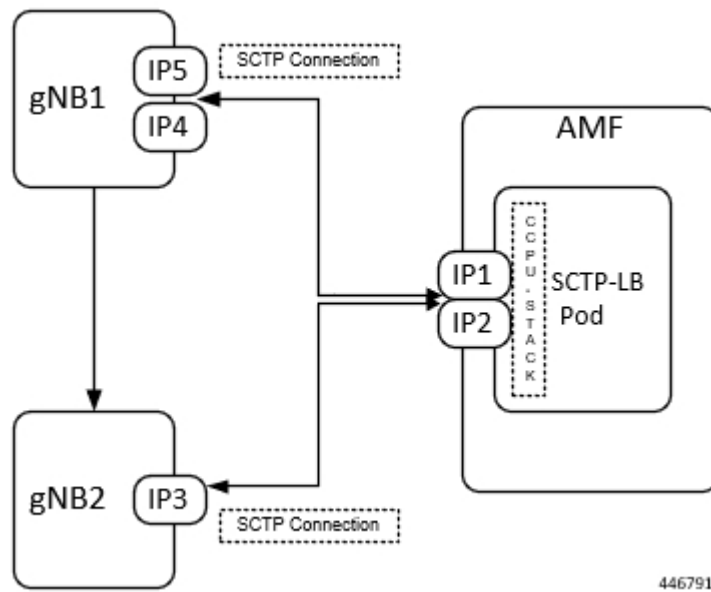

Based on the represented figure, the following SCTP associations are formed:

1. Association ID – 0 [ {IP1, IP2}, {IP4, IP5} ]
2. Association ID – 1 [ {IP1, IP2}, {IP3} ]

## Limitations

The SCTP multihoming feature has the following limitations:



- Currently not supported:
  - Dynamic addition or removal of IPs from the multihoming configuration without the pod restart
  - Dynamic service config delete and also dynamic IP change
- Currently observed and recommended:
  - If both member of the pair goes down, there's no redundancy.
  - Even though multiple protocol pairs are supported, there's a limitation with multiple protocol pairs. As a best practice, recommended to configure only one protocol pod pair.
  - One gNB can have only one association with AMF. Multiple associations with same gNB aren't supported.

## SCTP Multihoming and Stack Parameters Support

This section describes support for the following features:

- SCTP Configurable Stack Parameters
- Multiple SCTP and Protocol Pod Pairs

### Feature Description

Before implementing this feature, AMF needs separate deployment of the following five namespaces for scalability. Each AMF namespace supports the following:

- A pair of SCTP pods (active-standby)
- A pair of Protocol pods (active-standby)
- Extra pods getting deployed on Ops Center and ETCD

A single AMF namespace supports and deploys multiple SCTP pods and protocol pods. SCTP pods support multihoming and some SCTP stack-related parameters are configurable.

#### SCTP Configurable Stack Parameters

SCTP uses the multihomed host to provide fast failover and associated endurance during hardware failures. Using the associated parameters, the following activities are supported:

- Creating and customizing the required stack
- Configuring the resources by modifying the parameter values, which are later used in the stack template.
- No need to enter hardcoded values in multiple templates to specify different settings.

#### Multiple SCTP and Protocol Pod Pairs

Pods are tagged with one or more labels. The labels are later used to select and manage groups of pods in a single operation. The labels are stored in a key-value format in the metadata hash.

## How it Works

This section describes how this feature works.

### Multihoming Support

Supports multiple IP addresses for the SCTP stack.

### Multiple SCTP and Protocol Pod Pairs

In a single AMF namespace, multiple SCTP pairs can be configured. This way on same AMF, SCTP pods can be scaled up, as per the requirement.

### Configurable SCTP Endpoint Stack Parameter

Provides the option to configure multiple SCTP Endpoint stack parameters which includes the following:

- RTO
- Association
- Sack
- MTU Size

## Feature Configuration

Configuring this feature includes the following steps:

- Configuring Multiple SCTP and Protocol Pod Pairs
- Configuring SCTP Endpoint Parameters

## Configuring Multiple SCTP and Protocol Pod Pairs

To configure multiple SCTP and Protocol pod pairs use the following configuration:

```
config
instance instance_id instance_id
endpoint endpoint_name
replicas replicas_per_node
service service_name
 interface interface_name instancetype instance_type
 internal-port internal_port_config
 vip-ip ip_address vip-port port_number
 offline vip-interface vip_interface_name
 vip-ip6 ip_address vip-ipv6-port port_number
 offline vip-interface
end
```

### NOTES:

- **instance instance\_id instance\_id**—Specify the endpoint instance ID. Must be an integer in the range of 1-4.

- **endpoint** *endpoint\_name*—Specify the endpoint name.



**Note** In this release, it is recommended not to configure any service under NGAP. Currently, only one service can be configured under NGAP.

- **replicas** *replicas\_per\_node*—Specify the number of replicas per node.
- **service** *service\_name*—Specify the service name.
- **interface** *interface\_name*—Specify the endpoint interfaces, as the name of the SCTP in this multiple SCTP configuration. **sctp-1-sctp-primary** is an example.
- **instancetype** *instance\_type*—Specify the instance type. Must be one of the following:
  - Dual
  - IPv4
  - IPv6

The default value is Dual.

- **internal-port** *internal\_port\_config*—Specify the internal base-port to start the endpoint. It includes your required internal-ports and their ID from the list of available ports.
  - **admin**—Admin port for SCTP. The default value is 7879.
  - **ipc**—IPC port for SCTP. The default value is 9005.
  - **keepalived**—keepalived port for SCTP. The default value is 29000.
  - **metrics**—metrics port for SCTP. The default value is 7083.
  - **pprof**—pprof port for SCTP. The default value is 7850.



**Note** It is mandatory to configure the internal-ports CLI when more than one SCTP service is configured or more than one AMF is deployed on the same k8 cluster.

- **vip-ip** *ip\_address* **vip-port** *port\_number* **offline**—Specify the IPv4 address of the pod on which the VIP is enabled. Also, specify the interface and port number. This configuration marks vip-ip as offline or standby.



**Note** When AMF receives SCTP INIT from IPv4 address and no address is included in INIT chunk address list, AMF responds with all IPv4 and IPv6 addresses in SCTP INIT\_ACK.

- **vip-interface** *vip\_interface\_name* —Specify the VIP interface and port number. This configuration marks **vip-ip** as offline or standby.



**Note** To support multi-homing, AMF listens on multiple IP address as configured. Currently, AMF uses VIP to support high availability of SCTP pods. For multi-homing, multiple VIP addresses should be configured.

It is recommended to use different physical interfaces for each different VIP so that AMF can have different routes for each VIP address.

- **vip-ipv6** *ip\_address* **vip-ipv6-port** *port\_number*—Specify the new IPv6 address and port number.



**Note** When AMF receives SCTP INIT from IPv6 address and no address is included in INIT chunk address list, AMF respond with only IPv6 addresses in SCTP INIT\_ACK.

After the VIP-IP and VIP-Ports are up, modify the gNBs configuration to refer to the new VIP-IP and port.

### Configuration Example

The following is an example configuration.

- CLI at endpoint level: If more than one AMF is deployed in same cluster with one single SCTP service.

```
config
 instance instance-id 1
 endpoint sctp
 replicas 2
 internal-port metrics 9705 admin 9703 ipc 9701 pprof 9707 keepalived 29001
 vip-ip 209.165.201.15 vip-port 1000
 end
```

- CLI at SCTP service level: If more than one SCTP service is configured.

```
config
 instance instance-id 1
 endpoint sctp
 replicas 2
 nodes 2
 parameters mtu-size 1500
 service sctp-1 interface sctp instancetype Dual
 internal-port metrics 9705 admin 9703 ipc 9701 pprof 9707 keepalived 29001
 vip-ip 209.165.201.15 vip-port 1000
 service sctp-2 interface sctp instancetype Dual
 internal-port metrics 9715 admin 9713 ipc 9711 pprof 9717 keepalived 29011
 vip-ip 209.165.201.16 vip-port 1000
 end
```

### Configuration Verification

To verify the configuration:

```
show running-config instance
```

## Configuring SCTP Endpoint Parameters

To configure the SCTP endpoint parameters, use the following configuration:

```
config
 instance instance_id instance_id
 endpoint endpoint_name
 replicas number_of_nodes
 parameters rto initial rto_initial
 parameters rto min rto_min
 parameters rto max rto_max
 parameters association valid-cookie-life valid_cookie_life
 parameters association heartbeat-interval heartbeat_interval
 parameters association path-max-retry-count path_max_retry_count
 parameters sack sack-period sack_period
 parameters sack sack-frequency sack_frequency
 parameters mtu-size mtu_size
 end
```

### NOTES:

- **instance** *instance\_id* *instance\_id*—Specify the endpoint instance ID. Must be an integer in the range of 1-4.
- **endpoint** *endpoint\_name*—Specify the endpoint as SCTP.
- **replicas** *number\_of\_nodes*—Specify the number of node replicas that must be configured for resiliency. The minimum or default value is 2.
- **parameters**—SCTP tuning parameters.
- **rto**—Retransmission timeout parameters.
- **association**—Association parameters.
- **mtu-size**—Maximum SCTP fragment or MTU size for data packets.
- **sack**—Configures the way delayed SACKs are performed.
- **initial** *rto\_initial*—Specify the initial timeout in milliseconds. Must be an integer in the range of 100-60000. The default value is 3000.
- **min** *rto\_min*—Specify the minimum timeout in milliseconds. Must be an integer in the range of 100-60000. The default value is 1000.
- **max** *rto\_max*—Specify the maximum timeout in milliseconds. Must be an integer in the range of 100-60000. The default value is 60000.
- **valid-cookie-life** *valid\_cookie\_life*—Specify the cookie life in milliseconds. Must be an integer in the range of 5000-120000. The default value is 60000.
- **heartbeat-interval** *heartbeat\_interval*—Specify the heartbeat interval in milliseconds. Setting the value to zero, disables the heartbeat. Must be an integer in the range of 0-60000. The default value is 30000.
- **path-max-retry-count** *path\_max\_retry\_count*—Specify the path maximum retry count. Must be an integer in the range of 0-20. The default value is 5.



**Note** When single path/IP address is available, **path-max-retry-count** parameter defines maximum number of retransmissions of the DATA packets before the address is marked unreachable by sending ABORT (when only single path).

When multiple paths/IP addresses are available, **path-max-retry-count** parameter is not applicable. The parameter checks only for DATA packet and not HEARTBEAT packet sent in SCTP.

It is recommended not to change **path-max-retry-count** parameter value and use the default value.

- **sack-period** *sack\_period*—Specify the delayed sack time in milliseconds. Must be an integer in the range of 200-500. The default value is 200.



**Note** This parameter is effective when no data packets are flowing.

- When no data packets are flowing, separate SACK message is sent to acknowledge the data to the sender.
- If data packets are already flowing, then SACK is sent along with the data.

- **sack-frequency** *sack\_frequency*—Specify the delayed SACK frequency. Must be an integer in the range of 1-5. The default value is 2.



**Note** Changing the frequency to 1, disables the delayed SACK algorithm.

This parameter is effective when no data packets are flowing.

- When no data packets are flowing, separate SACK message is sent with all TSNs in one SACK message to acknowledge the data to the sender.
- If data packets are already flowing, then SACK is sent along with the data.

- **mtu-size** *mtu\_size*—Specify the MTU size for the data packet. Must be an integer in the range of 512-1500. The default value is 1452.

## Configuration Example

The following is an example configuration.

```
config
instance 1
endpoint sctp
 replicas 2
 parameters rto initial 30
 parameters rto min 10
 parameters rto max 600
 parameters association valid-cookie-life 60000
 parameters association heartbeat-interval 30000
 parameters association path-max-retry-count 5
```

```
parameters sack sack-period 2000
parameters sack sack-frequency 2
parameters mtu-size 1500
end
```

### Configuration Verification

To verify the configuration:

```
show running-config instance
```







## CHAPTER 53

# Service Area Restriction

*Table 181: Feature History*

| Feature Name             | Release Information | Description                                                                                                                                                                                                                |
|--------------------------|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Service Area Restriction | 2023.04             | Cisco AMF supports the service area restriction for the UE to enforce restrictions on the services that UE can access based on location and tracking area codes.<br><br>Default Setting: Disabled – Configuration Required |

- [Feature Summary and Revision History, on page 521](#)
- [Service Area Restriction, on page 522](#)

## Feature Summary and Revision History

### Summary Data

*Table 182: Summary Data*

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

## Revision History

*Table 183: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2023.04.0 |

## Service Area Restriction

Service Area Restriction (SAR) is a mechanism that allows the network operators to define specific geographic areas where a User Equipment (UE) is either allowed or restricted to access services. The SAR enables fine-grained control over the availability of services based on the location of the UE.

## Feature Description

The SAR involves configuring the 5G core network to enforce restrictions on the services that a UE can access based on its location, often identified by specific geographical identifiers such as Tracking Area Codes (TACs). The Service Area Restrictions (SAR) within subscription data can be configured by the Unified Data Management (UDM).

## How it Works

The Access and Mobility Management Function (AMF) enhances its capabilities to provide robust service area restrictions handling, aligning with the access control information provided in subscriber data by the Unified Data Management (UDM) entity. This feature ensures that access restrictions based on subscription data are efficiently enforced for all subscribers.

Following are the capabilities of the service area restriction feature in the AMF:

- The AMF is equipped to receive and store the ServiceAreaRestriction data provided by the UDM in the subscriber's User Equipment (UE) context. This data encompasses information regarding allowed or not allowed areas for the subscriber.
- To enforce the defined service area restrictions, the AMF provisions the restriction information to the UE using registration accept and UE configuration update command message. The AMF communicates these restrictions to the Gnb using initial context setup request, handover request and downlink NAS transport messages.
- In mobility scenarios involving AMF changes, where a subscriber transitions from one AMF (S-AMF) to another (T-AMF), the service area restrictions provided by the UDM are transferred along with the UE context.

## UDM based Service Area Restrictions

When the UDM provides the subscriber data, the AMF automatically implements and enforces access restrictions based on subscription data for all subscribers. The UDM can provide either a list of Tracking Area Codes (TACs) or Area Codes to the AMF as part of service area restrictions. However, this feature exclusively supports TAC lists provided by the UDM.

If the UDM includes Area Codes in the Service Area Restriction (SAR) data, the AMF doesn't apply any service area restrictions and ignores the SAR data. In cases where the UDM provides TACs, it's expected that these TACs align with the Tracking Area Identity (TAI) list configured within the AMF.

The AMF anticipates the UDM to provide up to 16 TACs, either per area or across multiple areas. However, even if the UDM sends more than 16 TACs for a particular area or across multiple areas, the AMF relays a maximum of 16 TACs (starting from the first area) in NGAP/NAS messages.

AMF supports service area list types 00,01, and 11.

If the initial two TACs in an area are consecutive in sequence in the SAR IE, then AMF assumes that all TACs in that specific area are in consecutive sequence, and uses TYPE 01 service area list.

When the UDM specifies the restriction type as "ALLOWED\_AREAS" and doesn't specify any areas, it signifies that the UE is allowed in all areas. In such cases, the AMF sets the type-list as 11 in the registration accept message, and in N2 messages, the AMF doesn't fill any service area restrictions. The AMF doesn't incorporate any service area restrictions in this area.

When the UDM specifies the restriction type as "NOT\_ALLOWED\_AREAS" and doesn't provide any areas, it indicates that the UE is not allowed in any areas. In this case, registration area is filled as not allowed TACs.

If UDM removes the existing service area restrictions through data change notification, The AMF triggers the UE configuration update procedure with service area list type 11 and sends the mobility restrictions IE to Gnb without service area information.

If UDM sends an invalid restriction type during registration, the SAR content is dropped by the AMF.

### UDM Data Change Notification

When AMF detects a change in Service Area Restriction (SAR) due to a Data Change Notification from UDM:

- If the UE is in connected mode, AMF triggers a UE Configuration update command to the UE.
- If the UE is in idle mode, AMF triggers paging.

The AMF updates UE context with the SAR information from UDM instantly and it doesn't wait for a response from the UE.

## Enforcing Service Area Code Restrictions at AMF

The AMF enforces service area restrictions, if it determines that the UE is in a non-allowed area or is not in an allowed area. The AMF doesn't enforce any service area restrictions for emergency services. Following are the procedures for enforcing the service area restrictions at AMF.

- Registration procedure
  - During registration procedure, if AMF detects that UE has moved into a non-allowed area, and if UE is requesting to reactivate any non-emergency PDU using the uplink data status IE, then the AMF fills "28 "Restricted service area" as cause in the PDU reactivation result error for the corresponding PDUs in registration accept.
  - During registration procedure with UE being in connected mode, For example - Mobility registration post handover, if AMF detects UE has moved into a restricted service area, and if PDU session status IE indicates presence of any non-emergency PDUs, the AMF initiates the release of the PDU by sending SM update context with release IE set as true towards SMF.

- Service Request procedure
  - During service request, if the service type IE in the service request message is set to "signaling" or "data", then the AMF sends a service reject message with the 5GMM cause value set to #28 "Restricted service area";




---

**Note** #28 "Restricted service area" is default cause value. If any specific cause is configured under local cause code mapping CLI, the same cause code is used.

---

- If service type is "mobile terminated services", and service request contains uplink data IE indicating non-emergency PDUs to be reactivated, the AMF fills "28 "Restricted service area" as cause in the PDU reactivation result error.
- Handover procedure
  - In case of handovers like Xn, and N2 , if applicable, the AMF enforces the restrictions when mobility registration is received as part of the handover procedure.
  - In case of scenarios involving AMF change like registration, N2 handovers:
    - If service area restrictions are available in the source AMF (S-AMF), the S-AMF forwards them to the target AMF (T-AMF).
    - In case of N2 handover, T-AMF forwards the service area restriction received from the S-AMF's handover request to the target gNB.
    - T-AMF retrieves subscription data from the UDM as part of registration procedure. The SAR information received from the UDM supersedes the SAR details sent by the S-AMF and the same is updated to UE and gNB Accordingly.
  - In case of N26 idle mode 4g to 5g HO:
    - AMF doesn't consider the PDU session status IE for any PDU synchronization.
    - If the UE is in a restricted area, the AMF refrains from sending the CreateSMContext to the SMF.
    - PDU creation and reactivation occur simultaneously, AMF doesn't populate the reactivation result or error cause, but it always fills the PDU session status IE in registration accept.
- While UE is in restricted area, upon receiving uplink 5G-SM message from UE which is not forwarded due to service area restrictions; the AMF sends back the 5GSM message to the UE with cause code as #28 "Restricted service area".
- The AMF rejects the N1N2 messages with a message class of SM from the SMF for non-emergency PDN when it is in a restricted service area.
- When UE is in idle mode, and if UE is in non-allowed area, the AMF pages the UE only for emergency services, MT SMS, and for other mobility related messages.



**Note** The AMF detects whether the UE is in allowed or non-allowed area based on the last known location. On the basis of this information, the AMF decides whether to proceed with paging or not.

- In case of UDM data change notification received when UE is in connected mode, the AMF triggers the UE configuration update procedure immediately towards UE. The restrictions are enforced only when mobility registration request is sent by UE.

## Configuring Local Cause Code Mapping for Service Area

This configuration supports the mapping of local-defined cause code to restricted area restrictions. To configure the local cause code mapping for the service area, following is an example configuration:

```
config
 local-cause-code-map local-cause-code-map_name
 restricted-zone-code cause-code-5gmm
 possible completions [no-suitable-cells-in-tracking-area |
5GS-services-not-allowed | no-suitable-cells-in-tracking-area |
plmn-not-allowed | restricted-service-area |
roaming-not-allowed-in-this-tracking-area | tracking-area-not-allowed]
 end
```

If a local cause code is configured for service area restriction (SAR), the AMF uses the configured cause code from the CLI. Otherwise, the default cause code #28 "Restricted service area" is used.



**Note** The AMF uses the mapped cause code CLI only while sending the service reject messages.

### Show Subscriber to indicate UE in Serving Area

When there is no Service Area Restriction (SAR) information available from the UDM, the AMF designates the "In Serving Area" status as "Unknown Area." On the other hand, if the UDM provides valid SAR data, the AMF assesses the UE's location by comparing its Tracking Area Code (TAC) with the UDM's response SAR. Based on this comparison, the AMF determines the UE's state as either allowed or not allowed in the given area. Following is the example of the output.

```
show subscriber supi xyz

"InServingArea": "ALLOWED"

"serviceAreaRestriction": {
 "restrictionType": "ALLOWED_AREAS",
 "areas": [
 {
 "tacs": [
 "1e",
 "14"
],
 },
 {
 "tacs": [
```

```

"0a",
"ABCD"
],
{
 "tacs": [
 "FFFF",
 "FFFF"
]
}
]
}

```

Here are the possible outcomes:

- If the UE's TAC is not allowed - "In Serving Area": "NOT\_ALLOWED"
- If the UE's TAC is allowed - "In Serving Area": "ALLOWED"
- If the AMF is unable to evaluate the service area restriction from the UDM's response - "In Serving Area": "UNKNOWN\_AREA"

## Limitations

This feature has the following limitations:

- The AMF doesn't support the area code received as a part of service area restrictions from the UDM.
- The AMF doesn't support the implementation of Policy Control Function (PCF) interaction for Service Area Restriction (SAR) information.
- The AMF doesn't support the event exposure services for service area restriction changes notification to other NF.



## CHAPTER 54

# Service Request Procedure

- [Feature Summary and Revision History, on page 527](#)
- [Feature Description, on page 527](#)
- [How it Works, on page 528](#)
- [OAM Support, on page 531](#)

## Feature Summary and Revision History

### Summary Data

*Table 184: Summary Data*

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

*Table 185: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

## Feature Description

The AMF supports the Service Request procedure, used by a UE in CM-IDLE state or the 5GC, to request the establishment for a secure connection to an AMF. The Service Request procedure is also used when the

UE is in CM-IDLE and in CM-CONNECTED state to activate a User Plane connection for an established PDU Session.

## Limitations

The following is the known limitation of this feature.

- Authentication is not done for service request.

## How it Works

This section describes how this feature works.

## Call Flows

This section describes the key call flows of Service Request Procedure feature.

### UE Triggered Service Request

The UE in CM-IDLE state initiates the Service Request procedure to send uplink signaling messages, user data, or as a response to a network paging request. After receiving the Service Request message, the AMF performs authentication. After the establishment of the signaling connection to an AMF, the UE or network sends signaling messages, for example, PDU Session establishment from UE to the SMF, through the AMF.

The Service Request procedure is used by a UE in CM-CONNECTED state to request activation of User Plane connection for PDU Sessions and to respond to a NAS Notification message from the AMF.

For any Service Request, the AMF responds with a Service Accept message to synchronize PDU Session status between UE and network, if necessary. If the Service Request cannot be accepted by the network, the AMF responds with a Service Reject message to UE. The Service Reject message includes an indication or cause-code requesting the UE to perform Registration Update procedure. The Service Reject message is sent for unknown subscriber or if the TAC in Service Request does not match the last known user location.

### Idle Mode Call Flow

The following section describes Idle Mode call flow for Service Request triggered by UE in Idle mode.



Figure 77: Idle Mode Call Flow

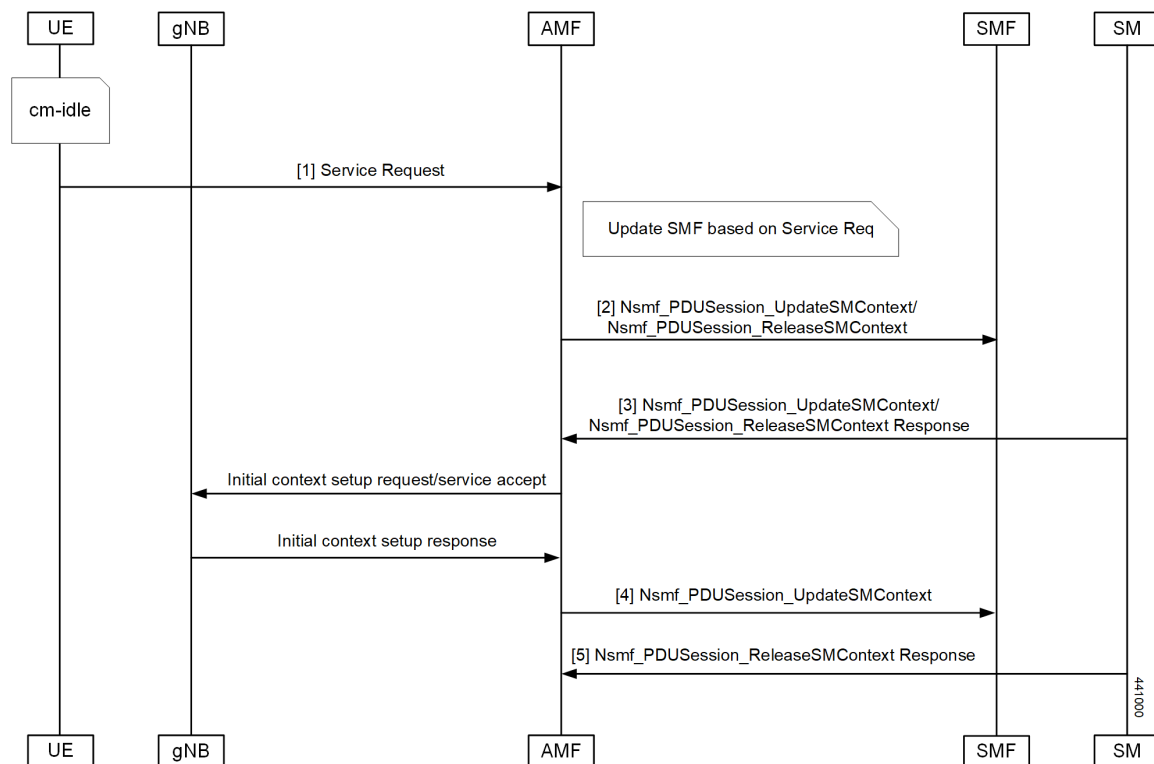


Table 186: Idle Mode Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                     |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>UE initiates Service Request procedure by sending Service Request to (R)AN : AN message (AN parameters, Service Request (List Of PDU Sessions To Be Activated, List Of Allowed PDU Sessions, security parameters, PDU Session status)).</p> <p>The Service Request message is sent in INITIAL UE Message.</p>                                                                                |
| 2    | <p>AMF determines the PDU Session(s) to be activated and sends an Nsmf_PDUSession_UpdateSMContext Request to SMF(s) associated with the PDU Session(s) with upCnxState set to "ACTIVATING".</p> <p>AMF also initiates PDU Session Release procedure in the network for the PDU Sessions whose PDU Session ID(s) were indicated by the UE as not available in the PDU Session status.</p>        |
| 3    | <p>For a PDU Session that the SMF has determined to accept the activation of UP connection, the SMF sends Nsmf_PDUSession_UpdateSMContext Response with N2 SM information to the AMF. The N2 SM information contains information that the AMF provides to the NG-RAN. If SMF rejects the activation of UP of the PDU Session, it sends Nsmf_PDUSession_UpdateSMContext Response with cause.</p> |

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4    | <p>AMF to (R)AN: If the Service Request was triggered in CM-IDLE state, AMF sends Initial Context Setup Request with the N2 SM information received from SMF, MM NAS Service Accept and the other required parameters.</p> <p>If the Service Request was triggered in CM-CONNECTED state, AMF sends PDU Session Resource Setup Request with N2 SM information received from SMF and MM NAS Service Accept.</p> <p>MM NAS Service Accept includes PDU Session status in AMF. If the activation of UP of a PDU Session is rejected by an SMF, then the MM NAS Service Accept includes the PDU Session ID and the cause why the User Plane resources were not. Any local PDU Session Release during the Service Request procedure is indicated to the UE via the Session Status.</p> <p>If there are multiple PDU Sessions that involves SMF update, AMF waits for response from all SMFs before sending N2 SM information and MM NAS Service Accept to the RAN.</p> |
| 5    | AMF receives N2 Request Ack and if this contains N2 SM information, then it sends Nsmf_PDUSession_UpdateSMContext Request per PDU Session with this information to the SMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

### Connected Mode Call Flow

The following figure illustrates the flow for Service Request triggered by UE in Connected mode.

**Figure 78: Connected Mode Call Flow**

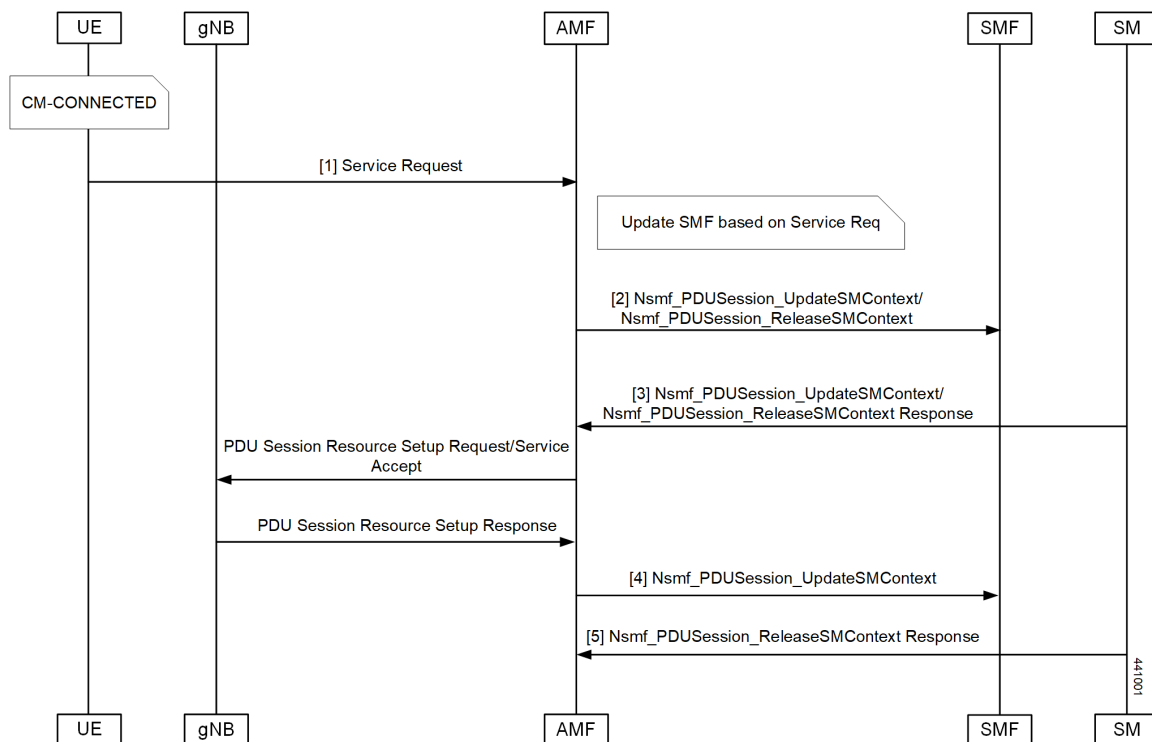


Table 187: Connected Mode Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>UE initiates Service Request procedure by sending Service Request to (R)AN : AN message (AN parameters, Service Request (List Of PDU Sessions To Be Activated, List Of Allowed PDU Sessions, security parameters, PDU Session status)).</p> <p>The Service Request message is sent in UPLINK NAS TRANSPORT Message.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 2    | <p>AMF determines the PDU Session(s) to be activated and sends an Nsmf_PDUSession_UpdateSMContext Request to SMF(s) associated with the PDU Session(s) with upCnxState set to "ACTIVATING".</p> <p>AMF also initiates PDU Session Release procedure in the network for the PDU Sessions whose PDU Session ID(s) were indicated by the UE as not available in the PDU Session status.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 3    | <p>For a PDU Session that the SMF has determined to accept the activation of UP connection, the SMF sends Nsmf_PDUSession_UpdateSMContext Response with N2 SM information to the AMF. The N2 SM information contains information that the AMF provides to the NG-RAN. If SMF rejects the activation of UP of the PDU Session, it sends Nsmf_PDUSession_UpdateSMContext Response with cause.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| 4    | <p>AMF to (R)AN: If the Service Request was triggered in CM-IDLE state, AMF sends Initial Context Setup Request with the N2 SM information received from SMF, MM NAS Service Accept and the other required parameters.</p> <p>If the Service Request was triggered in CM-CONNECTED state, AMF sends PDU Session Resource Setup Request with N2 SM information received from SMF and MM NAS Service Accept.</p> <p>MM NAS Service Accept includes PDU Session status in AMF. If the activation of UP of a PDU Session is rejected by an SMF, then the MM NAS Service Accept includes the PDU Session ID and the cause why the User Plane resources were not. Any local PDU Session Release during the Service Request procedure is indicated to the UE via the Session Status.</p> <p>If there are multiple PDU Sessions that involves SMF update, AMF waits for response from all SMFs before sending N2 SM information and MM NAS Service Accept to the RAN.</p> |
| 5    | <p>AMF receives N2 Request Ack and if this contains N2 SM information, then it sends Nsmf_PDUSession_UpdateSMContext Request per PDU Session with this information to the SMF.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

## OAM Support

This section describes operations, administration, and maintenance information for this feature.

## Statistics

The following statistics are available in support of the Service Request Procedure feature:

- Number of Service Requests Received
- Number of Service Accepts Sent

- Number of Service Rejects Sent



## CHAPTER 55

# Session Timers

- [Feature Summary and Revision History, on page 533](#)
- [Feature Description, on page 534](#)
- [How it Works, on page 535](#)
- [Feature Configuration, on page 546](#)

## Feature Summary and Revision History

### Summary Data

Table 188: Summary Data

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

Table 189: Revision History

| Revision Details                                                                                                            | Release   |
|-----------------------------------------------------------------------------------------------------------------------------|-----------|
| The following enhancement was introduced: <ul style="list-style-type: none"><li>• Timer T3346</li></ul>                     | 2022.04.0 |
| The following enhancements were introduced: <ul style="list-style-type: none"><li>• Non-3GPP timer configurations</li></ul> | 2022.01.0 |
| First introduced.                                                                                                           | 2021.04.0 |

# Feature Description

AMF supports the following timers:

- **T3346** (t3346): It operates in NAS-CONGESTION state. AMF uses this timer value to encode t3346 IE in Registration / Service reject, and to encode back-off timer IE for rejection of session management message.
  - **T3502** (t3502): It operates in the 5GMM-DEREGISTERED and 5GMM-REGISTERED states. AMF provides this timer value to UE in the Registration Accept and Registration Reject messages.
  - **T3512** (t3512): It operates in the 5GMM-REGISTERED state. AMF provides this timer value to UE in the Registration Accept message.
  - **T3513** (t3513): It operates in the 5GMM-REGISTERED state. It starts when the Paging procedure is initiated (with default paging algorithm) and stops when the Paging procedure ends (with the reception of paging response).
  - **T3522** (t3522): It operates in the 5GMM-DEREGISTERED-INITIATED state. It starts with the transmission of Deregistration Request message and stops after receiving Deregistration Accept message.
  - **T3550** (t3550): It operates in the 5GMM-COMMON-PROCEDURE-INITIATED state. It starts with the transmission of Registration Accept message and stops after receiving the Registration Complete message.
  - **T3555** (t3555): It operates in the 5GMM-REGISTERED state. It starts with the transmission of Configuration Update Command message with the ACK bit set in the Configuration Update Indication IE. Stops with the Configuration Update complete message.
  - **T3560** (t3560): It operates in the 5GMM-COMMON-PROCEDURE-INITIATED state. It starts with the transmission of Authentication Request message and Security Mode Command. Stops after receiving the following messages:
    - Authentication Response
    - Authentication Failure
    - Security Mode Complete
    - Security Mode Reject
  - **T3570** (t3570): It operates in the 5GMM-REGISTERED state. It starts with the transmission of Identity Request message and stops after receiving the Identity Response message.
  - **UE Context Transfer** (context-transfer-guard): AMF uses this timer to keep the individual UE Context resources until the timer expires. AMF starts this timer when UeRegStatusUpdateReqData message contains transferStatus as TRANSFERRED. Upon expiry, it clears the PDUs locally.
  - **Tidle** (tidle): When the UE moves to the CONNECTED state, tidle timer is started and it's reset when any signalling occurs for the subscriber.
- On expiry of tidle timer, AMF checks:
- If the UE Configuration Update is enabled and if new configuration is available to send to the UE, AMF triggers the UE Config Update Command to UE and resets the tidle timer.

- If the UE Configuration Update isn't enabled or there's no configuration update to send to the UE, the UE is moved to the IDLE state. AMF triggers the Context Release Command towards the gNB and the SM Context Update towards the SMF accordingly.
- **HO Supervisory** (ho-supervisory): It supervises PDU responses from SMF during N2, N26, and Xn handovers.
- **Tidt** (tidt): It starts after four minutes of T3512 timer expiry. The subscriber gets Deregistered implicitly upon this timer expiry.
- **Tn2** (tn2): It functions in AMF-initiated N2 messages, specifically for the AMF that waits for the response.
- **Tpurge** (tpurge): It starts when the Tidt timer expires. AMF sends a request to the UDM to Deregister (purge) the UE from the UDM for 3GPP access upon this timer expiry.
- **Procedural Timeout** (proc-timeout): It starts when AMF receives Registration Request. After expiry, AMF sends the Registration Reject message to the UE.

For information on the timer configurations, refer to [Feature Configuration, on page 546](#).

## How it Works

This section describes how this feature works.


## Call Flows

This section describes the key call flows for the AMF timers.

### T3346 Call Flow

This section describes the T3346 call flow.

Figure 79: T3346 Timer Call Flow

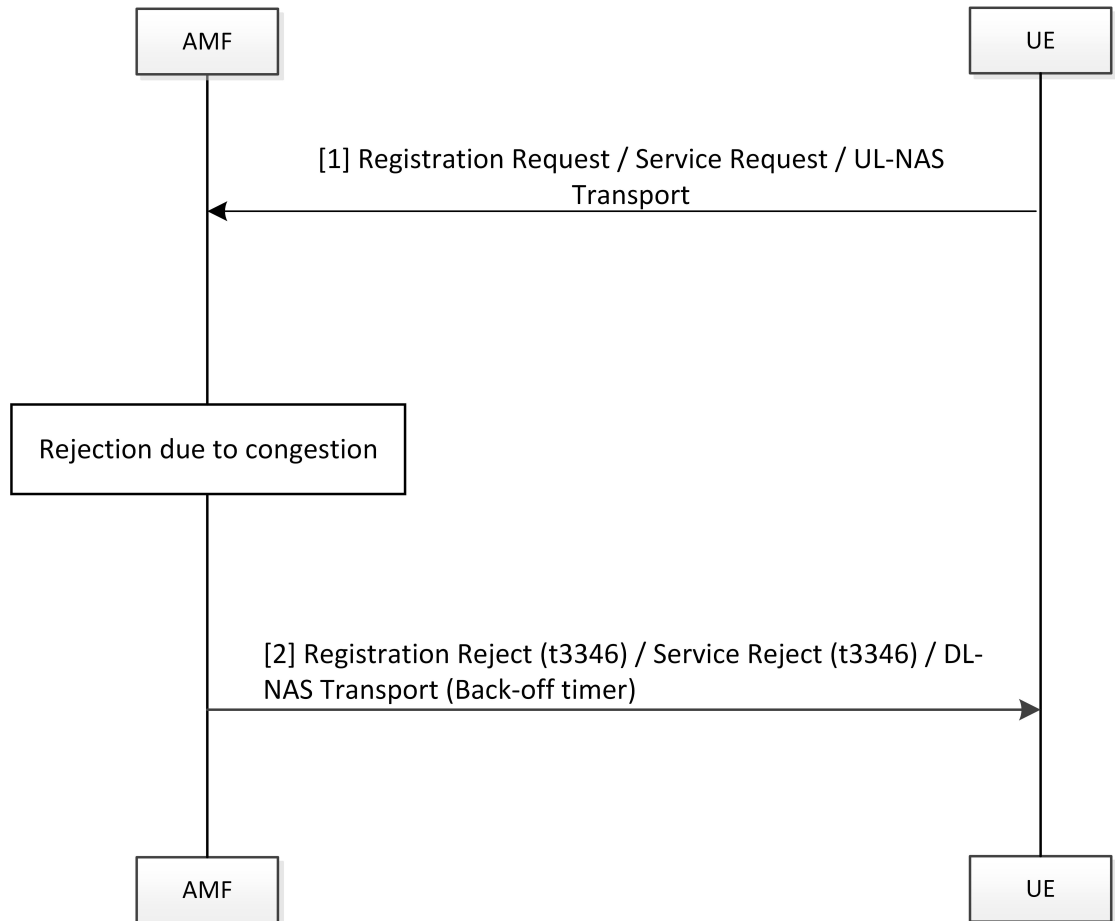

470064

Table 190: T3346 Timer Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                        |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE sends registration request/service request.                                                                                                                                                                                                                                                                                                 |
| 2    | With AMF in congestion state: <ul style="list-style-type: none"> <li>• For registration request, AMF rejects the message with cause as congestion and includes t3346 timer.</li> <li>• For UL-NAS transport (Payload container type: N1 SM information), AMF sends DL-NAS message with cause as congestion and includes back-off timer.</li> </ul> |

## T3502 Call Flow

This section describes the T3502 timer call flow.



Figure 80: T3502 Timer Call Flow

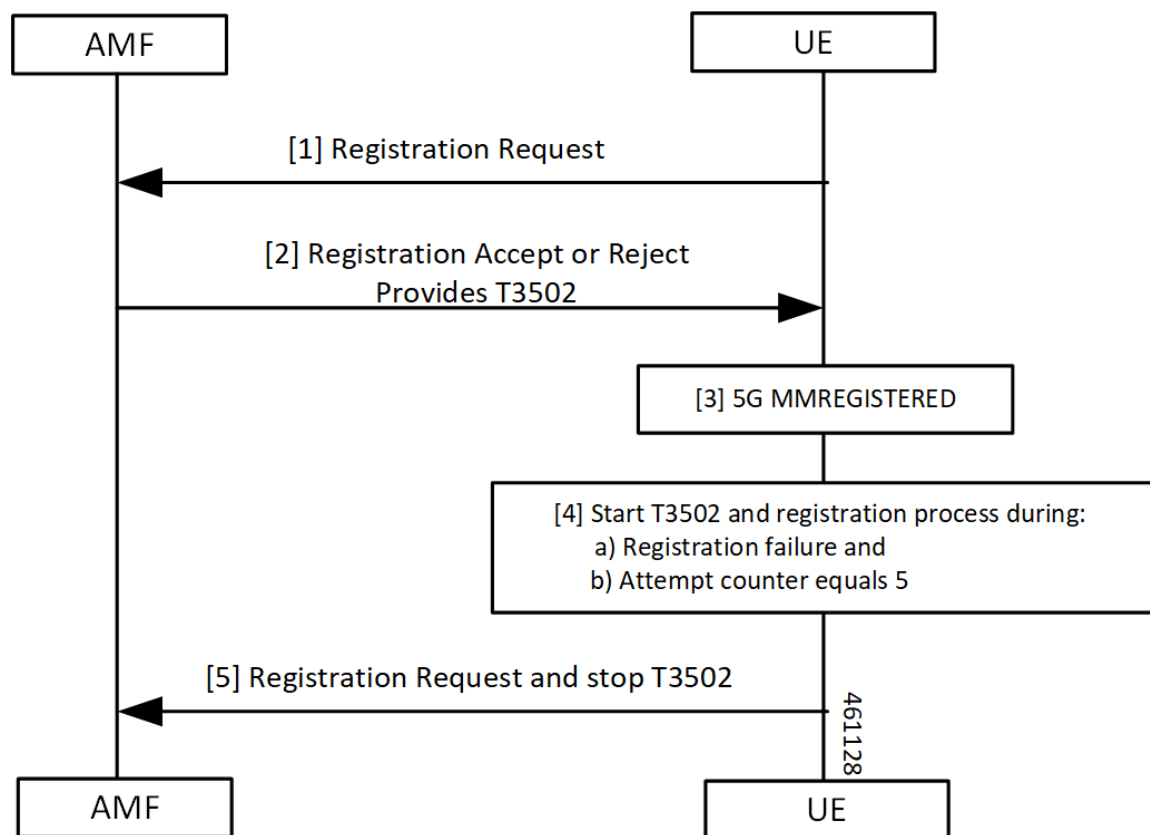


Table 191: T3502 Timer Call Flow Description

| Step | Description                                                                                                                                                                                          |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE sends the Registration Request to the AMF.<br>The UE starts the T3502 timer.                                                                                                                  |
| 2    | The UE receives a response of reject or accept from the AMF.                                                                                                                                         |
| 3    | The UE performs the 5G MM registration procedure.                                                                                                                                                    |
| 4    | The UE starts the T3502 timer and the registration process during one of the following: <ul style="list-style-type: none"> <li>• Registration failure</li> <li>• Attempt counter equals 5</li> </ul> |
| 5    | The UE sends the Registration Request to the AMF and stops the T3502 timer.                                                                                                                          |

## T3512 Call Flow

This section describes the T3512 timer call flow.

Figure 81: T3512 Timer Call Flow

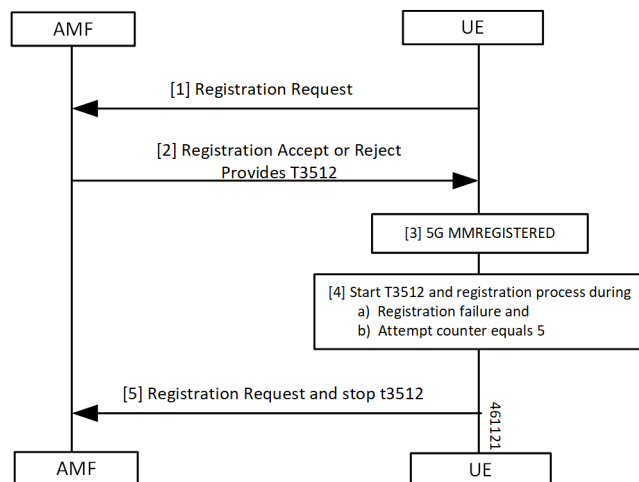


Table 192: T3512 Timer Call Flow Description

| Step | Description                                                                                                                                                                                          |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE sends the Registration Request to the AMF.                                                                                                                                                    |
| 2    | The UE receives a response of reject or accept from the AMF.<br>The UE starts the T3512 timer.                                                                                                       |
| 3    | The UE performs the 5G MM Registration procedure.                                                                                                                                                    |
| 4    | The UE starts the T3512 timer and the registration process during one of the following: <ul style="list-style-type: none"> <li>• Registration failure</li> <li>• Attempt counter equals 5</li> </ul> |
| 5    | The UE sends the Registration Request to the AMF and stops the T3512 timer.                                                                                                                          |

## T3522 Call Flow

This section describes the T3522 timer call flow.

Figure 82: T3522 Timer Call Flow

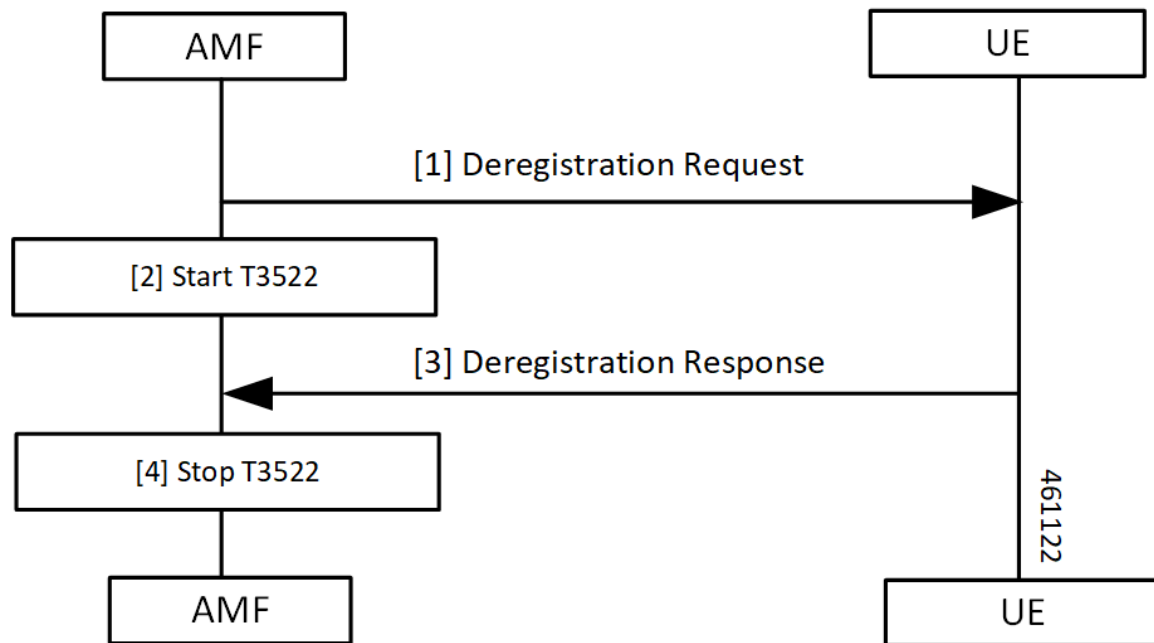


Table 193: T3522 Timer Call Flow Description

| Step | Description                                                                         |
|------|-------------------------------------------------------------------------------------|
| 1, 2 | The AMF sends the Deregistration Request to the UE and starts the T3522 timer.      |
| 3, 4 | The AMF receives the Deregistration Response from the UE and stops the T3522 timer. |

## T3550 Call Flow

This section describes the T3550 call flow.

Figure 83: T3550 Timer Call Flow

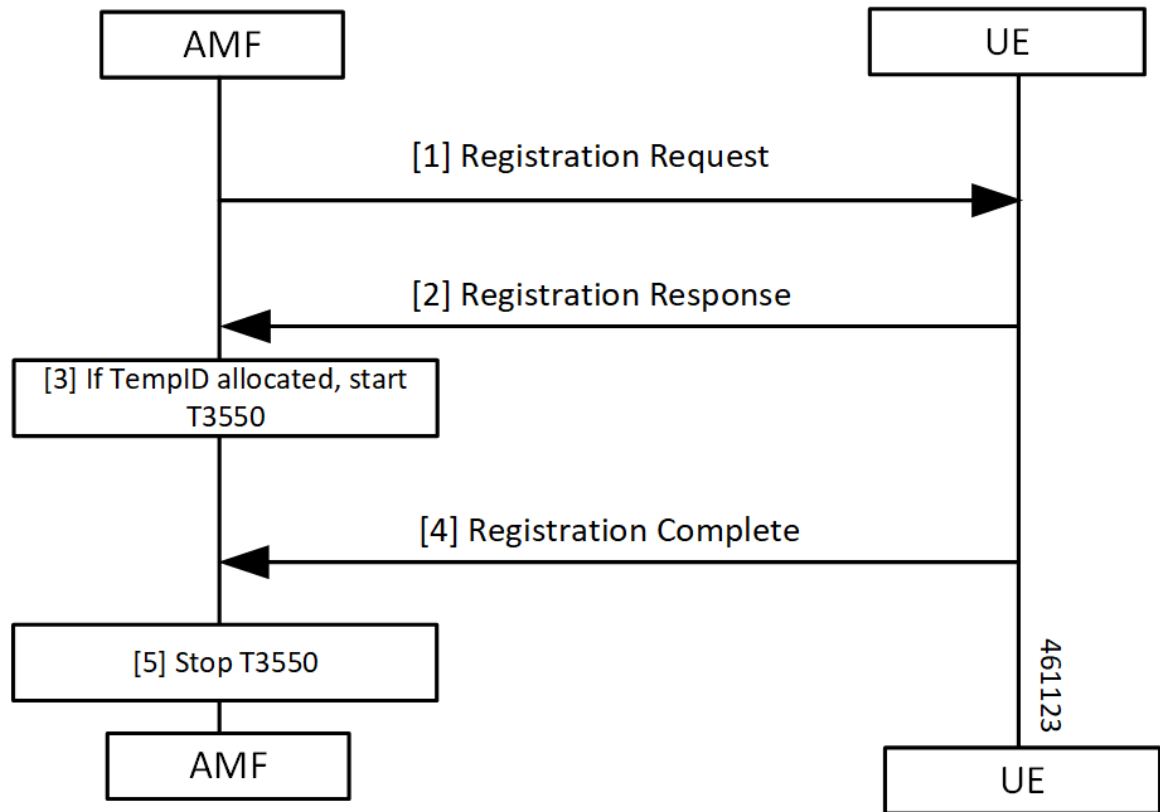


Table 194: T3550 Timer Call Flow Description

| Step | Description                                                                   |
|------|-------------------------------------------------------------------------------|
| 1, 2 | The AMF sends the Deregistration Request to the UE and receives the response. |
| 3    | The AMF starts the timer T3550 when temporary ID is allocated.                |
| 4, 5 | AMF receives Deregistration Response from the UE and stops the T3550 timer.   |

## T3555 Call Flow

This section describes the T3555 call flow.

Figure 84: T3555 Timer Call Flow

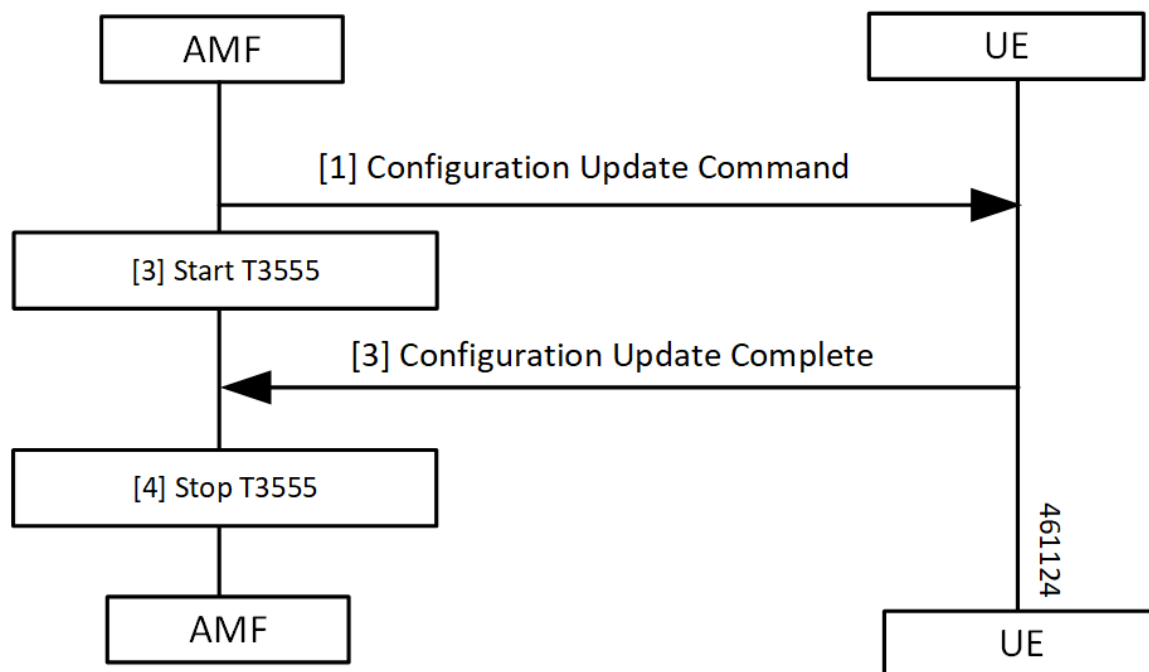


Table 195: T3555 Timer Call Flow Description

| Step | Description                                                                               |
|------|-------------------------------------------------------------------------------------------|
| 1, 2 | The AMF sends the Configuration Update Command to the UE and starts the T3555 timer.      |
| 3, 4 | The AMF receives the Configuration Update Complete from the UE and stops the T3555 timer. |

## T3560 Call Flow

This section describes the T3560 timer call flow.

Figure 85: T3560 Call Flow

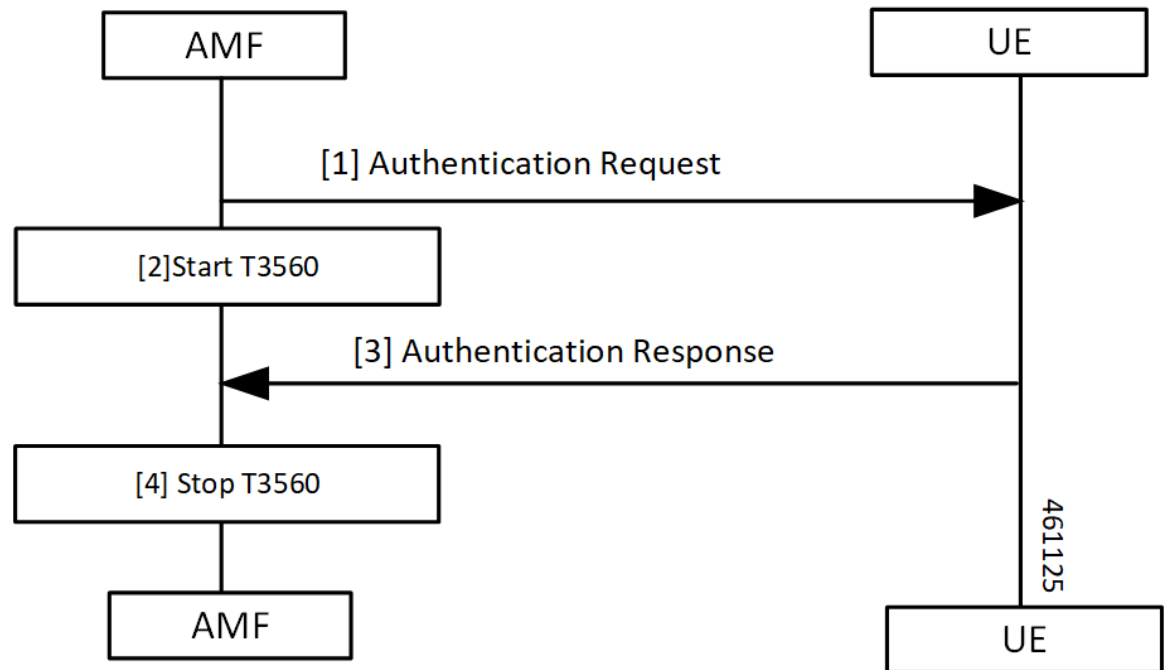


Table 196: T3560 Timer Call Flow Description

| Step | Description                                                                         |
|------|-------------------------------------------------------------------------------------|
| 1, 2 | The AMF sends the Authentication Request to the UE and starts the T3560 timer.      |
| 3, 4 | The AMF receives the Authentication Response from the UE and stops the T3560 timer. |

## T3570 Call Flow

This section describes the T3570 timer call flow.

Figure 86: T3570 Call Flow

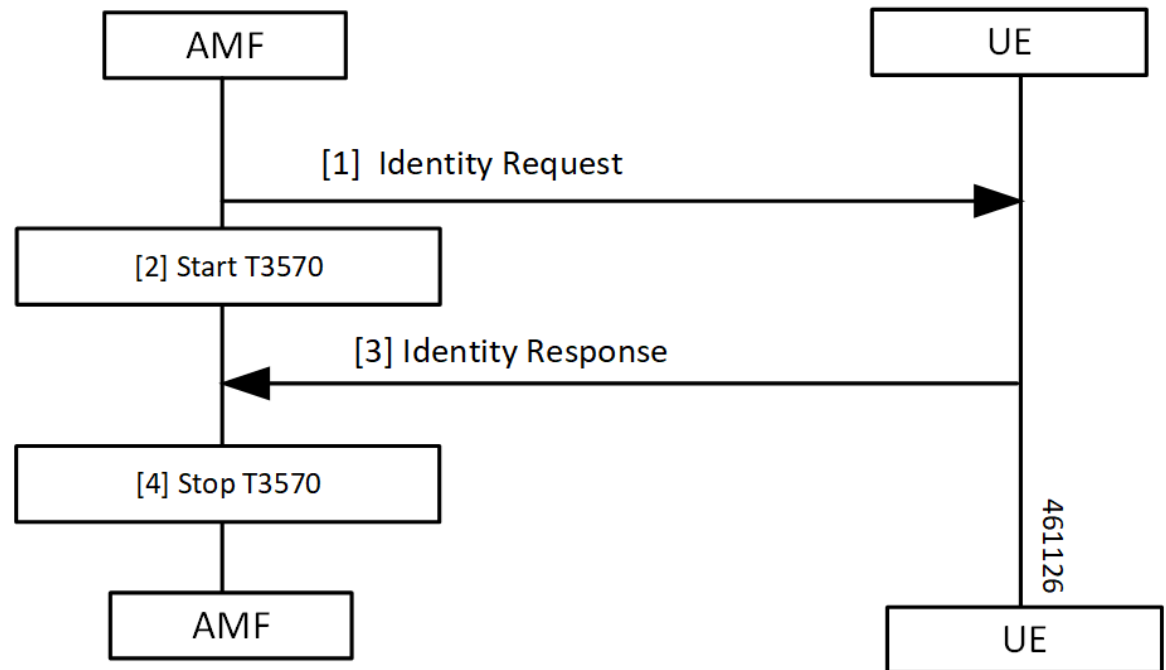


Table 197: T3570 Timer Call Flow Description

| Step | Description                                                                   |
|------|-------------------------------------------------------------------------------|
| 1, 2 | The AMF sends the Identity Request to the UE and starts the T3570 timer.      |
| 3, 4 | The AMF receives the Identity Response from the UE and stops the T3570 timer. |

## Tidle Timer Call Flow

This section describes the Tidle timer call flow.

Tidle timer call flow is a sample call flow. Tidle timer expiry can happen post various signalling procedures, not just registration procedure.

Figure 87: Tidle Timer Call Flow

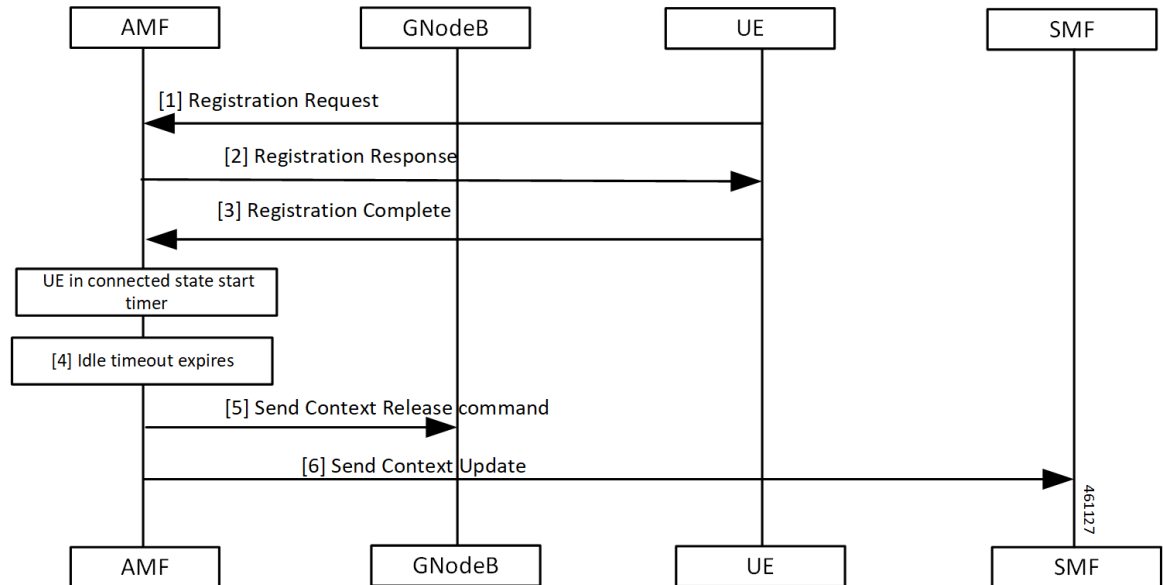


Table 198: Tidle Timer Call Flow Description

| Step | Description                                                                                                                                                                      |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE sends the Registration Request to the AMF                                                                                                                                 |
| 2    | The UE receives Registration Response from the AMF.                                                                                                                              |
| 3    | The UE sends the Registration Complete to the AMF.<br>When UE moves to CONNECTED state, the AMF starts the configured timer. The value ranges between 30 seconds to seven hours. |
| 4    | The AMF waits for the Tidle timer expiry.                                                                                                                                        |
| 5    | The AMF sends the Context Release Command to the gNodeB.                                                                                                                         |
| 6    | The AMF sends the Context Update to the SMF.                                                                                                                                     |

## Procedural Timer Call Flow

This section describes the procedural timer call flow.



Figure 88: Procedural Timer Call Flow

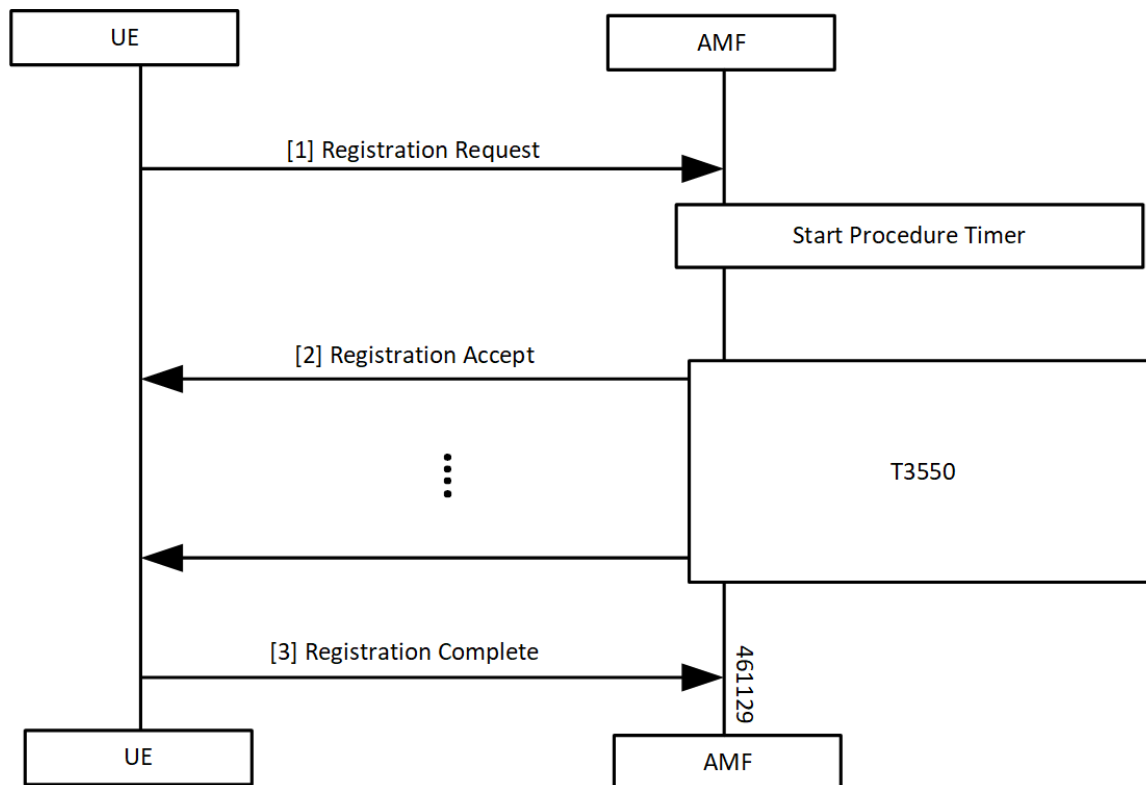


Table 199: Procedural Timer Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The AMF starts the Procedure timer upon receiving Registration Request per UE basis.                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 2    | <p>AMF starts the T3550 timer when it sends the Registration Accept to UE and stops after receiving the Registration Complete.</p> <p>When the timer expires before sending Registration Accept towards the UE, the following actions takes place:</p> <ul style="list-style-type: none"> <li>• Clear context locally, on UDM and PCF.</li> <li>• Registration Reject procedure.</li> </ul> <p>When Registration Accept to the UE is successful, AMF updates t3550 (retry and timeout) based on remaining time and retry count.</p> |
| 3    | The UE sends Registration Complete to the AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |

## Standards Compliance

This feature complies with the following standards specification:

- 3GPP TS 24.501 "Non-Access-Stratum (NAS) protocol for 5G System (5GS); Stage 3"

## Feature Configuration

Configuring this feature involves the following steps:

- 3GPP timer configurations—These commands support in configuring 3GPP timers. For more information, refer to [Configuring the 3GPP Timers, on page 546](#).
- Non-3GPP timer configurations—These commands support in configuring non-3GPP timers. For more information, refer to [Configuring the Non-3GPP Timers, on page 548](#).

## Configuring the 3GPP Timers

To configure the GPP timers, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 timers timer_type { retry retry_count | value timeout_value }
 end
```

### NOTES:

- **timers timer\_type retry retry\_count**—Specify the retry count.
- **timers timer\_type value timeout\_value**—Specify the timeout value.

For the timer\_type, refer to the following table.

**Table 200: 3GPP Timers and Values**

| Timer          | Retry Count or Attempt Count | Timeout Value                                                                                        |
|----------------|------------------------------|------------------------------------------------------------------------------------------------------|
| tidt           | Not Applicable               | Must be an integer in the range of 0–35712000 seconds.<br>The default value is 3480 seconds.         |
| ho-supervisory | Not Applicable               | Must be an integer in the range of 100–10000 mill seconds.<br>The default value is 500 milliseconds. |
| tpurge         | Not Applicable               | Must be an integer in the range of 0–35712000 seconds.<br>The default value is 86400.                |

| Timer | Retry Count or Attempt Count                                                                                                               | Timeout Value                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
|-------|--------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| t3346 | Not Applicable                                                                                                                             | <p>Must be an integer in the range of 1–11160 seconds.</p> <p>The default value is 900 seconds.</p> <p>While processing the t3346 timer towards UE, AMF adds a random offset to the configured timer value. This random offset is based on the configured timer value.</p> <p>If timer value is:</p> <ul style="list-style-type: none"> <li>• Greater than or equal to 0 seconds, random offset is in the range of 0–30 seconds.</li> <li>• Greater than 62 seconds, random offset is in the range of 0–300 seconds.</li> <li>• Greater than 1860 seconds, random offset is in the range of 0–1000 seconds.</li> </ul> <p>Maximum value of the recomputed timer value is 11160 seconds.</p> |
| t3502 | Not Applicable                                                                                                                             | <p>Must be an integer in the range of 0–35712000 seconds.</p> <p>The default value is 720 seconds.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| t3512 | Not Applicable                                                                                                                             | <p>Must be an integer in the range of 0–35712000 seconds.</p> <p>The default value is 3240 seconds.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| t3513 | <p>This parameter defines the number of paging attempts.</p> <p>Must be an integer in the range of 1–5.</p> <p>The default value is 2.</p> | <p>Must be an integer in the range of 1–10 seconds.</p> <p>The default value is 5 seconds.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| t3522 | <p>This parameter defines the number of paging retries.</p> <p>Must be an integer in the range of 0–5.</p> <p>The default value is 4.</p>  | <p>Must be an integer in the range of 0–30 seconds.</p> <p>The default value is 6 seconds.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| t3550 | <p>This parameter defines the number of paging retries.</p> <p>Must be an integer in the range of 0–5.</p> <p>The default value is 4.</p>  | <p>Must be an integer in the range of 0–30 seconds.</p> <p>The default value is 6 seconds.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

| Timer | Retry Count or Attempt Count                                                                                               | Timeout Value                                                                       |
|-------|----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| t3555 | This parameter defines the number of paging retries.<br>Must be an integer in the range of 0–5.<br>The default value is 4. | Must be an integer in the range of 0–30 seconds.<br>The default value is 6 seconds. |
| t3560 | This parameter defines the number of paging retries.<br>Must be an integer in the range of 0–5.<br>The default value is 4. | Must be an integer in the range of 0–30 seconds.<br>The default value is 6 seconds. |
| t3570 | This parameter defines the number of paging retries.<br>Must be an integer in the range of 0–5.<br>The default value is 4. | Must be an integer in the range of 0–30 seconds.<br>The default value is 6 seconds. |

To configure the t3513 timer, use the following configuration:

```

config
 amf-global
 call-control-policy policy_name
 timers t3513 { attempts paging_attempts_count | value timeout_value }
 end

```

#### NOTES:

- **timers t3513 attempts** *paging\_attempts\_count*—Specify the number of paging attempts.
- **timers t3513 value** *timeout\_value*—Specify the t3513 timeout value.

For the t3513 timer configuration values, refer to the *3GPP Timers and Values* table.

## Configuring the Non-3GPP Timers

To configure the Non-3GPP timers, use the following configuration:

```

config
 amf-global
 call-control-policy policy_name
 timers timer_type value timer_value
 end

```

#### NOTES:

- **timers** *timer\_type* **value** *timer\_value*—Specify the timeout value.

For the *timer\_type*, refer to the following table.

Table 201: Non-3GPP Timers and Values

| Timer                        | Timeout Value                                                                                |
|------------------------------|----------------------------------------------------------------------------------------------|
| context-transfer-guard       | Must be an integer in the range of 0–35712000 seconds.<br>The default value is zero seconds. |
| proc-timeout ue-registration | Must be an integer in the range of 10–120 seconds.                                           |
| tidle                        | Must be an integer in the range of 30–25200 seconds.                                         |
| tn2                          | Must be an integer in the range of 0–35712000 seconds.<br>The default value is six seconds.  |

## Configuring the IDLE Timer

To configure the IDLE timer, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 timers tidle value timeout_value
 end
```

### NOTES:

- **timers tidle value *timeout\_value***—Specify the IDLE timeout value in seconds.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy local
 timers tidle 2
 end
```

## Configuring the Procedural Timer

To configure the Procedural timer for AMF, use the following configuration:

```
config
 amf-global
 timers proc-timeout ue-registration value timeout_value
 end
```

### NOTES:

- **timers procedure-timeout ue-registration value *timeout\_value***—Specify the UE Registration procedure timeout value in seconds. Must be an integer in the range of 10-120 seconds.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy local
 timers proc-timeout pdu-create value 20
 end
```



## CHAPTER 56

# SMF Feature Updates without SMF IEs

- [Feature Summary and Revision History, on page 551](#)
- [Feature Description, on page 551](#)
- [Feature Configuration, on page 552](#)

## Feature Summary and Revision History

### Summary Data

*Table 202: Summary Data*

|                                        |                                             |
|----------------------------------------|---------------------------------------------|
| Applicable Products or Functional Area | AMF                                         |
| Applicable Platforms                   | SMI                                         |
| Feature Default Setting                | Disabled – Configuration required to enable |
| Related Documentation                  | Not Applicable                              |

### Revision History

*Table 203: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

## Feature Description

When the gNB fails to send the PDU-x-Release (**pdu-rsc-rel**) information elements (IE), the AMF shows a distinct customary behavior.

This AMF behaviour is specific to:

- The UE context release procedure
- The UE context release request message and the UE context release complete message—Both messages not having the specified information elements

By default, this feature is disabled (false).

When the configuration is enabled, the AMF sends the required updates to SMF, even when the gNB doesn't send these information elements.

## Feature Configuration

To configure this feature, use the following configuration:

```
config
 amf-global
 call-control-policy ccp_name
 policy context-release force-smf-update { false | true }
 end
```

### NOTES:

- **call-control-policy** *ccp\_name*—Specify the UE-specific name for the call control policy.
- **context-release**—Configure the UE context release procedure as per the console.
- **force-smf-update { false | true }**—Initiate the SMF update procedure, when the PDU list isn't available in release messages, as a part of the UE Context Release procedure. The default value is disabled (false).

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy pdu-rsc-rel
 policy context-release force-smf-update true
 end
```





## CHAPTER 57

# SMS over the Non-Access Stratum Procedures

- [Feature Summary and Revision History, on page 553](#)
- [Feature Description, on page 554](#)
- [How it Works, on page 554](#)
- [Feature Configuration, on page 556](#)

## Feature Summary and Revision History

### Summary Data

*Table 204: Summary Data*

|                                          |                                                                     |
|------------------------------------------|---------------------------------------------------------------------|
| Applicable Product(s) or Functional Area | AMF                                                                 |
| Applicable Platform(s)                   | SMI                                                                 |
| Feature Default Setting                  | Disabled – Configuration required to enable                         |
| Related Documentation                    | <a href="#">UE Configuration Management Procedures, on page 613</a> |

### Revision History

*Table 205: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.01.0 |

## Feature Description

In 5G, the AMF sends and receives the SMS payloads from the UE over the NAS messages. The AMF and SMSF entities within the 5G core provide and utilize services provided by each other to enable the delivery of SMS over Non-Access Stratum (NAS).

For more information, refer to the [UCC 5G AMF Configuration and Administration Guide > SMS over the Non-Access Stratum Procedures](#) chapter.

## How it Works

This section describes how this feature works.

The SMS over NAS feature supports the following procedures:

- **Registration procedures for SMS over NAS**—This procedure involves the following steps:
  - During registration, if the UE requests for SMS support and the feature are enabled at AMF, the AMF fetches the SMS subscription data and UE context in the SMSF data along with the AM and SMF selection data. The AMF also subscribes to the UDM notifications.
  - If the UE has the SMS subscriptions enabled, the AMF sends the Activate Request to the SMSF.
  - The AMF supports the target PLMN and instance ID-based SMSF selection based on the NRF discovery. The instance ID received from the UDM is preferred over the instance ID received from the peer AMF.

Depending on these steps, the AMF notifies the SMS status as allowed or not allowed to the UE as part of the Registration Accept message.
- **Deregistration procedures for SMS over NAS**—The AMF triggers the SMS Deactivation Request towards SMSF during the following scenarios:
  - UE-initiated deregistration
  - Network-initiated deregistration
  - The SMS was activated in the previous Registration Requests and the UE did not request for the SMS support in the subsequent Registration Request.
  - Whenever the SMS state at AMF changes from allowed to not allowed, and if the SMS was previously activated, the AMF sends the Deactivation Request to SMSF.
- **MO SMS over NAS in CM-IDLE or CM-CONNECTED**
- **MT SMS over NAS in CM-IDLE or CM-CONNECTED state through 3GPP access**—This procedure involves the following steps:
  - As part of MT SMS, the AMF supports handling of the EnableReachability Requests from the SMSF.
  - If the UE is in the CONNECTED state, the AMF immediately responds with the UE as REACHABLE.

- If the UE is in the IDLE state and the PPF flag is set, the AMF triggers the paging procedure and updates the SMSF based on the paging response.

## Notifications using the UE Configuration Update Command

The UE Configuration Update Command is responsible for communicating the modification in the SMS state to the UE. The SMS state, such as allowed and not allowed is modified when the AMF CLI is modified or the AMF receives the subscription change notification through the UDM data change notification.

When the AMF detects changes in the SMS state for a UE, and the UE requested in the previously sent Registration Request for the SMS, the AMF notifies the new SMS state through the UE Configuration Update Command.

If the UE had requested the SMS based on CLI configuration or SMS subscription, the AMF marks the SMS as allowed or not allowed and informs the UE through the Registration Accept message. Later, when the SMS state changes at AMF; for example, the UDM subscriptions change the SMS state from allowed to not allowed. In that case, the UE Configuration Update Command notifies the UE with the SMS IE indication as not allowed.

For the UDM notifications, when the UE is in the CONNECTED state, the UE Configuration Update Command is triggered instantly. However, paging is triggered based on the AMF configuration if the UE is in the IDLE state.

Whenever the SMS state at AMF changes from allowed to not allowed, and if the SMS was previously activated, the AMF sends the Deactivation Request to SMSF.

## Paging

The AMF starts a paging procedure when the SMSF sends the UE Reachability event for the MT SMS, and the UE is in the IDLE state. The AMF determines the paging profile specific to the SMS based on the configured trigger type. AMF uses the default paging profile when the paging profile is not configured.

When AMF receives the UDM notification containing the new data, and the UE is in the IDLE state, the AMF pages the UE to send the UE configuration update.

## Failure Handling

The AMF has implemented strategies to handle the following failure scenarios:

- When the SMSF activation process fails, the AMF sets the SMS Allowed value to false in the Registration Accept message.
- If the failure is observed during the deactivation or when sending uplink SMS, the AMF does not perform any action.
- When the SMSF is deactivated, the AMF marks the SMS state as not allowed irrespective of the deactivation result from SMSF.
- On the incoming response messages, the AMF does not perform any validations, such as when the mandatory IE missing.



**Note** The failure handling profile configuration determines the retry and retransmission of messages. For the SMSF failures, the AMF supports only retry and ignore as the failure actions.

## Standards Compliance

This feature complies with the following standards specifications:

- 3GPP TS 23.501 "System architecture for the 5G System (5GS)"
- 3GPP TS 23.502 "Procedures for the 5G System (5GS)"
- 3GPP TS 24.501 "Non-Access-Stratum (NAS) protocol for 5G System (5GS); Stage 3"
- 3GPP TS 29.503 "5G System; Unified Data Management Services; Stage 3"
- 3GPP TS 29.518 "5G System; Access and Mobility Management Services; Stage 3"
- 3GPP TS 29.540 "5G System; SMS Services; Stage 3"

## Limitations

This feature has the following limitations in this release:

When the SMS over NAS CLI is enabled, the AMF always fetches the SMS subscriptions data from UDM along with AM and SMF selection data. If the feature CLI is not enabled during initial registration, the SMS subscription data is not fetched for the UE. Later, when the UE requests for the SMS support in the subsequent Periodic or Mobility Registration message, AMF does not have the SMS subscription data, and the SMS is not activated.

## Feature Configuration

Configuring this feature involves the following steps:

- Configure AMF to support the SMS messaging over NAS. For more information, refer to [Configuring AMF to send SMS over NAS, on page 557](#).
- Configure AMF to perform SMSF selection based on data from the NRF-based discovery. For more information, refer to [Configuring NRF Discovery for SMSF, on page 557](#).
- Configure AMF to follow appropriate failure handling techniques. For more information, refer to [Configuring Failure Handling, on page 558](#).
- Configure AMF to initiate paging when the SMSF sends an Enable UE Reachability message for MT SMS and if the UE is in the IDLE state. For more information, refer to [Configuring the Paging Profile, on page 559](#).
- Configure the AMF to page the UE when it sends a UE Configuration Update message. The AMF sends this update message on receiving a UDM notification that contains the new data and if the UE is in the IDLE state. For more information, refer to [Configuring Paging for the UDM Notifications, on page 559](#).

- Configure the time zones parameters for the Tai-group or Tai-list. When configured, the AMF uses this time zone information in the ueTimeZone IE messages sent to SMSF. For more information, refer to [Configuring the Time Zone, on page 559](#).

## Configuring AMF to send SMS over NAS

To enable the transfer of SMS over NAS, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 policy sms-over-nas { true | false }
 end
```

### NOTES:

- **call-control-policy *policy\_name***—Specify the Call Control Policy name.
- **policy sms-over-nas { true | false }**—Configure the capability that is responsible to send the SMS over the NAS protocol.

## Configuring NRF Discovery for SMSF

To configure the NRF discovery, use the following configuration:

```
config
 amf-global
 operator-policy policy_name
 ccp-name ccp_name
 network-element-profile-list [smsf]
 end
 profile
 network-element [smsf]
 nf-client-profile nf_profile_name
 failure-handling-profile failure_handling_profile_name
 query-params [target-plmn | instance-id]
 end
 nf-client nf-type [smsf]
 smsf-profile smsf_profile_name
 locality locality
 priority profile_priority
 service name type [nsmsf-sms]
 endpoint-profile endpoint_profile_name
 capacity profile_capacity
 priority endpoint_priority
 uri-scheme [http]
 version
 uri-version version
 endpoint-name endpoint_name
 priority endpoint_priority
 primary ip-address primary_ip_address
```

```

 primary ip-address port primary_port_number
 secondary ip-address secondary_ip_address
 secondary ip-address port secondary_port_number
 end
 nf-pair nf-type [smsf]
 nrf-discovery-group
 locality
 client client_locality
 preferred-server server_name
 geo-server geo_server_name
end

```

**NOTES:**

- **operator-policy** *policy\_name*—Specify the operator policy name.
- **ccp-name** *ccp\_name*—Specify and configure the Call Control Policy name.
- **capacity** *profile\_capacity*—Specify the endpoint profile capacity.
- **nrf-discovery-group**—Specify the NRF discovery group name.
- **priority** *endpoint\_priority*—Specify the node priority for endpoint.
- **client** *client\_locality*—Specify the client locality information.
- **preferred-server** *server\_name*—Specify the Geo service locality information.
- **geo-server** *geo\_server\_name*—Specify the preferred server locality information.

## Configuring Failure Handling

To configure the failure handling profile, use the following configuration:

```

config
 profile
 nf-client-failure nf-type [smsf]
 profile failure-handling profile_name
 service
 name type [nsmsf-sms]
 responsetimeout timeout_interval
 message type
 SmsfActivationReq { status-code [httpv2] | action [
retry-and-ignore] | retry retry_count }
 SmsfDeactivationReq { status-code [httpv2] | action [
retry-and-ignore] | retransmit retransmit_count | retransmit-interval
retransmit_interval }
 SmsfSendSms { status-code [httpv2] | action [
retry-and-ignore] | retransmit retransmit_count | retransmit-interval
retransmit_interval }
 end
 end
 end
end

```

**NOTES:**

- **failure-handling-profile** *failure\_handling\_profile\_name*—Specify the failure handling profile.

- **responsetimeout** *timeout\_interval*—Specify the timeout interval in milliseconds. The default value is 2000.
- **range** *range*—Specify the range value. Must be an integer in the range of 0–599.
- **retransmit** *retransmit\_count*—Specify the retransmit interval in milliseconds.

## Configuring the Paging Profile

To configure the paging profile, use the following configuration:

```
config
 amf-global
 paging-map paging_map_name
 precedence paging_precedence
 paging-profile-name paging_profile_name
 trigger-type [sms]
 end
```

### NOTES:

- **paging-map** *paging\_map\_name*—Specify the paging map name. Must be string in the range of 1–64.
- **precedence** *paging\_precedence*—Specify the precedence level. Must be an integer in the range of 1–255 with 1 indicating the highest and 255 the lowest.
- **paging-profile-name** *paging\_profile\_name*—Specify the paging profile name. Must be a character string in the range of 1–64.
- **trigger-type** [ sms ]—Specify the type of paging trigger.

## Configuring Paging for the UDM Notifications

To configure the paging feature, use the following configuration:

```
config
 amf-global
 call-control-policy ccp_name
 policy idle-mode udm-notification initiate-paging [SMS]
 end
```

### NOTES:

- **policy idle-mode** —Configure the UE configuration for the idle mode paging parameters.
- **udm-notification initiate-paging** [ SMS ] —Configure the paging for the UDM notification.
- By default, the paging feature is disable for the UDM notifications.

## Configuring the Time Zone

To configure this feature, use the following configuration:

```

config
 tai-group name { name tai_group_name | range range }
 timezone { + | - } hours value [minutes { 0 | 15 | 30 | 45 } |
daylight-savings-time-increment { 0 | 1 | 2 }]
 tais { name tai_list_name | range range | preference preference }
 timezone { + | - } hours value [minutes { 0 | 15 | 30 | 45 } |
daylight-savings-time-increment { 0 | 1 | 2 }]
 end

```

**NOTES:**

- To modify or update the time zone entry, use the following configuration:
  1. Configure no time zone using the **no timezone** command.  
For example:  
**amf(config-tai-group-xxx)# no timezone**
  2. Configure the new time zone values.
- The AMF uses the configured time zone in the messages that are sent to the SMSF as part of ueTimeZone IE. When the time zone is configured at both tai-group and tai-list levels, the preference is configured under the tai-list.
- **preference preference**—Specify the preference. The time zone configured within the TAI list gets the preference.
- **timezone { + | - } hours value [ minutes { 0 | 15 | 30 | 45 } | daylight-savings-time-increment { 0 | 1 | 2 } ]**—Specify the time zone for the TAI list. The variables included the following:
  - **{ + | - }**—Specify the offset direction from the Universal Time (UTC).
  - **hours value**—Specify the offset from UTC in hours. Accepted value must be an integer 0—14.
  - **[ minutes { 0 | 15 | 30 | 45 } ]**—(Optional) Specify the offset minutes that are added to the hours value.
  - **daylight-savings-time-increment { 0 | 1 | 2 }**—Specify the number of hours during which the time zone should be offset due to daylight savings time.

**Configuration Example**

The following is an example of the time zone configuration.

```

config
 tai-group name test1
 timezone offset + hours 11 minutes 45 daylight 2
 tais name tailist2
 timezone offset - hours 14 minutes 45 daylight 1
 mcc 123 mnc 456
 tac list [21 22]
 exit
 exit
exit

```



## Configuration Example

The following is an example configuration.

```
config
 amf-global
 operator-policy local
 ccp-name local
 network-element-profile-list smsf smsf1
 end
 profile
 network-element [smsf]
 nf-client-profile SMSF1
 failure-handling-profile FH1
 query-params [target-plmn instance-id]
 end
 nf-client nf-type smsf
 smsf-profile SMSF1
 locality LOC1
 priority 56
 service name type nsmsf-sms
 endpoint-profile EP1
 capacity 30
 priority 30
 uri-scheme http
 version
 uri-version v2
 end
 endpoint-name EP1
 priority 30
 primary ip-address ipv4 209.165.201.1
 primary ip-address port 5182
 secondary ip-address ipv4 209.165.201.2
 secondary ip-address port 5084
 end
 nf-pair nf-type SMSF
 nrf-discovery-group udmdiscovery
 locality client LOC1
 locality preferred-server LOC1
 locality geo-server GEO
 end
```





## CHAPTER 58

# S-NSSAI based SMF Selection

- [Feature Summary and Revision History, on page 563](#)
- [Feature Description, on page 563](#)
- [Feature Configuration, on page 564](#)

## Feature Summary and Revision History

### Summary Data

*Table 206: Summary Data*

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

*Table 207: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

## Feature Description

For Custom Slice selection without NSSF, AMF now supports SMF selection based on S-NSSAIs received from UE (Requested S-NSSAI) during PDU session establishment procedures.

AMF supports SNNSAI-based SMF selection only using NRF (Network Repository Function).

During PDU session establishment procedure, AMF queries the necessary NRF serving PLMN by issuing the `Nnrf_NFDiscovery_Request` including SNSSAI to select SMF.

The NRF serving PLMN provides a set of the discovered SMF instances or Endpoint Addresses of SMF service instance(s) in `Nnrf_NFDiscovery_Request` response message. AMF uses the information provided by NRF and connects to the necessary SMF for further interactions.

## Feature Configuration

To configure this feature, use the following configuration:

```
config
profile
 network-element network_element network_element_name
 nf-client-profile nf_client_profile_name
 query-params query_params
end
```

### NOTES:

- **network-element** *network\_element network\_element\_name*—Specify the peer network element and its name.
- **nf-client-profile** *nf\_client\_profile\_name*—Specify the NF client profile name.
- **query-params** *query\_params*—Specify the query parameter for NF discovery.

## Configuration Example

The following is an example configuration.

```
config
profile
 network-element smf SMF1
 nf-client-profile SMF1
 query-params [snssais]
end
```

## Configuration Verification

To verify the configuration:

```
show running-config profile network-element
Wed Oct 20 07:22:45.870 UTC+00:00
profile network-element smf SMF1
nf-client-profile SMF1
query-params [snssais]
```



## CHAPTER 59

# Stateless NGAP Protocol EP Deployment

Table 208: Feature History

| Feature Name                          | Release Information | Description                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------------|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Stateless NGAP Protocol EP Deployment | 2025.03.0           | <p>You can now enable horizontal scaling of AMF NGAP protocol pods by transitioning from an existing Active-Standby mode of deployment to an Active-Active deployment model.</p> <p>Command introduced:</p> <pre><b>amf-services</b> <i>amf_service_name</i> {<br/>  <b>stateless-proto-ep enabled</b> }—</pre> <p>Used to enable the stateless protocol EP deployment.</p> <p><b>Default Setting:</b> Disabled – Configuration Required</p> |

We highly recommend to use the NGAP stateless protocol feature for higher scalability and more robust deployment model.



**Note** Rolling upgrade is not supported when migrating from a replication-based (i.e., stateful) deployment model to a stateless deployment mode. However, rolling upgrade works seamlessly across different software versions within the stateless mode of protocol EP deployment.

The load distribution mechanism is based on gNBs connected to AMF, if some gNB's are overloaded with subscribers, there may be some variation in the resource consumption of NGAP protocol pods.

- [Guidelines for Stateless Protocol EP Deployment, on page 566](#)
- [Enable Stateless Protocol EP Deployment, on page 566](#)
- [Scale Stateless Protocol EP Deployment, on page 566](#)

# Guidelines for Stateless Protocol EP Deployment

Follow these guidelines when implementing this feature:

- Enabling/Disabling of NGAP stateless protocol feature requires AMF ops-center shut/start.
- Default configuration includes two Protocol-EP pods deployed in Active-Active mode.
- Scaling up to five Protocol-EP pods is supported and requires AMF ops center shut/start.

## Enable Stateless Protocol EP Deployment

### Procedure

---

- Step 1** Enter the amf-services configuration mode.
- ```
amf-services amf_service_name
```
- Step 2** Enable the stateless protocol EP deployment for the specified amf service.
- ```
stateless-proto-ep enabled
```
- Step 3** Save and commit the configuration.
- Step 4** To disable the stateless protocol EP deployment, run the following command.
- ```
no amf-services amf stateless-proto-ep
```

Note

- Enabling or disabling the stateless protocol feature requires ops-center shut/start. It is not recommended to enable/disable this feature at runtime as it impacts active sessions.
 - The feature is disabled by default.
 - Any change in the number of Protocol-EP pods require a shutdown and start of the AMF ops-center.
-

Scale Stateless Protocol EP Deployment

Procedure

- Step 1** Configure the instance *instance-id* in the AMF configuration mode.
- ```
instance instance-id instance_id
```
- Step 2** Use the following command to scale the deployment by setting the number of replicas per node.

**endpoint ngap replicas** *replica\_count*

**Step 3** Use the following command to scale the deployment by setting the number of nodes.

**endpoint ngap nodes** *node\_count*

**Step 4** Save and commit the configuration.

---







## CHAPTER 60

# Steering of Roaming, Roaming Restrictions, and Operator Policy Support

- [Feature Summary and Revision History, on page 569](#)
- [Feature Description, on page 570](#)
- [Feature Configuration, on page 570](#)
- [Steering of Roaming, on page 571](#)
- [Roaming Restriction and Operator Support, on page 578](#)
- [Operator Policy, on page 587](#)

## Feature Summary and Revision History

### Summary Data

*Table 209: Summary Data*

|                                          |                                 |
|------------------------------------------|---------------------------------|
| Applicable Product(s) or Functional Area | AMF                             |
| Applicable Platform(s)                   | SMI                             |
| Feature Default Setting                  | Enabled – Always-on             |
| Related Documentation                    | <a href="#">Roaming Support</a> |

### Revision History

*Table 210: Revision History*

| Revision Details                                | Release   |
|-------------------------------------------------|-----------|
| Added the support for service area restriction. | 2023.04.0 |
| First introduced.                               | 2022.02.0 |

# Feature Description

The AMF supports the following functionalities:

- [Steering of Roaming, on page 571](#)
- [Roaming Restriction and Operator Support, on page 578](#)
- [Operator Policy, on page 587](#)

## Relationships

The following attributes are associated with this feature:

- Initial, mobility registration, and periodic registration
- PDU establishment
- N26
- N2HO with or without AMF change
- Service request



---

**Note** By default, the RAT type is NR and the core network type is 5GC, for an AMF subscriber.

---

## Feature Configuration

Configuring this feature involves the following subfeatures and steps:

- **Local Cause Code to Restricted Area Restrictions**—This configuration supports the mapping of local-defined cause code to Restricted area restrictions. For more information, see [Configuring the Core Network Type Restriction, on page 576](#).
- **Inter-PLMN Roaming**—This configuration supports the commands to configure inter-PLMN restrictions to restrict the roamer subscriber. For more information, see [Configuring the 5GC Inter-PLMN Roaming, on page 509](#).
- **RAT Restriction**—This configuration supports the commands to configure restrictions for RAT types such as EUTRA, NR, Virtual, and WLAN, while accessing the network. For more information, see [Configuring the RAT Restriction, on page 585](#).
- **Local Cause Code to RAT Type Restrictions**—This configuration supports the mapping of local-defined cause code to RAT restrictions. For more information, see [Configuring the RAT Type Restriction, on page 585](#).
- **Operator Policy**—This configuration supports the commands to configure operator-defined policies. For more information, see [Feature Configuration, on page 590](#).

# Steering of Roaming

Steering of Roaming (SOR) is a technique where an HPLMN indicates a roaming UE to roam to a preferred roamed-to-network.

## How it Works

This section describes how this feature works.

The SOR consists of the following HPLMN protected information:

- An indication of whether the UDM requests an acknowledgment from the UE for a successful SOR reception.
- It supports one of the following:
  - Indication of the included list of preferred PLMN or access technology combinations.
  - A secured packet with an indication, whether it is included or not.
  - The HPLMN indication, when there are no changes in the operator-controlled PLMN selector, with access technology from the stored list in the needed UE.

As a result, no list of the preferred combinations for the PLMN or the access technology is provided.



---

**Note**

The secured packet contains the list of preferred PLMN and access technology combinations. These combinations are encapsulated within a security mechanism as described in *3GPP TS 31.115 [67]*.

For more on SOR protected information, see *3GPP TS 33.501 [66]*.

---

## Call Flows

This section describes the key call flows for this feature.

### SOR During the UE Registration Call Flow

This section describes the SOR during the UE Registration call flow.

Figure 89: SOR During the UE Registration Call Flow

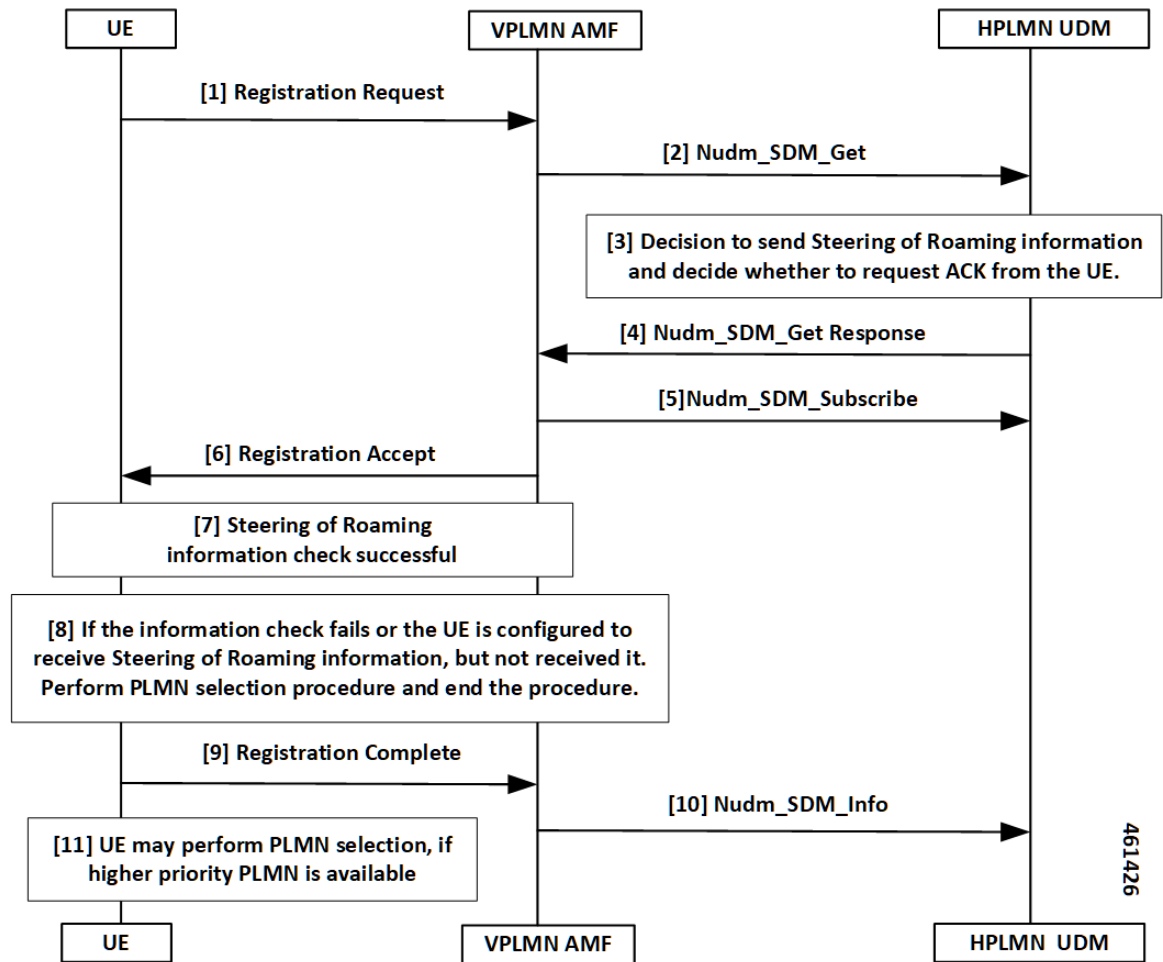


Table 211: SOR During the UE Registration Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                                           |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | UE sends the Registration Request to the VPLMN AMF.                                                                                                                                                                                                                                                                                                                   |
| 2    | <p>The VPLMN AMF executes the registration procedure as defined in subclause 3GPP TS 23.502 [63], section 4.2.2.2.2.</p> <p>As part of the registration procedure, the VPLMN AMF invokes the <b>Nudm_SDM_Get</b> service operation message to the HPLMN UDM.</p> <p>This service operation helps in getting the Access and Mobility Subscription data for the UE.</p> |
| 3    | <p>The following are the responses from the HPLMN UDM, reciprocating to the <b>Nudm_SDM_Get</b> service operation message:</p> <ul style="list-style-type: none"> <li>• Sending SOR</li> <li>• Requesting ACK from the UE</li> </ul>                                                                                                                                  |

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 4    | <p>When the HPLMN UDM sends the response using the <b>Nudm_SDM_Get</b> service operation to the VPLMN AMF, the following are the next substeps:</p> <ul style="list-style-type: none"> <li>• This response includes the SOR information in the Access and Mobility Subscription data.</li> </ul> <p><b>Note</b><br/>The Access and Mobility Subscription data type defined as in <i>3GPP TS 23.502, section 5.2.3.3.1</i>.</p> <ul style="list-style-type: none"> <li>• The HPLMN requests the UE to ACK the successful security check of the received SOR information.</li> <li>• The HPLMN requests this ACK with an indication in the <b>Nudm_SDM_Get</b> service operation of SOR information.</li> </ul> |
| 5    | <p>As part of the registration procedure, the VPLMN AMF invokes the <b>Nudm_SDM_Subscribe</b> service operation to the HPLMN UDM:</p> <ul style="list-style-type: none"> <li>• To subscribe to the subscription data notification changes received in Step 4.</li> <li>• To include the notification of SOR updates in the Access and Mobility Subscription data.</li> </ul>                                                                                                                                                                                                                                                                                                                                  |
| 6    | The VPLMN AMF sends the received SOR information to the UE in Registration Accept.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 7    | The SOR security check procedure takes place at UE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 8    | <p>The UE performs the PLMN selection procedure and ends the procedure, when:</p> <ul style="list-style-type: none"> <li>• The information check fails.</li> <li>• Although the UE is configured to receive the SOR information, but it does not receive.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| 9    | <p>UE sends Registration Complete to the serving AMF with an SOR transparent container including the UE ACK:</p> <ul style="list-style-type: none"> <li>• When the UDM requested an ACK from the UE.</li> <li>• When the UE verifies the HPLMN SOR information from Step 7.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 10   | <p>AMF uses the <b>Nudm_SDM_Info</b> service operation to provide the received SOR transparent container to the UDM in Registration Complete:</p> <ul style="list-style-type: none"> <li>• If the HPLMN decides that the UE must ACK with the successful security check for the received SOR information from Step 4, then the verification process begins.</li> <li>• If the UDM verifies the ACK provided by UE specified in <i>3GPP TS 33.501</i>.</li> </ul>                                                                                                                                                                                                                                              |
| 11   | UE performs the PLMN selection when a high priority PLMN is available.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |

### SOR After the UE Registration Call Flow

This section describes the SOR after the UE Registration call flow.

Figure 90: SOR After the UE Registration Call Flow

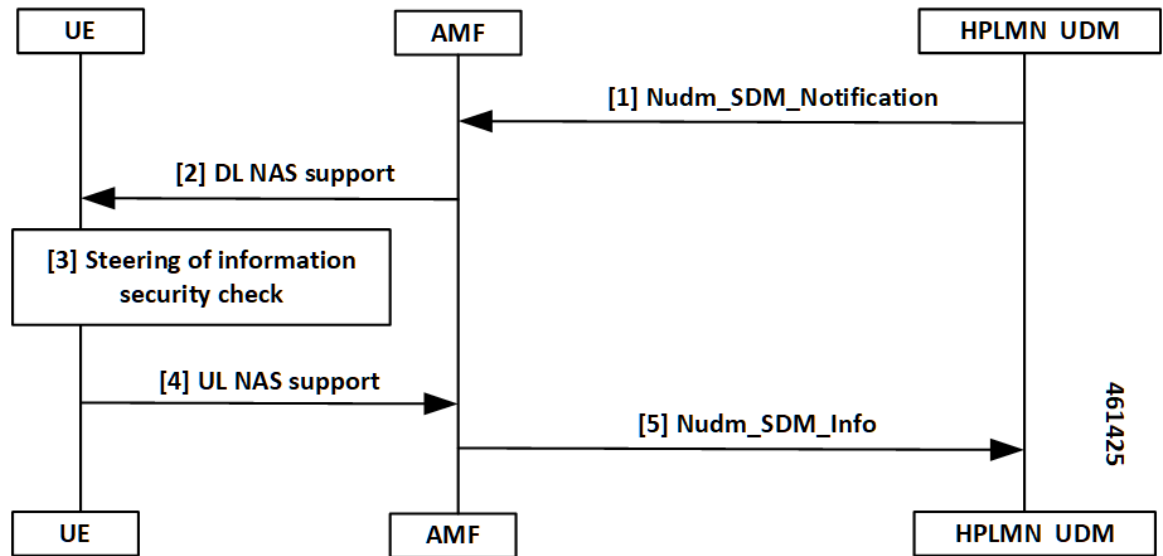


Table 212: SOR After the UE Registration Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | UDM notifies the changes of the user profile using <b>Nudm_SDM_Notification</b> service operation to the affected AMF. The following are the substeps: <ul style="list-style-type: none"> <li>The <b>Nudm_SDM_Notification</b> service operation contains the SOR which must be delivered to the UE over NAS in the Access and Mobility Subscription data.</li> <li>When the HPLMN decides the following: <ul style="list-style-type: none"> <li>The UE must ACK the successful security check of the received SOR, including the <b>Nudm_SDM_Notification</b> service operation.</li> <li>It contains an indication which represents UDM requests as an ACK from the UE as part of the SOR.</li> </ul> </li> </ul> |
| 2    | The AMF sends DL NAS TRANSPORT to the served UE.<br>The AMF includes the SOR information as received from the UDM in DL NAS TRANSPORT.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 3    | The SOR security check procedure takes place at UE.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 4    | UE sends UL NAS TRANSPORT to the serving AMF with an SOR: <ul style="list-style-type: none"> <li>When the UDM requested an ACK from the UE in the DL NAS TRANSPORT message.</li> <li>When the security check-in at Step 2 is successful.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5    | <p>If UL NAS TRANSPORT with an SOR transparent container is received, the AMF uses the <b>Nudm_SDM_Info</b> service operation to forward the received SOR to the UDM.</p> <p>If the HPLMN decides the following:</p> <ul style="list-style-type: none"> <li>• The UE must ACK the successful security check for the received list of preferred PLMN or access technology combinations from Step 1.</li> <li>• The UDM verifies the ACK provided by UE.</li> </ul> |

## Standards Compliance

This feature complies with the following standards specifications:

- *TS 23.501, "System Architecture for the 5G System (5GS)"*
- *TS 23.502, "Procedures for the 5G System (5GS)"*
- *TS 29.274, "3GPP Evolved Packet System (EPS); Evolved General Packet Radio Service (GPRS) Tunneling Protocol for Control Plane (GTPv2-C); Stage 3"*
- *TS 29.503, "5G System; Unified Data Management Services; Stage 3"*
- *TS 29.518, "5G System; Access and Mobility Management Services; Stage 3"*
- *TS 38.413, "NG-RAN; NG Application Protocol (NGAP)"*

## Limitations

This feature has the following limitations in this release:

- No support for non-3GPP specification or emergency registration SOR.
- No support for multiple UDM data changes NotificationRequest at the time for SOR.
- No support when the UDM sends data change notification for SMS, SOR, or RAT restriction all-together. In this scenario, the AMF ignores the SOR and the RAT restriction data changes and notifications.
- No support when the service request is received with PDU sync request. In this scenario, the response paging request is ignored from the AMF, due to SOR UDM data changes and notifications.
- No support when the AMF starts accepting the service with PDU sync up, and the UE context setup procedure. In this scenario, it later sends DL NAS Transport for SOR changes and notifications.

## Feature Configuration

Configuring this feature involves the following steps:

- [Configuring the Core Network Type Restriction, on page 576](#)
- [Configuring the 5GC Inter-PLMN Roaming, on page 509](#)
- [Configuring the Idle Mode for Steering, on page 577](#)

## Configuring the Core Network Type Restriction

When the UE requests access to a restricted area, the AMF configures the cause code to send to a UE. This restriction can be one of the following:

- UDM service area restrictions
- Local configuration-based area code restrictions

To configure this feature, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 core-network-type-restriction 5gc override-udm-restrictions
 local-cause-code-map rat-type-restriction 5gmm-cause-code {
 5GS-services-not-allowed | no-suitable-cells-in-tracking-area |
 plmn-not-allowed | roaming-not-allowed-in-this-tracking-area |
 tracking-area-not-allowed | restricted-service-area }
 end
```

### NOTES:

- **call-control-policy *policy\_name***—Specify the call control policy name to apply the RatType restriction at AMF.
- **core-network-type-restriction 5gc override-udm-restrictions**—When the core network restriction is configured as 5GC, the AMF restricts the 5GC access to subscribers associated with the Call Control Policy. When 5GC is configured with **override-udm-restrictions**, the AMF ignores the UDM defined restrictions and considers the locally configured restrictions.
- **local-cause-code-map rat-type-restriction 5gmm-cause-code { 5GS-services-not-allowed | no-suitable-cells-in-tracking-area | plmn-not-allowed | roaming-not-allowed-in-this-tracking-area | tracking-area-not-allowed | restricted-service-area }**—Specify the 5GMM cause code.

## Configuring the 5GC Inter-PLMN Roaming

To configure this feature, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 local-cause-code-map registration-restriction cause-code-5gmm
 plmn-not-found
 end
```

### NOTES:

- **call-control-policy *policy\_name***—Specify the call control policy name.
- **local-cause-code-map registration-restriction cause-code-5gmm plmn-not-found**—When the subscriber is a roamer and has registration restrictions, the AMF rejects the subscriber with the **plmn-not-found** cause setting.



## Configuring the Idle Mode for Steering

To configure this feature, use the following configuration:

```
config
 amf-global
 paging-map paging_map_name_1
 precedence precedence_name_1
 trigger-type trigger_type_sor
 paging-profile-name paging_profile_name_pp3
 end
```

### NOTES:

- **paging-map** *paging\_map\_name\_1*—Specify the paging map and related values.
- **precedence** *precedence\_name\_1*—Specify the type or value of precedence.
- **trigger-type** *trigger\_type\_sor*—Specify the type of trigger.
- **paging-profile-name** *paging\_profile\_name\_pp3*—Specify the name of the paging profile to apply the idle mode for steering restriction at the AMF.

## OAM Support

This section describes operations, administration, and maintenance support for this feature.

### Statistics for Steering

The following are different types of statistics for steering and their associated examples:

#### num\_sdm\_info API Type

```
n8_service_stats{app_name="AMF",cluster="clu1",
data_center="dc1",instance_id="0",
message_type="NudmSdmSorAckInfoReq",
reason="No-Content",service_name="amf-service",
status="success"}1
```

```
n8_service_stats{app_name="AMF",cluster="clu1",
data_center="dc1",instance_id="0",
message_type="NudmSdmSorAckInfoRsp",
reason="gateway-Timeout",service_name="amf-service",
slice_data="2-051615"status="failures"}5
```

```
n8_service_stats{app_name="AMF",cluster="clu1",
data_center="dc1",instance_id="0",
message_type="NudmSdmSorAckInfoRsp",
reason="No-Content",service_name="amf-service",
slice_data="2-051615"status="success"}1
```

### Paging TriggerType SOR

```
amf_nas_message_total{app_name="AMF",cluster="clul",
data_center="dc1",instance_id="0",message_direction="outbound"
message_type="Paging_TriggerType_sor",
service_name="amf-service"}31
```

### Paging Statistics for SOR—When the Paging Trigger Type is Configured in the CLI

```
amf_nas_message_total{app_name="AMF",cluster="clul",
data_center="dc1",instance_id="0",message_direction="outbound"
message_type="Paging_TriggerType_sor",
service_name="amf-service",slice_data="2-333333"} 21
```

```
amf_nas_message_total{app_name="AMF",cluster="clul",
data_center="dc1",instance_id="0",message_direction="outbound"
message_type="Paging_Trigger_SOR_PAGING",
service_name="amf-service",slice_data="2-333333"}75
```

### Paging Statistics for SOR—When the Paging Trigger Type is Not Defined in the CLI

```
amf_nas_message_total{app_name="AMF",cluster="clul",
data_center="dc1",instance_id="0",message_direction="outbound"
message_type="Paging_TriggerType_default",
service_name="amf-service",slice_data="2-333333"} 21
```

```
amf_nas_message_total{app_name="AMF",cluster="clul",
data_center="dc1",instance_id="0",message_direction="outbound"
message_type="Paging_Trigger_SOR_PAGING_default",
service_name="amf-service",slice_data="2-333333"}75
```

## Roaming Restriction and Operator Support

The AMF provides the mobility restriction functionality handling, enforcement, and management. It provides mobility roaming restrictions along with operator support.

The mobility restriction consists of RAT restriction and core network type restriction.

The UDM provides RAT and core network type restriction in the subscription data that are provided as in **am-data** during and after the registration process.

## How it Works

This section describes how this feature works.

## Standards Compliance

This feature complies with the following standards specifications:

- *TS 23.501, "System Architecture for the 5G System (5GS)"*
- *TS 23.502, "Procedures for the 5G System (5GS)"*
- *TS 29.274, "3GPP Evolved Packet System (EPS); Evolved General Packet Radio Service (GPRS) Tunneling Protocol for Control Plane (GTPv2-C); Stage 3"*
- *TS 29.503, "5G System; Unified Data Management Services; Stage 3"*
- *TS 29.518, "5G System; Access and Mobility Management Services; Stage 3"*
- *TS 38.413, "NG-RAN; NG Application Protocol (NGAP)"*

## Limitations

This feature has the following limitations in this release:

- No support for UE reachability notifications to NFs.
- No support for forbidden area and service area restrictions.
- No support when N26 consigns and hands over from 5G to 4G. In this scenario, the AMF only updates the mobility restriction IEs in MMContext toward the MME in Forward Relocation Request (for connected mode HO) or Context Response (for idle mode HO).
- No support when N26 consigns and hands over from 4G to 5G. In this scenario, the AMF only enforces the mobility restriction IEs received in MMContext from the MME in Forward Relocation Request (for connected mode HO) or Context Response (for idle mode HO).
- No support when N2 HO updates with any of the changes in AMF or inter-AMF UE Context Transfer. In this scenario, the AMF acts only as a target node. The AMF does not support and does not enforce the mobility restriction IEs received in ueContext from the source AMF.
- No support for index-based ADD operation in UDM data changes NotificationRequest for a new core or RAT restriction type.
- No support when the target AMF applies only for those applicable enforcement-based parameters on the restrictions. In this scenario, these parameters are based on the restrictions that are received from the UDM. They are only from the locally configured setup at the target AMF.

## Relationships

The following subfeatures are associated with this feature:

- [UDM Subscription, on page 579](#)
- [Restrictions Enforcement at AMF, on page 581](#)
- [Mobility Restriction IEs, on page 583](#)

## UDM Subscription

The AMF validates the parameters for RAT Restrictions, Core Network Type Restrictions, and Local Cause Code Mapping. The AMF performs these activities, when it receives the subscription data as am-data. The AMF checks whether the UE is allowed or any enforcement is applicable.

The UDM provides RAT and Core Network Type restrictions in subscription data during and after registration.

When the requested data is modified, the UDM notifies the registered AMF subscribers. The AMF sends the modified mobility list to the UE. If the subscriber is already registered, the AMF continues to serve the UE or deregister based on the updated restrictions.

UDM subscription data configures the AMF with restrictions using RAT type restrictions or local configuration in the Call Control Policy. When the UDM provides the restrictions, the AMF uses and enforces them accordingly. When the UDM doesn't provide restrictions, the AMF uses and implements the available local policy configuration from the Call Control Policy based restriction.

On receiving the updated subscription data and am-data change notification from UDM, the AMF performs the following:

- Processes the data change notifications
- Saves the RAT and Core Network values in the UE context
- Applies the enforcements, if applicable



---

**Note** UE rejects the call at any time during a restriction. During an emergency registration, the AMF doesn't check the restrictions.

---

The following subfeatures are associated with this feature:

- [RAT Restrictions, on page 580](#)
- [Core Network Type Restrictions, on page 580](#)
- [Local Cause Code Mapping, on page 581](#)

## RAT Restrictions

In a restricted RAT, the UE can't access the network for that PLMN.

The UDM subscription data configures restrictions for AMF using RatTypeRestrictions or local configuration in the Call Control Policy.

The AMF enforces the restriction or policy configuration in the following scenarios:

- When the UDM provides RatTypeRestrictions, the AMF enforces the restrictions.
- When the UDM doesn't provide RatTypeRestrictions, the AMF uses the available local policy configuration from Call Control Policy.
- When the UDM provides the available RatTypeRestrictions and local policy is configured, the AMF uses only the UDM-provided RatTypeRestrictions. You can also override the UDM-based RatTypeRestrictions with local configuration using the **override-udm-restrictions** command.

## Core Network Type Restrictions

The AMF supports the Core Network Type restrictions to restrict the core network access to the subscriber.

The AMF enforces the restrictions in the following scenarios:

- The UDM subscription data configures restrictions for the AMF using `CoreNetworkTypeRestrictions` or local configuration in the Call Control Policy.
- The AMF utilizes the UDM-provided `CoreNetworkTypeRestrictions`. If UDM doesn't provide `CoreNetworkTypeRestrictions`, the AMF uses the restrictions based on the local policy configuration from the Call Control Policy.
- The Call Control Policy is configured when the availability of `CoreNetworkTypeRestrictions` is defined.
- The AMF uses only the UDM-provided `CoreNetworkTypeRestrictions`.
- You can also override the UDM-based `CoreNetworkTypeRestrictions` with local configuration using the **`override-udm-restrictions`** command.

## Local Cause Code Mapping

Local Cause Code Mapping provides the operator with the flexibility to configure a preferred GMM cause code, which must be sent to the UE in response to various failures.

The following subfeatures are associated with this feature:

- [Core Network Type Restriction, on page 581](#)
- [RAT Type Restriction, on page 581](#)

### *Core Network Type Restriction*

The local Cause Code Mapping enables the operator to configure a preferred 5GS Mobility Management Cause Code, by ignoring the default cause code values.

The local cause code mapping can be configured in the Call Control Policy configuration, which is associated with the Operator Policy configuration.

You can configure different cause codes for different types of area restrictions. The following are a few examples:

- Reject cause code for the area which isn't part of the `Allowed` list, can be configured using the type `not-in-allowed`.
- Reject cause code for the area where the UE access is part of the `Not Allowed` or `Restrict` types, can be configured using the `Not Allowed` type.

The local cause code mapping configuration for the registration is rejected due to the Core Network Type restrictions configured in the AMF. The 5GMM cause code is used for both UDM-based or local configuration restrictions.

### *RAT Type Restriction*

The local cause code mapping configuration for the registration is rejected due to the Core Network Type restrictions configured in the AMF. The 5GMM cause code is used for both UDM-based and local configuration restrictions.

## Restrictions Enforcement at AMF

The 5GC AMF receives all connection and session-related information from the UE.

The following subfeatures are associated with this feature:

- [Enforcement during or after Registration, on page 582](#)
- [Enforcement during Mobility, on page 582](#)
- [Enforcement at AMF for Emergency PDU, on page 583](#)
- [Enforcement at N26 Call Flow, on page 583](#)
- [Enforcement at Idle Mode Handling from UDM, on page 583](#)

## Enforcement during or after Registration

To authenticate the UE, control integrity protection, and encoding, you can use the 5GMM procedures. These procedures are used for tracing, following, and identifying the address, locality, and the vicinity of the UE.

The following procedures are used during this process:

- When the subscriber interacts for the first time with the AMF and if restrictions are applicable, the AMF enforces the restrictions by sending Registration Reject with a cause code value towards the UE.
- When the subscriber is already registered, a required change in RAT or Core Network Type restriction is triggered through the UDM data change notification. This data notification requires the AMF to apply fresh enforcements.
- If these restrictions are applicable, the AMF deregisters the subscriber or else continues to allow the subscriber to be in the network.
- The AMF saves the changed RAT and Core Network Type restrictions in the UE context.
- The AMF sends the changed RAT and Core network restriction values in the next outgoing Handover Request or Initial Context Setup Request (ICSR).

## Enforcement during Mobility

The following options are associated with this subfeature:

### N2HO

When the N2HO option is selected, the AMF performs the following actions:

- During N2HO, the AMF encodes and sends the Restricted RAT list and Restricted Core Network list in the UE context transfer request.
- On receiving the UE context transfer request from the source AMF, the AMF decodes the Restricted RAT list and Restricted Core Network list.
- The AMF saves the Restricted RAT list and Restricted Core Network list in the UE context am-data subscription.
- The AMF checks whether the UE is 5GC restricted or not. If the UE is 5GC restricted, the AMF sends a failure note for the N2HO with and without change.

### N26HO

When the N26HO option is selected, the AMF performs the following actions:

- When the N26 connected mode handover is from the AMF to the MME, the AMF checks whether the UE is EPC restricted or not. If the UE is EPC restricted, the AMF sends a **HANDOVER\_REQUIRED\_MSG** failure to source gNB.
- When the N26 connected mode handover is from the MME to the AMF, the AMF checks whether the UE is 5GC restricted or not. If the UE is 5GC restricted, the AMF rejects the UE.

### Enforcement at AMF for Emergency PDU

During the triggering process of enforcement for a RAT or a core restriction type, the AMF performs the following actions:

- The AMF starts the deregistration process toward the PCF or the UDM, when the UE has an emergency PDU established before.
- The AMF initiates the release only for non-emergency PDU, whereas the emergency PDU remains active.
- The AMF moves the UE as an option of emergency registered.

### Enforcement at N26 Call Flow

The enforcement restriction at N26 call flow type is also known as a handover process from 5G to 4G. During this handover process, the following observations are noted:

- Restriction enforcement received from the UDM subscription, responses to the am-data part.
- This response is a specific core type restriction which is equivalent only to EPC.
- The AMF rejects the EBI assignment request from the SMF with a restricted EBI cause.

### Enforcement at Idle Mode Handling from UDM

During UE transaction in an idle mode, the AMF processes the following:

- Receives the UDM data change notification from the UDM for restriction, which must be imposed.
- Initiates the paging as per the configured paging profile.
- Triggers the **init dereg** trigger type.
- Starts the paging activities toward the UE.

## Mobility Restriction IEs

Mobility Restrictions are included in the AMF when:

- Restrictions are applicable to a UE and the registration type isn't Emergency Registration.
- Emergency Registration is sent in Downlink NAS Transport with the message type as Registration Accept.



---

**Note** This procedure as specified in *TS 23.502, "Procedures for the 5G System (5GS)."*

---

The AMF encodes the following mobility restrictions IEs:

- Downlink NAS Transport
- Handover Request
- Initial Context Setup Request (ICSR)



---

**Note** The AMF supports only the serving PLMN.

---

### Downlink NAS Transport

The AMF performs the following activities:

- NG-RAN with a Mobility Restriction List having the last E-UTRAN PLMN Identity and the Return preferred indication.



---

**Note** The Mobility Restriction List contains a list of PLMN IDs as specified in *TS 23.501, "System architecture for the 5G System (5GS)."*

---

### Handover Request

The AMF performs the following activities:

- The AMF sends a Handover Request with a Mobility Restriction List to the NG-RAN.

The AMF provides the NG-RAN with a PLMN list in the Mobility Restriction List containing the serving PLMN and the last E-UTRAN PLMN Identity.



---

**Note** The Mobility Restriction List contains the PLMN IDs as specified in *TS 23.501, "System architecture for the 5G System (5GS)"*

---

- The AMF sends the Handover Request from the T-AMF (Target AMF) to the T-RAN (Target RAN) with the following parameters:
  - Source to Target transparent container
  - N2 MM Information
  - N2 SM Information list
  - Tracing Requirements

If the target AMF has the Mobility Restriction List, the same list is sent in N2 MM Information.

- The AMF sends N2 MM Information from AMF to RAN with the following parameters:
  - Security context
  - Mobility Restriction List
  - List of recommended cells



- Tracing Area
- NG-RAN node identifiers

### Initial Context Setup Request (ICSR)

During Service Request and PDU establishment, the AMF sends the ICSR IE.

## Feature Configuration

Configuring this feature involves the following steps:

- [Configuring the RAT Restriction, on page 585](#)
- [Configuring the RAT Type Restriction, on page 585](#)

### Configuring the RAT Restriction

To configure this feature, use the following configuration:

```
config
 amf-global
 call-control-policy call_control_policy_name
 rat-type-restrictions { EUTRA | NR | VIRTUAL | WLAN |
override-udm-restrictions }
 local-cause-code-map rat-type-restriction 5gmm-cause-code {
5GS-services-not-allowed | no-suitable-cells-in-tracking-area |
plmn-not-allowed | roaming-not-allowed-in-this-tracking-area |
tracking-area-not-allowed | restricted-service-area }
 end
```

#### NOTES:

- **call-control-policy** *call\_control\_policy\_name*—Specify the call control policy name to apply the restriction at AMF as **RatType**.
- **rat-type-restrictions { EUTRA | NR | VIRTUAL | WLAN | override-udm-restrictions }**—Specify the RAT type. The default RAT type is NR. Configuring the RAT restriction is optional. The AMF restricts the NR access to the subscribers using or associating with the Call Control Policy.  
  
When the RAT type is configured as **override-udm-restrictions**, the AMF ignores the UDM defined restrictions and considers the locally configured restrictions.
- **local-cause-code-map rat-type-restriction 5gmm-cause-code { 5GS-services-not-allowed | no-suitable-cells-in-tracking-area | plmn-not-allowed | roaming-not-allowed-in-this-tracking-area | tracking-area-not-allowed | restricted-service-area }**—Specify the 5GMM cause code.
- The default option for RAT type restrictions is **plmn-not-allowed** for the **rat-type-restrictions** command.

### Configuring the RAT Type Restriction

To configure this feature, use the following configuration:

```

config
 amf-global
 call-control-policy policy_name
 rat-type-restrictions { EUTRA | NR | VIRTUAL | WLAN |
override-udm-restrictions }
 local-cause-code-map restricted-zone-code cause-code-5gmm {
5GS-services-not-allowed | no-suitable-cells-in-tracking-area |
plmn-not-allowed | roaming-not-allowed-in-this-tracking-area |
tracking-area-not-allowed | restricted-service-area }
 end

```

**NOTES:**

- **rat-type-restrictions { EUTRA | NR | VIRTUAL | WLAN | override-udm-restrictions }**—Specify the RAT type.
- **local-cause-code-map restricted-zone-code cause-code-5gmm { 5GS-services-not-allowed | no-suitable-cells-in-tracking-area | plmn-not-allowed | roaming-not-allowed-in-this-tracking-area | tracking-area-not-allowed | restricted-service-area }**—Specify the local cause code map restricted zone code cause-code-5gmm type.

## OAM Support

This section describes operations, administration, and maintenance support for this feature.

### Roaming Restriction Statistics

The following are examples of statistics for roaming restriction:

#### Disconnect Statistics Mobility/Service Reject: After Dereg Trigger Due to Restriction

```

amf_disconnect_stats{app_name="AMF",
cluster="clu1",data_center="dc1",instance_id="0",
reason="Dereg_RESTRICTED",service_name="amf-service"}1
** No UE Terminated Dereg

```

#### UDM Data Change Notification Trigger Disconnect and Dereg Statistics

```

amf_disconnect_stats{app_name="AMF",
cluster="clu1",data_center="dc1",instance_id="0",
reason="Dereg_UDM_RESTRICTED",
service_name="amf-service"}1

```

```

amf_nas_message_total{app_name="AMF",
cluster="clu1",data_center="dc1",instance_id="0",
message_direction="outbound",
message_type="N1DeRegReq_UeTerminatedDereg_UDM_RESTRICTED",
service_name="amf-service",slice_data="2-333333"} 1

```

# Operator Policy

This section describes the operator policy and the various sets of subscribers mapping, in the AMF operator center.

Operator policy supports various configurations specific to the following features:

- Operator Policy Infrastructure and Subscriber Map
- Regional Area Code Restrictions
- Local Cause Code Mapping
- UE Access (Core Network type) Restrictions

The AMF operator center supports configurations for operator policies, under the Call Control Policy and the paging profile.

## How it Works

Operator policy can be selected using one of the following methods:

### Single Stage Selection

This selection type can be opted after the security mode command selects between IMSI or IMEI.

### Multiple Stage Selection

This selection type consists of the following options:

- After authentication (SUPI)
- After security mode command (IMEI)
- After MSIDN (known from UDM procedures)

**Note**

The newly selected operator policy comes into effect and it does not affect or revert to any of the existing configurations, due to the selection of the previous operator policy.

## Call Flows

This section describes the key call flows for this feature.

### Initial Registration Call Flow

This section describes the Initial Registration call flow.

Figure 91: Initial Registration Call Flow

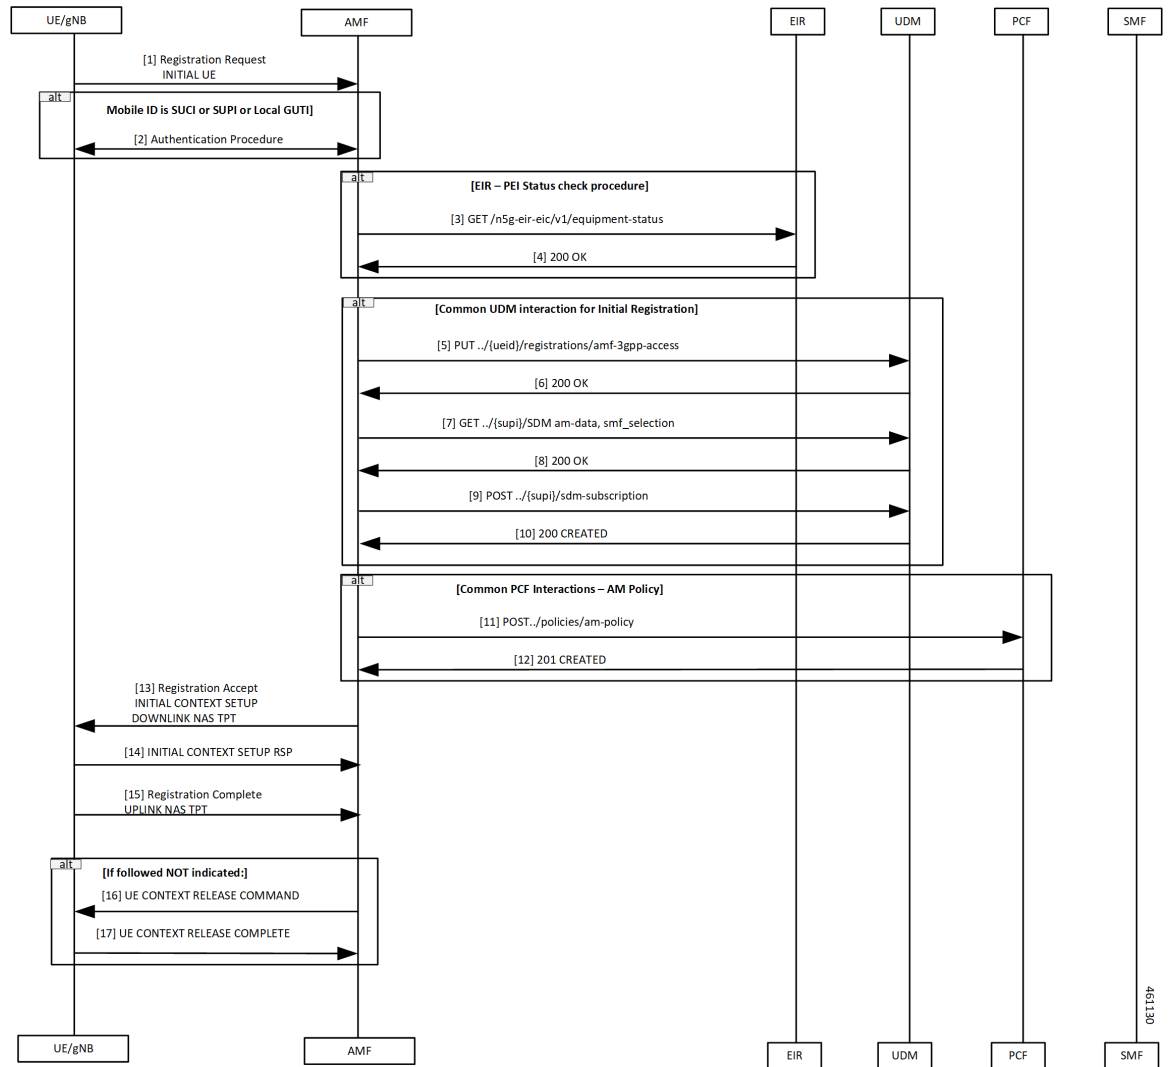


Table 213: Initial Registration Call Flow Description

| Step | Description                                                                                                                                                                                                |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE sends Registration Request to the AMF.                                                                                                                                                              |
| 2    | The authentication procedure occurs between the UE and the AMF.                                                                                                                                            |
| 3    | The AMF performs the equipment status check with the EIR using the GET command.                                                                                                                            |
| 4    | The AMF receives 200 OK from the EIR.                                                                                                                                                                      |
| 5    | The AMF requests the Access and Mobility subscription from the UDM.<br><br>The UDM responds to the AMF request and the AMF stores the subscription information for RAT and core network type in UeContext. |

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6    | The AMF receives 200 OK from the UDM.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 7    | The AMF requests the SMF selection subscription data from the UDM.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| 8    | The AMF receives 200 OK from the UDM.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 9    | The AMF requests the UDM for the notifications when data is modified.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 10   | The UDM registers the AMF and responds to the AMF for subscription with 201.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 11   | <p>The AMF selects the PCF based on PLMN, slice information, and performs Policy Association Establishment.</p> <p>The PCF sends the policy data to the AMF with restrictions and other policies to be applied for the UE.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| 12   | The PCF responds to the AMF request along with am-policy configurations for the subscriber.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 13   | <p>The AMF sends Registration Accept to the UE in Initial Context Setup Downlink NAS TPT indicating that Registration Request is accepted.</p> <p>The AMF fills in the Mobility Restriction List IE with RAT and core restrictions as per the UDM or local configuration settings.</p> <p>Registration Accept contains the following:</p> <ul style="list-style-type: none"> <li>• Registration Area</li> <li>• Mobility restrictions</li> <li>• PDU Session status</li> <li>• Allowed NSSAI</li> <li>• Configured NSSAI for the serving PLMN</li> <li>• Periodic Registration Update timer</li> <li>• Emergency service support indicator</li> <li>• Accepted DRX parameters</li> </ul> |
| 14   | The gNB sends Initial Context Setup Response to the AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 15   | When a new 5G-GUTI is included in Registration Accept, the UE sends Registration Complete to the AMF in Uplink NAS TPT. This message acknowledges that a new 5G-GUTI is assigned.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 16   | <p>If the UE doesn't include a follow-on indication in the request:</p> <ul style="list-style-type: none"> <li>• The AMF sends UE Context Release Command to the gNB.</li> <li>• AMF releases the UE.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| 17   | The gNB responds with UE Context Release Complete to the AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |

## Relationships

The following subfeatures are associated with this feature:

- [Subscriber Maps, on page 590](#)
- [Operator Policy Selection, on page 590](#)

## Subscriber Maps

You can create and manage subscriber maps. These maps are created by using the AMF Subscriber Map configuration mode. These maps have the following usages:

- Applying and associating operator policy configurations to individual subscribers and groups of subscribers.
- UE identity information such as the PLMN of UE, SUPI, or PEI.

The system uses the first matching criteria precedence from the ordered list to associate an operator policy with the UE.

## Operator Policy Selection

Based on the configuration, the AMF selects or reselects the operator policy on the subscriber-map using the available criteria (PLMN, SUPI, PEI, and so on) in the following procedures for an individual subscriber:

- Initial Registration
- Registration—GUTI, Mobility with AMF change
- N2 Handover with AMF change
- 4G to 5G handovers

## Feature Configuration

Configuring this feature involves the following steps:

- [Configuring under AMF Services, on page 590](#)
- [Configuring RAT Restrictions under Call Control Policy, on page 591](#)
- [Configuring Core Network Restrictions under Call Control Policy, on page 591](#)

## Configuring under AMF Services

To configure this feature, use the following configuration:

```
config
 amf-services
 amf-name amf_name
 [no] operator-policy-name operator_policy_name
 end
```

NOTES:

- **amf-name** *amf\_name*—Specify the name of AMF services.
- **operator-policy-name** *operator\_policy\_name*—Specify the name of the operator policy.
- The association of operator policy with the AMF service is a default global policy, which applies to all the subscribers under this service.

## Configuring RAT Restrictions under Call Control Policy

To configure this feature, use the following configuration:

```
config
 amf-global
 amf-name amf_name
 call-control-policy call_control_policy_name
 rat-type-restriction rat_type_restriction_option { EUTRA | NR |
VIRTUAL | WLAN | override-udm-restrictions }
 paging-profile paging_profile_name
 end
```

### NOTES:

- **amf-name** *amf\_name*—Specify the name of AMF global services.
- **call-control-policy** *call\_control\_policy\_name*—Specify the name of the call control policy.
- **rat-type-restriction** *rat\_type\_restriction\_option* { EUTRA | NR | VIRTUAL | WLAN | **override-udm-restrictions** }—Specify the options for RAT network type restriction in the call control policy. Select the RAT type as **override-udm-restrictions** as the option.
- **paging-profile** *paging\_profile\_name*—Specify the name of the paging profile.
- The association of operator policy with the AMF service is a default global policy, which applies to all the subscribers under this service.

## Configuring Core Network Restrictions under Call Control Policy

To configure this feature, use the following configuration:

```
config
 amf-global
 amf-name amf_name
 call-control-policy call_control_policy_name
 core-network-type-restriction { 5gc |
override-udm-restrictions }
 end
```

### NOTES:

- **amf-name** *amf\_name*—Specify the name of AMF global services.
- **call-control-policy** *call\_control\_policy\_name*—Specify the name of the call control policy.
- **core-network-type-restriction** { 5gc | **override-udm-restrictions** }—Specify the options for core network type restriction in the call control policy.

- The association of operator policy with the AMF service is a default global policy, which applies to all the subscribers under this service.





## CHAPTER 61

# Subscription Concealed Identifier Profile

- [Feature Summary and Revision History, on page 593](#)
- [Feature Description, on page 594](#)
- [How it Works, on page 594](#)

## Feature Summary and Revision History

### Summary Data

**Table 214: Summary Data**

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

**Table 215: Revision History**

| Revision Details                                                             | Release   |
|------------------------------------------------------------------------------|-----------|
| Content enhanced with 5G-AMF to support the PSI Profile-A/Profile-B feature. | 2023.02.0 |
| First introduced.                                                            | 2021.04.0 |

# Feature Description

A Subscription Concealed Identifier (SUCI) is a unique identifier designed to protect the privacy of the subscriber's identity. It's generated by the User Equipment (UE) using an Elliptic Curve Integrated Encryption Scheme (ECIES)-based protection scheme. The UE encrypts the Subscriber Permanent Identifier (SUPI) in a concealed method with the public key of the Home Network. It's securely provisioned to the Universal Subscriber Identity Module (USIM) during the registration process.

## How it Works

The protection scheme used in generating the SUCI only conceals the Mobile Subscriber Identification Number (MSIN) part of the SUPI, while the Mobile Country Code (MCC) and Mobile Network Code (MNC) that constitute the Home Network Identifier are transmitted in plain text. The SUCI data fields include the following in the chronological order:

- **SUPI Type Field**—This field is a numeric value ranging 0–7, which indicates the type of SUPI concealed in the SUCI. The following values are currently defined:
  - **0**—International Mobile Subscriber Identity (IMSI)
  - **1**—Network Access Identifier (NAI)
  - **2–7**—Reserved for future use
- **Home Network Identifier Field**—This field identifies the home network of the subscriber. When the SUPI Type is IMSI, the Home Network Identifier is composed of the MCC and the MNC that uniquely identify the home network. When the SUPI Type is a NAI, the Home Network Identifier is a variable-length string of characters that represents a domain name. For example, in the form of `user@domain.com`
- **Routing Indicator Field**—This field is a numerical value consisting of 1–4 decimal digits. It's assigned by the home network operator and securely provisioned within the Universal Subscriber Identity Module (USIM).
- **Protection Scheme Field**—This field is a 4-bit value ranging 0–15, which identifies the protection scheme used to generate the SUCI. The following values are currently defined:
  - **Null Scheme**—0x0
  - **Profile <A>**—0x1
  - **Profile <B>**—0x2
  - **Other Values (3–15)**—Reserved for future use
- **Home Network Public Key ID Field**—This field is an 8-bit value ranging 0–255, which identifies the public key provisioned by the Home Public Land Mobile Network (HPLMN) and used for SUPI protection. When the Null Scheme is used, this field is set to 0.
- **Protection Scheme Output Field**—This field is a variable-length string of characters or hexadecimal digits, depending on the protection scheme used to generate the SUCI.

**Note**

When the Null Scheme is supported, the AMF can derive the SUPI value from the SUCI. However, if a protection scheme other than Null is used, the AMF needs to obtain the SUPI value through interaction with the AUSF.





# CHAPTER 62

## TLS Transport Support

- [Feature Summary and Revision History, on page 597](#)
- [Feature Description, on page 597](#)
- [Feature Configuration, on page 598](#)
- [Troubleshooting Information, on page 599](#)

### Feature Summary and Revision History

#### Summary Data

Table 216: Summary Data

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

#### Revision History

Table 217: Revision History

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

### Feature Description

AMF supports HTTP2 over a TLS secure channel for all SBA interfaces towards NRF, NSSF, AUSF, UDM, PCF, SMF, and so on.

This feature supports the server and client certificate management. It stores the certificates as k8 secrets.



**Note** You must generate and configure ca-certificates, and certificates for the server and client.

## Feature Configuration

Configuring this feature involves the following steps:

- Client Certificates Configuration—This configuration provides the commands to configure the client certificates. For more information, refer to [Configuring the Client Certificates, on page 598](#).
- Server Certificates configuration—This configuration provides the commands to configure the server certificates. For more information, refer to [Configuring the Server Certificates, on page 598](#).
- TLS Enable Configuration—This configuration enables the TLS. For more information, refer to [Enabling the TLS, on page 599](#).

## Configuring the Client Certificates

To configure the Client certificates, use the following configuration:

```
config
 nf-tls ca-certificates certificate_name
 cert-data certificate_data
 end
```

### NOTES:

- **ca-certificates** *certificate\_name*—Specify the certificate name and data.
- **cert-data** *certificate\_data*—Specify the certificate data in PEM format.

## Configuring the Server Certificates

To configure the Server certificates, use the following configuration:

```
config
 nf-tls certificates certificate_name
 cert-data certificate_data
 private-key private_key_data
 end
```

### NOTES:

- **nf-tls certificates** *certificate\_name*—Specify the certificate name, data, and key.
- **cert-data** *certificate\_data*—Specify the certificate data in PEM format.
- **private-key** *private\_key\_data*—Specify the certificate private key in PEM format.

## Enabling the TLS

To configure the TLS enable, use the following configuration:

```
config
 instance instance-id instance_id
 endpoint sbi
 uri-scheme { http | https }
 certificate-name certificate_name
 end
```

### NOTES:

- **instance instance-id *instance\_id***—Specify the instance ID.
- **endpoint sbi**—Specify the endpoint as sbi.
- **uri-scheme { http | https }**—Specify the uri scheme either http or https.
- **certificate-name *certificate\_name***—Specify the certificate name.

## Configuration Verification

To verify the configuration:

```
show running-config instance instance-id 1 endpoint
instance instance-id 1
endpoint sbi
 replicas 2
 loopbackPort 8091
 instancetype IPv4
 vip-ip 209.165.200.224 vip-port 1000
exit
endpoint sctp
 replicas 2
 nodes 2
 vip-ipv6 1000:1003::10:100 vip-ipv6-port 1001
exit
endpoint nodemgr
 replicas 1

show nf-tls certificate-status days
CERTIFICATE NAME POD INSTANCE DAYS

octrel-amf-server amf-amf-rest-ep-0 3632
octrel-lfs-server amf-amf-rest-ep-0 3632
```

## Troubleshooting Information

This section describes troubleshooting information for this feature.

## Trouble Ticket Data Collection

To debug the content data collection issues, use the following commands.

If the commands don't assist you in resolving the issue, analyze the diagnostic data that is available in the form of logs.

- `helm list -n namespace`
- `kubectl get pods -n namespace`
- `kubectl get pod -o yaml -n namespace`
- `kubectl get pod -o yaml -n namespace pod_name`





# CHAPTER 63

## UE Context Transfer Support

- [Feature Summary and Revision History, on page 601](#)
- [Feature Description, on page 602](#)
- [How It Works, on page 603](#)
- [Feature Configuration, on page 605](#)

### Feature Summary and Revision History

#### Summary Data

Table 218: Summary Data

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

#### Revision History

Table 219: Revision History

| Revision Details                                 | Release   |
|--------------------------------------------------|-----------|
| Updated the context-transfer-guard timer details | 2023.02.0 |
| First introduced.                                | 2022.01.0 |

# Feature Description

AMF supports the UE Context Transfer message at source and target AMF. The following CLI configurations are added:

- `allow-interplmn-supi-transfer`
- `horizontal-key-derivation`
- `use-source-key`
- `use-source-pcf`

## UE Context Transfer at Source AMF:

- Sends UE Context with SUPI value to target AMF as per the CLI configuration, when source AMF and target AMF are in different PLMN
- Uses either existing keys or generates new keys, and sends the keys to target AMF during context transfer as per the CLI configuration
- Starts context-transfer-guard timer (configured with greater than zero (0)), when UeRegStatusUpdateReqData contains transfer status as TRANSFERRED

On expiry of the context-transfer-guard timer, source AMF performs the following:

- Triggers the UDM Deregistration internally to clear the local ueContext
- When the UE Context Transfer reason is INIT\_REG, it updates the SMF to release the PDU context
- It releases PDU sessions in the toReleaseSessionList
- The UE-validation reason is handled as follows:
  - Without registration request
  - By omitting integrity check
  - Responding with appropriate data to target AMF
- Clears PCF association, when target AMF sends pcfReselectedInd in transfer update
- Handles reject indication received from target AMF
- Performs horizontal key derivation as per the CLI configuration
- Transfers URI with SUPI as ueContextId to target AMF
- Sends DRX, GMM capability IEs to target AMF
- Increments transfer failure counters including NOT\_TRANSFERRED counters
- Doesn't send SeafData in transfer response in MOBI\_REG\_UE\_VALIDATED when the Individual ueContext is identified with SUPI

## UE Context Transfer handling at Target AMF:

- Sends Reject Indication to source AMF through StatusUpdate message when authentication or security fails

The security algorithm mismatch is handled as follows:

- Authenticates when integrity check fails
  - Recomputes the keys as per the algorithm received from AUSF
  - Regenerates all the keys and ignores the keys received from source AMF.
- Sends failure to source AMF when authentication or security check fails
  - The SUPI as UeContextID is handled as follows:
    - Sends Identity request to UE when message integrity check fails
    - Performs UE authentication with obtained SUPI from UE
    - Sends SUPI as UeContextId, and UE-validated in UeContextTransferReq to source AMF
  - Ignores the PCF information obtained from the source AMF and selects the new PCF based on the CLI configuration. Informs the selection of new PCF using pcfReselectedInd to source AMF in UeRegStatusUpdateReq.

## How It Works

This section describes how this feature works.

## Call Flows

This section describes the key call flow for this feature.

### UE Context Transfer Call Flow

This section describes the UE Context Transfer call flow.

Figure 92: UE Context Transfer Call Flow

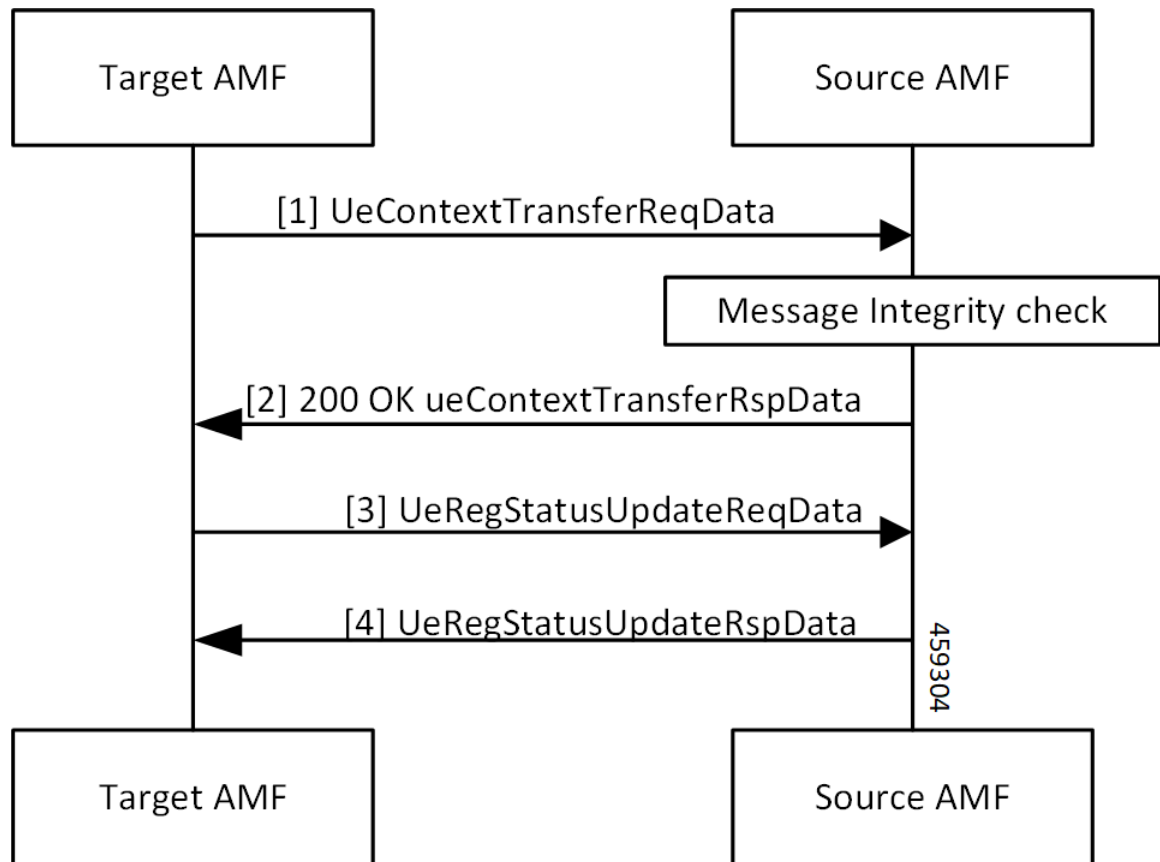


Table 220: UE Context Transfer Call Flow Description

| Step | Description                                                                                                          |
|------|----------------------------------------------------------------------------------------------------------------------|
| 1    | The target AMF sends the UeContextTransferReqData to the source AMF.                                                 |
| 2    | The source AMF performs message integrity check. It responds with 200 OK UeContextTransferRspData to the target AMF. |
| 3, 4 | The target AMF sends UeRegStatusUpdateReqData to the source AMF and receives a response.                             |

## Limitations

This feature has the following limitations in this release:

- Non-3GPP access, trace requirements and event subscriptions are not supported.
- In this release, source and target AMF (T-AMF) are expected to have same S-NSSAI configured. As a result, any PDU sessions that belong to S-NSSAIs not supported on T-AMF are not validated and are not dropped.

- Target AMF selects new PCF and sends **PcfReselectedInd** as true even if CLI is configured to use PCF provided by source AMF.

## Feature Configuration

To configure this feature, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 policy ue-ctx-transfer
 allow-interplmn-supi-transfer { true | false }
 horizontal-key-derivation { true | false }
 use-source-key { true | false }
 use-source-pcf { true | false }
 exit
 timers
 context-transfer-guard
 n14-interface value guard_time_value
 end
end
```

### NOTES:

- **call-control-policy *policy\_name***—Configure the Call Control Policy.
- **policy ue-ctx-transfer**—Configure the ue-ctx-transfer Policy.
- **allow-interplmn-supi-transfer { true | false }**—Specify true or false. If configured true, the source AMF sends UE context with SUPI. The default value is **false**.
- **horizontal-key-derivation { true | false }**—If configured true, the source AMF generates a new key every time. The default value is **false**.
- **use-source-key { true | false }**—If configured true, the target AMF uses a key received from the source AMF. The default value is **true**.
- **use-source-pcf { true | false }**—If configured false, the target AMF sends **pcfReselectedInd** as true in TransferUpdate and the source AMF clears the PCF association. The default value is **true**.
- **context-transfer-guard**—Specify the context transfer guard timer. The AMF starts this timer on receiving the TransferUpdate. On expiry, the AMF clears the PDUs locally.
- **n14-interface value *guard\_time\_value***—Specify the interface n14-interface value in seconds. It must be an integer in the range of 0—35712000. The default value is zero (0).

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy CCP1
 policy ue-ctx-transfer
 allow-interplmn-supi-transfer true
 end
 end
```

```
horizontal-key-derivation true
use-source-key true
use-source-pcf true
exit
timers
context-transfer-guard value 50
end
```



# CHAPTER 64

## UE NITZ Display: Network Identity and Time Zone

Table 221: Feature History

| Feature Name | Release Information | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|--------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NITZ Display | 2024.04.0           | <p>The Network Identity and Time Zone Display (NITZ) feature enables the AMF to deliver the network name and time zone information to the UE. This feature ensures that UE receives accurate network name and time zone data, crucial for network operations and user experience.</p> <p>Command introduced:</p> <p><b>network-name { short <i>short_network_name</i>   full <i>full_network_name</i> }</b>— Used to configure short and full network name under TAI-group and TAI-list level.</p> <p><b>Default Setting:</b> Disabled – Configuration Required</p> |

- [UE NITZ Display: Feature Description, on page 607](#)
- [NITZ Configuration, on page 608](#)
- [Verify NITZ Configuration, on page 610](#)

## UE NITZ Display: Feature Description

The NITZ feature supports the following attributes:

- Full Network Name: The complete name of the network.
- Short Network Name: An abbreviated version of the network name.
- Local Time Zone: The time zone specific to the local area.

- Universal Time Zone: The Coordinated Universal Time (UTC) zone.
- Network Daylight Saving Time: Information about daylight saving time adjustments.

The NITZ information is sent to the UE by AMF as a part of UeConfigurationUpdate messages. NITZ UeConfigurationUpdate messages are triggered under specific conditions, such as:

- Initial Registration: When a UE registers with AMF for the first time.
- Mobility Registration with AMF Change: When a UE moves and changes its AMF.
- Periodic Registration or Local Mobility: Only if the configuration has changed since the last update to the UE.
- Other Trigger Reasons: Such as slice change, where NITZ information is included and has changed since the last update.

The Time zone IE indicates the local time zone of the network. This information needs to be included in several types of messages exchanged between different network functions to ensure that the UE and the network are synchronized in terms of time zone information. Time zone IE is filled in the applicable messages towards SMF/PCF/AMF.

**Note**

- In the UeConfigurationUpdate message, all NITZ-related IEs (full name, short name, local TZ, Universal TZ, DST) are updated even if only one IE has changed. For example, if the full network name changes but the short name stays the same, the AMF still updates both IEs in the next UeConfigUpdate for NITZ.
- Once NITZ parameters are configured or changed, they are not immediately pushed to all existing registered UEs. NITZ information is updated during the next registration or as part of a UeConfigurationUpdate triggered by any other reasons.

## NITZ Configuration

You can configure the NITZ parameters at TAI-group and TAI-list level.

**Note**

Configurations at TAI-list level takes the precedence and in the absence of TAI-list level configuration, TAI-group level configurations are considered.

## Configure Timezone and DST at TAI-Group and TAI-list Level

The flexibility of configuring timezone and Daylight Saving (DST) at TAI-group and TAI-list level allows the AMF to serve areas that have daylight savings time different than that of the AMF. Use this procedure to set the timezone and daylight saving parameters at the TAI-group and TAI-list level.



## Procedure

- 
- Step 1** Enter the configuration mode.
- config**
- Example:**
- ```
[amf] amf# config
```
- Step 2** Configure the TAI-group with the specified name.
- tai-group name** *tai_group_name*
- Example:**
- ```
[amf] amf(config)# tai-group name tai_group1#
```
- Step 3** Set the timezone for the TAI-group. Specify the offset in hours and optionally in minutes or daylight savings time increment.
- timezone offset** { + | - } **hours** *value* [ **minutes** { 0 | 15 | 30 | 45 } | **daylight** { 0 | 1 | 2 } ]
- Specify the offset from UTC in hours. Accepted value must be an integer between 0—14.
- Example:**
- ```
[amf] amf(config-tai-group-tai_group1)# timezone offset + hours 2 minutes 30 daylight 1
```
- Step 4** Configure the TAIs with the specified name.
- tais** { **name** *tai_list_name* | **range** *range* }
- Example:**
- ```
[amf] amf(config)# tais name tai_list1#
```
- Step 5** Set the timezone for the TAI-list. Specify the offset in hours and optionally in minutes or daylight savings time increment.
- timezone offset** { + | - } **hours** *value* [ **minutes** { 0 | 15 | 30 | 45 } | **daylight** { 0 | 1 | 2 } ]
- Specify the offset from UTC in hours. Accepted value must be an integer between 0—14.
- Example:**
- ```
[amf] amf(config-tais-tai_list1)# timezone offset + hours 2 minutes 30 daylight 1
```
- Step 6** Save and commit the configuration.
-

Configure Network Name at TAI-Group and TAI-list Level

The network name can be configured for both short and long names. While there's no specific upper limit for the "Network Name," it must fit within the maximum L3 message size as per 3GPP spec 44.006, Section 8.8.5. This configuration populates the short and long network name IEs in the UE Configuration Update message from the AMF. There is no default configuration; if not set at the TAI-group or TAI-list level, no network name is passed on to the UE Configuration Update message.

Procedure

- Step 1** Enter the configuration mode.
- config**
- Example:**
- ```
[amf] amf# config
```
- Step 2** Configure the TAI-group with the specified name or range.
- tai-group name** *tai\_group\_name*
- Example:**
- ```
[amf] amf(config)# tai-group name tai_group1#
```
- Step 3** Assign a network name to the TAI group. You can specify a full name and a short name for the network.
- network-name { short short_network_name | full full_network_name }**
- Example:**
- ```
[amf] amf(config-tai-group-test1)# network-name full example-name1 short example-name2
```
- Step 4** Configure the TAIs with the specified name.
- tais name** *tai\_list\_name*
- Example:**
- ```
[amf] amf(config)# tais name tai_list1#
```
- Step 5** Assign a network name to the TAIs. You can specify a full name and a short name for the network.
- network-name { short short_network_name | full full_network_name }**
- Example:**
- ```
[amf] amf(config-tai-list-test1)# network-name full example-name1 short example-name2
```
- Step 6** Save and commit the configuration.

## Verify NITZ Configuration

Use the **show running-config tai-group** command to verify the supported features for NITZ.

Following is an example output of the **show running-config tai-group** command.

```
show running-config tai-group
tai-group name test1
 timezone offset + hours 2 minutes 15 daylight 1
 network-name full example-name1 short example-name2
 tais name taillist1
 timezone offset - hours 4 minutes 30 daylight 1
 network-name short example-name2
 ims-voice-over-ps-supported true
```

```
mcc 123 mnc 456
 tac list [10 20 30]
tais name taillist2
ims-voice-over-ps-supported true
mcc 123 mnc 456
 tac list [40 50 60]
exit
exit
exit
```





## CHAPTER 65

# UE Configuration Management Procedures

- [Feature Summary and Revision History, on page 613](#)
- [Feature Description, on page 614](#)
- [How it Works, on page 614](#)
- [Configuring Support for UE Configuration Update Command, on page 618](#)
- [Configuring Paging, on page 619](#)
- [OAM Support, on page 621](#)

## Feature Summary and Revision History

### Summary Data

**Table 222: Summary Data**

|                                          |                                                                                                                                                                                                       |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Applicable Product(s) or Functional Area | AMF                                                                                                                                                                                                   |
| Applicable Platform(s)                   | SMI                                                                                                                                                                                                   |
| Feature Default Setting                  | Enabled - Always-on                                                                                                                                                                                   |
| Related Documentation                    | <ul style="list-style-type: none"><li>• <a href="#">SMS over the Non-Access Stratum Procedures</a></li><li>• <a href="#">AMF Authentication and GUTI Reallocation Configuration Control</a></li></ul> |

### Revision History

**Table 223: Revision History**

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2022.01.0 |

## Feature Description

The AMF supports the generic UE configuration procedure by sending the Configuration Update Command message to the UE when certain parameters are modified. The AMF supports the following parameters in the Configuration Update Command message:

- 5G-GUTI
- TAI list
- SMS indication

For more information, refer to the [UCC 5G AMF Configuration and Administration Guide > UE Configuration Management Procedures](#) chapter.

## How it Works

This section describes how this feature works.

The AMF initiates the Configuration Update Command procedure when it observes a change in the configuration that was previously sent to a UE. Depending on the nature of the configuration that is modified, the AMF communicates with the UE to send an acknowledgment indicating that the configuration has changed or request the UE to register with AMF again.

The AMF checks for the configuration changes and starts the Configuration Update Command after the following procedures are completed:

- PDU establishment
- Xn-based handover
- N2 handover without the AMF change
- UE-initiated service request in the IDLE state without ICSR or without PDU.
- UE-initiated service request in the IDLE state with ICSR.
- Data change notifications from UDM

### Timers

The AMF uses timers to detect configuration changes for UEs in the IDLE mode and UEs in the CONNECTED mode without any signaling activity. If AMF detects changes in configuration for UE in the IDLE mode, the UE is paged. Based on the response, the AMF sends the Configuration Update Command.

- T3555—The AMF transmits the Configuration Update Command message with an acknowledgment request to the UE. While waiting for a response from the UE, AMF starts the T3555 timer. If the timer expires, the AMF retransmits the Configuration Update Command message.
- T3512—When the UE moves to the IDLE mode, the AMF starts an internal timer which is derived from T3512 timer value subtracted by 4 minutes. The resulting value must be greater than 60 seconds. When the timer expires, the AMF checks for any configuration changes and triggers Paging if required.

- **Tidle**—The tidle timer allows AMF to monitor the UE in the CONNECTED mode without any signaling activity for a defined period. On the expiry of this timer, the AMF performs one of the following actions:
  - If the configuration is modified and the feature is enabled, the AMF initiates the UE Configuration Update Command and restarts the tidle timer.
  - If the configuration has not changed or the feature is disabled, the AMF moves the UE to the IDLE state by sending the respective messages towards gNB and SMF.

## TAI List Changes

When the AMF does not receive a response from the UE for the Configuration Update Command triggered due to the changes in the TAI list, then the AMF considers old and new TAI list as valid. When the UE is in the IDLE state, the AMF pages the UE using the old TAI list first. If the UE does not respond and all the paging stages are exhausted, the AMF pages the new TAI list as the final step.

The paging profile for paging the new TAI list is as follows:

```
Action = PAGING_ALL_GNB_ALL_TAI
```

The Action is hardcoded and timeout and MaxPagingAttempts are derived from the T3513 value configured under the call control profile.

## Call Flows

This section describes the key call flows for this feature.

### Sending the New GUTI to UE Call Flow

This section describes the Sending the New GUTI to UE call flow.



---

**Note** The newly allocated GUTI value is sent to the UE using the Configuration Update Command message. The allocation of a new GUTI is possible after the Service Request procedure is complete.

---

The following call flow describes the 5G GUTI reallocation during the Service Request procedure.

Figure 93: Sending the New GUTI to UE Call Flow

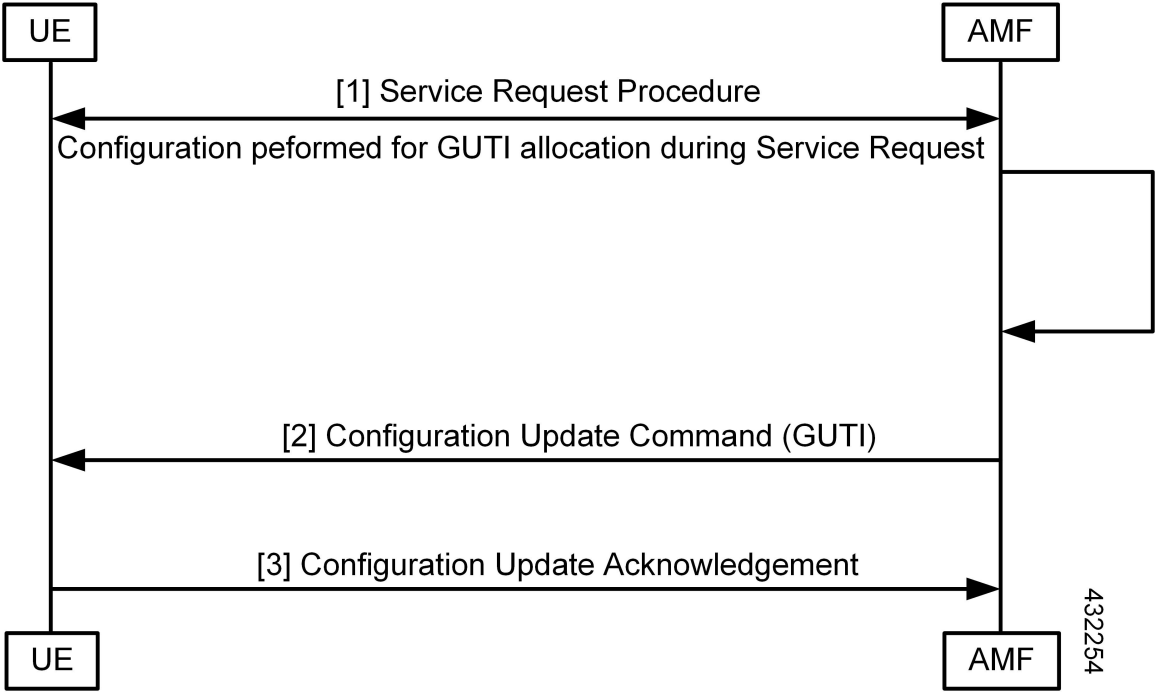


Table 224: Sending the New GUTI to UE Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE sends the Service Request procedure to the AMF to perform both or one of the following: <ul style="list-style-type: none"> <li>Establish the N1 NAS signaling connection.</li> <li>Establish the UP resources for PDU sessions which are activated without UP resources.</li> </ul> |
| 2    | After the Service Request procedure is complete, and the AMF is configured to reallocate a new GUTI, then the new GUTI is allocated and sent in the Configuration Update Command message to UE.                                                                                            |
| 3    | The UE acknowledges the new GUTI by sending the Configuration Update Acknowledgment message.                                                                                                                                                                                               |

## UE Configuration Update Call Flow

This section describes the UE Configuration Update call flow.



Figure 94: UE Configuration Update Call Flow

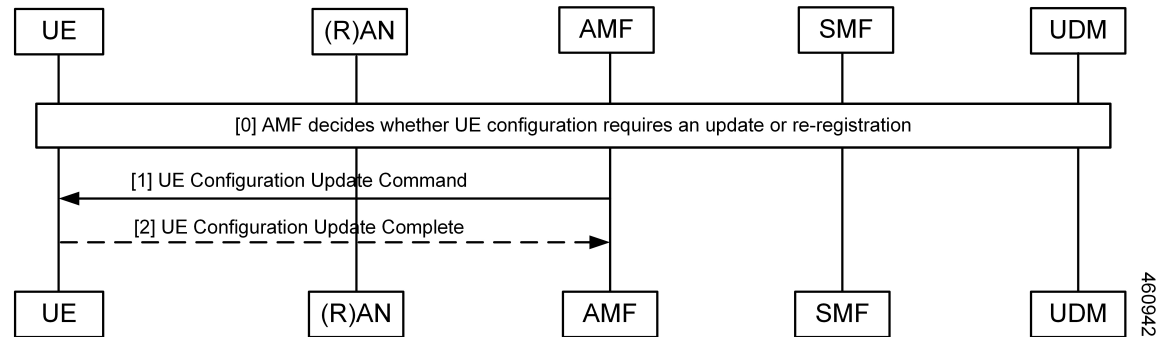


Table 225: UE Configuration Update Call Flow Description


| Step | Description                                                                                                                                                                                            |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | When the AMF detects configuration changes for an UE, it sends a UE Configuration Update Command message to the UE. If the UE is in the idle mode, the AMF triggers paging based on the configuration. |
| 2    | As a response, the UE acknowledges the request and sends the configuration updates to the AMF.                                                                                                         |

## UDM Notification Interaction Call Flow

The UE Configuration Update command is also triggered when UDM notifies AMF about change in subscription data.

This section describes the UDM Notification Interaction call flow.

Figure 95: UDM Notification Interaction Call Flow

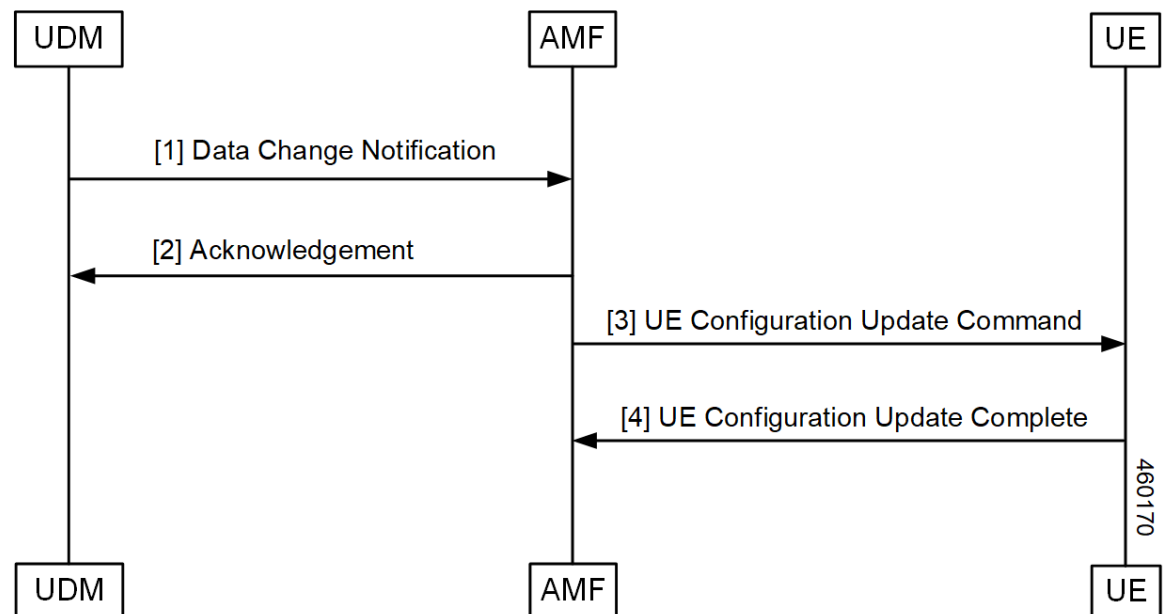

**Table 226: UDM Notification Interaction Call Flow Description**

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                    |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | UDM notifies the subscription data change to AMF.<br><br><b>Note</b><br>In this release, AMF only supports detection of changes to SMS subscription data as a part of UDM Data change notification.                                                                                                                                                                                            |
| 2    | As a response, the AMF acknowledges the change.                                                                                                                                                                                                                                                                                                                                                |
| 3    | AMF compares new subscription data with the existing data. If any change is detected and: <ul style="list-style-type: none"> <li>• If UE is in CONNECTED mode, AMF triggers UE Configuration Update Command to UE.</li> <li>• If UE is in IDLE mode, AMF triggers paging based on the configuration. Post paging response from UE, AMF may trigger UE Configuration Update command.</li> </ul> |
| 4    | UE sends UE Configuration Update Complete to AMF.                                                                                                                                                                                                                                                                                                                                              |

## Standards Compliance

This feature complies with the following standards specifications:

- 3GPP TS 23.501 "System architecture for the 5G System (5GS)"
- 3GPP TS 23.502 "Procedures for the 5G System (5GS)"
- 3GPP TS 24.501 "Non-Access-Stratum (NAS) protocol for 5G System (5GS); Stage 3"

## Configuring Support for UE Configuration Update Command

Configuring this feature involves the following steps:

- Enable the AMF to send the new GUTI allocation requests. For more information, refer to [Configuring New GUTI Allocation, on page 618](#).
- Enable the AMF to send the UE Configuration Update Command. For more information, refer to [Enabling UE Configuration Update, on page 618](#).

## Configuring New GUTI Allocation

To configure the GUTI allocation, use the configuration provided in the [AMF Authentication and GUTI Reallocation Configuration Control](#) chapter.

## Enabling UE Configuration Update

To enable the UE configuration update feature, use the following configuration:

```

config
 amf-global
 call-control-policy policy
 policy ue-cfg-update { on-sms-change [true | false] |
on-tai-change [true | false] }
 end

```

**NOTES:**

- **policy ue-cfg-update**—Enters the UE configuration mode.

This command includes the follow subcommands:

- **on-sms-change**—Starts the UE Configuration Update procedure when changes to SMS configuration is detected.
- **on-tai-change**—Starts UE configuration update procedure when the TAI list is modified.

## Configuring Paging

Configuring this feature involves the following steps:

- Configure paging so that when the UE is in the IDLE state, the AMF starts the timer for UE configuration. For more information, refer to [Configuring the Paging Feature, on page 619](#).
- Configure the paging profile specific to UE configuration. The AMF uses this profile for paging. For more information, refer to [Configuring the Paging Profile, on page 620](#).
- Enable AMF to page the new TAI list when UE doesn't respond to AMF when it pages using the old TAI list. For more information, refer to [Configuring AMF to Page the New TAI List, on page 620](#).
- Configure the T355 timer. The AMF starts this timer while waiting for a UE response. For more information, refer to [Configuring the T3555 Timer, on page 621](#)
- Enable the tidle timer to monitor if the UE is in the CONNECTED mode without any signaling activity for a defined period. For more information, refer to [Enabling the Tidle Timer for Inactive UEs in the Connected Mode, on page 621](#).

## Configuring the Paging Feature

To configure paging, use the following configuration:

```

config
 amf-global
 call-control-policy ccpolicy_name
 policy idle-mode
 paging use-new-tailist
 udm-notification initiate-paging SMS
 ue-cfg-update initiate-paging
 end

```

**NOTES:**

- **policy idle-mode paging use-new-tailist**—Configures AMF to page using the new TAI list as the last step.
- **policy idle-mode udm-notification initiate-paging**—Configures paging which is triggered when the AMF detects configuration changes as part of the UDM data change notification received for UEs in the IDLE mode.
- **policy idle-mode ue-cfg-update initiate-paging**—Configures the AMF to start the internal timer when the UE moves to the IDLE mode, for detecting configuration changes and trigger paging, if required.

## Configuring the Paging Profile

To configure this feature, use the following configuration:

```
config
 amf-global
 paging-map pagingmap_name
 precedence paging_precedence
 trigger-type [uecfg]
 paging-profile-name profile_name
 end
```

### NOTES:

- **paging-map** *pagingmap\_name*—Specify the paging map name. Must be a string in the range of 1–64 characters.
- **precedence** *paging\_precedence*—Specify the precedence level. Must be an integer in the range of 1–255, where 1 indicates the highest precedence and 255 indicates the lowest precedence.
- **trigger-type** [ uecfg ] —Specify the paging trigger type.
- **paging-profile-name** *profile\_name*—Specify the paging profile name. Must be a string in the range of 1–64 characters.

## Configuring AMF to Page the New TAI List

To configure the AMF to page the new TAI list, use the following configuration:

```
config
 amf-global
 call-control-policy ccpolicy_name
 policy idle-mode paging
 use-new-tailist
 end
```

### NOTES:

- **policy idle-mode paging**—Configures the paging for UE configuration for the IDLE mode paging.
- **use-new-tailist**—Configures AMF to page using the new TAI list.

## Configuring the T3555 Timer

To configure the timer, use the following configuration:

```
config
 amf-global
 call-control-policy ccpolicy_name
 timers [t3555]
 retry retry_count
 value value
 end
```

### NOTES:

- **timers [ t3555 ]**—Configure the t3555 timer for the Configuration Update Command message.
- **retry *retry\_count***—Specify the number of retransmission attempts that AMF must perform on expiry of the timer. Must be an integer in the range of 0-5. The default value is 4.




---

**Note** On expiry of the timer, AMF attempts retransmission of the Configuration Update Command message.

---

- **value *value***—Specify the timer value in seconds. Must be an integer in the range of 0-30. The default value is 6 seconds.

## Enabling the Tidle Timer for Inactive UEs in the Connected Mode

To configure the tidle timer, use the following configuration:

```
config
 amf-global
 call-control-policy ccpolicy_name
 timers [tidle]
 value tidle_value
 end
```

### NOTES:

- **timers [ tidle ]** —Configure the tidle the timers. Tidle indicates the duration for which the UE is in the CONNECTED mode without any activity.
- **value *tidle\_value***—Specify the duration for which the UE can stay in the CONNECTED mode without the signaling activity. AMF monitors the UE for the configured amount of time which is the tidle. Must be an integer in the range of 30–25200 seconds.

## OAM Support

This section describes operations, administration, and maintenance information for this feature.

## Statistics

The following statistics are supported for the User Equipment Configuration Management Procedures feature.

- `configuration_update_command`—Captures the number of Configuration Update Command messages sent.
- `configuration_update_complete`—Captures the number of Configuration Update Acknowledgment messages received.



# CHAPTER 66

## Voice over New Radio (VoNR) Support

- [Feature Summary and Revision History, on page 623](#)
- [Feature Description, on page 624](#)
- [Voice over New Radio \(VoNR\) Support, on page 624](#)
- [Emergency Services, on page 629](#)
- [PDN Creation, Modification, and Release, on page 634](#)
- [Emergency Voice Fallback, on page 637](#)

### Feature Summary and Revision History

#### Summary Data

Table 227: Summary Data

|                                          |                                                                                                                                                                                                                                                                                                     |
|------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Applicable Product(s) or Functional Area | AMF                                                                                                                                                                                                                                                                                                 |
| Applicable Platform(s)                   | SMI                                                                                                                                                                                                                                                                                                 |
| Feature Default Setting                  | Multiple PDU Sessions for VoNR: Enabled – Always-on<br><br>Emergency Services: Disabled – Configuration required to enable<br><br>PDN Creation, Modification, and Release: Enabled – Configuration required to disable<br><br>Emergency Voice Fallback: Disabled – Configuration required to enable |
| Related Documentation                    | Not Applicable                                                                                                                                                                                                                                                                                      |

## Revision History

*Table 228: Revision History*

| Revision Details                                                                                                                                                           | Release   |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Enhancement introduced.<br>The Emergency Services Fallback feature allows the UE to reconnect to EUTRAN either through 5GC (4G radio, 5G core) or EPC (4G radio, 4G core). | 2022.04.0 |
| Enhancement introduced.<br>Introduced the emergency services.                                                                                                              | 2022.01.0 |
| First introduced.                                                                                                                                                          | 2021.04.0 |

## Feature Description

The Voice over New Radio (VoNR) feature supports the following functionalities:

- Creating multiple Protocol Data Unit (PDU) sessions
- Emergency services
- Creation, modification, and release of the Packet Data Network

## Voice over New Radio (VoNR) Support

### Feature Description

The AMF provides the IP Multimedia Subsystem (IMS) voice services over the Packet Switched (PS) or VoNR to the subscribers who are connected over the 3GPP Radio Access Network (RAN).

AMF receives the local configuration and capability parameters from UE or gNB. Based on this information, the AMF determines if the UE can support the IMS voice over PS sessions in the specified area. The AMF communicates the IMS support to the UE during the UE registration process.

With this feature, the AMF extends support for the following:

- PDU support for same or different SMF instances
- Discovery of the SMF instances using Tracking Area Identity (TAI as the query parameter
- Reuse of the discovered SMF instances within the cache expiry timeout period
- If used within the cache expiry time out period, the PDU release and update procedure can utilize the SMF instance discovered for the PDU creation procedure.





**Note** The NO\_SUITABLE\_CELLS\_IN\_TRACKING\_AREA is used for rejecting the voice-centric cause.

## How it Works

This section describes how this feature works.

## Call Flows

This section describes the key call flows for this feature.

### Initial or Mobility Registration—IMS VoNR Support Procedure Call Flow

This section describes the Initial or Mobility Registration—IMS VoNR Support Procedure call flow.

**Figure 96: Initial or Mobility Registration—IMS VoNR Support Procedure Call Flow**

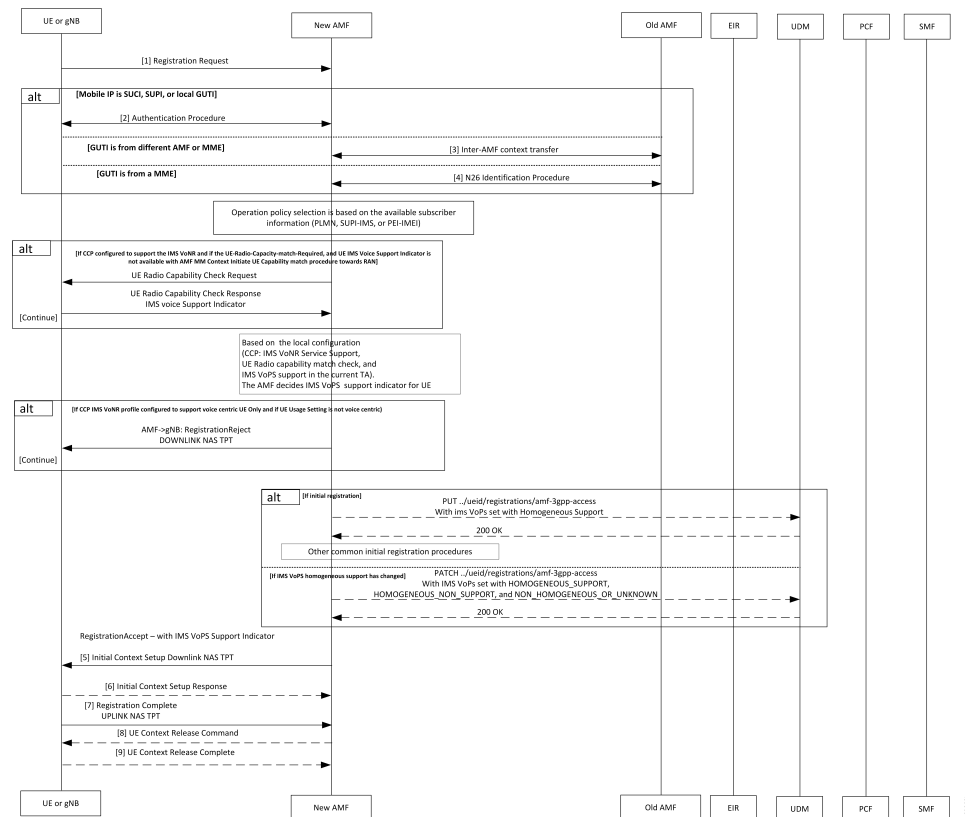



Table 229: Initial or Mobility Registration—IMS VoNR Support Procedure Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>The UE or gNB sends a Registration Request message to the new AMF instance.</p> <p>During the UE registration (initial, mobility update, and AMF change or EPC to 5GC handover) procedure, after the operator policy and Call Control Profiles are associated with the subscriber context, the AMF checks the following:</p> <ul style="list-style-type: none"> <li>• The IMS VoPS service for 3GPP access is supported under CCP.</li> <li>• The UE Radio capability match is required or not.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 2    | The UE or the gNB and the AMF completes the authentication procedure.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 3    | The new AMF and the old AMF process the inter-AMF Context Transfer procedure.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| 4    | <p>The new AMF and the old AMF complete the N26 identification procedure.</p> <p>If the UE Radio Capability matching is required and the AMF has not received or discovered it yet, the AMF starts the UE Radio Capability check procedure towards gNB.</p> <p>The gNB provides the IMS VoPS capability information to AMF and confirms if it is supported or matching. The AMF considers the UE to provide the IMS VoPS services indicator as supported.</p> <p>AMF checks if the IMS VoPS service is configured to be supported or enabled under the current TA of the subscriber and its support in TAI's list object under TAI DB.</p> <p>If the criteria is matched, AMF considers the IMS VoPS support for the subscriber to be supported for current TA.</p> <p>The AMF informs UDM about the IMS VoPS support for the subscriber in all the TAs that AMF serves or in the 3GPP Access Registration procedure to UDM. Based on CCP configuration, if the subscriber is eligible or capable of the IMS VoPS support, AMF provides the <code>imsVoPS</code> parameter to UDM in 3GPP Access Registration message as <code>HOMOGENEOUS_SUPPORT</code>. This parameter indicates the subscriber about the AMF level support of IMS VoPS service and the TA level support.</p> <p>After UDM receives this information, if the IMS service sent to the subscriber (For example, local configuration change) is modified, the AMF updates UDM using the 3GPP Access Registration Modification procedure.</p> |
| 5    | <p>The AMF indicates IMS VoPS service support for the subscriber for current registration area (TA) in Registration Accept message in <code>IMSVoPS-3GPP</code> indicator under 5GS network feature support information element.</p> <p>The UE or the gNB and new AMF processes the Initial Context Setup Downlink NAS TPT.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| 6    | The gNB sends the Initial Context Setup Response to the new AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 7    | The UE or gNB sends the Registration Complete Uplink NAS TPT to the new AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 8    | The new AMF sends the UE Context Release Command to the gNB.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| 9    | The gNB sends the UE Context Release Complete to the new AMF.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |

## Provide UE Information for Terminating Domain Selection Call Flow

This section describes the Provide UE Information for Terminating Domain Selection call flow.

**Figure 97: Provide UE Information for Terminating Domain Selection Call Flow**

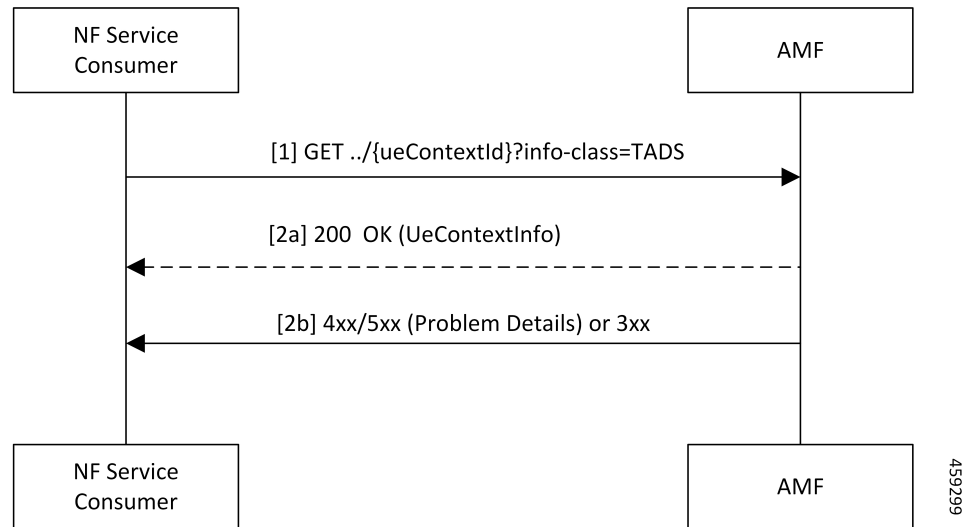

**Table 230: Provide UE Information for Terminating Domain Selection Call Flow Description**

| Step | Description                                                                                                                                                                                                                                                 |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The NF Service Consumer sends a GET request to the URI of the UeContext resource on the AMF with the info-class query parameter set to value to TADS.                                                                                                       |
| 2a   | On success, the AMF returns the 200 OK status code with the payload containing the UeContextInfo data structure that includes the UE information for terminating the domain selection for IMS voice.                                                        |
| 2b   | On failure, the AMF returns one of the HTTP status codes listed in <i>3GPP TS 29.518 Table 6.3.3.3.1-3</i> . The message body contains a ProblemDetails object with the detail set to application errors in <i>TS 29.518</i> and <i>Table 6.3.3.3.1-3</i> . |

## Standards Compliance

This feature complies with the following standards specifications:

- *3GPP TS 23.501, "System architecture for the 5G System (5GS)"*
- *3GPP TS 23.502, "Procedures for the 5G System (5GS)"*
- *3GPP TS 29.518, "5G System; Access and Mobility Management Services; Stage 3"*
- *3GPP TS 38.143, "5G; NG-RAN; NG Application Protocol (NGAP)"*

## Limitations

This feature has the following limitations in this release:

- The AMF doesn't support IMS services over non-3GPP access.

- The IMS VoPS support indication is applicable only for the voice-centric UE usage setting type.

## Feature Configuration

Configuring this feature involves the following steps:

1. Enable AMF to indicate if the UE is capable to handle IMS Voice over Packet-Switched (VoPS) sessions. For more information, refer to [Configuring Support to Indicate IMS VoPS Support, on page 628](#).
2. Configure IMS VoPS service for the configured TALs. For more information, refer to [Configuring the TAL-level IMS VoPS, on page 628](#).

### Configuring Support to Indicate IMS VoPS Support

To configure the support that allows AMF to flag if UE supports the IMS VoPS, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 feature-support-ie
 ims-vops-service-3gpp
 supported { false | true }
 ue-capability-match-required { false | true }
 reject-voice-centric-ue { false | true }
 end
end
```

#### NOTES:

- **feature-support-ie**—Configure the AMF or 5GC features that are supported or unsupported.
- **ims-vops-service-3gpp**—Configure the UE support for the IMS VoPS service over 3GPP access.
- **supported { false | true }**—Enable the 5G VoPS 3GPP. If the UE capability is supported, the UE is configured with the UE Radio capability.
- **ue-capability-match-required { false | true }**—Configure the UE Radio capability based on the requirement match criteria.
- **reject-voice-centric-ue { false | true }**—Configure the UE capability to reject the “voice centric” UEs when the IMS VoPS service is not supported.

Any change to the **reject-voice-centric-ue** CLI takes an effect only on the new subscriber (new Registration Requests) or when `ueUsageSetting` is changed from Data Centric to Voice Centric or conversely. Modifications to **reject-voice-centric-ue** do not have an impact on the ongoing calls.

### Configuring the TAL-level IMS VoPS

A TAI group consists of multiple Tracking Area Lists (TALs). Each TAL can contain one or more TAIs.

To configure TAL-level IMS VoPS, use the following configuration:

```
config
 amf-global
 call-control-policy policy_name
 tai-group tai_group_name
```

```

tais tai_value
 ims-voice-over-ps-supported { false | true }
end

```

#### NOTES:

- **call-control-policy** *policy\_name*—Configure the Call Control Policy.
- **tai-group** *tai\_group\_name*—Specify the TAI group name.
- **tais** *tai\_value*—Specify the TAL element name.
- **ims-voice-over-ps-supported** { **false** | **true** }—Configure support for the IMS VoPS service in the configured TAI list.

## OAM Support

This section describes operations, administration, and maintenance support for this feature.

### Statistics

The following statistic and counter are supported for the Multiple PDU Sessions for VoNR feature.

- The **ims-vops-support** counter captures the reject cause counter.
- **amf\_ngap\_message\_total**—Captures the total number of inbound or outbound messages sent towards AMF. This metric supports the following message types:
  - N2UeRadioCapabilityCheckRsp
  - N2UeRadioCapabilityCheckReq

## Emergency Services

### Feature Description

When the 5GC supports the emergency services, the UE is enabled to handle the emergency through the Registration Accept message on per-TA and per-RAT basis.

This feature allows the UE to fall back to EUTRAN connected to 5GC (4G radio, 5G core) or EUTRAN connected to EPC (4G radio, 4G core). UE switches to the EUTRAN type based on the network capabilities and if the 5G Radio is not NR capable.

### How it Works

This section describes how this feature works.

In the first occurrence, the UE registers with AMF through the initial registration or the mobility update registration procedure with a new AMF instance. In response to the registration request, the AMF sends the emergency service parameters to the UE.

When the emergency profile is modified, the UE is notified through the procedures defined in UE Context Update. To communicate the emergency services configuration, the UE reregisters with the AMF. The reregistration request has the Registration Required indicator in the Update Configuration message.

During the registration procedure, the AMF searches for an emergency profile in the call control policy configured for the UE. If the AMF detects the profile, it sets the following parameters in the Registration Accept message:

- Emergency Services Support in the 5GC network feature
- Emergency Number List in the Registration Accept message
- Additional Emergency Number List in the Registration Accept message

When the UE does not have a valid subscription in a specific area, it can continue to register for the emergency services. This is driven based on the emergency services profile configuration on the AMF.


## Call Flows

This section describes the key call flows for this feature.

### Node-level Call Flow

This section describes the Node-level call flow.

**Figure 98: Node-level Call Flow**

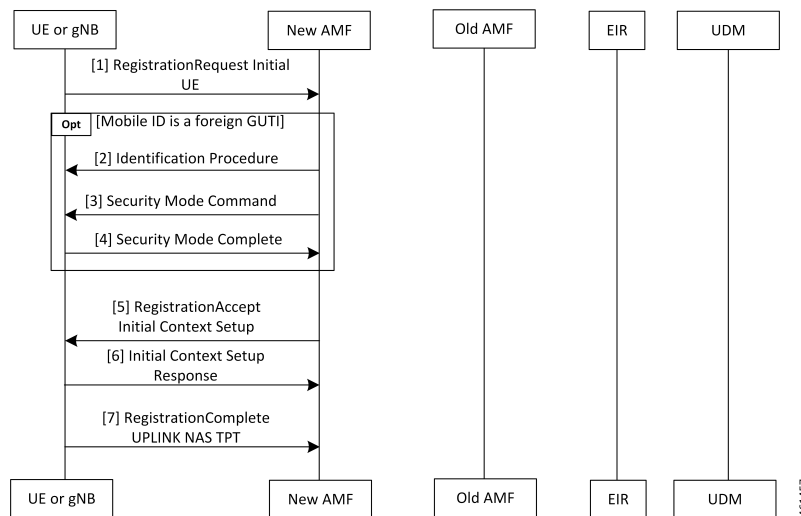

**Table 231: Node-level Call Flow Description**

| Step | Description                                                                                                                                                                                                                                 |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | If the UE wants to register for the emergency services, it sets the registration type to Emergency. When the UE inherits a Globally Unique Temporary ID (GUTI) from the previous 5G registration, it uses GUTI in the Registration Request. |
| 2    | If the UE provides a foreign GUTI, the AMF sends the Identity Check Procedure to retrieve the SUCI of the UE. If the AMF fails and authentication is optional, it retrieves Permanent Equipment Identifier (PEI) of the UE.                 |

| Step | Description                                                                                                                                                                                                                                                                                                                                                           |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 3    | The AMF sends the Security Mode Command message to the UE.                                                                                                                                                                                                                                                                                                            |
| 4    | The UE responds to the AMF with the Security Mode Complete message.                                                                                                                                                                                                                                                                                                   |
| 5    | In the Initial Context Setup Request, if the Emergency Services Profile does not require authentication, the AMF signals support only EIA0 and EEA0 based on the integrity protection and encryption algorithms. This algorithm forces the gNB to process the INITIAL_CONTEXT_SETUP procedure without a specific security algorithm from the UE on the RRC interface. |
| 6    | The gNB responds with INITIAL_CONTEXT_SETUP response to the AMF.                                                                                                                                                                                                                                                                                                      |
| 7    | The UE responds with the Registration Complete message to the gNB.                                                                                                                                                                                                                                                                                                    |

## Standards Compliance

This feature complies with the following standards specifications:

- 3GPP TS 23.501 "System Architecture for the 5G System—Emergency Services"
- 3GPP TS 24.501 "Non-Access-Stratum (NAS) protocol for 5G System (5GS); Stage 3—Registration procedure for initial registration"
- 3GPP TS 23.502 "Procedures for the 5G System (5GS)—Registration procedures"
- 3GPP TS 33.501 "Security architecture and procedures for 5G System—Security aspects of IMS emergency session handling"

## Limitations

AMF does not support the emergency services in the following scenarios:

- E-call interactions
- Congestion interactions
- Identification, authentication, EIR and UDM interaction
- Configuration change in emergency profile communication to UE
- Security procedure failure scenario for normal registration
- Support for EPS type of service request is not available

## Feature Configuration

Configuring this feature involves the following steps:

- Configure the emergency services to enable the UE to handle the emergency requests through the Registration Accept message on per-TA and per-RAT basis. For more information, refer to [Associating the Emergency Profile with the AMF Services or Global Configuration, on page 632](#).

- Configure the emergency profile to define the emergency parameters of the NF. For more information, refer to [Configuring Emergency Profile, on page 632](#).

## Configuring Emergency Profile

To configure this feature, use the following configuration:

```
config
 profile
 emergency-profile emergency_profile_name
 dnn dnn_name
 extended-emergency-num extended_emergency_number
 local-emergency-num local_emergency_number
 slice { slice_name | sst sst | sdt sdt }
 ue-validation-level [auth-only | full | none | supi-only]
 end
```

### NOTES:

- **extended-emergency-num** *extended\_emergency\_number*—Specify the extended emergency number. Accepted value is string in the range of 1–10.
- **local-emergency-num** *local\_emergency\_number*—Specify the local emergency number. Accepted value is string in the range of 1–10.
- **ue-validation-level** [ **auth-only** | **full** | **none** | **supi-only** ]—Specify the UE validation level. This parameter provides the following options:



**Note** For the emergency services, only **none** and **supi-only** options are supported.

- **auth-only**—Specify to allow only authenticated UEs. When **auth-only** is specified the subscription is bypassed.
- **full**—Specify to allow only authenticated UEs with subscription and location validated. When **full** is specified, UEs with normal registration are allowed.
- **none**—Specify to allow any type of UE. The UE without SUPI is attached using the IMEI or PEI. Authentication is optional.
- **supi-only**—Specify to allow UEs with SUPI. The UE without SUPI is rejected. Authentication is optional.

## Associating the Emergency Profile with the AMF Services or Global Configuration

To configure this feature, use the following configuration:

```
config
 amf-global
 operator-policy local
 ccp-name ccp_value
 emergency-profile-name profile_name
 network-element-profile-list [amf | ausf | nssf | pcf | udm | smf
```



```

]
 nf-profile-name network_function_profile
 paging-map-name paging_map_name
end
amf-services amf_service_name
 emergency-profile-name em1 amf_service_name
 amf-name amf_name
 guamis [mcc | mnc | region-id | set-id | pointer]
 local-cause-code-map local_cause_code_type
 locality locality
 operator-policy-name policy_name
 peer-mme [gummei [mcc | mnc | group-id | mme-code | address] |
tai-match [priority | mcc | mnc | tac | address]]
 pgw fqdn fqdn
 relative-amf-capacity capacity
 slices { slice_name | range }
 tai-groups tai_group-name
 validate-Tais [false | true]
end

```

#### NOTES:

- You can associate the emergency profile with the emergency services through the **amf-global** or the **amf-services** configuration.
- **network-element-profile-list [ amf | ausf | nssf | pcf | udm | smf ]**—Specify the selected NF's network element profile name.
- **paging-map-name** *paging\_map\_name*—Specify the 5G paging map name. Accepted value must be in string within the range of 1–64.
- **local-cause-code-map** *local\_cause\_code\_type*—Specify the local cause code condition type. Accepted value is string in the range of 1–64.
- **locality** *locality*—Specify the locality for geo support.
- **pgw fqdn** *fqdn*—Specify the peer for SMF and PGW-C configurations.
- **relative-amf-capacity** *capacity*—Specify the AMF capacity within the range of 0–255. The default range is 127.

## Configuration Verification

To verify the configuration:

```
show full-configuration profile emergency-profile [e911 | e912]
```

#### Sample Output

```

profile emergency-profile e911
 dnn starent1.com
 slice name emergency sst 2 sdt 000003
 ue-validation-level none
 local-emergency-num 100 police
 exit
amf-global
amf-name cisco-amf

```

```

dnn-policy starent.com
 network-element-profile-list smf smf1
exit
dnn-policy starent1.com
 network-element-profile-list smf smf1
exit
operator-policy local
 ccp-name local
 network-element-profile-list ausf ausf1
 network-element-profile-list smf smf1
 network-element-profile-list pcf pcf1
 network-element-profile-list udm udm1
 network-element-profile-list nssf nssf1
 emergency-profile-name e911
exit
exit
 amf-services amf
amf-name AMF
emergency-profile-name e911
exit

```

# PDN Creation, Modification, and Release

## Feature Description

The Packet Data Network (PDN) creation, modification, and release feature enable AMF to implement the following UDM services:

- Initiates the P-CSCF restoration procedure
- Sends a network-triggered PDU Session Update for IMS PDU sessions with the reactivation indication. Based on the indication, SMF takes the appropriate action on the PDU.

During the UDM registration, the AMF sends the callback URL for the P-CSCF restoration and service name. The AMF handles the notification triggered for the Nudm\_UECM\_PCscfRestoration service operation received on the URI. This notification contains information about the restoration status as a failure or success.

- Selects a combined instance of SMF and PGW-C, if the UE sends a request to establish a PDU Session with a DNN and S-NSSAI when the following conditions are true:
  - The UE MM Core Network Capability indicates that the UE supports EPC NAS.
  - (Optional) The UE subscription symbolizes support for interworking with EPS for the specified DNN and S-NSSAI of the HPLMN.




---

**Note** If the conditions are not met, the AMF selects a standalone instance of SMF.

---

## How it Works

This section describes how this feature works.

## Standards Compliance

This feature complies with the following standards specifications:

- 3GPP TS 29.503 "5G System; Unified Data Management Services; Stage 3"
- 3GPP TS 29.502 "5G System; Session Management Services; Stage 3"
- 3GPP TS 23.502 "Procedures for the 5G System (5GS)"


## Call Flows

This section describes the key call flows for this feature.

### SM Context Update Call Flow

This section describes the SM Context Update call flow.

**Figure 99: SM Context Update Call Flow**

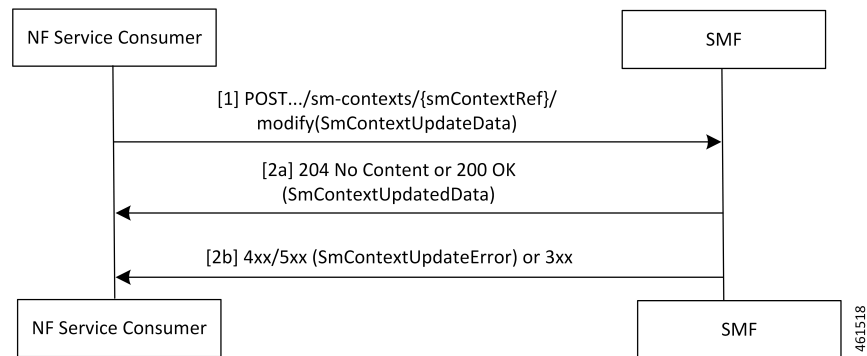

**Table 232: SM Context Update Call Flow Description**

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>The AMF service consumer performs both or one of the following:</p> <ul style="list-style-type: none"> <li>• Updates a particular SM context</li> <li>• Provides N1 or N2 SM information to the SMF through the HTTP POST method (modify custom operation).</li> </ul> <p>The POST request contains the following information:</p> <ul style="list-style-type: none"> <li>• The release IE is set to true.</li> <li>• The cause IE is set to REL_DUE_TO_REACTIVATION.</li> </ul> |

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2a   | <p>The SMF responds with the SmContextUpdatedData data type that contains the following response codes:</p> <ul style="list-style-type: none"> <li>• 204 No Content—The SM context is successfully updated when the SMF does not return information in the response.</li> <li>• 200 OK—The SM context is successfully updated when the SMF returns information in the response.</li> </ul> |
| 2b   | <p>When the SM Context Update fails, the SMF reports an error.</p> <p>For a 4xx or 5xx response, the message body contains an SmContextUpdateError structure.</p>                                                                                                                                                                                                                          |

## Feature Configuration

Configuring this feature involves the following steps:

1. Configure the UDM initiated PCSF restoration procedure at AMF. For more information, refer to [Configuring the PCSF Restoration Feature, on page 636](#).
2. Configure the IMS for identifying the PDU session with DNN name. For more information, refer to [Configuring the IMS for DNN, on page 636](#).
3. Configure the query selection parameter to select the SMF instance that supports SMF and PGW-C. For more information, refer to [Configuring the Query Selection Parameter, on page 637](#).

### Configuring the PCSF Restoration Feature

To configure the PCSF restoration feature, use the following configuration:

```
config
 amf-global
 call-control-policy call_control_policy_name
 feature-support-ie
 pcsf-restoration-supported { true | false }
 end
```

NOTES:

- **call-control-policy** *call\_control\_policy\_name*—Specify the Call Control Policy name.
- **feature-support-ie**—Configure AMF or 5GC features that are supported.
- **pcsf-restoration-supported { true | false }**—Configure the PCSF restoration capability. After enabling this feature, the capability supports only the new calls that are established.

### Configuring the IMS for DNN

To configure the IMS for the DNN, use the following configuration:

```
config
 amf-global
```

```

amf-name amf_name
dnn-policy policy_name
 network-element-profile-list smf
 ims-enabled { true | false }
 end

```

**NOTES:**

- **amf-name** *amf\_name*—Specify AMF name.
- **dnn-policy** *policy\_name*—Specify the DNN policy name.
- **ims-enabled** { **true** | **false** }—Enable or disable IMS for the configured DNN.

## Configuring the Query Selection Parameter

To configure the query parameter, use the following configuration:

```

config
 profile
 network-element smf smf_instance
 query-params [pgwind]
 end

```

**NOTES:**

- **network-element** **smf** *smf\_instance*—Specify the NF instance name to establish the peer configuration.
- **query-params** [ **pgwind** ]—Configure the query parameter that selects the specified SMF instance for SMF and PGW-C support.

# Emergency Voice Fallback

## Feature Description

The Emergency Services Fallback feature allows the UE to reconnect to EUTRAN either through 5GC (4G radio, 5G core) or EPC (4G radio, 4G core). The fallback occurs when the 5G radio does not support the NR. Depending on the network capabilities, the UE selects 5GC or EPC. If the 5G core is unable to support emergency services, the UE falls back on 4G radio on the 4G core.

AMF supports UE Context Transfer messages for subscribers that are registered for emergency services or nonemergency services with emergency PDU sessions.

## How it Works

This section describes how this feature works.


## Call Flows

This section describes the key call flows for this feature.

## Inter AMF (N2\_Idle) Scenario Call Flow

This section describes the Inter-AMF (N2\_Idle) Scenario call flow.

**Figure 100: Inter AMF (N2\_Idle) Scenario Call Flow**

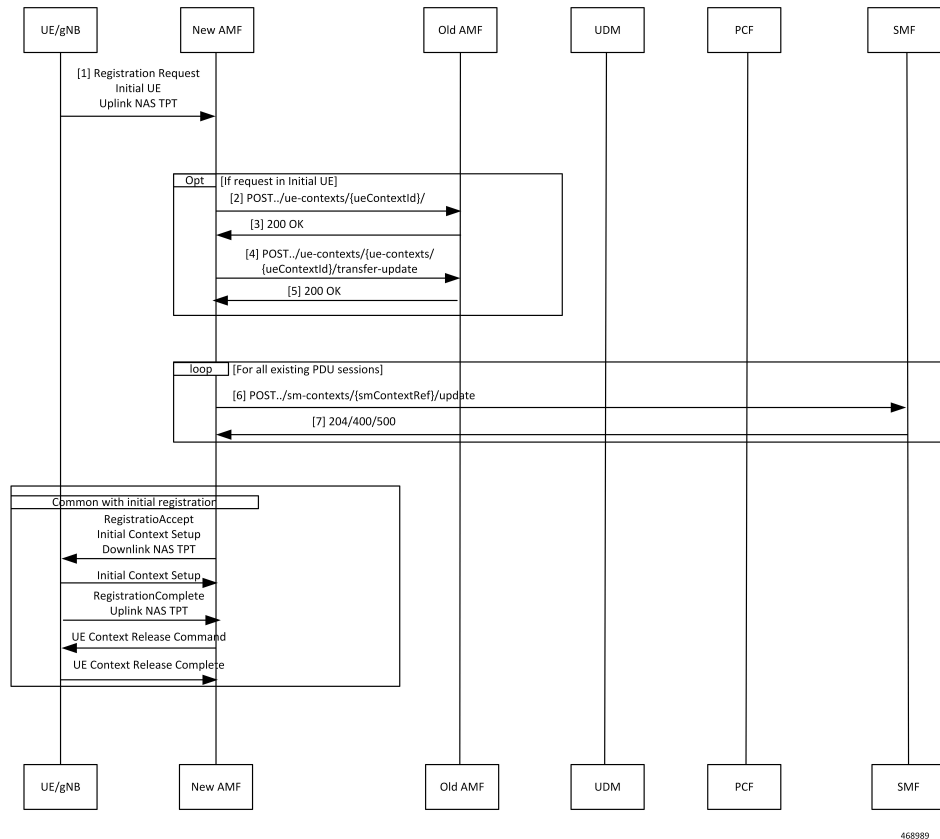

468989

**Table 233: Inter AMF (N2\_Idle) Scenario Call Flow Description**


| Step | Description                                                                                                                                                                                                                                                                                                                                                                          |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE sends a Registration Request with the registration type set to initial or mobility.                                                                                                                                                                                                                                                                                           |
| 2    | The New AMF sends the Post../ue-contexts/{ueContextId}/ request to the Old AMF.<br><br>When the New AMF gets the UE context from the Old AMF, the AMF derives the emergency registration which is based on the following parameters: <ul style="list-style-type: none"> <li>• supiunauthInd is present</li> <li>• if only IMEI is present and the UE is in the same PLMN.</li> </ul> |
| 3    | The Old AMF sends the 200 OK message to the New AMF.                                                                                                                                                                                                                                                                                                                                 |
| 4    | The New AMF sends the Post../ue-contexts/{ueContexts}/{ueContextId}/transfer-update request to the Old AMF.                                                                                                                                                                                                                                                                          |
| 5    | The Old AMF sends the 200 OK message to the New AMF.                                                                                                                                                                                                                                                                                                                                 |

| Step | Description                                                                                                                                                                                                                                                                                                                                                                    |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 6    | The New AMF sends the POST../sm-contexts/{smContextRef}/update to the SMF.                                                                                                                                                                                                                                                                                                     |
| 7    | The SMF sends the 204/400/500 to the New AMF.<br><br>From the Registration Accept message onwards, the call flow is the same as Initial Registration Request except for UDM, PCF, and AUSF. For further information on Initial Registration Request, see <i>Registration with AMF Change Call Flow</i> in the chapter <i>Inter-node Registration Support</i> in this document. |

### AMF-MME (N26\_Idle) Scenario Call Flow

This section describes the AMF-MME (N26\_Idle) Scenario call flow.

**Figure 101: AMF-MME (N26\_Idle) Scenario Call Flow**

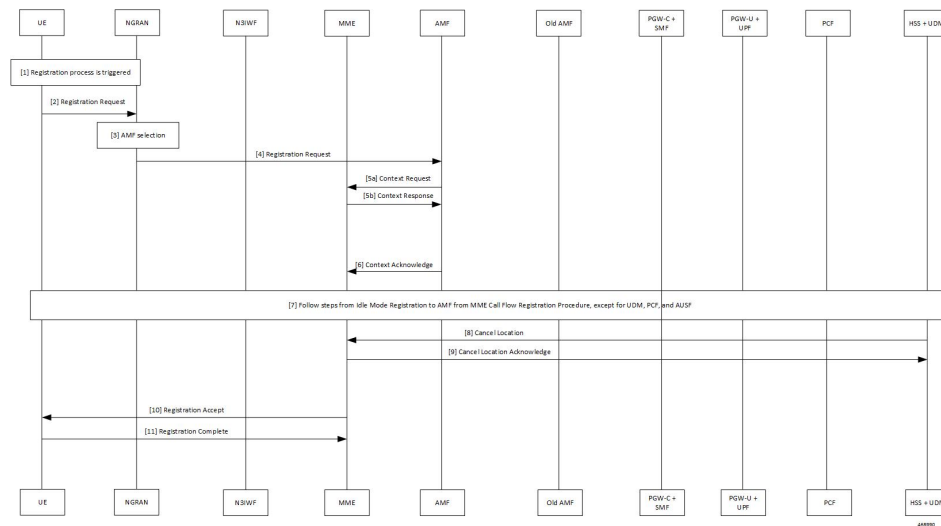

**Table 234: AMF-MME (N26\_Idle) Scenario Call Flow Description**


| Step | Description                                             |
|------|---------------------------------------------------------|
| 1    | The UE starts a registration procedure.                 |
| 2    | The UE sends a Registration Request to the NGRAN.       |
| 3    | The NGRAN performs the AMF selection.                   |
| 4    | The NGRAN forwards the Registration Request to the AMF. |
| 5a   | The AMF sends the Context Request to the MME.           |
| 5b   | The MME sends the Context Response to the AMF.          |
| 6    | The AMF sends the Context Acknowledgment to the MME.    |

| Step | Description                                                                                                                                                                                                                                                                                                               |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7    | From the Context Acknowledgment message onwards, the call flow is the same as Idle Mode Registration to AMF from MME Call Flow except for UDM, PCF, and AUSF. For further information, see <i>Idle Mode Registration to AMF from MME Call Flow</i> in the chapter <i>Internode Registration Support</i> in this document. |
| 8    | The HSS+UDM sends the Cancel Location Request to the MME.                                                                                                                                                                                                                                                                 |
| 9    | The MME sends the Cancel Location acknowledgment to the HSS+UDM.                                                                                                                                                                                                                                                          |
| 10   | The UE sends the Registration Accept message to the AMF.                                                                                                                                                                                                                                                                  |
| 11   | The AMF sends the Registration Complete message to the UE.                                                                                                                                                                                                                                                                |

### Service Request Procedure Call Flow

This section describes the Service Request Procedure call flow.

**Figure 102: Service Request Procedure Call Flow**

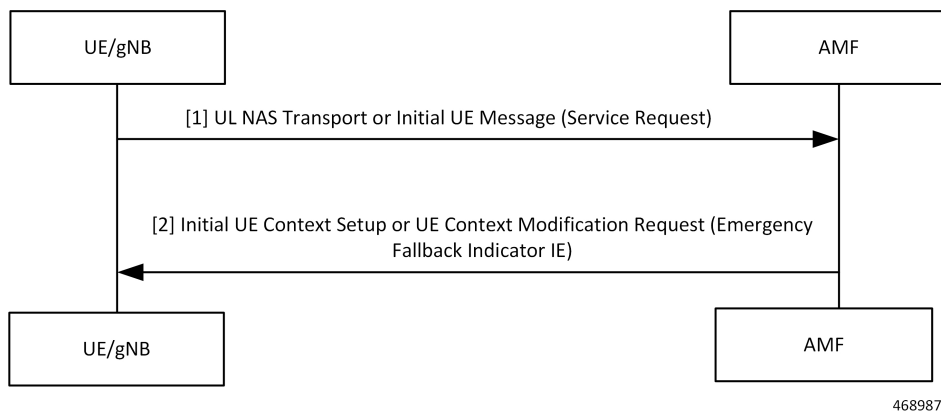


**Table 235: Service Request Procedure Call Flow Description**

| Step | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE sends a Service Request with Service Type set to Emergency Services Fallback.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 2    | <p>The AMF sends the Initial UE Context Setup request or the Modify UE Context request.</p> <p>If the Emergency Fallback feature support CLI is configured at AMF, AMF sets the Emergency Fallback Indication IE toward gNB in either Initial Context Setup Request or UE Context Modification Request along with Service Accept towards UE. The NGAP IE of the target CN is set optionally as EPC or 5GC, if configured; else CN type is not included.</p> <p>If Emergency Fallback feature support CLI is not configured, AMF sends Service Reject with cause NO SUITABLE CELLS IN TRACKING AREA.</p> |

### Emergency Fallback Call Flow

This section describes the Emergency Fallback call flow.

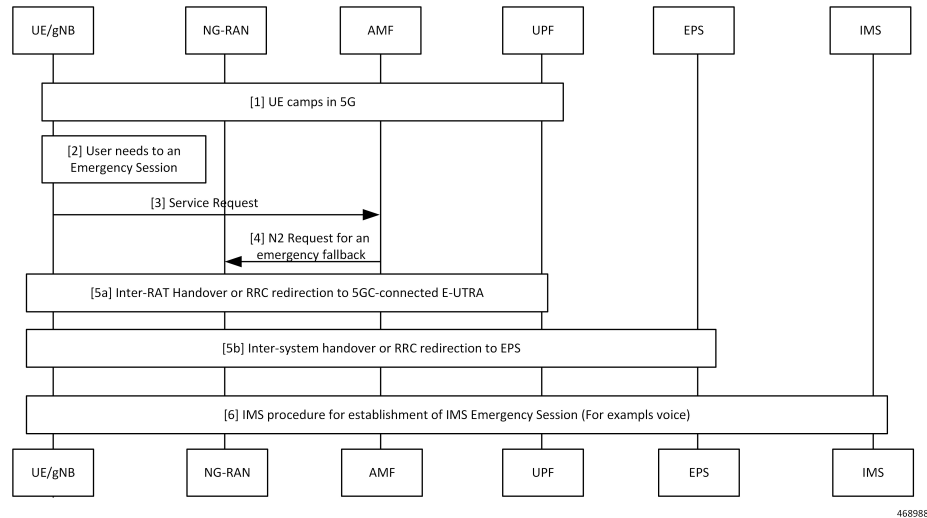

**Figure 103: Emergency Fallback Call Flow**

468988

**Table 236: Emergency Fallback Call Flow Description**

| Step | Description                                                                                                                                            |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | The UE camps in the 5G network.                                                                                                                        |
| 2    | The UE starts an emergency session.                                                                                                                    |
| 3    | The UE sends a Service Request to the AMF. For more information, see <i>Service Request Procedure Call Flow</i> in this chapter.                       |
| 4    | The AMF sends a N2 Request for emergency fallback to the NG-RAN. For more information, see <i>Service Request Procedure Call Flow</i> in this chapter. |
| 5a   | The Inter-RAT handover or RRC is redirected to the 5GC-connected E-UTRA.                                                                               |
| 5b   | The intersystem handover or RRC is redirect to EPS.                                                                                                    |
| 6    | The IMS procedure is started to establish the IMS Emergency Session.                                                                                   |

## Feature Configuration

To configure this feature, use the following configuration:

```

config
 amf-global
 call-control-policy ccp_name
 feature-support-ie
 emergency-fallback supported target-cn { EPC | 5GC }
 end
 end

```

### NOTES:

- **call-control-policy** *ccp\_name*—Specify the Call Control Policy name.

- **feature-support-ie**—Enter the feature configuration mode that allows configuring the supported AMF or 5GC features.
- **emergency-fallback supported target-cn { EPC | 5GC }**—Configure AMF to enable UE to direct the emergency fallback to the 5GC or EPC network.

## Configuration Example

The following is an example configuration.

```
config
 amf-global
 call-control-policy ccp_name
 feature-support-ie
 emergency-fallback supported target-cn EPC
 end
```

## Configuration Verification

To verify the configuration:

```
show full-configuration amf-global call-control-policy local feature-support-ie
emergency-fallback
amf-global
 call-control-policy local
 feature-support-ie emergency-fallback supported
 feature-support-ie emergency-fallback target-cn EPC
 exit
exit
```



## CHAPTER 67

# Xn Handover

- [Feature Summary and Revision History, on page 643](#)
- [Feature Description, on page 643](#)
- [How it Works, on page 644](#)
- [OAM Support, on page 645](#)

## Feature Summary and Revision History

### Summary Data

*Table 237: Summary Data*

|                                          |                     |
|------------------------------------------|---------------------|
| Applicable Product(s) or Functional Area | AMF                 |
| Applicable Platform(s)                   | SMI                 |
| Feature Default Setting                  | Enabled - Always-on |
| Related Documentation                    | Not Applicable      |

### Revision History

*Table 238: Revision History*

| Revision Details  | Release   |
|-------------------|-----------|
| First introduced. | 2021.04.0 |

## Feature Description

AMF now supports Xn Handover. In Xn Handover, the source and destination gNBs are interconnected. The gNB communicates with each other to complete some aspects of the handover and the destination gNB sends

a path switch request. The path switch request contains the source UE AMF NGAP ID used by the AMF to search the UE which is being handed over.

## Supported Scenarios

Path switch request is supported for:

- Single PDU resource
- Multiple PDU resources
- Multiple, with some failed to handover at the target gNB
- Multiple, with some failing at the SMF
- Requests timing out at the SMF
- Expiry of guard timer
- Error conditions at the SMF: handling of the error and sending the right errors so that resources are cleared at the UE
- Error condition at the AMF: If invalid Session ID comes in Path Switch Request Ack, in either ToBeSwitched or FailedToSetup, AMF sends Path Switch Request Failure with Unknown Session ID as the cause.
- If SMF rejects all PDUs, then AMF sends Path Switch Request Failure with cause as HO-Failure-in-target-5GC-ngnran-node-or-target-system.

## How it Works

This section describes how this feature works.

## Call Flows

This section describes the key call flows for this feature.

## Xn Handover Call Flow

This section describes Xn Handover call flow.

Figure 104: Xn Handover Call Flow

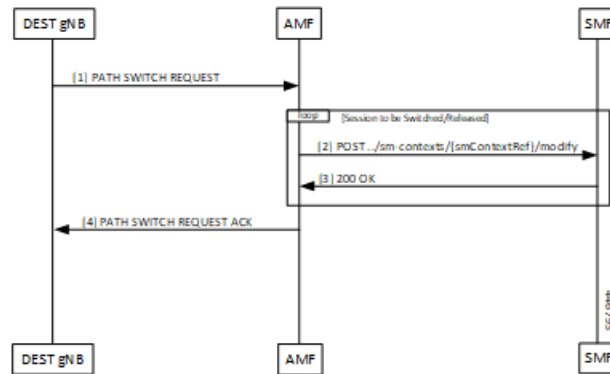


Table 239: Xn Handover Call Flow Description

| Step | Description                                                                                                                                                                                                                                                                                                                |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Once signaling that involves the UE, source and destination gNB have taken the decision to handover, the destination gNB constructs a PATH SWITCH REQUEST with the list of PDU sessions that have successfully switched and the list of PDU sessions that were not successful.                                             |
| 2    | For each of the PDU Sessions, the AMF constructs a SmContext Modify request and sends it to the corresponding SMF to update the tunnel endpoint ID for the gNB.                                                                                                                                                            |
| 3    | The SMF responds with either 200 OK or an appropriate cause code.                                                                                                                                                                                                                                                          |
| 4    | The AMF creates a PATH SWITCH REQUEST ACKNOWLEDGEMENT including PDU sessions that are successful in a success list and the PDU sessions that have failed in a failure list and sends them to the destination gNB.<br><br>The AMF clears the source gNB context and attaches the destination gNB context to the UE context. |

## OAM Support

This section describes operations, administration, and maintenance information for this feature.

### Bulk Statistics Support

- Support for message level statistics for PATH SWITCH REQUEST and PATH SWITCH REQUEST ACKNOWLEDGEMENT, on a per peer gNB basis.
- Support for procedure level statistics for Xn Handover, with Attempted, Success and Failure.





## CHAPTER 68

# Troubleshooting

- [Using CLI Data, on page 647](#)
- [Logs, on page 649](#)
- [Frequently Encountered Scenarios, on page 652](#)

## Using CLI Data

This section describes the show and clear commands that are used for troubleshooting.

### show subscriber

This section describes the **show subscriber** commands for the existing subscribers sessions.

*Table 240: show subscriber Command Output Description*

| Field     | Description                                    |
|-----------|------------------------------------------------|
|           | Output modifiers.                              |
| all       | Displays all the existing subscriber sessions. |
| supi      | Displays subscriber sessions based on SUPI ID. |
| gnodeb-id | Displays the gnodeb-id of the session.         |

### clear subscriber

This section describes the **clear subscriber** commands for the existing subscribers sessions.

*Table 241: clear subscriber Command Output Description*

| Field | Description                         |
|-------|-------------------------------------|
|       | Output modifiers.                   |
| all   | Clears all the subscriber sessions. |

| Field     | Description                                            |
|-----------|--------------------------------------------------------|
| gnodeb-id | Clears the sessions that have the specified gnodeb-id. |
| supi      | Clears the sessions based on the SUPI value.           |

## Monitor Subscriber

Table 242: Feature History

| Feature Name       | Release Information | Description                                                                                                                                                       |
|--------------------|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Monitor Subscriber | 2023.04             | Cisco AMF supports the monsub to capture the N1/N2/N8/N11/N12/N15/N20/N22/N26 interface level messages.<br><br>Default Setting: Disabled – Configuration Required |

## Feature Description

The "Monitor Subscriber" is a debugging and troubleshooting tool which captures the N1/N2/N8/N11/N12/N15/N20/N22/N26 interface level messages. The messages are logged only if SUPI is present or can be found from AMF database.



**Note** The monitor subscriber captures messages exchanged between the AMF and peer nodes only after identifying the subscriber's SUPI. Once it identifies the SUPI, it captures subsequent messages.

Example: When receiving an initial registration request with an encoded SUCI, the monitor subscriber (if enabled with SUPI) captures messages post-authentication after extracting the SUPI.

## Configuring the Monitor Subscriber

Following are the various CLI options available for the monitor subscriber.

### Option: 1

```
[amf-ops-center] amf# monitor subscriber supi imsi-123456789012345 capture-duration 200
internal-messages yes
```

With the preceding CLI option, both internal and external messages are logged for duration of 200 seconds. To explicitly record N1N2 messages, you must configure the 'internal-messages' option with the value "yes."

### Option: 2

```
monitor subscriber supi imsi-123456789012345
```

With the preceding CLI option, only N26 and rest API messages are logged for a duration of 300 secs (default capture duration).



### Option: 3

```
[amf-ops-center] amf# monitor subscriber supi imsi-123456789012345 capture-duration 50000
transaction-logs yes
logging transaction message enable.
```

With the preceding CLI option, transaction level messages are logged which are used for internal debugging.

### Option: 4

```
[amf] amf# monitor subscriber supi imsi-123456789012345 capture-duration 3000
internal-messages yes file-name amf
```

With the preceding CLI option, MonSub file is generated with provided file-name in CLI.

## Limitations

Following are the limitations for the monsub:

- If OAM pod restarts, the previously stored MonSub logs gets deleted.
- Enabling MonSub for a large number or all subscribers in a production environment impacts the system performance. So, it is recommended to enable the Monsub for few or specific subscribers.



#### Note

The CLI option for enabling Monsub with imsi-\* is not recommended in loaded system with bulk calls. As mentioned in the preceding section, specific SUPI (example - imsi-1234567890) should be used to capture the message logging with available options.

## Not Supported

The MonSub doesn't support the following.

- Messages related to Non-UE
- Monsub CLI (Monitor Subscriber IMSI) and (Monitor Subscriber IMEI)
- Messages towards Lawful Intercept (LI) interface
- All the SBI messages towards NRF
- N2 interface messages like NGSETUP, NGAP\_ERROR\_INDICATION and NG\_RESET

## Logs

## Feature Description

AMF utilizes the common logging framework to generate logs from its microservices.

The supported log levels are:

- Error
- Warn

- Info
- Debug
- Trace




---

**Note** Warn level logging takes place during production.

---

## Error

These errors are fatal errors, which can impact service for multiple subscribers.

Examples of the error messages:

- Node discovery of SBA fails after query from NRF and local configuration
- Mandatory IE missing in an NGAP message
- Memory cache startup errors
- Endpoint not found

Sample log:

```
[ERROR] [ApplicationContext.go:1820] [infra.dpd.core] Ping Unsuccessful for client Id 4
Name: amf-protocol-ep0 Setname: amf-protocol-ep Host: amf-protocol-ep Port: 9003 Url: for
[246]
```

## Warn

These errors impact few specific call-flows majorly, but not blockers of functionality.

Example of the warning messages:

- Node discovery of SBA fails but we have more options to retry.
- Mandatory IE missing in a NAS message
- RPC timeout
- Procedural timeout
- Validation failure (not critical)

Example: Registration rejected as Registration request message received registration type as the Reserved registration type.

- External entity sending unexpected or negative response

Example: Handover Cancel, Hand over Failure, or Initial Context Setup Failure

- Unexpected value of objects maintained by AMF

Example: NIL value of transaction

- Unable to fetch a subscriber

Sample log:

```
[WARN] [amf-service.amf-app.messageprocessor] No procedure defined for message type 763
```

## Info

This log level purpose is to know information for cause.

Examples of the information messages:

- Procedural outcome Example: Disabling of ICSR for Registration
- Collision abort, cleanup, suspend, or continue.

Sample log:

```
[INFO] [amf-service.amf-app.auth] Sending N12 Authentication Request to Rest EP
```

## Debug

This log level purpose is to get debug messages.

Example of the debug messages:

- All external exchanged messages
- Sending Registration accept to UE
- State machine changes
- Collision detailed logging

Sample log:

```
[DEBUG] [process.go:1606] [amf-service.amf-app.reg] [supi:123456789012345]
[supi:123456789012345] [1] Preparing registration accept to UE 123456789012345
```

## Trace

This log level purpose is to get content of all external tracing messages.

Example of the trace messages:

- Registration request message
- N1N2 transfer message

Sample log:

```
[TRACE] [process.go:1627] [amf-service.amf-app.reg] [supi:123456789012345]
[supi:123456789012345]
[496] Sending RegistrationAccept:&MsgNas
{N1MsgType:154,N2MsgType:0,N1Msg:&MsgNas_MsgRegistrationAccept
{MsgRegistrationAccept:&ngn_nas.PBRegistrationAccept{ExtendedProtocolDiscriminator:126,SecurityHeaderType:
&SecurityHeaderType{HeaderType:PLAIN_5G_NAS,},MessageIdentity:&MessageType{MessageType:REGISTRATION_ACCEPT,}
,VgsRegistrationResult:&VgsRegistrationResult{EmergencyRegistered:false,NssaaPerformed:false,SmsAllowed:false,
VgsRegistrationResultValue:TGPP_ACCESS,}}
```

## How it Works

This section describes how this feature works.

## Log Tags

Use log tags to tag the logs for specific procedures which are part of a flow or an event. Enabling of AMF logging takes place at different log levels for different log tags.

| Name              | Purpose                      | Example Log tags                                                                                                                                                                              |
|-------------------|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AMF service       | To capture procedures.       | <ul style="list-style-type: none"> <li>• LogTagReg</li> <li>• LogTagPDU, and so on</li> </ul>                                                                                                 |
| Protocol Endpoint | To capture on the interface. | <ul style="list-style-type: none"> <li>• LogTagNas</li> <li>• LogTagNgap</li> <li>• LogTagNonUE</li> </ul>                                                                                    |
| Rest Endpoint     | To capture on the interface. | <ul style="list-style-type: none"> <li>• LogTagN11</li> <li>• LogTagN14</li> <li>• LogTagNRF</li> <li>• LogTagN11OrN14 (N1NMsgTransfer can come from N14/N11 interfaces) and so on</li> </ul> |

## Frequently Encountered Scenarios

### Geo-Replication Pod in Pending State

This section describes how to correct geo-replication pod conflict if shared hardware setup.

#### Problem

After completing Day1 configuration on AMF, when you deploy AMF and SMF on the same mode, the geo-replication pod is in pending state.

The following table lists the ports configured use by a geo-replication pod. The port numbers are for reference purpose only.



**Note** The default base port is 15000. You can change the default base port.

**Table 243: Ports Configured for Geo-replication Pod**

|       |                       |
|-------|-----------------------|
| 15000 | INFRA_PROMETHEUS_PORT |
| 15001 | PPROF_EP_PORT         |
| 15002 | INFRA_ADMIN_PORT      |

|       |                     |
|-------|---------------------|
| 15003 | IPC_EP_PORT         |
| 15004 | GEO_KEEPALIVED_PORT |
| 15005 | INFRA_DIAG_PORT     |

### Resolution

1. Change the default base port for geo-pod from 15000 to other available port range.

```
instance instance-id <instance_id> endpoint geo internal base-port start
<new_port>
```



**Note** *<instance\_id>* should match the *<local\_instance\_id>*.

Configure the relevant keepalive port in the SMI configuration (base\_port + 4) .

This configuration is required only for the GR setup.

2. To verify that the new port change configuration is reflecting, run the following command.

```
kubectl describe pod georeplication-pod-0 -n cn | grep -i port
```

3. SSH to the server where geo-pod is running and run the following command.

```
sudo netstat -plan | grep grpod | grep <port_range> | grep -v
```





## CHAPTER 69

# Sample AMF Configuration

- [Sample Configuration, on page 655](#)

## Sample Configuration

Use **show** command to view the sample configuration that is provided only for reference. You must create and modify your own configuration file according to the specific needs of your deployment.

```
show running-config | nomore
group nf-mgmt NFMGMT1
 nrf-mgmt-group MGMT
 locality LOC1
exit
group nrf discovery NRFDISCOVERY
 service type nrf nnrf-disc
 endpoint-profile
 name ep1
 uri-scheme http
 version
 uri-version v1
 full-version 1.1.1.[1]
 exit
 exit
 endpoint-name en1
 priority 56
 primary ip-address ipv4 209.165.201.3
 primary ip-address port 8095
 exit
 exit
 exit
exit
group nrf mgmt MGMT
 service type nrf nnrf-nfm
 endpoint-profile
 name mgmt-prof
 uri-scheme http
 endpoint-name mgmt-1
 primary ip-address ipv4 209.165.201.3
 primary ip-address port 8095
 exit
 exit
 exit
exit
amf-global
 amf-name AMF1
```

```

call-control-policy CCP1
 disable-init-csr-reg false
 am-policy skip false
 default-slice name n26 sst 1 sdt 000000
 timers t3560 value 10
 timers t3560 retry 3
 timers t3550 value 5
 timers t3550 retry 3
 timers t3570 value 5
 timers t3570 retry 3
 timers t3522 value 5
 timers t3522 retry 3
 timers tidt value 3480
 timers context-transfer-guard n14-interface value 5
 timers context-transfer-guard n26-interface value 5
 timers tpurge value 0
 timers t3502 value 60
 timers t3512 value 3240
 timers ho-supervisory value 500
 tai-group VoPS_tailist
 policy context-release force-smf-update true
 feature-support-ie ims-vops-service-3gpp supported true
 feature-support-ie pcsf-restoration-supported true
 feature-support-ie iwk-n26-supported
 feature-support-ie redirection-eps-fallback supported
 security-algo 1 ciphering-algo 5G-EA0
 security-algo 1 integrity-prot-algo 5G-IA0
 security-algo 2 ciphering-algo 128-5G-EA1
 security-algo 2 integrity-prot-algo 128-5G-IA1
 security-algo 3 ciphering-algo 128-5G-EA2
 security-algo 3 integrity-prot-algo 128-5G-IA2
 paging-priority map arp 5 ngap-paging-priority 0
 paging-priority map arp 8 ngap-paging-priority 2
exit
dnn-policy Spectrum-Mobile
 network-element-profile-list smf SMF1
exit
dnn-policy emergency
 network-element-profile-list smf SMF1
exit
dnn-policy ims
 ims-enabled true
 network-element-profile-list smf SMF1
exit
dnn-policy internet
 network-element-profile-list smf SMF1
exit
dnn-policy intershat
 network-element-profile-list smf SMF1
exit
dnn-policy starent
 network-element-profile-list smf SMF1
exit
dnn-policy starent.com
 network-element-profile-list smf SMF1
exit
operator-policy OPR-POLICY-1
 ccp-name CCP1
 paging-map-name pml
 network-element-profile-list ausf AUSF1
 network-element-profile-list smf SMF1
 network-element-profile-list pcf PCF1
 network-element-profile-list udm UDM1
 network-element-profile-list amf AMF2

```



```
network-element-profile-list nssf NSSF1
exit
supi-policy 001
 operator-policy-name OPR-POLICY-1
exit
supi-policy 314
 operator-policy-name OPR-POLICY-1
exit
paging-map pm1
 precedence 1
 trigger-type arp
 arp-value 5
 paging-profile-name pp4
 exit
 precedence 2
 trigger-type arp
 arp-value 8
 paging-profile-name pp4
 exit
 precedence 3
 trigger-type dereg
 dereg-value udm_init
 paging-profile-name pp4
 exit
 precedence 4
 trigger-type ppi
 ppi-value 7
 paging-profile-name pp1
 exit
 precedence 5
 trigger-type 5qi
 fiveqi-value 5
 paging-profile-name pp4
 exit
 precedence 6
 trigger-type dereg
 dereg-value amf_init
 paging-profile-name pp4
 exit
 precedence 7
 trigger-type ppi
 ppi-value 6
 paging-profile-name pp5
 exit
 precedence 9
 trigger-type dnn
 dnn-value Spectrum-Mobile
 paging-profile-name pp4
 exit
exit
paging-profile pm1
exit
paging-profile pp1
 paging-stage 1
 paging-algo pa1
 exit
exit
paging-profile pp2
 paging-stage 1
 paging-algo pa2
 exit
exit
paging-profile pp3
 paging-stage 2
```

```

 paging-algo pa4
 exit
 paging-stage 3
 paging-algo pa1
 exit
 paging-stage 4
 paging-algo pa2
 exit
 paging-stage 5
 paging-algo pa3
 exit
exit
paging-profile pp4
 paging-stage 1
 paging-algo pa1
 exit
 paging-stage 2
 paging-algo pa2
 exit
 paging-stage 3
 paging-algo pa3
 exit
 paging-stage 4
 paging-algo pa6
 exit
 paging-stage 5
 paging-algo pa4
 exit
exit
paging-profile pp5
 paging-stage 5
 paging-algo pa5
 exit
exit
paging-algo pa1
 action last_gnb_last_tai
 max-n-gnb 3
 t3513-timeout 2
 max-paging-attempts 1
exit
paging-algo pa2
 action last_n_gnb_last_tai
 max-n-gnb 3
 t3513-timeout 3
 max-paging-attempts 2
exit
paging-algo pa3
 action all_gnb_last_tai
 max-n-gnb 5
 t3513-timeout 4
 max-paging-attempts 3
exit
paging-algo pa4
 action all_gnb_all_tai
 max-n-gnb 5
 t3513-timeout 5
 max-paging-attempts 5
exit
paging-algo pa5
 action all_gnb_all_tai
 max-n-gnb 5
 t3513-timeout 10
 max-paging-attempts 5
exit

```

```
paging-algo pa6
 action all_gnb_remaining_tai_seq
 max-n-gnb 5
 t3513-timeout 5
 max-paging-attempts 1
exit
exit
profile network-element amf AMF2
 nf-client-profile AMF2
 failure-handling-profile FH1
 query-params [target-plmn]
exit
profile network-element pcf PCF1
 nf-client-profile PP1
 failure-handling-profile FH1
exit
profile network-element udm UDM1
 nf-client-profile UP1
 failure-handling-profile FH1
exit
profile network-element ausf AUSF1
 nf-client-profile AUP1
 failure-handling-profile FH1
exit
profile network-element smf SMF1
 nf-client-profile SMF1
 query-params [dnn]
exit
profile network-element nssf NSSF1
 nf-client-profile NSSF1
exit
profile nf-client nf-type ausf
 ausf-profile AUP1
 locality LOC1
 priority 30
 service name type nausf-auth
 endpoint-profile EP1
 capacity 30
 uri-scheme http
 endpoint-name EP1
 priority 56
 primary ip-address ipv4 209.165.201.3
 primary ip-address port 8047
 exit
 exit
 exit
 exit
 exit
exit
profile nf-client nf-type udm
 udm-profile UP1
 locality LOC1
 service name type nudm-sdm
 endpoint-profile EP1
 capacity 30
 uri-scheme http
 version
 uri-version v2
 exit
 exit
 endpoint-name EP1
 primary ip-address ipv4 209.165.201.3
 primary ip-address port 9001
 exit
```

```

 exit
 exit
 service name type nudm-uecm
 endpoint-profile EP1
 capacity 30
 uri-scheme http
 endpoint-name EP1
 primary ip-address ipv4 209.165.201.3
 primary ip-address port 9001
 exit
 exit
 exit
 exit
 exit
 exit
 profile nf-client nf-type pcf
 pcf-profile PP1
 locality LOC1
 priority 30
 service name type npcfc-am-policy-control
 endpoint-profile EP1
 capacity 30
 uri-scheme http
 endpoint-name EP1
 priority 30
 primary ip-address ipv4 209.165.201.3
 primary ip-address port 9082
 exit
 endpoint-name EP2
 priority 20
 primary ip-address ipv4 209.165.201.3
 primary ip-address port 9082
 exit
 exit
 exit
 exit
 exit
 exit
 profile nf-client nf-type amf
 amf-profile AMF2
 locality LOC1
 priority 56
 service name type namf-comm
 endpoint-profile EP1
 capacity 30
 priority 30
 uri-scheme http
 endpoint-name EP1
 priority 30
 primary ip-address ipv4 209.165.201.3
 primary ip-address port 9052
 exit
 exit
 exit
 exit
 exit
 exit
 profile nf-client nf-type smf
 smf-profile SMF1
 locality LOC1
 priority 56
 service name type nsmf-pdusession
 endpoint-profile EP1
 capacity 30

```

```
 priority 30
 uri-scheme http
 endpoint-name EP1
 priority 30
 primary ip-address ipv4 209.165.201.3
 primary ip-address port 9050
 exit
exit
exit
exit
exit
exit
profile nf-pair nf-type NRF
 nrf-discovery-group NRFDISCOVERY
 locality client LOC1
 locality preferred-server LOC1
 locality geo-server GEO
exit
profile nf-pair nf-type UDM
 nrf-discovery-group NRFDISCOVERY
 locality client LOC1
 locality preferred-server LOC1
 locality geo-server GEO
 cache invalidation true
exit
profile nf-pair nf-type AMF
 nrf-discovery-group NRFDISCOVERY
 locality client LOC1
 locality preferred-server LOC1
 locality geo-server GEO
exit
profile nf-pair nf-type SMF
 nrf-discovery-group NRFDISCOVERY
 locality client LOC1
 locality preferred-server LOC1
 locality geo-server GEO
 cache invalidation false
exit
profile nf-pair nf-type AUSF
 nrf-discovery-group NRFDISCOVERY
 locality client LOC1
 locality preferred-server LOC1
 locality geo-server GEO
 cache invalidation true
exit
profile nf-pair nf-type PCF
 nrf-discovery-group NRFDISCOVERY
 locality client LOC1
 locality preferred-server LOC1
 locality geo-server GEO
 cache invalidation true
exit
profile nf-pair nf-type NSSF
 nrf-discovery-group NRFDISCOVERY
 locality client LOC1
 locality preferred-server LOC1
 locality geo-server GEO
exit
profile nf-client-failure nf-type udm
 profile failure-handling FH1
 service name type nudm-uecm
 exit
exit
exit
```

```

profile nf-client-failure nf-type pcf
profile failure-handling FH1
 service name type npcf-am-policy-control
 message type PcfAmfPolicyControlCreate
 status-code httpv2 201
 action continue
 exit
exit
exit
exit
exit
amf-services AMF
 amf-name AMF1
 validate-Tais false
 locality LOC1
 operator-policy-name OPR-POLICY-1
 peer-mme gummei mcc 311 mnc 480 group-id 32888 mme-code 36 address 209.165.201.4
 peer-mme gummei mcc 314 mnc 020 group-id 32777 mme-code 1 address 209.165.201.4
 peer-mme tai-match priority 1 mcc 311 mnc 480 tac 23 address 209.165.201.4
 peer-mme tai-match priority 1 mcc 314 mnc 020 tac 23 address 209.165.201.4
 pgw fqdn Spectrum-Mobile smf-network-element-profile SMF1
 guamis mcc 314 mnc 020 region-id 206 set-id 129 pointer 5
 tai-groups TAI-GRP1
 exit
 slices name SLICE1
 sst 3
 sdt 000000
 exit
 slices name SLICE2
 sst 1
 sdt 000000
 exit
exit
exit
tai-group name TAI-GRP1
 tais name TAI-LIST-1
 mcc 314 mnc 020
 tac list [5431 5432 5433]
 exit
 exit
 tais name TAI-LIST-2
 mcc 314 mnc 020
 tac list [20 21 22]
 exit
 exit
 tais name TAI-LIST-3
 mcc 001 mnc 00
 tac list [20 30 40]
 exit
 exit
 tais name TAI-LIST-4
 mcc 314 mnc 020
 tac list [5440 5441 5442 5443 5444 5445 5446]
 exit
 exit
 tais name TAI-LIST-5
 mcc 314 mnc 020
 tac list [50 51 52]
 exit
 exit
exit
exit
tai-group name TAI-GRP2
 tais name TAI-LIST-1
 mcc 314 mnc 020
 tac list [5434 5435 5436]

```

```
exit
exit
tais name TAI-LIST-2
 mcc 314 mnc 020
 tac list [5437 5438 5439 5440]
exit
exit
tais name TAI-LIST-3
 mcc 314 mnc 020
 tac list [40 41 42 43 44]
exit
exit
exit
tai-group name VoPS_tailist
 tais name tai-list1
 ims-voice-over-ps-supported true
 mcc 314 mnc 020
 tac list [1111 2222 3333]
 exit
exit
exit
infra metrics verbose load-balancer
 level production
exit
client outbound host ping timeout 3000
client outbound host ping interval 5000
instance instance-id 1
endpoint li
 replicas 1
 nodes 2
 vip-ip 209.165.201.5
 vip-ip 209.165.201.6
exit
endpoint sctp
 replicas 2
 nodes 2
 vip-ip 209.165.201.7 vip-port 1000
 vip-ipv6 2001:172:17::8 vip-ipv6-port 1000
exit
endpoint nodemgr
 replicas 1
 nodes 2
exit
endpoint gtp
 nodes 1
 retransmission timeout 2 max-retry 5
 vip-ip 209.165.201.6
exit
endpoint service
 replicas 2
 nodes 2
exit
endpoint protocol
 replicas 2
 nodes 2
 vip-ip 209.165.201.6
exit
endpoint ngap
 replicas 2
exit
endpoint sbi
 replicas 2
 loopbackPort 8091
 instancetype IPv4
```

```

vip-ip 209.165.201.9 vip-port 8070
exit
exit
logging level application error
logging level transaction error
logging level tracing error
logging name amf-protocol-ep.amf-app.nas level application error
logging name amf-protocol-ep.amf-app.nas level transaction error
logging name amf-rest-ep.amf-app.nrf level application error
logging name amf-service.amf-app.Config level application error
logging name amf-service.amf-app.Config level transaction error
logging name amf-service.amf-app.NwConfig level application error
logging name amf-service.amf-app.NwConfig level transaction error
logging name amf-service.amf-app.ausf level application error
logging name amf-service.amf-app.ausf level transaction error
logging name amf-service.amf-app.gen level application error
logging name amf-service.amf-app.gen level transaction error
logging name amf-service.amf-app.messageprocessor level application error
logging name amf-service.amf-app.messageprocessor level transaction error
logging name amf-service.amf-app.nas level application error
logging name amf-service.amf-app.nas level transaction error
logging name amf-service.amf-app.ngap level application error
logging name amf-service.amf-app.ngap level transaction error
logging name amf-service.amf-app.pcf level application error
logging name amf-service.amf-app.pcf level transaction error
logging name amf-service.amf-app.subs level application error
logging name amf-service.amf-app.subs level transaction error
logging name amf-service.amf-app.udm level application error
logging name amf-service.amf-app.udm level transaction error
logging name infra.cache_client.core
logging name infra.config.core
logging name infra.message_log.core
logging name infra.resource_monitor.core
logging name infra.sctp_server.core level application error
logging name infra.topology.core
deployment
app-name amf5
cluster-name clu005
dc-name sys005
resource cpu 9000
logical-nf-instance-id 5
exit
k8 label protocol-layer key smi.cisco.com/node-type-2 value protocol
exit
k8 label service-layer key smi.cisco.com/node-type-3 value service
exit
k8 label oam-layer key smi.cisco.com/node-type value oam
exit
k8 label sctp-layer key smi.cisco.com/node-type-2 value protocol
exit
instances instance 1
system-id sys005
cluster-id clu005
slice-name 1
exit
local-instance instance 1
datastore notification-ep host 209.165.201.8
datastore notification-ep port 8012
datastore session-db endpoints datastore-ep-session.cdl-amf.svc.cluster.local
port 8882
exit
system mode running
helm default-repository base-repos
helm repository base-repos

```



```

url https://charts.209.165.201.10.nip.io/amf.2021.04.0.i112
exit
k8s name amf-cndp-b19-3
k8s namespace amf-ins5
k8s nf-name amf
k8s registry docker.209.165.201.10.nip.io/amf.2021.04.m0.i26
k8s single-node false
k8s use-volume-claims true
k8s ingress-host-name 209.165.201.11.nip.io
k8s nodes amf-cndp-b19-3-main-1
 node-type master
 worker-type master
exit
k8s nodes amf-cndp-b19-3-main-2
 node-type master
 worker-type master
exit
k8s nodes amf-cndp-b19-3-main-3
 node-type master
 worker-type master
exit
aaa authentication users user admin
 uid 1117
 gid 1117
 password 1iQJO2wld$7jGfAw6qA3j0mfXeSvk5e/
 ssh_keydir /tmp/admin/.ssh
 homedir /tmp/admin
exit
aaa ios level 0
 prompt "\h> "
exit
aaa ios level 15
 prompt "\h# "
exit
aaa ios privilege exec
 level 0
 command action
 exit
 command autowizard
 exit
 command enable
 exit
 command exit
 exit
 command help
 exit
 command startup
 exit
 level 15
 command configure
 exit
 exit
exit
nacm write-default deny
nacm groups group LI
 user-name [liadmin]
exit
nacm groups group admin
 user-name [admin]
exit
nacm rule-list admin
 group [admin]
 rule li-deny-tap

```

```

 module-name lawful-intercept
 path /lawful-intercept
 access-operations *
 action deny
 exit
rule li-deny-clear
 module-name tailf-mobile-amf
 path /clear/lawful-intercept
 access-operations *
 action deny
exit
rule any-access
 action permit
exit
exit
nacm rule-list confd-api-manager
 group [confd-api-manager]
 rule any-access
 action permit
 exit
exit
nacm rule-list ops-center-security
 group [*]
 rule change-self-password
 module-name ops-center-security
 path /smiuser/change-self-password
 access-operations exec
 action permit
 exit
rule smiuser
 module-name ops-center-security
 path /smiuser
 access-operations exec
 action deny
 exit
exit
nacm rule-list lawful-intercept
 group [LI]
 rule li-accept-tap
 module-name lawful-intercept
 path /lawful-intercept
 access-operations *
 action permit
 exit
rule li-accept-clear
 module-name tailf-mobile-amf
 path /clear/lawful-intercept
 access-operations *
 action permit
 exit
exit
nacm rule-list any-group
 group [*]
 rule li-deny-tap
 module-name lawful-intercept
 path /lawful-intercept
 access-operations *
 action deny
 exit
rule li-deny-clear
 module-name tailf-mobile-amf
 path /clear/lawful-intercept
 access-operations *
 action deny

```

```
exit
exit
```

