



Mobile Policy CDL Client Commands

- [datastore external-endpoints](#), on page 1
- [datastore external-endpoints connection-settings](#), on page 2
- [datastore external-endpoints connection-settings channel](#), on page 2
- [datastore external-endpoints connection-settings keep-alive](#), on page 3
- [datastore primary-endpoint](#), on page 3
- [datastore primary-endpoint connection-settings](#), on page 3
- [datastore primary-endpoint connection-settings channel](#), on page 4
- [datastore primary-endpoint connection-settings keep-alive](#), on page 4

datastore external-endpoints

Configures the list of external datastore endpoints.

Privilege

Security Administrator, Administrator

Command Modes

Exec > Global Configuration

Syntax Description

datastore external-endpoints *external_endpoint*

external-endpoints *external_endpoints*

Specify the external datastore endpoints.

port *port_number*

Specify the port number.

rating *rating*

Specify the rating for the datastore endpoint (higher the better).

Must be an integer.

Default Value: 0.

Usage Guidelines

Use this command to configure the list of external datastore endpoints.

datastore external-endpoints connection-settings

Configures the connection setting parameters.

Privilege Security Administrator, Administrator

Command Modes Exec > Global Configuration

Syntax Description `datastore external-endpoints external_endpoints connection-settings { channel channel_count | keep-alive { keep-alive-time-ms keep_alive_time | keep-alive-timeout-ms keep_alive_timeout } | timeout-ms timeout_in_ms | port port_number | rating rating }`

timeout-ms timeout_ms

Specify the timeout period in milliseconds.

Must be an integer.

Usage Guidelines Use this command to configure connection settings.

datastore external-endpoints connection-settings channel

Configures the number of parallel gRPC channels to open towards each datastore endpoint.

Privilege Security Administrator, Administrator

Command Modes Exec > Global Configuration

Syntax Description `datastore { external-endpoints external_endpoints | primary_endpoint primary_endpoint } connection-settings channel count channel_count`

count channel_count

Specify the number of parallel gRPC channels to open towards each datastore endpoint.

Must be an integer.

Usage Guidelines Use this command to configure the number of parallel gRPC channels to open towards each datastore endpoint.

Example

The following command configures the channel count to 10:

```
datastore external-endpoints sample1 connection-settings channel count 10
```

datastore external-endpoints connection-settings keep-alive

Configures keep-alive parameters.

Privilege Security Administrator, Administrator

Command Modes Exec > Global Configuration

Syntax Description `datastore { external-endpoints external_endpoints | primary_endpoint primary_endpoint } connection-settings keep-alive { keep-alive-time-ms keep_alive_time | keep-alive-timeout-ms keep_alive_timeout }`

keep-alive-time-ms *keep_alive_time*

Specify the idle timeout in milliseconds, after which keepalive notification is sent.

Must be an integer.

keep-alive-timeout-ms *keep_alive_timeout*

Specify the idle timeout period in milliseconds, after which keepalive probe is initiated.

Must be an integer.

Usage Guidelines Use this command to configure the keep-alive parameters.

datastore primary-endpoint

Configures the primary (cluster local) datastore parameters.

Privilege Security Administrator, Administrator

Command Modes Exec > Global Configuration

Syntax Description `datastore primary-endpoint connection-settings { channel channel_count | keep-alive { keep-alive-time-ms keep_alive_time | keep-alive-timeout-ms keep_alive_timeout | timeout-ms } | timeout-ms timeout_in_ms }`

Usage Guidelines Use this command to configure the primary datastore configuration.

datastore primary-endpoint connection-settings

Configures the datastore connection settings.

Privilege Security Administrator, Administrator

Command Modes Exec > Global Configuration

Syntax Description `datastore { external-endpoints external_endpoints | primary_endpoint primary_endpoint } connection-settings`

timeout-ms *timeout_ms*

Specify the timeout period in milliseconds.

Must be an integer.

Usage Guidelines Use this command to configure the datastore connection settings.

datastore primary-endpoint connection-settings channel

Configures the number of parallel gRPC channels to open towards each datastore endpoint.

Privilege Security Administrator, Administrator

Command Modes Exec > Global Configuration

Syntax Description `datastore { external-endpoints external_endpoints | primary_endpoint primary_endpoint } connection-settings channel count channel_count`

count *channel_count*

Specify the number of parallel gRPC channels to open towards each datastore endpoint.

Must be an integer.

Usage Guidelines Use this command to configure the number of parallel gRPC channels to open towards each datastore endpoint.

Example

The following command configures the channel count to 10:

```
datastore external-endpoints sample1 connection-settings channel count 10
```

datastore primary-endpoint connection-settings keep-alive

Configures keep-alive parameters.

Privilege Security Administrator, Administrator

Command Modes Exec > Global Configuration

Syntax Description `datastore { external-endpoints external_endpoints | primary_endpoint primary_endpoint } connection-settings keep-alive { keep-alive-time-ms keep_alive_time | keep-alive-timeout-ms keep_alive_timeout }`

keep-alive-time-ms *keep_alive_time*

Specify the idle timeout in milliseconds, after which keepalive notification is sent.

Must be an integer.

keep-alive-timeout-ms *keep_alive_timeout*

Specify the idle timeout period in milliseconds, after which keepalive probe is initiated.

Must be an integer.

Usage Guidelines

Use this command to configure the keep-alive parameters.

datastore primary-endpoint connection-settings keep-alive