



## Configuring Sx Demux for CUPS

---

- [Configuring Instance Type for Sx Demux](#) , on page 1

### Configuring Instance Type for Sx Demux

Use the following commands to configure the instance type for which the Sx service with Sx Demux is used under Sx Service Configuration Mode.

```
configure
  context context_name
    sx-service service_name
      [ no ] instance-type { controlplane | userplane }
    end
```

#### NOTES:

- **no** : Disables the command.
- **controlplane**: Configures Sx service with Demux on the Control-Plane instance.
- **userplane**: Configures Sx service with Demux on the User-Plane instance.
- Only one instance type can be configured at a given time.
- By default, this command is disabled.

