



---

## Numerics

802.1X

authentication types

in ACU [5-23 to 5-26](#)

in Windows XP [E-3](#)

defined [5-23, E-2](#)

---

## A

About Aironet Client Utility

ACU menu option [9-14](#)

screen [9-14](#)

About icon [9-14](#)

access point

currently associated to [7-10, 8-11](#)

in wireless infrastructure [1-9](#)

IP address

current [7-10, 8-11](#)

in link test [7-19](#)

in site survey active mode [F-12](#)

in site survey passive mode [F-6](#)

MAC address

current [7-10](#)

in link test [7-21](#)

in site survey active mode [F-8](#)

specifying [5-16](#)

mismatches [7-14](#)

name

current [7-10, 8-11](#)

in link test [7-21](#)

in site survey active mode [F-12](#)

in site survey passive mode [F-6](#)

problems

associating to [10-9](#)

authenticating to [10-10](#)

role in wireless network [1-8](#)

security settings [5-31 to 5-35](#)

Access Point Authentication parameter [5-37](#)

access points, reporting those that fail LEAP or EAP-FAST authentication [5-29, 5-34](#)

Ack packets

number received [7-16](#)

number transmitted [7-15](#)

ACM

See Aironet Client Monitor (ACM)

ACU

See Aironet Client Utility (ACU)

ad hoc network

defined [E-6](#)

parameters [5-18 to 5-21](#)

selecting in ACU [5-6](#)

selecting in Windows XP [E-7](#)

wireless LAN configuration [1-8](#)

Advanced (Ad Hoc) screen [5-18](#)

Advanced (Infrastructure) screen [5-14](#)

advanced ad hoc parameters

described [5-2, 5-18](#)

setting [5-18 to 5-21](#)

advanced infrastructure parameters

described [5-2, 5-14](#)

setting [5-14 to 5-17](#)

aged packets [7-14, 7-16](#)

Aironet Client Monitor (ACM)

About screen [8-5](#)

accessing help [8-5](#)

- described [1-6](#)
- exiting [8-6](#)
- finding version [8-5](#)
- icon [8-2](#)
- overview [8-2](#)
- pop-up menu [8-5 to 8-11](#)
- selecting the active profile [8-8 to 8-9](#)
- setting preferences [8-6 to 8-7](#)
- specifying pop-up menu options [8-7](#)
- specifying when it runs [8-7](#)
- Tool Tip window [8-3 to 8-4](#)
- using [8-1 to 8-11](#)
- Aironet Client Monitor parameter (Install Wizard) [3-8](#)
- Aironet Client Monitor Preferences screen [8-6](#)
- Aironet Client Utility (ACU)
  - About icon [9-14](#)
  - accessing help [9-15](#)
  - described [1-6 to 1-7](#)
  - diagnostic tools
    - overview [7-2](#)
    - setting parameters [7-3 to 7-4](#)
    - using [7-4 to 7-22](#)
  - exiting [9-13](#)
  - feature comparison to Windows XP [3-14 to 3-15](#)
  - finding version [9-14](#)
  - icon
    - adding to desktop [9-14](#)
    - deleting from desktop [9-14](#)
    - parameter to place on desktop [3-7](#)
    - using to open ACU [9-12](#)
  - installation program settings, modifying [9-13](#)
  - launching from ACM [8-6](#)
  - opening [9-12](#)
  - overview [1-6 to 1-7](#)
  - Properties screens, overview [5-2](#)
  - screens, buttons described [1-7](#)
  - selecting among several installed client adapters [3-15 to 3-16](#)
- Aironet Client Utility parameter (Install Wizard) [3-7](#)
- Aironet Client Utility Preferences screen [4-10, 7-3, 9-11](#)
- Aironet Client Utility screen [1-6 to 1-7](#)
- Allow Association to both WPA and non-WPA authenticators parameter [5-41, 5-48](#)
- Allow Association to Mixed Cells parameter [5-22](#)
- Allow Automatic PAC Provisioning for This Profile parameter [5-45](#)
- Allow Auto-Provisioning? parameter (Install Wizard) [3-12](#)
- Allow Fast Roaming (CCKM) parameter [5-41, 5-48](#)
- Allow Non-Administrator Users to Save Profiles to the Registry parameter [4-11](#)
- Allow Non-Administrator Users to Save Settings to the Registry parameter (Install Wizard) [3-7](#)
- Allow Saved EAP-FAST User Name and Password parameter (Install Wizard) [3-11](#)
- Allow Saved LEAP User Name and Password parameter (Install Wizard) [3-10](#)
- antenna
  - 2.4-GHz options [C-3](#)
  - described [1-4](#)
  - gains
    - IEEE 802.11a [D-4](#)
    - IEEE 802.11b [D-4 to D-5](#)
  - installation warning [2-3, B-3](#)
  - mode currently being used [7-8](#)
  - placement [F-2](#)
  - specifications [A-5](#)
- Antenna Mode (Receive) parameter
  - ad hoc mode [5-19](#)
  - infrastructure mode [5-15](#)
- Antenna Mode (Transmit) parameter
  - ad hoc mode [5-19](#)
  - infrastructure mode [5-15](#)
- Apply button, function [1-7](#)
- association
  - rejections [7-14](#)
  - time-outs [7-14](#)
- audience of document [xii](#)
- authentication
  - process [5-26, E-4](#)

- rejections [7-14](#)
- time-outs [7-14](#)
- type, status of [7-8](#)
- Authentication Timeout Value parameter
  - for EAP-FAST [5-45](#)
  - for LEAP [5-41](#)
- Automatically Load New Firmware When NDIS Driver Is Updated parameter [9-12](#)
- Automatically Prompt for User Name and Password option
  - for EAP-FAST [5-44](#)
  - for LEAP [5-40](#)
- auto profile selection
  - including a profile in [4-4 to 4-6](#)
  - prioritizing profiles [4-6](#)
  - removing a profile from [4-5](#)
  - restrictions [4-5](#)
  - using [4-7, 8-8](#)
- Auto Profile Selection Management screen [4-5](#)
- Auto Start parameter for ACM (Install Wizard) [3-8](#)

---

## B

- beacon packets
  - number received [7-13](#)
  - number transmitted [7-15](#)
- beacon period, status of [7-10](#)
- Beacon Period parameter [5-21](#)
- beacons received
  - current [7-11, 7-22](#)
  - in site survey active mode [F-11](#)
  - in site survey passive mode [F-5](#)
- boot block firmware, current version of [7-6](#)
- broadcast encryption type, status of [7-8](#)
- broadcast key rotation
  - described [5-30](#)
  - setting on client and access point [5-35](#)
- broadcast packets
  - encryption type used [7-8](#)
  - number received [7-13](#)

- number transmitted [7-15](#)
- broadcast SSIDs [5-4, E-6](#)
- bytes
  - number received [7-13](#)
  - number transmitted [7-15](#)

---

## C

- CAM
  - See Constantly Awake Mode (CAM)
- Canadian compliance statement [C-3](#)
- Cancel button, function [1-7](#)
- Card and Socket Services [2-4](#)
- carrier/correlation (Car/Cor) [5-12](#)
- caution, defined [xiv](#)
- CCKM
  - See fast roaming (CCKM)
- Change Password screen [6-6, 6-12, 6-19, 6-21, 6-26](#)
- Change PIN screen [6-27](#)
- channel
  - current [7-9](#)
  - determining if clear [5-12](#)
  - in site survey active mode [F-12](#)
  - in site survey passive mode [F-7](#)
- Channel parameter [5-10](#)
- channels, supported by regulatory domains
  - IEEE 802.11a [D-2](#)
  - IEEE 802.11b [D-3](#)
- channel set, for which client adapter is configured [7-8](#)
- Cisco.com
  - obtaining documentation [xv](#)
  - obtaining technical assistance [xvi](#)
- Cisco Aironet Wireless LAN Client Adapter Installation Wizard screen [3-3, 9-7](#)
- Cisco Centralized Key Management (CCKM)
  - See fast roaming
- Cisco Wireless LAN Adapter Troubleshooting screen [10-4, 10-5](#)

- CKIP, status of [7-8](#)
  - Clear Channel Assessment parameter [5-12](#)
  - client name [7-9](#)
  - Client Name parameter [5-4](#)
  - client utilities
    - See Aironet Client Utility (ACU) and Aironet Client Monitor (ACM)
  - clock, setting to display seconds [1-7](#)
  - collisions, multiple/single [7-16](#)
  - Commands drop-down menu [6-14, 6-16, 9-13](#)
  - Configure button [5-39, 5-43](#)
  - configuring client adapter
    - deciding between ACU and Windows XP [3-14 to 3-15](#)
    - in ACU [5-1 to 5-61](#)
    - in Windows XP [E-5 to E-19](#)
  - Connection Status screen (ACM) [8-9](#)
  - Constantly Awake Mode (CAM) [5-5](#)
  - Contents ACU menu option [9-15](#)
  - Continuous Link Test parameter
    - in RF link test [7-19](#)
    - in site survey active mode [F-8](#)
  - conventions of document [xiii to xv](#)
  - CRC error
    - in packet [7-13](#)
    - in PLCP header [7-13](#)
  - CTS packets
    - number received [7-16](#)
    - number transmitted [7-15](#)
  - Custom Installation screen (Install Wizard) [3-4](#)
- 
- D**
- Data Encryption parameter [5-35, 5-38, 5-50](#)
  - data encryption type, status of [7-8](#)
  - data rate
    - for which client adapter is configured [7-9](#)
    - mismatches [7-14](#)
    - specifications [A-4](#)
    - when performing a site survey [F-2](#)
  - Data Rate parameter
    - in RF network [5-8](#)
    - in site survey active mode [F-9](#)
  - Data Retries parameter
    - in RF network [5-13](#)
    - in site survey active mode [F-8](#)
  - dBm
    - signal strength units in site survey [F-3](#)
    - signal strength units on Status and Linktest screens [7-4](#)
  - declarations of conformity
    - European community, Switzerland, Norway, Iceland, and Liechtenstein [C-4 to C-6](#)
    - FCC [C-2 to C-3](#)
    - RF exposure [C-6](#)
  - Defaults button, function [1-7](#)
  - default values, displaying [1-7](#)
  - Delay Between Packets parameter [F-9](#)
  - Destination Is Another Cisco/Aironet Device parameter [F-8](#)
  - Destination MAC Address parameter [F-8](#)
  - diagnosing client adapter operation [10-4 to 10-6](#)
  - dipole antenna [1-4](#)
  - Disable Firmware Checking parameter (Install Wizard) [3-6](#)
  - Display Seconds on Clock parameter [1-7](#)
  - diversity antenna [1-4](#)
  - diversity mode [5-15, 5-19](#)
  - document
    - audience [xii](#)
    - conventions [xiii to xv](#)
    - organization [xii to xiii](#)
    - purpose [xii](#)
    - software versions covered [xii](#)
  - documentation
    - feedback [xvi](#)
    - obtaining [xv to xvi, xvii to xviii](#)
    - ordering [xvi](#)
  - domain name
    - including in Windows login
      - for EAP-FAST [5-45](#)

- for LEAP [5-40](#)
- specifying for saved EAP-FAST user name and password [5-44](#)
- specifying for saved LEAP user name and password [5-40](#)

driver

- current version [7-6](#)
- described [1-5](#)
- finding version [9-8](#)

Drivers parameter (Install Wizard) [3-6](#)

duplicate packets, number received [7-13](#)

dynamic WEP keys, overview [5-23 to 5-27, E-2 to E-4](#)

Dynamic WEP option [5-50](#)

## E

### EAP authentication

- described [E-4](#)
- overview [5-23 to 5-27, 6-2, E-2 to E-4](#)
- using [6-1 to 6-29](#)

### EAP-Cisco Wireless

See LEAP authentication

### EAP-FAST authentication

- authenticating after a reboot/login
  - with automatically prompted login [6-9 to 6-11](#)
  - with saved username and password [6-20](#)
  - with Windows username and password [6-4 to 6-5](#)
- authenticating after a reboot/login/card insertion
  - with manually prompted login [6-16 to 6-18](#)
- authenticating after profile selection
  - with manually prompted login [6-13 to 6-15](#)
- authenticating after profile selection/card insertion
  - with automatically prompted login [6-7 to 6-9](#)
  - with saved username and password [6-19](#)
  - with Windows username and password [6-4](#)
- authenticating after your EAP-FAST credentials expire
  - with automatically prompted login [6-12](#)
  - with manually prompted login [6-19](#)
  - with saved username and password [6-21](#)

- with Windows username and password [6-6](#)
- described [5-24 to 5-25](#)
- disabling [5-61](#)
- enabling [5-42 to 5-49](#)
- error messages [10-21 to 10-29](#)
- overview [6-2 to 6-4](#)
- requirements [5-42](#)
- setting on client and access point [5-31](#)
- stages of [6-3](#)
- user databases supported [5-25](#)

EAP-FAST Authentication Status screen

- displayed [6-3](#)
- minimizing [6-4](#)

EAP-FAST option [5-43](#)

EAP-FAST parameter (Install Wizard) [3-11](#)

EAP-FAST security module [5-25, 5-43](#)

EAP-FAST Settings screen [5-43](#)

EAP-SIM authentication

- authenticating if the PIN is stored on the computer [6-29](#)
- authenticating if you are prompted for the PIN [6-28](#)
- described [5-26 to 5-27, E-3, E-4](#)
- disabling [5-61](#)
- enabling
  - in Windows XP [E-16 to E-19](#)
  - through ACU [5-49 to 5-61](#)
- error messages [10-35 to 10-40](#)
- RADIUS servers supported [5-26, E-4](#)
- setting on client and access point [5-33](#)

EAP-SIM parameter (Install Wizard) [3-10](#)

EAP-TLS authentication

- authenticating after a reboot/login [6-22](#)
- authenticating after profile selection/card insertion [6-22](#)
- described [5-25 to 5-27, E-3, E-4](#)
- disabling [5-61](#)
- enabling
  - in Windows XP [E-10 to E-12](#)
  - through ACU [5-49 to 5-57](#)
- RADIUS servers supported [5-25, E-3](#)

setting on client and access point [5-32](#)

EIRP, maximum [1-4, D-4 to D-5](#)

Enable Radio Management Support parameter [5-17](#)

energy detect (ED) [5-12](#)

Enter PAC File Password screen [5-47](#)

Enter PIN screen [6-28](#)

Enter Wireless Network Password screen [6-8, 6-9, 6-13, 6-17](#)

error messages [10-12 to 10-40](#)

errors

- MAC CRC [7-13](#)
- overrun [7-13](#)
- PLCP [7-13](#)

---

**F**

Fast PSP [5-5](#)

fast roaming

- described [5-28](#)
- enabling [5-41, 5-48](#)
- setting on client and access point [5-34](#)
- status of [7-8](#)

FCC

- declaration of conformity statement [C-2 to C-3](#)
- safety compliance statement [2-2](#)

firmware

- current version [7-6](#)
- finding version [9-8](#)
- preventing from being installed with driver [9-11 to 9-12](#)
- upgrading [9-8 to 9-10](#)

Firmware parameter (Install Wizard) [3-6](#)

forcing client adapter to reassociate [F-13](#)

fragmented packets [5-13](#)

Fragment Threshold parameter [5-13](#)

frequencies [D-2, D-3](#)

frequency

- currently being used [7-9](#)
- in site survey active mode [F-12](#)
- in site survey passive mode [F-7](#)

setting [5-10](#)

---

## G

Generic Token Card Properties screen - Windows [5-59, 5-63, 5-65, E-15, E-20](#)

global PACs [5-24, 5-47](#)

---

## H

hardware components of client adapter [1-3 to 1-4](#)

### Help

- button, function [1-7](#)
- drop-down menu [9-15](#)
- icon [9-15](#)

history of RF performance, displayed [7-4](#)

Host Based EAP (802.1x) option [5-50](#)

Host Based EAP (WPA) option [5-50](#)

host-based EAP authentication

- described [5-25 to 5-27](#)
- disabling [5-61](#)
- enabling [5-49 to 5-61](#)
- requirements [5-49](#)

host devices [2-4](#)

---

## I

I/O range [10-8](#)

Import button [5-46](#)

Import Protected Access Credentials (PAC) File screen [5-46](#)

Include Windows Logon Domain with User Name parameter

- for EAP-FAST [5-45](#)
- for LEAP [5-40](#)

infrastructure device, defined [1-3](#)

infrastructure network

- parameters [5-14 to 5-17](#)
- selecting in ACU [5-6](#)

- wireless LAN configuration [1-9](#)
  - inserting client adapter [9-2 to 9-4](#)
  - installation error messages [10-16 to 10-17](#)
  - Installation Path parameter
    - for ACM (Install Wizard) [3-8](#)
    - for ACU (Install Wizard) [3-7](#)
  - Install Wizard file
    - described [1-5](#)
    - finding version [9-5](#)
    - installing [3-2 to 3-13](#)
    - name [3-2](#)
  - interference [2-6](#)
  - interrupt request (IRQ) [10-8](#)
  - introduction to client adapters [1-2 to 1-3](#)
  - IP address
    - of access point in link test [7-19](#)
    - of access point in site survey active mode [F-12](#)
    - of access point in site survey passive mode [F-6](#)
    - of associated access point [7-10, 8-11](#)
    - of client adapter [7-9, 8-4, 8-11](#)
- 
- ## J
- Japan, guidelines for operating client adapters [C-6 to C-7](#)
- 
- ## L
- LEAP authentication
    - authenticating after a reboot/logon
      - with automatically prompted login [6-9 to 6-11](#)
      - with saved username and password [6-20](#)
      - with Windows username and password [6-4 to 6-5](#)
    - authenticating after a reboot/logon/card insertion
      - with manually prompted login [6-16 to 6-18](#)
    - authenticating after profile selection
      - with manually prompted login [6-13 to 6-15](#)
    - authenticating after profile selection/card insertion
      - with automatically prompted login [6-7 to 6-9](#)
    - with saved username and password [6-19](#)
    - with Windows username and password [6-4](#)
    - authenticating after your LEAP credentials expire
      - with automatically prompted login [6-11](#)
      - with manually prompted login [6-18](#)
      - with saved username and password [6-20](#)
      - with Windows username and password [6-6](#)
    - described [5-23 to 5-24, 5-26](#)
    - disabling [5-61](#)
    - enabling [5-38 to 5-42](#)
    - error messages [10-18 to 10-21](#)
    - overview [6-2 to 6-4](#)
    - RADIUS servers supported [5-23](#)
    - requirements [5-38](#)
    - setting on client and access point [5-31](#)
    - stages of [6-3](#)
  - LEAP Authentication Status screen
    - displayed [6-3](#)
    - minimizing [6-4](#)
  - LEAP option [5-39](#)
  - LEAP parameter (Install Wizard) [3-10](#)
  - LEAP security module [5-24, 5-39](#)
  - LEAP Settings screen [5-39](#)
  - LEDs
    - described [1-4](#)
    - interpreting [10-2 to 10-3](#)
    - using to verify installation [3-14](#)
  - link quality
    - in link test [7-22](#)
    - in site survey active mode [F-12](#)
    - in site survey passive mode [F-6](#)
    - overall [7-11, 8-4, 8-10](#)
  - link speed
    - currently being used [7-9, 8-4, 8-11](#)
    - in link test [7-21](#)
    - in site survey active mode [F-12](#)
    - in site survey passive mode [F-6](#)
  - Link Status Meter
    - ACU menu option [7-16](#)

icon [7-16](#)  
 screen [7-17](#)  
 viewing [7-16 to 7-18](#)

Linktest

- ACU menu option [7-18](#)
- screen [7-19, 7-20](#)
- statistics [7-21](#)

Link Test icon [7-18](#)

LM card

- antenna [1-4, 5-15, 5-19](#)
- described [1-2](#)

Load Firmware icon [1-5, 9-10](#)

Load New Firmware

- ACU menu option [1-5, 9-10](#)
- screen [9-10](#)

long radio headers, using [5-9](#)

## M

MAC address

- of access point, specifying [5-16](#)
- of access point in link test [7-21](#)
- of access point in site survey active mode [F-8](#)
- of associated access point [7-10](#)
- of client adapter [7-9](#)

MAC CRC errors [7-13](#)

Manual Login ACU menu option [6-13, 6-16](#)

Manually Prompt for User Name and Password option

- for EAP-FAST [5-44](#)
- for LEAP [5-40](#)

Max Power Savings

- See Max PSP

Max PSP [5-5](#)

Menu Options (Defaults) parameter for ACM (Install Wizard) [3-9](#)

message integrity check (MIC)

- described [5-30, 7-7](#)
- setting on client and access point [5-35](#)
- statistics [7-14 to 7-15](#)

- status of [7-7](#)
- types of [7-7](#)

Michael MIC [7-7](#)

microcellular network [1-9](#)

Microsoft 802.1X supplicant [5-49](#)

mini PCI card

- antenna [1-4, 5-15, 5-19](#)
- described [1-2](#)

MMH MIC [7-7](#)

multicast packets

- encryption type used [7-8](#)
- in site survey active mode [F-9](#)
- number received [7-13](#)
- number transmitted [7-15](#)

## N

network

- configurations [1-8 to 1-9](#)
- prioritizing connections [10-10](#)
- problems connecting to [10-10](#)
- security parameters
  - described [5-2, 5-21](#)
  - setting [5-21 to 5-61](#)
- type, current [7-10](#)

Network Authentication parameter [5-35, 5-38, 5-42, 5-61](#)

network login screen [6-11](#)

Network Security screen [5-21](#)

Network Type parameter [5-6](#)

noise level

- current [7-11](#)
- in link test [7-22](#)
- in site survey active mode [F-11](#)
- in site survey passive mode [F-5](#)

No Network Connection Unless User Is Logged In parameter

- for EAP-FAST [5-45](#)
- for LEAP [5-40](#)

note, defined [xiii](#)



Number of Packets parameter  
 in link test [7-19](#)  
 in site survey active mode [F-8](#)

---

## O

OK button, function [1-7](#)  
 One Time Password screen [6-25](#)  
 online help  
   for ACM [8-5](#)  
   for ACU [9-15](#)  
   for troubleshooting utility [10-7](#)  
 open authentication [5-37, E-7](#)  
 Options drop-down menu [1-7, 4-10, 7-3, 9-11, F-3](#)  
 organization of document [xii to xiii](#)  
 overrun errors [7-13](#)

---

## P

PAC authority  
   choosing [5-45](#)  
   drop-down list [5-46](#)  
 package contents [2-3](#)  
 packets  
   Ack [7-15](#)  
   aged [7-14, 7-16](#)  
   beacon [5-21, 7-10, 7-13, 7-15](#)  
   broadcast [7-8, 7-13, 7-15](#)  
   CTS [7-15, 7-16](#)  
   duplicate [7-13](#)  
   fragmented [5-13](#)  
   linktest statistics [7-21](#)  
   multicast [7-8, 7-13, 7-15, F-9](#)  
   RTS [5-16, 5-20, 7-15](#)  
   site survey active mode statistics [F-11 to F-13](#)  
   site survey passive mode statistics [F-5 to F-7](#)  
   statistics [7-13 to 7-16](#)  
   unicast [7-8, 7-13, 7-15](#)

  with MIC [7-14 to 7-15](#)  
 Packet Size parameter [7-19, F-8](#)  
 Packet Tx Type parameter [F-9](#)  
 PAC provisioning  
   automatic [5-45](#)  
   enabling manual provisioning [5-46 to 5-47](#)  
   manual [5-45](#)  
 PACs  
   deleting [5-49](#)  
   described [5-24](#)  
   entering password [5-47](#)  
   importing [5-46 to 5-47](#)  
   rules for storage [5-24](#)  
 passwords, creating [10-11](#)  
 PC card  
   antenna [1-4, 5-15, 5-19](#)  
   described [1-2](#)  
   inserting [9-2 to 9-3](#)  
   removing [9-4](#)  
 PC-Cardbus card  
   antenna [1-4](#)  
   described [1-2](#)  
   inserting [9-2 to 9-3](#)  
   profiles tied to slot [4-3](#)  
   removing [9-4](#)  
 PCI card  
   antenna [1-4, 5-15, 5-19](#)  
   described [1-2](#)  
   inserting [9-3 to 9-4](#)  
   removing [9-5](#)  
 PEAP authentication  
   authenticating after profile selection/card  
     insertion/reboot/logon [6-23 to 6-25](#)  
   authenticating after your password expires (Windows  
     NT or 2000 domain databases) [6-26](#)  
   authenticating after your PIN expires (OTP  
     databases) [6-27](#)  
   described [5-25 to 5-27, E-3, E-4](#)  
   disabling [5-61](#)  
   enabling

- in Windows XP [E-13 to E-16](#)
    - through ACU [5-49 to 5-59](#)
  - error messages [10-30 to 10-35](#)
  - RADIUS servers supported [5-26, E-3](#)
  - setting on client and access point [5-32](#)
  - PEAP parameter (Install Wizard) [3-11](#)
  - PEAP Properties screen - Windows [5-57, E-14](#)
  - peer-to-peer network [1-8, 5-6](#)
  - percent
    - signal strength units in site survey [F-3](#)
    - signal strength units on Status and Linktest screens [7-4](#)
  - Percent Successful histogram, in site survey active mode [F-9, F-13](#)
  - Percent Success Threshold parameter [F-9](#)
  - physical specifications [A-2](#)
  - Place Icon on Desktop parameter (Install Wizard) [3-7](#)
  - PLCP
    - CRC errors [7-13](#)
    - format errors [7-13](#)
    - length errors [7-13](#)
  - power level
    - current [7-9](#)
    - maximum [D-4 to D-5](#)
  - power levels, available [7-9](#)
  - power save mode, currently being used [7-10](#)
  - Power Save Mode parameter [5-5](#)
  - power specifications [A-5 to A-6](#)
  - Preferences
    - ACU menu option [1-7, 4-10, 7-3, 9-11, F-3](#)
    - icon [1-7, 4-10, 7-3, 9-11, F-3](#)
  - profile
    - active [8-3, 8-10](#)
    - current [7-6](#)
    - default [7-6](#)
    - displayed in ACU title bar [1-7](#)
  - Profile Manager
    - ACU menu option [4-2](#)
    - icon [4-2](#)
    - screen
      - displayed [4-2](#)
      - parameters missing [4-3, 10-10](#)
  - profile manager
    - auto profile selection feature [4-4 to 4-6](#)
    - creating a new profile [4-3](#)
    - deleting a profile [4-8](#)
    - editing a profile [4-7](#)
    - exporting a profile [4-9](#)
    - granting or denying access to non-administrative users [4-10 to 4-11](#)
    - importing a profile [4-9](#)
    - opening [4-2 to 4-3](#)
    - overview [4-2](#)
    - parameters missing [4-3, 10-10](#)
    - renaming a profile [4-8](#)
    - selecting the active profile [4-6 to 4-7](#)
    - setting a profile to default values [4-8](#)
  - Profiles Submenu (ACM) [8-8](#)
  - Program Feature Overrides parameter for ACM (Install Wizard) [3-9](#)
  - Program Folder parameter
    - for ACM (Install Wizard) [3-8](#)
    - for ACU (Install Wizard) [3-7](#)
  - Protected EAP
    - See PEAP authentication
  - purpose of document [xii](#)
- 
- ## Q
- QoS, described [5-62, E-19](#)
  - QoS Packet Scheduler
    - enabling on Windows 2000 [5-62 to 5-64](#)
    - enabling on Windows XP [5-65, E-20](#)
  - quiet mode, turning on or off [3-7, 9-16](#)
- 
- ## R
- radio
    - described [1-3](#)

- specifications [A-3 to A-5](#)
  - turning on or off [8-7, 9-16](#)
  - radio management (RM)
    - described [5-17](#)
    - reports transmitted [7-15](#)
    - requests received [7-13](#)
  - RADIUS servers
    - additional information [5-27, E-4](#)
    - defined [5-23, E-2](#)
    - supported [5-23 to 5-26, E-3, E-4](#)
  - range [5-8, 5-11](#)
  - Reauthenticate
    - ACM menu option [8-8](#)
    - ACU menu option [6-29](#)
  - reauthentication process [6-29](#)
  - receive statistics [7-13 to 7-15](#)
  - regulatory
    - domains [5-10, 7-8](#)
      - IEEE 802.11a [D-2](#)
      - IEEE 802.11b [D-3](#)
    - information [C-2 to ??](#)
    - specifications [A-6](#)
  - related publications [xv](#)
  - removing client adapter [9-4 to 9-5](#)
  - Reset button [7-13, 7-15](#)
  - resource conflicts, resolving
    - in Windows 2000 [10-8](#)
    - in Windows XP [10-9](#)
  - Restart Card
    - ACU menu option [9-15](#)
    - button, in site survey [F-13](#)
  - restarting client adapter [9-15, F-13](#)
  - RF link test
    - prerequisites [7-18](#)
    - running [7-18 to 7-22](#)
    - stopping [7-22](#)
  - RF network parameters
    - described [5-2, 5-7](#)
    - setting [5-7 to 5-13](#)
  - RF Network screen [5-7](#)
  - RF obstructions [2-6, F-3](#)
  - RM reports transmitted [7-15](#)
  - RM requests received [7-13](#)
  - roaming [1-9](#)
  - RTS packets
    - advanced ad hoc parameters [5-20](#)
    - advanced infrastructure parameters [5-16](#)
    - number retransmitted [7-16](#)
    - number transmitted [7-15](#)
  - RTS Retry Limit parameter
    - ad hoc mode [5-20](#)
    - infrastructure mode [5-16](#)
  - RTS Threshold parameter
    - ad hoc mode [5-20](#)
    - infrastructure mode [5-16](#)
- 
- ## S
- safety
    - information [2-2 to 2-3](#)
    - specifications [A-6](#)
  - saved username and password
    - described
      - for EAP-FAST [5-44](#)
      - for LEAP [5-39](#)
    - entering
      - for EAP-FAST [5-44](#)
      - for LEAP [5-40](#)
  - Screen Update Timer parameter [7-4](#)
  - seamless roaming [1-9](#)
  - security features
    - overview [5-23 to 5-30](#)
    - synchronizing [5-31 to 5-35](#)
  - Select a PAC Authority To Use with This Profile
    - parameter [5-46](#)
  - Select A Wireless LAN Adapter Card screen [3-15](#)
  - Select Network Component Type screen [5-63](#)
  - Select Network Service screen [5-64](#)

## Select Profile

ACM menu option [8-8 to 8-9](#)ACU menu option [4-4](#)icon [4-4](#)screen [4-4](#)sensitivity [A-5, F-2](#)serial number of client adapter [7-6](#)server-based authentication, status of [7-7](#)Set Quiet Mode? parameter (Install Wizard) [3-7](#)Setup button, in site survey [F-7](#)shared authentication [E-7](#)shared key authentication [5-37](#)

short radio headers

status of [7-6](#)using [5-9](#)Show History parameter [7-4](#)

signal quality

current [7-11](#)in link test [7-21](#)in site survey active mode [F-11](#)in site survey passive mode [F-5](#)on Link Status Meter screen [7-17](#)

signal strength

as a percentage [7-4, F-3](#)current [7-11](#)in dBm [7-4, F-3](#)in link test [7-21](#)in site survey active mode [F-11](#)in site survey passive mode [F-5](#)on Link Status Meter screen [7-17](#)Signal Strength Display Units parameter [7-4](#)

signal to noise ratio

current [7-11](#)in link test [7-22](#)in site survey active mode [F-12](#)in site survey passive mode [F-6](#)SIM Authentication Properties screen [5-60](#)SIM Authentication Properties screen - Windows XP [E-18](#)

site requirements

for client devices [2-6](#)for infrastructure devices [2-5](#)

Site Survey

Active Mode screen [F-10](#)Active Mode Setup screen [F-7](#)ACU menu option [F-3](#)icon [F-3](#)Passive Mode screen [F-4](#)

site survey

active mode

overview [F-2](#)setting parameters [F-8 to F-9](#)starting [F-9](#)statistics [F-11 to F-13](#)using [F-7 to F-13](#)exiting [F-7, F-13](#)guidelines [F-2](#)

passive mode

overview [F-2](#)statistics [F-5 to F-7](#)using [F-3 to F-7](#)specifying signal strength units [F-3](#)Smart Card or other Certificate Properties screen -  
Windows [5-55, E-11](#)

software

installing [3-2 to 3-13](#)procedures [9-5 to 9-15](#)uninstalling [9-6 to 9-7](#)verifying installation [3-14](#)

software components

custom installation parameters [3-6 to 3-12](#)described [1-5 to 1-7](#)software required for WPA [2-4, 5-27, 5-49, E-4](#)software versions covered in document [xii](#)

specifications

physical [A-2](#)power [A-5 to A-6](#)radio [A-3 to A-5](#)regulatory compliance [A-6](#)

- safety [A-6](#)
  - Specified Access Point 1- 4 parameters [5-16](#)
  - spread spectrum [1-3](#)
  - SSID
    - current [7-10, 8-3, 8-11](#)
    - mismatches [7-14](#)
  - SSID1 parameter [5-4](#)
  - SSID2 parameter [5-4](#)
  - SSID3 parameter [5-4](#)
  - Start After Install parameter for ACM (Install Wizard) [3-8](#)
  - Start button
    - function [1-7](#)
    - in RF link test [7-20](#)
    - in site survey [F-9](#)
  - Static Password screen [6-24](#)
  - static WEP
    - disabling [5-38](#)
    - procedures [5-35 to 5-38](#)
    - with open authentication, setting on client and access point [5-31](#)
    - with shared key authentication, setting on client and access point [5-31](#)
  - Static WEP Keys
    - button [5-35, 5-37](#)
    - screen [5-35](#)
  - static WEP keys
    - entering [5-35 to 5-37](#)
    - guidelines for entering
      - in ACU [5-36](#)
      - in Windows XP [E-8](#)
    - overview [5-23, E-2](#)
    - overwriting [5-37](#)
    - selecting transmit key [5-36](#)
    - size of [5-36](#)
  - Static WEP option [5-35](#)
  - Statistics
    - ACU menu option [7-12](#)
    - icon [7-12](#)
    - screen [7-12](#)
  - statistics
    - client adapter, viewing [7-12 to 7-16](#)
    - link test [7-21](#)
    - receive [7-13 to 7-15](#)
    - site survey
      - active mode [F-11 to F-13](#)
      - passive mode [F-5 to F-7](#)
    - transmit [7-15 to 7-16](#)
  - Status
    - ACU menu option [7-4, 9-8](#)
    - icon [7-4, 9-8](#)
    - screen [7-5](#)
  - status of client adapter
    - in ACM Connection Status screen [8-9 to 8-11](#)
    - in ACM Tool Tip window [8-4](#)
    - in ACU status bar [1-7](#)
    - in ACU Status screen [7-4 to 7-11](#)
    - in link test [7-21](#)
    - in Windows XP [E-21](#)
  - Stop button
    - function [1-7](#)
    - in site survey active mode [F-13](#)
  - strong passwords, creating [10-11](#)
  - system parameters
    - described [5-2, 5-3](#)
    - setting [5-3 to 5-6](#)
  - System Parameters screen [5-3](#)
  - system requirements [2-4 to 2-5](#)
- 
- ## T
- Taiwan, administrative rules for client adapters [C-7 to ??](#)
  - technical assistance, obtaining [xvi to xvii](#)
  - Temporal Key Integrity Protocol (TKIP)
    - described [5-30](#)
    - setting on client and access point [5-35](#)
    - status of [7-8](#)
  - temporary username and password
    - automatically prompt for

- for EAP-FAST [5-44](#)
    - for LEAP [5-40](#)
  - described
    - for EAP-FAST [5-44](#)
    - for LEAP [5-39](#)
  - manually prompt for
    - for EAP-FAST [5-44](#)
    - for LEAP [5-40](#)
  - selecting options
    - for EAP-FAST [5-44](#)
    - for LEAP [5-40](#)
  - using Windows credentials
    - for EAP-FAST [5-44](#)
    - for LEAP [5-40](#)
  - throughput [5-5, 5-8, 5-9, 5-13](#)
  - TKIP option, in Windows XP [5-53, E-8](#)
  - transmit key [5-36](#)
  - Transmit Power parameter [5-11](#)
  - transmit statistics [7-15 to 7-16](#)
  - Troubleshooting ACU menu option [10-4](#)
  - troubleshooting information, accessing [10-2](#)
  - troubleshooting utility
    - accessing help [10-7](#)
    - activating from ACM [8-6](#)
    - saving detailed report to text file [10-6 to 10-7](#)
    - using [10-4 to 10-7](#)
  - Turn Quiet Mode Off, ACU menu option [9-16](#)
  - Turn Quiet Mode On, ACU menu option [9-16](#)
  - Turn Radio Off
    - ACM menu option [8-8](#)
    - ACU menu option [9-16](#)
  - Turn Radio On
    - ACM menu option [8-8](#)
    - ACU menu option [9-16](#)
  - in site survey active mode [F-9](#)
    - number received [7-13](#)
    - number transmitted [7-15](#)
  - uninstalling client adapter software [9-6 to 9-7](#)
  - unpacking the client adapter [2-3](#)
  - Unplug or Eject Hardware icon (Windows) [9-4](#)
  - upgrading client adapter software [3-2 to 3-13](#)
  - upgrading firmware [9-8 to 9-10](#)
  - up time
    - statistic [7-15](#)
    - status of [7-10](#)
  - Use Another Application to Configure My Wireless Settings option [4-7](#)
  - Use Auto Profile Selection option [4-7, 8-8](#)
  - Use Other Configuration Application (ACM) [8-8](#)
  - User Prompt screen [6-10, 6-15, 6-17](#)
  - Use Saved User Name and Password option
    - for EAP-FAST [5-44](#)
    - for LEAP [5-39](#)
  - Use Selected Profile option [4-6](#)
  - Use Short Radio Headers parameter [5-9](#)
  - Use Temporary User Name and Password option
    - for EAP-FAST [5-44](#)
    - for LEAP [5-39](#)
  - Use Windows Logon User Name and Password option
    - for EAP-FAST [5-44](#)
    - for LEAP [5-40](#)
  - Use Windows to configure my wireless network settings parameter - Windows XP [5-52, E-6](#)
- 
- ## W
- Wake Duration parameter [5-20](#)
  - warning
    - antenna [2-3, B-3](#)
    - defined [xiv to xv](#)
    - explosive device proximity [2-3, B-2](#)
    - laptop users [2-3, B-4 to B-5](#)
  - WEP
- 
- ## U
- unicast packets
    - encryption type used [7-8](#)

- designation in product model numbers [1-3](#)
- keys
  - additional security features [5-29 to 5-30](#)
  - defined [5-23, E-2](#)
  - size of [5-23, E-2](#)
  - types of [5-23, E-2](#)
  - status of [7-8](#)
- WEP Key Entry Method parameter [5-36](#)
- WEP key hashing [5-30](#)
- WEP option, in Windows XP [E-8](#)
- Wi-Fi Multimedia (WMM)
  - See WMM
- Wi-Fi Protected Access (WPA)
  - See WPA
- Wi-Fi Protected Access (WPA) parameter [5-38, 5-42, 5-50](#)
- Windows login screen [6-5](#)
- Windows Wireless Network Connection icon, shows unavailable connection [10-11](#)
- Windows XP
  - configuring client adapter through [E-5 to E-19](#)
  - enabling EAP-SIM authentication [E-16 to E-19](#)
  - enabling EAP-TLS authentication [E-10 to E-12](#)
  - enabling PEAP authentication [E-13 to E-16](#)
  - feature comparison to ACU [3-14 to 3-15](#)
  - inability to use fast user switching [3-10, 3-11](#)
  - making a configuration decision [3-14 to 3-15](#)
  - security features [E-2 to E-4](#)
  - viewing status of client adapter [E-21](#)
- Wireless Cisco Connection Properties screen [5-63](#)
- wireless infrastructure [1-9](#)
- Wireless Network Connection Properties screen [5-65, E-20](#)
- Wireless Network Connection Properties screen (Authentication Tab) - Windows [5-54](#)
- Wireless Network Connection Properties screen (Wireless Networks Tab) - Windows [5-52, E-6](#)
- Wireless Network Connection Status screen - Windows XP [E-21](#)
- Wireless Network Properties screen (Association Tab) - Windows [5-53](#)
- Wireless Network Properties screen (Association Tab) - Windows XP [E-7](#)
- Wireless Network Properties screen (Authentication Tab) - Windows XP [E-10, E-13, E-17](#)
- WMM
  - described [5-62, E-19](#)
  - enabling [5-62 to 5-65, E-19 to E-20](#)
- workstation
  - defined [1-3](#)
  - in wireless infrastructure [1-9](#)
- World Mode parameter [5-9](#)
- WPA
  - described [5-27, E-4 to E-5](#)
  - enabling in Windows XP [E-8](#)
  - enabling with EAP-FAST through ACU [5-42](#)
  - enabling with host-based EAP in ACU [5-50](#)
  - enabling with host-based EAP on Windows 2000 [5-51](#)
  - enabling with host-based EAP on Windows XP [5-51 to 5-53](#)
  - enabling with LEAP through ACU [5-38](#)
  - mismatches [7-14](#)
  - requirements [5-38, 5-49](#)
  - software required [2-4, 5-27, 5-49, E-4](#)
  - status of authentication [7-8](#)
- WPA migration mode [5-28](#)
- WPA-None option, in Windows XP [E-8](#)
- WPA option, in Windows XP [5-53, E-8](#)
- WPA-PSK, described [5-27, E-4](#)
- WPA-PSK option, in Windows XP [E-8](#)

