



Numerics

- 802.11 Authentication Mode parameter [5-12](#)
- 802.11b preamble, status of [7-11](#)
- 802.11b Preamble parameter [5-9](#)
- 802.11 mode, in ASTU [8-5](#)
- 802.1X
 - authentication types
 - in ADU [5-15 to 5-17](#)
 - in Windows XP [E-3](#)
 - defined [5-15, E-3](#)
- 802.1x EAP Type parameter [5-28, 5-31, 5-40, 5-42, 5-46, 5-49](#)
- 802.1x option [5-28, 5-31, 5-40, 5-42, 5-46, 5-49](#)

A

- About Aironet Desktop Utility, ADU menu option [9-8](#)
- About window
 - in ADU [9-8](#)
 - in site survey utility [F-15](#)
- access point
 - CCX version supported [F-11](#)
 - channel, in site survey utility [F-6, F-10, F-13](#)
 - currently associated to [7-9, 8-11](#)
 - data rates, in site survey utility [F-13](#)
 - frequency, in site survey utility [F-6, F-10, F-13](#)
 - in wireless infrastructure [1-6](#)
- IP address
 - in ADU [7-9](#)
 - in ASTU [8-11](#)
 - in site survey utility [F-6](#)

- MAC address
 - in ADU [7-9](#)
 - in site survey utility [F-6, F-10, F-12](#)
- maximum transmit data rate, in site survey utility [F-10](#)
- mismatches [7-14](#)
- name
 - in ADU [7-9](#)
 - in ASTU [8-11](#)
 - in site survey utility [F-6, F-11, F-13](#)
- problems associating to [10-10](#)
- radio band, in site survey utility [F-10, F-13](#)
- role in wireless network [1-5](#)
- security settings [5-20 to 5-24](#)
- Access Point 1 through 4 parameters [5-13](#)
- access points
 - associating to in Windows XP [E-18](#)
 - number displayed in site survey utility [F-10](#)
 - preferred, setting [5-13](#)
 - reporting those that fail LEAP authentication [5-19, 5-23](#)
 - viewing details in site survey utility [F-12 to F-13](#)
 - viewing status in site survey utility [F-5 to F-8](#)
- ACK frames [7-14](#)
- Action drop-down menu
 - in ADU [6-10, 9-7](#)
 - in site survey utility [F-3, F-15](#)
- Activate button [4-5, 4-9](#)
- Adapter Information
 - button [9-8](#)
 - window [9-8](#)
- ad hoc mode, in site survey utility [F-11](#)
- ad hoc network
 - defined [E-6](#)
 - selecting in ADU [5-9](#)

- selecting in Windows XP [E-7](#)
- setting wireless mode [5-10](#)
- wireless LAN configuration [1-5](#)
- ADU
 - See Aironet Desktop Utility (ADU)
- Advanced button [7-6](#)
- advanced parameters
 - described [5-2](#)
 - setting [5-6 to 5-13](#)
- Advanced Statistics
 - button [7-13](#)
 - window [7-13](#)
- Advanced Status window [7-7](#)
- AES, status of [7-6, 7-7](#)
- AES-CCMP, with WPA2 [5-18](#)
- AES option, in Windows XP [E-8](#)
- Aironet Desktop Utility (ADU)
 - accessing help [9-9](#)
 - described [1-4](#)
 - exiting [9-7](#)
 - feature comparison to Windows XP [3-17 to 3-18](#)
 - finding version [9-8](#)
 - icon, using to open ADU [9-7](#)
 - opening [9-7](#)
 - Profile Management windows, overview [5-2](#)
 - status and statistics tools
 - overview [7-2](#)
 - setting parameters [7-2 to 7-3](#)
 - using [7-4 to 7-15](#)
- Aironet Desktop Utility Help, ADU menu option [9-9](#)
- Aironet System Tray Utility (ASTU)
 - accessing help [8-5](#)
 - described [1-4](#)
 - exiting [8-6](#)
 - icon [8-2 to 8-3, 9-7](#)
 - opening [8-6](#)
 - overview [8-2](#)
 - pop-up menu [8-5 to 8-11](#)
 - selecting the active profile [8-8 to 8-9](#)
 - setting preferences [8-6 to 8-7](#)
 - specifying pop-up menu options [8-7](#)
 - Tool Tip window [8-3 to 8-5](#)
 - using [8-1 to 8-11](#)
 - using to open ADU [8-6](#)
 - using to open troubleshooting utility [8-6](#)
- Aironet System Tray Utility Preferences window [8-6](#)
- Allow Association to Mixed Cells parameter
 - setting with EAP-FAST [5-37](#)
 - setting with EAP-TLS [5-41](#)
 - setting with LEAP [5-30](#)
 - setting with PEAP (EAP-GTC) [5-45](#)
 - setting with PEAP (EAP-MSCHAP V2) [5-48](#)
 - setting with static WEP [5-26](#)
- Allow Automatic PAC Provisioning for this Profile parameter [5-33](#)
- Always Do User Authentication parameter [5-41](#)
- antenna
 - assembling [3-5 to 3-6](#)
 - described [1-3](#)
 - gains
 - IEEE 802.11a [D-4](#)
 - IEEE 802.11b [D-4](#)
 - IEEE 802.11g [D-5](#)
 - mounting [3-6 to 3-8](#)
 - placement [F-2](#)
 - rotating [3-8](#)
 - specifications [A-6](#)
- antenna base, mounting [3-6 to 3-8](#)
- AP detailed information parameters (site survey utility) [F-12 to F-13](#)
- AP Detailed Information window (site survey utility) [F-12](#)
- AP scan list
 - parameters [F-10 to F-11](#)
 - pausing [F-11](#)
 - viewing [F-9 to F-11](#)
- AP Scan List tab (site survey utility), using [F-8 to F-14](#)
- AP scan log file, generating in site survey utility [F-14](#)

associated AP status parameters (site survey utility) [F-6 to F-8](#)

Associated AP Status tab (site survey utility)

units as a percentage [F-5](#)

units in dBm [F-5](#)

using [F-4 to F-8](#)

association

rejections [7-15](#)

time-outs [7-15](#)

ASTU

See Aironet System Tray Utility (ASTU)

ATIM Window, in site survey utility [F-13](#)

audience of document [xii](#)

authentication

process [5-17, E-4](#)

rejections [7-15](#)

time-outs [7-15](#)

type

setting [5-12](#)

status of [7-8](#)

Authentication Timeout Value parameter

for EAP-FAST [5-33](#)

for LEAP [5-29](#)

Automatically Prompt for User Name and Password option

for EAP-FAST [5-33](#)

for LEAP [5-29](#)

auto profile selection

enabling [4-9](#)

including a profile in [4-7 to 4-8](#)

prioritizing profiles [4-8](#)

removing a profile from [4-8](#)

restrictions [4-8](#)

status of [8-10](#)

using [8-8](#)

Auto Profile Selection Management window [4-7](#)

Auto Select Profiles parameter [4-9](#)

Available Infrastructure and Ad Hoc Networks window [4-4](#)

B

beacon period, in site survey utility [F-13](#)

beacons received

in ADU [7-14](#)

in site survey utility [F-7](#)

broadcast key rotation

described [5-20](#)

setting on client and access point [5-24](#)

broadcast packets

number received [7-13](#)

number transmitted [7-13](#)

broadcast SSIDs [5-4, E-6](#)

BSS Aging Interval parameter (Windows Control Panel) [5-56](#)

bytes

number received [7-13](#)

number transmitted [7-13](#)

C

CAM

See Constantly Awake Mode (CAM)

Canadian compliance statement [C-3](#)

card name [9-9](#)

caution, defined [xiii](#)

CCKM fast secure roaming

described [5-18 to 5-19](#)

enabling with EAP-FAST [5-31](#)

enabling with EAP-TLS [5-40](#)

enabling with LEAP [5-28](#)

enabling with PEAP (EAP-GTC) [5-42](#)

enabling with PEAP (EAP-MSCHAP V2) [5-46](#)

setting on client and access point [5-23](#)

CCX, version supported by access point [F-11](#)

certificates, required for EAP-TLS and PEAP authentication [5-39](#)

- channel of access point
 - in ADU [4-5](#)
 - in site survey utility [F-6, F-10, F-13](#)
 - channel of client adapter [7-6, 7-11](#)
 - Channel parameter [5-11](#)
 - channels, supported by regulatory domains
 - IEEE 802.11a [D-2](#)
 - IEEE 802.11b/g [D-3](#)
 - channel set, for which client adapter is configured [7-11](#)
 - Choose Destination Location window (Install Wizard) [3-14](#)
 - Cisco.com
 - accessing [xv](#)
 - obtaining documentation [xv](#)
 - Cisco Aironet 802.11a/b/g Wireless Adapter Properties window [5-55](#)
 - Cisco Aironet Desktop Utility (Diagnostics) window [7-12](#)
 - Cisco Aironet Desktop Utility (Profile Management) window [4-2](#)
 - Cisco Aironet Installation Program window (Install Wizard) [3-11](#)
 - Cisco Centralized Key Management (CCKM)
 - See CCKM fast secure roaming
 - Cisco Key Integrity Protocol (CKIP)
 - statistics [7-15](#)
 - status of [7-6](#)
 - with LEAP [5-15](#)
 - Cisco publications [xix](#)
 - client adapter
 - association status in site survey utility [F-4](#)
 - selecting in site survey utility [F-3 to F-4](#)
 - client name [9-9](#)
 - Client Name parameter [5-4](#)
 - client utilities
 - See Aironet Desktop Utility (ADU) and Aironet System Tray Utility (ASTU)
 - Configuration Settings window
 - for PEAP (EAP-GTC) [5-44](#)
 - for PEAP (EAP-MSCHAP V2) [5-47](#)
 - configuring client adapter
 - deciding between ADU and Windows XP [3-17 to 3-18](#)
 - in ADU [5-1 to 5-51](#)
 - in Windows XP [E-5 to E-10](#)
 - connection status [8-4, 8-10](#)
 - Connection Status window (ASTU) [8-9](#)
 - Constantly Awake Mode (CAM) [5-8](#)
 - Contents menu option, in site survey utility [F-15](#)
 - conventions of document [xiii to xiv](#)
 - CRC errors [7-14](#)
 - CTS frames [7-14](#)
 - Current Status window [7-4](#)
-
- D**
- Data Display parameter [7-3, 7-12](#)
 - data encryption
 - in ADU [7-7](#)
 - in site survey utility [F-10, F-13](#)
 - data frames [7-14](#)
 - data rate
 - in ADU [7-5](#)
 - mismatches [7-14](#)
 - of access point, in site survey utility [F-13](#)
 - setting [5-10](#)
 - specifications [A-3](#)
 - when performing a site survey [F-2](#)
 - declarations of conformity
 - European community, Switzerland, Norway, Iceland, and Liechtenstein [C-3 to C-7](#)
 - FCC [C-2](#)
 - RF exposure [C-7](#)
 - default values, using [5-2](#)
 - Define Certificate window [5-40](#)
 - Define PEAP (EAP-GTC) Configuration window [5-43](#)
 - Define PEAP (EAP-MSCHAP V2) Configuration window [5-46](#)
 - Define Pre-Shared Keys window [5-24](#)
 - Define WPA/WPA2 Pre-Shared Key window [5-26](#)

diagnosing client adapter operation [10-3 to 10-6](#)

Diagnostics window [7-12](#)

Disable Radio

- ADU menu option [9-10](#)
- ASTU menu option [8-7](#)

Display in Percent parameter (site survey utility) [F-4](#)

Display Settings

- ADU menu option [7-2](#)
- window [7-2](#)

display units, specifying in site survey utility [F-4](#)

diversity antenna [1-3](#)

document

- audience [xii](#)
- conventions [xiii to xiv](#)
- organization [xii to xiii](#)
- purpose [xii](#)

documentation

- feedback [xvi](#)
- obtaining [xv to xvi](#)
- ordering [xvi](#)

domain name

- including in Windows login
 - for EAP-FAST [5-33](#)
 - for LEAP [5-29](#)
- specifying for saved user name and password
 - for EAP-FAST [5-33](#)
 - for LEAP [5-29](#)

driver

- current version [9-9](#)
- date [9-9](#)
- described [1-4](#)
- name [9-9](#)

DSConfig, in site survey utility [F-13](#)

duplicate frames, number received [7-14](#)

dwelt time, in site survey utility [F-13](#)

dynamic WEP keys, overview [5-15 to 5-17, E-3 to E-4](#)

E

EAP authentication

- described [E-4](#)
- overview [5-15 to 5-17, 6-2, E-3 to E-4](#)
- restarting [6-15](#)
- using [6-1 to 6-15](#)

EAP-Cisco Wireless

- See LEAP authentication

EAP-FAST authentication

- authenticating after a reboot/login
 - with automatically prompted login [6-6 to 6-7](#)
 - with saved username and password [6-12](#)
 - with Windows username and password [6-4](#)
- authenticating after a reboot/login/card insertion, with manually prompted login [6-9 to 6-11](#)
- authenticating after EAP-FAST password expires
 - with automatically prompted login [6-7 to 6-8](#)
 - with manually prompted login [6-11](#)
 - with saved username and password [6-13](#)
 - with Windows username and password [6-4 to 6-5](#)
- authenticating after profile activation, with manually prompted login [6-8 to 6-9](#)
- authenticating after profile activation/card insertion
 - with automatically prompted login [6-5 to 6-6](#)
 - with saved username and password [6-12](#)
 - with Windows username and password [6-3 to 6-4](#)
- described [5-15 to 5-17](#)
- disabling [5-51](#)
- enabling [5-31 to 5-38](#)
- overview [6-2 to 6-3](#)
- RADIUS servers supported [5-15](#)
- requirements [5-31](#)
- setting on client and access point [5-21](#)
- stages of [6-3](#)
- user databases supported [5-16](#)

EAP-FAST Authentication Status window

- displayed [6-2](#)
- minimizing [6-3](#)

EAP-FAST option [5-31](#)

EAP-FAST Settings window [5-32](#)

EAP MSCHAPv2 Properties window - Windows XP [E-15](#)

EAP-TLS authentication

- authenticating after profile activation/card insertion/reboot/logon [6-13](#)
- described [5-16 to 5-17, E-3, E-4](#)
- disabling [5-51](#)
- enabling
 - in ADU [5-39 to 5-42](#)
 - in Windows XP [E-10 to E-12](#)
- RADIUS servers supported [5-16, E-3](#)
- requirements [5-39](#)
- setting on client and access point [5-22](#)

EAP-TLS machine authentication with machine credentials

- requirements [5-39](#)
- setting [5-41](#)

EAP-TLS option [5-40](#)

EIRP, maximum supported by regulatory domains

- IEEE 802.11a [D-4](#)
- IEEE 802.11b [D-4](#)
- IEEE 802.11g [D-5](#)

Enable Radio

- ADU menu option [9-10](#)
- ASTU menu option [8-7](#)

Enable Tray Icon, ADU menu option [8-6](#)

encryption errors [7-14](#)

Enter Password window [5-36](#)

Enter Wireless Network Password window [6-6, 6-7, 6-9, 6-10](#)

error messages [10-12 to 10-22](#)

errors

- CRC [7-14](#)
- encryption [7-14](#)
- MIC [7-15](#)

Exit menu option

- in ADU [9-7](#)
- in ASTU [8-6, 9-7](#)
- in site survey utility [F-15](#)

Export button [4-11](#)

Export Profile window [4-12](#)

F

Fast PSP [5-8](#)

FCC

- declaration of conformity statement [C-2](#)
- safety compliance statement [2-2](#)

frames

- ACK [7-14](#)
- CTS [7-14](#)
- duplicate [7-14](#)
- number dropped [7-14](#)
- number received successfully [7-14](#)
- number received with errors [7-14](#)
- number retried [7-14](#)
- number transmitted successfully [7-14](#)
- RTS [7-14](#)

frequencies, supported by regulatory domains

- IEEE 802.11a [D-2](#)
- IEEE 802.11b/g [D-3](#)

frequency

- in ADU [7-5, 7-11](#)
- of access point, in site survey utility [F-10, F-13](#)
- setting [5-10](#)

G

general parameters

- described [5-2](#)
- setting [5-3 to 5-5](#)

Generic Token Card Properties window - Windows XP [E-17](#)

global PACs [5-16, 5-35](#)

Group Policy, described [3-20](#)

Group Policy Delay parameter

- installing hot fix for [3-20 to 3-21](#)
- setting with EAP-FAST [5-38](#)

setting with EAP-TLS [5-42](#)
 setting with LEAP [5-30](#)
 setting with PEAP (EAP-GTC) [5-45](#)
 setting with PEAP (EAP-MSCHAP V2) [5-48](#)
 setting with PEAP (EAP-MSCHAP V2) machine authentication with machine credentials [5-49](#)
 setting with WPA/WPA2 passphrase [5-27](#)

H

hardware components of client adapter [1-3](#)
 help
 in ADU [9-9](#)
 in ASTU [8-5](#)
 in site survey utility [F-15](#)
 hop pattern, in site survey utility [F-13](#)
 hop set, in site survey utility [F-13](#)
 Host Based EAP option [5-49](#)
 host devices [2-4](#)

I

I/O range [10-9](#)
 Import button [4-11](#)
 Import EAP-FAST PAC File window [5-35](#)
 Import Profile window [4-11](#)
 Include Windows Logon Domain with User Name parameter
 for EAP-FAST [5-33](#)
 for LEAP [5-29](#)
 information about client adapter [9-8 to 9-9](#)
 infrastructure device, defined [1-2](#)
 infrastructure mode, in site survey utility [F-13](#)
 infrastructure network
 selecting in ADU [5-9](#)
 wireless LAN configuration [1-6](#)
 inserting client adapter [3-2 to 3-8](#)
 Install Cisco Aironet Site Survey Utility window (Install Wizard) [3-13](#)

installing client adapter software [3-9 to 3-20](#)

Install Wizard file

 described [1-4](#)
 installing [3-9 to 3-20](#)
 name [3-9](#)
 removing [9-6](#)

interference [2-5, 3-6](#)

interrupt request (IRQ) [10-9](#)

introduction to client adapters [1-2](#)

IP address

 of access point
 in ADU [7-9](#)
 in ASTU [8-11](#)
 in site survey utility [F-6](#)
 of client adapter [7-6, 8-5, 8-11](#)

J

Japan, guidelines for operating client adapters [C-7](#)

K

key icon [4-5](#)

L

LEAP authentication

 authenticating after a reboot/logon
 with automatically prompted login [6-6 to 6-7](#)
 with saved username and password [6-12](#)
 with Windows username and password [6-4](#)
 authenticating after a reboot/logon/card insertion, with manually prompted login [6-9 to 6-11](#)
 authenticating after profile activation, with manually prompted login [6-8 to 6-9](#)
 authenticating after profile activation/card insertion
 with automatically prompted login [6-5 to 6-6](#)
 with saved username and password [6-12](#)
 with Windows username and password [6-3 to 6-4](#)

- described [5-15 to 5-17](#)
- disabling [5-51](#)
- enabling [5-27 to 5-30](#)
- overview [6-2 to 6-3](#)
- RADIUS servers supported [5-15](#)
- requirements [5-27](#)
- setting on client and access point [5-21](#)
- stages of [6-3](#)
- timeout value [4-9, 8-8](#)
- using with login scripts [4-9](#)
- LEAP Authentication Status window
 - displayed [6-2](#)
 - minimizing [6-3](#)
- LEAP option [5-28](#)
- LEAP Settings window [5-28](#)
- LEDs
 - described [1-3](#)
 - interpreting [10-2](#)
- link quality
 - in ASTU [8-5, 8-11](#)
 - in site survey utility [F-8](#)
- link speed
 - in ASTU [8-5](#)
 - in site survey utility [F-8](#)
- List Installed Devices Even If Not Present in System
 - parameter (site survey utility) [F-4](#)
- log file, generating in site survey utility [F-14](#)
- login scripts, using with LEAP [4-9, 8-9](#)
- Log Snapshot button, in site survey utility [F-14](#)
- long radio headers
 - status of [7-11](#)
 - using [5-9](#)
- viewing [7-9](#)
- of client adapter [9-9](#)
- machine authentication with machine credentials
 - using EAP-TLS [5-41](#)
 - using PEAP (EAP-MSCHAP V2) [5-49 to 5-50](#)
- machine authentication with user credentials
 - using PEAP (EAP-GTC) [5-43](#)
 - using PEAP (EAP-MSCHAP V2) [5-47](#)
- Manual Login
 - ADU menu option [5-29, 6-9](#)
 - ASTU menu option [8-8](#)
- Manually Prompt for User Name and Password option
 - for EAP-FAST [5-33](#)
 - for LEAP [5-29](#)
- Max PSP [5-8](#)
- message integrity check (MIC)
 - described [5-20, 7-8](#)
 - errors [7-15](#)
 - setting on client and access point [5-23](#)
 - statistics [7-15](#)
 - status of [7-8](#)
 - types of [7-8](#)
 - with WPA [5-18](#)
- Michael MIC, status of [7-8](#)
- microcellular network [1-6](#)
- Microsoft 802.1X supplicant, disabling [10-8](#)
- Microsoft hot fix
 - installing [3-20 to 3-21](#)
 - required for Group Policy Delay parameter [3-20](#)
- Microsoft Wireless Configuration Manager
 - disabling [10-8](#)
 - enabling in Install Wizard [3-17](#)
 - role in switching between host-based EAP and non-host-based EAP profiles [5-49, 5-50](#)
- MMH MIC
 - status of [7-8](#)
 - with LEAP [5-15](#)
- Modify button [4-10, 5-3](#)

M

MAC address

- of access point
 - in site survey utility [F-6, F-10, F-12](#)
 - specifying [5-13](#)

- multicast packets
 - number received [7-13](#)
 - number transmitted [7-13](#)

N

- network
 - configurations [1-5 to 1-6](#)
 - prioritizing connections [10-11](#)
 - problems connecting to [10-11](#)
 - type, current [4-3, 7-5](#)
- network name
 - in ADU [5-4, 7-7](#)
 - in ASTU [8-3](#)
 - in site survey utility [F-10, F-12](#)
- Network Type parameter [5-9](#)
- New button [4-4, 5-3](#)
- noise level
 - in ADU [7-10](#)
 - in site survey utility [F-7](#)
- No Network Connection Unless User Is Logged In parameter
 - for EAP-FAST [5-33, 6-12](#)
 - for LEAP [5-29, 6-12](#)
- note, defined [xiii](#)

O

- online help
 - for ADU [9-9](#)
 - for ASTU [8-5](#)
 - for site survey utility [F-15](#)
- Open Aironet Desktop Utility, ASTU menu option [8-6, 9-7](#)
- open authentication
 - setting [5-12, E-8](#)
 - status of [7-8](#)
- operating systems supported [xii, 2-4, 3-9](#)
- Order Profiles button [4-7](#)
- organization of document [xii to xiii](#)

P

- PAC authority, selecting [5-34, 5-37](#)
- package contents [2-3](#)
- packets
 - broadcast [7-13](#)
 - multicast [7-13](#)
 - unicast [7-13](#)
- PAC provisioning
 - automatic [5-33 to 5-34](#)
 - manual [5-33 to 5-34](#)
- PACs
 - copying from private store to global store [5-37](#)
 - deleting [5-38](#)
 - described [5-15, 5-16, 5-33](#)
 - entering password for [5-36 to 5-37](#)
 - importing [5-34 to 5-37](#)
 - rules for storage [5-16](#)
 - types of [5-16](#)
- PAC stores
 - selecting [5-35](#)
 - types of [5-35](#)
- Pause List Update button, in site survey utility [F-11](#)
- PC-Cardbus card
 - antenna [1-3](#)
 - described [1-2](#)
 - inserting [3-2](#)
 - profiles tied to slot [4-6](#)
 - removing [9-2](#)
- PCI card
 - antenna
 - assembling [3-5 to 3-6](#)
 - described [1-3](#)
 - mounting [3-6 to 3-8](#)
 - rotating [3-8](#)
 - changing bracket [3-3](#)
 - described [1-2](#)
 - inserting [3-3 to 3-8](#)
 - removing [9-2](#)

- PEAP (EAP-GTC) authentication
 - authenticating after profile activation/card insertion/reboot/logon [6-14](#)
 - described [5-17, E-3, E-4](#)
 - disabling [5-51](#)
 - enabling
 - in ADU [5-42 to 5-45](#)
 - in Windows XP [E-13 to E-14, E-16 to E-18](#)
 - RADIUS servers supported [5-17, E-3](#)
 - requirements [5-39](#)
 - setting on client and access point [5-22 to 5-23](#)
 - user databases supported [5-17](#)
- PEAP (EAP-GTC) machine authentication with user credentials, setting [5-43](#)
- PEAP (EAP-GTC) option [5-42](#)
- PEAP (EAP-MSCHAP V2) authentication
 - authenticating after profile activation/card insertion/reboot/logon [6-15](#)
 - described [5-17, E-3, E-4](#)
 - disabling [5-51](#)
 - enabling
 - in ADU [5-46 to 5-48](#)
 - in Windows XP [E-13 to E-15](#)
 - RADIUS servers supported [5-17, E-3](#)
 - requirements [5-39](#)
 - setting on client and access point [5-22 to 5-23](#)
- PEAP (EAP-MSCHAP V2) machine authentication with machine credentials, setting [5-49 to 5-50](#)
- PEAP (EAP-MSCHAP V2) machine authentication with user credentials, setting [5-47](#)
- PEAP (EAP-MSCHAP V2) option [5-46](#)
- PEAP Properties window - Windows XP [E-16](#)
- peer-to-peer network [1-5, 5-9](#)
- physical specifications [A-2](#)
- Please Change Password window [6-5, 6-8, 6-11, 6-13](#)
- power level, current [7-10](#)
- power levels, available [7-10](#)
- power save mode, currently being used [7-10](#)
- Power Save Mode parameter [5-8](#)
- power specifications [A-6](#)
- Preferences, ASTU menu option [8-6](#)
- Preferred Access Points window [5-13](#)
- Preparing Setup window (Install Wizard) [3-10, 9-3](#)
- Pre-Shared Key (Static WEP) option [5-24](#)
- Previous Installation Detected window (Install Wizard) [9-4](#)
- private PACs [5-16, 5-35](#)
- product model numbers [1-2](#)
- product security
 - overview [xvi to xvii](#)
 - reporting problems [xvii](#)
- profile
 - active [4-9, 8-3, 8-10](#)
 - default [4-2](#)
 - described [4-2](#)
- Profile Management (Advanced) window [5-6](#)
- Profile Management (General) window [4-6](#)
- Profile Management (Security) window [5-14](#)
- Profile Management window [4-2](#)
- Profile Management windows, parameters missing [10-11](#)
- profile manager
 - auto profile selection feature [4-7 to 4-8](#)
 - creating a new profile [4-4 to 4-6](#)
 - deleting a profile [4-10](#)
 - editing a profile [4-10](#)
 - exporting a profile [4-11 to 4-12](#)
 - importing a profile [4-11](#)
 - opening [4-2 to 4-3](#)
 - parameters missing [4-3, 10-11](#)
 - selecting the active profile [4-9](#)
- Profile Name parameter [5-4](#)
- profiles, losing [9-6](#)
- profiles submenu (ASTU) [8-8](#)
- Protected EAP
 - See PEAP (EAP-GTC) authentication and PEAP (EAP-MSCHAP V2) authentication
- Protected EAP Properties window - Windows XP [E-14](#)
- purpose of document [xii](#)

Q

QoS

See quality of service

QoS Packet Scheduler

enabling on Windows 2000 [5-51 to 5-53](#)

enabling on Windows XP [5-54](#)

quality of service (QoS)

described [5-51](#)

in site survey utility [F-11](#)

status of [7-9](#)

R

radio

described [1-3](#)

enabling or disabling [8-7, 9-9 to 9-10](#)

specifications [A-2 to A-6](#)

radio band of access point, in site survey utility [F-10, F-13](#)

RADIUS servers

additional information [5-17, E-4](#)

defined [5-15, E-3](#)

supported [5-15 to 5-17, E-3](#)

range [5-7](#)

Reauthenticate menu option

in ADU [6-15](#)

in ASTU [6-15, 8-8](#)

receive rate [7-11, 8-11](#)receive statistics [7-13, 7-14 to 7-15](#)Refresh button [4-4](#)Refresh Interval parameter [7-3, 7-12](#)

regulatory

domains

IEEE 802.11a [D-2](#)

IEEE 802.11b/g [D-3](#)

information [C-2 to C-9](#)

specifications [A-6](#)

related publications [xv](#)

Remove button [4-10](#)

removing client adapter [9-2](#)

resource conflicts, resolving

in Windows 2000 [10-9](#)

in Windows XP [10-10](#)

RF obstructions [2-5, 3-6, F-2](#)

RM-Normal, in site survey utility [F-11](#)

RM-Source, in site survey utility [F-11](#)

roaming [1-6](#)

roaming parameters, setting in the Windows Control Panel [5-55 to 5-56](#)

roaming threshold [5-56](#)

RSSI, in site survey utility [F-10, F-13](#)

RTS frames [7-14](#)

Run Test button, in site survey utility [10-4](#)

S

safety

information [2-2 to 2-3](#)

specifications [A-6](#)

saved username and password

described

for EAP-FAST [5-32](#)

for LEAP [5-29](#)

entering

for EAP-FAST [5-33](#)

for LEAP [5-29](#)

Save Report

button [10-7](#)

window [10-7](#)

Scan button [4-4](#)

Scan Valid Interval parameter (Windows Control Panel) [5-56](#)

seamless roaming [1-6](#)

security features

overview [5-14 to 5-20](#)

synchronizing [5-20 to 5-24](#)

security mode [4-3](#)

- security parameters
 - described [5-2](#)
 - setting [5-13 to 5-48](#)
- Select Adapter
 - site survey utility menu option [F-3](#)
 - window (site survey utility) [F-3](#)
- Select EAP-FAST PAC window [5-34](#)
- Select Network Component Type window [5-53](#)
- Select Network Service window [5-53](#)
- Select Profile, ASTU menu option [8-8 to 8-9](#)
- sensitivity [A-4](#)
- serial number of client adapter [9-9](#)
- server-based authentication, currently being used [7-7](#)
- service request
 - definitions of severity [xviii](#)
 - submitting [xviii](#)
- Setup Status window (Install Wizard) [9-5](#)
- Setup Type window (Install Wizard) [3-12](#)
- shared authentication
 - setting [5-12, E-8](#)
 - status of [7-8](#)
- short radio headers
 - status of [7-11](#)
 - using [5-9](#)
- Show Connection Status, ASTU menu option [8-9](#)
- signal quality
 - in ADU [7-10](#)
 - in site survey utility [F-7](#)
- signal strength
 - as a percentage [7-3](#)
 - in ADU [7-6, 7-10](#)
 - in ASTU [8-5](#)
 - in dBm [7-3](#)
- Signal Strength Display Units parameter [7-3](#)
- signal-to-noise ratio (SNR)
 - as a percentage [7-3](#)
 - in ADU [4-5](#)
 - in dB [7-3](#)
 - in site survey utility [F-8](#)
- site requirements
 - for client devices [2-5](#)
 - for infrastructure devices [2-5](#)
- site survey
 - environmental considerations [F-2](#)
 - guidelines [F-2](#)
 - performing [F-1 to F-15](#)
- site survey utility
 - About window [F-15](#)
 - accessing help [F-15](#)
 - AP detailed information parameters [F-12 to F-13](#)
 - AP Detailed Information window [F-12](#)
 - AP scan list
 - parameters [F-10 to F-11](#)
 - pausing [F-11](#)
 - viewing [F-9 to F-11](#)
 - associated AP status parameters [F-6 to F-8](#)
 - client adapter association status [F-4](#)
 - exiting [F-15](#)
 - finding version of [F-15](#)
 - generating AP scan log file [F-14](#)
 - log file [F-14](#)
 - Log Snapshot button [F-14](#)
 - opening [F-3](#)
 - overview [F-2](#)
 - Pause List Update button [F-11](#)
 - selecting client adapter [F-3 to F-4](#)
 - specifying directory [3-13](#)
 - specifying display units [F-4](#)
 - top of main window [F-4](#)
 - trend graph, explained [F-6](#)
 - uninstalling [F-15](#)
 - using AP Scan List tab [F-8 to F-14](#)
 - using Associated AP Status tab [F-4 to F-8](#)
 - View AP Details button [F-12](#)
 - viewing access point details [F-12 to F-13](#)
 - viewing status of access point [F-5 to F-8](#)
- Smart Card or other Certificate Properties window -
Windows XP [E-11](#)

software

- compatibility with Cisco Aironet client adapters [3-9](#)
- installing [3-9 to 3-20](#)
- procedures [9-3 to 9-9](#)
- uninstalling [9-6](#)
- upgrading [9-3 to 9-5](#)

software components of client adapter [1-4](#)

specifications

- physical [A-2](#)
- power [A-6](#)
- radio [A-2 to A-6](#)
- regulatory compliance [A-6](#)
- safety [A-6](#)

spread spectrum [1-3](#)

SSID

- setting [5-4](#)
- viewing
 - in ADU [4-3, 4-5, 7-7](#)
 - in ASTU [8-3, 8-11](#)
 - in site survey utility [F-10, F-12](#)

SSID1 parameter [5-4](#)

SSID2 parameter [5-5](#)

SSID3 parameter [5-5](#)

SSID1, in site survey utility [F-11](#)

Start Test button, in troubleshooting utility [10-5](#)

static WEP

- disabling [5-51](#)
- enabling [5-24 to 5-26](#)
- with open authentication, setting on client and access point [5-20](#)
- with shared key authentication, setting on client and access point [5-20](#)

static WEP keys

- guidelines for entering
 - in ADU [5-25](#)
 - in Windows XP [E-9](#)
- overview [5-15, E-2](#)
- selecting transmit key [5-25](#)
- size of [5-25](#)

statistics

- method of calculation [7-12](#)
- receive [7-13, 7-14 to 7-15](#)
- transmit [7-13, 7-14](#)
- viewing [7-12 to 7-15](#)

status of client adapter

- in ADU Advanced Status window [7-7 to 7-11](#)
- in ADU Current Status window [7-4 to 7-6](#)
- in ASTU Connection Status window [8-9 to 8-11](#)
- in ASTU Tool Tip window [8-4](#)
- in Windows XP [E-18](#)

Stop Test button, in troubleshooting utility [10-5](#)

system requirements [2-4](#)

T

Taiwan, administrative rules for client adapters [C-8 to C-9](#)

technical assistance, obtaining [xvii to xviii](#)

technical support website [xvii to xviii](#)

Temporal Key Integrity Protocol (TKIP)

- described [5-20](#)
- setting on client and access point [5-24](#)
- with WPA [5-18](#)

temporary username and password

- automatically prompt for
 - for EAP-FAST [5-33](#)
 - for LEAP [5-29](#)
- described
 - for EAP-FAST [5-32](#)
 - for LEAP [5-29](#)
- manually prompt for
 - for EAP-FAST [5-33](#)
 - for LEAP [5-29](#)
- selecting options
 - for EAP-FAST [5-33](#)
 - for LEAP [5-29](#)
- using Windows credentials
 - for EAP-FAST [5-33](#)
 - for LEAP [5-29](#)

third-party tool, enabling in Install Wizard [3-17](#)

throughput [5-8, 5-9](#)

TKIP

option in Windows XP [E-8](#)

status of [7-6](#)

Token Configuration window [6-14](#)

translated safety warnings [B-1 to B-6](#)

transmit key [5-25](#)

transmit power, in site survey utility [F-11](#)

Transmit Power Level parameter [5-7](#)

transmit rate [7-11, 8-11](#)

transmit statistics [7-13, 7-14](#)

Troubleshooting

ADU menu option [10-3](#)

ASTU menu option [8-6, 10-3](#)

button [10-3](#)

troubleshooting information, accessing [10-2](#)

troubleshooting utility

saving detailed report to text file [10-7](#)

using [10-3 to 10-7](#)

Troubleshooting Utility window

detailed report [10-6](#)

initial window [10-4](#)

with test results [10-5](#)

U

unicast packets

number received [7-13](#)

number transmitted [7-13](#)

uninstalling client adapter software [9-6](#)

unpacking the client adapter [2-3](#)

Unplug or Eject Hardware icon (Windows) [9-2](#)

upgrading client adapter software [9-3 to 9-5](#)

up time, status of [7-10](#)

Use Auto Profile Selection, ASTU menu option [8-8](#)

Use Machine Information For Domain Logon parameter

for EAP-TLS [5-41](#)

for PEAP (EAP-GTC) [5-43](#)

for PEAP (EAP-MSCHAP V2) [5-47](#)

Use Saved User Name and Password option

for EAP-FAST [5-32](#)

for LEAP [5-29](#)

Use Temporary User Name and Password option

for EAP-FAST [5-32](#)

for LEAP [5-29](#)

Use Windows to Configure My Wireless Network Settings parameter - Windows XP [E-6](#)

Use Windows User Name and Password option

for EAP-FAST [5-33](#)

for LEAP [5-29](#)

V

View AP Details button, in site survey utility [F-12](#)

View Report button [10-5](#)

W

warning

antenna [2-2, B-3](#)

defined [xiii to xiv](#)

explosive device proximity [2-2, B-2](#)

laptop users [2-3, B-4 to B-6](#)

WEP

keys

additional security features [5-20](#)

defined [5-14, E-2](#)

entry method [5-25](#)

size of [5-14, E-2](#)

types of [5-14, E-2](#)

status of [7-6](#)

WEP key hashing, described [5-20](#)

WEP option, in Windows XP [E-8](#)

- Wi-Fi Multimedia (WMM)
 - enabling [5-51 to 5-54](#)
 - status of [7-9](#)
- Wi-Fi Protected Access (WPA)
 - described [5-18, E-4](#)
 - enabling in Windows XP [E-8](#)
 - enabling with EAP-FAST [5-31](#)
 - enabling with EAP-TLS [5-40](#)
 - enabling with LEAP [5-28](#)
 - enabling with PEAP (EAP-GTC) [5-42](#)
 - enabling with PEAP (EAP-MSCHAP V2) [5-46](#)
 - software required [E-4](#)
- Wi-Fi Protected Access 2 (WPA2)
 - described [5-18](#)
 - enabling with EAP-FAST [5-31](#)
 - enabling with EAP-TLS [5-40](#)
 - enabling with LEAP [5-28](#)
 - enabling with PEAP (EAP-GTC) [5-42](#)
 - enabling with PEAP (EAP-MSCHAP V2) [5-46](#)
- Windows 2000
 - disabling Microsoft 802.1X supplicant [10-8](#)
 - resolving resource conflicts [10-9](#)
- Windows Wireless Network Connection icon, shows unavailable connection [10-11](#)
- Windows XP
 - associating to an access point [E-18](#)
 - configuring client adapter through [E-5 to E-10](#)
 - disabling Microsoft Wireless Configuration Manager [10-8](#)
 - enabling EAP-TLS authentication [E-10 to E-12](#)
 - enabling PEAP authentication [E-13 to E-18](#)
 - feature comparison to ADU [3-17 to 3-18](#)
 - making a configuration decision [3-17 to 3-18](#)
 - resolving resource conflicts [10-10](#)
 - security features [E-2 to E-4](#)
 - viewing status of client adapter [E-18](#)
- Wireless Cisco Connection Properties window [5-52](#)
- wireless infrastructure [1-6](#)
- wireless mode, current [4-5, 7-5](#)
- Wireless Mode parameter [5-10](#)
- Wireless Mode When Starting Ad Hoc Network parameter [5-10](#)
- Wireless Network Connection Properties window (Wireless Networks Tab) - Windows XP [E-6](#)
- Wireless Network Connection Properties window - Windows XP [5-54](#)
- Wireless Network Connection Status window - Windows XP [E-18](#)
- Wireless Network Properties window (Association Tab) - Windows XP [E-7](#)
- Wireless Network Properties window (Authentication Tab) - Windows XP [E-10, E-13](#)
- WMM
 - See Wi-Fi Multimedia
- workstation
 - defined [1-2](#)
 - in wireless infrastructure [1-6](#)
- WPA
 - See Wi-Fi Protected Access (WPA)
- WPA/WPA2/CCKM EAP Type parameter
 - with EAP-FAST [5-31](#)
 - with EAP-TLS [5-40](#)
 - with LEAP [5-28](#)
 - with PEAP (EAP-GTC) [5-42](#)
 - with PEAP (EAP-MSCHAP V2) [5-46](#)
- WPA/WPA2/CCKM option
 - used to enable CCKM fast secure roaming [5-19](#)
 - with EAP-FAST [5-31](#)
 - with EAP-TLS [5-40](#)
 - with LEAP [5-28](#)
 - with PEAP (EAP-GTC) [5-42](#)
 - with PEAP (EAP-MSCHAP V2) [5-46](#)
- WPA/WPA2 Passphrase option [5-26](#)
- WPA2
 - See Wi-Fi Protected Access 2 (WPA2)
- WPA2 passphrase
 - described [5-18](#)
 - disabling [5-51](#)

enabling [5-26 to 5-27](#)

setting on client and access point [5-21](#)

WPA option, in Windows XP [E-8](#)

WPA passphrase

described [5-18, E-4](#)

disabling [5-51](#)

enabling [5-26 to 5-27](#)

setting on client and access point [5-21](#)

WPA Pre-Shared Key

See WPA passphrase or WPA2 passphrase

WPA-PSK

described [5-18, E-4](#)

option in Windows XP [E-8](#)