

Guía de configuración e implementación para la versión 8.0 de software MSE High Availability

Contenido

[Introducción](#)

[Antecedentes](#)

[Pautas y limitaciones](#)

[Situación de configuración de HA para el appliance virtual MSE \(red conectada\)](#)

[Configuración del MSE secundario](#)

[Gestionarlas desde Cisco Prime NCS \(o Prime Infrastructure\)](#)

[Adición de MSE secundario a Cisco Prime NCS](#)

[Configuración de HA con conexión directa](#)

[Situación de configuración de HA para el dispositivo físico MSE](#)

[Verificación](#)

[Resolución de problemas básicos de MSE HA](#)

[Situación de conmutación por fallas/recuperación](#)

[Primario activo, secundario listo para asumir el control](#)

[Fallo en secundaria](#)

[Cómo volver al primario](#)

[Matriz de estado HA](#)

[Comentarios y datos importantes sobre HA](#)

[Resolución de problemas HA](#)

Introducción

Este documento describe las pautas de configuración e implementación, así como consejos de solución de problemas para aquellos que agregan la alta disponibilidad (HA) de Mobility Services Engine (MSE) y ejecutan los Servicios de identificación del contexto y/o Sistema de prevención de intrusiones inalámbricas adaptable (AwIPS) a una LAN inalámbrica unificada de Cisco (WLAN). El propósito de este documento es explicar las pautas para MSE HA y proporcionar escenarios de implementación de HA para MSE.

Nota: Este documento no proporciona detalles de configuración para el MSE y los componentes asociados que no pertenecen a MSE HA. Esta información se proporciona en otros documentos y se proporcionan referencias. La configuración wIPS adaptativa tampoco se trata en este documento.

Antecedentes


MSE es una plataforma capaz de ejecutar varios servicios relacionados. Estos servicios proporcionan funcionalidad de servicio de alto nivel. Por lo tanto, la consideración de HA es fundamental para mantener la máxima confianza en el servicio.

Con HA habilitado, cada MSE activo es respaldado por otra instancia inactiva. MSE HA presenta el monitor de estado en el que configura, administra y monitorea la configuración de alta disponibilidad. Se mantiene un latido entre el MSE primario y el secundario. El monitor de estado se encarga de configurar la base de datos, la replicación de archivos y la supervisión de la aplicación. Cuando el MSE primario falla y el secundario toma el control, la dirección virtual del MSE primario se conmuta de forma transparente.

Esta configuración (consulte la figura 1.) muestra una implementación típica de Cisco WLAN que incluye Cisco MSE habilitado para HA.

La compatibilidad con HA está disponible en MSE-3310, MSE-3350/3355, 3365 y Virtual Appliance en ESXi.

Figura 1. Implementación de MSE en HA

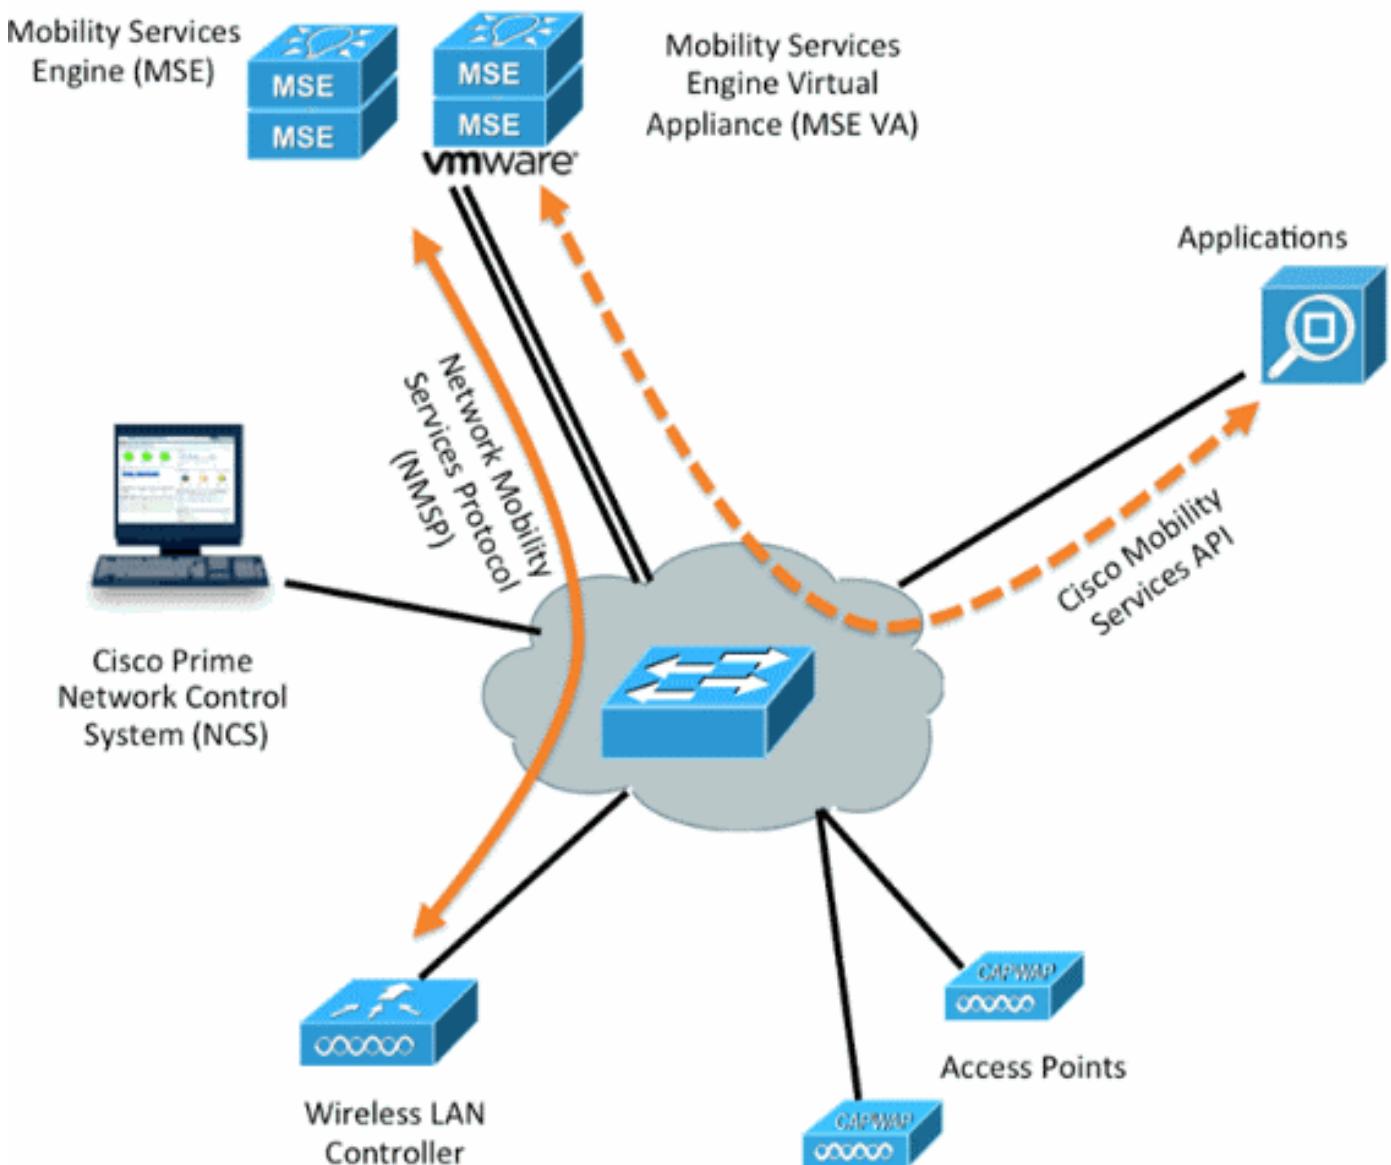

Pautas y limitaciones

La información aquí es acerca de la arquitectura MSE HA:

- El dispositivo virtual MSE admite sólo 1:1 HA

- Un MSE secundario puede admitir hasta dos MSE principales. Véase la matriz de emparejamiento de HA (figuras 2 y 3)
- HA es compatible con Network Connected y Direct Connected
- Solo se admite redundancia de capa 2 de MSE. Tanto la IP del monitor de estado como la IP virtual deben estar en la misma subred y no se admite la redundancia de capa 3 del sistema de control de red (NCS)
- La IP del monitor de estado y la IP virtual deben ser diferentes
- Puede utilizar la commutación por fallo manual o automática
- Puede utilizar la commutación por recuperación manual o automática
- Tanto el MSE primario como el secundario deben estar en la misma versión de software
- Otra instancia inactiva realiza una copia de seguridad de cada MSE primario activo. El MSE secundario se activa solamente después de que se inicie el procedimiento de failover.
- El procedimiento de failover puede ser manual o automático
- Hay una instancia de software y base de datos para cada MSE principal registrado.

Figura 2 Matriz de emparejamiento de soporte de MSE HA

Primary Server Type	Secondary Server Type					
	3310	3350	3355	VA-Low	VA-Standard	VA-High
3310	Y	Y	Y	N	N	N
3350	N	Y	Y	N	N	N
3355	N	Y	Y	N	N	N
VA-Low	N	N	N	Y	Y	Y
VA-Standard	N	N	N	N	Y	Y
VA-High	N	N	N	N	N	Y

La base de esta matriz es que la instancia secundaria siempre debe tener especificaciones iguales o altas que la primaria, ya sean dispositivos o máquinas virtuales.

El MSE-3365 sólo se puede emparejar con otro MSE-3365. No se ha probado/admitido ninguna otra combinación.

Figura 3. Matriz de emparejamiento de MSE HA N:1

Secondary Server	Primary Server
3310	N:1 not supported
3350	Two 3310 servers are supported
3355	Two 3310 servers are supported
3355	Two 3350 servers are supported
3355	One 3310 and one 3350 are supported

Situación de configuración de HA para el appliance virtual MSE (red conectada)

Este ejemplo muestra la configuración HA para el dispositivo virtual MSE (VA) (consulte la [figura 4](#)). Para este escenario, se configuran estos parámetros:

- VA MSE primario:

Virtual IP - [10.10.10.11]

Health Monitor interface (Eth0) - [10.10.10.12]


- MSE secundario VA:

Virtual IP - [None]

Health Monitor interface (Eth0) - [10.10.10.13]

Nota: Se requiere una licencia de activación (L-MSE-7.0-K9) por VA. Esto es necesario para la configuración HA del VA.

Figura 4 Dispositivo virtual MSE en HA

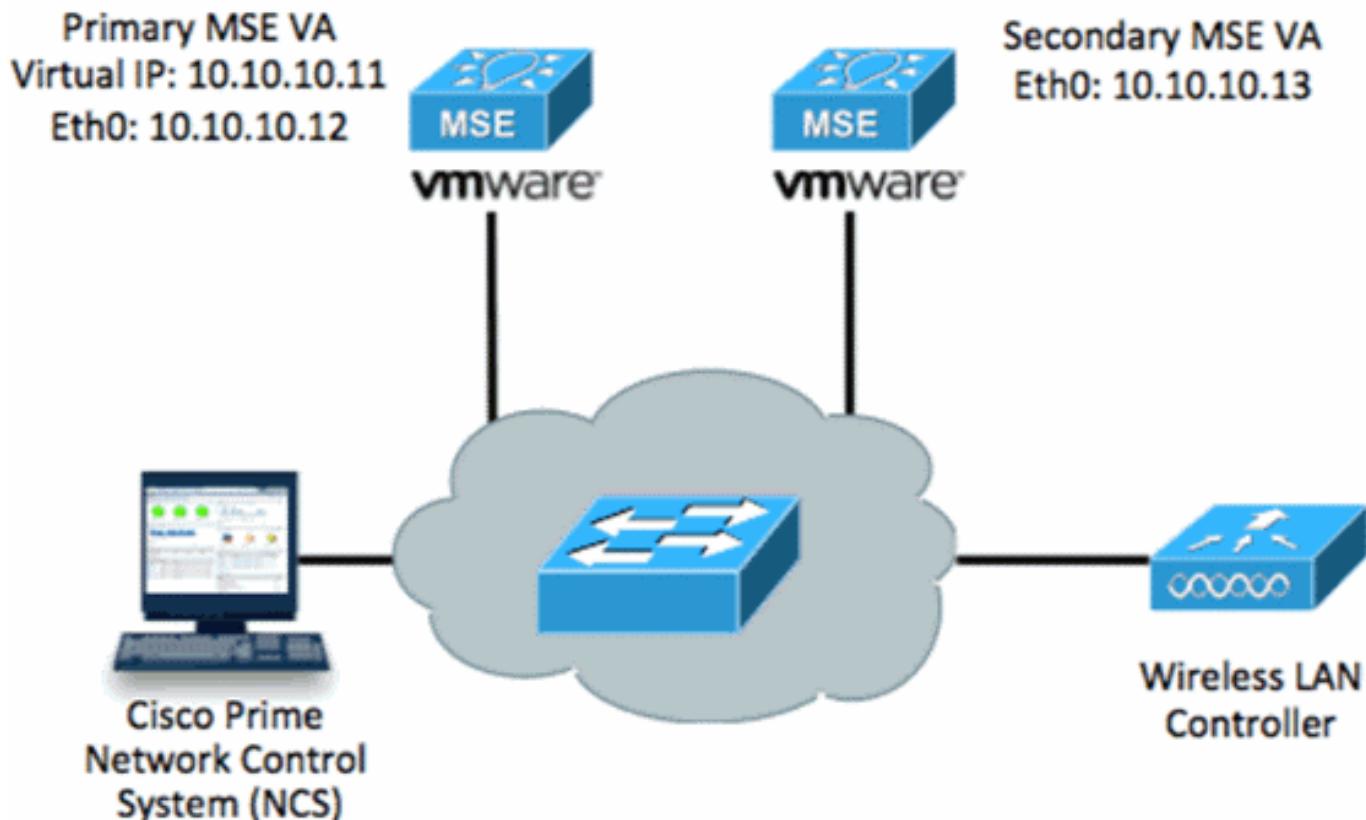

Refiérase a la [documentación de Cisco sobre el dispositivo virtual MSE](#) para obtener más información.

Estos son los pasos generales:

1. Complete la instalación VA para MSE y verifique que se cumplan todos los parámetros de red como se muestra en la imagen.

The screenshot shows a terminal window titled "MSE1 on kft-fx". The window has a menu bar with "File", "View", and "VM". Below the menu is a toolbar with icons for copy, paste, cut, and other operations. The main area of the terminal displays the following text:

```
to complete.  
Preparing to install...  
Extracting the JRE from the installer archive...  
Unpacking the JRE...  
Extracting the installation resources from the installer archive...  
Configuring the installer for this system's environment...  
  
Launching installer...  
  
Preparing SILENT Mode Installation...  
  
=====  
Cisco Mobility Services Engine (created with InstallAnywhere by Macrovision)  
-----  
  
Command.run(): process completed before monitors could start.  
  
=====  
Installing...  
-----  
[=====|=====|=====|=====]  
[-----|-----|-----|-----]
```

2. Parámetros de configuración mediante el asistente de configuración al inicio de sesión, como se muestra en la imagen.

The screenshot shows a terminal window with the title "Cisco Mobility Service Engine". It displays the following text:

```
mse login: root  
Password:  
Last login: Mon Feb 13 17:31:37 on tty1  
  
Enter whether you would like to set up the initial  
parameters manually or via the setup wizard.  
  
Setup parameters via Setup Wizard (yes/no) [yes]: _
```

3. Introduzca las entradas necesarias (nombre de host, dominio, etc.). Introduzca **Sí** en el paso para configurar la alta disponibilidad.

```

Current hostname=[mse]
Configure hostname? (Y)es/(S)kip/(U)se default [Yes]: Y

The host name should be a unique name that can identify
the device on the network. The hostname should start with
a letter, end with a letter or number, and contain only
letters, numbers, and dashes.

Enter a host name [mse]: mse1


Current domain=[]
Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: S

Current role=[Primary]
Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]: S

```

4. Introduzca esta información y tal y como se muestra en las imágenes. Seleccione Función - [1 para Primario].Interfaz del monitor de estado - [eth0] **Configuración de red asignada al adaptador de red

1

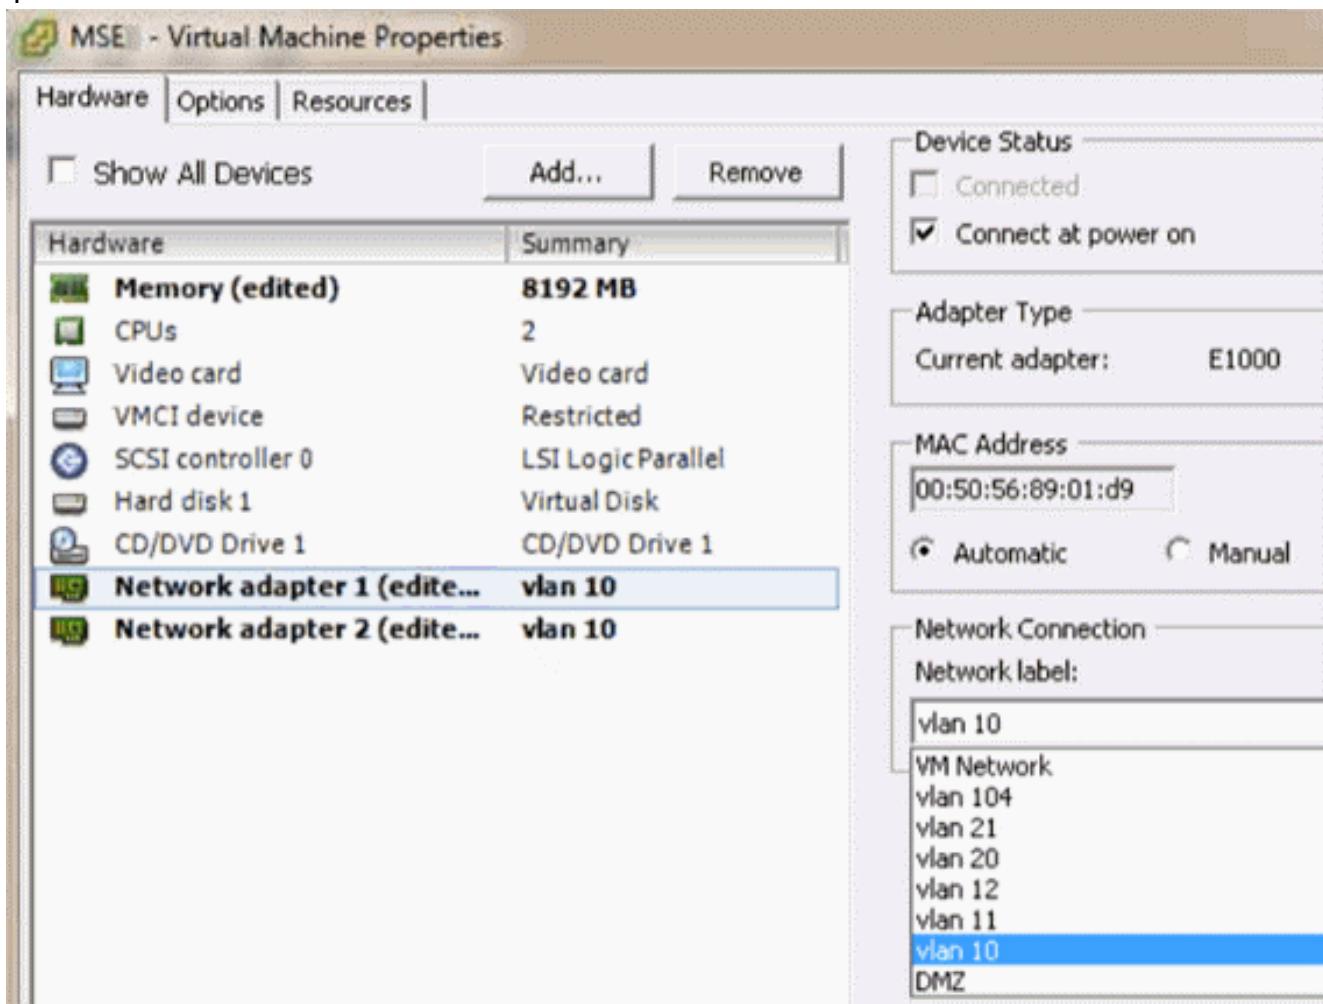

```
Enter a host name [mse]: mse1
Current domain=[]
Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: s
Current role=[Primary]
Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]:
High availability role for this MSE (Primary/Secondary)
Select role [1 for Primary, 2 for Secondary] [1]:
Health monitor interface holds physical IP address of this MSE server.
This IP address is used by Secondary, Primary MSE servers and WCS to communicate
among themselves
Select Health Monitor Interface [eth0/eth1] [eth0]: _
```

5. Seleccione la interfaz de conexión directa [none] como se muestra en la imagen.

```
Health monitor interface holds physical IP address of this MSE server.
This IP address is used by Secondary, Primary MSE servers and WCS to communicate
among themselves

Select Health Monitor Interface [eth0/eth1] [eth0]:
-----
Direct connect configuration facilitates use of a direct cable connection between
the primary and secondary MSE servers.
This can help reduce latencies in heartbeat response times, data replication and
failure detection times.
Please choose a network interface that you wish to use for direct connect. You s
hould appropriately configure the respective interfaces.
\"none\" implies you do not wish to use direct connect configuration.

Select direct connect interface [eth0/eth1/none] [none]: _
```

6. Introduzca esta información y, como se muestra en la imagen:Dirección IP virtual - [10.10.10.11]Máscara de red - [255.255.255.0]Iniciar MSE en modo de recuperación - [No]

```
Select direct connect interface [eth0/eth1/none] [none]:
Enter a Virtual IP address for first this primary MSE server
Enter Virtual IP address [1.1.1.1]: 10.10.10.11
Enter the network mask for IP address 10.10.10.11.
Enter network mask [1.1.1.1]: 255.255.255.0
Choose to start the server in recovery mode.
You should choose yes only if this primary was paired earlier and you have now l
ost the configuration from this box.
And, now you want to restore the configuration from Secondary via NCS
Do you wish to start this MSE in HA recovery mode ?: (yes/no): no_
```

7. Introduzca esta información y, como se muestra en la imagen:Configurar Eth0 - [Sí]Introduzca la dirección IP Eth0- [10.10.10.12]Máscara de red - [255.255.255.0]Gateway predeterminado - [10.10.10.1]

```
Current IP address=[1.1.1.10]
Current eth0 netmask=[255.255.255.0]
Current gateway address=[1.1.1.1]
Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes]

Enter an IP address for first ethernet interface of this machine.

Enter eth0 IP address [1.1.1.10]: 10.10.10.12

Enter the network mask for IP address 10.10.10.12.

Enter network mask [255.255.255.0]:

Enter an default gateway address for this machine.

Note that the default gateway must be reachable from
the first ethernet interface.

Enter default gateway address [1.1.1.1]: 10.10.10.1
```

8. No se utiliza la segunda interfaz Ethernet (Eth1).Configure la interfaz eth1 - [saltar] como se muestra en la imagen.

```
The second ethernet interface is currently disabled for this machine.
Configure eth1 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: s
```

9. Continúe con el asistente de configuración como se muestra en las imágenes.Es fundamental habilitar el servidor NTP para sincronizar el reloj.La zona horaria preferida es UTC.

```
Domain Name Service (DNS) Setup
DNS is currently enabled.
No DNS servers currently defined
Configure DNS related parameters? (Y)es/(S)kip/(U)se default [Yes]: s

Current timezone=[America/New_York]
Configure timezone? (Y)es/(S)kip/(U)se default [Yes]:

Enter the current date and time.

Please identify a location so that time zone rules can be set correctly.
Please select a continent or ocean.
 1) Africa
 2) Americas
 3) Antarctica
 4) Arctic Ocean
 5) Asia
 6) Atlantic Ocean
 7) Australia
 8) Europe
 9) Indian Ocean
10) Pacific Ocean
11) UTC - I want to use Coordinated Universal Time.
12) Return to previous setup step (^).

#? 11
```

Network Time Protocol (NTP) Setup.

If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time.

NTP is currently disabled.

Configure NTP related parameters? (Y)es/(S)kip/(U)se default [Yes]:

Enter whether or not you would like to set up the Network Time Protocol (NTP) for this machine.

If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time.

Enable NTP (yes/no) [no]: yes

Enter NTP server name or address: ntp.network.local

Esto resume la configuración principal de MSE VA:

-----BEGIN-----

Role=1, Health Monitor Interface=eth0, Direct connect interface=none

Virtual IP Address=10.10.10.11, Virtual IP Netmask=255.255.255.0

Eth0 IP address=10.10.10.12, Eth0 network mask=255.0.0.0

Default Gateway=10.10.10.1

-----END-----

10. Ingrese **yes** para confirmar que toda la información de configuración es correcta, como se muestra en la imagen.

Please verify the following setup information.

-----BEGIN-----

Host name=mse1

 Role=1, Health Monitor Interface=eth0, Direct connect interface=none

 Virtual IP Address=10.10.10.11, Virtual IP Netmask=255.255.255.0

 Eth0 IP address=10.10.10.12, Eth0 network mask=255.255.255.0

 Default gateway=10.10.10.1

 Time zone=UTC

 Enable NTP=yes, NTP servers=10.10.10.10

-----END-----

You may enter "yes" to proceed with configuration, "no" to make more changes, or "^" to go back to the previous step.

Configuration Changed

Is the above information correct (yes, no, or ^): yes

11. Se recomienda reiniciar después de la configuración, como se muestra en la

```
[root@mse1 ~]# reboot
Stopping MSE Platform
```

imagen.

12. Despues de un reinicio, inicie los servicios MSE con los comandos /etc/init.d/msed start o service msed start como se muestra en la imagen.

```
[root@mse1 ~]# getserverinfo
Health Monitor is not running
[root@mse1 ~]# /etc/init.d/mseed start
Starting MSE Platform

ip_tables: (C) 2000-2006 Netfilter Core Team
Netfilter messages via NETLINK v0.30.
ip_conntrack version 2.4 (8192 buckets, 65536 max) - 304 bytes per conntrack
Starting Health Monitor, Waiting to check the status.
Starting Health Monitor, Waiting to check the status.
Health Monitor successfully started
Starting Admin process...
Started Admin process.
Starting database .....
Database started successfully. Starting framework and services .....
Framework and services successfully started

[root@mse1 ~]#
```

13. Después de que se hayan iniciado todos los servicios, confirme que los servicios MSE estén funcionando correctamente con el comando `getserverinfo`. El estado de la operación debe mostrar **Up** como se muestra en la imagen.

```
Active Wired Clients: 0
Active Elements(Wireless Clients, Rogue APs, Rogue Clients, Interferers, Wired Clients, Tags) Limit: 100
Active Sessions: 0
Wireless Clients Not Tracked due to the limiting: 0
Tags Not Tracked due to the limiting: 0
Rogue APs Not Tracked due to the limiting: 0
Rogue Clients Not Tracked due to the limiting: 0
Interferers Not Tracked due to the limiting: 0
Wired Clients Not Tracked due to the limiting: 0
Total Elements(Wireless Clients, Rogue APs, Rogue Clients, Interferers, Wired Clients) Not Tracked due to the limiting: 0

-----
Context Aware Sub Services
-----

Subservice Name: Aeroscout Tag Engine
Admin Status: Disabled
Operation Status: Down

Subservice Name: Cisco Tag Engine
Admin Status: Enabled
Operation Status: Up
[root@mse1 ~]#
```

Configuración del MSE secundario

Estos pasos forman parte de la configuración para el VA MSE secundario:

1. Despues de la nueva instalación, el inicio de sesión inicial inicia el asistente de configuración. Introduzca esta información como se muestra en la imagen: Configurar alta disponibilidad - [Sí] Seleccionar rol - [2] que indica secundario Interfaz de supervisión de estado - [eth0] igual que la principal

```
Current hostname=[mse]
Configure hostname? (Y)es/(S)kip/(U)se default [Yes]: yes

The host name should be a unique name that can identify
the device on the network. The hostname should start with
a letter, end with a letter or number, and contain only
letters, numbers, and dashes.

Enter a host name [mse]: mse2

Current domain=[]
Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: s

Current role=[Primary]
Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]:
High availability role for this MSE (Primary/Secondary)

Select role [1 for Primary, 2 for Secondary] [1]: 2

Health monitor interface holds physical IP address of this MSE server.
This IP address is used by Secondary, Primary MSE servers and WCS to communicate
among themselves

Select Health Monitor Interface [eth0/eth1] [eth0]:
```

2. Introduzca la información como se muestra en la imagen:Conexión directa -
[Ninguno]Dirección IP eth0 - [10.10.10.13]Máscara de red - [255.255.255.0]Gateway predeterminado -
[10.10.10.1]

```
-----
Select direct connect interface [eth0/eth1/none] [none]:

Current IP address=[1.1.1.10]
Current eth0 netmask=[255.255.255.0]
Current gateway address=[1.1.1.1]
Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: 

Enter an IP address for first ethernet interface of this machine.

Enter eth0 IP address [1.1.1.10]: 10.10.10.13

Enter the network mask for IP address 10.10.10.13.

Enter network mask [255.255.255.0]: 

Enter an default gateway address for this machine.

Note that the default gateway must be reachable from
the first ethernet interface.

Enter default gateway address [1.1.1.1]: 10.10.10.1
```

3. Configure la interfaz eth1 - [Skip] como se muestra en la imagen.

```
Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes]:  
Enter an IP address for first ethernet interface of this machine.  
Enter eth0 IP address [1.1.1.10]: 10.10.10.13  
Enter the network mask for IP address 10.10.10.13.  
Enter network mask [255.255.255.0]:  
Enter an default gateway address for this machine.  
Note that the default gateway must be reachable from  
the first ethernet interface.  
Enter default gateway address [1.1.1.1]: 10.10.10.1  
The second ethernet interface is currently disabled for this machine.  
Configure eth1 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: s
```

4. Establezca la zona horaria - [UTC] como se muestra en la imagen.

```
Current timezone=[America/New_York]  
Configure timezone? (Y)es/(S)kip/(U)se default [Yes]:  
  
Enter the current date and time.  
  
Please identify a location so that time zone rules can be set correctly.  
Please select a continent or ocean.  
1) Africa  
2) Americas  
3) Antarctica  
4) Arctic Ocean  
5) Asia  
6) Atlantic Ocean  
7) Australia  
8) Europe  
9) Indian Ocean  
10) Pacific Ocean  
11) UTC - I want to use Coordinated Universal Time.  
12) Return to previous setup step (^).  
#? 11
```

5. Habilite el servidor NTP como se muestra en la imagen.

Network Time Protocol (NTP) Setup.

If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time.

NTP is currently disabled.

Configure NTP related parameters? (Y)es/(S)kip/(U)se default [Yes]:

Enter whether or not you would like to set up the Network Time Protocol (NTP) for this machine.

If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time.

Enable NTP (yes/no) [no]: yes

Enter NTP server name or address: ntp.network.local

6. Complete los pasos restantes del asistente de configuración y confirme la información de configuración para guardar la configuración como se muestra en la imagen.

Please verify the following setup information.

-----BEGIN-----

```
Host name=mse2
      Role=2, Health Monitor Interface=eth0, Direct connect interface=none

Eth0 IP address=10.10.10.13, Eth0 network mask=255.255.255.0
Default gateway=10.10.10.1
Time zone=UTC
Enable NTP=yes, NTP servers=10.10.10.10
```

-----END-----

You may enter "yes" to proceed with configuration, "no" to make more changes, or "^" to go back to the previous step.

Configuration Changed

Is the above information correct (yes, no, or ^): yes

7. Reinicie e inicie los servicios del mismo modo que los pasos anteriores para el MSE primario, como se muestra en la imagen.

```
[root@mse2 ~]# /etc/init.d/msed start
Starting MSE Platform


ip_tables: (C) 2000-2006 Netfilter Core Team
Netfilter messages via NETLINK v0.30.
ip_conntrack version 2.4 (8192 buckets, 65536 max) - 304 bytes per conntrack
Starting Health Monitor, Waiting to check the status.
Starting Health Monitor, Waiting to check the status.
Health Monitor successfully started
Starting Admin process...
Started Admin process.
Starting database .....
Database started successfully. Starting framework and services .....
Framework and services successfully started
```

```
[root@mse2 ~]# _
```


Gestionarlas desde Cisco Prime NCS (o Prime Infrastructure)

Los siguientes pasos muestran cómo agregar el VA MSE primario y secundario al NCS. Realice el proceso normal de agregar un MSE al NCS. Consulte la guía de configuración para obtener ayuda.

1. Desde NCS, navegue hasta **Systems > Mobility Services** y elija **Mobility Services Engines** como se muestra en la imagen.

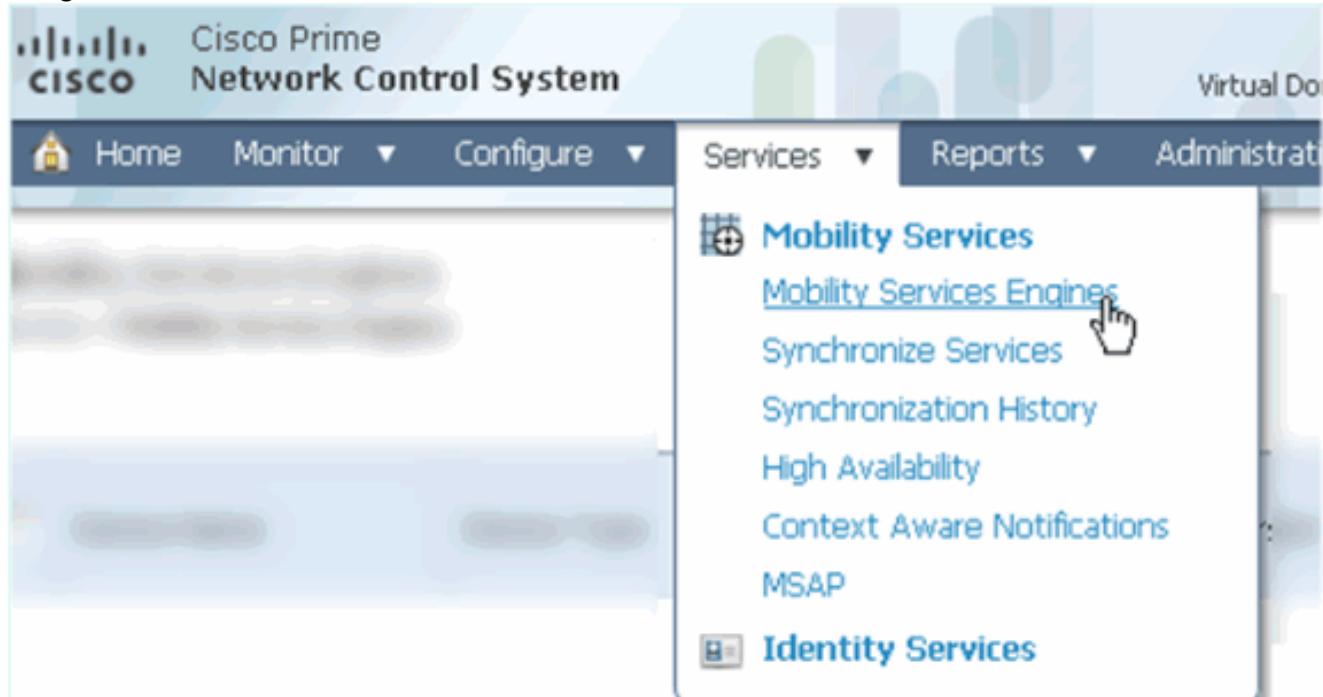

2. En el menú desplegable, elija **Add Mobility Services Engine**. A continuación, haga clic en Ir como se muestra en la imagen.

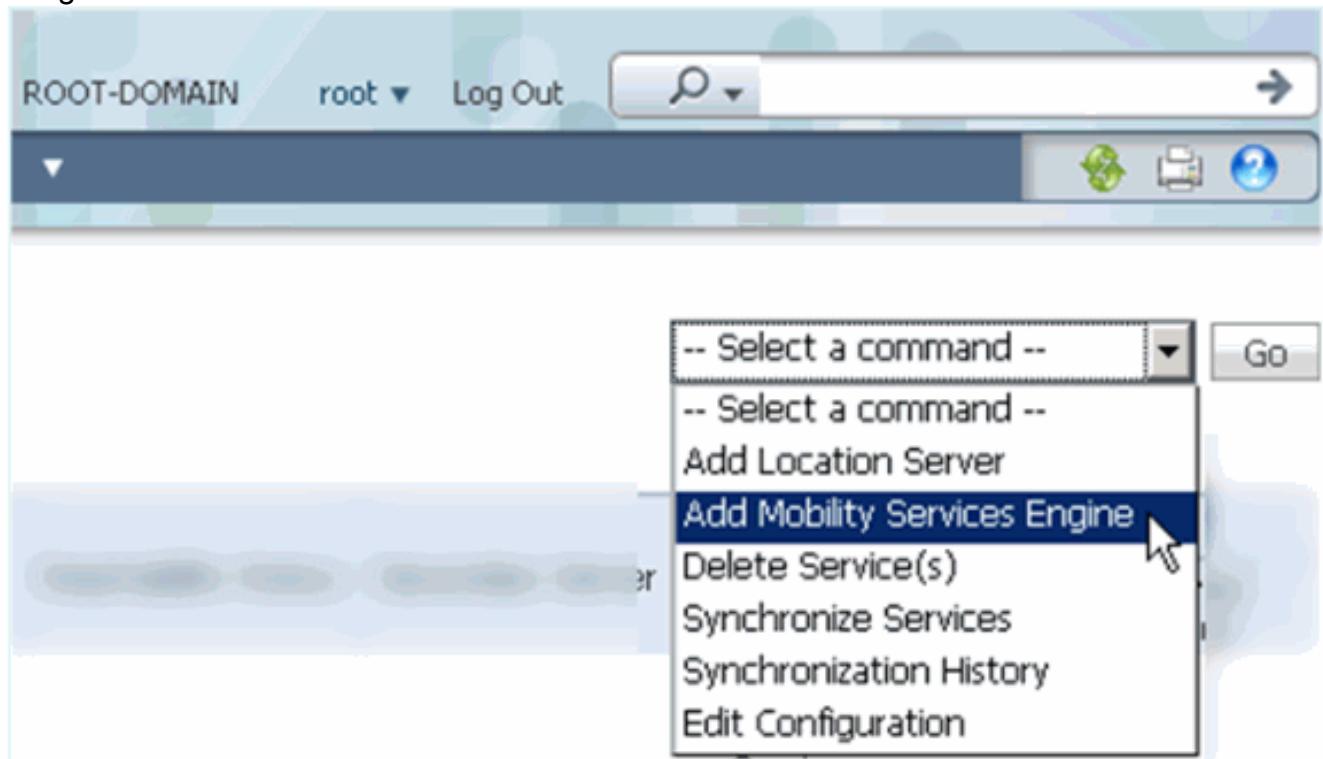

3. Siga el asistente de configuración de NCS para MSE. En el escenario de este documento,

los valores son: Introduzca el nombre del dispositivo (p. ej. [MSE1]) Dirección IP - [10.10.10.12] Nombre de usuario y contraseña (por configuración inicial) Haga clic en **Next** como se muestra en la imagen.

The screenshot shows the Cisco Prime Network Control System interface. On the left, a sidebar lists 'Add MSE Configuration' options: Licensing, Select Service, Tracking, and Assign Maps. The main panel is titled 'Add Mobility Services Engine'. It contains fields for 'Device Name' (mse1), 'IP Address' (10.10.10.12), 'Contact Name' (empty), 'Username' (admin), 'Password' (*****), and 'HTTP' (checkbox checked). Below these fields is a note about deleting synchronized service assignments, which is checked. A warning message states: 'Selecting Delete synchronized service assignments permanently removes all service assignments from this MSE. Existing location history data is retained, however you must use manual service assignments to reassign services to this MSE.' A 'Enable' checkbox is also present.


4. Agregue todas las licencias disponibles y, a continuación, haga clic en **Siguiente** como se muestra en la imagen.

The screenshot shows the Cisco Prime Network Control System interface. On the left, a sidebar lists 'Edit MSE Configuration' options: Licensing, Select Service, Tracking, and Assign Maps. The main panel is titled 'MSE License Summary'. It displays a table of licenses for the MSE named 'mse1'. The table has columns: MSE Name (UDI), Service, Platform Limit, Type, and Installed Limit. The data is as follows:

MSE Name (UDI)	Service	Platform Limit	Type	Installed Limit
mse1 Activated (AIR-MSE-VA-K9:V01:mse1_d5972642-5696-11e1-bd0c)	CAS	2000	CAS Elements	100
	wIPS	2000	wIPS Monitor Mode APs	10
			wIPS Local Mode APs	10
	MSAP	2000	Service Advertisement Clicks	1000

At the bottom of the panel are two buttons: 'Add License' and 'Remove License'.

5. Seleccione servicios MSE y luego haga clic en **Next** como se muestra en la imagen.

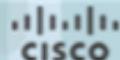

Edit MSE Configuration

Licensing

Select Service

Tracking

Assign Maps

Select Mobility Service

- Context Aware Service
- Cisco Context-Aware Engine for Clients and Tags
- Partner Tag Engine ⓘ
- Wireless Intrusion Protection Service
- MSAP Service

6. Habilite los parámetros de rastreo y luego haga clic en **Siguiente** como se muestra en la imagen.



Edit MSE Configuration

Licensing

Select Service

Tracking

Assign Maps


Select Tracking & History Parameters.

Tracking

- Wired Clients
- Wireless Clients
- Rogue AccessPoints
 - Exclude Adhoc Rogue APs
- Rogue Clients
- Interferers
- Active RFID Tags

7. Es opcional asignar mapas y sincronizar servicios MSE. Haga clic en **Finalizado** para completar la adición del MSE al NCS y como se muestra en las imágenes.

The screenshot shows the Cisco Prime Network Control System interface. On the left, there is a vertical sidebar with four items: "Edit MSE Configuration", "Licensing", "Select Service", and "Assign Maps". The "Edit MSE Configuration" item is highlighted. To the right of the sidebar, there is a form with a "Name" field containing "Name" and an "OK" button.

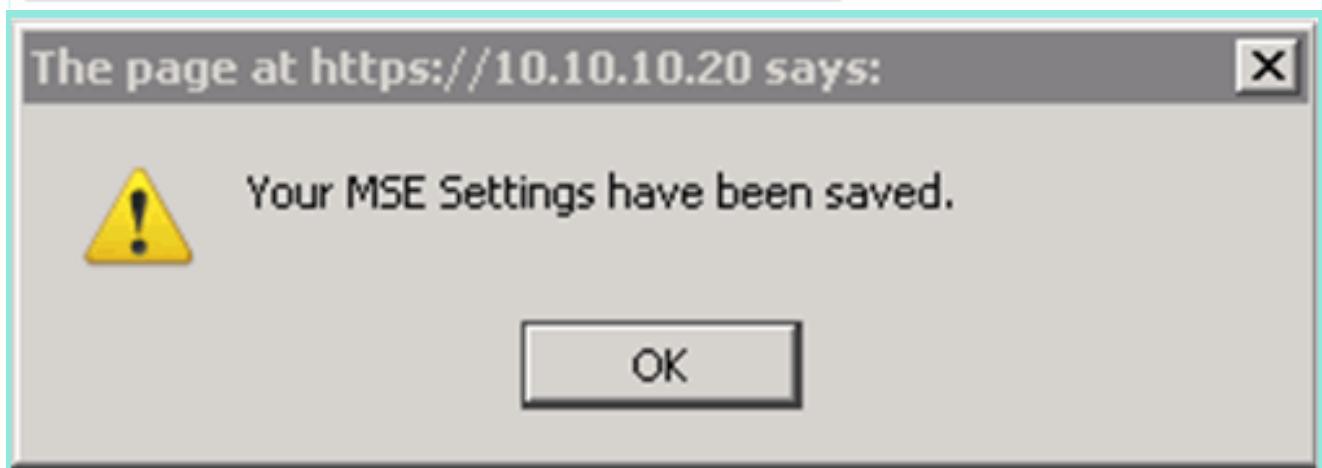

Adición de MSE secundario a Cisco Prime NCS

La siguiente captura de pantalla muestra que se ha agregado el VA de MSE principal. Ahora, complete estos pasos para agregar el VA MSE secundario:

1. Busque la columna Secondary Server (Servidor secundario) y haga clic en el enlace para configurarlo como se muestra en la imagen.

The screenshot shows the Cisco Prime Network Control System interface under the "Services > Mobility Services Engines" section. A table lists Mobility Services Engines. One row shows a device named "mset" with the following details: Device Type "Cisco Mobility Services Engine - Virtual Appliance", IP Address "10.10.10.12", Version "7.2.103.0", Reachability Status "Reachable", and Secondary Server "N/A (Click [here](#) to configure)". The "here" link is highlighted with a cursor. The table has columns for Device Name, Device Type, IP Address, Version, Reachability Status, Secondary Server, and Mobility Service (with sub-columns for Name, Admin Status, and Service Status).

2. Agregue el VA MSE secundario con la configuración en este escenario: Nombre de


dispositivo secundario - [mse2] Dirección IP secundaria - [10.10.10.13] Contraseña secundaria* - [predeterminada o desde el script de configuración] Tipo de conmutación por fallo* - [Automático o Manual] Tipo de reserva* Espera de conmutación por fallo largo* Click Save.* Haga clic en el icono de información o consulte la documentación de MSE, si es necesario.

HA Configuration : mse1
Services > Mobility Services Engines > System > Services High Availability > **Configure High Availability Parameters**

Configure High Availability Parameters

Primary Health Monitor IP	10.10.10.12
Secondary Device Name	<input type="text" value="mse2"/>
Secondary IP Address	<input type="text" value="10.10.10.13"/>
Secondary Password ⓘ	<input type="password" value="*****"/>
Failover Type ⓘ	Automatic <input type="button" value="▼"/>
Fallback Type ⓘ	Manual <input type="button" value="▼"/>
Long Failover Wait ⓘ	<input type="text" value="10"/> seconds

3. Haga clic en **Aceptar** cuando el NCS solicite emparejar los dos MSE como se muestra en la imagen.

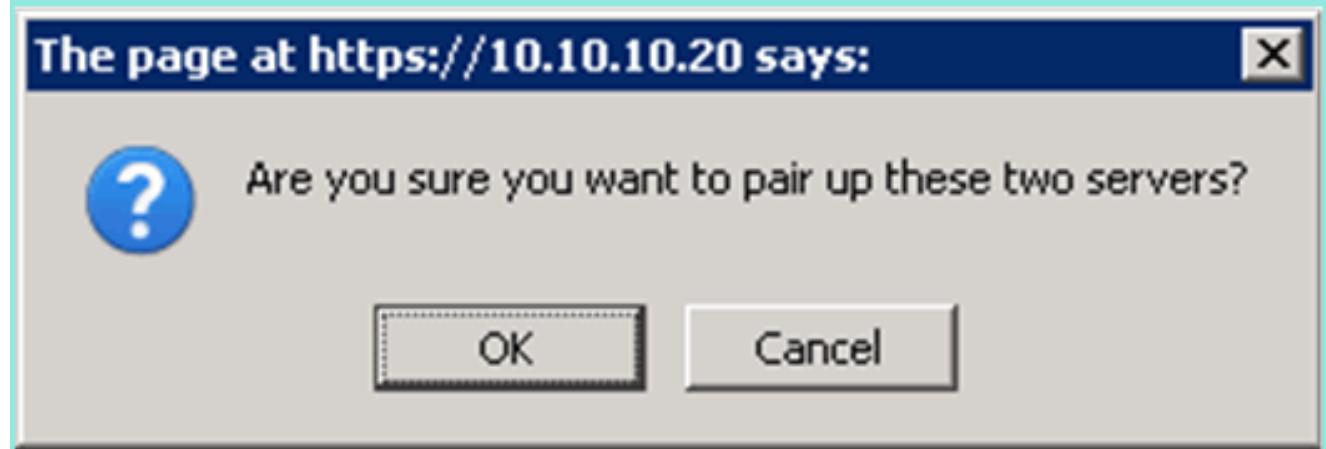

El NCS tarda unos segundos en crear la configuración como se muestra en la imagen.

Please Wait. High Availability configuration is being created at the Primary and Secondary servers. This will take a few seconds...



El NCS indica si el VA MSE secundario requiere una licencia de activación (L-MSE-7.0-K9), como se muestra en la imagen.

The page at https://10.10.10.20 says:



Secondary MSE needs to be activated with a Virtual Appliance license. Add a license and save the config.

OK

4. Haga clic en **Aceptar** y localice el archivo de licencia para activar el secundario como se muestra en la imagen.

HA Configuration : mse1

Services > Mobility Services Engines > System > Services High Availability > **Configure High Availability Parameters**

Configuration

Primary Health Monitor IP	10.10.10.12
Secondary Device Name	mse2
Secondary IP Address	10.10.10.13
Secondary Password ⓘ	*****
Secondary Platform UDI	AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-0050566
Secondary Activation Status	Not Activated
Activate Secondary with License	<input type="text"/> <input type="button" value="Browse..."/>
Failover Type ⓘ	Automatic ▾
Fallback Type ⓘ	Manual ▾
Long Failover Wait ⓘ	10 seconds

5. Una vez que se ha activado el VA MSE secundario, haga clic en **Guardar** para completar la configuración como se muestra en la imagen.

HA Configuration : mse1

Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configuration

Primary Health Monitor IP	10.10.10.12
Secondary Device Name	mse2
Secondary IP Address	10.10.10.13
Secondary Password ⓘ	*****
Secondary Platform UDI	AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-005
Secondary Activation Status	Activated
Delete Secondary Activation license ⓘ	<input type="checkbox"/>
Failover Type ⓘ	Automatic
Fallback Type ⓘ	Manual
Long Failover Wait ⓘ	10 seconds

Buttons:

- Save
- Delete
- Switchover

6. Vaya a NCS > Mobility Services > Mobility Services Engine. NCS muestra esta pantalla donde aparece el MSE secundario en la columna para el servidor secundario:

Mobility Services Engines							-- Select a command --			Go
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server	Mobility Service			
							Name	Admin Status	Service Status	
	mse1	Cisco Mobility Services Engine - Virtual Appliance	10.10.10.11	7.2.103.0	Reachable	mse2	Context Aware Service	Enabled	Up	
							wIPS Service	Disabled	Down	
							MSAP Service	Disabled	Down	

7. Para ver el estado de HA, navegue hasta NCS > Services > High Availability como se muestra en la imagen.

Cisco Prime Network Control System

Mobility Services Engines
Services > High Availability

Secondary Server Name	Secondary HM IP Address	Version
mse2	10.10.10.13	7.2.10

Mobility Services

- Mobility Services Engines
- Synchronize Services
- Synchronization History
- High Availability**
- Context Aware Notifications
- MSAP

Identity Services

En el estado HA, puede ver el estado actual y los eventos del par MSE y como se muestra en la imagen.

Cisco Prime Network Control System

Virtual Domain: ROOT-DOMAIN root Log Out

System HA Configuration : mse1
Services > Mobility Services Engines > System > Services High Availability > Current High Availability Status

Current High Availability Status

Status	Active
Heartbeats	Up
Data Replication	Up
Mean Heartbeat Response Time	6 msec

Events Log

Event Description	Generated By	Timestamp	Remarks
Active	Primary	2012-Feb-14, 00:22:26 UTC	-
Heartbeats have been setup successfully	Primary	2012-Feb-14, 00:19:00 UTC	-
Primary and secondary server synchronization in progress	Primary	2012-Feb-14, 00:18:56 UTC	-
Configuration successfully created	Primary	2012-Feb-14, 00:18:56 UTC	-

Refresh Status

La sincronización inicial y la replicación de datos pueden tardar unos minutos en configurarse. NCS proporciona la indicación % de progreso hasta que el par HA esté completamente activo como se ha visto anteriormente y como se muestra en la imagen.

Current High Availability Status

Status	Primary and secondary server synchronization in progress (68% complete)
Heartbeats	Up
Data Replication	Setting up
Mean Heartbeat Response Time	108 msec

Un nuevo comando introducido con la versión 7.2 del software MSE relacionada con HA es **gethainfo**. Este resultado muestra el primario y el secundario:

```
[root@mse1 ~]#gethainfo
```

```
Health Monitor is running. Retrieving HA related information
```

```
-----  
Base high availability configuration for this server  
-----
```

```
Server role: Primary  
Health Monitor IP Address: 10.10.10.12  
Virtual IP Address: 10.10.10.11  
Version: 7.2.103.0  
UDI: AIR-MSE-VA-K9:V01:mse1  
Number of paired peers: 1
```

```
-----  
Peer configuration#: 1  
-----
```

```
Health Monitor IP Address 10.10.10.13  
Virtual IP Address: 10.10.10.11  
Version: 7.2.103.0  
UDI: AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-0050568901d9  
Failover type: Manual  
Fallback type: Manual  
Failover wait time (seconds): 10  
Instance database name: mseos3s  
Instance database port: 1624  
Dataguard configuration name: dg_mse3  
Primary database alias: mseop3s  
Direct connect used: No  
Heartbeat status: Up  
Current state: PRIMARY_ACTIVE
```

```
[root@mse2 ~]#gethainfo
```

```
Health Monitor is running. Retrieving HA related information
```

```
-----  
Base high availability configuration for this server  
-----
```

```
Server role: Secondary  
Health Monitor IP Address: 10.10.10.13  
Virtual IP Address: Not Applicable for a secondary  
Version: 7.2.103.0  
UDI: AIR-MSE-VA-K9:V01:mse2  
Number of paired peers: 1
```

```
-----  
Peer configuration#: 1  
-----
```


```
Health Monitor IP Address 10.10.10.12  
Virtual IP Address: 10.10.10.11  
Version: 7.2.103.0  
UDI: AIR-MSE-VA-K9:V01:mse1_d5972642-5696-11e1-bd0c-0050568901d6  
Failover type: Manual  
Fallback type: Manual  
Failover wait time (seconds): 10  
Instance database name: mseos3
```

```
Instance database port: 1524
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Up
Current state: SECONDARY_ACTIVE
```

Configuración de HA con conexión directa

Network Connected MSE HA utiliza la red, mientras que la configuración de Direct Connect facilita el uso de una conexión de cable directa entre los servidores MSE primario y secundario. Esto puede ayudar a reducir las latencias en los tiempos de respuesta del latido, la replicación de datos y los tiempos de detección de fallos. Para este escenario, un MSE físico primario se conecta a un MSE secundario en la interfaz eth1, como se ve en la figura 5. Tenga en cuenta que Eth1 se utiliza para la conexión directa. Se requiere una dirección IP para cada interfaz.

Figura 5: MSE HA con conexión directa

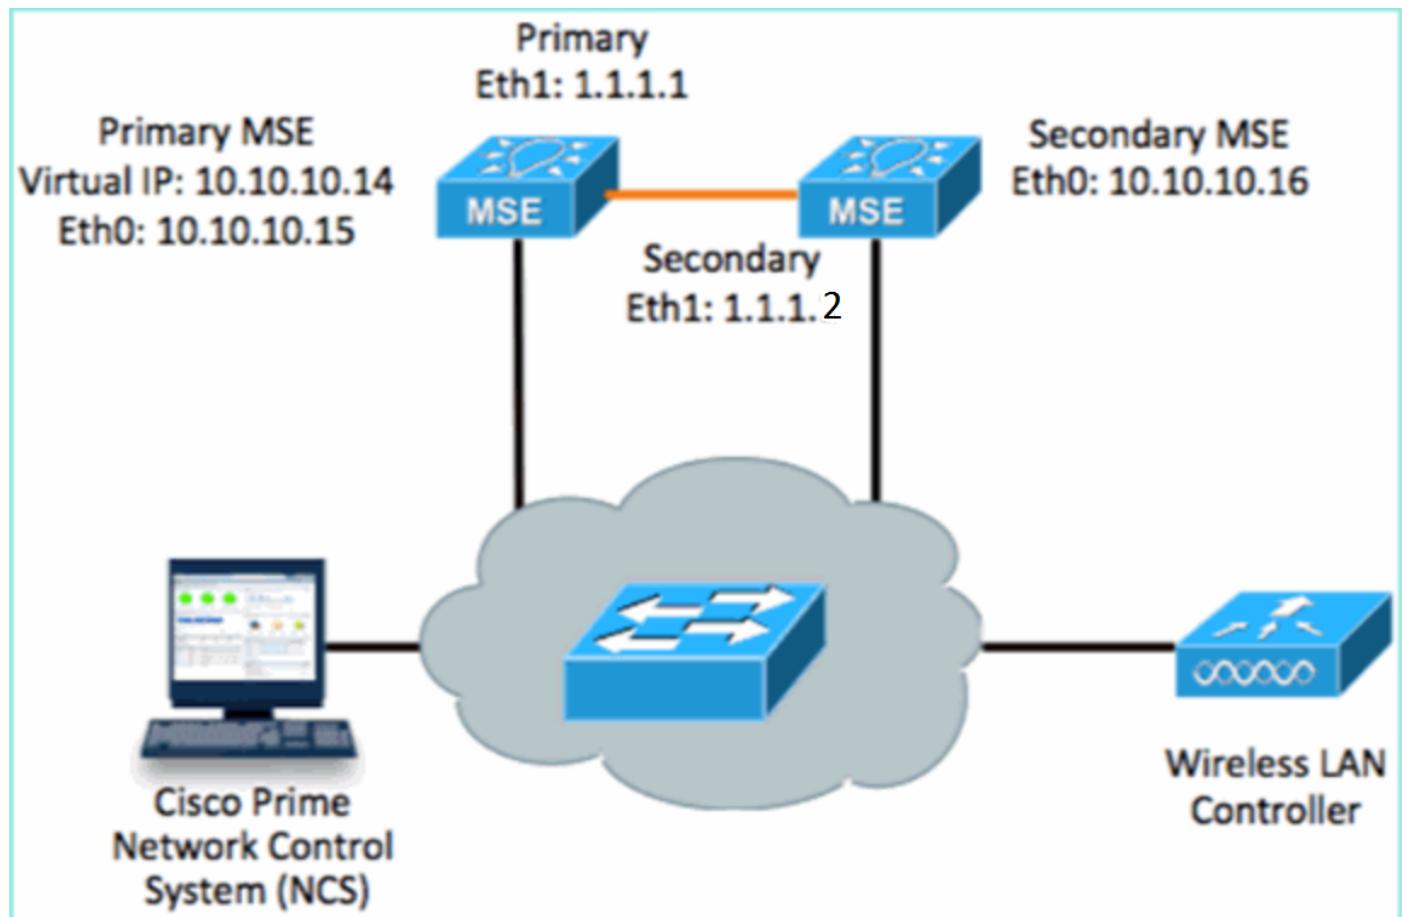

1. Configure el MSE primario. Resumen de la configuración del script de configuración:

```
-----BEGIN-----
Host name=mse3355-1
Role=1 [Primary]
Health Monitor Interface=eth0
Direct connect interface=eth1
Virtual IP Address=10.10.10.14
Virtual IP Netmask=255.255.255.0
Eth1 IP address=1.1.1.1
Eth1 network mask=255.0.0.0
Default Gateway =10.10.10.1
-----END-----
```

2. Configure el MSE secundario. Resumen de la configuración del script de configuración:

```
-----BEGIN-----  
Host name=mse3355-2  
Role=2 [Secondary]  
Health Monitor Interface=eth0  
Direct connect interface=eth1  
Eth0 IP Address 10.10.10.16  
Eth0 network mask=255.255.255.0  
Default Gateway=10.10.10.1  
Eth1 IP address=1.1.1.2,  
Eth1 network mask=255.0.0.0  
-----END-----
```

3. Agregue el MSE principal al NCS como se muestra en la imagen. (consulte ejemplos anteriores o consulte la guía de configuración).

The screenshot shows the Cisco Prime Network Control System (NCS) interface. The top navigation bar includes links for Home, Monitor, Configure, Services (which is selected), Reports, Administration, and user authentication (root). The main content area is titled "Mobility Services Engines" under the "Services > Mobility Services Engines" path. A table lists the current configuration of a device:

<input type="checkbox"/>	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
<input type="checkbox"/>	mse3355-1	Cisco 3355 Mobility Services Engine	10.10.10.14	7.2.103.0	Reachable	N/A (Click here to configure)

4. Para configurar el MSE secundario, navegue hasta **NCS > configure el servidor secundario**. Introduzca el nombre del dispositivo secundario - **[mse3355-2]** Dirección IP secundaria - **[10.10.10.16]** Complete los parámetros restantes y haga clic en **Guardar** como se muestra en la imagen.

Cisco Prime
Network Control System

Virtual Domain: ROOT-

Home Monitor ▾ Configure ▾ Services ▾ Reports ▾ Administration ▾

System


- General Properties
- Active Sessions
- Trap Destinations
- Advanced Parameters
- Logs
- Services High Availability
 - HA Configuration
 - HA Status
- Accounts
 - Users
 - Groups
- Status
 - Server Events
 - Audit Logs

HA Configuration : mse3355-1
Services > Mobility Services Engines > System > Services High Availability

Configure High Availability Parameters

Primary Health Monitor IP	10.10.10.15
Secondary Device Name	mse3355-2
Secondary IP Address	10.10.10.16
Secondary Password	*****
Failover Type	Manual
Fallback Type	Manual
Long Failover Wait	10 seconds

5. Haga clic en **Aceptar** para confirmar el par de los dos MSE como se muestra en la imagen.

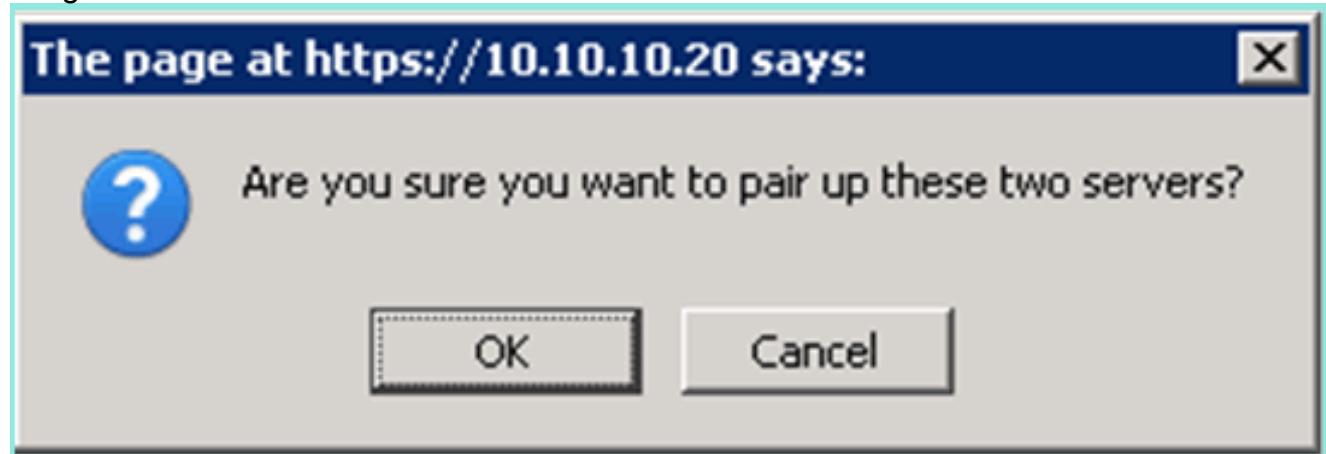

NCS tarda un momento en agregar la configuración del servidor secundario como se muestra en la imagen.

Please Wait. High Availability configuration is being created at the Primary and Secondary servers. This will take a few seconds...

• • • • •

6. Cuando haya terminado, realice cualquier cambio en los parámetros de HA. Haga clic en **Guardar** como se muestra en la imagen.

HA Configuration : mse3355-1

Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configuration

Primary Health Monitor IP	10.10.10.15
Secondary Device Name	mse3355-2
Secondary IP Address	10.10.10.16
Secondary Password ⓘ	*****
Secondary Platform UDI	AIR-MSE-3355-K9:V01:KQ:
Failover Type ⓘ	Manual
Fallback Type ⓘ	Manual
Long Failover Wait ⓘ	10 seconds

7. Vea el estado HA para el progreso en tiempo real del nuevo par MSE HA como se muestra en la imagen.

The screenshot shows the Cisco Network Control System (NCS) interface. The top navigation bar includes 'CISCO Network Control System', 'Virtual Domain: ROOT-DOMAIN', 'root', 'Log Out', and a search bar. The main menu has tabs like Home, Monitor, Configure, Services, Reports, and Administration. On the left, a sidebar menu under 'System' shows 'General Properties', 'Active Sessions', 'Trap Destinations', 'Advanced Parameters', 'Logs', 'Services High Availability' (which is expanded to show 'HA Configuration' and 'HA Status'), 'Accounts' (with 'Users' and 'Groups'), 'Status' (with 'Server Events', 'Audit Logs', 'NCS Alarms', and 'NCS Events'), and 'NMS Connection Status'. The central content area is titled 'HA Configuration : mse3355-1' and shows 'Current High Availability Status'. It lists 'Status' as 'Primary and secondary server synchronization in progress (66% complete)', 'Heartbeats' as 'Up', 'Data Replication' as 'Setting up', and 'Mean Heartbeat Response Time' as '8 msec'. Below this is an 'Events Log' table with columns 'Event Description', 'Generated By', 'Timestamp', and 'Remarks'. The log contains four entries: 'Configuration updated' by Primary at 2012-Feb-15, 20:10:56 UTC (Remarks: 'Failover mode set to AUTOMATIC.'), 'Heartbeats have been setup successfully' by Primary at 2012-Feb-15, 20:10:11 UTC (Remarks: '-'), 'Primary and secondary server synchronization in progress' by Primary at 2012-Feb-15, 20:10:09 UTC (Remarks: '-'), and 'Configuration successfully created' by Primary at 2012-Feb-15, 20:10:09 UTC (Remarks: '-'). A 'Refresh Status' button is at the bottom of the log table.

8. Navegue hasta NCS > Servicios > Servicios de movilidad > Motores de servicios de movilidad, confirme que el HA de MSE (conexión directa) se agrega al NCS como se muestra en la imagen.

Cisco Prime CISCO Network Control System		Virtual Domain: ROOT-DOMAIN				root ▾ Log Out		Change Password
	Home	Monitor ▾	Configure ▾	Services ▾	Reports ▾	Administration ▾		
Mobility Services Engines								
Services > Mobility Services Engines								
<input type="checkbox"/>	Device Name	Device Type		IP Address	Version	Reachability Status	Secondary Server	
<input type="checkbox"/>	mse3355-1	Cisco 3355 Mobility Services Engine		10.10.10.14	7.2.103.0	Reachable	mse3355-2	

9. Desde la consola, también se puede ver confirmación con el comando **gethainfo**. A continuación se muestra el resultado principal y secundario:

```
[root@mse3355-1 ~]#gethainfo
```

```
Health Monitor is running. Retrieving HA related information
```

```
-----
Base high availability configuration for this server
-----
```

```
Server role: Primary
Health Monitor IP Address: 10.10.10.15
Virtual IP Address: 10.10.10.14
Version: 7.2.103.0
UDI: AIR-MSE-3355-K9:V01:KQ37xx
Number of paired peers: 1
```

```
-----
Peer configuration#: 1
-----
```

```
Health Monitor IP Address 10.10.10.16
Virtual IP Address: 10.10.10.14
Version: 7.2.103.0
UDI: AIR-MSE-3355-K9:V01:KQ45xx
Failover type: Automatic
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3s
Instance database port: 1624
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: Yes
Heartbeat status: Up
Current state: PRIMARY_ACTIVE
```

```
[root@mse3355-2 ~]#gethainfo
```

```
Health Monitor is running. Retrieving HA related information
```

```
-----
Base high availability configuration for this server
-----
```

```
Server role: Secondary
```


```
Health Monitor IP Address: 10.10.10.16
Virtual IP Address: Not Applicable for a secondary
Version: 7.2.103.0
UDI: AIR-MSE-3355-K9:V01:KQ45xx
Number of paired peers: 1
```

```
-----  
Peer configuration#: 1  
-----
```

```
Health Monitor IP Address 10.10.10.15
Virtual IP Address: 10.10.10.14
Version: 7.2.103.0
UDI: AIR-MSE-3355-K9:V01:KQ37xx
Failover type: Automatic
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3
Instance database port: 1524
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: Yes
Heartbeat status: Up
Current state: SECONDARY_ACTIVE
```

Situación de configuración de HA para el dispositivo físico MSE

Según la matriz de emparejamiento, el máximo en la configuración HA es 2:1. Esto está reservado para el MSE-3355, que en el modo secundario, puede soportar un MSE-3310 y MSE-3350. La conexión directa no es aplicable en este escenario.

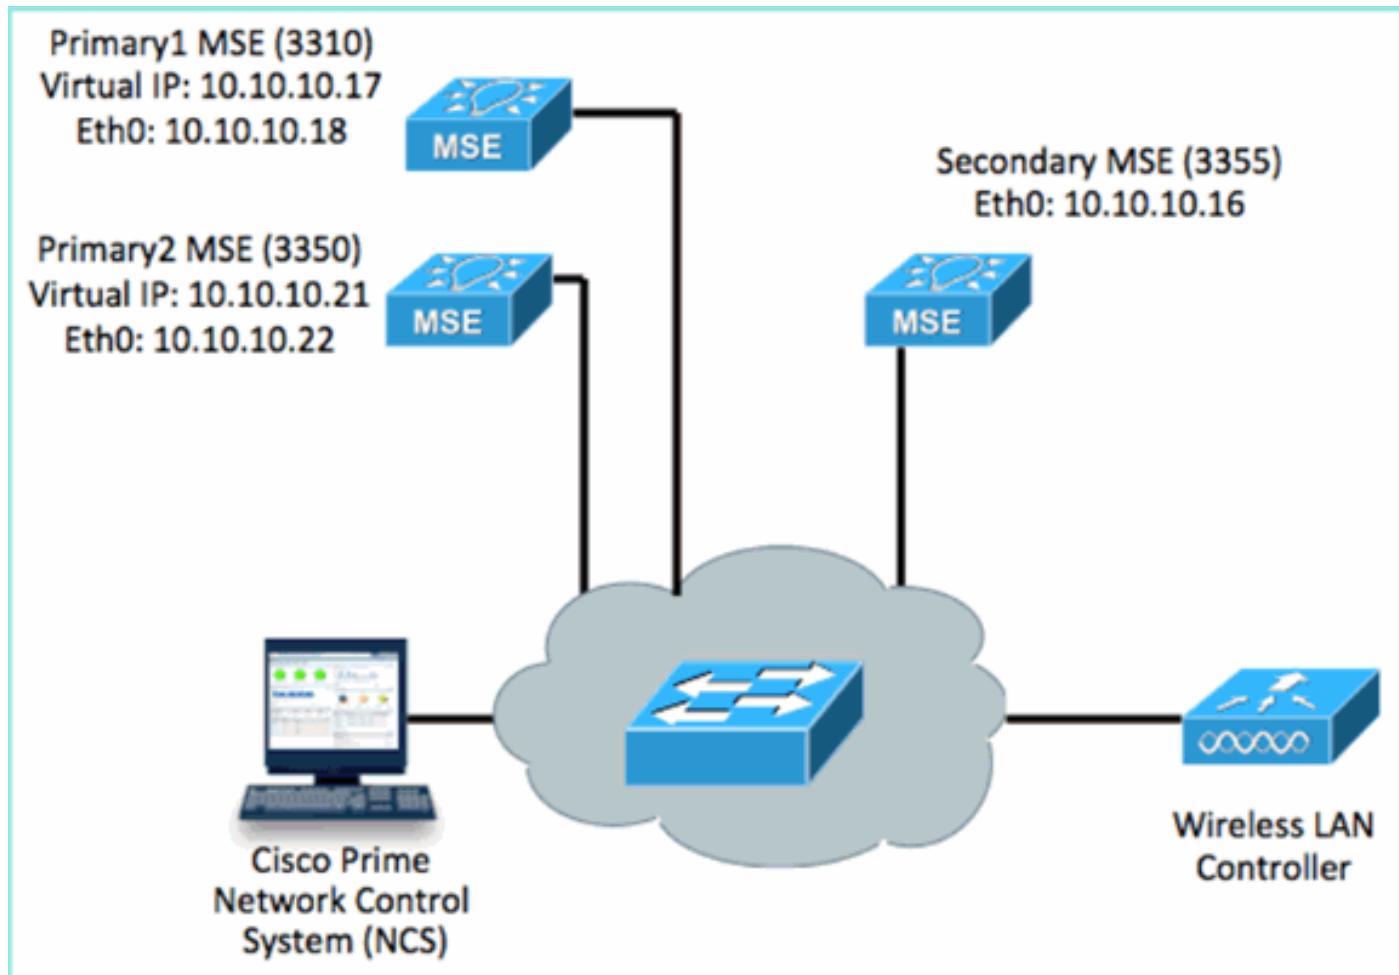

1. Configure cada uno de estos MSE para demostrar el escenario 2:1 HA:

MSE-3310 (Primary1)
Server role: Primary
Health Monitor IP Address (Eth0): 10.10.10.17
Virtual IP Address: 10.10.10.18
Eth1 - Not Applicable

MSE-3350 (Primary2)
Server role: Primary
Health Monitor IP Address: 10.10.10.22
Virtual IP Address: 10.10.10.21
Eth1 - Not Applicable

MSE-3355 (Secondary)
Server role: Secondary
Health Monitor IP Address: 10.10.10.16
Virtual IP Address: Not Applicable for a secondary

2. Después de configurar todos los MSE, agregue Primary1 y Primary2 al NCS como se muestra en la imagen.

The screenshot shows the Cisco Prime Network Control System (NCS) interface. The top navigation bar includes Home, Monitor, Configure, Services, Reports, and Administration. The Services dropdown is expanded, and Mobility Services Engines is selected. The main content area displays a table titled "Mobility Services Engines". The table has columns: Device Name, Device Type, IP Address, Version, Reachability Status, and Secondary Server. There are three entries in the table:

<input type="checkbox"/>	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
<input type="checkbox"/>	mse3350	Cisco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	N/A (Click here to configure)
<input type="checkbox"/>	mse3310	Cisco 3310 Mobility Services Engine	10.10.10.18	7.2.103.0	Reachable	N/A (Click here to configure)

3. Haga clic para configurar el servidor secundario (como se muestra en ejemplos anteriores). Comience con uno de los MSE principales como se muestra en la imagen.

Reachability Status	Secondary Server
Reachable	N/A (Click here to configure)
Reachable	N/A (Click here to configure) 

4. Introduzca los parámetros para el MSE secundario:Nombre de dispositivo secundario: por ejemplo, [mse-3355-2]Dirección IP secundaria - [10.10.10.16]Complete los parámetros restantes.Haga clic en **Guardar** como se muestra en la imagen.


HA Configuration : mse3350
 Services > Mobility Services Engines > System > Services High Availability > **Configure High Availability Parameters**

Configuration

Primary Health Monitor IP	10.10.10.22
Secondary Device Name	mse3355-2
Secondary IP Address	10.10.10.16
Secondary Password ⓘ	*****
Secondary Platform UDI	AIR-MSE-3355-K9:V01:KQ4
Failover Type ⓘ	Manual
Fallback Type ⓘ	Manual
Long Failover Wait ⓘ	10 seconds
<input type="button" value="Save"/> <input type="button" value="Delete"/> <input type="button" value="Switchover"/>	

5. Espere un breve momento para que se configure la primera entrada secundaria como se muestra en la

imagen.

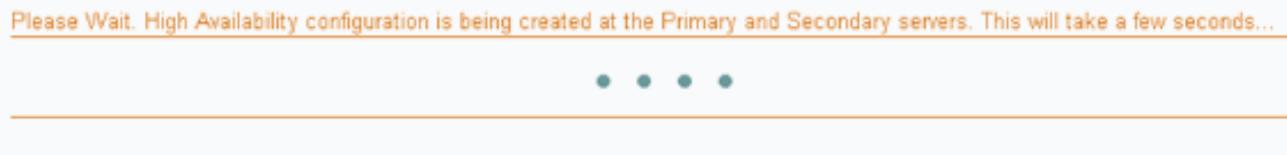

6. Confirme que el servidor secundario se agrega para el primer MSE primario como se muestra en la imagen.

Mobility Services Engines						
Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server	
...	
<input type="checkbox"/> mse3350	Cisco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2	

7. Repita los pasos 3 a 6 para el segundo MSE principal como se muestra en la imagen.

Mobility Services Engines						
Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server	
...	
<input type="checkbox"/> mse3350	Cisco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2	
...	
<input type="checkbox"/> mse3310	Cisco 3310 Mobility Services Engine	10.10.10.18	7.2.103.0	Reachable	N/A (Click here to configure)	

8. Finalice con parámetros HA para el segundo MSE primario como se muestra en la imagen.

HA Configuration : mse3310

Services > Mobility Services Engines > System > Services High Availability > **Configure High Availability Parameters**

Configure High Availability Parameters

Primary Health Monitor IP	10.10.10.17
Secondary Device Name	<input type="text" value="mse3355-2"/>
Secondary IP Address	<input type="text" value="10.10.10.16"/>
Secondary Password ⓘ	<input type="password" value="*****"/>
Failover Type ⓘ	<input type="button" value="Manual"/>
Fallback Type ⓘ	<input type="button" value="Manual"/>
Long Failover Wait ⓘ	<input type="text" value="10"/> seconds

9. **Guarde** la configuración como se muestra en la imagen.

HA Configuration : mse3310

Services > Mobility Services Engines > System > Services High Availability > **Configure High Availability Parameters**

Configuration

Primary Health Monitor IP	10.10.10.17
Secondary Device Name	mse3355-2
Secondary IP Address	10.10.10.16
Secondary Password ⓘ	<input type="password" value="*****"/>
Secondary Platform UDI	AIR-MSE-3355-K9:V01:KQ <input type="button" value=""/>
Failover Type ⓘ	<input type="button" value="Manual"/>
Fallback Type ⓘ	<input type="button" value="Manual"/>
Long Failover Wait ⓘ	<input type="text" value="10"/> seconds

10. Verifique el estado para el progreso de cada uno de los MSEs Principales como se muestra en la imagen.

Cisco Prime Network Control System

Virtual Domain: ROOT-DOMAIN root Log Out

Home Monitor Configure Services Reports Administration

System

HA Configuration : mse3310
Services > Mobility Services Engine > System > Services High Availability > Current High Availability Status

Current High Availability Status

Status	Primary and secondary server synchronization in progress (60% complete)
Heartbeats	Up
Data Replication	Setting up
Mean Heartbeat Response Time	8 msec

Events Log

Event Description	Generated By	Timestamp
Heartbeats have been setup successfully	Primary	2012-Feb-17, 20:54:36 UTC
Primary and secondary server synchronization in progress	Primary	2012-Feb-17, 20:54:32 UTC
Configuration successfully created	Primary	2012-Feb-17, 20:54:32 UTC

Refresh Status


11. Confirme que los MSE Primarios1 y Primarios2 estén configurados con un MSE Secundario como se muestra en la imagen.

Mobility Services Engines

Services > Mobility Services Engines

<input type="checkbox"/>	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
<input type="checkbox"/>	mse3350	Cisco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2
<input type="checkbox"/>	mse3310	Cisco 3310 Mobility Services Engine	10.10.10.18	7.2.103.0	Reachable	mse3355-2

12. Navegue hasta NCS > Services > Mobility Services, elija High Availability como se muestra en la imagen.

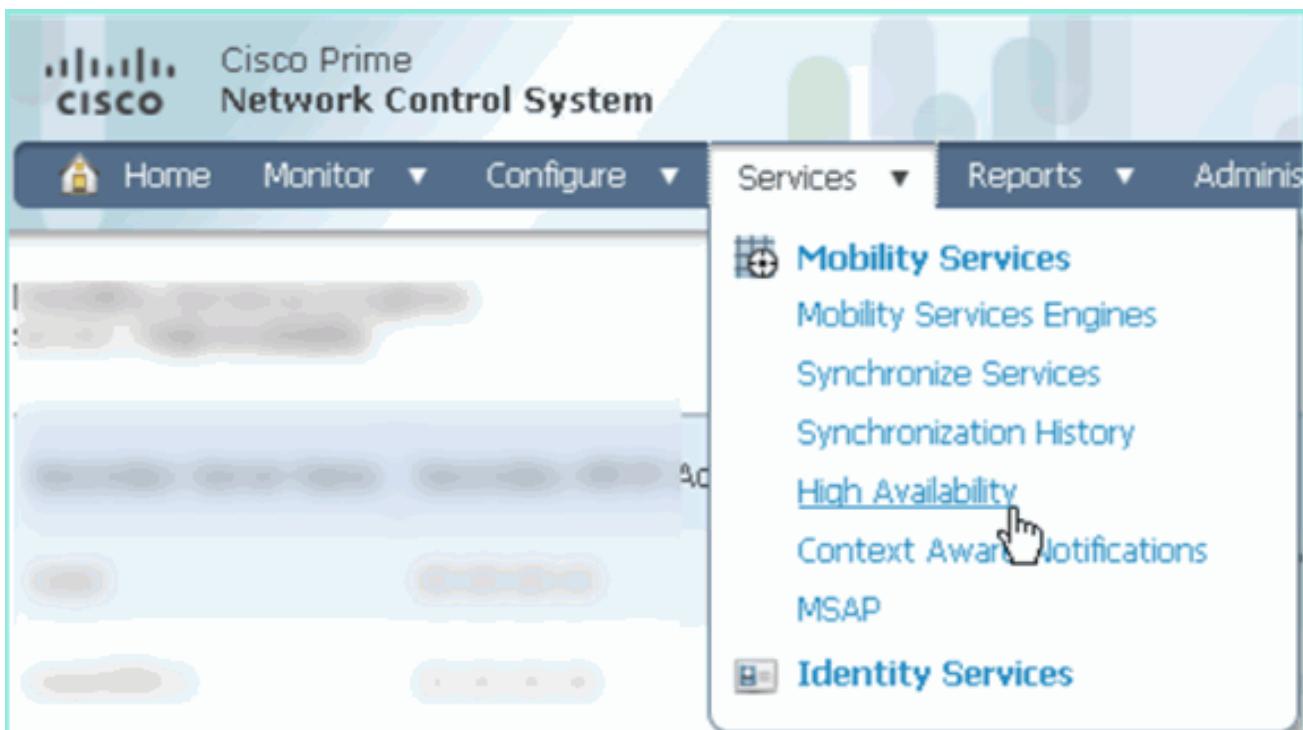

Tenga en cuenta que 2:1 se confirma para el MSE-3355 como secundario para MSE-3310 y MSE-3350 como se muestra en la imagen.

Mobility Services Engines						
Services > <u>High Availability</u>						
Secondary Server Name	Secondary HM IP Address	Secondary Device Type	Version	Associated Primary Mobility Service Engines		
			Device Name	Device Type	Heartbeats	
mse3355-2	10.10.10.16	Cisco 3355 Mobility Services Engine	7.2.103.0	mse3310 mse3350	Cisco 3310 Mobility Services Engine Cisco 3350 Mobility Services Engine	Up Up

A continuación se muestra un ejemplo de salida de la configuración HA desde la consola de los tres MSE cuando se utiliza el comando **gethainfo**:

```
[root@mse3355-2 ~]#gethainfo
```

```
Health Monitor is running. Retrieving HA related information
```

```
-----
Base high availability configuration for this server
-----
```

```
Server role: Secondary
Health Monitor IP Address: 10.10.10.16
Virtual IP Address: Not Applicable for a secondary
Version: 7.2.103.0
UDI: AIR-MSE-3355-K9:V01:KQ45xx
Number of paired peers: 2
```

```
-----
Peer configuration#: 1
-----
```

```
Health Monitor IP Address 10.10.10.22
Virtual IP Address: 10.10.10.21
Version: 7.2.103.0
UDI: AIR-MSE-3350-K9:V01:MXQ839xx
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3
Instance database port: 1524
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Up
Current state: SECONDARY_ACTIVE
```

```
-----  
Peer configuration#: 2  
-----
```

```
Health Monitor IP Address 10.10.10.17
Virtual IP Address: 10.10.10.18
Version: 7.2.103.0
UDI: AIR-MSE-3310-K9:V01:FTX140xx
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos4
Instance database port: 1525
Dataguard configuration name: dg_mse4
Primary database alias: mseop4s
Direct connect used: No
Heartbeat status: Up
Current state: SECONDARY_ACTIVE
```

La validación final para HA en el NCS muestra el estado como activo completo tanto para el MSE-3310 como para el MSE-3350 como se muestra en las imágenes.

The screenshot shows the Cisco Prime Network Control System interface. The top navigation bar includes Home, Monitor, Configure, Services, Reports, and Administration. The left sidebar under the 'System' tab is expanded, showing General Properties, Active Sessions, Trap Destinations, Advanced Parameters, Logs, Services High Availability (with HA Configuration and HA Status selected), Accounts (Users and Groups), Status (Server Events and Audit Logs), and Audit Logs. The main content area displays the 'HA Configuration : mse3310' page, which is part of the path: Services > Mobility Services Engines > System > Services High Availability > Current High Availability Status. The 'Current High Availability Status' section shows the following table:

	Status	Active
Heartbeats	Up	
Data Replication	Up	
Mean Heartbeat Response Time	5 millisec	

Below this is the 'Events Log' section, which lists the following events:

Event Description	Generated By
Active	Primary
Heartbeats have been setup successfully	Primary
Primary and secondary server synchronization in progress	Primary
Configuration successfully created	Primary

Cisco Prime Network Control System

Home Monitor ▾ Configure ▾ Services ▾ Reports ▾ Administration ▾

System HA Configuration : mse3350
Services > Mobility Services Engines > System > Services High Availability > Current High Availability Status

Current High Availability Status

Status	Active
Heartbeats	Up
Data Replication	Up
Mean Heartbeat Response Time	4 msec

Events Log

Event Description	Generated By
Active	Primary
Heartbeats have been setup successfully	Primary
Primary and secondary server synchronization in progress	Primary
Configuration successfully created	Primary


Verificación

Actualmente, no hay un procedimiento de verificación disponible para esta configuración.

Resolución de problemas básicos de MSE HA

En esta sección se brinda información que puede utilizar para resolver problemas en su configuración.

Cuando agrega el MSE secundario, puede ver un mensaje como se muestra en la imagen.

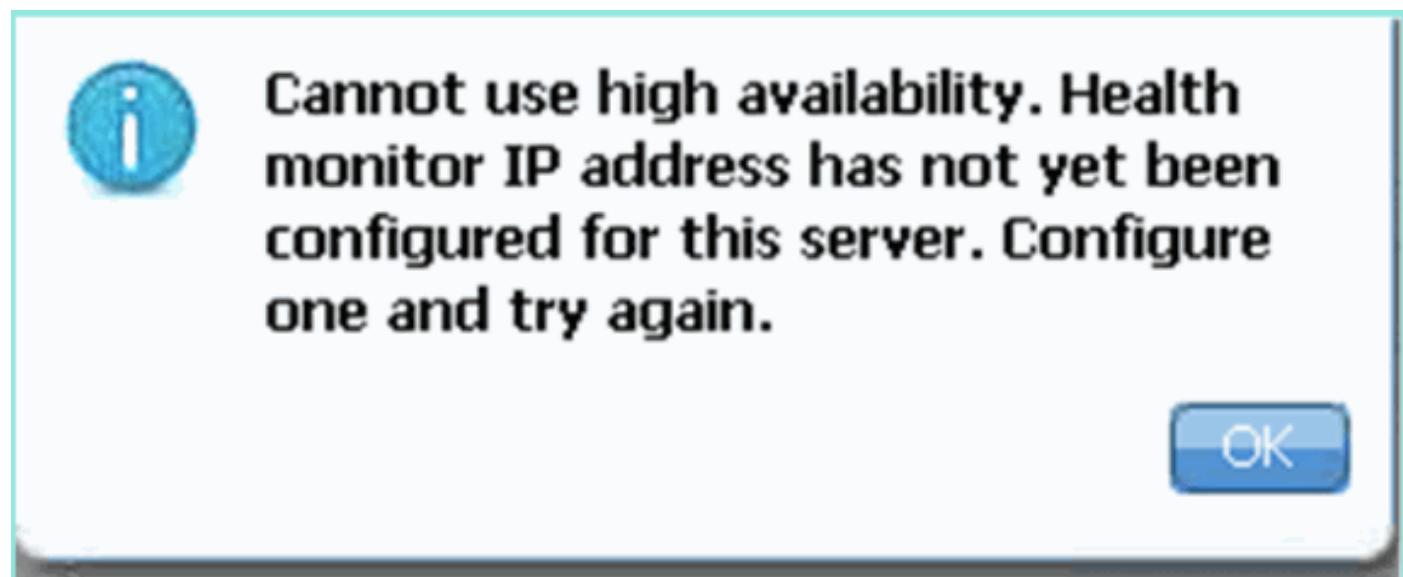


Es posible que se haya producido un problema durante el script de configuración.

- Ejecute el comando `getserverinfo` para verificar la configuración de red adecuada.
- También es posible que los servicios no hayan comenzado. Ejecute el comando `/init.d/msed`

start.

- Vuelva a ejecutar el script de configuración si es necesario (`/mse/setup/setup.sh`) y guárdelo al final.

El VA para MSE también requiere una licencia de activación (L-MSE-7.0-K9). De lo contrario, el NCS solicita que se agregue el VA MSE secundario. Obtenga y agregue la licencia de activación para el MSE VA como se muestra en la imagen.

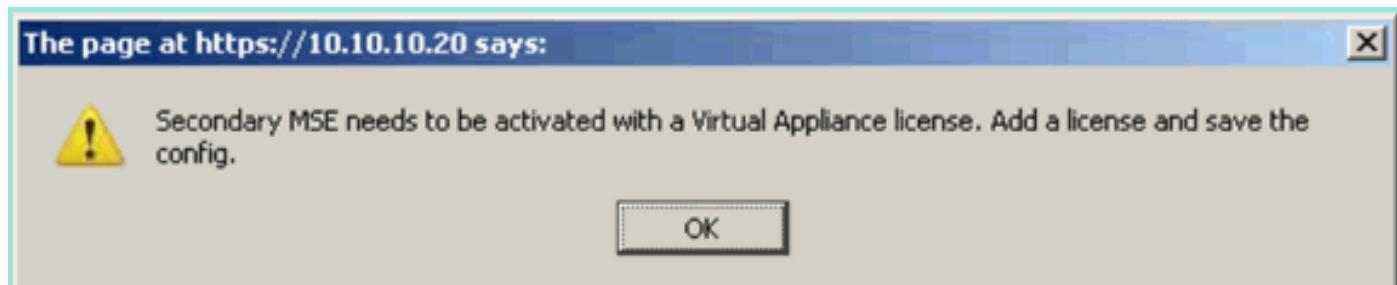

Si cambia el rol HA en el MSE, asegúrese de que los servicios se detengan completamente. Por lo tanto, detenga los servicios con el comando `/init.d/mse stop` y luego ejecute nuevamente el script de configuración (`/mse/setup/setup.sh`) como se muestra en la imagen.

```
Applying High Availability configuration
*** User has switched roles for this MSE. MSE must be stopped before switching roles.
*** Please stop MSE and then re-run setup.sh.
ERROR: One or more of the requested configurations was not applied.
Role=2, Health Monitor Interface=eth0, Direct connect interface=none
Success
[root@mse2 setup]
```

Ejecute el comando `gethainfo` para obtener información de HA en el MSE. Esto proporciona información útil para la resolución de problemas o la supervisión del estado y los cambios de HA.

```
[root@mse3355-2 ~]#gethainfo
Health Monitor is running. Retrieving HA related information
-----
Base high availability configuration for this server
-----

Server role: Secondary
Health Monitor IP Address: 10.10.10.16
Virtual IP Address: Not Applicable for a secondary
Version: 7.2.103.0
UDI: AIR-MSE-3355-K9:V01:KQ45xx
Number of paired peers: 2

-----
Peer configuration#: 1
-----

Health Monitor IP Address 10.10.10.22
Virtual IP Address: 10.10.10.21
Version: 7.2.103.0
UDI: AIR-MSE-3350-K9:V01:MXQ839xx
```

```
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3
Instance database port: 1524
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Up
Current state: SECONDARY_ACTIVE
```

```
-----  
Peer configuration#: 2  
-----
```

```
Health Monitor IP Address 10.10.10.17
Virtual IP Address: 10.10.10.18
Version: 7.2.103.0
UDI: AIR-MSE-3310-K9:V01:FTX140xx
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos4
Instance database port: 1525
Dataguard configuration name: dg_mse4
Primary database alias: mseop4s
Direct connect used: No
Heartbeat status: Up
Current state: SECONDARY_ACTIVE
```

Además, NCS HA View es una gran herramienta de administración para obtener visibilidad de la configuración HA para MSE como se muestra en la imagen.

The screenshot shows the Cisco Prime Network Control System (NCS) interface. The top navigation bar includes links for Home, Monitor, Configure, Services, Reports, and Administration. The left sidebar has a tree view with nodes like System, General Properties, Active Sessions, Trap Destinations, Advanced Parameters, Logs, Services High Availability (selected), HA Configuration, HA Status (selected), Accounts (Users, Groups), Status (Server Events, Audit Logs, NCS Alarms), and Events Log. The main content area displays "HA Configuration : mse3310" under "Services > Mobility Services Engine > System > Services High Availability > Current High Availability Status". It shows the following status information:

	Status	Heartbeats	Data Replication	Mean Heartbeat Response Time
Status	Primary and secondary server synchronization in progress (60% complete)	Up	Setting up	8 msec

Below this, the "Events Log" section lists three events:

Event Description	Generated By	Timestamp
Heartbeats have been setup successfully	Primary	2012-Feb-17, 20:54:36 UTC
Primary and secondary server synchronization in progress	Primary	2012-Feb-17, 20:54:32 UTC
Configuration successfully created	Primary	2012-Feb-17, 20:54:32 UTC

A "Refresh Status" button is located at the bottom of the log table.

Situación de conmutación por fallas/recuperación

La situación en caso de failover/fallback manual solamente, para un mejor control.

Primario activo, secundario listo para asumir el control

Una vez que se configura y se ejecuta MSE HA, el estado en Prime como se muestra en las

imágenes:

Current High Availability Status

Status	Active
Heartbeats	Up
Data Replication	Up
Mean Heartbeat Response Time	12 millisec

Events Log

Event Description	Generated By	Timestamp
Active	Primary	2015-Mar-08, 12:50:17 CET
Heartbeats have been setup successfully	Primary	2015-Mar-08, 12:39:17 CET
Primary and secondary server synchronization in progress	Primary	2015-Mar-08, 12:39:13 CET
Configuration successfully created	Primary	2015-Mar-08, 12:39:11 CET

Aquí están la **getserverinfo** y la **gethainfo** del MSE primario:

```
[root@NicoMSE ~]# getserverinfo
Health Monitor is running
Retrieving MSE Services status.
MSE services are up, getting the status

-----
Server Config
-----

Product name: Cisco Mobility Service Engine
Version: 8.0.110.0
Health Monitor Ip Address: 10.48.39.238
High Availability Role: 1
Hw Version: V01
Hw Product Identifier: AIR-MSE-VA-K9
Hw Serial Number: NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63
HTTPS: null
Legacy Port: 8001
Log Modules: -1
Log Level: INFO
Days to keep events: 2
Session timeout in mins: 30
DB backup in days: 2

-----
Services
-----

Service Name: Context Aware Service
Service Version: 8.0.1.79
Admin Status: Disabled
Operation Status: Down

Service Name: WIPS
```

Service Version: 3.0.8155.0

Admin Status: Enabled

Operation Status: Up

Service Name: Mobile Concierge Service

Service Version: 5.0.1.23

Admin Status: Disabled

Operation Status: Down

Service Name: CMX Analytics

Service Version: 3.0.1.68

Admin Status: Disabled

Operation Status: Down

Service Name: CMX Connect & Engage

Service Version: 1.0.0.29

Admin Status: Disabled

Operation Status: Down

Service Name: HTTP Proxy Service

Service Version: 1.0.0.1

Admin Status: Disabled

Operation Status: Down

Server Monitor

Server start time: Sun Mar 08 12:40:32 CET 2015

Server current time: Sun Mar 08 14:04:30 CET 2015

Server timezone: Europe/Brussels

Server timezone offset (mins): 60

Restarts: 1

Used Memory (MB): 197

Allocated Memory (MB): 989

Max Memory (MB): 989

DB disk size (MB): 17191

Active Sessions

Session ID: 5672

Session User ID: 1

Session IP Address: 10.48.39.238

Session start time: Sun Mar 08 12:44:54 CET 2015

Session last access time: Sun Mar 08 14:03:46 CET 2015

Default Trap Destinations

Trap Destination - 1

IP Address: 10.48.39.225

Last Updated: Sun Mar 08 12:34:12 CET 2015

[root@NicoMSE ~]# gethainfo

Health Monitor is running. Retrieving HA related information

```
Base high availability configuration for this server
-----
Server role: Primary
Health Monitor IP Address: 10.48.39.238
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63
Number of paired peers: 1
```

```
-----  
Peer configuration#: 1  
-----
```

```
Health Monitor IP Address 10.48.39.240
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3s
Instance database port: 1624
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Up
Current state: PRIMARY_ACTIVE
```

Y aquí están los mismos para el MSE secundario:

```
[root@NicoMSE2 ~]# getserverinfo
Health Monitor is running
Retrieving MSE Services status.
MSE services are up and in DORMANT mode, getting the status
```

```
-----
Server Config
-----
```

```
Product name: Cisco Mobility Service Engine
Version: 8.0.110.0
Health Monitor Ip Address: 10.48.39.240
High Availability Role: 2
Hw Version: V01
Hw Product Identifier: AIR-MSE-VA-K9
Hw Serial Number: NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66
HTTPS: null
Legacy Port: 8001
Log Modules: -1
Log Level: INFO
Days to keep events: 2
Session timeout in mins: 30
DB backup in days: 2
```

```
-----
Services
-----
```

```
Service Name: Context Aware Service
Service Version: 8.0.1.79
Admin Status: Disabled
```

Operation Status: Down

Service Name: WIPS

Service Version: 3.0.8155.0

Admin Status: Enabled

Operation Status: Up

Service Name: Mobile Concierge Service

Service Version: 5.0.1.23

Admin Status: Disabled

Operation Status: Down

Service Name: CMX Analytics

Service Version: 3.0.1.68

Admin Status: Disabled

Operation Status: Down

Service Name: CMX Connect & Engage

Service Version: 1.0.0.29

Admin Status: Disabled

Operation Status: Down

Service Name: HTTP Proxy Service

Service Version: 1.0.0.1

Admin Status: Disabled

Operation Status: Down

Server Monitor

Server start time: Sun Mar 08 12:50:04 CET 2015

Server current time: Sun Mar 08 14:04:32 CET 2015

Server timezone: Europe/Brussels

Server timezone offset (mins): 60

Restarts: null

Used Memory (MB): 188

Allocated Memory (MB): 989

Max Memory (MB): 989

DB disk size (MB): 17191

[root@NicoMSE2 ~]# gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Secondary

Health Monitor IP Address: 10.48.39.240

Virtual IP Address: Not Applicable for a secondary

Version: 8.0.110.0

UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66

Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.48.39.238

Virtual IP Address: 10.48.39.224

Version: 8.0.110.0

UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63

```
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3
Instance database port: 1524
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Up
Current state: SECONDARY_ACTIVE
```

Fallo en secundaria

Para activar manualmente, vaya a la configuración MSE HA en Prime Infrastructure y haga clic en **Switchover**.

Muy rápidamente, el **gethainfo** en ambos servidores pasará a FAILOVER_INVOKED

gethainfo primario:

```
[root@NicoMSE ~]# gethainfo

Health Monitor is running. Retrieving HA related information

-----
Base high availability configuration for this server
-----

Server role: Primary
Health Monitor IP Address: 10.48.39.238
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63
Number of paired peers: 1

-----
Peer configuration#: 1
-----

Health Monitor IP Address 10.48.39.240
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3s
Instance database port: 1624
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Down
Current state: FAILOVER_INVOKED
```

Getainfo secundario:

```
[root@NicoMSE2 ~]# gethainfo

Health Monitor is running. Retrieving HA related information
```

```
-----  
Base high availability configuration for this server  
-----  
  
Server role: Secondary  
Health Monitor IP Address: 10.48.39.240  
Virtual IP Address: Not Applicable for a secondary  
Version: 8.0.110.0  
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66  
Number of paired peers: 1
```

```
-----  
Peer configuration#: 1  
-----  
  
Health Monitor IP Address 10.48.39.238  
Virtual IP Address: 10.48.39.224  
Version: 8.0.110.0  
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63  
Failover type: Manual  
Fallback type: Manual  
Failover wait time (seconds): 10  
Instance database name: mseos3  
Instance database port: 1524  
Dataguard configuration name: dg_mse3  
Primary database alias: mseop3s  
Direct connect used: No  
Heartbeat status: Down  
Current state: FAILOVER_INVOKED
```

Una vez que la conmutación por fallas se complete, verá esta imagen en Prime:

Status	Instance is in failover active state
--------	--------------------------------------

Events Log

Event Description	Generated By
Instance is in failover active state	Secondary
Failover invoked; starting application instance	Secondary
Failover has been invoked. Reconfiguring instance database	Secondary
Failover invoked; shutting down primary instance	Secondary

El gethainfo primario:

```
[root@NicoMSE ~]# gethainfo  
  
Health Monitor is not running. Following information is from the last saved configuration  
-----  
Base high availability configuration for this server
```

```
-----  
Server role: Primary  
Health Monitor IP Address: 10.48.39.238  
Virtual IP Address: 10.48.39.224  
Version: 8.0.110.0  
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63  
Number of paired peers: 1
```

```
-----  
Peer configuration#: 1  
-----
```

```
Health Monitor IP Address 10.48.39.240  
Virtual IP Address: 10.48.39.224  
Version: 8.0.110.0  
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66  
Failover type: Manual  
Fallback type: Manual  
Failover wait time (seconds): 10  
Instance database name: mseos3s  
Instance database port: 1624  
Dataguard configuration name: dg_mse3  
Primary database alias: mseop3s  
Direct connect used: No  
Last shutdown state: FAILOVER_ACTIVE
```

Secundario:

```
[root@NicoMSE2 ~]# gethainfo
```

```
Health Monitor is running. Retrieving HA related information
```

```
-----  
Base high availability configuration for this server  
-----
```

```
Server role: Secondary  
Health Monitor IP Address: 10.48.39.240  
Virtual IP Address: Not Applicable for a secondary  
Version: 8.0.110.0  
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66  
Number of paired peers: 1
```

```
-----  
Peer configuration#: 1  
-----
```

```
Health Monitor IP Address 10.48.39.238  
Virtual IP Address: 10.48.39.224  
Version: 8.0.110.0  
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63  
Failover type: Manual  
Fallback type: Manual  
Failover wait time (seconds): 10  
Instance database name: mseos3  
Instance database port: 1524  
Dataguard configuration name: dg_mse3  
Primary database alias: mseop3s  
Direct connect used: No  
Heartbeat status: Down  
Current state: FAILOVER_ACTIVE
```

En esta etapa, la commutación por fallas está terminada y el MSE secundario está completamente

a cargo.

Es de destacar que los servicios en el MSE primario se detienen cuando se hace un switchover manual (para simular un evento real de MSE primario que se cae)

Si realiza la copia de seguridad principal, su estado se "TERMINARÁ". Es normal y secundario sigue siendo el encargado y muestra "FAILOVER_ACTIVE"

Cómo volver al primario

Antes de volver, debe activar la copia de seguridad principal.

Su estado es entonces "TERMINADO":

```
[root@NicoMSE ~]# gethainfo

Health Monitor is running. Retrieving HA related information

-----
Base high availability configuration for this server
-----

Server role: Primary
Health Monitor IP Address: 10.48.39.238
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63
Number of paired peers: 1

-----
Peer configuration#: 1
-----

Health Monitor IP Address 10.48.39.240
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3s
Instance database port: 1624
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Down
Current state: TERMINATED
```

Cuando invoca la conmutación por fallas desde Prime, ambos nodos pasan a "FAILBACK ACTIVE" que no es el estado final (contrario a "failover active").

gethainfo primario:

```
[root@NicoMSE ~]# gethainfo

Health Monitor is running. Retrieving HA related information

-----
```

```
Base high availability configuration for this server
-----
Server role: Primary
Health Monitor IP Address: 10.48.39.238
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63
Number of paired peers: 1
```

```
-----  
Peer configuration#: 1  
-----
```

```
Health Monitor IP Address 10.48.39.240
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3s
Instance database port: 1624
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Down
Current state: FAILBACK_ACTIVE
```

gethainfo secundario:

```
[root@NicoMSE2 ~]# gethainfo

Health Monitor is running. Retrieving HA related information
-----
Base high availability configuration for this server
-----

Server role: Secondary
Health Monitor IP Address: 10.48.39.240
Virtual IP Address: Not Applicable for a secondary
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66
Number of paired peers: 1

-----
Peer configuration#: 1
-----

Health Monitor IP Address 10.48.39.238
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3
Instance database port: 1524
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Down
```

Current state: FAILBACK_ACTIVE

Prime muestra esta imagen:

Event Description	Generated By
Fallback in progress; starting primary database instance	Secondary

Cuando se realiza la comutación por recuperación pero el secundario sigue ocupado transfiriendo los datos de vuelta a primaria, el primario muestra:

```
gethainfo
```

```
Health Monitor is running. Retrieving HA related information
```

```
-----  
Base high availability configuration for this server  
-----
```

```
Server role: Primary  
Health Monitor IP Address: 10.48.39.238  
Virtual IP Address: 10.48.39.224  
Version: 8.0.110.0  
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63  
Number of paired peers: 1
```

```
-----  
Peer configuration#: 1  
-----
```

```
Health Monitor IP Address 10.48.39.240  
Virtual IP Address: 10.48.39.224  
Version: 8.0.110.0  
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66  
Failover type: Manual  
Failback type: Manual  
Failover wait time (seconds): 10  
Instance database name: mseos3s  
Instance database port: 1624  
Dataguard configuration name: dg_mse3  
Primary database alias: mseop3s  
Direct connect used: No  
Heartbeat status: Up  
Current state: FAILBACK_COMPLETE
```

show secundario:

```
[root@NicoMSE2 ~]# gethainfo
```

```
Health Monitor is running. Retrieving HA related information
```

```
-----  
Base high availability configuration for this server  
-----
```

```
Server role: Secondary  
Health Monitor IP Address: 10.48.39.240  
Virtual IP Address: Not Applicable for a secondary  
Version: 8.0.110.0
```

```
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66
Number of paired peers: 1
```

```
-----  
Peer configuration#: 1  
-----
```

```
Health Monitor IP Address 10.48.39.238
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63
Failover type: Manual
Fallback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3
Instance database port: 1524
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Up
Current state: SECONDARY_ALONE
```

Primer en esta etapa es como se muestra en la imagen:

Current High Availability Status

Status	Primary instance is not synchronized with the secondary server. In progress.
Heartbeats	Up
Data Replication	Up
Mean Heartbeat Response Time	13 millisec

Events Log

Event Description	Generated By
Heartbeats have been setup successfully	Primary

Cuando se complete esto, todos los estados volverán al estado original: Los estados PRIMARY_ACTIVE, SECONDARY_ACTIVE y Prime HA muestran como una nueva implementación de nuevo.

Matriz de estado HA

PRIMARY_ACTIVE	Estado de la MSE primaria cuando es primaria, responsable y todo está bien
SECONDARY_ACTIVE	Estado del MSE secundario cuando está activo, pero no a cargo (el principal está), listo para asumir el control cuando sea necesario
FAILOVER_INVOKED	Se muestra en ambos nodos cuando se produce la comutación por fallas, es decir, el MSE secundario inicia sus servicios cargando la base de datos del MSE primario
FAILOVER_ACTIVE	Estado final de un failover. El MSE secundario se considera "activo y en ejecución" y el MSE primario está inactivo
FINALIZADO	Estado de un nodo MSE que vuelve con los servicios activos después de estar

FAILBACK_ACTIVE	inactivo y cuando no es el nodo a cargo (por lo que puede ser el estado primario) cuando se reinician los servicios y PI todavía da control sobre el MSE secundario. También significa que el link HA podría no estar activo (si uno de los MSE estuviera reiniciando por ejemplo o simplemente no puede hacer ping)
FAILBACK_COMPLETE	A diferencia de la conmutación por fallas, esta no es la etapa final de la conmutación por fallas. Esto significa que se invocó la conmutación por recuperación y que actualmente se está produciendo. La base de datos se está copiando de secundaria a primaria
SECONDARY_ALONE	Estado del nodo primario cuando está de nuevo a cargo pero todavía está ocupado cargando la base de datos del MSE secundario
GRACEFUL_SHUTDOWN	Estado del MSE secundario cuando se realiza la recuperación y el primario es aún el que lleva el cargo pero aún cargando datos
	Estado activado si se reinicia manualmente o se detienen los servicios en el MSE en caso de conmutación por fallas/recuperación automática. Esto significa que no se recuperará porque el tiempo de inactividad fue provocado manualmente

Comentarios y datos importantes sobre HA

- Es muy importante no activar un failover inmediatamente después de un failover y viceversa. Las bases de datos necesitan unos 30 minutos para estabilizarse
- Los archivos de configuración de HA son `base-ha-config.properties` en `/opt/mse/health-monitor/resources/config/`; sin embargo, no se pretende editarlos manualmente (utilice `setup.sh` en su lugar). Sin embargo, puede verla en caso de duda
- HA no está pensado para romperse manualmente. La única manera limpia de hacerlo es eliminar el MSE secundario de Prime Infra. Cualquier otro método (ejecutar `setup.sh` en `secondary` para convertirlo en primario, desinstalar, cambiar ip ...) interrumpirá la base de datos y la máquina de estado y probablemente tendrá que reinstalar ambos MSE

Resolución de problemas HA

Los registros relacionados con HA se guardan bajo el `/opt/mse/logs/hm` directory con `health-monitor*.log` siendo el archivo de registro principal.

Problema: Tanto el Primario como el Secundario están activos (Condición del cerebro de la división)

1. Cierre la interfaz IP virtual (VIP) en el secundario. Sería `eth0:1 ifconfig eth0:1 down`
2. Reinicie los servicios en el MSE secundario

```
service msed stop
service msed start
```

3. Verifique si el secundario ha comenzado a sincronizarse con el primario de Prime Infrastructure.

Problema: La sincronización del secundario con el primario para HA se atasca en X% durante mucho tiempo

1. Detener el servicio en el secundario

```
service msed stop
```

2. Eliminar **/opt/mse/health-monitor/resources/config/advance-config-<IP-address-of-Primary>.properties** en el archivo secundario.

3. Si todavía hay problemas en el establecimiento de HA, podría haber entrado en un estado inconsistente donde tenemos que quitar todo en el directorio 'data' en el secundario usando **rm -rf /opt/data/***

4. Reinicie el secundario. Añádalo desde Prime Infrastructure al primario para iniciar de nuevo HA.

Problema: No se puede eliminar el servidor secundario de PI después de que no se pueda alcanzar

1. Detenga el servicio en el primario.

2. Eliminar **/opt/mse/health-monitor/resources/config/advance-config-<IP-address-of-Primary>.properties** en el primario.

3. Reinicie el servicio en el primario.

4. Elimine el MSE principal de PI y vuelva a agregarlo.