

Introduction

Ce document décrit le système de convergence de réseau de Cisco (NCS) 6000 commandes indépendantes CLI de plate-forme dans la version 5.0.1 du Cisco IOS® XR qui ont changé comparé aux Routeurs du Cisco Carrier Routing System (CRS) qui exécutent d'autres releases de Cisco IOS XR.

Ce document est destiné pour n'importe qui qui est familiarisé avec le Cisco IOS XR et veut comprendre quelles modifications CLI ont été apportées avec le NCS 6008 et la version 5.0.1.

Remarque: Ce document n'adresse pas les commandes dépendantes de plate-forme (palladium) qui ont changé ou a été créé spécifiquement pour la plate-forme NCS 6008.

Conditions préalables

Conditions requises

Cisco recommande que vous ayez une connaissance de haut niveau de ces thèmes :

- Commandes CLI de Cisco IOS XR
- Architecture NCS 6008

[Composants utilisés](#)

Ce document est limité à la version 5.0.1 de Cisco IOS XR qui fonctionne sur le NCS 6008.

Les informations contenues dans ce document ont été créées à partir des périphériques d'un environnement de laboratoire spécifique. Tous les périphériques utilisés dans ce document ont démarré avec une configuration effacée (par défaut). Si votre réseau est opérationnel, assurez-vous que vous comprenez l'effet potentiel de toute commande.

Comment utiliser ce document

Les commandes indépendantes NCS 6008 Platfom répertoriées dans ce document ont changé pour le NCS 6008 et la version 5.0.1 de Cisco IOS XR. Chaque commande est répertoriée dans l'ordre alphabétique. Un résumé des modifications aussi bien que des détails supplémentaires concernant les différences spécifiques est fournis. Chaque commande est liée au guide de référence des commandes compétent si disponible.

L'exemple CLI a sorti et des comparaisons avec des sorties CRS CLI sont incluses pour plusieurs des commandes.

Une importance de mineur ou de commandant a été indiquée pour chaque commande afin d'aider le lecteur à identifier des changements importants de telles qui sont syntaxe mineure, option, ou

modifications de sortie seulement.

attache

Référez-vous à la section d'[attache de la référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS](#), libérez le pour en savoir plus 5.0.x.

Résumé : L'option est fournie par le mode d'exécution.

Détails : Afin de se connecter à un hôte d'un site distant, utilisez la commande d'**emplacement d'attache** dans les modes d'exécution d'EXÉCUTIF et XR d'admin de système. Cette exécution diffère légèrement de la commande d'**attache de passage** sur la plate-forme CRS due à la séparation de l'admin de système (SysAdmin) et des virtual machine XR (VMs) dans la version 5.0.1 de Cisco IOS XR. Pour chaque processeur de linecard et d'artère (RP), là existe un shell d'hôte pour la VM d'admin de système et la VM XR.

Importance : Mineur

Voici comment vous vous reliez à un linecard ou à un RP de VM XR :

```
RP/0/RP0/CPU0:ncs6k#attach ?
location Specify a location
RP/0/RP0/CPU0:ncs6k#attach location ?
0/0/CPU0 Fully qualified location specification
0/7/CPU0 Fully qualified location specification
0/RP0/CPU0 Fully qualified location specification
0/RP1/CPU0 Fully qualified location specification
WORD Fully qualified location specification

RP/0/RP0/CPU0:ncs6k#attach location 0/0/CPU0
Mon Jan 20 10:03:53.863 UTC
[xr-vm_node0_0_CPU0:~]$ export PS1=#
#
#
#
#exit

RP/0/RP0/CPU0:ncs6k#attach location 0/RP?????1/CPU0 ??????
Mon Jan 20 10:04:08.287 UTC
[xr-vm_node0_RP1_CPU0:~]$ export PS1=#
#
#
#exit
```

Voici comment vous vous reliez à un linecard ou à un RP de la VM de SysAdmin :

```
RP/0/RP0/CPU0:ncs6k#admin
Mon Jan 20 10:04:30.400 UTC
root connected from 127.0.0.1 using console on xr-vm_node0_RP0_CPU0

sysadmin-vm:0_RP0# attach ?
Possible completions:
location node ID, in #/#/CPU# format
```

```
sysadmin-vm:0_RP0# attach location ?
Possible completions:
0/0 0/7 0/RP0 0/RP1

sysadmin-vm:0_RP0# attach location 0/0
Mon Jan 20 10:05:08.279 UTC
[sysadmin-vm:0_0:~]$ exec chvrf 2 bash
[sysadmin-vm:0_0:~]$
[sysadmin-vm:0_0:~]$
[sysadmin-vm:0_0:~]$ exit

sysadmin-vm:0_RP0# attach location 0/RP1
Mon Jan 20 10:05:27.960 UTC
[sysadmin-vm:0_RP1:~]$ exec chvrf 2 bash
[sysadmin-vm:0_RP1:~]$
[sysadmin-vm:0_RP1:~]$
[sysadmin-vm:0_RP1:~]$ exit

sysadmin-vm:0_RP0#
sysadmin-vm:0_RP0#
```

clear context

Référez-vous à la section de [clear context de la](#) **référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS, libérez le pour en savoir plus 5.0.x.**

Résumé : Il y a les modifications mineures de comportement.

Détails : Il a les mêmes options CLI.

Importance : Mineur

copie

Référez-vous à la section de [copie de la](#) **référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS, libérez le pour en savoir plus 5.0.x.**

Résumé : Quelques options ne sont pas disponibles. Il est difficile de copier entre la VM de SysAdmin et la VM XR.

Détails : Le FTP est pris en charge pour le transfert de fichiers sous la copie CLI VM XR.

Les systèmes de fichiers VM de SysAdmin et VM XR sont distincts. Le SysAdmin et les VMs XR ont le **disque dur** : et **disk0** : répertoires. Quand vous copiez ou les modules d'install add de **disk0** : ou **disque dur** : , les modules qui sont installés de la VM XR (ISO, les modules facultatifs, XR SMUs) doivent être copiés sur le système de fichiers VM XR. La VM SMUs de SysAdmin sont copiées sur le système de fichiers VM d'admin avant qu'ils exécutent l'exécution d'install add.

Importance : Commandant

RRP/0/RP0/CPU0:NCS6008-SJ#**copy ?**

```
/recurse      Recursively list subdirectories encountered
WORD          Copy from file
access-list   Access lists
disk0:        Copy from disk0: file system
disk1:        Copy from disk1: file system
ftp:          Copy from ftp: file system
harddisk:     Copy from harddisk: file system
prefix-list   Prefix lists
running-config Copy from current system configuration
tftp:         Copy from tftp: file system
xml-schema    Copy XML schema files as a tar ball file (.tar.gz)
```

RP/0/RP0/CPU0:NCS6008-SJ#**admin**

Wed Feb 19 18:08:46.614 UTC

cisco connected from 127.0.0.1 using console on xr-vm_node0_RP0_CPU0

sysadmin-vm:0_RP0# **copy ?**

Possible completions:

```
<WORD>      Name of the file
config:      Copy from config: file system
disk0:       Copy from disk0: file system
harddisk:    Copy from harddisk: file system
log:         Copy from log: file system
recurse      Recursively list subdirectories encountered
rootfs:      Copy from rootfs: file system
running-config Copy running config to file, overwriting it if it exists
tftp:        Copy from tftp: file system
```

décrivez

Résumé : Il y a les modifications mineures de sortie. La commande est disponible dans la VM XR et dans la VM de SysAdmin.

La sortie de commande indique qu'il y a quelques modifications au TaskIDs requis afin d'exécuter des commandes XR sur des CRS contre sur le NCS-6008.

Détails : Quand **décrivez** est utilisé dans la VM de SysAdmin, il fonctionne pour quelques commandes mais pas pour d'autres. La version VM de SysAdmin de cette sortie de commande affiche la commande de système d'exploitation Linux (SYSTÈME D'EXPLOITATION) appelée afin d'exécuter la commande dans la VM de SysAdmin. Puisque TaskIDs ne sont pas utilisés afin d'exécuter des commandes VM de SysAdmin, la sortie de description n'inclut pas ces informations une fois utilisée dans la VM de SysAdmin.

Importance : Mineur

RP/0/RP1/CPU0:NCS6008-A#**describe show install active**

The command is defined in instmgr_cmd.parser

User needs ALL of the following taskids:

root-system (READ) or cisco-support (READ) or root-lr (READ)

It will take the following actions:

Thu Jun 25 08:40:38.485 UTC

Spawn the process:

sdr_instcmd show install active

RP/0/RP0/CPU0:CRS-J#**describe show install active**

The command is defined in instmgr_cmds.parser

Node 0/RP0/CPU0 has file instmgr_cmds.parser for boot package
/disk0/hfr-os-mbi-4.3.1/0x100008/mbihfr-rp-x86e.vm from iosxr-infra

Package:

iosxr-infra

iosxr-infra V4.3.1[Default] IOS-XR Infra Package Definition

Vendor : Cisco Systems

Desc : IOS-XR Infra Package Definition

Build : Built on Sun May 12 03:53:02 UTC 2013

Source : By iox-bld2 in /auto/srcarchive7/production/4.3.1/all/workspace

for pie

Card(s): RP, RP-B, HRP, CRS-RP-X86, CRS8-RP-x86, CRS16-RP-x86, DRP,
40G-MS-C, 140G-MS-C, SP, SC

Restart information:

Default:

parallel impacted processes restart

Size Compressed/Uncompressed: 87MB/214MB (40%)

Component:

installmgr.x86e V0.0.5[r43x/12] On the box installation program

File:

instmgr_cmds.parser

Card(s) : CRS-RP-X86, CRS8-RP-x86, CRS16-RP-x86

File type : Default

Remotely-hosted : No

Local view : /pkg/parser/instmgr_cmds.parser

Local install path : /disk0/iosxr-infra-4.3.1/0x100008/parser/instmgr_cmds.parser

(Compressed)

Central install path : /disk0/iosxr-infra-4.3.1/0x100008/parser/instmgr_cmds.parser

(Compressed)

Uncompressed size : 116KB

Compressed size : 45KB

Uncompressed MD5 : 697582f5d5318bf583b5c3329adad088

Compressed MD5 : ef9cad3bf493e9f8173520b513a7c777

User needs ALL of the following taskids:

pkg-mgmt (READ)

It will take the following actions:

Tue Feb 11 21:57:54.803 UTC

Spawn the process:

instcmd show install active

RP/0/RP1/CPU0:NCS6008-A#**admin**

sysadmin-vm:0_RP1# describe show media

Thu Jun 25 09:09:59.573 UTC

Common

Source : clispec

File : /opt/cisco/calvados/confd/etc/confd/schema/showmedia.cli

Callback [os command]

OS command : **/opt/cisco/calvados/confd/etc/confd/scripts/show_media.sh**

Help

display media info

Info

display media info

sysadmin-vm:0_RP1# **run**

Thu Jun 25 09:14:45.756 UTC

[sysadmin-vm:0_RP1:~]\$ /opt/cisco/calvados/confd/etc/confd/scripts/show_media.sh

```
-----
```

Partition	Size	Used	Percent	Avail
rootfs:	2.9G	480M	18%	2.3G
log:	494M	103M	22%	366M
config:	494M	24M	6%	445M
disk0:	965M	25M	3%	892M
harddisk:	37G	1.5G	5%	34G

```
-----
```

rootfs: = root file system (read-only)

log: = system log files (read-only)

config: = configuration storage (read-only)

dumpcore

Référez-vous à la section de [dumpcore de la référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS](#), libérez le pour en savoir plus 5.0.x.

Résumé : Il y a des modifications mineures aux options et au comportement CLI.

Détails : Le corehelper de processus est utilisé au lieu du déchargeur. Quand l'exécution de dumpcore est exécutée sur NCS, il y a sortie réduite dans les Syslog puisque le crashinfo n'est pas écrit au Syslog en le déchargeur.

Importance : Mineur

RP/0/RP0/CPU0:NCS6008-A#**dumpcore ?**

running Perform a core dump for a running process

suspended Suspend the process while generating core and resume afterwards

RP/0/RP0/CPU0:NCS6008-A#**dumpcore running admin-cli-proxy-xr_static**

Sat Jan 31 23:54:27.345 UTC

Dump core Succeeded

RP/0/RP0/CPU0:Jan 31 23:54:27.422 : corehelper[139]: dump_core starts, only one core is dumped at a time

RP/0/RP0/CPU0:Jan 31 23:54:27.600 : corehelper[139]: Copied core

admin-cli-proxy-xr_static.14548.by.user.19700131-235427.xr-vm_node0_RP0_CPU0.9e781.core.gz to 0/RP0/CPU0:/misc/disk1

RP/0/RP0/CPU0:Jan 31 23:54:27.601 : corehelper[139]: Deleted core file

admin-cli-proxy-xr_static.14548.by.user.19700131-235427.xr-vm_node0_RP0_CPU0.9e781.core.gz.

RP/0/RP0/CPU0:CRS-J#**dumpcore running bgp**

Fri Nov 15 17:56:33.834 UTC

RP/0/RP0/CPU0:Nov 15 17:56:33.852 : dumper[61]: %OS-DUMPER-7-DUMP_REQUEST :
Dump request for process pkg/bin/bgp

RP/0/RP0/CPU0:Nov 15 17:56:33.853 : dumper[61]: %OS-DUMPER-7-DUMP_ATTRIBUTE :
Dump request with attribute 7 for process pkg/bin/bgp

RP/0/RP0/CPU0:Nov 15 17:56:33.854 : dumper[61]: %OS-DUMPER-4-CORE_INFO :
Core for pid = 549148 (pkg/bin/bgp) requested by pkg/bin/dumper_gen@node0_RP0_CPU0

RP/0/RP0/CPU0:Nov 15 17:56:33.854 : dumper[61]: %OS-DUMPER-7-PROC_PAGES :
Process memory pages 581

RP/0/RP0/CPU0:Nov 15 17:56:33.856 : dumper[61]: %OS-DUMPER-6-FALLBACK_CHOICE :
Fall back choice: 0(harddisk:/dumper) in use

RP/0/RP0/CPU0:Nov 15 17:56:33.856 : dumper[61]: %OS-DUMPER-7-REGISTERS_INFO :
EDI ESI EBP(fp) EXX

RP/0/RP0/CPU0:Nov 15 17:56:33.856 : dumper[61]: %OS-DUMPER-7-REGISTERS_INFO :
R0 1031b8bc 041ff980 041ff95c e899ab58

RP/0/RP0/CPU0:Nov 15 17:56:33.856 : dumper[61]: %OS-DUMPER-7-REGISTERS_INFO :
EBX EDX ECX EAX

RP/0/RP0/CPU0:Nov 15 17:56:33.856 : dumper[61]: %OS-DUMPER-7-REGISTERS_INFO :
R4 1031b99c 082657da 041ff8dc 000000e

RP/0/RP0/CPU0:Nov 15 17:56:33.856 : dumper[61]: %OS-DUMPER-7-REGISTERS_INFO :
EIP(pc) CS EFL ESP

RP/0/RP0/CPU0:Nov 15 17:56:33.856 : dumper[61]: %OS-DUMPER-7-REGISTERS_INFO :
R8 082657da 000000f3 80001202 041ff8dc

RP/0/RP0/CPU0:Nov 15 17:56:33.856 : dumper[61]: %OS-DUMPER-7-REGISTERS_INFO :
SS

RP/0/RP0/CPU0:Nov 15 17:56:33.856 : dumper[61]: %OS-DUMPER-7-REGISTERS_INFO :
R12 000000fb

RP/0/RP0/CPU0:Nov 15 17:56:33.857 : dumper[61]: %OS-DUMPER-7-TRACE_BACK :
#0 0x82657da

RP/0/RP0/CPU0:Nov 15 17:56:33.862 : dumper[61]: %OS-DUMPER-7-TRACE_BACK :
#1 0x81ef5d3

RP/0/RP0/CPU0:Nov 15 17:56:33.862 : dumper[61]: %OS-DUMPER-7-TRACE_BACK :
#2 0x81f1605

RP/0/RP0/CPU0:Nov 15 17:56:33.862 : dumper[61]: %OS-DUMPER-7-TRACE_BACK :
#3 0x81f287b

RP/0/RP0/CPU0:Nov 15 17:56:33.862 : dumper[61]: %OS-DUMPER-7-TRACE_BACK :
#4 0xb439fb4

RP/0/RP0/CPU0:Nov 15 17:56:33.862 : dumper[61]: %OS-DUMPER-7-TRACE_BACK :
#5 0x424d770
RP/0/RP0/CPU0:Nov 15 17:56:33.862 : dumper[61]: %OS-DUMPER-7-TRACE_BACK :
#6 0x4202080
RP/0/RP0/CPU0:Nov 15 17:56:33.862 : dumper[61]: %OS-DUMPER-7-INSTALL_PKG_SHOW_FAILED :
active installed packages show failed: Information not available
RP/0/RP0/CPU0:Nov 15 17:56:33.864 : dumper[61]: %OS-DUMPER-7-DLL_INFO_HEAD :
DLL path Text addr. Text size Data addr. Data size Version
RP/0/RP0/CPU0:Nov 15 17:56:33.864 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libplatform.dll 0x08178000 0x0000a000 0x08182000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.865 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/lib/libsysmgr.dll 0x08186000 0x00018000 0x0819e000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.865 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libcerrno.dll 0x0819f000 0x00003000 0x081a2000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.865 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libios.dll 0x081a3000 0x0002f000 0x081d2000
0x00002000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.865 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libss_common.dll 0x081d4000 0x00007000 0x081db000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.865 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libinfra.dll 0x081dc000 0x0003e000 0x0821a000
0x00003000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.865 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/lib/libltrace.dll 0x0821d000 0x0000b000 0x08228000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.866 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/lib_platform_infra_ltrace.dll 0x08229000 0x00001000
0x0822a000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.866 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libcsemlock.dll 0x0822b000 0x00003000 0x0822e000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.866 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libpcds.dll 0x08233000 0x00008000 0x0823b000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.866 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/lib/libc.dll 0x08241000 0x0007c000 0x082bd000 0x00003000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.866 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/lib_procfs_util.dll 0x082c6000 0x00004000
0x082ca000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.866 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libsyslog.dll 0x082cb000 0x00004000 0x082cf000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.866 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libbackplane.dll 0x082d0000 0x00002000 0x082d2000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.866 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libnodeid.dll 0x082d3000 0x00009000 0x082dc000
0x00002000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.866 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libpackage.dll 0x08341000 0x00062000 0x083a3000

0x00002000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.867 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libdebug.dll 0x083ba000 0x0000f000 0x083c9000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.867 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libnotify.dll 0x08400000 0x00030000 0x08430000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.867 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libinst_debug.dll 0x08431000 0x00003000 0x08434000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.867 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/lib_shmwin_pl_vm.dll 0x08444000 0x00001000
0x08445000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.867 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/lib_mutex_monitor.dll 0x08453000 0x00002000
0x08455000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.867 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libshmwin.dll 0x08456000 0x00012000 0x08468000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.867 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libcci_client.dll 0x085de000 0x0000b000 0x085e9000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.867 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libcci_hal.dll 0x085ea000 0x0000e000 0x085f8000
0x00002000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.867 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libtlv.dll 0x08c75000 0x00004000 0x08c79000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.868 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/lib_i2c_client_api.dll 0x08d9a000 0x00012000
0x08dac000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.868 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libsysdb.dll 0x08e00000 0x0003e000
0x08e3e000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.868 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libsysdbutils.dll 0x08e3f000 0x00012000
0x08e51000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.868 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libship.dll 0x08e80000 0x00007000 0x08e87000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.868 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libwd_notif.dll 0x08e88000 0x00008000
0x08e90000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.868 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libpkgfs_query.dll 0x08ea9000 0x00002000
0x08eab000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.868 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libshmalloc.dll 0x08ebc000 0x00005000 0x08ec1000
0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.868 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libredcon.dll 0x08ec2000 0x00006000
0x08ec8000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.868 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libpacket_common.dll 0x08ee1000 0x00015000
0x08ef6000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.869 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libgroup.dll 0x08ef7000 0x0001b000
0x08f12000 0x00003000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.869 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libgsputils.dll 0x08f24000 0x0000c000
0x08f30000 0x00003000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.869 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/hfr-base-4.1.2/0x100008/lib/redcon_plfm.dll 0x08fa3000 0x00003000
0x08fa6000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.869 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libinfra_nsr.dll 0x0901f000 0x00008000
0x09027000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.869 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/hfr-base-4.1.2/0x100008/lib/lib_cctl_client_api.dll 0x0903d000
0x0001d000 0x0905a000 0x00002000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.869 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libip_tlvlib.dll 0x09219000 0x00003000
0x0921c000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.869 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libbag.dll 0x09223000 0x00007000
0x0922a000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.869 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/hfr-base-4.1.2/0x100008/lib/libfabaddr.dll 0x09267000 0x00003000
0x0926a000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.869 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libens.dll 0x09283000 0x00010000
0x09293000 0x00002000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.869 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/lib_spp_client.dll 0x092ac000 0x00012000
0x092be000 0x00002000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libnrsutils.dll 0x09337000 0x00005000
0x0933c000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libpacket.dll 0x093dc000 0x00012000 0x093ee000
0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libnrs.dll 0x094a0000 0x00007000
0x094a7000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libifmgr.dll 0x09778000 0x00042000
0x097ba000 0x00003000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-6-BAD_PATH :
Choice 0() either not configured or bad path at <3524>. Trying next choice.

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libim_util.dll 0x097c4000 0x00021000
0x097e5000 0x00009000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-6-BAD_PATH :
Choice 1() either not configured or bad path at <3384>. Trying next choice.

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/librpc.dll 0x09800000 0x00008000
0x09808000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-6-BAD_PATH :
Choice 2() either not configured or bad path at <3384>. Trying next choice.

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libasync.dll 0x09840000 0x0000d000
0x0984d000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.870 : dumper[61]: %OS-DUMPER-6-BAD_PATH :
Choice 3() either not configured or bad path at <3384>. Trying next choice.

RP/0/RP0/CPU0:Nov 15 17:56:33.871 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libcbp.dll 0x0984e000 0x00007000
0x09855000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.871 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libsysdbbackend.dll 0x099d0000
0x00006000 0x099d6000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.871 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libipaddr_cons.dll 0x09ae7000
0x0001f000 0x09b06000 0x00004000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.871 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libiparmaddr.dll 0x09b0a000
0x00002000 0x09b0c000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.871 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libiparmtlv.dll 0x09b0d000 0x00002000
0x09b0f000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.871 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libbackend_sysdb.dll 0x09b4c000
0x00006000 0x09b52000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.872 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libbackend_parser.dll 0x09b53000
0x00003000 0x09b56000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.872 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libwd_evm.dll 0x09b83000 0x00004000
0x09b87000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.872 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/hfr-fwding-4.1.2/0x100008/lib/lib_ppfi_buffhdr.dll 0x09b88000
0x00014000 0x09b9c000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.872 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/hfr-fwding-4.1.2/0x100008/lib/libhfr_buffhdr_hal.dll 0x09b9d000
0x00004000 0x09ba1000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.872 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libsysdbhelper.dll 0x09c1d000
0x00004000 0x09c21000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.872 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/librsi.dll 0x0a0fc000 0x0000d000
0x0a109000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.872 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/librsi_util.dll 0x0a11b000 0x00003000
0x0a11e000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.872 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libpacket_netio.dll 0x0a13e000 0x0000b000
0x0a149000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.873 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/librsi_dbg.dll 0x0a14a000 0x00002000
0x0a14c000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.873 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/librp_isolation.dll 0x0a152000
0x00002000 0x0a154000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.873 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libnsr_platform.dll 0x0a1dc000 0x00003000
0x0a1df000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.873 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libpfi_ifh.dll 0x0a1fb000 0x00005000
0x0a200000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.873 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/hfr-os-4.1.2/0x100008/lib/libhfr_spp_client.dll 0x0a235000 0x00006000
0x0a23b000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.873 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libpfi_util.dll 0x0a24c000 0x00002000
0x0a24e000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.873 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libxipc.dll 0x0a26f000 0x00004000
0x0a273000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.874 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libip_bgp_attr_util.dll 0x0a2af000
0x00002000 0x0a2b1000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.874 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libnsr_qad_client.dll 0x0a2cd000
0x00008000 0x0a2d5000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.874 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libip6_acl.dll 0x0a2db000 0x0001a000
0x0a2f5000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.874 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libimattrclient.dll 0x0a2f9000
0x00018000 0x0a311000 0x00002000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.874 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libip4_acl.dll 0x0a315000 0x00023000
0x0a338000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.874 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libip6_acl_support.dll 0x0a354000
0x00004000 0x0a358000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.875 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libpcl.dll 0x0a359000 0x00021000
0x0a37a000 0x00002000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.875 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libip4_acl_support.dll 0x0a395000
0x00002000 0x0a397000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.875 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libip6_ma_las.dll 0x0a39a000
0x00008000 0x0a3a2000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.875 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libbsd_addr_presentation.dll 0x0a3ee000
0x00002000 0x0a3f0000 0x00001000 0

RP/0/RP0/CPU0:Nov 15 17:56:33.875 : dumper[61]: %OS-DUMPER-7-DLL_INFO :

```
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libipv4.dll 0x0a406000 0x00008000
0x0a40e000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.875 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libip_addr.dll 0x0a4a3000 0x00003000
0x0a4a6000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.875 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libbfd_ltrace.dll 0x0a92a000
0x00008000 0x0a932000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.875 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libipv4_rib.dll 0x0a9cf000 0x00014000
0x0a9e3000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.876 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/lib_ipv6_rib.dll 0x0ab5a000 0x0000f000
0x0ab69000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.876 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libip_rib.dll 0x0abae000 0x00012000
0x0abc0000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.876 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libsocket.dll 0x0acc9000 0x0001c000
0x0ace5000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.876 : dumper[61]: %OS-DUMPER-6-FALLBACK_CHOICE :
Fall back choice: 4(dumper_harddisk:/dumper) in use
RP/0/RP0/CPU0:Nov 15 17:56:33.876 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/liboradock.dll 0x0ad07000 0x00013000
0x0ad1a000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.876 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/librasf.dll 0x0ad1b000 0x0000a000
0x0ad25000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.877 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libauto_dll.dll 0x0ad2b000 0x00005000
0x0ad30000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.877 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/librpl_util.dll 0x0ad34000 0x00002000
0x0ad36000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.877 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/librib_ora.dll 0x0ad37000 0x00004000
0x0ad3b000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.877 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/liborashared.dll 0x0ad3c000
0x0000e000 0x0ad4a000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.877 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_policy_ora_v1_0_0.dll
0x0ad4b000 0x0003a000 0x0ad85000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.877 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_damp_ora_v1_0_0.dll 0x0ad8f000
0x00006000 0x0ad95000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.877 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libbfd_client.dll 0x0add7000
0x0000a000 0x0ade1000 0x00009000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.877 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/liblsd.dll 0x0ae04000 0x0000c000
0x0ae10000 0x00001000 0
```

```
RP/0/RP0/CPU0:Nov 15 17:56:33.878 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_util_common.dll 0x0b433000
0x0001a000 0x0b44d000 0x00002000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.878 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_debug.dll 0x0b44f000
0x0000b000 0x0b45a000 0x00002000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.878 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_sysdb_util.dll 0x0b45c000
0x00018000 0x0b474000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.878 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_af_lib.dll 0x0b477000
0x00009000 0x0b480000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.878 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_vrf_import.dll 0x0b481000
0x00017000 0x0b498000 0x00007000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.878 : dumper[61]: %OS-DUMPER-5-CORE_FILE_NAME :
Core for process pkg/bin/bgp at harddisk:
/dumper/first.bgp_1036.by.dumper_gen.node0_RP0_CPU0.x86.Z on local_node
RP/0/RP0/CPU0:Nov 15 17:56:33.878 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_vrf_db.dll 0x0b50f000
0x00009000 0x0b518000 0x00003000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.878 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libip_bgp_attr_extcomm.dll 0x0b533000
0x00004000 0x0b537000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.879 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_vrf_util.dll 0x0b538000
0x00012000 0x0b54a000 0x00002000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.879 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_af.dll 0x0b54c000 0x0000f000
0x0b55b000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.879 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_table.dll 0x0b55c000 0x00039000
0x0b595000 0x00002000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.879 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_nbr.dll 0x0b597000 0x0000a000
0x0b5a1000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.880 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/librsi_prod.dll 0x0b5a2000 0x00004000
0x0b5a6000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.880 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_policy.dll 0x0b5a7000 0x00010000
0x0b5b7000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.880 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libpcl_v1_0_ora.dll 0x0b5b8000
0x00003000 0x0b5bb000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.880 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_sysdb.dll 0x0b5bc000 0x00034000
0x0b5f0000 0x00002000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.880 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libtcp_sso_client.dll 0x0b5f2000
0x00005000 0x0b5f7000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.880 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
```

```
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_aggregate.dll 0x0b5f8000
0x0000e000 0x0b606000 0x0003a000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.880 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_rib.dll 0x0b640000 0x00026000
0x0b666000 0x00002000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.881 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_rib_lookup.dll 0x0b668000
0x00003000 0x0b66b000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.881 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_import.dll 0x0b66c000 0x00014000
0x0b680000 0x00006000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.881 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_scanner.dll 0x0b686000 0x0002b000
0x0b6b1000 0x0000a000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.881 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_label.dll 0x0b6bb000 0x0001a000
0x0b6d5000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.881 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_ipv4_unicast.dll 0x0b6d6000
0x00003000 0x0b6d9000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.881 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_vpnv4_unicast.dll 0x0b6da000
0x00003000 0x0b6dd000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.881 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_ipv6_unicast.dll 0x0b6de000
0x00003000 0x0b6e1000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.882 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_vpnv6_unicast.dll 0x0b708000
0x00003000 0x0b70b000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.882 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libxp.dll 0x0b70c000 0x0001f000
0x0b72b000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.882 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libdom.dll 0x0b72c000 0x00004000
0x0b730000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.882 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/cisco_ipv6_lib.dll 0x0b731000
0x00003000 0x0b734000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.882 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libl2vpn_ad.dll 0x0b735000 0x00007000
0x0b73c000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.882 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_ipv6_addr_cache.dll 0x0b75a000
0x00003000 0x0b75d000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.882 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_ipv4_common.dll 0x0b787000
0x0000b000 0x0b792000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.883 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_af_common.dll 0x0b793000
0x00002000 0x0b795000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.883 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-routing-4.1.2/0x100008/lib/libbgp_ipv6_common.dll 0x0b811000
```

```
0x0000b000 0x0b81c000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.883 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-infra-4.1.2/0x100008/lib/libip_bgp_attrbag.dll 0x0b88e000
0x00002000 0x0b890000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:33.883 : dumper[61]: %OS-DUMPER-7-DLL_INFO :
/disk0/iosxr-fwding-4.1.2/0x100008/lib/libipt_biscuit_bgp.dll 0x0b891000
0x00005000 0x0b896000 0x00001000 0
RP/0/RP0/CPU0:Nov 15 17:56:37.049 : dumper[61]: %OS-DUMPER-5-DUMP_SUCCESS :
Core dump success
RP/0/RP0/CPU0:Nov 15 17:56:37.420 : dumper[61]: %OS-DUMPER-6-CORE_MD5 :
harddisk:/dumper/first.bgp_1036.by.dumper_gen.node0_RP0_CPU0.x86.Z has just
been written. size:16907006 md5:ef2cd0fd4c45c434c03f858974033543
```

suivez

Référez-vous à la section de [suivre de la référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS](#), libérez le pour en savoir plus 5.0.x.

Résumé : La modification d'options avec la sortie.

Importance : Mineur

installez

Référez-vous à la section d'[installer de la référence de commandes de gestion de système pour le](#) pour en savoir plus de **Routeurs de gamme 6000 de Cisco NCS**.

Résumé : Il y a des modifications d'options avec la sortie. Disponible dans le mode VM XR et VM de SysAdmin.

Détails : Libérez 5.0.1 prend en charge seulement une procédure d'installation de mise à niveau de système unique pour le routeur de la VM XR. Un distinct installe d'une release pour la VM de SysAdmin et la VM XR n'est pas pris en charge dans la version 5.0.1, excepté la mise à jour de maintenance logicielle (SMU) installe. SMUs pour chaque VM (SysAdmin ou XR) doit être installé de la VM correcte. Des modules facultatifs doivent être installés de la VM XR.

L'installer prépare l'option de commande est ajouté afin de réduire le temps d'arrêt de mise à jour/maintenance. **L'installer prépare** la commande n'est pas exigé.

L'option d'**install abort** a été désapprouvée. Il n'y a aucun plan pour le prendre en charge à l'avenir.

L'install rollback a été retiré dans la version 5.0.1. Un retour/repositionnement à une release est traité pendant que tout autre installent le processus.

L'install commit n'est pas exigé et est implicite dans la version 5.0.1. La commande d'**install commit** est disponible dans la version 5.0.1 mais n'est pas nécessaire puisque la validation est automatique.

Dans la version 5.2.1, **l'install commit** cessera d'être implicite et exigera un **install commit** explicite.

Dans une version future, la capacité à l'**install rollback** sera introduite avec la modification à la commande d'**install commit**.

Importance : Commandant

```
RP/0/RP0/CPU0:NCS#install ?
activate    Activate software package(s)
add         Add package file(s) to software repository
commit      Commit changes to the active software
deactivate  Deactivate software package(s)
prepare     Prepare software package(s) to be activated
remove      Remove package file(s) from software repository
verify      verifies packages present on the router
RP/0/RP0/CPU0:TLAB97-NCS1#
RP/0/RP0/CPU0:TLAB97-NCS1#admin
Wed Dec 11 03:41:00.393 EST
```

admin connected from 127.0.0.1 using console on xr-vm_node0_RP0_CPU0

```
sysadmin-vm:0_RP1# install ?
Possible completions:
activate    Activate rpm(s) and iso and smu(s).
add         add rpm(s) and iso to the software repository.
commit      commit changes to the active software
deactivate  deactivate rpm(s) and iso and smu(s).
prepare     prepare rpm(s) and iso for activation.
remove      remove rpm(s) and iso from install repository.
verify      verifies packages present on the router
```

processus de surveillance

Référez-vous à la section de [processus de surveillance de la référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS](#), libérez le pour en savoir plus 5.0.x.

Résumé : Il y a les modifications mineures d'option et de sortie.

Détails : L'option d'emplacement n'est pas disponible.

Importance : Mineur

```
RP/0/RP0/CPU0:NCS6008-A#monitor processes ?
dumbtty    Disable screen management
<cr>

RP/0/RP0/CPU0:CRS-K#monitor processes ?
dumbtty    Disable screen management
location   Location
<cr>
```

affichez la configuration

Référez-vous à la section de [configuration d'exposition de la référence de commandes de gestion](#)

du système pour le routeur de gamme 6000 de Cisco NCS, libérez le pour en savoir plus 5.0.x.

Résumé : La sortie de commande de **configuration d'exposition** est différente du XR classique.

Détails : Les mots clé disponibles ont changé pour la VM de SysAdmin. Les mots clé pour la VM XR demeurent les mêmes qu'avec XR classique.

Importance : Mineur

VM XR - Mêmes qu'IOS-XR traditionnel

```
RP/0/RP1/CPU0:NCS6k#show config ?
backup System configuration backup information
commit      Show commit information
failed      Contents of failed configuration
history     Display history of configuration events (up to 1500 events)
inconsistency Configuration inconsistencies
lock        Configuration lock
persistent  Show persistent configuration
removed     Display configuration removed during install operations
rollback    Show rollback information
running-config Current operating configuration
sessions    Users with active configuration sessions
trace       Show trace data for config shell
```

VM de SysAdmin - (seulement mot clé de validation affiché comme option) :

```
sysadmin-vm:0_RP1# show configuraiton ?
Possible completions:
commit Commit configuration changes
```

```
RP/0/RP1/CPU0:CRS-H(admin)#show configuration ?
commit      Show commit information
failed      Contents of the failed configuration
history     Display history of configuration events (up to 1500 events)
inconsistency Configuration inconsistencies
lock        Configuration lock
persistent  Show persistent configuration
removed     Display configuration removed during install operations
rollback    Show rollback information
running     Current operating configuration
sessions    Users with active configuration sessions
```

show context

Référez-vous à la section de [show context de la référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS, libérez le pour en savoir plus 5.0.x.](#)

Résumé : Il n'y a aucun changement important aux options CLI. Modifications mineures de sortie CLI.

Détails : Le répertoire où le fichier image mémoire est enregistré n'est pas toujours affiché (**disque dur** : par défaut). Les fichiers crashinfo ne sont pas écrits au même répertoire que les fichiers image mémoire par défaut et sont enregistrés au répertoire **disk0:/core**. La commande de **show**

context et le fichier crashinfo associé (.txt) inclut les informations de backtrace et de registre pour chaque thread du processus tombant en panne sur le NCS 6008

Importance : Mineur

RP/0/RP0/CPU0:NCS6008-SJ#**show context**

Wed Feb 19 12:25:31.999 UTC

node: node0_RP0_CPU0

Core for pid = 2117 (syslogd)

Core for process: syslogd_2117.by.11.20140219-122529.xr-vm_node0_RP0_CPU0.ddc58.core.gz

Core dump time: 2014-02-19 12:25:29.152358704 +0000

Process:

Core was generated by `syslogd'.

Signal information:

Program terminated with signal 11, Segmentation fault.

Faulting thread: 2117

Registers for Thread 2117

rax: 0xffffffffffffc

rbx: 0x18

rcx: 0xffffffffffff

rdx: 0x40

rsi: 0x7fff640b9c40

rdi: 0x18

rbp: 0x7fff640b9fc0

rsp: 0x7fff640b9b90

r8: 0x0

r9: 0x200000

r10: 0xffffffff

r11: 0x293

r12: 0xbaef70

r13: 0x7fff640bb180

r14: 0x0

r15: 0x0

rip: 0x7fe0a588c683

eflags: 0x293

cs: 0x33

ss: 0x2b

ds: 0x0

es: 0x0

fs: 0x0

gs: 0x0

Backtrace for Thread 2117

#0 0x00007fe0a588c683 in epoll_wait+0x33 from /lib64/libc-2.12.so

#1 0x00007fe0aa343636 in msg_receivev+0x29d from

```
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
#2 0x00000000041483a in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/sbin/syslogd
#3 0x00007fe0a57c6cce in __libc_start_main+0xfe from
/lib64/libc-2.12.so
#4 0x000000000405869 in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/sbin/syslogd
```

Registers for Thread 2366

```
rax: 0xffffffffffffe00
rbx: 0x7fe0ab5b0bf0
rcx: 0xfffffffffffffff
rdx: 0x7fe0ab5b0bac
rsi: 0x7fe0ab5b0bf0
rdi: 0xa
rbp: 0x7fe0ab5b0c80
rsp: 0x7fe0ab5b0b90
r8: 0x6e
r9: 0x101010101010101
r10: 0x22
r11: 0x293
r12: 0xa
r13: 0x7fe0ab5b0bac
r14: 0x7fe0ab673040
r15: 0x3
rip: 0x7fe0a588cc4d
eflags: 0x293
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0
```

Backtrace for Thread 2366

```
#0 0x00007fe0a588cc4d in accept+0x2d from /lib64/libc-2.12.so
#1 0x00007fe0aa3537dd in lwm_debug_wait_for_conns+0xbe from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
#2 0x00007fe0aa353a2a in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
#3 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
#4 0x0000000000000003 in ?? ()
```

Registers for Thread 2367

```
rax: 0xfffffffffffffc
rbx: 0x7fe0ab52fe30
rcx: 0xfffffffffffffff
rdx: 0x0
rsi: 0x7fe0ab52fe30
```

rdi: 0x7fe0ab52fdb0
rbp: 0x7fe0ab52fee0
rsp: 0x7fe0ab52fcf0
r8: 0x0
r9: 0x7fe0ab530700
r10: 0x8
r11: 0x246
r12: 0x7fe0a559cc80
r13: 0x7fe0ab5309c0
r14: 0x7fe0ab673040
r15: 0x7fe0ab52fe30
rip: 0x7fe0a57dc7af
eflags: 0x246
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 2367

#0 0x00007fe0a57dc7af in sigwaitinfo+0xdf from /lib64/libc-2.12.so
#1 0x00007fe0aa36a1a0 in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
#2 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
#3 0x00007fe0a559294b in start_thread+0x6b from /lib64/libpthread-2.12.so
#4 0x02c570128022879a in ?? ()

Registers for Thread 2369

rax: 0xffffffffffffc
rbx: 0x1
rcx: 0xfffffffffffff
rdx: 0x40
rsi: 0x7fe08eb6abb0
rdi: 0x4
rbp: 0x7fe08eb6aee0
rsp: 0x7fe08eb6aa60
r8: 0x7fe0ab44a4a0
r9: 0x941
r10: 0xfffffffff
r11: 0x293
r12: 0x0
r13: 0xb00001
r14: 0x4
r15: 0x3b
rip: 0x7fe0a588c683
eflags: 0x293
cs: 0x33
ss: 0x2b
ds: 0x0

es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 2369

#0 0x00007fe0a588c683 in epoll_wait+0x33 from /lib64/libc-2.12.so
#1 0x00007fe0aa34fc0c in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
#2 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so

Registers for Thread 2370

rax: 0xffffffffffffffff
rbx: 0xb67b70
rcx: 0xffffffffffffffff
rdx: 0x20
rsi: 0xb67e00
rdi: 0x6
rbp: 0xb5e9c0
rsp: 0x7fe08eae9790
r8: 0xb68000
r9: 0x0
r10: 0xffffffff
r11: 0x293
r12: 0xb67e00
r13: 0xe
r14: 0x0
r15: 0xb5e9c0
rip: 0x7fe0a588c683
eflags: 0x293
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 2370

#0 0x00007fe0a588c683 in epoll_wait+0x33 from /lib64/libc-2.12.so
#1 0x00007fe0a277e236 in ?? () from /usr/lib64/libevent-2.0.so.5.0.1
#2 0x00007fe0a276d076 in event_base_loop+0x1c6 from
/usr/lib64/libevent-2.0.so.5.0.1
#3 0x00007fe0a29a2a52 in levn_block+0x2a from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_infra.so
#4 0x00007fe0aa36d216 in event_block+0x500 from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
#5 0x00007fe0aa34dae5 in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
#6 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so

Registers for Thread 2372

rax: 0xffffffffffffffe0
rbx: 0x7fe0ab608008
rcx: 0xffffffffffffff
rdx: 0x20
rsi: 0x0
rdi: 0x7fe0ab608034
rbp: 0x7fe08ea68ee0
rsp: 0x7fe08ea68e28
r8: 0x0
r9: 0x0
r10: 0x0
r11: 0x246
r12: 0x7fe0a559cc80

--More-- --More-- filtering...

Registers for Thread 2370

rax: 0xffffffffffffffc
rbx: 0xb67b70
rcx: 0xffffffffffffff
rdx: 0x20
rsi: 0xb67e00
rdi: 0x6
rbp: 0xb5e9c0
rsp: 0x7fe08eae9790
r8: 0xb68000
r9: 0x0
r10: 0xfffffffff
r11: 0x293
r12: 0xb67e00
r13: 0xe
r14: 0x0
r15: 0xb5e9c0
rip: 0x7fe0a588c683
eflags: 0x293
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 2370

#0 0x00007fe0a588c683 in epoll_wait+0x33 from /lib64/libc-2.12.so
#1 0x00007fe0a277e236 in ?? () from /usr/lib64/libevent-2.0.so.5.0.1
#2 0x00007fe0a276d076 in event_base_loop+0x1c6 from /usr/lib64/libevent-2.0.so.5.0.1
#3 0x00007fe0a29a2a52 in levm_block+0x2a from /opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_infra.so
#4 0x00007fe0aa36d216 in event_block+0x500 from /opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so

```
#5 0x00007fe0aa34dae5 in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
#6 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
```

Registers for Thread 2372

```
rax: 0xffffffffffffffe0
rbx: 0x7fe0ab608008
rcx: 0xffffffffffffff
rdx: 0x20
rsi: 0x0
rdi: 0x7fe0ab608034
rbp: 0x7fe08ea68ee0
rsp: 0x7fe08ea68e28
r8: 0x0
r9: 0x0
r10: 0x0
r11: 0x246
r12: 0x7fe0a559cc80
r13: 0x7fe08ea699c0
--More-- --More-- r14: 0x7fe0ab673040
r15: 0x3
rip: 0x7fe0a55969ac
eflags: 0x246
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0
```

Backtrace for Thread 2372

```
#0 0x00007fe0a55969ac in pthread_cond_wait@@GLIBC_2.3.2+0xcc from
/lib64/libpthread-2.12.so
#1 0x00007fe0a5b22672 in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosag.so
#2 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
```

Registers for Thread 2417

```
rax: 0xffffffffffffffe0
rbx: 0x0
rcx: 0xffffffffffffff
rdx: 0x0
rsi: 0x0
rdi: 0x11
rbp: 0x7fe08e8ceee0
rsp: 0x7fe08e8ced00
r8: 0x2
r9: 0x971
r10: 0x80000
```


r11: 0x246
r12: 0x7fe0ab452640
r13: 0x7fe08e8cf9c0
r14: 0x7fe0ab673040
r15: 0x3
rip: 0x7fe0a588d52f
eflags: 0x246
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 2417

#0 0x00007fe0a588d52f in accept4+0x5f from /lib64/libc-2.12.so
#1 0x00007fe0ab248557 in backing_thread+0xe2 from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libmalloc_stat.so.0.0.1
#2 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
#3 0x00007fe0a588c08d in clone+0x6d from /lib64/libc-2.12.so

Registers for Thread 2544

rax: 0xfffffffffffffffffc
rbx: 0xbb6290
rcx: 0xffffffffffffffffff
rdx: 0x20
rsi: 0xbb6560
rdi: 0x1f
rbp: 0xbb6520
rsp: 0x7fe08efa0b40
r8: 0x1
r9: 0x9f0
r10: 0xffffffff
r11: 0x293
r12: 0xbb6560
r13: 0xd
r14: 0x0
r15: 0xbb6520
rip: 0x7fe0a588c683
eflags: 0x293
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 2544

#0 0x00007fe0a588c683 in epoll_wait+0x33 from /lib64/libc-2.12.so

```
#1 0x00007fe0a277e236 in ?? () from /usr/lib64/libevent-2.0.so.5.0.1
#2 0x00007fe0a276d076 in event_base_loop+0x1c6 from
/usr/lib64/libevent-2.0.so.5.0.1
#3 0x00007fe0a29a2a52 in levn_block+0x2a from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_infra.so
#4 0x00007fe0aa36d216 in event_block+0x500 from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
#5 0x0000000000411de1 in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/sbin/syslogd
#6 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
#7 0x00007fe0a588c08d in clone+0x6d from /lib64/libc-2.12.so
```

Registers for Thread 2545

```
rax: 0x0
rbx: 0x7fe086ba82b0
rcx: 0xffffffffffffffff
rdx: 0x626380
rsi: 0x0
rdi: 0x7fe08ed1ca00
rbp: 0x7fe08ed1eee0
rsp: 0x7fe08ed1c980
r8: 0x20305550432f30
r9: 0x6320612064657473
r10: 0x20666f2068736172
r11: 0x293
r12: 0x7fe08ed1cbc0
r13: 0x7fe08ed1ca20
r14: 0x1
r15: 0x0
rip: 0x7fe0a584feed
eflags: 0x293
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0
```

Backtrace for Thread 2545

```
#0 0x00007fe0a584feed in __nanosleep+0x2d from /lib64/libc-2.12.so
#1 0x0000000000413316 in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/sbin/syslogd
#2 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
#3 0x00007fe0a588c08d in clone+0x6d from /lib64/libc-2.12.so
```

Registers for Thread 2546

```
rax: 0xffffffffffffc
rbx: 0x7fe08ec9de20
rcx: 0xffffffffffffffff
```

rdx: 0x0
rsi: 0x0
rdi: 0x7fe08ec9de20
rbp: 0x7fe08ec9deac
rsp: 0x7fe08ec9d2c0
r8: 0x0
r9: 0x80
r10: 0x8
r11: 0x246
r12: 0x7fe08ec9d3a0
r13: 0x7fe08ec9daf0
r14: 0x7fe08ec9deac
r15: 0x7fe08ec9de20
rip: 0x7fe0a57dba08
eflags: 0x246
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 2546

#0 0x00007fe0a57dba08 in sigwait+0xc8 from /lib64/libc-2.12.so
#1 0x0000000000418349 in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/sbin/syslogd
#2 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
#3 0x00007fe0a588c08d in clone+0x6d from /lib64/libc-2.12.so

Registers for Thread 2547

rax: 0xffffffffffffc
rbx: 0x7fe08ec1ce20
rcx: 0xfffffffffffff
rdx: 0x0
rsi: 0x0
rdi: 0x7fe08ec1ce20
rbp: 0x7fe08ec1ceac
rsp: 0x7fe08ec1be50
r8: 0x0
r9: 0x80
r10: 0x8
r11: 0x246
r12: 0x7fe08ec1cbf5
r13: 0x7fe08ec1cbf5
r14: 0x7fe0ab673040
r15: 0x7fe08ec1bf70
rip: 0x7fe0a57dba08
eflags: 0x246
cs: 0x33
ss: 0x2b

ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 2547

#0 0x00007fe0a57dba08 in sigwait+0xc8 from /lib64/libc-2.12.so
#1 0x0000000000416b9d in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/sbin/syslogd
#2 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
#3 0x00007fe0a588c08d in clone+0x6d from /lib64/libc-2.12.so

Registers for Thread 2548

rax: 0xffffffffffffffffc
rbx: 0x7fe08e7cde20
rcx: 0xfffffffffffffffff
rdx: 0x0
rsi: 0x0
rdi: 0x7fe08e7cde20
rbp: 0x7fe08e7cdeac
rsp: 0x7fe08e7cd5d0
r8: 0x0
r9: 0x80
r10: 0x8
r11: 0x246
r12: 0xc1a6c0
r13: 0x7fe08e7cd6c0
r14: 0xa5
r15: 0x7fe08e7cdaf0
rip: 0x7fe0a57dba08
eflags: 0x246
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 2548

#0 0x00007fe0a57dba08 in sigwait+0xc8 from /lib64/libc-2.12.so
#1 0x000000000041547d in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/sbin/syslogd
#2 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
#3 0x00007fe0a588c08d in clone+0x6d from /lib64/libc-2.12.so

Registers for Thread 2549

rax: 0xffffffffffffffffc
rbx: 0x7fe08e74ce20

rcx: 0xffffffffffffffff
rdx: 0x0
rsi: 0x0
rdi: 0x7fe08e74ce20
rbp: 0x7fe08e74ceac
rsp: 0x7fe08e74c5a0
r8: 0x0
r9: 0x80
r10: 0x8
r11: 0x246
r12: 0x0
r13: 0x7fe08e74caf0
r14: 0x0
r15: 0x7fe08e74c6e0
rip: 0x7fe0a57dba08
eflags: 0x246
cs: 0x33
ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 2549

#0 0x00007fe0a57dba08 in sigwait+0xc8 from /lib64/libc-2.12.so
#1 0x0000000000416047 in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/sbin/syslogd
#2 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
#3 0x00007fe0a588c08d in clone+0x6d from /lib64/libc-2.12.so

Registers for Thread 3289

rax: 0xffffffffffffc
rbx: 0x8
rcx: 0xffffffffffffffff
rdx: 0x20
rsi: 0x7fe08e1b7d30
rdi: 0x4d
rbp: 0x7fe08e1b7ee0
rsp: 0x7fe08e1b7a70
r8: 0x0
r9: 0x0
r10: 0xffffffff
r11: 0x293
r12: 0x1
r13: 0x7fe08e1b7d48
r14: 0x4d
r15: 0x51
rip: 0x7fe0a588c683
eflags: 0x293
cs: 0x33

ss: 0x2b
ds: 0x0
es: 0x0
fs: 0x0
gs: 0x0

Backtrace for Thread 3289

#0 0x00007fe0a588c683 in epoll_wait+0x33 from /lib64/libc-2.12.so
#1 0x00007fe0aa32f8a6 in ?? () from
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
#2 0x00007fe0a55929bc in start_thread+0xdc from /lib64/libpthread-2.12.so
#3 0x00500001fccc920a in ?? ()

Mapping information

2117: syslogd
000000000400000 148K r-x-- /opt/cisco/XR/packages/iosxr-os.rp-5.0.1/sbin/syslogd
0000000000625000 8K rw--- /opt/cisco/XR/packages/iosxr-os.rp-5.0.1/sbin/syslogd
0000000000627000 48K rw--- [anon]
0000000000b4e000 880K rw--- [anon]
0000000080000000 1920K ---s- /dev/zero (deleted)
00000000801e0000 40K rw-s- /dev/shm/dev/shmem/shmwin/im_rules/header
00000000801ea000 24K ---s- /dev/zero (deleted)
00000000801f0000 36K rw-s- /dev/shm/dev/shmem/shmwin/im_db/header
00000000801f9000 28K ---s- /dev/zero (deleted)
0000000080200000 36K rw-s- /dev/shm/dev/shmem/shmwin/im_rd/header
0000000080209000 147624K ---s- /dev/zero (deleted)
0000000089233000 32K rw-s- /dev/shm/dev/shmem/shmwin/im_rules/0x89233000
000000008923b000 32K rw-s- /dev/shm/dev/shmem/shmwin/im_rules/0x8923b000
0000000089243000 32K rw-s- /dev/shm/dev/shmem/shmwin/im_rules/0x89243000
000000008924b000 32K rw-s- /dev/shm/dev/shmem/shmwin/im_rules/0x8924b000
0000000089253000 32K rw-s- /dev/shm/dev/shmem/shmwin/im_rules/0x89253000
000000008925b000 8K rw-s- /dev/shm/dev/shmem/shmwin/im_rules/0x8925b000
000000008925d000 32K rw-s- /dev/shm/dev/shmem/shmwin/im_rules/0x8925d000
0000000089265000 32K rw-s- /dev/shm/dev/shmem/shmwin/im_rules/0x89265000
000000008926d000 1024K r--s- /dev/shm/dev/shmem/shmwin/im_db/0x8926d000
000000008936d000 1024K rw-s- /dev/shm/dev/shmem/shmwin/im_rd/0x8936d000
000000008946d000 104K rw-s- /dev/shm/dev/shmem/shmwin/im_rd/0x8946d000
0000000089487000 4328K ---s- /dev/zero (deleted)
00000000898c1000 104K r--s- /dev/shm/dev/shmem/shmwin/im_db/0x898c1000
00000000898db000 1940628K ---s- /dev/zero (deleted)
00007fe0868dc000 122072K rw-s- /dev/shm/logging_buffer
00007fe08e012000 56K rw-s- /dev/shmem/ltrace/shmwin/lib/err_b1_oaef
00007fe08e020000 16K rw-s- /dev/shmem/ltrace/shmwin/lib/err
00007fe08e024000 160K rw-s- /dev/shm/cdm_aqsm_services_db
00007fe08e04c000 864K ---s- /dev/shm/cdm_aqsm_services_db
00007fe08e124000 40K rw-s- /dev/shmem/ltrace/lwmlib/1_syslogd/dbg_b2_o846
00007fe08e12e000 40K rw-s- /dev/shmem/ltrace/lwmlib/1_syslogd/api_b1_o846
00007fe08e138000 4K ---- [anon]
00007fe08e139000 512K rw--- [anon]

00007fe08e1b9000	5120K	rw-s-	/dev/shm/dev/shmem/sysmgr_shmem
00007fe08e6b9000	56K	rw-s-	/dev/shmem/ltrace/epm/issu_b1_o803
00007fe08e6c7000	16K	rw-s-	/dev/shmem/ltrace/epm/issu
00007fe08e6cd000	4K	-----	[anon]
00007fe08e6ce000	512K	rw---	[anon]
00007fe08e74e000	4K	-----	[anon]
00007fe08e74f000	512K	rw---	[anon]
00007fe08e7cf000	16K	rw-s-	/dev/shmem/ltrace/sysdb/clientlib/file
00007fe08e7d3000	16K	rw-s-	/dev/shmem/ltrace/sysdb/clientlib/event
00007fe08e7d7000	16K	rw-s-	/dev/shmem/ltrace/sysdb/clientlib/suspend
00007fe08e7db000	12K	rw-s-	/dev/shmem/ltrace/sysdb/clientlib/vicr
00007fe08e7de000	12K	rw-s-	/dev/shmem/ltrace/sysdb/clientlib/edm_access
00007fe08e7e1000	40K	rw-s-	/dev/shmem/ltrace/sysdb/clientlib/recon-rst_tmo_b2_o803
00007fe08e7eb000	40K	rw-s-	/dev/shmem/ltrace/sysdb/clientlib/recon-rst_tmo_b1_o803
00007fe08e7f5000	12K	rw-s-	/dev/shmem/ltrace/sysdb/clientlib/recon-rst_tmo
00007fe08e7f8000	12K	rw-s-	/dev/shmem/ltrace/install/insthelper
00007fe08e7fb000	12K	rw-s-	/dev/shmem/ltrace/install/instdir
00007fe08e7fe000	8K	rw-s-	/dev/shmem/ltrace/im/ochn_evt
00007fe08e800000	8K	rw-s-	/dev/shmem/ltrace/im/ochn_msg
00007fe08e802000	136K	rw-s-	/dev/shmem/ltrace/im/client--
00007fe08e824000	8K	rw-s-	/dev/shmem/ltrace/im/register
00007fe08e826000	8K	rw-s-	/dev/shmem/ltrace/im/resync--
00007fe08e828000	8K	rw-s-	/dev/shmem/ltrace/im/replcate
00007fe08e82a000	8K	rw-s-	/dev/shmem/ltrace/im/dpc-----
00007fe08e82c000	8K	rw-s-	/dev/shmem/ltrace/im/attr_chg
00007fe08e82e000	8K	rw-s-	/dev/shmem/ltrace/im/caps_add
00007fe08e830000	8K	rw-s-	/dev/shmem/ltrace/im/ifcreate
00007fe08e832000	12K	rw-s-	/dev/shmem/ltrace/im/if_exist
00007fe08e835000	8K	rw-s-	/dev/shmem/ltrace/im/history-
00007fe08e837000	12K	rw-s-	/dev/shmem/ltrace/im/mgmt----
00007fe08e83a000	8K	rw-s-	/dev/shmem/ltrace/im/sys-fast
00007fe08e83c000	12K	rw-s-	/dev/shmem/ltrace/im/sys-slow
00007fe08e83f000	12K	rw-s-	/dev/shmem/ltrace/im/errors-s
00007fe08e842000	16K	rw-s-	/dev/shmem/ltrace/im/errors-o
00007fe08e846000	12K	rw-s-	/dev/shmem/ltrace/im/errors-i
00007fe08e849000	12K	rw-s-	/dev/shmem/ltrace/install/notify_error
00007fe08e84c000	12K	rw-s-	/dev/shmem/ltrace/install/notify
00007fe08e84f000	4K	-----	[anon]
00007fe08e850000	512K	rw---	[anon]
00007fe08e8d0000	36K	rw-s-	/dev/shmem/ltrace/install/instdir_loadpath_error
00007fe08e8d9000	12K	rw-s-	/dev/shmem/ltrace/install/instdir_loadpath
00007fe08e8dc000	52K	rw-s-	/dev/shmem/ltrace/install/inst_io_error
00007fe08e8e9000	1024K	rw-s-	/dev/shm/cdm_aqsm_services_db
00007fe08e9e9000	4K	-----	[anon]
00007fe08e9ea000	512K	rw---	[anon]
00007fe08ea6a000	4K	-----	[anon]
00007fe08ea6b000	512K	rw---	[anon]
00007fe08eaeb000	4K	-----	[anon]
00007fe08eaec000	512K	rw---	[anon]
00007fe08eb6e000	4K	rw-s-	/dev/shm/dev/shmem/ship_data_0
00007fe08eb6f000	12K	rw-s-	/dev/shmem/ltrace/ip_addr_c_data_trace_190
00007fe08eb72000	12K	rw-s-	/dev/shmem/ltrace/ip_addr_c_ctrl_trace_190

```

00007fe08eb75000      8K rw-s- /dev/shm/dev/shmem/shmwin_svr/window_grp_stats
00007fe08eb77000     80K rw-s- /dev/shmem/ltrace/sysdb/clientlib/recon-rst_tmo_b3_o803
00007fe08eb8b000     32K rw-s- /dev/shmem/ltrace/aqsmlib/190/debug_b1_o846
00007fe08eb93000     40K rw-s- /dev/shmem/ltrace/lwmlib/1_syslogd/dbg_b1_o846
00007fe08eb9d000      4K ----- [ anon ]
00007fe08eb9e000    512K rw--- [ anon ]
00007fe08ec1e000      4K ----- [ anon ]
00007fe08ec1f000    512K rw--- [ anon ]
00007fe08ec9f000      4K ----- [ anon ]
00007fe08eca0000    512K rw--- [ anon ]
00007fe08eefe000     56K rw-s- /dev/shmem/ltrace/syslog/slow_b1_o846
00007fe08ef0c000     80K rw-s- /dev/shmem/ltrace/lwmlib/1_syslogd/dbg_b3_o846
00007fe08ef20000      4K rw-s- /dev/shm/logging_buffer
00007fe08ef21000      4K ----- [ anon ]
00007fe08ef22000    512K rw--- [ anon ]
00007fe08efa2000      4K ----- [ anon ]
00007fe08efa3000    512K rw--- [ anon ]
00007fe08f023000   2904K rw-s- /dev/shm/tmp/syslogd_msg_header_buffer
00007fe08f2f9000      8K rw-s- /dev/shmem/ltrace/syslog/lib/read_error
00007fe08f2fb000      4K rw-s- /dev/shm/dev/shmem/ship_data_0
00007fe08f2fc000     32K rw-s- /dev/shmem/ltrace/aqsmlib/190/api_b1_o846
00007fe08f304000      8K rw-s- /dev/shmem/ltrace/syslog/fast
00007fe08f306000     16K rw-s- /dev/shmem/ltrace/syslog/slow
00007fe08f30a000     16K rw-s- /dev/shmem/ltrace/syslog/error
00007fe08f30e000    224K rw-s- /dev/shm/dev/shmem/ship_data_0
00007fe08f346000    132K rw-s- /dev/shm/dev/shmem/ship_data_0
00007fe08f367000     32K rw-s- /dev/shmem/ltrace/cdm/190/api_b1_o846
00007fe08f36f000      8K rw-s- /dev/shmem/ltrace/pfi_ifh/fallback
00007fe08f371000     12K rw-s- /dev/shmem/ltrace/alm_loc_fast
00007fe08f374000     24K rw-s- /dev/shmem/ltrace/alm_loc_slow
00007fe08f37a000    112K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libreplicator.so
00007fe08f396000   2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libreplicator.so
00007fe08f595000      8K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libreplicator.so
00007fe08f597000    488K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libchkpt.so
00007fe08f611000   2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libchkpt.so
00007fe08f810000     16K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libchkpt.so
00007fe08f814000      4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_cardinfo.so
00007fe08f815000   2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_cardinfo.so
00007fe08fa14000      4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_cardinfo.so
00007fe08fa15000     16K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libacl.so
00007fe08fa19000   2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libacl.so

```


00007fe08fc18000 4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libacl.so
00007fe08fc19000 4K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libacl_ltracedebug.so
00007fe08fc1a000 2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libacl_ltracedebug.so
00007fe08fe1a000 4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libacl_ltracedebug.so
00007fe08fe1b000 4K r-x--
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/liblpts_ifib_platform_com.so
00007fe08fe1c000 2044K -----
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/liblpts_ifib_platform_com.so
00007fe09001b000 4K rw---
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/liblpts_ifib_platform_com.so
00007fe09001c000 4K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp-5.0.1/lib/liblpts_ifib_platform.so
00007fe09001d000 2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp-5.0.1/lib/liblpts_ifib_platform.so
00007fe09021c000 4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp-5.0.1/lib/liblpts_ifib_platform.so
00007fe09021d000 56K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_mrt.so
00007fe09022b000 2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_mrt.so
00007fe09042b000 4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_mrt.so
00007fe09042c000 4K r-x--
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/liblpts_pa_dlvr_list.so
00007fe09042d000 2048K -----
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/liblpts_pa_dlvr_list.so
00007fe09062d000 4K rw---
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/liblpts_pa_dlvr_list.so
00007fe09062e000 4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_ifc.so
00007fe09062f000 2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_ifc.so
00007fe09082e000 4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_ifc.so
00007fe09082f000 156K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libnotify.so
00007fe090856000 2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libnotify.so
00007fe090a56000 8K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libnotify.so
00007fe090a58000 24K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libloadpath_file_mgmt.so
00007fe090a5e000 2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libloadpath_file_mgmt.so
00007fe090c5d000 4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libloadpath_file_mgmt.so
00007fe090c5e000 28K r-x--
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/lib/libinst_inv.so

```
00007fe090c65000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/lib/libinst_inv.so
00007fe090e64000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/lib/libinst_inv.so
00007fe090e65000        16K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_mem.so
00007fe090e69000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_mem.so
00007fe091068000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_mem.so
00007fe091069000        144K r-x-- /usr/lib64/libfuse.so.2.8.7
00007fe09108d000    2048K ----- /usr/lib64/libfuse.so.2.8.7
00007fe09128d000        72K rw--- /usr/lib64/libfuse.so.2.8.7
00007fe09129f000         4K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp-5.0.1/lib/libipv6_acl_nh.so
00007fe0912a0000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp-5.0.1/lib/libipv6_acl_nh.so
00007fe09149f000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp-5.0.1/lib/libipv6_acl_nh.so
00007fe0914a0000         4K rw--- [ anon ]
00007fe0914a1000         4K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv6_acl_ltrace.so
00007fe0914a2000    2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv6_acl_ltrace.so
00007fe0916a2000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv6_acl_ltrace.so
00007fe0916a3000        16K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv6_acl_support.so
00007fe0916a7000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv6_acl_support.so
00007fe0918a6000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv6_acl_support.so
00007fe0918a7000         4K rw--- [ anon ]
00007fe0918a8000        12K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libacl_common.so
00007fe0918ab000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libacl_common.so
00007fe091aaa000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libacl_common.so
00007fe091aab000        32K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl_tree.so
00007fe091ab3000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl_tree.so
00007fe091cb2000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl_tree.so
00007fe091cb3000        28K rw--- [ anon ]
00007fe091cba000         4K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp-5.0.1/lib/libipv4_acl_nh.so
00007fe091cbb000    2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp-5.0.1/lib/libipv4_acl_nh.so
00007fe091ebb000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp-5.0.1/lib/libipv4_acl_nh.so
```

```
00007fe091ebc000      4K rw---    [ anon ]
00007fe091ebd000      32K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl_edm.so
00007fe091ec5000     2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl_edm.so
00007fe0920c4000       8K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl_edm.so
00007fe0920c6000       4K rw---    [ anon ]
00007fe0920c7000       8K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl_support.so
00007fe0920c9000     2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl_support.so
00007fe0922c9000       4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl_support.so
00007fe0922ca000      20K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libnetio_api.so
00007fe0922cf000     2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libnetio_api.so
00007fe0924ce000       4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libnetio_api.so
00007fe0924cf000       4K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_ltrace.so
00007fe0924d0000     2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_ltrace.so
00007fe0926cf000       4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_ltrace.so
00007fe0926d0000      24K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_ifib.so
00007fe0926d6000     2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_ifib.so
00007fe0928d6000       4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_ifib.so
00007fe0928d7000      16K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_pa.so
00007fe0928db000     2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_pa.so
00007fe092ada000       4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_pa.so
00007fe092adb000       4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_severity.so
00007fe092adc000     2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_severity.so
00007fe092cdb000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_severity.so
00007fe092cdc000      16K r-x--
/opt/cisco/XR/packages/ncs-fwding.rp_lc-5.0.1/lib/libpanini_fwplib.so
00007fe092ce0000     2048K -----
/opt/cisco/XR/packages/ncs-fwding.rp_lc-5.0.1/lib/libpanini_fwplib.so
00007fe092ee0000       4K rw---
/opt/cisco/XR/packages/ncs-fwding.rp_lc-5.0.1/lib/libpanini_fwplib.so
00007fe092ee1000       8K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libniantic.so
```

00007fe092ee3000 2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libniantic.so
00007fe0930e2000 4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libniantic.so
00007fe0930e3000 4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libipnodeid.so
00007fe0930e4000 2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libipnodeid.so
00007fe0932e3000 4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libipnodeid.so
00007fe0932e4000 4K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libnodeid_pd.so
00007fe0932e5000 2044K -----
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libnodeid_pd.so
00007fe0934e4000 4K rw---
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libnodeid_pd.so
00007fe0934e5000 4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpcds_hex_dump.so
00007fe0934e6000 2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpcds_hex_dump.so
00007fe0936e5000 4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpcds_hex_dump.so
00007fe0936e6000 76K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libcdr_invmgr_capi_proto.so
00007fe0936f9000 2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libcdr_invmgr_capi_proto.so
00007fe0938f8000 4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libcdr_invmgr_capi_proto.so
00007fe0938f9000 56K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libxr_ds_capi.so
00007fe093907000 2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libxr_ds_capi.so
00007fe093b07000 4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libxr_ds_capi.so
00007fe093b08000 84K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libinstmsg_proto.so
00007fe093b1d000 2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libinstmsg_proto.so
00007fe093d1c000 4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libinstmsg_proto.so
00007fe093d1d000 100K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libifc.so
00007fe093d36000 2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libifc.so
00007fe093f35000 4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libifc.so
00007fe093f36000 696K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librds.so
00007fe093fe4000 2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librds.so
00007fe0941e3000 12K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librds.so

```
00007fe0941e6000      48K rw---      [ anon ]
00007fe0941f2000     164K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpackage_md5.so
00007fe09421b000     2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpackage_md5.so
00007fe09441a000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpackage_md5.so
00007fe09441b000      60K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpie.so
00007fe09442a000     2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpie.so
00007fe09462a000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpie.so
00007fe09462b000      16K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_debug.so
00007fe09462f000     2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_debug.so
00007fe09482f000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_debug.so
00007fe094830000       8K rw---      [ anon ]
00007fe094832000     12K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librmf_switch_api.so
00007fe094835000     2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librmf_switch_api.so
00007fe094a34000       4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librmf_switch_api.so
00007fe094a35000     304K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libloadpath.so
00007fe094a81000     2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libloadpath.so
00007fe094c80000       8K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libloadpath.so
00007fe094c82000     24K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_io_device.so
00007fe094c88000     2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_io_device.so
00007fe094e87000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_io_device.so
00007fe094e88000       4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libmbi_reset.so
00007fe094e89000     2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libmbi_reset.so
00007fe095088000       4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libmbi_reset.so
00007fe095089000       4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/lib_flash.so
00007fe09508a000     2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/lib_flash.so
00007fe095289000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/lib_flash.so
00007fe09528a000       8K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_log.so
```

```
00007fe09528c000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_log.so
00007fe09548b000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_log.so
00007fe09548c000         4K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libaib_ltrace.so
00007fe09548d000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libaib_ltrace.so
00007fe09568c000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libaib_ltrace.so
00007fe09568d000        24K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libaib_shm.so
00007fe095693000    2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libaib_shm.so
00007fe095893000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libaib_shm.so
00007fe095894000       112K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcm_proto.so.0.0.1
00007fe0958b0000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcm_proto.so.0.0.1
00007fe095aaf000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcm_proto.so.0.0.1
00007fe095ab0000        56K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcm_capi.so.0.0.1
00007fe095abe000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcm_capi.so.0.0.1
00007fe095cbd000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcm_capi.so.0.0.1
00007fe095cbe000        36K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libavl.so
00007fe095cc7000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libavl.so
00007fe095ec6000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libavl.so
00007fe095ec7000        72K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libasync.so
00007fe095ed9000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libasync.so
00007fe0960d9000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libasync.so
00007fe0960da000         8K rw---   [ anon ]
00007fe0960dc000        20K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libnrsutils.so
00007fe0960e1000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libnrsutils.so
00007fe0962e0000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libnrsutils.so
00007fe0962e1000       320K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsocket_proto.so
00007fe096331000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsocket_proto.so
00007fe096530000        12K rw---
```

```
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsocket_proto.so
00007fe096533000    160K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv6_acl.so
00007fe09655b000    2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv6_acl.so
00007fe09675b000      4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv6_acl.so
00007fe09675c000      4K rw--- [ anon ]
00007fe09675d000    216K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl.so
00007fe096793000    2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl.so
00007fe096993000      4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_acl.so
00007fe096994000      4K rw--- [ anon ]
00007fe096995000    100K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_proto.so
00007fe0969ae000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_proto.so
00007fe096bae000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_proto.so
00007fe096baf000      4K rw--- [ anon ]
00007fe096bb0000     12K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmtlv.so
00007fe096bb3000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmtlv.so
00007fe096db2000      4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmtlv.so
00007fe096db3000     28K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libtlv.so
00007fe096dba000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libtlv.so
00007fe096fb9000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libtlv.so
00007fe096fba000     84K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_transport_generic.so
00007fe096fcf000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_transport_generic.so
00007fe0971ce000     12K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblpts_transport_generic.so
00007fe0971d1000      4K rw--- [ anon ]
00007fe0971d2000     32K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libpa_client_generic.so
00007fe0971da000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libpa_client_generic.so
00007fe0973d9000      8K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libpa_client_generic.so
00007fe0973db000      8K rw--- [ anon ]
00007fe0973dd000      4K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librcmd_xform.so
00007fe0973de000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librcmd_xform.so
```

```
00007fe0975de000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librcmd_xform.so
00007fe0975df000     16K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_sync.so
00007fe0975e3000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_sync.so
00007fe0977e3000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_sync.so
00007fe0977e4000      4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/lib_ether_nodeid.so
00007fe0977e5000    2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/lib_ether_nodeid.so
00007fe0979e4000      4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/lib_ether_nodeid.so
00007fe0979e5000     36K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libcbp.so
00007fe0979ee000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libcbp.so
00007fe097bee000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libcbp.so
00007fe097bef000     12K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libelib.so
00007fe097bf2000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libelib.so
00007fe097df1000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libelib.so
00007fe097df2000      8K r-x--
/opt/cisco/XR/packages/ncs-fwding.rp_lc-5.0.1/lib/libsse_fwplib.so
00007fe097df4000    2048K -----
/opt/cisco/XR/packages/ncs-fwding.rp_lc-5.0.1/lib/libsse_fwplib.so
00007fe097ff4000      4K rw---
/opt/cisco/XR/packages/ncs-fwding.rp_lc-5.0.1/lib/libsse_fwplib.so
00007fe097ff5000      4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_pfi_netio.so
00007fe097ff6000    2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_pfi_netio.so
00007fe0981f5000      4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_pfi_netio.so
00007fe0981f6000      8K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libpq_nodeid.so
00007fe0981f8000    2048K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libpq_nodeid.so
00007fe0983f8000      4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libpq_nodeid.so
00007fe0983f9000      4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libsock_media_platform.so
00007fe0983fa000    2048K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libsock_media_platform.so
00007fe0985fa000      4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libsock_media_platform.so
00007fe0985fb000     36K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsmq.so
```



```
00007fe098604000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsmq.so
00007fe098804000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsmq.so
00007fe098805000    104K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libenf.so
00007fe09881f000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libenf.so
00007fe098a1e000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libenf.so
00007fe098a1f000         4K rw--- [ anon ]
00007fe098a20000     60K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libmbp.so
00007fe098a2f000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libmbp.so
00007fe098c2e000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libmbp.so
00007fe098c2f000     32K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libshmalloc.so
00007fe098c37000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libshmalloc.so
00007fe098e36000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libshmalloc.so
00007fe098e37000         4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libinst_devicemgr_platform.so
00007fe098e38000    2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libinst_devicemgr_platform.so
00007fe099037000         4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libinst_devicemgr_platform.so
00007fe099038000     28K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_devicemgr.so
00007fe09903f000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_devicemgr.so
00007fe09923f000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_devicemgr.so
00007fe099240000         4K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/lib_shmwin_pl_vm.so
00007fe099241000    2044K -----
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/lib_shmwin_pl_vm.so
00007fe099440000         4K rw---
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/lib_shmwin_pl_vm.so
00007fe099441000         8K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpqmon.so
00007fe099443000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpqmon.so
00007fe099643000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpqmon.so
00007fe099644000         4K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/lib_pakman_pl_vm.so
00007fe099645000    2044K -----
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/lib_pakman_pl_vm.so
00007fe099844000         4K rw---
```

```
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/lib_pakman_pl_vm.so
00007fe099845000    104K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpacket_common.so
00007fe09985f000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpacket_common.so
00007fe099a5f000      8K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpacket_common.so
00007fe099a61000    520K r-x-- /lib64/libm-2.12.so
00007fe099ae3000    2044K ----- /lib64/libm-2.12.so
00007fe099ce2000      8K rw--- /lib64/libm-2.12.so
00007fe099ce4000    12K r-x--&nbsp;
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librsi_util.so
00007fe099ce7000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librsi_util.so
00007fe099ee6000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librsi_util.so
00007fe099ee7000      8K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librsi_dbg.so
00007fe099ee9000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librsi_dbg.so
00007fe09a0e8000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librsi_dbg.so
00007fe09a0e9000    28K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpcds.so
00007fe09a0f0000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpcds.so
00007fe09a2ef000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpcds.so
00007fe09a2f0000    16K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_shmem.so
00007fe09a2f4000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_shmem.so
00007fe09a4f3000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_shmem.so
00007fe09a4f4000      4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/lib_platform_infra_ltrace.so
00007fe09a4f5000    2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/lib_platform_infra_ltrace.so
00007fe09a6f4000      4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/lib_platform_infra_ltrace.so
00007fe09a6f5000    12K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbackend_parser.so
00007fe09a6f8000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbackend_parser.so
00007fe09a8f8000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbackend_parser.so
00007fe09a8f9000      4K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbackend_subdb.so
00007fe09a8fa000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbackend_subdb.so
00007fe09aaf9000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbackend_subdb.so
```

```
00007fe09aafa000      36K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbackend_sysdb.so
00007fe09ab03000     2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbackend_sysdb.so
00007fe09ad02000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbackend_sysdb.so
00007fe09ad03000         4K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libmemprofile.so
00007fe09ad04000     2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libmemprofile.so
00007fe09af03000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libmemprofile.so
00007fe09af04000         4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libalm_loc_debug.so
00007fe09af05000     2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libalm_loc_debug.so
00007fe09b105000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libalm_loc_debug.so
00007fe09b106000        12K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libfim.so
00007fe09b109000     2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libfim.so
00007fe09b309000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libfim.so
00007fe09b30a000        56K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libhdr_invmgr_capi.so
00007fe09b318000     2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libhdr_invmgr_capi.so
00007fe09b517000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libhdr_invmgr_capi.so
00007fe09b518000         4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libshelfmgrpi.so
00007fe09b519000     2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libshelfmgrpi.so
00007fe09b718000         4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libshelfmgrpi.so
00007fe09b719000         8K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libdscapi.so
00007fe09b71b000     2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libdscapi.so
00007fe09b91a000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libdscapi.so
00007fe09b91b000         4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libmbi_access.so
00007fe09b91c000     2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libmbi_access.so
00007fe09bb1b000         4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libmbi_access.so
00007fe09bb1c000        40K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbaggeneric.so
00007fe09bb26000     2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbaggeneric.so
```

```
00007fe09bd25000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbaggeneric.so
00007fe09bd26000      32K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libttynmspc.so
00007fe09bd2e000     2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libttynmspc.so
00007fe09bf2e000       4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libttynmspc.so
00007fe09bf2f000      24K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libttytrace.so
00007fe09bf35000     2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libttytrace.so
00007fe09c135000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libttytrace.so
00007fe09c136000      24K rw---   [ anon ]
00007fe09c13c000      12K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libtty_ptydb.so
00007fe09c13f000     2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libtty_ptydb.so
00007fe09c33e000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libtty_ptydb.so
00007fe09c33f000     100K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpackage.so
00007fe09c358000     2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpackage.so
00007fe09c557000      12K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpackage.so
00007fe09c55a000     148K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libapi.so
00007fe09c57f000     2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libapi.so
00007fe09c77e000      12K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libapi.so
00007fe09c781000      44K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_io.so
00007fe09c78c000     2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_io.so
00007fe09c98c000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinst_io.so
00007fe09c98d000      28K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsamclient.so
00007fe09c994000     2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsamclient.so
00007fe09cb94000       4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsamclient.so
00007fe09cb95000       4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libinstbootinfo.so
00007fe09cb96000     2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libinstbootinfo.so
00007fe09cd95000       4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libinstbootinfo.so
00007fe09cd96000      20K r-x--
```

```
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libpkg_platform.so
00007fe09cd9b000    2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libpkg_platform.so
00007fe09cf9a000         4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libpkg_platform.so
00007fe09cf9b000        32K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libnetio_dll_support.so
00007fe09cfa3000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libnetio_dll_support.so
00007fe09d1a2000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libnetio_dll_support.so
00007fe09d1a3000        80K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libaib_client.so
00007fe09d1b7000    2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libaib_client.so
00007fe09d3b7000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libaib_client.so
00007fe09d3b8000        52K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpacket_netio.so
00007fe09d3c5000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpacket_netio.so
00007fe09d5c5000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpacket_netio.so
00007fe09d5c6000        12K r-x--
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/libnpu_driver_board_hal.so
00007fe09d5c9000    2044K -----
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/libnpu_driver_board_hal.so
00007fe09d7c8000         4K rw---
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/libnpu_driver_board_hal.so
00007fe09d7c9000        60K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libcmp.so
00007fe09d7d8000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libcmp.so
00007fe09d9d8000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libcmp.so
00007fe09d9d9000        12K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform_boot.so
00007fe09d9dc000    2044K -----
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform_boot.so
00007fe09dbdb000         4K rw---
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform_boot.so
00007fe09dbdc000         8K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform_pd.so
00007fe09dbde000    2044K -----
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform_pd.so
00007fe09dddd000         4K rw---
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform_pd.so
00007fe09ddde000         4K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libbackplane.so
00007fe09ddf000    2044K -----
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libbackplane.so
00007fe09dfde000         4K rw---
```

```
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libbackplane.so
00007fe09dfdf000      8K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libpanini_device_info.so
00007fe09dfe1000    2048K -----
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libpanini_device_info.so
00007fe09e1e1000      4K rw---
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libpanini_device_info.so
00007fe09e1e2000     12K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libital_shm.so
00007fe09e1e5000    2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libital_shm.so
00007fe09e3e5000      4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libital_shm.so
00007fe09e3e6000     92K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libens.so
00007fe09e3fd000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libens.so
00007fe09e5fc000      8K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libens.so
00007fe09e5fe000      4K rw--- [ anon ]
00007fe09e5ff000     40K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libnrs.so
00007fe09e609000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libnrs.so
00007fe09e808000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libnrs.so
00007fe09e809000     12K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libcisco_ipv6_lib.so
00007fe09e80c000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libcisco_ipv6_lib.so
00007fe09ea0b000      4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libcisco_ipv6_lib.so
00007fe09ea0c000     12K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_transport.so
00007fe09ea0f000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_transport.so
00007fe09ec0e000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_transport.so
00007fe09ec0f000      4K rw--- [ anon ]
00007fe09ec10000      8K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_addr.so
00007fe09ec12000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_addr.so
00007fe09ee12000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_addr.so
00007fe09ee13000     24K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libpfi_ifh.so
00007fe09ee19000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libpfi_ifh.so
00007fe09f018000      4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libpfi_ifh.so
00007fe09f019000      8K r-x--
```

```
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmifmapcons.so
00007fe09f01b000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmifmapcons.so
00007fe09f21a000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmifmapcons.so
00007fe09f21b000         4K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_addr.so
00007fe09f21c000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_addr.so
00007fe09f41b000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4_addr.so
00007fe09f41c000         8K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmaddr.so
00007fe09f41e000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmaddr.so
00007fe09f61d000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmaddr.so
00007fe09f61e000        24K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmconsumer.so
00007fe09f624000    2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmconsumer.so
00007fe09f824000         4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libiparmconsumer.so
00007fe09f825000         8K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_tlvlib.so
00007fe09f827000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_tlvlib.so
00007fe09fa26000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_tlvlib.so
00007fe09fa27000         8K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libport_un.so
00007fe09fa29000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libport_un.so
00007fe09fc28000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libport_un.so
00007fe09fc29000         8K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_icmp_client_v2.so
00007fe09fc2b000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_icmp_client_v2.so
00007fe09fe2a000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libip_icmp_client_v2.so
00007fe09fe2b000         4K rw---    [ anon ]
00007fe09fe2c000        72K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libipv4_rib_lite.so
00007fe09fe3e000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libipv4_rib_lite.so
00007fe0a003d000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libipv4_rib_lite.so
00007fe0a003e000         4K rw---    [ anon ]
00007fe0a003f000        44K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_show.so
00007fe0a004a000    2044K -----
```

```
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_show.so
00007fe0a0249000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace_show.so
00007fe0a024a000     16K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libpfi_util.so
00007fe0a024e000   2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libpfi_util.so
00007fe0a044d000      4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libpfi_util.so
00007fe0a044e000     68K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libgsputils.so
00007fe0a045f000   2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libgsputils.so
00007fe0a065e000      8K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libgsputils.so
00007fe0a0660000     12K rw---   [ anon ]
00007fe0a0663000    144K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libgroup.so
00007fe0a0687000   2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libgroup.so
00007fe0a0887000      8K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libgroup.so
00007fe0a0889000      8K rw---   [ anon ]
00007fe0a088b000    92K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libimattrowner.so
00007fe0a08a2000   2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libimattrowner.so
00007fe0a0aa1000      8K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libimattrowner.so
00007fe0a0aa3000     12K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_pfi.so
00007fe0a0aa6000   2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_pfi.so
00007fe0a0ca5000      4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libplatform_pfi.so
00007fe0a0ca6000     20K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libnetio_client.so
00007fe0a0cab000   2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libnetio_client.so
00007fe0a0eab000      4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libnetio_client.so
00007fe0a0eac000      8K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libsysmrv.so
00007fe0a0eae000   2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libsysmrv.so
00007fe0a10ad000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libsysmrv.so
00007fe0a10ae000    196K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libim_util.so
00007fe0a10df000   2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libim_util.so
00007fe0a12de000     12K rw---
```



```
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libim_util.so
00007fe0a12e1000      56K rw---   [ anon ]
00007fe0a12ef000      20K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcerr_dll_tbl.so
00007fe0a12f4000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcerr_dll_tbl.so
00007fe0a14f3000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcerr_dll_tbl.so
00007fe0a14f4000       4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcipc_endpoint_proto.so
00007fe0a14f5000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcipc_endpoint_proto.so
00007fe0a16f4000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcipc_endpoint_proto.so
00007fe0a16f5000     32K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_ds_proto.so
00007fe0a16fd000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_ds_proto.so
00007fe0a18fc000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_ds_proto.so
00007fe0a18fd000     60K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_ds_capi.so
00007fe0a190c000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_ds_capi.so
00007fe0a1b0b000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_ds_capi.so
00007fe0a1b0c000     16K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcapi_cipc_proto.so
00007fe0a1b10000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcapi_cipc_proto.so
00007fe0a1d0f000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcapi_cipc_proto.so
00007fe0a1d10000       8K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcapi_impl.so
00007fe0a1d12000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcapi_impl.so
00007fe0a1f11000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcapi_impl.so
00007fe0a1f12000    124K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcdr_nm_proto.so.0.0.1
00007fe0a1f31000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcdr_nm_proto.so.0.0.1
00007fe0a2130000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcdr_nm_proto.so.0.0.1
00007fe0a2131000    112K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcdr_nm_capi.so.0.0.1
00007fe0a214d000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcdr_nm_capi.so.0.0.1
00007fe0a234d000       4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcdr_nm_capi.so.0.0.1
00007fe0a234e000     44K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libctrace.so
```

```
00007fe0a2359000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libctrace.so
00007fe0a2559000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libctrace.so
00007fe0a255a000         8K r-x--
/usr/lib64/libevent_pthreads-2.0.so.5.0.1
00007fe0a255c000    2044K -----
/usr/lib64/libevent_pthreads-2.0.so.5.0.1
00007fe0a275b000         4K rw---
/usr/lib64/libevent_pthreads-2.0.so.5.0.1
00007fe0a275c000    256K r-x--
/usr/lib64/libevent-2.0.so.5.0.1
00007fe0a279c000    2048K -----
/usr/lib64/libevent-2.0.so.5.0.1
00007fe0a299c000         8K rw---
/usr/lib64/libevent-2.0.so.5.0.1
00007fe0a299e000        68K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_infra.so
00007fe0a29af000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_infra.so
00007fe0a2bae000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_infra.so
00007fe0a2baf000    316K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libaipc.so
00007fe0a2bfe000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libaipc.so
00007fe0a2dfe000         8K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libaipc.so
00007fe0a2e00000        16K rw---    [ anon ]
00007fe0a2e04000        40K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libship.so
00007fe0a2e0e000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libship.so
00007fe0a300d000         8K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libship.so
00007fe0a300f000         8K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpkgfs_query.so
00007fe0a3011000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpkgfs_query.so
00007fe0a3210000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpkgfs_query.so
00007fe0a3211000         4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libmediaerr.so
00007fe0a3212000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libmediaerr.so
00007fe0a3411000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libmediaerr.so
00007fe0a3412000        56K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libdcl.so
00007fe0a3420000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libdcl.so
00007fe0a3620000         4K rw---
```

```
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libdcl.so
00007fe0a3621000    272K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcdm.so
00007fe0a3665000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcdm.so
00007fe0a3865000      8K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcdm.so
00007fe0a3867000     32K rw--- [ anon ]
00007fe0a386f000     44K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libss_common.so
00007fe0a387a000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libss_common.so
00007fe0a3a7a000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libss_common.so
00007fe0a3a7b000     12K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcsemlock.so
00007fe0a3a7e000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcsemlock.so
00007fe0a3c7d000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcsemlock.so
00007fe0a3c7e000      4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libdumper_snapshot.so
00007fe0a3c7f000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libdumper_snapshot.so
00007fe0a3e7e000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libdumper_snapshot.so
00007fe0a3e7f000      8K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcompress.so
00007fe0a3e81000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcompress.so
00007fe0a4081000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcompress.so
00007fe0a4082000     84K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdbutils.so
00007fe0a4097000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdbutils.so
00007fe0a4297000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdbutils.so
00007fe0a4298000      4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/lib_procfs_util.so
00007fe0a4299000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/lib_procfs_util.so
00007fe0a4498000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/lib_procfs_util.so
00007fe0a4499000     76K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libdebug.so
00007fe0a44ac000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libdebug.so
00007fe0a46ab000      8K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libdebug.so
00007fe0a46ad000    100K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libshmwin.so
```

```

00007fe0a46c6000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libshmwin.so
00007fe0a48c5000         8K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libshmwin.so
00007fe0a48c7000         8K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsocket_util.so
00007fe0a48c9000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsocket_util.so
00007fe0a4ac8000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsocket_util.so
00007fe0a4ac9000        16K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libxipc.so
00007fe0a4acd000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libxipc.so
00007fe0a4ccc000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libxipc.so
00007fe0a4ccd000        76K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpacket.so
00007fe0a4ce0000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpacket.so
00007fe0a4edf000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libpacket.so
00007fe0a4ee0000       408K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosysrt.so
00007fe0a4f46000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosysrt.so
00007fe0a5146000         4K r----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosysrt.so
00007fe0a5147000         8K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosysrt.so
00007fe0a5149000       220K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosysrtxml.so
00007fe0a5180000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosysrtxml.so
00007fe0a537f000         4K r----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosysrtxml.so
00007fe0a5380000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosysrtxml.so
00007fe0a5381000       36K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librpc.so
00007fe0a538a000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librpc.so
00007fe0a558a000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librpc.so
00007fe0a558b000       96K r-x--  /lib64/libpthread-2.12.so
00007fe0a55a3000    2044K -----  /lib64/libpthread-2.12.so
00007fe0a57a2000         4K r----  /lib64/libpthread-2.12.so
00007fe0a57a3000         4K rw---  /lib64/libpthread-2.12.so
00007fe0a57a4000       16K rw---  [ anon ]
00007fe0a57a8000    1444K r-x--  /lib64/libc-2.12.so
00007fe0a5911000    2048K -----  /lib64/libc-2.12.so
00007fe0a5b11000       12K r----  /lib64/libc-2.12.so

```

```
00007fe0a5b14000      8K rw--- /lib64/libc-2.12.so
00007fe0a5b16000     20K rw--- [ anon ]
00007fe0a5b1b000     52K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosag.so
00007fe0a5b28000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosag.so
00007fe0a5d27000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libosag.so
00007fe0a5d28000     20K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libsyslog.so
00007fe0a5d2d000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libsyslog.so
00007fe0a5f2c000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libsyslog.so
00007fe0a5f2d000     84K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librsi.so
00007fe0a5f42000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librsi.so
00007fe0a6141000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librsi.so
00007fe0a6142000     48K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librmf.so
00007fe0a614e000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librmf.so
00007fe0a634e000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/librmf.so
00007fe0a634f000     64K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace.so
00007fe0a635f000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace.so
00007fe0a655f000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libltrace.so
00007fe0a6560000      8K r-x-- /lib64/libdl-2.12.so
00007fe0a6562000    2048K ----- /lib64/libdl-2.12.so
00007fe0a6762000      8K rw--- /lib64/libdl-2.12.so
00007fe0a6764000     32K r-x-- /lib64/librt-2.12.so
00007fe0a676c000    2044K ----- /lib64/librt-2.12.so
00007fe0a696b000      8K rw--- /lib64/librt-2.12.so
00007fe0a696d000     24K r-x--
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/lib/libsyslog_rw.so
00007fe0a6973000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/lib/libsyslog_rw.so
00007fe0a6b72000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp-5.0.1/lib/libsyslog_rw.so
00007fe0a6b73000     12K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libslld.so
00007fe0a6b76000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libslld.so
00007fe0a6d75000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libslld.so
00007fe0a6d76000      4K rw--- [ anon ]
00007fe0a6d77000     20K r-x--
```

```
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdbbackend.so
00007fe0a6d7c000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdbbackend.so
00007fe0a6f7b000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdbbackend.so
00007fe0a6f7c000        40K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbag.so
00007fe0a6f86000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbag.so
00007fe0a7186000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbag.so
00007fe0a7187000         8K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/lib_alarm_logger_locnotify.so
00007fe0a7189000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/lib_alarm_logger_locnotify.so
00007fe0a7388000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/lib_alarm_logger_locnotify.so
00007fe0a7389000        12K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libalm_loc_infra.so
00007fe0a738c000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libalm_loc_infra.so
00007fe0a758b000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libalm_loc_infra.so
00007fe0a758c000        44K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblrddlib.so
00007fe0a7597000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblrddlib.so
00007fe0a7796000         4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/liblrddlib.so
00007fe0a7797000        16K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libttyutil.so
00007fe0a779b000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libttyutil.so
00007fe0a799a000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libttyutil.so
00007fe0a799b000       128K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysmgr.so
00007fe0a79bb000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysmgr.so
00007fe0a7bba000         8K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysmgr.so
00007fe0a7bbc000        40K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libovl.so
00007fe0a7bc6000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libovl.so
00007fe0a7dc6000         4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libovl.so
00007fe0a7dc7000        72K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libnodeid.so
00007fe0a7dd9000    2044K -----
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libnodeid.so
00007fe0a7fd8000        16K rw---
```

```
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libnodeid.so
00007fe0a7fdc000      8K r-x--
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/libplatform_netio.so
00007fe0a7fde000    2048K -----
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/libplatform_netio.so
00007fe0a81de000      4K rw---
/opt/cisco/XR/packages/iosxr-sse.rp_lc-5.0.1/lib/libplatform_netio.so
00007fe0a81df000      4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_to_be_deprecated.so
00007fe0a81e0000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_to_be_deprecated.so
00007fe0a83df000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_to_be_deprecated.so
00007fe0a83e0000      4K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libc12000_cardtype.so
00007fe0a83e1000    2044K -----
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libc12000_cardtype.so
00007fe0a85e0000      4K rw---
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libc12000_cardtype.so
00007fe0a85e1000      4K r-x--
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libc12000_chassis.so
00007fe0a85e2000    2044K -----
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libc12000_chassis.so
00007fe0a87e1000      4K rw---
/opt/cisco/XR/packages/ncs-base.rp_lc-5.0.1/lib/libc12000_chassis.so
00007fe0a87e2000      4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libc12000_bflc_io_reset.so
00007fe0a87e3000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libc12000_bflc_io_reset.so
00007fe0a89e2000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libc12000_bflc_io_reset.so
00007fe0a89e3000      4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_lc_mem.so
00007fe0a89e4000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_lc_mem.so
00007fe0a8be3000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_lc_mem.so
00007fe0a8be4000      4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_rp_rate_limit.so
00007fe0a8be5000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_rp_rate_limit.so
00007fe0a8de4000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_rp_rate_limit.so
00007fe0a8de5000      4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_mbus_fru.so
00007fe0a8de6000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_mbus_fru.so
00007fe0a8fe5000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_mbus_fru.so
00007fe0a8fe6000      4K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform_diagstrings.so
00007fe0a8fe7000    2044K -----
```

```
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform_diagstrings.so
00007fe0a91e6000      4K rw---
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform_diagstrings.so
00007fe0a91e7000      4K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_plimq.so
00007fe0a91e8000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_plimq.so
00007fe0a93e7000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libplatform_plimq.so
00007fe0a93e8000     44K r-x--
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform.so
00007fe0a93f3000    2044K -----
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform.so
00007fe0a95f2000      4K rw---
/opt/cisco/XR/packages/ncs-os-support.rp_lc-5.0.1/lib/libplatform.so
00007fe0a95f3000      8K rw---   [ anon ]
00007fe0a95f5000    168K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipaddr_cons.so
00007fe0a961f000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipaddr_cons.so
00007fe0a981e000     24K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipaddr_cons.so
00007fe0a9824000      4K rw---   [ anon ]
00007fe0a9825000     44K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4.so
00007fe0a9830000    2048K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4.so
00007fe0a9a30000      4K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libipv4.so
00007fe0a9a31000      4K rw---   [ anon ]
00007fe0a9a32000    148K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_ios.so.0.0.1
00007fe0a9a57000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_ios.so.0.0.1
00007fe0a9c56000      8K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcalvados_ios.so.0.0.1
00007fe0a9c58000    176K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libios.so
00007fe0a9c84000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libios.so
00007fe0a9e84000      8K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libios.so
00007fe0a9e86000      4K rw---   [ anon ]
00007fe0a9e87000    444K r-x--
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libifmgr.so
00007fe0a9ef6000    2044K -----
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libifmgr.so
00007fe0aa0f5000     20K rw---
/opt/cisco/XR/packages/iosxr-fwding.rp_lc-5.0.1/lib/libifmgr.so
00007fe0aa0fa000     16K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcerrno.so
00007fe0aa0fe000    2048K -----
```



```
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcerrno.so
00007fe0aa2fe000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libcerrno.so
00007fe0aa2ff000     592K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
00007fe0aa393000    2044K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
00007fe0aa592000     16K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libinfra.so
00007fe0aa596000     52K rw--- [ anon ]
00007fe0aa5a3000     16K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdbhelper.so
00007fe0aa5a7000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdbhelper.so
00007fe0aa7a6000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdbhelper.so
00007fe0aa7a7000    364K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdb.so
00007fe0aa802000    2044K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdb.so
00007fe0aaa01000      8K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsysdb.so
00007fe0aaa03000      4K rw--- [ anon ]
00007fe0aaa04000    160K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsocket.so
00007fe0aaa2c000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsocket.so
00007fe0aac2c000      8K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libsocket.so
00007fe0aac2e000      4K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbsd_general.so
00007fe0aac2f000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbsd_general.so
00007fe0aae2f000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbsd_general.so
00007fe0aae30000      8K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbsd_addr_presentation.so
00007fe0aae32000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbsd_addr_presentation.so
00007fe0ab032000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbsd_addr_presentation.so
00007fe0ab033000    44K r-x--
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbsd_name_mapping.so
00007fe0ab03e000    2048K -----
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbsd_name_mapping.so
00007fe0ab23e000      4K rw---
/opt/cisco/XR/packages/iosxr-infra.rp_lc-5.0.1/lib/libbsd_name_mapping.so
00007fe0ab23f000    24K rw--- [ anon ]
00007fe0ab245000    20K r-x--
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libmalloc_stat.so.0.0.1
00007fe0ab24a000    2048K -----
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libmalloc_stat.so.0.0.1
```

```

00007fe0ab44a000      4K rw---
/opt/cisco/XR/packages/iosxr-os.rp_lc-5.0.1/lib/libmalloc_stat.so.0.0.1
00007fe0ab44b000      32K rw--- [ anon ]
00007fe0ab453000     128K r-x-- /lib64/ld-2.12.so
00007fe0ab473000      4K rw-s- /dev/shm/tmp/syslogd_syslogd
00007fe0ab474000      12K rw-s- /dev/shmem/ltrace/install/inv_error
00007fe0ab477000      12K rw-s- /dev/shmem/ltrace/install/inv
00007fe0ab47a000      16K rw-s- /dev/shmem/ltrace/install/inst_io
00007fe0ab47e000      12K rw-s- /dev/shmem/ltrace/install/pkg
00007fe0ab481000      12K rw-s- /dev/shmem/ltrace/install/ifc
00007fe0ab484000      36K rw-s- /dev/shmem/ltrace/install/instdir_loadpath_error
00007fe0ab48d000      12K rw-s- /dev/shmem/ltrace/install/instdir_loadpath
00007fe0ab490000      12K rw-s- /dev/shmem/ltrace/aqsmllib/190/errors
00007fe0ab493000      12K rw-s- /dev/shmem/ltrace/aqsmllib/190/debug
00007fe0ab496000      12K rw-s- /dev/shmem/ltrace/aqsmllib/190/api
00007fe0ab499000      4K rw-s- /dev/shm/dev/shmem/tty_db_pty_map
00007fe0ab49a000      4K rw-s- /dev/shm/dev/shmem/ship_data_0
00007fe0ab49b000      32K rw-s- /dev/shmem/ltrace/cdm/190/heap_b1_o846
00007fe0ab4a3000      4K r--s- /dev/shm/dev/shmem/sysmgr_shmem
00007fe0ab4a4000      12K rw-s- /dev/shmem/ltrace/cdm/190/repl
00007fe0ab4a7000      12K rw-s- /dev/shmem/ltrace/cdm/190/heap
00007fe0ab4aa000      12K rw-s- /dev/shmem/ltrace/cdm/190/errors
00007fe0ab4ad000      12K rw-s- /dev/shmem/ltrace/cdm/190/api
00007fe0ab4b0000      4K ----- [ anon ]
00007fe0ab4b1000     512K rw--- [ anon ]
00007fe0ab531000      4K ----- [ anon ]
00007fe0ab532000     512K rw--- [ anon ]
00007fe0ab5b2000      12K rw-s- /dev/shmem/ltrace/lwmlib/1_syslogd/err
00007fe0ab5b5000      12K rw-s- /dev/shmem/ltrace/lwmlib/1_syslogd/dbg
00007fe0ab5b8000      12K rw-s- /dev/shmem/ltrace/lwmlib/1_syslogd/api
00007fe0ab5bb000      52K rw-s- /dev/shmem/ltrace/install/inst_devicemgr_error
00007fe0ab5c8000      16K rw-s- /dev/shmem/ltrace/install/inst_devicemgr
00007fe0ab5cc000      12K rw-s- /dev/shmem/ltrace/install/pkg
00007fe0ab5cf000      52K rw-s- /dev/shmem/ltrace/install/inst_io_error
00007fe0ab5dc000      16K rw-s- /dev/shmem/ltrace/install/inst_io
00007fe0ab5e0000      96K rw-s- /dev/shmem/ltrace/install/pkgfs_error
00007fe0ab5f8000      16K rw-s- /dev/shmem/ltrace/install/pkgfs
00007fe0ab5fc000      36K rw-s- /dev/shmem/ltrace/install/inst_mem_error
00007fe0ab605000      12K rw-s- /dev/shmem/ltrace/install/inst_mem
00007fe0ab608000      4K rw-s- /dev/shm/shm_mutex_monitors
00007fe0ab609000      4K rw-s- /dev/shm/cdm_db_dir
00007fe0ab60a000      4K rw-s- /dev/shmem/ltrace/ltrace_global_ctrl
00007fe0ab60b000     412K rw--- [ anon ]
00007fe0ab672000      4K r---- /lib64/ld-2.12.so
00007fe0ab673000      4K rw--- /lib64/ld-2.12.so
00007fe0ab674000      4K rw--- [ anon ]
00007fff6409b000     132K rw--- [ stack ]
00007fff640db000      4K r-x-- [ anon ]
ffffffffffff600000      4K r-x-- [ anon ]
total                2700196K

```

node: node0_RP1_CPU0

No context

RP/0/RP0/CPU0:NCS6008-SJ#

RP/0/RP0/CPU0:NCS6008-SJ#**dir harddisk:**

Wed Feb 19 12:31:10.577 UTC

Directory of /harddisk:/

```
15 -rwx----- 1      42499 Feb  7  2011 running_backup
24 -rwxr--r-- 1   5181440 Feb  7 15:33 ncs6k-mpis.pkg-5.0.1
28 -rw-r--r-- 1    8231199 Feb 19 12:25
syslogd_2117.by.11.20140219-122529.xr-vm_node0_RP0_CPU0.ddc58.core.gz
21 -rwxr--r-- 1    7874560 Feb  7 14:57 ncs6k-mcast.pkg-5.0.1
16 -rwxr--r-- 1   19387904 Feb  7  2011 NCS6000-iosxr-k9-5.0.0.tar
784897 drwxr-xr-x 2        4096 Jan  5  1970 shutdown
13 -rw-r--r-- 1   10193834 Feb  1  2011
devc-conaux-con_2114.by.11.20110201-123522.xr-vm_node0_RP0_CPU0.8a616.core.gz
22 -rwxr--r-- 1    1515520 Feb  7 14:57 ncs6k-mgbl.pkg-5.0.1
12 -rw-r--r-- 1   49755237 Feb  1  2011
fia_driver_2157.by.6.20110201-062609.xr-vm_node0_0_CPU0.4b965.core.gz
27 -rwx----- 1        3947 Feb 12 13:14 running_config_upgrade_test.txt
2223873 drwxr-xr-x 2        4096 Jan  5  1970 nvram
26 -rwxr--r-- 1   621035520 Feb 10 21:15 ncs6k-usb-boot-5.0.1.zip
25 -rwxr--r-- 1    327680 Feb 10 18:55
ncs6k-sysadmin-5.0.0.CSCul30161-0.0.11.d.smu
18 -rwx----- 1        2079 Feb 17  2011 running-config
19 -rwxr--r-- 1   1720320 Feb  7 14:55 ncs6k-doc.pkg-5.0.1
14 -rwxr--r-- 1   643317760 Feb  4  2011 ncs6k-mini-x.iso
20 -rwxr--r-- 1   3471360 Feb  7 14:56 ncs6k-k9sec.pkg-5.0.1
17 -rwxr--r-- 1   1341440 Feb  7  2011
panini-admin-5.0.90.CSCui84753-0.0.10.d.smu
23 -rwxr--r-- 1   815474688 Feb  7 15:31 ncs6k-mini-x.iso-5.0.1
11 drwx----- 2    16384 Jan  5  1970 lost+found
```

RP/0/RP0/CPU0:NCS6008-SJ#**dir disk0:/core**

Wed Feb 19 12:32:15.252 UTC

Directory of /disk0:/core

```
16 -rw-r--r-- 1   87359 Feb 19 12:25
syslogd_2117.by.11.20140219-122529.xr-vm_node0_RP0_CPU0.ddc58.core.txt
19 drwxr-xr-x 2    4096 Feb 19 12:25 .1
```

show dll

Référez-vous à la section de [show dll de la référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS](#), libérez le pour en savoir plus 5.0.x.

Résumé : Il y a des modifications d'options et des modifications de sortie.

Détails : Seulement le mot clé **PID** supported. Le mot clé d'emplacement est retiré.

Importance : Mineur

```
RP/0/RP0/CPU0:NCS6008-A#show dll ?  
pid  Pid of the process
```

```
RP/0/RP0/CPU0:NCS6008-A#show dll pid ?  
<0-4294967295>  <pid> of the process
```

```
RP/0/RP1/CPU0:CRS-H#show dll ?  
address  Display the dllname for a particular address.  
dllname  Display the pid_info for a particular dllname (virt-path).  
jobid    job id  
location location to display  
memory   Display only a summary of memory usage.  
symbol   Static function symbols will NOT work  
virtual  Displays virtual path.  
|        Output Modifiers  
<cr>
```

matrice de show controller

Référez-vous à la section de [matrice de show controller de la référence de commandes de gestion de système pour le](#) pour en savoir plus de **Routeurs de gamme 6000 de Cisco NCS**.

Résumé : Les mots clé de **commande show** sont changés.

Détails : Le soutien du **paquet**, de la **Connectivité**, et des mots clé **récapitulatifs** est enlevé. Le soutien des mots clé de **fsdb-agrégateur** et de **fsdb-serveur** est ajouté. La majeure partie de la sortie est très semblable.

Toutes les commandes show excepté le mot clé de **suivi** sont dans la VM de SysAdmin.

Importance : Mineur

```
RP/0/RP0/CPU0:NCS6008-A#show controller fabric ?  
trace  trace information
```

```
sysadmin-vm:0_RP0# show controller fabric ?  
Possible completions:  
fgid  FGID management information  
fsdb-aggregator  FSDB Aggregator informaiton  
fsdb-pla  Plane availability status option  
fsdb-server  FSDB Server information  
health  Fabric Health  
link  Fabric link option  
plane  plane info  
sfe  Switch Fabric Element option  
standby  Plane info in standby  
|  Output modifiers <cr>
```

```
RP/0/RP1/CPU0:CRS-H#show controller fabric ?
```

```

barriers          Barriers(cisco-support)
block             Block Information(cisco-support)
debug            show debug utilities(cisco-support)
eio              Show eio commands for the Fabricq ASIC(cisco-support)
fabric-backpressure Fabric Backpressure details
health           Health(cisco-support)
imdr             IMDR (ISSU) upgrade info
link-info        Link Information(cisco-support)
queues           Queues Information(cisco-support)
statistics       Packet Statistics
summary          Summary(cisco-support)

```

```
RP/0/RP1/CPU0:CRS-H#admin
```

```
Mon Mar 31 17:36:58.363 EDT
```

```
RP/0/RP1/CPU0:CRS-H(admin)#show controller fabric ?
```

```

bundle           Fabric bundle option
connectivity     Connectivity to fabric option
deferral-info    deferral information
fgid             FGID management information
fsdb-pla         plane availability status option
link             Fabric link option
plane           Fabric plane option
pod             Fabric pod option
rack            Rack status option
sfe             Switch Fabric Element option
trace           Fabric trace option(cisco-support)
tuning          Dynamic link tuning option
warm-reload     Show fabric warm-reload data(cisco-support)

```

show environment

Référez-vous à la section de [show environment de la référence de commandes de gestion de système pour le](#) pour en savoir plus de **Routeurs de gamme 6000 de Cisco NCS**.

Résumé : Il y a les modifications sorties et le mot clé de commande change.

Détails : Le soutien des mots clé **DEL** et de **table** sont enlevés. Le support Franco Camion le mot clé **en cours** est ajouté. La sortie est de manière esthétique différente. La sortie inclut par informations de part.

Importance : Mineur

```
sysadmin-vm:0_RP0# show environment ?
```

```
Description: environment data
```

```
Possible completions:
```

```

all             All environment monitor parameters
current        Current information
fan            Chassis Fans information
power          Power supply voltage and current information
temperatures   Temperature information
trace          Debug trace information
voltages       Voltage information

```

```
|          Output modifiers
<cr>
```

```
RP/0/RP1/CPU0:CRS-H(admin)#show env ?
```

```
all          All environmental monitor parameters
fans         Fans information
last         Last readings of environmental parameters
leds         LEDS on cards
location     Location of a node
power-supply Power supply voltage and current information
table        Environmental parameter ranges
temperatures Temperature information
trace        Show trace data for environment monitoring
voltages     Voltage information
|           Output Modifiers
<cr>
```

show filesystem

Référez-vous à la section de [show filesystem de la référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS](#), libérez le pour en savoir plus 5.0.x.

Résumé : Il y a des modifications d'options avec la sortie CLI.

Détails : Le `show filesystem disk0` : la commande ne fonctionne pas plus long. La commande n'est pas fournie par la VM de SysAdmin. La commande affiche les mêmes informations du mode d'admin et l'exécutif sur des CRS mais pas sur le NCS 6008.

Importance : Mineur

```
RP/0/RP0/CPU0:NCS6008-A#show filesystem
```

```
Tue Feb 10 22:09:42.941 UTC
```

```
File Systems:
```

Size(b)	Free(b)	Type	Flags	Prefixes
0	0	network	rw	tftp:
39380996096	39196561408	harddisk	rw	harddisk:
1031311360	1012842496	flash-disk	rw	disk0:

```
RP/0/RP0/CPU0:NCS6008-A#show filesystem loc all
```

```
Tue Feb 10 22:10:20.285 UTC
```

```
node: node0_4_CPU0
```

```
-----
File Systems:
```

Size(b)	Free(b)	Type	Flags	Prefixes
1031311360	981569536	flash-disk	rw	disk0:

```
node: node0_RP0_CPU0
-----
```

File Systems:

Size(b)	Free(b)	Type	Flags	Prefixes
0	0	network	rw	tftp:
39380996096	39196561408	harddisk	rw	harddisk:
1031311360	1012838400	flash-disk	rw	disk0:

RP/0/RP0/CPU0:NCS6008-A#**show filesystem ?**

location specify the location

sysadmin-vm:0_RP0# **show filesystem**

-----^

syntax error: element does not exist

RP/0/RP0/CPU0:CRS-J#**show filesystem**

Mon Nov 25 16:11:36.810 UTC

File Systems:

Size(b)	Free(b)	Type	Flags	Prefixes
-	-	network	rw	qsm/dev/fs/tftp:
-	-	network	rw	qsm/dev/fs/rcp:
-	-	network	rw	qsm/dev/fs/ftp:
11492376576	10348458496	dumper-lnk	rw	qsm/dumper_disk0:
1312817152	1056006144	dumper-lnk	rw	qsm/dumper_disk0a:
16568549376	15307819008	dumper-lnk	rw	qsm/dumper_harddisk:
3051651072	3049283584	dumper-lnk	rw	qsm/dumper_nvmem:
1017208832	1016152064	dumper-lnk	rw	qsm/dumper_nvmem2:
16392388608	16388352512	dumper-lnk	rw	qsm/dumper_harddiska:
1125122048	1124809216	dumper-lnk	rw	qsm/dumper_disk1a:
11492376576	9500605440	dumper-lnk	rw	qsm/dumper_disk1:
11492376576	10348458496	flash-disk	rw	disk0:
11492376576	9500605440	flash-disk	rw	disk1:
16568549376	15307819008	harddisk	rw	harddisk:
16392388608	16388352512	harddisk	rw	harddiska:
1312817152	1056006144	flash-disk	rw	disk0a:
1125122048	1124809216	flash-disk	rw	disk1a:
1043456	998400	nvram	rw	nvram:
3051651072	3049283584		rw	nvmem:
1017208832	1016152064		rw	nvmem2:

RP/0/RP0/CPU0:CRS-J(admin)#**show filesystem**

Mon Nov 25 16:14:24.159 UTC

File Systems:

Size(b)	Free(b)	Type	Flags	Prefixes
-	-	network	rw	qsm/dev/fs/tftp:
-	-	network	rw	qsm/dev/fs/rcp:
-	-	network	rw	qsm/dev/fs/ftp:
11492376576	10348458496	dumper-lnk	rw	qsm/dumper_disk0:
1312817152	1056006144	dumper-lnk	rw	qsm/dumper_disk0a:
16568549376	15307819008	dumper-lnk	rw	qsm/dumper_harddisk:

```

3051651072 3049283584 dumper-lnk rw qsm/dumper_nvmem:
1017208832 1016152064 dumper-lnk rw qsm/dumper_nvmem2:
16392388608 16388352512 dumper-lnk rw qsm/dumper_harddiska:
1125122048 1124809216 dumper-lnk rw qsm/dumper_diskla:
11492376576 9500605440 dumper-lnk rw qsm/dumper_disk1:
11492376576 10348458496 flash-disk rw disk0:
11492376576 9500605440 flash-disk rw disk1:
16568549376 15307819008 harddisk rw harddisk:
16392388608 16388352512 harddisk rw harddiska:
1312817152 1056006144 flash-disk rw disk0a:
1125122048 1124809216 flash-disk rw diskla:
    1043456    998400    nvram rw nvram:
3051651072 3049283584 rw nvmem:
1017208832 1016152064 rw nvmem2:

```

RP/0/RP0/CPU0:CRS-J(admin)#**show filesystem ?**

```

bootflash: Show bootflash FFS3 file system information
configflash: Show configflash file system information
disk0: Show device information
disk1: Show device information
disk2: Show device information
harddisk: Show device information
lcdisk0: Show device information
lcdisk0a: Show device information
location specify the location

```

RP/0/RP0/CPU0:CRS-J(admin)#**show filesystem disk0:**

Mon Nov 25 16:15:10.110 UTC

```

Model: SMART iSATA
Serial Number: SMART iSATA 111110E984
Firmware: 20101203
BIOS Geometry: 16 Heads, 63 Sectors
Drive Geometry: 16 Heads, 16383 Tracks, 63 Sectors
Drive Capacity: 16514064 Cur Sctrs, 16514064 User Sctrs, Extd
Address Mode: LBA
PIO mode: 0
Multimode Blocks/Transfer: 32769

```

Capacity: 59071696 Sectors, Total 30244708352 Bytes, (512 Bytes/sector)

show install

Référez-vous à la section de [show install de la référence de commandes de gestion de système pour le](#) pour en savoir plus de **Routeurs de gamme 6000 de Cisco NCS**.

Résumé : Il y a des modifications d'option de mot clé avec les modifications de sortie.

Détails : Le soutien de la **préparation** et des mots clé de **référentiel** est ajouté. Le soutien du mot clé **récapitulatif** est enlevé.

Importance : Commandant


```
RP/0/RP0/CPU0:NCS6008-A#show install ?
```

```
active      Show active package(s) installed
inactive    Show inactive package(s) information
log         Show log file
package     Show information for package(s) in repository
prepare     Show prepared package(s) ready for activation
repository  Show SDR software repository
request     Show current request
which       Show information about an installed file
```

```
RP/0/RP1/CPU0:CRS-H#show install ?
```

```
active      Show the active package information
audit       Audit installed packages
auto-abort-timer Show auto-abort-timer value
boot-options Show boot options
committed   Show the committed package information
compression Show Install File Compression information(cisco-support)
events      Show key events from the install history
inactive    Show inactive package information
log         Show log file
package     Name of the package
pie-info    Show information in a PIE file
request     Show current request
rollback    Show package information for a rollback point
summary     Show summary information
superceded Show superceded packages
which       Show the origin of a named process, component or package
```

show inventory

Référez-vous à la section de [show inventory de la référence de commandes de gestion de système pour le](#) pour en savoir plus de **Routeurs de gamme 6000 de Cisco NCS**.

Résumé : Il y a les modifications sorties avec des modifications de mot clé.

Détails : Le soutien du mot clé de **suivi** est enlevé. La plupart de d'autres affichages et functionality sont identiques.

La commande de **show inventory** peut être exécutée de la VM XR ou de la VM de SysAdmin et affiche les sorties semblables dans les deux VMs. La sortie de **show inventory** dans la VM XR affiche les PID et les numéros de série pour des optique installées dans des linecards, alors que ces informations ne sont pas incluses une fois exécutées de la VM de SysAdmin.

Importance : Commandant

```
RP/0/RP0/CPU0:NCS6008-A#show inventory ?
```

```
WORD Partially qualified location specification
all Inventory information for all the physical entities
location Location of node for inventory
oid oid information
raw raw information
| Output Modifiers
```

<cr>

```
sysadmin-vm:0_RP0# show inventory ?
```

Possible completions:

all Get all FRU info

chassis Get chassis info

fan Get Fan info

location Select node location

power Get Power info

raw Get all entity info

| Output modifiers

<cr>

show media

Référez-vous à la section de [show media de la référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS](#), libérez le pour en savoir plus 5.0.x.

Résumé : Il y a des modifications de sortie CLI.

Détails : **Disk0** : n'est pas utilisé comme disquette de démarrage sur le NCS 6000. **Les rootfs** : la partition est la partition de boot pour le XR et des VMs de SysAdmin. La partition de boot est 3.9G pour la VM et 2.9G XR pour la VM de SysAdmin. **Les rootfs** : la partition pour chaque VM est découpée d'un lecteur semi-conducteur d'entraînement 32GB (disque transistorisé) sur le processeur d'artère. **Le disque dur** : la partition pour chaque VM est découpée d'un lecteur disque transistorisé 200GB sur le processeur d'artère.

Importance : Commandant

```
RP/0/RP0/CPU0:NCS6008-A#show media
```

Mon Mar 31 14:25:38.992 UTC

Media Information for local node.

```
-----  
Partition                Size      Used  Percent  Avail  
rootfs:                   3.9G     746M    20%     3.0G  
log:                      485M     25M     6%     436M  
config:                   485M     17M     4%     443M  
disk0:                    984M     18M     2%     916M  
harddisk:                 37G      1.7G    5%      34G  
-----
```

rootfs: = root file system (read-only)

log: = system log files (read-only)

config: = configuration storage (read-only)

```
RP/0/RP0/CPU0:NCS6008-A#show media loc 0/3/cpu0
```

Mon Mar 31 14:51:44.648 UTC

Media Information for node0_3_CPU0.

```

-----
Partition                Size      Used  Percent  Avail
rootfs:                  3.9G     745M    20%     3.0G
log:                     485M     21M     5%     439M
config:                  485M     17M     4%     444M
disk0:                   984M     52M     6%     883M
-----

```

```

rootfs: = root file system (read-only)
log: = system log files (read-only)
config: = configuration storage (read-only)

```

```

RP/0/RP0/CPU0:NCS6008-A#admin
Mon Mar 31 14:26:24.575 UTC

```

```

lab connected from 127.0.0.1 using console on xr-vm_node0_RP0_CPU0
sysadmin-vm:0_RP0# sh media
Mon Mar 31 14:26:31.960 UTC

```

```

-----
Partition                Size      Used  Percent  Avail
-----
rootfs:                  2.9G     485M    18%     2.3G
log:                     494M     63M    14%     406M
config:                  494M     24M     6%     445M
disk0:                   965M     18M     2%     899M
harddisk:                37G     956M     3%     34G
-----

```

```

rootfs: = root file system (read-only)
log: = system log files (read-only)
config: = configuration storage (read-only)

```

```

RP/0/RP0/CPU0:CRS-K#show media
Sun Mar 30 21:31:30.784 UTC

```

Media Information for 0/RP0/CPU0.

Mountpoint	Image FsType	Current FsType	Part Size	State	DrvrPid	Mirror	Flags
/disk0:	QNX4	QNX4	10.0G	Mounted	0036891	Enabled	
/disk0a:	QNX4	QNX4	1.1G	Mounted	0036891		
/harddiska:	QNX4	QNX4	14.2G	Mounted	0036891		
/disk1:	QNX4	QNX4	10.0G	Mounted	0036891		
/disk1a:	QNX4	QNX4	1.0G	Mounted	0036891		
/harddisk:	QNX4	QNX4	14.4G	Mounted	0036891		
/nvmmem:	FAT32	FAT32	2.8G	Mounted	0032789		
/nvmmem2:	FAT32	FAT32	0.9G	Mounted	0032789		
/disk2:	FAT32	(?)		Not Present			
/lcdisk0:	FAT32	(?)		Not Present			
/lcdisk0a:	FAT32	(?)					

Output Truncated to size 1023

[show memory](#)

Référez-vous à la section de [show memory de la référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS](#), libérez le pour en savoir plus 5.0.x.

Résumé : Il y a des modifications d'options avec la sortie CLI.

Détails : L'architecture de mémoire est sensiblement changée avec NCS 6008. En conséquence, il y a beaucoup de modifications à la sortie CLI de la commande de **show memory**. Les modifications d'option de commande CLI sont mineures.

Importance : Mineur

```
RP/0/RP0/CPU0:NCS6008-A#show memory ?
<0-4294967295>  pid
compare        Create and compare memory snapshots
heap           Show process heap.
location       location to display
summary        Display only a summary of memory usage.
```

```
RP/0/RP0/CPU0:NCS6008-A#show memory summ
```

```
Sat Jan 31 23:42:43.354 UTC
```

```
Physical Memory: 11838M total (8707M available)
Application Memory : 11838M (8707M available)
Image: 4M (bootram: 0M)
Reserved: 0M, IOMem: 0M,          flashfsys: 0M
```

```
sysadmin-vm:0_RP0# show memory summ
```

```
Sat Jan 31 23:44:12.805 UTC
```

```
Sat Jan 31 23:44:12 UTC 1970
```

```
Physical Memory: 1905 MB total (781 MB available)
```

```
RP/0/RP0/CPU0:CRS-J#show memory ?
```

```
<0-4294967295>  job id
compare        Create and compare memory snapshots
heap           Show process heap.
location       location to display
summary        Display only a summary of memory usage.
```

```
RP/0/RP0/CPU0:CRS-J#show mem summ
```

```
Fri Nov 15 17:42:47.525 UTC
```

```
Physical Memory: 12288M total (10223M available)
Application Memory : 11896M (10223M available)
Image: 71M (bootram: 71M)
Reserved: 256M, IOMem: 64K, flashfsys: 0
Total shared window: 28M
```

```
RP/0/RP0/CPU0:CRS-J(admin)#show mem summ
```

```
Fri Nov 15 17:44:04.400 UTC
```

```
Physical Memory: 12288M total (10221M available)
Application Memory : 11896M (10221M available)
Image: 71M (bootram: 71M)
Reserved: 256M, IOMem: 64K, flashfsys: 0
```

Total shared window: 28M

[show processes](#)

Référez-vous à la section de [show processes de la référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS, libérez le pour en savoir plus 5.0.x.](#)

Résumé : Il y a des modifications mineures dans les options prises en charge et également dans la sortie pour certaines des options.

Détails : Le mot clé de **pidin d'exposition** n'est plus pris en charge.

Importance : Mineur

RP/0/RP0/CPU0:NCS6008-SJ#**show processes ?**

```
<0-4294967295>  job id
WORD            Name of the executable
aborts          Show process aborts
all             Show process data for all processes
blocked        Show file and channel use per process
boot           Show process boot info
boot-stalled   Show process boot-up blocked
cpu            Show CPU use per process new
distribution   Show distribution of processes
dynamic        Show process data for dynamically created processes
failover       Show process failover info
family         Show process family information.
files          Show file and channel use per process
location       location to display
log            Show process log
mandatory      Show process data for mandatory processes
memory         Show process memory information.
searchpath     Show the search path
signal         Show signal use for processes.
startup        Show process data for processes created at startup
threadname     Show thread names.
|              Output Modifiers
<cr>
```

RP/0/RP0/CPU0:CRS-J#**show process ?**

```
<0-4294967295>  job id
WORD            Name of the executable
aborts          Show process aborts
all             Show process data for all processes
blocked        Show detail for reply/send/mutex blocked processes.
boot           Show process boot info
boot-stalled   Show process boot-up blocked
cpu            Show CPU use per process
distribution   Show distribution of processes
dynamic        Show process data for dynamically created processes
failover       Show process failover info
family         Show process family information.
```

```

files          Show file and channel use per process
location      location to display
log           Show process log
mandatory     Show process data for mandatory processes
memory        Show memory use per process
pidin        Show processes using QNX pidin command
searchpath    Show the search path
signal        Show signal use for processes.
startup       Show process data for processes created at startup
threadname    Show thread names.

```

show platform

Référez-vous à la section de [show platform de la référence de commandes de gestion de système pour le](#) pour en savoir plus de **Routeurs de gamme 6000 de Cisco NCS**.

Résumé : Il y a des options supplémentaires de mot clé et la sortie change.

Détails : La commande de **show platform** peut être exécutée du XR ou de la VM de SysAdmin.

VM XR : Le soutien du mot clé **VM** a été ajouté.

Sur le NCS 6000, la commande affiche la matrice, le thermoventilateur, et les informations sur le module d'alimentation de la VM XR, alors qu'elle ne fait pas dans XR classique. Afin d'obtenir des informations sur ces types de composants dans XR classique, la commande doit être exécutée du mode d'admin.

VM de SysAdmin : Le mot clé de **détail** a été ajouté afin de fournir les informations complémentaires sur l'état et démarrer les informations pour un noeud dans le système. Le prenez en charge pour les **parts que le** mot clé est ajouté.

Importance : Commandant

```
RP/0/RP0/CPU0:NCS6008-A#show platform
```

```
Mon Mar 31 21:28:58.255 UTC
```

Node name	Node type	Node state	Admin state	Config state
0/3	NC6-10X100G-M-P	OPERATIONAL	UP	NSHUT
0/3/NPU0	Slice	UP	UP	
0/3/NPU1	Slice	UP	UP	
0/3/NPU2	Slice	UP	UP	
0/3/NPU3	Slice	UP	UP	
0/3/NPU4	Slice	UP	UP	
0/4	NC6-10X100G-L-K	OPERATIONAL	UP	NSHUT
0/4/NPU0	Slice	UP	UP	
0/4/NPU1	Slice	UP	UP	
0/4/NPU2	Slice	UP	UP	
0/4/NPU3	Slice	UP	UP	
0/4/NPU4	Slice	UP	UP	
0/RP0	NC6-RP	OPERATIONAL	UP	NSHUT
0/RP1	NC6-RP	OPERATIONAL	UP	NSHUT
0/FC0	NC6-FC	OPERATIONAL	UP	NSHUT
0/FC1	NC6-FC	OPERATIONAL	UP	NSHUT

0/FC2	NC6-FC	OPERATIONAL	UP	NSHUT
0/FC3	NC6-FC	OPERATIONAL	UP	NSHUT
0/FC4	NC6-FC	OPERATIONAL	UP	NSHUT
0/FC5	NC6-FC	OPERATIONAL	UP	NSHUT
0/FT0	NC6-FANTRAY	OPERATIONAL	UP	NSHUT
0/FT1	NC6-FANTRAY	OPERATIONAL	UP	NSHUT
0/PT0	NCS-AC-PWRTRAY	OPERATIONAL	UP	NSHUT
0/PT1	NCS-AC-PWRTRAY	OPERATIONAL	UP	NSHUT
0/PT2	NCS-AC-PWRTRAY	OPERATIONAL	UP	NSHUT
0/PT3	NCS-AC-PWRTRAY	OPERATIONAL	UP	NSHUT
0/PT4	NCS-AC-PWRTRAY	OPERATIONAL	UP	NSHUT
0/PT5	NCS-AC-PWRTRAY	OPERATIONAL	UP	NSHUT

RP/0/RP0/CPU0:NCS6008-A#**show platform vm**

Mon Mar 31 21:26:11.922 UTC

Node name	Node type	Partner name	SW status	IP address
0/4/CPU0	LC (ACTIVE)	NONE	FINAL Band	192.0.80.3
0/3/CPU0	LC (ACTIVE)	NONE	FINAL Band	192.0.76.3
0/RP0/CPU0	RP (ACTIVE)	0/RP1/CPU0	FINAL Band	192.0.0.4
0/RP1/CPU0	RP (STANDBY)	0/RP0/CPU0	FINAL Band	192.0.4.4

sysadmin-vm:0_RP0# **show platform ?**

Description: Show platform node information

Possible completions:

detail Show details of node type and state

location Location of node to show; omit to show all locations

slices Show summary of node forwarding slices

| Output modifiers

<cr>

sysadmin-vm:0_RP0# **show platform**

Mon Mar 31 21:32:14.929 UTC

Location	Card Type	HW State	SW State	Config State
0/RP0	NC6-RP	OPERATIONAL	OPERATIONAL	NSHUT
0/RP1	NC6-RP	OPERATIONAL	OPERATIONAL	NSHUT
0/FC0	NC6-FC	OPERATIONAL	N/A	NSHUT
0/FC1	NC6-FC	OPERATIONAL	N/A	NSHUT
0/FC2	NC6-FC	OPERATIONAL	N/A	NSHUT
0/FC3	NC6-FC	OPERATIONAL	N/A	NSHUT
0/FC4	NC6-FC	OPERATIONAL	N/A	NSHUT
0/FC5	NC6-FC	OPERATIONAL	N/A	NSHUT
0/FT0	NC6-FANTRAY	OPERATIONAL	N/A	NSHUT
0/FT1	NC6-FANTRAY	OPERATIONAL	N/A	NSHUT
0/3	NC6-10X100G-M-P	OPERATIONAL	OPERATIONAL	NSHUT
0/4	NC6-10X100G-L-K	OPERATIONAL	OPERATIONAL	NSHUT
0/PT0	NCS-AC-PWRTRAY	OPERATIONAL	N/A	NSHUT
0/PT1	NCS-AC-PWRTRAY	OPERATIONAL	N/A	NSHUT
0/PT2	NCS-AC-PWRTRAY	OPERATIONAL	N/A	NSHUT
0/PT3	NCS-AC-PWRTRAY	OPERATIONAL	N/A	NSHUT

```

0/PT4      NCS-AC-PWRTRAY      OPERATIONAL  N/A      NSHUT
0/PT5      NCS-AC-PWRTRAY      OPERATIONAL  N/A      NSHUT

```

```

sysadmin-vm:0_RP0# show platform slices

```

```

Mon Mar 31 21:29:29.852 UTC

```

```

Location      Slice Num      Admin State      Oper State
-----

```

```

0/3           0              UP              UP
              1              UP              UP
              2              UP              UP
              3              UP              UP
              4              UP              UP
0/4           0              UP              UP
              1              UP              UP
              2              UP              UP
              3              UP              UP
              4              UP              UP

```

```

sysadmin-vm:0_RP0# show platform detail loc 0/4/cpu0

```

```

Sun Feb 1 03:09:15.363 UTC

```

```

Platform Information for 0/4/cpu0

```

```

PID : NC6-10X100G-M-P

```

```

Description : "NCS 6000 10x100G Multi-Service CXP"

```

```

VID/SN : V01

```

```

HW Oper State : OPERATIONAL

```

```

SW Oper State : OPERATIONAL

```

```

Configuration : "NSHUT RST"

```

```

HW Version : 0.6

```

```

Last Event : HW_EVENT_OK

```

```

Last Event Reason : "Initial discovered state:BOOTED (card ok)"

```

```

RP/0/RP1/CPU0:CRS-H#show platform

```

```

Mon Mar 31 17:21:18.956 EDT

```

```

Node          Type          PLIM          State          Config State
-----

```

```

0/0/CPU0      MSC-140G      14-10GbE      IOS XR RUN      PWR, NSHUT, MON
0/4/CPU0      MSC-140G      1-100GbE      IOS XR RUN      PWR, NSHUT, MON
0/RP0/CPU0    RP(Standby)    N/A           IOS XR RUN      PWR, NSHUT, MON
0/RP1/CPU0    RP(Active)     N/A           IOS XR RUN      PWR, NSHUT, MON
1/2/CPU0      MSC-140G      N/A           IN-RESET        PWR, NSHUT, MON
1/3/CPU0      MSC           Jacket Card    IOS XR RUN      PWR, NSHUT, MON
1/3/1         MSC(SPA)       8X1GE         OK               PWR, NSHUT, MON
1/4/CPU0      MSC           10C768-POS    IOS XR RUN      PWR, NSHUT, MON
1/5/CPU0      FP-140G       4-40GbE-OTN   IOS XR RUN      PWR, NSHUT, MON
1/8/CPU0      MSC           Jacket Card    IOS XR RUN      PWR, NSHUT, MON
1/8/1         MSC(SPA)       4XOC3-POS-V2  OK               PWR, NSHUT, MON
1/9/CPU0      MSC           10C768-DWDM   IOS XR RUN      PWR, NSHUT, MON
1/RP0/CPU0    RP(Active)     N/A           IOS XR RUN      PWR, NSHUT, MON
1/RP1/CPU0    RP(Standby)    N/A           IOS XR RUN      PWR, NSHUT, MON

```

```

RP/0/RP1/CPU0:CRS-H#show platform ?

```

```

WORD      Partially qualified location specification

```



```
drops Forwarding drops
|      Output Modifiers
<cr>
```

show reboot

Résumé : En raison de la séparation de la VM XR et de la VM de SysAdmin, la commande de **show reboot** a changé dans NG-XR.

Détails : Sous la VM XR, vous pouvez visualiser l'historique de réinitialisation de la VM XR pour chaque linecard actif/RP.

Sous la VM de SysAdmin, l'historique de réinitialisation de la VM de SysAdmin pour chaque linecard actif/RP peut être visualisé, avec l'historique de réinitialisation pour le linecard/RP lui-même (rappel que la VM de SysAdmin peut être redémarrée sans recharge du linecard réel).

Importance : Mineur

```
RP/0/RP0/CPU0:NCS#show reboot ?
  history  Display reboot history of node
RP/0/RP0/CPU0:TLAB97-NCS1#
RP/0/RP0/CPU0:TLAB97-NCS1#
RP/0/RP0/CPU0:TLAB97-NCS1#admin
Wed Dec 11 03:37:51.036 EST

admin connected from 127.0.0.1 using console on xr-vm_node0_RP0_CPU0
sysadmin-vm:0_RP1# show reboot ?
Description: Show reboot history events
Possible completions:
  admin-vm  Admin VM reboot history
  card      Card reboot history
  reverse   Show reboot history in reverse order
  |         Output modifiers
<cr>
```

affichez le sdr-invmgr

Résumé : C'est une commande nouvellement ajoutée dans XR + VM de Sysadmin.

Détails : Ceci a le nouveau comportement opérationnel.

Importance : Commandant

show tech-support

Résumé : Il y a les modifications sorties avec des modifications d'options de mot clé de commande

Détails : Le soutien de ces mots clé de **show tech-support** est enlevé sur le NCS 6000 :

- aipcproxy

- atmosphère
- Fonction Call Home
- chdlc
- config-groupe
- contrôleurs
- crypto
- Fabio
- Relais de trames
- ipinfra
- LRD
- onep
- plate-forme
- nervure
- svd
- sysmgr
- tunnel-IP

Le soutien de ces mots clé de **show tech-support** de mode d'admin est enlevé sur le NCS 6000 :

- asic
- paquets
- cfgmgr
- contrôle-Ethernets
- diagnostics
- dsc
- ees
- vérification de l'intégrité
- invmgr
- issu
- permis
- LRD
- nrs
- pcie
- shelfmgr
- sysdb
- sysmgr

Le soutien de ces mots clé de **show tech-support** est disponible sur NCS 6008, mais pas sur les CRS :

- **matrice** - Dans la VM XR sur NCS 6008
- **installez** - Dans la VM XR sur NCS 6008
- **lwm** - Dans la VM XR sur NCS 6008
- **npu** - Dans la VM XR sur NCS 6008
- **processmgr** - Dans la VM XR sur NCS 6008
- **rdm** - Dans la VM XR sur NCS 6008
- **sdr-invmgr** - Dans la VM XR sur NCS 6008

Le soutien de ces mots clé de **show tech-support** VM de SysAdmin est disponible sur le NCS 6000, mais pas sur les CRS :

- **alarm_mgr**
- **tous**
- **ccc**
- **confd**
- **envmon**
- **fpd**
- **obfl**
- **P.M.**
- **sdr_mgr**
- **shelf_mgr**
- **slice_manager**
- **Syslog**

Importance : Mineur

RP/0/RP0/CPU0:NCS#**show tech-support ?**

access-lists	Output show commands of interest for access-lists debugging
aps	Output show commands of interest for APS debugging
arp	Output show commands of interest for ARP debugging
bcdl	Output show commands of interest for bcdl debugging
bcdlv2	Output show commands of interest for bcdlv2 debugging
bundles	Output show commands of interest for bundle debugging
cef	CEF tech-support information
cef	Output show commands of interest for CEF debugging
cfgmgr	cfgmgr tech-support information
chkpt	Gather information required to debug checkpoint
cpuctrl	cpuctrl tech-support
dhcp	DHCP tech-support
eem	Show eem information for tech-support
ema	Output show commands of interest for ema debugging
ethernet	Output show commands of interest for ethernet debugging
fabric	fabric tech support information
file	Specify a valid file name (e.g. disk0:tmp.log)
gsp	gsp tech-support information
hsrp	Output show commands of interest for HSRP debugging
install	Gather all the information about Install for tech-support
iphc	Output show commands of interest for iphc debugging
l2tp	Output show commands for L2TP tech-support
l2vpn	Output show commands for L2VPN debugging
location	Specify a location
lpts	show tech-support output for LPTS
lwm	Gather all the information about the Light Weight Messaging (LWM)
mpls	Output show commands of interest for MPLS debugging
multicast	Show multicast related information
multilink	show tech-support output for multilink
netflow	Output show commands of interest for Netflow debugging
npu	npu tech-support
nrs	NRS tech-support information

```

p2p-ipc          aipc show tech-support output
parser           Parser show tech-support output for debugging
password        Include password in output
performance-mgmt Performance management show tech-support output
pfi             Collect PFI related information and save to disk
placed          Gather all the information about the Placement Daemon (Placed)
pos            Output show commands of interest for pos debugging
ppp            Output show commands of interest for ppp debugging
processmgr      Gather all the information about the Process Manager (ProcessMgr)
protection-notif Collect fast traffic protection information and save to disk
qos            Collect QOS related information and save to disk
rack           Show list of racks
radius         Output show commands of interest for radius debugging
rcmd           RCMD show tech-support output
rdm            rdm tech-support
rdsfs          Gather lots of information about RDSFS
rib            Show IP RIB related information
routing        Routing show tech-support output
rsi            show tech-support output for RSI (Router Space Infrastructure)
sanitized      Sanitized configuration in output
sdr-invmgr     Spawn parallel show tech-support - use only if directed
serial         Output show commands of interest for serial debugging
services       Show tech-support information relating to services
snmp           SNMP tech-support information
spa           Gather information about SPA
spp           Output show commands of interest for SPP debugging
srlg          show tech-support output for SRLG (Shared Risk Link Group)
ssm           Service State Monitoring (SSM) tech-support information
statsd        Output show commands of use for statistics debugging
sysdb         System Database (SysDB) tech-support information
tcp           TCP supported trace and debugging
tunnel-template Output show commands of interest for tunnel-template debugging
vrrp         Output show commands of interest for VRRP debugging
xos           Gather information about Cross-OS Services
<cr>

```

RP/0/RP0/CPU0:NCS#**admin**

Sat Mar 12 23:45:23.763 UTC

cisco connected from 127.0.0.1 using console on xr-vm_node0_RP0_CPU0

sysadmin-vm:0_RP0# **show tech-support ?**

Possible completions:

```

alarm_mgr      Show tech of alarm_mgr process
all           Show tech of entire node
ccc           Show tech of ccc_driver process
confd         show debug information for confd
control-ethernet Show tech of control ethernet subsystem
envmon        Show tech of envmon process
fabric        Show tech of fabric component
fpd           Show tech of fpd process
install       show debug information for install
obfl          Show tech of obfl process

```

```

pm                Show tech of pm process
sdr_mgr           Show tech of sdr_mgr process
shelf_mgr        Show tech of shelf_mgr process
slice_manager     Show tech of slice_manager process
syslog           Show tech of syslog process

```

RP/0/RP0/CPU0:CRS#**show tech-support ?**

```

access-lists      Output show commands of interest for access-lists debugging
(cisco-support)
aipcproxy         Gather lots of information about aipc_proxy
(cisco-support)
aps              Output show commands of interest for APS debugging
arp             Output show commands of interest for ARP debugging
(cisco-support)
atm             Output show commands of interest for atm debugging
(cisco-support)
bcdl            Output show commands of interest for bcdl debugging
bcdlv2         Output show commands of interest for bcdlv2 debugging
(cisco-support)
bundles         Output show commands of interest for bundle debugging
(cisco-support)
call-home       Show call-home information for tech-support
cef            CEF tech-support information(cisco-support)
cef            Output show commands of interest for CEF debugging
cfgmgr         cfgmgr tech-support information(cisco-support)
chdlc          Output show commands of interest for chdlc debugging
(cisco-support)
chkpt          Gather information required to debug checkpoint
(cisco-support)
config-group    Config Group tech-support information(cisco-support)
controllers     Show tech-support information for controllers(cisco-support)
cpuctrl        cpuctrl tech-support(cisco-support)
crypto         CRYPTO show tech-support output
dhcp           DHCP tech-support(cisco-support)
eem            Show eem information for tech-support
ethernet       Ethernet show tech commands(cisco-support)
ethernet       Output show commands of interest for ethernet debugging
(cisco-support)
fabio          fabio tech-support(cisco-support)
file           Specify a valid file name (e.g. disk0:tmp.log)
frame-relay    Output show commands of interest for Frame-Relay debugging
(cisco-support)
gsp            gsp tech-support information
hsrp           Output show commands of interest for HSRP debugging
(cisco-support)
iphc           Output show commands of interest for iphc debugging
ipinfra        Output show commands of interest for ip-infra debugging
(cisco-support)
l2tp           Output show commands for L2TP tech-support(cisco-support)
l2vpn          Output show commands for L2VPN debugging(cisco-support)
location       Specify a location(cisco-support)
lpts           show tech-support output for LPTS

```

lrd	Output show commands of interest for lrd debugging
(cisco-support)	
mpls	Output show commands of interest for MPLS debugging
(cisco-support)	
multicast	Show multicast related information
multilink	show tech-support output for multilink(cisco-support)
netflow	Output show commands of interest for Netflow debugging
(cisco-support)	
nrs	NRS tech-support information
onep	Collect ONEP related information and save to disk
(cisco-support)	
p2p-ipc	aipc show tech-support output
parser	Parser show tech-support output for debugging
(cisco-support)	
password	Include password in output
performance-mgmt	Performance management show tech-support output(cisco-support)
pfi	Collect PFI related information and save to disk(cisco-support)
placed	Gather all the information about the Placement Daemon (Placed)
platform	show tech-support platform output(cisco-support)
pos	Output show commands of interest for pos debugging
(cisco-support)	
ppp	Output show commands of interest for ppp debugging
(cisco-support)	
protection-notif	Collect fast traffic protection information and save to disk
(cisco-support)	
qos	Collect QOS related information and save to disk(cisco-support)
rack	Show list of racks(cisco-support)
radius	Output show commands of interest for radius debugging
(cisco-support)	
rcmd	RCMD show tech-support output
rdfsfs	Gather lots of information about RDFSFS(cisco-support)
rib	Show IP RIB related information(cisco-support)
routing	Routing show tech-support output
rsi	show tech-support output for RSI (Router Space Infrastructure)
(cisco-support)	
sanitized	Sanitized configuration in output
satellite	Collect Satellite related information and save to disk
(cisco-support)	
serial	Output show commands of interest for serial debugging
(cisco-support)	
services	Show tech-support information relating to services
(cisco-support)	
snmp	SNMP tech-support information(cisco-support)
spa	Gather information about SPA
spaipc	Output show commands of interest for spaipc debugging
(cisco-support)	
span	Collect tech-support information for the SPAN feature
(cisco-support)	
spio	Collect SPIO information and save to disk(cisco-support)
spp	Output show commands of interest for SPP debugging
(cisco-support)	
srlg	show tech-support output for SRLG (Shared Risk Link Group)

```

(cisco-support)
ssm          Service State Monitoring (SSM) tech-support information
statsd       Output show commands of use for statistics debugging
(cisco-support)
svd          show tech-support output for svd(cisco-support)
sysdb        System Database (SysDB) tech-support information(cisco-support)
sysmgr       Gather all the information about the System Manager (SysMgr)
tcp          TCP supported trace and debugging
tty          TTY tech-support information(cisco-support)
tunnel-ip    Output show commands of interest for GRE/IPinIP(cisco-support)
tunnel-template  Output show commands of interest for tunnel-template debugging
vrrp         Output show commands of interest for VRRP debugging
(cisco-support)
xos          Gather information about Cross-OS Services
<cr>

```

RP/0/RP0/CPU0:CRS#**admin**

RP/0/RP0/CPU0:CRS(admin)#**show tech-support ?**

```

asic          Run asic snapshot script
bundles       Output show commands of interest for bundle debugging
(cisco-support)
cctl          Spawn parallel show tech-support - use only if directed
cfgmgr        cfgmgr tech-support information(cisco-support)
control-ethernet  Output show commands of interest for control-ethernet debugging
diagnostics   Output show commands of interest for diagnostics debugging
dsc           DSC tech-support for troubleshooting
ees           Show EES snapshot information for tech-support
fabric        Output of show tech-support from fabric debugging
file          Specify a valid file name (e.g. disk0:tmp.log)
gsp           gsp tech-support information
health-check  Run health check script
install       Write install information for tech-support to a file
invmgr        Spawn parallel show tech-support - use only if directed
issu         Write ISSU information for tech-support to a file
license       Show license information for tech-support
location      Specify a location
lrd           LRd tech-support information
media         Write media information for tech-support to a file
nrs           NRS tech-support information
password      Include password in output
pcie          Output show commands of interest for pcie debugging
pm            Output show commands of interest for power-management debugging
rack          Show list of racks
sanitized     Sanitized configuration in output
shelfmgr      Spawn parallel show tech-support - use only if directed
sysdb         System Database (SysDB) tech-support information
sysdb-config-grp  System Database (SysDB) Config Group tech-support information
sysmgr        Gather all the information about the System Manager (SysMgr)
<cr>

```

show version

Référez-vous à la section de [show version de la référence de commandes de gestion de système pour le](#) pour en savoir plus de **Routeurs de gamme 6000 de Cisco NCS**.

Résumé : Il y a les modifications importantes de sortie.

Détails : La sortie est considérablement simplifiée sur le NCS 6008, dû à la structure différente de SYSTÈME D'EXPLOITATION.

Importance : Mineur

```
RP/0/RP0/CPU0:NCS6008-SJ#show version
```

```
Wed Feb 19 13:28:14.726 UTC
```

```
Cisco IOS XR Software, Version 5.0.1
```

```
Copyright (c) 2013 by Cisco Systems, Inc.
```

```
Build Information:
```

```
Built By      : palwal
```

```
Built On      : Tue Feb  4 13:35:37 PST 2014
```

```
Build Host    : iox-bld4
```

```
Workspace     : /auto/srcarchive9/production/5.0.1/all/workspace
```

```
Version       : 5.0.1
```

```
Location      : /opt/cisco/XR/packages/
```

```
System uptime is 6 days, 23 hours, 25 minutes
```

```
RP/0/RP0/CPU0:NCS6008-SJ#admin
```

```
Wed Feb 19 13:28:35.460 UTC
```

```
sysadmin-vm:0_RP0# show version
```

```
Wed Feb 19 13:29:39.923 UTC
```

```
Cisco IOS XR Admin Software, Version 5.0.1
```

```
Copyright (c) 2013 by Cisco Systems, Inc.
```

```
Build Information:
```

```
Built By      : palwal
```

```
Built On      : Tue Feb  4 11:17:38 PST 2014
```

```
Build Host    : iox-bld4
```

```
Workspace     : /auto/srcarchive9/production/cal-r50x-501
```

```
Version       : 5.0.1
```

```
Location      : /opt/cisco/calvados/packages/
```

```
BIOS Version  : 10.2
```

```
System uptime is 6 days, 23 hours, 28 minutes
```

```
sysadmin-vm:0_RP0#
```


dessus

Référez-vous à la section [supérieure de la référence de commandes de gestion de système pour le](#) pour en savoir plus de **Routeurs de gamme 6000 de Cisco NCS**.

Résumé : Il y a des modifications aux options et aux sorties de mot clé. La commande est disponible dans la VM de SysAdmin et la VM XR.

Détails : L'emplacement de mot clé pour le **dumbtty** est déplacé le CLI. Sur le NCS 6000, le dessus peut être spécifié avec l'emplacement du linecard tandis que sur des CRS. Cela ne fonctionne pas pour l'emplacement de linecard.

Importance : Mineur

```
sysadmin-vm:0_RP0# top location 0/4 dumbtty
```

```
Thu Feb 12 21:54:27.686 UTC
```

```
*****
```

```
Location : 0/4
```

```
*****
```

```
top - 21:54:28 up 18:54, 1 user, load average: 0.00, 0.00, 0.00
```

```
Tasks: 153 total, 1 running, 152 sleeping, 0 stopped, 0 zombie
```

```
Cpu(s): 1.2%us, 0.5%sy, 0.0%ni, 98.2%id, 0.0%wa, 0.0%hi, 0.0%si, 0.0%st
```

```
Mem: 1009016k total, 769648k used, 239368k free, 27072k buffers
```

```
Swap: 14444k total, 0k used, 14444k free, 323424k cached
```

PID	USER	PR	NI	VIRT	RES	SHR	S	%CPU	%MEM	TIME+
1	root	20	0	14932	1368	1132	S	0.0	0.1	0:01.76
init										
2	root	20	0	0	0	0	S	0.0	0.0	0:00.00
kthreadd										
3	root	RT	0	0	0	0	S	0.0	0.0	0:00.00
migration/0										
4	root	20	0	0	0	0	S	0.0	0.0	0:01.28
ksoftirqd/0										
5	root	RT	0	0	0	0	S	0.0	0.0	0:00.00
watchdog/0										
6	root	20	0	0	0	0	S	0.0	0.0	0:02.68
events/0										
7	root	20	0	0	0	0	S	0.0	0.0	0:00.00

cpuset										
8	root	20	0	0	0	0	S	0.0	0.0	0:00.00
khelper										
9	root	20	0	0	0	0	S	0.0	0.0	0:00.00
netns										
10	root	20	0	0	0	0	S	0.0	0.0	0:00.00
async/mgr										
11	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pm										
12	root	20	0	0	0	0	S	0.0	0.0	0:00.06
sync_supers										
13	root	20	0	0	0	0	S	0.0	0.0	0:00.08 bdi-
default										
14	root	20	0	0	0	0	S	0.0	0.0	0:00.00
kintegrityd/0										
15	root	20	0	0	0	0	S	0.0	0.0	0:00.20
kblockd/0										
16	root	20	0	0	0	0	S	0.0	0.0	0:00.00
kacpid										
17	root	20	0	0	0	0	S	0.0	0.0	0:00.00
kacpi_notify										
18	root	20	0	0	0	0	S	0.0	0.0	0:00.00
kacpi_hotplug										
19	root	20	0	0	0	0	S	0.0	0.0	0:00.00
ata/0										
20	root	20	0	0	0	0	S	0.0	0.0	0:00.00
ata_aux										
21	root	20	0	0	0	0	S	0.0	0.0	0:00.00
khubd										
22	root	20	0	0	0	0	S	0.0	0.0	0:00.00
kseriod										
24	root	15	-5	0	0	0	S	0.0	0.0	0:00.00
kslowd000										
25	root	15	-5	0	0	0	S	0.0	0.0	0:00.00
kslowd001										

26	root	20	0	0	0	0	S	0.0	0.0	0:00.01
khungtaskd										
27	root	20	0	0	0	0	S	0.0	0.0	0:00.00
kswapd0										
28	root	25	5	0	0	0	S	0.0	0.0	0:00.00
ksmd										
29	root	20	0	0	0	0	S	0.0	0.0	0:00.00
aio/0										
30	root	20	0	0	0	0	S	0.0	0.0	0:00.00
crypto/0										
34	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:00										
35	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:00										
36	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:00										
37	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:00										
38	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:00										
39	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:00										
40	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:00										
41	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:00										
42	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:00										
43	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:00										
44	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
45	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										

46	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
47	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
48	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
49	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
50	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
51	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
52	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
53	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
54	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
55	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
56	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
57	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
58	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
59	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:37										
60	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:48										
61	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:48										
62	root	20	0	0	0	0	S	0.0	0.0	0:00.00
pciehp_d_0000:48										
63	root	20	0	0	0	0	S	0.0	0.0	0:00.00

pciehpdp_0000:48

64 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

65 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

66 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

67 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

68 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

69 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

70 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

71 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

72 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

73 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

74 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

75 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:48

76 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:59

77 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:59

78 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:59

79 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:59

80 root 20 0 0 0 0 S 0.0 0.0 0:00.00
pciehpdp_0000:59

81	root	20	0	0	0	0 S	0.0	0.0	0:00.00
pciehp_d_0000:59									
82	root	20	0	0	0	0 S	0.0	0.0	0:00.00
pciehp_d_0000:59									
83	root	20	0	0	0	0 S	0.0	0.0	0:00.00
pciehp_d_0000:59									
84	root	20	0	0	0	0 S	0.0	0.0	0:00.00
pciehp_d_0000:59									
85	root	20	0	0	0	0 S	0.0	0.0	0:00.00
pciehp_d_0000:59									
86	root	20	0	0	0	0 S	0.0	0.0	0:00.00
pciehp_d_0000:59									
87	root	20	0	0	0	0 S	0.0	0.0	0:00.00
pciehp_d_0000:59									
88	root	20	0	0	0	0 S	0.0	0.0	0:00.00
pciehp_d_0000:59									
89	root	20	0	0	0	0 S	0.0	0.0	0:00.00
pciehp_d_0000:59									
90	root	20	0	0	0	0 S	0.0	0.0	0:00.03
pciehp_d_0000:59									
91	root	20	0	0	0	0 S	0.0	0.0	0:00.01
pciehp_d_0000:59									
93	root	20	0	0	0	0 S	0.0	0.0	0:00.00
uio/0									
94	root	20	0	0	0	0 S	0.0	0.0	0:00.00
kpsmoused									
95	root	20	0	0	0	0 S	0.0	0.0	0:00.00
usbhid_resumer									
114	root	20	0	0	0	0 S	0.0	0.0	0:00.00
kstriped									
529	root	20	0	0	0	0 S	0.0	0.0	0:00.00
scsi_eh_0									
530	root	20	0	0	0	0 S	0.0	0.0	0:00.00
scsi_eh_1									

539	root	20	0	0	0	0	S	0.0	0.0	0:00.00	
khvcd											
567	root	20	0	0	0	0	S	0.0	0.0	0:00.07	jbd2/vda1-
8											
568	root	20	0	0	0	0	S	0.0	0.0	0:00.00	ext4-dio-
unwrit											
618	root	16	-4	4576	1100	432	S	0.0	0.1	0:00.08	
udevd											
1106	root	20	0	0	0	0	S	0.0	0.0	0:00.78	jbd2/vdc1-
8											
1107	root	20	0	0	0	0	S	0.0	0.0	0:00.00	ext4-dio-
unwrit											
1151	root	20	0	0	0	0	S	0.0	0.0	0:00.00	jbd2/vdc2-
8											
1152	root	20	0	0	0	0	S	0.0	0.0	0:00.00	ext4-dio-
unwrit											
1165	root	20	0	0	0	0	S	0.0	0.0	0:00.00	jbd2/vdc3-
8											
1166	root	20	0	0	0	0	S	0.0	0.0	0:00.00	ext4-dio-
unwrit											
1175	root	20	0	0	0	0	S	0.0	0.0	0:00.00	
kjournald											
1328	root	20	0	11280	1304	1100	S	0.0	0.1	0:00.00	
oom.sh											
1332	root	20	0	0	0	0	S	0.0	0.0	0:00.00	
low_mem_thread											
1334	root	20	0	11280	552	300	S	0.0	0.1	0:00.17	
oom.sh											
1440	root	20	0	6104	660	524	S	0.0	0.1	0:00.22	
syslogd											
1444	root	20	0	6848	3380	432	S	0.0	0.3	0:00.08	
klogd											
1499	root	20	0	13172	864	712	S	0.0	0.1	0:00.03	
lldpad											
1511	root	20	0	12844	624	456	S	0.0	0.1	0:00.00	dbus-

daemon

1543	root	20	0	23252	1140	772	S	0.0	0.1	0:00.00	
sshd											
1551	root	20	0	11120	836	676	S	0.0	0.1	0:00.00	
xinetd											
1583	root	20	0	7012	1096	572	S	0.0	0.1	0:00.35	
crond											
1595	root	20	0	148m	4268	2928	S	0.0	0.4	0:00.13	
libvirtd											
1664	root	20	0	3992	392	312	S	0.0	0.0	0:00.00	
agetty											
1690	root	20	0	3992	388	312	S	0.0	0.0	0:00.00	
agetty											
1692	root	20	0	3992	392	312	S	0.0	0.0	0:00.00	
agetty											
1715	root	18	-2	4572	1064	400	S	0.0	0.1	0:00.00	
udev											
1716	root	18	-2	4572	976	312	S	0.0	0.1	0:00.00	
udev											
1724	root	20	0	0	0	0	S	0.0	0.0	0:00.00	jbd2/vdb1-
8											
1725	root	20	0	0	0	0	S	0.0	0.0	0:00.00	ext4-dio-
unwrit											
1727	root	20	0	144m	11m	3860	S	0.0	1.2	0:04.96	
pm											
1732	root	20	0	201m	7916	4004	S	0.0	0.8	0:00.65	
bios_fpd											
1733	root	20	0	110m	4776	2792	S	0.0	0.5	0:00.14	
calv_alarm_mgr											
1734	root	20	0	424m	19m	5652	S	0.0	1.9	8:20.74	
ccc_driver											
1735	root	20	0	172m	16m	3188	S	0.0	1.7	0:04.05	
cm											
1736	root	20	0	83668	2916	1864	S	0.0	0.3	0:00.67	
debug_client											

1737	root	20	0	120m	9472	2200	S	0.0	0.9	0:00.71
ds										
1738	root	20	0	106m	3068	1920	S	0.0	0.3	0:00.64
dumper										
1739	root	20	0	266m	11m	5088	S	0.0	1.2	0:06.72
envmon										
1740	root	20	0	429m	16m	6060	S	0.0	1.7	0:28.45
esd										
1741	root	20	0	197m	8192	4900	S	0.0	0.8	0:02.28
inst_agent										
1742	root	20	0	165m	7552	3932	S	0.0	0.7	0:01.25
led_mgr										
1743	root	20	0	90160	3340	2136	S	0.0	0.3	0:01.99
ntp_helper										
1744	root	20	0	175m	7472	4152	S	0.0	0.7	0:02.82
obfl_mgr										
1745	root	20	0	112m	3608	2332	S	0.0	0.4	0:01.69
obfl_show										
1746	root	20	0	238m	28m	4140	S	0.0	2.9	0:00.79
sdr_mgr										
1747	root	20	0	359m	19m	7116	S	0.0	2.0	0:12.10
shelf_mgr										
1748	root	20	0	102m	4008	2584	S	0.0	0.4	0:00.97
ship_server										
1749	root	20	0	338m	16m	7192	S	0.0	1.7	7:22.68
slice_manager										
1750	root	20	0	99584	3280	2108	S	0.0	0.3	0:01.69
ssh_key_client										
1751	root	20	0	140m	4204	2620	S	0.0	0.4	0:54.73
syslogd_helper										
1752	root	20	0	102m	3604	2432	S	0.0	0.4	0:00.65
timezone_notify										
1753	root	20	0	146m	7864	3864	S	0.0	0.8	0:01.68
vm_manager										

```

1754 root      20    0  121m 6680 2464 S  0.0  0.7   0:06.02
wdfmon

1782 root      20    0 37860 2528 1912 S  0.0  0.3   0:00.00
ssh

2012 root      20    0 28176 1488 1160 S  0.0  0.1   0:00.26
ntpd

4680 root      20    0    0    0    0 S  0.0  0.0   0:00.05 flush-
252:32

7469 root      20    0    0    0    0 S  0.0  0.0   0:00.00 flush-
252:0

7521 root      20    0  3852  392  316 S  0.0  0.0   0:00.00
sleep

7522 root      20    0 27884 2432 1972 S  0.0  0.2   0:00.01
sshd

7524 root      20    0 10820 1164  844 R  0.0  0.1   0:00.00 top

```

```

RP/0/RP0/CPU0:CRS-J(admin)#top dumbtty loc ?
WORD Fully qualified location specification

```

```

RP/0/RP0/CPU0:CRS-J(admin)#top dumbtty loc 0/RP0/CPU0
Wed Nov 27 15:55:14.736 UTC
Computing times...348 processes; 1904 threads;
CPU states: 97.6% idle, 2.0% user, 0.2% kernel
Memory: 12288M total, 10004M avail, page size 4K
Time: Wed Nov 27 15:55:16.911 UTC

```

JID	TID	LAST_CPU	PRI	STATE	HH:MM:SS	CPU	COMMAND
367	10	1	10	Run	0:00:42	0.84%	qsm
367	11	1	10	Rcv	0:00:23	0.67%	qsm
67	10	1	50	NSlp	1:29:44	0.33%	ce_switch
1	63	0	10	Run	0:02:49	0.29%	procnto-smp-instr
67	9	1	50	NSlp	0:31:09	0.12%	ce_switch
67	6	1	10	NSlp	0:12:26	0.04%	ce_switch
65883	1	0	10	Rply	0:00:00	0.02%	top
62	12	1	55	Rcv	0:19:41	0.02%	eth_server
67	11	1	56	NSlp	0:00:02	0.00%	ce_switch
343	1	0	10	Rcv	0:00:00	0.00%	oir_daemon

```

RP/0/RP0/CPU0:CRS-J(admin)#top loc 0/RP0/CPU0 ?
<cr>

```

```

RP/0/RP0/CPU0:CRS-J(admin)#top loc 0/0/CPU0
Wed Nov 27 15:56:40.661 UTC
Sorry, that node can't be found
RP/0/RP0/CPU0:CRS-J(admin)#show plat

```

Wed Nov 27 15:56:46.461 UTC

Node	Type	PLIM	State	Config State
0/0/CPU0	MSC-140G	20-10GbE	IOS XR RUN	PWR, NSHUT, MON
0/1/SP	MSC (SP)	N/A	IOS XR RUN	PWR, NSHUT, MON
0/1/CPU0	MSC	Jacket Card	IOS XR RUN	PWR, NSHUT, MON
0/1/0	MSC (SPA)	OC192RPR-XFP	OK	PWR, NSHUT, MON
0/1/1	MSC (SPA)	8X1GE	OK	PWR, NSHUT, MON
0/1/2	MSC (SPA)	10X1GE	OK	PWR, NSHUT, MON
0/6/SP	MSC (SP)	N/A	IOS XR RUN	PWR, NSHUT, MON
0/6/CPU0	MSC	4-10GbE	IOS XR RUN	PWR, NSHUT, MON
0/7/SP	MSC (SP)	N/A	IOS XR RUN	PWR, NSHUT, MON
0/7/CPU0	MSC	1OC768-POS	IOS XR RUN	PWR, NSHUT, MON
0/RP0/CPU0	RP (Active)	N/A	IOS XR RUN	PWR, NSHUT, MON
0/RP1/CPU0	RP (Standby)	N/A	IOS XR RUN	PWR, NSHUT, MON
0/SM0/SP	FC-140G/S (SP)	N/A	IOS XR RUN	PWR, NSHUT, MON
0/SM1/SP	FC-140G/S (SP)	N/A	IOS XR RUN	PWR, NSHUT, MON
0/SM2/SP	FC-140G/S (SP)	N/A	IOS XR RUN	PWR, NSHUT, MON
0/SM3/SP	FC-140G/S (SP)	N/A	IOS XR RUN	PWR, NSHUT, MON

RP/0/RP0/CPU0:CRS-J (admin) #top loc 0/1/CPU0

Wed Nov 27 15:56:57.012 UTC

Sorry, that node can't be found

Guides de référence de commande de routeur de gamme 6000 de Cisco NCS

- [Référence de commandes de gestion de système pour les Routeurs de gamme 6000 de Cisco NCS](#)
- [Référence de commandes de gestion du système pour le routeur de gamme 6000 de Cisco NCS, version 5.0.x](#)