Implementazione di VXLAN VPN, in più siti tramite DCNM 11.2(1)

Sommario

Introduzione **Prerequisiti** Requisiti Componenti usati Creazione topologia fisica Distribuire OVA/OVF in vCenter Implementazione del primo fabric: fabric RTP Aggiunta di switch al fabric Distribuire la configurazione del fabric Implementazione del secondo fabric - SJ Creazione di una rete (VLAN/L2VNI) e di VRF (L3VNI) Configurazione multisito Distribuisci criteri di accesso host/trunk **Operazioni Giorno 2** Aggiornamento del software NX-OS tramite DCNM Installa Endpoint Locator Problemi rilevati durante la distribuzione Cablaggio non valido Impossibile configurare una funzionalità Sovrapposizione delle subnet di gestione per fabric diversi Interfacce Breakout Errore di infrastruttura durante la distribuzione su funzionalità non supportate Novità di DCNM 11.2 Informazioni correlate

Introduzione

In questo documento viene descritto come distribuire due singoli fabric VXLAN EVPN e come unire questi due fabric in un'implementazione di fabric EVPN multisito utilizzando Cisco Data Center Manager (DCNM) 11.2(1).

Multi-Site Domain (MSD), introdotto in DCNM versione 11.0(1), è un contenitore multifabbrico creato per gestire più fabric membro. È un singolo punto di controllo per una definizione di reti overlay e VRF (Virtual Routing and Forwarding) condivise tra fabric membri.

Nota: questo documento non descrive i dettagli relativi alle funzioni/proprietà di ciascuna scheda in DCNM. Consultare la sezione Riferimenti alla fine che fornisce spiegazioni dettagliate.

Prerequisiti

Requisiti

Cisco raccomanda la conoscenza dei seguenti argomenti:

- vCenter/UCS per distribuire la macchina virtuale DCNM
- Familiarità con NX-OS e Nexus 9000s
- Nexus 9000s ToRs, EoRs connesso in modo Leaf/Spine

Componenti usati

Le informazioni fornite in questo documento si basano sui seguenti componenti software e hardware:

- DCNM 11.2(1)
- NX-OS 7.0(3)I7(7) e NX-OS 9.2(3)
- Aculei: N9K-C9508 / N9K-X97160YC-EX e N9K-C9508 / N9K-X9636PQ
- Foglie: N9K-C9372TX, N9K-C93180YC-EX, N9K-C9372TX-E, N9K-C92160YC-X
- Gateway per bordi: N9K-C93240YC-FX2 e N9K-C93180YC-FX
- 7.000 "host": N77-C7709

Le informazioni discusse in questo documento fanno riferimento a dispositivi usati in uno specifico ambiente di emulazione. Su tutti i dispositivi menzionati nel documento la configurazione è stata ripristinata ai valori predefiniti. Se la rete è operativa, valutare attentamente eventuali conseguenze derivanti dall'uso dei comandi.

Creazione topologia fisica



Distribuire OVA/OVF in vCenter

Passaggio 1. In **vCenter**, distribuire il modello OVF (Open Virtualization Format) nel server/host desiderato, come mostrato nell'immagine.

vm vSphere Client Menu 🗸	Q Search in all environments	
	☐ 192.168.253.10 ACTIONS ▼	
✓	Summary Monitor Configure Permissio	ons
✓ ☐ dcg-rtp	Hypervisor: VMware ESXi,	, 6.7
✓	.168.253.10 Model: B230-BASE-M ocessor Type: Intel(R) Xeon((R) C
🗗 bookman (non 🏪 New Virtua	al Machine Cs: 2	
☆ dcg-rtp-dcnm ☆ Deploy OV	/F Template 6 ate: Connected	

1. Disporre localmente di file OVA/OVF, ecc. e selezionare tramite **Scegli file**, come mostrato nell'immagine:

Deploy OVF Template

2 Select a name and folder	Select an OVF template from remote URL or local file system				
3 Select a compute resource 4 Review details 5 Select storage 6 Ready to complete	Enter a URL to download and install the OVF package from the Internet, or browse to a location accessible from your computer, such as a local hard drive, a network share, or a CD/DVD drive.				
_	http https://remoteserver-address/filetodeploy.ovf .ova				
	Local file Choose Files dcnm-va.11.2.1.ova				

2. Seguire il resto dei prompt (nome della macchina virtuale, host, impostazioni di rete, come mostrato nell'immagine) e fare clic su **Fine**.

 1 Select an OVF template 2 Select a name and folder 	Select networks Select a destination network for each source network.							
 3 Select a compute resource 4 Review details 	Source Network	т	Destination Network	т				
✓ 5 License agreements	dcnm-mgmt	~						
✓ 6 Configuration	enhanced-fabric-mgmt		EVPN-NAT-1	~				
✓ 7 Select storage 8 Select petworks	enhanced-fabric-inband		EVPN-NAT-1	~				
9 Customize template				3 items				
10 Ready to complete								
	IP Allocation Settings							
	IP allocation:	Stat	ic - Manual					
	IP protocol:	IPv4	1					
Deploy OVF Template	IP protocol: Customize template	IPv4						
✓ 1 Select an OVF Template ✓ 2 Select a name and folder	IP protocol: Customize template Customize the deployment prope	IPv4	software solution.					
 Deploy OVF Template 1 Select an OVF template 2 Select a name and folder 3 Select a compute resource 4 Review details 5 License agreements 	IP protocol: Customize template Customize the deployment prope O All properties have valid value	IPv4 erties of this ues	software solution.					
 Deploy OVF Template 1 Select an OVF template 2 Select a name and folder 3 Select a compute resource 4 Review details 5 License agreements 6 Configuration 7 Select storage 	IP protocol: Customize template Customize the deployment prope All properties have valid valid Management Properties	IPv4 erties of this ues 3 setti	software solution.					
 Deploy OVF Template 1 Select an OVF template 2 Select a name and folder 3 Select a compute resource 4 Review details 5 License agreements 6 Configuration 7 Select storage 8 Select networks 	IP protocol: Customize template Customize the deployment prope All properties have valid value Management Properties 1.IP Address	IPv4 erties of this ues 3 setti	software solution.					
 Deploy OVF Template 1 Select an OVF template 2 Select a name and folder 3 Select a compute resource 4 Review details 5 License agreements 6 Configuration 7 Select storage 8 Select networks 9 Customize template 10 Ready to complete 	IP protocol: Customize template Customize the deployment prope All properties have valid value Management Properties 1.IP Address 2.Subnet Mask	IPv4 erties of this ues 3 setti	software solution.					

Passaggio 2. Al termine, avviare la macchina virtuale DCNM, come illustrato di seguito.

Recent Tasks Alarm	15												*
Task Name	- Target ~	Status	~	Initiator		~ Q	ueued For	~	Start Time ↓	~	Completion Time	~	Server
Power On virtual machine	esc-rtp-dcnm-FAB	✓ Completed		DCG.LOCAL\Admi	nistrator	3	ms		06/17/2019, 3:19:21 PM		06/17/2019, 3:19:21 PM		dcg-infra-vcenter.cisco.com
Initialize powering On	🔝 dcg-rtp	✓ Completed		DCG.LOCAL\Admi	nistrator	4	ms		06/17/2019, 3:19:21 PM		06/17/2019, 3:19:21 PM		dcg-infra-vcenter.cisco.com
Deploy OVF template	B esc-rtp-dcnm-FAB	✓ Completed		DCG.LOCAL\vpxd-	extension-440bec49-45	7	ms		06/17/2019, 3:01:45 PM		06/17/2019, 3:13:07 PM		dcg-infra-vcenter.cisco.com
vm vS	phere Client	Menu 🗸		Q Sear	ch in all envir	oni	ments						
		<u>@</u>	ß	esc-r	rtp-dcnr	n-	FAB) = ;		B 🖏	,	ACTIONS ~
∨ 🗗 dcg-infr	a-vcenter.cisco.c	om	Su	mmary	Monitor	(Configure		Permissions	;	Datastore	es	Networks
v 🗖 dca-r	rtp-vms												
i i i i i i i i i i i i i i i i i i i							Guest OS:		Other 2.6.	κL	inux (32-bit)		
✓ III ac	g-rtp						Compatibili	ty:	ESXi 5.1 an	nd I	later (VM ver	sio	n 9)
\sim	192.168.253.10						VMware To	ol	s: Not runnin	a.	not installed		
ć	🖞 bookman (bao	kup 8.25.2018)		VIIIV	vare				More info	5,			
ć	🔂 bookman (nor	n-prod)					DNS Name:						
ć	🖞 dcg-rtp-dcnm	-BACKUP		Powere	On		IP Addresse	es:					
ć	🕆 esc-rtp-dcnm-	FAB	La	unch Web	Console		Host:		192.168.25	3.1	0		
1	1 BULLE 1		1.4			•	A						

Passaggio 3. Avviare la console Web, una volta nella console, dovrebbe essere visualizzato questo prompt (l'indirizzo IP varia in quanto è specifico dell'ambiente e della configurazione):

esc-rtp-dcnm-FAB			Enforce US Keybo

	Please point your web browser to https://	*****************	
	to complete the installation	*****	

Passaggio 4. Accedere a <u>https://<your IP></u>:2443 (si tratta dell'indirizzo IP configurato in precedenza durante la distribuzione degli OAV) e fare clic su **Get Started**. In questo esempio viene illustrata un'installazione Fresh.

Cisco DCNM Installer

Please select how you want to setup this instance of Cisco Data Center Network Manager:

Fresh installation - Standalone
 Fresh installation - HA Primary
 Fresh installation - HA Secondary
 Fresh installation with backup file for restore
 Continue

Passaggio 5. Dopo aver configurato la password amministratore, è necessario selezionare il tipo di struttura da installare. Selezionare tra LAN o FAB poiché ogni tipo ha uno scopo diverso, quindi accertarsi di comprendere e scegliere correttamente. Nell'esempio, viene usato LAN Fabric, che è adatto alla maggior parte delle implementazioni VXLAN-EVPN.

Please choose the installation mode



LAN Fabric is for most VXLAN-EVPN deployments.

Passaggio 6. Seguire le istruzioni dell'installatore con il DNS della rete, il server NTP (Network Time Protocol), il nome host DCNM, ecc.

Please enter the following system settings

Fully Qualified Host Name *

Fully Qualified Host Name as per RFC1123, section 2.1, for example: myhost.mydomain.com

dcg-rtp-dcnm-fab.cisco.com

DNS Server Address *

DNS Server Address can be an IPv4 address or an IPv6 address

64.102.6.247

NTP Server *

RFC1123-compliant name or address (IPv4 or IPv6)

172.18.108.15

Passaggio 7. Configurare l'IP di gestione e il gateway di gestione. La rete di gestione fornisce connettività (SSH, SCP, HTTP, HTTPS) al server DCNM. Questo è anche l'indirizzo IP usato per raggiungere la GUI. L'indirizzo IP deve essere preconfigurato dall'utente dall'installazione di OVA eseguita in precedenza.



Management Network

The Management Network is the main network connection used for reaching the DCNM web user interface. When High Availability is enabled, 3 IP addresses are required on this network.

Management IPv4 Address *

Enter a valid IPv4 address along with prefix, for example: 10.10.10.2/24

172.18.118.56/24

Management Network Default IPv4 Gateway*

172.18.118.1

Out-of-Band Network

The Out-of-Band Network provides connectivity to the device management ports (typically mgmt0). When High Availability is enabled, 3 IP addresses are required on this network.

IPv4 Address *

Enter a valid IPv4 address along with prefix, for example: 1.0.0.2/8

192.168.128.56/24

Gateway IPv4 Address

Gateway for the Out-of-Band Network

192.168.128.1

IPv6 Address

Enter a valid IPv6 address along with prefix, for example: 2001:db8:abcd:0012::0/96

DNS Server Address

If no value is provided, it will be set to Out-of-Band IPv4 address.

Only IPv4 addresses are accepted.

192.168.128.56

Passaggio 8. Configurare la rete in banda. La rete In-Band viene utilizzata per applicazioni come Endpoint Locator, che richiede la connettività della porta del pannello anteriore ai 9K della struttura per funzionare come sessione BGP (Border Gateway Protocol) stabilita tra DCNM e 9K.

In-Band Network

The In-Band Network provides reachability to the devices via the front-panel ports. When High Availability is enabled, 3 IP addresses are required on this network.

IPv4 Address

Enter a valid IPv4 address along with prefix, for example: 2.0.0.2/8

192.168.128.57/24

Gateway IPv4 Address

Gateway for the In-Band Network

192.168.128.1

Passaggio 9. Configurare la rete di servizi applicativi interni —

Per iniziare con DCNM versione 11.0, DCNM supporta Application Framework (AFW) con DCNM LAN OVA/ISO Installation. Questa struttura utilizza Docker per orchestrare le applicazioni come microservizi in ambienti cluster e non cluster per realizzare un'architettura con scalabilità orizzontale.

Altre applicazioni fornite per impostazione predefinita con DCNM sono Endpoint Locator, Watch Tower, plug-in Virtual Machine Manager, Config Compliance e così via. AFW si occupa della gestione del ciclo di vita di queste applicazioni, fornendo anche rete, storage, autenticazione, sicurezza, ecc. AFW gestisce inoltre la distribuzione e il ciclo di vita delle applicazioni di Network Insights, ovvero NIR e NIA. Questa subnet è destinata ai servizi Docker quando NIA/NIR è abilitato.

Le modalità di installazione di NIA/NIR sono descritte nella sezione Operazioni del giorno 2.

Internal Application Services Network

The Internal Application Services Network is used internally.

IPv4 Subnet*

Enter a valid IPv4 subnet with prefix, for example: 172.17.0.0/20. Prefix length must be 20 to 22.

172.17.0.0/20

Nota: Questa subnet non deve sovrapporsi alle reti assegnate alle interfacce eth0/eth1/eth2 assegnate a DCNM e ai nodi di elaborazione. Inoltre, questa subnet non deve sovrapporsi agli IP allocati agli switch o ad altri dispositivi gestiti da DCNM. La subnet scelta deve rimanere coerente durante l'installazione dei nodi primari e secondari DCNM (in caso di distribuzione HA nativa).

Passaggio 10. Esaminare e confermare tutti i dettagli di configurazione e avviare l'installazione.

Please review the configuration details

Installation mode	LAN Fabric
Fully Qualified Host Name	dcg-rtp-dcnm-fab.cisco.com
DNS Server Address	64.102.6.247
NTP Server Name	172.18.108.15
Management Network IP Address	172.18.118.56/24
Management Network Default Gateway	172.18.118.1
Management Network IPv6 Address	
Management Network Default IPv6 Gateway	
Out-of-Band Network IP Address	192.168.128.56/24
Out-of-Band Network IPv6 Address	
Out-of-Band Network DNS Server Address	192.168.128.56
Out-of-Band Gateway IP Address	192.168.128.1
In-Band Network IP Address	192.168.128.57/24
In-Band Gateway IP Address	192.168.128.1
Internal App Services IP Subnet	172.17.0.0/20
Administration Password	*******
Start inst	allation

Passaggio 11. Una volta completata l'installazione di DCNM, accedere alla GUI (indirizzo IP o nome host configurato in precedenza).

Implementazione del primo fabric: fabric RTP

Passaggio 1. Nell'interfaccia utente grafica di DCNM, passare a **Fabric Builder. Controllo > Fabric > Fabric Builder** per creare il primo fabric.



Passaggio 2. Fare clic su **Create Fabric** e compilare i moduli necessari per la rete. Easy Fabric è il modello corretto per la distribuzione VXLAN EVPN locale:



Passaggio 3. Rispondere ai requisiti relativi a struttura, sovrapposizione, vPC, replica, risorse e così via.

In questa sezione vengono descritte tutte le impostazioni di sovrapposizione, sovrapposizione, vPC, replica e così via richieste tramite DCNM. Ciò dipende dallo schema di indirizzamento della rete, dai requisiti, ecc. In questo esempio, la maggior parte dei campi viene lasciata come predefinita. L2VNI e L3VNI sono stati modificati in modo tale che gli L2VNI iniziano con 2 e gli L3VNI iniziano con 3 per facilitare la risoluzione dei problemi in seguito. Insieme ad altre funzioni è abilitato anche il rilevamento dell'inoltro bidirezionale (BFD).

Add Fabric

* Fabric Template : Easy_Fabric_11_1 General Replication vPC Advanced Resources Manageability Bootstrap Configuration Backup	
General Replication vPC Advanced Resources Manageability Bootstrap Configuration Backup	
General Replication vPC Advanced Resources Manageability Bootstrap Configuration Backup	
* BGP ASN 65534 (2) 1-4294967295 1-65535[.0-65535]	
* Fabric Interface Numbering p2p V @ Numbered(Point-to-Point) or Unnumbered	
* Underlay Subnet IP Mask 30	
* Link-State Routing Protocol ospf 🛛 🔍 🚱 Supported routing protocols (OSPF/IS-IS)	
* Route-Reflectors	
* Anycast Gateway MAC 1010.0000.00aa ② Shared MAC address for all leafs (xxxx.xxxx.xxxx)	
NX-OS Software Image Version	
Add Fabric	
* Fabric Name · RTP-EVPN-Fabric	
* Fabric Template : Easy Fabric 11 1	
General Replication vPC Advanced Resources Manageability Bootstrap Configuration Backup	
Manual Underlay IP Address 🦳 🙆 Checking this will disable Dynamic Underlay IP Address Allocations	
Allocation Allocation To the angle of the state of the st	
Range	
* Underlay VTEP Loopback IP Range 10.1.1.0/22	
* Underlay RP Loopback IP Range 10.254.254.0/24 Anycast or Phantom RP IP Address Range Address range to assign Numbered and Peer Link SVI IP	3
* Underlay RP Loopback IP Range 10.254.254.0/24 20100.29000 Anycast or Phantom RP IP Address Range Address range to assign Numbered and Peer Link SVI IP Address range to assign Numbered and Peer Link SVI IP Overlay Network Identifier Range 20000.29000 Overlay Network Identifier Range (Min:1_May:16727214)	
 * Underlay RP Loopback IP Range * Underlay Subnet IP Range * Underlay Subnet IP Range * Layer 2 VXLAN VNI Range 20000-29000 20000-39000 20000-39000 20000-39000 20000-39000 20000-39000 20000-39000 20000-39000 	
 * Underlay RP Loopback IP Range * Underlay Subnet IP Range * Underlay Subnet IP Range * Layer 2 VXLAN VNI Range 20000-29000 * Layer 3 VXLAN VNI Range * Network VLAN Range 2000-29090 * Per Switch Overlay Network VLAN Range (Min:2, Max:39 	67)
* Underlay RP Loopback IP Range 10.254.254.0/24 ② Anycast or Phantom RP IP Address Range * Underlay Subnet IP Range 10.4.1.0/16 ③ Address range to assign Numbered and Peer Link SVI IP: * Layer 2 VXLAN VNI Range 20000-29000 ④ Overlay Network Identifier Range (Min:1, Max:16777214) * Layer 3 VXLAN VNI Range 30000-39000 ④ Overlay VRF Identifier Range (Min:1, Max:16777214) * Network VLAN Range 2300-2999 ④ Per Switch Overlay Network VLAN Range (Min:2, Max:39 * VRF VLAN Range 3000-3399 ④ Per Switch Overlay VRF VLAN Range (Min:2, Max:3967)	67)
* Underlay RP Loopback IP Range 10.254.254.0/24 ② Anycast or Phantom RP IP Address Range * Underlay Subnet IP Range 10.4.1.0/16 ③ Address range to assign Numbered and Peer Link SVI IP: * Layer 2 VXLAN VNI Range 20000-29000 ④ Overlay Network Identifier Range (Min:1, Max:16777214) * Layer 3 VXLAN VNI Range 30000-39000 ④ Overlay VRF Identifier Range (Min:1, Max:16777214) * Network VLAN Range 2300-2999 ④ Per Switch Overlay Network VLAN Range (Min:2, Max:39 * VRF VLAN Range 3000-3399 ④ Per Switch Overlay VRF VLAN Range (Min:2, Max:3967) * Subinterface Dot1q Range 2-511 ④ Per Border Dot1q Range For VRF Lite Connectivity (Min:2)	67) ?, Max:511)
* Underlay RP Loopback IP Range 10.254.254.0/24 ② Anycast or Phantom RP IP Address Range * Underlay Subnet IP Range 10.4.1.0/16 ③ Address range to assign Numbered and Peer Link SVI IPA * Layer 2 VXLAN VNI Range 20000-29000 ④ Overlay Network Identifier Range (Min:1, Max:16777214) * Layer 3 VXLAN VNI Range 30000-39000 ④ Overlay VRF Identifier Range (Min:1, Max:16777214) * Network VLAN Range 2300-2999 ④ Per Switch Overlay Network VLAN Range (Min:2, Max:3967) * VRF VLAN Range 3000-3399 ④ Per Switch Overlay VRF VLAN Range (Min:2, Max:3967) * Subinterface Dot1q Range 2-511 ④ Per Border Dot1q Range For VRF Lite Connectivity (Min:2 * VRF Lite Deployment Manual ♥ Ø VRF Lite Inter-Fabric Connection Deployment Options	67) ?, Max:511)
* Underlay RP Loopback IP Range 10.254.254.0/24 ② Anycast or Phantom RP IP Address Range * Underlay Subnet IP Range 10.4.1.0/16 ③ Address range to assign Numbered and Peer Link SVI IP. * Layer 2 VXLAN VNI Range 20000-29000 ④ Overlay Network Identifier Range (Min:1, Max:16777214) * Layer 3 VXLAN VNI Range 30000-39000 ④ Overlay VRF Identifier Range (Min:1, Max:16777214) * Network VLAN Range 2300-2999 ④ Per Switch Overlay Network VLAN Range (Min:2, Max:39 * VRF VLAN Range 3000-3399 ④ Per Switch Overlay VRF VLAN Range (Min:2, Max:3967) * Subinterface Dot1q Range 2-511 ④ Per Border Dot1q Range For VRF Lite Connectivity (Min:2, Max:3967) * VRF Lite Deployment Manual ⑦ VRF Lite Inter-Fabric Connection Deployment Options * VRF Lite Subnet IP Range 10.33.0.0/16 ③ Address range to assign P2P DCI Links	67) ?, Max:511)

Add Fabric

* Fabric Name :	RTP-EVPN-Fabr	ic								
* Fabric Template :	Easy_Fabric_11	_1	▼							
General Replicat	ion vPC	Advanced	Resources	Man	ageability	Bootstrap	Configuration Backup			
General Replicat		Auvanceu	Resources	Iviali	ageability	Dootstrap	Comgulation Backup			
* vPC	Peer Link VLAN	3600			VLAN for vPC Peer Link SVI (Min:2, Max:3967)					
* vPC Peer Ke	* vPC Peer Keep Alive option			management 🛛 🔻			② Use vPC Peer Keep Alive with Loopback or Management			
* vPC Auto	Recovery Time	360			Auto Recovery Time In Seconds (Min:240, Max:3600)					
* vPC Dela	ay Restore Time	150			VPC Delay Restore Time For vPC links in seconds (Min:1, Max:3600)					
vPC Peer Link Port C	vPC Peer Link Port Channel Number 500			Port Channel ID for vPC Peer Link (Min:1, Max:4096)						
vPC IPv6 I	ND Synchronize	🗹 🕜 Enable I	IPv6 ND synchron	ization b	etween vPC p	peers				
vP	C advertise-pip	🗌 🕜 For Prin	nary VTEP IP Adv	ertiseme	ent As Next-Ho	op Of Prefix Route	25			

>

Add Fabric

* Fat	oric Name :	RTP-EVPN-Fa	bric								
* Fabric	Template :	Easy_Fabric_1	1_1	•							
General	Replicati	on vPC	Advanced	Resources	Man	ageability	Bootstrap	Configuration Backup			
	* Ne	VRF Template	Default_VRF_U Default_Network	niversal <_Universal	v	Default Default	Overlay VRF Temj Overlay Network 1	olate For Leafs Template For Leafs			
	* VRF Exte	nsion Template	Default_VRF_E	xtension_Universal		🕜 Default	Overlay VRF Tem	plate For Borders			
* N	letwork Exte	nsion Template	Default_Network	k_Extension_Unive	ersa 🔻	@ Default	Overlay Network 1	Template For Borders			
		Site Id	65534			」 ─ ─ ─ ─ ─ ─ ─ ─ ─ ─ ─ ─ ─ ─ ─ ─ ─ ─ ─					
* Underlay Routing Loopback Id			0			Ø 0-512					
*	* Underlay VTEP Loopback Id 1					0-512					
* Link	* Link-State Routing Protocol Tag UNDERLAY				Routing Process Tag (Max Size 20)						
		OSPF Area Id	0.0.0.0			OSPF A	rea Id in IP addres	ss format			
E	Enable OSPF	Authentication	0								
	OSPF Authe	entication Key ID				0-255					
	OSPF Au	thentication Key				3DES E	incrypted				
	Enable IS-I	S Authentication	0								
IS-IS A	uthentication	Keychain Name				0					
	IS-IS Authe	entication Key ID				0-65535	5				
	IS-IS Au	thentication Key				Cisco Ty	pe 7 Encrypted				
	* Powe	er Supply Mode	ps-redundant			🕜 Default i	Power Supply Mod	de For The Fabric			
		* CoPP Profile	strict		▼	Pabric V provided whe	Vide CoPP Policy. en 'manual' is sele	Customized CoPP policy shou cted	ıld be		
	Enab	le VXLAN OAM	For Ope	erations, Administra	ation, ar	nd Managemei	nt Of VXLAN Fabr	ics			
	Enabl	e Tenant DHCP									
	0	Enable BFD	Disable			Q Switch	Cleanup Without D	aload When Prospers Conferm	20		
	Greenfield (Autor Option				Switch	oleanup without R	ooaa wiieli rieseiveconiig=i			

Passaggio 4. In una configurazione bootstrap, configurare l'intervallo di indirizzi DHCP che DCNM deve comunicare agli switch dell'infrastruttura durante il processo POAP. Configurare anche un gateway predefinito corretto (esistente). Al termine, fare clic su **Save** (Salva) per passare all'aggiunta di switch al fabric.

Edit Fabric

* Fabric Name :	RTP-EVPN-Fab								
* Fabric Template :	Easy_Fabric_11	_1	▼						
General Replicat	ion vPC	Advanced	Resources	Manageability	Bootstrap	Configuration Backup			
Ei Enable Loc	nable Bootstrap al DHCP Server	✓ ② Automa✓ ③ Automa	atic IP Assignment atic IP Assignment	For POAP For POAP From Loca	I DHCP Server				
* DHCP Scop	e Start Address	192.168.128.10	00	🕐 Start Ad	dress For Switch	Out-of-Band POAP			
* DHCP Sco	pe End Address	192.168.128.11	0	End Add	Ind Address For Switch Out-of-Band POAP				
* Switch Managemen	t Default Gate	192.168.128.1		Default	Gateway For Mgi	mt VRF On The Switch			
* Switch Managemen	nt Subnet Prefix	24		Prefix F	or Mgmt0 Interfac	ce On The Switch (Min:8, Max:30)			
						Save			

Aggiunta di switch al fabric

Passaggio 1. Passare a **Controllo > Fabric > Fabric** Builder, quindi selezionare il fabric. Nel pannello a sinistra, fare clic su **Add Switches** (Aggiungi switch), come mostrato nell'immagine.



Data Center Network Manager

Fabric Bu	ilder: RTP-	-EVPN-F	abric
-----------	-------------	---------	-------



Èpossibile rilevare gli switch **sia utilizzando un valore di inizializzazione IP** (ossia l'indirizzo IP mgmt0 di ciascuno switch deve essere configurato manualmente) sia **tramite** il protocollo **POAP** e configurare automaticamente con DCNM tutti gli indirizzi IP mgmt0, la gestione VRF, ecc. Per questo esempio verrà utilizzato il protocollo POAP.

Passaggio 2. Dopo aver individuato gli switch di proprio interesse, immettere l'indirizzo IP e il nome host desiderati da utilizzare con DCNM, immettere Admin PW, quindi fare clic su **Bootstrap**, come mostrato nell'immagine.

Disc	Discover Existing Switches PowerOn Auto Provisioning (POAP)											
⑦ Pleas	Please note that POAP can take anywhere between 5 and 15 minutes to complete!											
+ 🖻 🄄 * Admin Password ······· * Confirm Admin Password ······ 🙆												
	Serial Number	Model	Version	IP Address	Hostname	Gateway						
	FDO213001M0	N9K-C9372TX	7.0(3)I4(7)			192.168.128.1/24						
\checkmark	FDO21331SLK	N9K-93180YC-EX	7.0(3)17(6)	192.168.128.102	rtp-seoul-bb11	192.168.128.1/24						

Un log di avvio corretto dovrebbe apparire come mostrato nell'immagine dalla console dello switch.

2019 Jun 19 14:58:51 switch %\$ VDC-1 %\$ %POAP-2-POAP_DHCP_DISCOVER_START: [FD021331SLK-70:7D:B9:4A:72:21] - POAP DHCP Discover
phase started
2019 Jun 19 14:59:12 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:70:B9:4A:72:21] - Start DHCP v4 session
2019 Jun 19 14:59:12 switch %\$ VDC-1 %\$ %POAP-2-POAP_DHCP_DISCOVER_START: [FD021331SLK-70:7D:B9:4A:72:21] - POAP DHCP Discover
phase started
2019 Jun 19 14:59:37 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:7D:B9:4A:72:21] - Using DHCP, information received over
mgmt0 from 192.168.128.57
2019 Jun 19 14:59:37 switch %\$ VDC-1 %\$ %POAP-2-POAP_INF0: [FD021331SLK-70:7D:B9:4A:72:21] - Assigned IP address: 192.168.128.102
2019 Jun 19 14:59:37 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:7D:B9:4A:72:21] - Netmask: 255.255.255.0
2019 Jun 19 14:59:37 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:7D:B9:4A:72:21] - DNS Server: 64.102.6.247
2019 Jun 19 14:59:37 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:7D:B9:4A:72:21] - Default Gateway: 192.168.128.1
2019 Jun 19 14:59:37 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:7D:B9:4A:72:21] - Script Server: 192.168.128.56
2019 Jun 19 14:59:37 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:7D:B9:4A:72:21] - Script Name: poap_dcnm.pv
2019 Jun 19 14:59:38 switch %\$ VDC-1 %\$ %POAP-2-POAP INFO: [FD0213315]K-70:70:89:44:72:21] - Using DHCP, information received over
Mgm of Tom 19 14-50-38 switch %\$ VDC-1 %\$ %DAD-2-DAD TNEO. FEND133151K-70.7D.80.44.77.71] - Assigned TP address 192 168 128 182
2010 Jun 10 14.50.20 suiden w toch a ward-troug into, [ED02133151K-10.00.05.4.77.10.4.77.10] - Assigned if wantes, 152.50 Jul
2019 Juli 19 14.55.30 Switch & VOC 1 & WOAR 2 POLETING, [POLISSISLATO.D.55.44.72.21] - Netimusk. 253.253.253.0
2019 Jun 19 14:39:30 SWITCH X3 VUC-1 X3 XFUAP-2-FUAP-LINU: [FU0213315LK-70:70:B9:4A:72:22] - UNS SETVET: 04.100.0.247
2019 Jun 19 14:59:58 Switch X3 VUC-1 X3 XF0AP-2-FVAP_INFU: [FU02153154K-70:70:89:4A:72:22] - Default Vateway: 192.186.128.1
2019 Jun 19 14:59:38 switch X3 VUC-1 X3 X#V0AP-2-POAP_INFO: [FU0213315LK-70:70:B9:4A:72:21] - Script Server: 192.168.128.56
2019 Jun 19 14:59:38 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:70:B9:4A:72:21] - Script Name: poap_acnm.py
2019 Jun 19 14:59:48 switch %\$ VDC-1 %\$ %POAP-Z-POAP_INFO: [FD021331SLK-70:7D:B9:4A:7Z:Z1] - The POAP Script download has started
2019 Jun 19 14:59:48 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:7D:B9:4A:72:21] - The POAP Script is being downloaded
from [copy tftp://192.168.128.56/poap_dcnm.py bootflash:scripts/script.sh vrf management]
2019 Jun 19 14:59:49 switch %\$ VDC-1 %\$ %POAP-2-POAP_SCRIPT_DOWNLOADED: [FD021331SLK-70:7D:B9:4A:72:21] - Successfully downloaded
POAP script file
2019 Jun 19 14:59:49 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:7D:B9:4A:72:21] - Script file size 100623, MD5 checksum
d44d85cd6433a6efb6467faa17396933
2019 Jun 19 14:59:49 switch %\$ VDC-1 %\$ %POAP-2-POAP_INFO: [FD021331SLK-70:7D:B9:4A:72:21] - MD5 checksum received from the script
file is d44d85cd6433a6efb6467faa17396933
2019 Jun 19 14:59:49 switch %\$ VDC-1 %\$ %POAP-2-POAP_SCRIPT_STARTED_MD5_VALIDATED: [FD021331SLK-70:7D:B9:4A:72:21] - POAP_script
execution started(MD5 validated)
2019 Jun 19 14:59-56 switch % VDC-1 % \$915FR-1-SYSTEM MSG· _ CLT · show license host-id - scrint sh
2019 Jun 19 14:55:56 Servitch % VDC-1 % WORK 1-SYSTEM NGC _ CLY , and contail number (FD02131) K _ scrint sh
2019 Jun 19 14:55:56 Service as VOC-1 as AUGER-1-STOTEM NGG: SUPERO13315181 - THEO: doubles to be service as a service of the service as the service of the
2013 Juli 13 14.33.30 SHILLI NA VOL-1 NA NOSCH-1-31312H_MSG. SMETDOLISSISLAJ - INFOLORVICE CYPE IS 115K - SCHIPLISH
2010 Jun 10 14.50.56 autoch VI VDC 1 VI MISED 1 SVETEN NCC. S /VIED0212215147 - THEO. david so tuno is poly - seriest sh
2019 Jun 19 14:39:50 SWITCH X3 VUC-1 X3 XUSEK-1-5751EM_MSU: 5/N[FU0213515LK] - INFU:device type is now - script sh
2019 Jun 19 14:59:56 Switch X3 VUC-1 X3 XUSEK-1-5751EM_MSG: 5/N[FU0213315LK] - INFU:device os version is - script.sn
2019 Jun 19 14:59:56 switch X3 VUC-1 X3 XUSER-1-STSIEM_MSG: S/N[FU021331SLK] - INFU: check free space - Script.sh
2019 Jun 19 14:59:57 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD0213315LK] - INFO: free space is 34643592 kB - script.sh
2019 Jun 19 14:59:57 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - Get and set interface default - script.sh
2019 Jun 19 14:59:57 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : show run inc breakout - script.sh
2019 Jun 19 14:59:58 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : show run int inc Ethernet - script.sh
2019 Jun 19 14:59:59 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: Ready to copy protocol scp, host
192.168.128.56, source /var/lib/dcnm/dcnm-server-list.cfg vrf management user poap password ***** - script.sh
2019 Jun 19 14:59:59 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : terminal dont-ask ; terminal password ***** ;
copy scp://poap@192.168.128.56/var/lib/dcnm/dcnm-server-list.cfg dcnm-server-list.cfg vrf management - script.sh
2019 Jun 19 15:00:00 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/NFFD021331SLK] - INFO: Get Device Image Config File - script.sh

2019 Jun 19 15:00:01 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: create_image_conf - script.sh 2019 Jun 19 15:00:01 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: Ready to copy protocol scp, host 192.168.128.56, source /var/lib/dcnm/licenses/device-license.idx vrf management user poap password ***** - script.sh 2019 Jun 19 15:00:01 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : terminal dont-ask ; terminal password ***** ; copy scp://poap@192.168.128.56/var/lib/dcnm/licenses/device-license.idx device-license.idx vrf management - script.sh 2019 Jun 19 15:00:02 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: device license index does not exist, no device licenses will be downloaded - script.sh 2019 Jun 19 15:00:02 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD0213315LK] - INFO: Ready to copy protocol scp, host 192.168.128.56, source /var/lib/dcnm/FD021331SLK/device-config vrf management user poap password ***** - script.sh 2019 Jun 19 15:00:02 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : terminal dont-ask ; terminal password ***** ; copy scp://poap@192.168.128.56/var/lib/dcnm/FD021331SLK/device-config device-config vrf management - script.sh 2019 Jun 19 15:00:01 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD0213315LK] - INFO: Get Device Recipe - script.sh 2019 Jun 19 15:00:01 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: removing tmp file /bootflash/devicerecipe.cfg - script.sh 2019 Jun 19 15:00:01 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: create_image_conf - script.sh 2019 Jun 19 15:00:01 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: Ready to copy protocol scp, host 192.168.128.56, source /var/lib/dcnm/licenses/device-license.idx vrf management user poap password ***** - script.sh 2019 Jun 19 15:00:01 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : terminal dont-ask ; terminal password ***** ; copy scp://poap@192.168.128.56/var/lib/dcnm/licenses/device-license.idx device-license.idx vrf management - script.sh 2019 Jun 19 15:00:02 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: device license index does not exist, no device licenses will be downloaded - script.sh 2019 Jun 19 15:00:02 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: Ready to copy protocol scp, host 192.168.128.56, source /var/lib/dcnm/FD021331SLK/device-config vrf management user poap password ***** - script.sh 2019 Jun 19 15:00:02 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : terminal dont-ask ; terminal password ***** ; copy scp://poap@192.168.128.56/var/lib/dcnm/FD021331SLK/device-config device-config vrf management - script.sh 2019 Jun 19 15:00:04 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: Completed Copy of Config File - script.sh 2019 Jun 19 15:00:04 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: Split config invoked.... - script.sh 2019 Jun 19 15:00:04 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - Found an interface line in config:interface mgmt0 script.sh 2019 Jun 19 15:00:04 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - Adding interface defaults - no shut on all interfaces - script.sh 2019 Jun 19 15:00:04 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: Split config is complete - script.sh 2019 Jun 19 15:00:04 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: Setting the boot variables - script.sh 2019 Jun 19 15:00:04 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : copy running-config startup-config · script.sh 2019 Jun 19 15:00:08 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : copy poap_2.cfg scheduled-config - script.sh 2019 Jun 19 15:00:08 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: Copying the scheduled cfg done - script.sh 2019 Jun 19 15:00:08 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - INFO: Configuration successful - script.sh 2019 Jun 19 15:00:08 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - FINISH: Clean up files. - script.sh 2019 Jun 19 15:00:08 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : delete device-config - script.sh 2019 Jun 19 15:00:09 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : delete poop_1.cfg - script.sh 2019 Jun 19 15:00:09 switch %\$ VDC-1 %\$ %USER-1-SYSTEM_MSG: S/N[FD021331SLK] - CLI : delete poop_2.cfg - script.sh 2019 Jun 19 15:00:12 switch %\$ VDC-1 %\$ %POAP-2-POAP_SCRIPT_EXEC_SUCCESS: [FD021331SLK-70:7D:B9:4A:72:21] - POAP script execution 2019 Jun 19 15:00:13 switch %\$ VDC-1 %\$ %POAP-2-POAP_RELOAD_DEVICE: [FD021331SLK-70:7D:B9:4A:72:21] - Reload device 2019 Jun 19 15:00:15 switch %\$ VDC-1 %\$ %PLATFORM-2-PFM_SYSTEM_RESET: Manual system restart from Command Line Interface 2019 Jun 19 15:04:05 rtp-seoul-bb11 %\$ VDC-1 %\$ %ASCII-CFG-2-CONF_CONTROL: System ready Copy complete, now saving to disk (please wait)... Copy complete. Auto provisioning User Access Verification

Passaggio 3. Prima di distribuire la configurazione per l'intera infrastruttura, verificare di aver configurato in precedenza DCNM con le credenziali del dispositivo. All'accesso, sulla GUI dovrebbe essere visualizzato un popup. In caso contrario, è sempre possibile accedervi tramite **Amministrazione > Gestione credenziali > Credenziali LAN**.

Nota: Se mancano le credenziali del dispositivo, DCNM non riesce a eseguire il push della configurazione agli switch.

When changing the device configuration DCNM uses the device credentials provided by the user. You have not provided the LAN switch credentials yet. Do you want to set the LAN switch credentials now?
Do not show this message again.
Yes No

Administration / Credentials Management / LAN Credentials

Default Credentials

Default credentials will be used when changing device configuration. You can override the default credentials by specifying credentials for each of the devices in the Switch Table below.								
DCNM uses individual sv	DCNM uses individual switch credentials in the Switch Table. If the Username or Password column is empty in the Switch Table, the default credentials will be used.							
* User Name	admin							
* Password	•••••							
* Confirm Password	•••••							
Save Clear								

Distribuire la configurazione del fabric

Passaggio 1. Dopo aver individuato tutti gli switch per il fabric specificato seguendo gli stessi passaggi, selezionare **Controllo > Fabric > Fabric Builder > <fabric selezionato>**. Visualizzare gli switch e i relativi collegamenti qui. Fare clic su **Salva e distribuisci**.



Passaggio 2. Nella finestra **Config Deployment** (Distribuzione configurazione), è possibile visualizzare il numero di linee di configurazione per ciascun push DCNM dello switch. Se lo si desidera, è possibile visualizzare in anteprima la configurazione e confrontare prima e dopo:

Config Deployment

Step 1. Configuration Preview Step 2. Configuration Deployment Status								
Switch Name	IP Address	Switch Serial	Preview Config	Status	Re-sync	Progress		
rtp-seoul-bb12	192.168.128.106	FDO21332CS5	481 lines	Out-of-sync		100%		
rtp-seoul-bb11	192.168.128.102	FDO21331SLK	469 lines	Out-of-sync		100%		
rtp-sapporo-bb12	192.168.128.105	FDO21302J5Z	464 lines	Out-of-sync	-	100%		
rtp-sug-sp-bb12	192.168.128.104	FGE21332GQ9	314 lines	Out-of-sync		100%		
rtp-sapporo-bb11	192.168.128.101	FDO213001M0	464 lines	Out-of-sync		100%		
rtp-sug-sp-bb11	192.168.128.100	FGE21332H1D	313 lines	Out-of-sync		100%		

Verificare che lo stato di tutti gli switch sia COMPLETED e 100% senza errori. In caso di errori, risolverli uno alla volta (per esempi, vedere la sezione *Problemi rilevati durante la distribuzione*)

onfig Deplo	yment			
Step 1. Configura	tion Preview > S	Step 2. Configuration	Deployment Status	
Switch Name	IP Address	Status	Status Description	Progress
tp-seoul-bb12	192.168.128.106	COMPLETED	No Commands to execute.	100%
tp-seoul-bb11	192.168.128.102	COMPLETED	No Commands to execute.	100%
tp-sug-sp-bb12	192.168.128.104	COMPLETED	No Commands to execute.	100%
tp-sapporo-bb11	192.168.128.101	COMPLETED	Deployed successfully	100%
tp-sug-sp-bb11	192.168.128.100	COMPLETED	Deployed successfully	100%
tp-sapporo-bb12	192.168.128.105	COMPLETED	Deployed successfully	100%

Passaggio 3. (Facoltativo) A questo punto, è possibile accedere ai dispositivi e usare qualsiasi comando **show run** CLI per verificare che la configurazione sia stata sottoposta a push da DCNM.

Esempio:

rtp-sug-sp-bb11# show run bgp
!Command: show running-config bgp
!Time: Wed Jun 19 17:28:37 2019
version 7.0(3)17(5) Bios:version 08.34
feature bgp
router bgp 65534
router-id 10.1.0.11
neignbor 10.1.0.7
remote-as 05554
address-family 12/00 evon
send-community
send-community extended
route-reflector-client
neighbor 10.1.0.8
remote-as 65534
update-source Loopback0
adaress-ramily L2vpn evpn
send-community extended
route-reflector-client
neighbor 10.1.0.9
remote-as 65534
update-source loopback0
address-family l2vpn evpn
send-community
route-reflector-client
neighbor 10.1.0.10
remote-as 65534
update-source loopback0
address-family l2vpn evpn
send-community
send-community extended
route-reflector-client

Implementazione del secondo fabric - SJ

Eseguire la stessa procedura descritta in precedenza per il fabric RTP utilizzando valori diversi per BGP AS, ecc.

Passaggio 1. Passare a Controllo > Fabric > Fabric Builder > Crea fabric > Denominalo!

In questa sezione vengono descritte tutte le impostazioni di sovrapposizione, sovrapposizione, vPC, replica e così via necessarie. Ciò dipende dallo schema di indirizzamento della rete, dai requisiti, ecc.

Nota: Se si utilizza un sistema multisito, l'indirizzo MAC di Anycast Gateway deve corrispondere all'altro fabric. Successivamente, non saranno supportati altri MAC di Anycast Gateway. Questo è stato corretto in seguito durante la sezione Distribuzione su più siti (non mostrata nell'articolo per brevità).

General Replication vPC		Advanced Resources Ma		nageability	Bootstrap	Configuration Backup				
	*	BGP ASN	65535			2 1-4294967295 1-65535[.0-65535]				
*	Fabric Interface N	umberina	p2p		V	Numbe	red(Point-to-Poir	t) or Unnumbered		
	* Underlay Subne	t IP Mask	30		V	 Mask fo	or Underlav Subr	et IP Range		
*.	ink-State Pouting	Protocol	locof				orted routing prot	ocols (OSPE/IS-IS)		
	* Dauta D						r of spinos acting	as Pouto Pofloctors		
	Koute-h	teflectors	Z				r or spiries acung	as Roule-Reliectors		
	* Anycast Gate	way MAC	2020.0000.00b	b		O Shared S	MAC address fo	r all leafs (xxxx.xxxx.xxxx)		
NX-	OS Software Imag	e Version				Images Car	mage Version Cl Be Uploaded Fr	neck Enforced On All Switches. Tom Control:Image Upload		
General Replication vPC			Advanced	Resources	Man	ageability	Bootstrap	Configuration Backup		
	* Replicat	ion Mode	Multicast		▼	Replication	n Mode for BUM	Traffic		
	* Multicast Grou	n Subnet	239.2.2.0/25			2 Multicast address with prefix 16 to 30				
Enable Ter	nant Routed Multica	ast (TRM)	For Overlay Multicast Support In VXLAN Fabrics							
Default	t MDT Address for T	RM VRFs				IPv4 Multicast Address				
	* Rendezvo	us-Points	2			Number of spines acting as Rendezvous-Point (RP)				
	*	RP Mode	asm			Multicast	RP Mode			
	* Underlay RP Loc	opback Id	254			0.512				
Underlay Primary RP Loopback Id						🕐 0-512, Pr	imary Loopback E	idir-PIM Phantom RP		
	Underla RP Lo	y Backup opback Id				🕜 0-512, Fa	llback Loopback I	Bidir-PIM Phantom RP		
	Underlay Secon RP Lo	d Backup opback Id				🕜 0-512, Se	cond Fallback Lo	opback Bidir-PIM Phantom RP		
	Underlay Thir RP Lo	d Backup opback Id				🕐 0-512, Th	ird Fallback Loop	back Bidir-PIM Phantom RP		

Passaggio 2. Configurare la sezione Bootstrap come descritto in precedenza. Spostarsi di nuovo tra **Aggiungi switch**. Una volta individuate tutte le configurazioni, fare clic su **Salva e distribuisci** per distribuirle. Tutto questo è stato trattato nella sezione RTP Fabric Deployment (omessa qui per brevità).

Config Deployment

Step 1. Configuration Preview Step 2. Configuration Deployment Status

Switch Name	IP Address	Status	Status Description	Progress
sjc-hom-bb15	192.168.254.103	COMPLETED	No Commands to execute.	100%
sjc-davos-bb14	192.168.254.106	COMPLETED	No Commands to execute.	100%
sjc-hom-bb14	192.168.254.107	COMPLETED	No Commands to execute.	100%
sjc-davos-bb15	192.168.254.102	COMPLETED	No Commands to execute.	100%
sjc-t2-tep-bb14	192.168.254.105	COMPLETED	No Commands to execute.	100%
sjc-t2-tep-bb15	192.168.254.101	COMPLETED	No Commands to execute.	100%
sjc-t2-sp-bb15	192.168.254.100	COMPLETED	Deployed successfully	100%
sjc-t2-sp-bb14	192.168.254.104	COMPLETED	Deployed successfully	100%

Topologia dal punto di vista di Fabric Builder alla fine.



In teoria, tutti gli switch dovrebbero essere visualizzati in verde con i relativi collegamenti. Questa immagine mostra i diversi colori di stato nella media DCNM.

Х



Passaggio 3. Una volta configurati e installati entrambi i fabric, assicurarsi di salvare la configurazione e il ricaricamento per rendere effettive le modifiche TCAM. Andare a **Controlli > Fabric > Fabric Builder > <fabric>**, quindi passare alla **vista tabulare**, come mostrato nell'immagine.

B cisco Data C	enter	Network Manager
Fabric Builder: SJ	-Fabric	-EVPN
Actions	-	
+ - 53	\sim	
■ Tabular view]	

Passaggio 4. Quindi, fare clic sul pulsante **di alimentazione** (questo comando ricarica tutti gli switch contemporaneamente):



Creazione di una rete (VLAN/L2VNI) e di VRF (L3VNI)

Passaggio 1. Passare a **Controllo > Fabric > Reti**, come mostrato nell'immagine.



Passaggio 2. Come mostrato nell'immagine, selezionare l'**ambito** per la modifica. Ad esempio, a quale fabric deve essere applicata questa configurazione?

SCOPE:	Data Center 🔻 🕜 admi	n 🎝
	🔻 🔚 Data Center	
	C RTP-EVPN-Fabric	_
	SJ-Fabric-EVPN	
	Default_LAN	
She	w All	Y

Passaggio 3. Fare clic sul segno +, come mostrato nell'immagine.

E	-iliali cisco	Data Cente	r Net	work Manager						SCOPE: SJ-F	abric-EVPN 🔻 🔞	admin 🕴	¢
N	etwork / VRF	Selection Ne	twork /	VRF Deployment							VRF View	Continue	
						F	abric Selected: SJ-Fal	bric-EVPN					
N	etworks										Selected 1 / Total 1	Ø¢.	,
	+ 🖊	X @ @								Show 2	All	• •	
	Netw	ork Name	•	Network ID	VRF Name	IPv4 Gateway/Subnet	IPv6 Gateway/Prefix	Status	VLAN ID				

Passaggio 4. DCNM assiste l'utente durante il processo di creazione dell'interfaccia virtuale dello switch (SVI) (o della VLAN L2 pura). Se in questa fase non viene creato alcun VRF, fare di nuovo clic sul pulsante + per passare temporaneamente alla procedura dettagliata VRF prima di procedere con le impostazioni SVI.

Create Network

 Network Information 		
* Network ID	20001	
* Network Name	Andrea_TestNetwork_20001	
* VRF Name	Andrea_VRF_RED +	
Layer 2 Only		
* Network Template	e Default_Network_Universal ▼	
* Network Extension Template	Default_Network_Extension_Univer	
VLAN ID	2300 Propose VLAN	
Create VRF		×
 VRF Information 		
* VRF ID	30000	
* VRF Name	Andrea_VRF_RED	
* VRF Template	e Default_VRF_Universal ▼	
* VRF Extension Template	Default_VRF_Extension_Universal	
 VRF Profile General Advanced VRF Int VRI 	RF Vlan Name If Description IF Description Test VRF for DCNM Deployment	
	Create	VRF

 Network Pr 	ofile		
Generate Multic	ast IP ①Please click only	v to generate a New Multicast Group Addre	ess and overide the default value!
General	IPv4 Gateway/NetMask	10.212.20.1/24	example 192.0.2.1/24
Advanced	IPv6 Gateway/Prefix	2001:db8::1/64	@ example 2001:db8::1/64
	Vlan Name	Test_Network_20001	If > 32 chars enable:system vlan long-name
	Interface Description	SVI 2300	0
	MTU for L3 interface	9216	68-9216 68-9216
	IPv4 Secondary GW1		example 192.0.2.1/24
	IPv4 Secondary GW2		② example 192.0.2.1/24

Queste funzioni possono essere configurate nella scheda Avanzate:

- Soppressione ARP
- Replica in ingresso
- Gruppo Multicast
- DCHP
- Tag route
- TRM
- Route-Target VNI L2
- Abilita gateway L3 al bordo

Passaggio 5. Fare clic su Continue (Continua) per distribuire la configurazione Network/VRF.

😑 🖞 Cata Center Network Manager 🕜 admin 🌣							
Network / VRF Selection Network / VRF Deployment Continue							
Fabric Selected: SJ-Fabric-EVPN							
Networks					Selected 1 / Total 1	Ω‡·	
+ / X C G						• •	
Network Name A Network ID VR	/RF Name IPv4 Gateway/Subnet	IPv6 Gateway/Prefix	Status	VLAN ID			
Andrea_TestNetwork_20001 20001 And	ndrea_VRF_RED 10.212.20.1/24	2001:db8::1/64	NA	2300			

Passaggio 6. Fare doppio clic su uno o più dispositivi nella visualizzazione della topologia (DCNM li visualizza automaticamente qui) per selezionarli per la configurazione applicabile. Fare clic su **Save** (Salva), come mostrato nell'immagine.

Netw	Vetwork Attachment - Attach networks for given switch(es)						X	
Fabric	Fabric Name: SJ-Fabric-EVPN							
Deploy	Deployment Options							
Select	the row and click on the ce	ll to edit a	nd save changes					
And	lrea_TestNetwork	_2000	1				_	
\checkmark	Switch		VLAN	Interfaces	CLI Freeform	Status		
	sjc-t2-tep-bb14		2300		Freeform config	NA		
\checkmark	sjc-t2-tep-bb15		2300		Freeform config	NA		
						Save		

Passaggio 7. Una volta selezionati, gli switch dovrebbero apparire blu (pronti per la distribuzione), come mostrato in questa immagine.





Nota: se si desidera verificare la configurazione per la CLI prima della distribuzione, è possibile fare clic su **Vista dettagliata** invece di **Distribuisci** e fare clic su **Anteprima** nella schermata successiva.

Quando la configurazione è applicata, gli switch diventano gialli e al termine tornano al verde.

Passaggio 8. (Facoltativo) È possibile accedere alla CLI per verificare la configurazione, se necessario (ricordare di utilizzare l'opzione expand-port-profile):

sjc-davos-bb14# show nve peers Interface Peer-IP State LearnType Uptime Router-Mac nvel 10.2.0.16 Up CP 00:00:34 00f6.638e.4fd5 sjc-davos-bb14# show nve vni Codes: CP - Control Plane DP - Data Plane SA - Suppress ARP UC - Unconfigured SU - Suppress Unknown Unicast Xconn - Crossconnect MS-IR - Multisite Ingress Replication Interface VNI Multicast-group State Mode Type [BD/VRF] Flags ---20001 239.2.2.0 Up CP L2 [2300] 30000 n/a Up CP L3 [andrea_vrf_red] nve1 nve1 sjc-davos-bb14# show nve vrf andrea_vrf_red VRF-Name VNI Interface Gateway-MAC andrea_vrf_red 30000 nve1 707d.b987.11a3 sjc-davos-bb14# show run int vlan 2300 expand-port-profile !Command: show running-config interface Vlan2300 expand-port-profile !Running configuration last done at: Mon Jun 24 15:07:05 2019 !Time: Mon Jun 24 15:08:13 2019 version 9.2(3) Bios:version 07.61 interface Vlan2300 description SVI 2300 no shutdown mtu 9216 vrf member andrea_vrf_red no ip redirects ip address 10.212.20.1/24 tag 12345 ipv6 address 2001:db8::1/64 tag 12345 no ipv6 redirects fabric forwarding mode anycast-gateway sjc-davos-bb14# show nve interface nve 1 detail Interface: nve1, State: Up, encapsulation: VXLAN VPC Capability: VPC-VIP-Only [notified] Local Router MAC: 707d.b987.11a3 Host Learning Mode: Control-Plane Source-Interface: loopback1 (primary: 10.2.0.14, secondary: 10.2.0.15) Source Interface State: Up Virtual RMAC Advertisement: No NVE Flags: Interface Handle: 0x49000001 Source Interface hold-down-time: 180 Source Interface hold-up-time: 30 Remaining hold-down time: 0 seconds Virtual Router MAC: 0200.0a02.000f Interface state: nve-intf-add-complete

Configurazione multisito

Per questa implementazione di Greenfield, l'infrastruttura MSD viene distribuita tramite peer diretto tra Border Gateway (BGW). In alternativa è possibile utilizzare un server di routing centralizzato, non descritto nel presente documento.

Passaggio 1. Passare a Controllo > Fabric Builder > Crea fabric, come mostrato nell'immagine.



Passaggio 2. Assegnare un nome all'infrastruttura multisito e scegliere **MSD_Fabric_11_1** nell'elenco a discesa per il **modello di infrastruttura**.

Passaggio 3. In **Generale**, verificare che l'intervallo VNI L2 e L3 corrisponda a quello utilizzato dai singoli fabric. Inoltre, l'indirizzo MAC del gateway Anycast deve corrispondere su entrambi i fabric (nell'esempio, RTP/SJ). DCNM restituisce un errore se gli MAC del gateway non corrispondono e devono essere corretti prima di procedere con la distribuzione MSD.

General DCI Resources		
* Layer 2 VXLAN VNI Range	20000-29000	Overlay Network Identifier Range (Min:1, Max:16777214)
* Layer 3 VXLAN VNI Range	30000-39000	Overlay VRF Identifier Range (Min:1, Max:16777214)
* VRF Template	Default_VRF_Universal	② Default Overlay VRF Template For Leafs
* Network Template	Default_Network_Universal	② Default Overlay Network Template For Leafs
* VRF Extension Template	Default_VRF_Extension_Universal	② Default Overlay VRF Template For Borders
* Network Extension Template	Default_Network_Extension_Universa	② Default Overlay Network Template For Borders
Anycast-Gateway-MAC	1010.0000.00aa	Shared MAC address for all leaves
* Multisite Routing Loopback Id	100	③ 0-512
General DCI Resources		
DCI Subnet IP Range	10.10.1.0/24	Address range to assign P2P DCI Links Address range to assign P2P DCI Links
Subnet Target Mask	30	(2) Target Mask for Subnet Range (Min:8, Max:31)
* Multi-Site Overlay IFC Deployment Method	Direct_To_BGWS	Manual, Auto Overlay EVPN Peering to Route Servers, Auto Overlay EVPN Direct Peering to Border Gateways
Multi-Site Route Server List		@ Multi-Site Router-Server peer list, e.g. 128.89.0.1, 128.89.0.2
Multi-Site Route Server BGP ASN List		1-4294967295 1-65535[.0-65535], e.g. 65000, 65001
Multi-Site Underlay IFC Auto Deployment Flag		
General DCI Resources	5	
* Multi-Site Routing Loopbacl Ra	(IP 10.10.0.0/22	Typically Loopback100 IP Address Range

Passaggio 4. Fare clic su **Save**, quindi selezionare MSD Fabric e fare clic su **Save & Deploy**. Una volta completata correttamente la topologia dovrebbe essere simile a queste (tutti gli switch + collegamenti verdi):



Do not forget to re-deploy any Networks/VRFs across both fabrics + the MSD Fabric!

Distribuisci criteri di accesso host/trunk

Per questo esempio, vengono configurati i trunk vPC di due diverse coppie VTEP e viene verificata la connettività all'interno del fabric RTP locale. Topologia pertinente, come mostrato nell'immagine:



Passaggio 1. Passare a Controllo > Fabric > Interfacce, come mostrato nell'immagine.



Passaggio 2. Fare clic sul segno + per accedere alla procedura guidata Aggiungi interfaccia, come mostrato nell'immagine.

Control / Fabrics / Interfaces								
Sho								
Status								

Nell'esempio, viene creato un trunk vPC a valle del N7K, che viene utilizzato per eseguire il ping dei test in questa procedura dettagliata.

Passaggio 3. Selezionare la coppia vPC appropriata, le interfacce fisiche, l'attivazione/la disattivazione LACP, BPDUGuard e così via.

Add Interface			>	×
	* Туре:	virtual Port C	channel (vPC)	
	* Select a vPC pair	rtp-sapporo-t	bb11rtp-sapporo-bb12	
	* vPC ID	1		
	* Policy:	int_vpc_trunk	k_host_11_1	
Note : PeerOne = rtp-sapporo-t General Peer-1 Port-Channel ID	bb11 & PeerTwo = rtp-sappord	b-bb12	Peer-1 VPC port-channel number (Min:1, Max:4096)	
Peer-2 Port-Channel ID	1		Peer-2 VPC port-channel number (Min:1, Max:4096)	
Peer-1 Member Interfaces	Eth1/1		A list of member interfaces for Peer-1 [e.g. e1/5,eth1/7-9]	
Peer-2 Member Interfaces	Eth1/1		A list of member interfaces for Peer-2 [e.g. e1/5,eth1/7-9]	
* Port Channel Mode	active	•	Channel mode options: on, active and passive	
* Enable BPDU Guard	false		② Enable spanning-tree bpduguard	
Enable Port Type Fast	Enable spanning-tre	e edge port be	ehavior	
		-	· · · · · · · · · · · · · · · · · · ·	
			Save Preview Deploy	

Note : PeerOne = rtp-sapporo-bb11 & PeerTwo = rtp-sapporo-bb12

General			
	* мти	jumbo	MTU for the Port Channel
* Peer-1 Tr	unk Allowed	all	Allowed values: 'none', 'all', or vlan ranges (ex: 1-200,500-2000,3000)
* Peer-2 Tr	unk Allowed	all	Allowed values: 'none', 'all', or vlan ranges (ex: 1-200,500-2000,3000)
Peer-1	PO Description	To N7K RTP-Right Eth2/30	Add description to Peer-1 VPC port-channel (Max Size 254)
Peer-2	PO Description	To N7K RTP-Right Eth2/29	Add description to Peer-2 VPC port-channel (Max Size 254)
			Note ! All configs :
			Save Preview Deploy

Passaggio 4. Al termine, fare clic su **Save** (Salva). In alternativa, è possibile distribuire direttamente, come mostrato nell'immagine.

	rtp-seoul-bb	rtp-sug-sp 11 rtp-seoul-t	bk11 rtp-sapport	Manage interfaces View/edit policies History Debloy Config Discovery Discovery	o-bb12		
onfig Deploy	rment	Step 2 Configuration	Deployment Status				\times
Switch Name	ID Addrass	Switch Sarial	Proview Config	Statue	Polsung	Progress	
tp-sapporo-bb12	192 168 128 105	FD021302.157	15 lines	Out-of-sync	-Sync	100%	
AND	102110011201100	10021002002	10 11100	Out of sums			

Passaggio 5. (Facoltativo) Esaminare la configurazione da applicare.

<pre>interface ethernet1/1 no spanning-tree port type edge trunk interface port-channel1 switchport switchport mode trunk mtu 9216 vpc 1 spanning-tree bpduguard disable description To N7K RTP-Right Eth2/29 no shutdown switchport trunk allowed vlan 1-4094 interface ethernet1/1 channel-group 1 force mode active no shutdown configure terminal</pre>	Pending Config Side-by-side Comparison	
	<pre>interface ethernet1/1 no spanning-tree port type edge trunk interface port-channel1 switchport switchport mode trunk mtu 9216 vpc 1 spanning-tree bpduguard disable description To N7K RTP-Right Eth2/29 no shutdown switchport trunk allowed vlan 1-4094 interface ethernet1/1 channel-group 1 force mode active no shutdown configure terminal</pre>	

Config Deployment

Step 1. Configuration Preview Step 2. Configuration Deployment Status					
Switch Name	IP Address	Status	Status Description	Progress	
rtp-sapporo-bb11	192.168.128.101	COMPLETED	Deployed successfully	100%	
rtp-sapporo-bb12	192.168.128.105	COMPLETED	Deployed successfully	100%	

Passaggio 6. (Facoltativo) Configurazione manuale su 7K:

 \times

RTP-Right# show run interface port-channel 1 membership
!Command: show running-config interface port-channel1 membership !Running configuration last done at: Mon Sep 9 17:29:39 2019 !Time: Mon Sep 9 17:33:01 2019
version 8.2(4)
interface port-channel1 switchport switchport mode trunk
interface Ethernet2/29 description vPC from sapporo-bb11/12 eth1/1 switchport switchport mode trunk channel-group 1 mode active no shutdown
interface Ethernet2/30 description vPC from sapporo-bb11/12 eth1/1 switchport switchport mode trunk channel-group 1 mode active no shutdown
<pre>RTP-Right# show port-channel summary interface po1 Flags: D - Down P - Up in port-channel (members) I - Individual H - Hot-standby (LACP only) s - Suspended r - Module-removed b - BFD Session Wait S - Switched R - Routed U - Up (port-channel) M - Not in use. Min-links not met</pre>
Group Port- Type Protocol Member Ports Channel
1 Po1(SU) Eth LACP Eth2/29(P) Eth2/30(P)

Passaggio 7.(Facoltativo) Creazione di una SVI di test su N7K per eseguire il ping dei VTEP in RTP (i VTEP hanno Anycast Gateway pari a 10.212.20.1 in VRF andrea_red):

RTP-Right# show run interface vlan 2300 !Command: show running-config interface Vlan2300 !Running configuration last done at: Mon Sep 9 17:41:10 2019 !Time: Mon Sep 9 17:44:30 2019 version 8.2(4) interface Vlan2300 description VRF Andrea_Red in TEPs no shutdown no ip redirects ip address 10.212.20.20/24 no ipv6 redirects RTP-Right# ping 10.212.20.1 PING 10.212.20.1 (10.212.20.1): 56 data bytes 64 bytes from 10.212.20.1: icmp_seq=0 ttl=254 time=1.235 ms 64 bytes from 10.212.20.1: icmp_seq=1 ttl=254 time=0.832 ms 64 bytes from 10.212.20.1: icmp_seq=2 ttl=254 time=0.819 ms 64 bytes from 10.212.20.1: icmp_seq=3 ttl=254 time=0.81 ms 64 bytes from 10.212.20.1: icmp_seq=4 ttl=254 time=0.828 ms --- 10.212.20.1 ping statistics ---5 packets transmitted, 5 packets received, 0.00% packet loss round-trip min/avg/max = 0.81/0.904/1.235 ms

Passaggio 8. (Facoltativo) Verificare che altri VTEP in RTP vedano questo host tramite EVPN/HMM:



Passaggio 9.(Facoltativo) Ripetere la stessa procedura per seoul-bb11/12 (creare un canale porta vPC, creare SVI 2300). Ping da RTP-Left a RTP-Right per confermare la connettività L2 su EVPN all'interno di RTP Fabric:



Èpossibile seguire una procedura simile per creare canali porte non vPC, interfacce di accesso, ecc. nel contesto Add Interfaces.

Operazioni Giorno 2

Aggiornamento del software NX-OS tramite DCNM

Passaggio 1. Caricare un'immagine (o un set di immagini sul server DCNM), quindi selezionare **Control > Image Management > Image Upload**, come mostrato nell'immagine.



Passaggio 2. Seguire le istruzioni per il caricamento locale, quindi i file dovrebbero essere visualizzati come mostrato nella seguente immagine:

	Data Center Network Manager							
↑ Contro	I / Image Manage	ment / Image	e Upload					
Smart Imag	e Management							
X Imag	je Upload					:		
Image	Name 🔺	Version	Platform	Туре	Size (Bytes)	Checksum		
nxos.7.	0.3.17.6.bin	7.0(3)17(6)	N9K	System	1011037696	aea740774c1ef22585ac40f1134d3ed6		
Sel	ect File To hoose File nxos.s Uploading an	Upload 9.2.3.bin nd Proces	ssing Data a	X 3%				

Passaggio 3. Una volta caricati i file, è possibile procedere all'installazione e all'aggiornamento se

gli switch richiedono un aggiornamento. Selezionare **Controllo > Gestione immagini > Installazione e aggiornamento**, come mostrato nell'immagine.



Passaggio 4. Selezionare gli switch che si desidera aggiornare. Nell'esempio, viene aggiornato l'intero fabric RTP.

1	Select Switches	→ 2 Specif	y Software Images 🗸	⇒ 3	Pre-Installatio	on Checks
Device Availa	Scope: Data Center Cable Switches	V				Selected Switches
	Switch Name	IP Address	Model	Version		Switch Name
	sjc-davos-bb14	192.168.254.106	N9K-C92160YC-X	9.2(2.71)		rtp-sug-sp-bb12
	sjc-davos-bb15	192.168.254.102	N9K-C92160YC-X	7.0(3)17(5)		rtp-sug-sp-bb11
	sjc-hom-bb14	192.168.254.107	N9K-C93180YC-FX	9.2(1)		rtp-seoul-bb12
	sjc-hom-bb15	192.168.254.103	N9K-C93180YC-FX	9.2(1)		rtp-seoul-bb11
	sjc-t2-sp-bb14	192.168.254.104	N9K-C9508	7.0(3)17(1)		rtp-sapporo-bb12
	sjc-t2-sp-bb15	192.168.254.100	N9K-C9508	7.0(3)17(3)		rtp-sapporo-bb11
	sjc-t2-tep-bb14	192.168.254.105	N9K-C9372TX-E	7.0(3)l7(5a)		rtp-hea-bgw-bb12
	sjc-t2-tep-bb15	192.168.254.101	N9K-C9372TX-E	7.0(3)17(4)	~	rtp-hea-bgw-bb11

Passaggio 5. Selezionare la versione del sistema operativo NX a cui si desidera aggiornare gli switch (è buona norma aggiornare tutti gli switch alla stessa versione del sistema operativo NX):

Select S	switches V	→ 2	Specify Softwa	ire images 🗸	3	Pre-Installatio	Detht:	7 4 Schedul	e Job		
Auto File S	election Sel	ect File Server:	Default_S	Image ve	rsion: 7.0(3)17	(6) Availat	Path ⁻ : /var/lib/dcn	im/images/	Apply		
ame	Version	Kickstart Image	System Image	SSI mage	Vrf	Primary Supervi	Secondary Supervisor	Selected Files Size(MB)	Skip Ver Compati	Select P Line Ca	Upgrade Options
-hea-b	7.0(3)17(5)	Not Applicab	nxos.7.0.3.17.	lot Applicable	manage	<u>115145</u>	Not Available	1012	0		Options
-hea-b	7.0(3)17(5)	Not Applicab	nxos.7.0.3.17.	lot Applicable	manage	<u>115146</u>	Not Available	1012			Options
-sapp	7.0(3)17(3)	Not Applicab	nxos.7.0.3.17.	lot Applicable	manage	<u>49821</u>	Not Available	1012			Options
-sapp	7.0(3)17(3)	Not Applicab	nxos.7.0.3.17.	lot Applicable	manage	<u>50535</u>	Not Available	1012			Options
-seoul	7.0(3)17(6)	Not Applicab	nxos.7.0.3.17.	lot Applicable	manage	<u>35476</u>	Not Available	1012			Options
-seoul	7.0(3)17(Not Applicab	nxos.7.0.3.17.	lot Applicable	manage	<u>33780</u>	Not Available	1012			Options
-sug-s	7.0(3)17(5)	Not Applicab	nxos.7.0.3.17.	lot Applicable	manage	<u>20294</u>	Not Available	1012	0		Options
-sug-s	7.0(3)17(5)	Not Applicab	nxos.7.0.3.17.	lot Applicable	manage	<u>46651</u>	Not Available	1012			Options

Passaggio 6. Fare clic su Next (Avanti) per eseguire DCNM sugli switch tramite controlli di

preinstallazione. Questa finestra può richiedere molto tempo, quindi è possibile scegliere **Termina installazione in seguito** e pianificare l'aggiornamento mentre non si è al computer.

1	Select Switches	Specify Software Images ✓ → 3 Pre-Installation Checks	→ 4 Schedule Job	
Compa Elapse	atibility Check May take considerable time. To fit d time: 00hrs 00min 45sec	hish this installation later click Finish Installation Later		
	Name	Current Action	Version Compatibility Verification	
۲	rtp-sug-sp-bb12	Compatibility check in progress	STARTED	
0	rtp-sug-sp-bb11	Compatibility check in progress	STARTED	
0	rtp-seoul-bb12	Compatibility check in progress	STARTED	
0	rtp-seoul-bb11	Compatibility check in progress	STARTED	
0	rtp-sapporo-bb12	Compatibility check in progress	STARTED	
0	rtp-sapporo-bb11	Compatibility check in progress	STARTED	
0	rtp-hea-bgw-bb12	Compatibility check in progress	STARTED	
		Compatibility Logs		
In Pro	gress			

Una volta completata, l'operazione viene accodata e visualizzata come mostrato nell'immagine.

₿	ululu Data Center Network Manager	0	admin	¢
n	Control / Image Management / Install & Upgrade			
	Upgrade History Switch Level History			
	Software Upgrade Tasks Selected	1 / Total 1	3 ¢.	,
	🔍 View 🗶 Delete 🗇 New Installation 🛃 Finish Installation Show Quick Filter		• 7	
	Task Id Task Type Owner Devices Job Status Created Time Scheduled At	Comple	eted Tim	e
	1 Compatibility admin rtp-hea-bgw-bb11,rtp-hea COMPLETED WITH EXCEPTION 2019-06-20 12 2019-06-20 12.	. 2019-06	-20 13:0	3:.

Nota: l'eccezione nel caso precedente riguarda uno degli switch RTP che non disponeva di spazio sufficiente per l'immagine NX-OS.

Passaggio 7. Una volta ottenuta la compatibilità, fare clic su **Finish Installation** nella stessa finestra, come mostrato nell'immagine.

1	Some of the upgrade(s) are disruptive. Do you want to skip the disruptive upgrades?						
30				Don't	Skip	Skip	
,	Schedu	le Job					

Passaggio 8. È possibile selezionare gli aggiornamenti da eseguire contemporaneamente o in sequenza. Poiché si tratta di un ambiente lab, la selezione è **simultanea**.

Data Center Network Manager	
Control / Image Management / Install & Upgrade	
1 Switches ✓ → 2 Schedule Job ✓	
A Save subbing configuration to startup before installation	
Save running conliguration to startup before installation	
Schedule	
Deploy now	
Choose time to deploy (Server time)	
Jun/20/2019 13:05:36	
Execution mode	
⊖ Sequential	
Oncurrent	
Comment	
Upgrading RTP Fabric all at once. This is a lab environment.	
	/

L'operazione viene creata e viene visualizzata IN CORSO, come illustrato nell'immagine.

Upgi	ade History	Switch Leve	el History						
Soft	ware Upgra	de Tasks						s	elected 0 / Total 1 🕤 🎄 🗸
0	View	Delete	New Installa	tion L. Finish Installation	n			Show Quick	Filter
	Task Id	Task Type	Owner	Devices	Job Status	Created Time	Scheduled At	Completed Time	Comment
	1	Upgrade	admin	rtp-hea-bgw-bb11,rtp-hea	IN PROGRESS	2019-06-20 13	2019-06-20 13		Upgrading RTP Fabric all
Upç	rade History	Switch Lev	el History						
So	tware Upgr	ade Tasks							Selected 0 / Total 1 🦪 🌣 🗸
	View	🕻 Delete	New Install	ation 🖳 Ł Finish Installation	on			Show Quic	k Filter
	Task Id	Task Type	Owner	Devices	Job Status	Created Time	Scheduled At	Completed Tim	Comment
] 1	Upgrade	admin	rtp-hea-bgw-bb11,rtp-hea	COMPLETED	2019-06-20 13	2019-06-20 13	2019-06-20 13:2	0: Upgrading RTP Fabric al

Di seguito è riportato un modo alternativo per selezionare l'immagine.

sjc-t2-sp	7.0(3)17(1)	Not Applicable Select Image Not Applicable	manage	<u>6326</u>	<u>2683</u>	Not Applicable		Options
sjc-t2-sp	7.0(3)17(3)	Not Applicable Select Image Not Applicable	manage	<u>4437</u>	Not Available	Not Applicable		Options

Software Image Browser	×
Switch Name: sjc-davos-bb14 Switch IP: 192 168 254 106	
Switch Model: N9K-C92160YC-X	s 🔶
Select System Image from Image from File Server Switch File System	/var/lib/dcnm/imag e (MB) Sele
Select the file server:Default_SCP_Repos.Select Image:nxos.9.2.3.binSelect Vrf:management	 Available Not Available Not
✓ Use this Vrf for all other selected devi	c
✓ Use this Image for all other selected of platform type	FLASH ← ▼ :≣ O ▼ Search All nxos.7.0.3.17.6.bin nxos.9.2.3.bin

Installa Endpoint Locator

Affinché le applicazioni DCNM funzionino correttamente, è necessario disporre di connettività in banda tra il server DCNM e una porta del pannello anteriore per uno dei Nexus 9000 nel fabric. Per questo esempio, il server DCNM è collegato a Ethernet1/5 di uno degli aculei nel fabric RTP.

Passaggio 1. Questa CLI viene aggiunta manualmente a Nexus 9000:



Passaggio 2. Verificare che sia possibile eseguire il ping del server DCNM e viceversa su questa connessione point-to-point.



Passaggio 3. Passare alla GUI DCNM > Controllo > Localizzatore endpoint > Configura, come mostrato nell'immagine.



Passaggio 4. Selezionare l'infrastruttura per la quale si desidera abilitare Endpoint Locator, come mostrato nell'immagine.



Passaggio 5. Come mostrato nell'immagine, selezionare un dorso.

2. Select Spine

For an iBGP-based fabric, choose the Route-Reflectors. For an eBGP-based fabric, choose the transit spines.

rtp-sug-sp-bb12	•
Spine 2 (optional)	
	•

Passaggio 6. (Facoltativo). Prima di procedere al passaggio successivo, l'IP di eth2 è stato modificato rispetto all'installazione originale tramite questa CLI sul server DCNM (questo passaggio non è necessario se l'IP originale configurato durante la nuova installazione del server DCNM rimane corretto):



Passaggio 7. Verificare la configurazione dell'interfaccia in banda. Deve corrispondere a quanto configurato nel passaggio precedente.

3. Verify DCNM In-band Interface

Choose the Ethernet interface on the DCNM that will provide reachability to the Spine(s) within the fabric.

eth2			•
	Interface IP		
99.99.99.1		1	30 🗸

5. Review and Enable Endpoint Locator

Fabric:	DCNM Interface:	* Collect additional information (Port, VLAN, etc.)
RTP-EVPN-Fabric	eth2 (99.99.99.1/30)	Yes 🔻
Spine 1:	Next-hop IP:	
rtp-sug-sp-bb12 (192.168.128.104)	99.99.99.1	
Spine 2:		

Passaggio 8. Dopo aver esaminato la configurazione, fare clic su **Configure** (Configura). L'operazione potrebbe richiedere alcuni minuti:



Al termine, viene visualizzata la notifica, come illustrato nell'immagine.



Si noti che DCNM ha configurato un router BGP adiacente sul dorso selezionato nella famiglia di VPN L2VPN.



Passaggio 9. È ora possibile utilizzare la collocazione degli endpoint. Selezionare **Monitor** > **Endpoint Locator** > **Esplora**.



Nell'esempio, sono visibili i due host configurati per i test ping locali nell'infrastruttura RTP:



Problemi rilevati durante la distribuzione

Cablaggio non valido

Una coppia di switch aveva un cablaggio errato che ha causato un errore di bundling per vPC peer-link port-channel500. **Esempio**:

onfig Deploy	yment			
Step 1. Configurat	tion Preview > s	Step 2. Configuration	Deployment Status	
Switch Name	IP Address	Status	Status Description	Progress
tp-sapporo-bb11	192.168.128.101	FAILED	feature ngoam is an invalid command	8 %
tp-sapporo-bb12	192.168.128.105	FAILED	channel-group 500 force mode active Failed with follo	15%
tp-sug-sp-bb11	192.168.128.100	COMPLETED	Deployed successfully	100%
tp-sug-sp-bb12	192.168.128.104	COMPLETED	Deployed successfully	100%
tp-seoul-bb11	192.168.128.102	COMPLETED	Deployed successfully	100%
			Dealers development due	4008/

Passaggio 1. Tornare a Control > Fabric Builder ed esaminare gli errori:

	🐥 2 pending errors
	\sim
Fabric errors & warnings	$\star \times$
2 Errors, 0 Warnings, 0 Info	× Delete all
Switch[FDO21302J5Z] - CLI command ' channel-group 500 force mode a with following error:command failed: port not compatible:[Buffer boost] *** force option to override the port's parameters ** (e.g. "channel-group X fo "show port-channel compatibility-parameters" to get more information on the second s	ctive' failed X You can use rce") ** Use failure
Switch[FDO213001M0] - CLI command 'feature ngoam' failed with followi command is invalid.	ng error:CLI X

Passaggio 2. Per il primo errore relativo al comando port-channel500 con esito negativo — È stato verificato tramite **show cdp neighbors** che la connessione al peer vPC fosse su una porta 10G e una porta 40G (non compatibile). La porta 10G è stata rimossa fisicamente ed è stato eliminato anche il collegamento da DCNM:



Impossibile configurare una funzionalità

Per il secondo errore relativo a "feature ngoam" che non è stato possibile configurare: lo switch è

stato aggiornato a una versione più recente di NX-OS in cui è supportato "feature ngoam" e fare clic di nuovo su **Save & Deploy**. Entrambe le questioni sono state risolte.

Sovrapposizione delle subnet di gestione per fabric diversi

Durante la distribuzione del secondo fabric, SJ, è stata utilizzata la stessa subnet (se fisicamente separata, dovrebbe essere corretto); tuttavia, DCNM registra un conflitto e il POAP ha esito negativo. Questa condizione viene risolta quando il fabric SJ viene inserito in una VLAN di gestione diversa e si modifica l'intervallo degli indirizzi DHCP.

Add Fabric								
* Fabric Name : * Fabric Template :	SJ-EVPN-Fabric Easy_Fabric_11	_1	▼					
General Replicat	ion vPC	Advanced	Resources	Man	ageability	Bootstrap	Configuration Backup	
Er Enable Loc	Enable Bootstrap 🗹 🕜 Automatic IP Assignment For POAP Enable Local DHCP Server 🗹 🕜 Automatic IP Assignment For POAP From Local DHCP Server							
* DHCP Scope Start Address 192.168.128.108				Start Address For Switch Out-of-Band POAP				
* DHCP Scope End Address 192.168.128.115			② End Address For Switch Out-of-Band POAP					
* Switch Management Default Gate 192.168.128.1			② Default Gateway For Mgmt VRF On The Switch					
* Switch Managemer	* Switch Management Subnet Prefix 24			Prefix For Mgmt0 Interface On The Switch (Min:8, Max:30)				



The fabric SJ-EVPN-Fabric was added with below message:

Management Default Gateway network 192.168.128.0 for fabric SJ-EVPN-Fabric has conflict with fabric RTP-EVPN-Fabric's Management Default Gateway network 192.168.128.0. Same Gateway network cannot be used within the same or different fabrics, please use different Gateway Network.

		~	
 10	-	8	

Interfacce Breakout

Passaggio 1. Per le interfacce breakout in alcuni switch (consultare la topologia), questa CLI è stata aggiunta manualmente per i **T2** Spines:

```
sjc-t2-sp-bb14# show run | i i breakout
interface breakout module 1 port 6-7 map 10g-4x
```

Passaggio 2. Passare a **Controllo > Interfacce** ed eliminare le interfacce padre:

€	•	Cisco Data Cent	er Network Mana	iger				SCOPE:	SJ-Fabric-E	VPN 🔻
ń	0	Control / Fabrics /	Interfaces							
In	terfa	aces	-					Se	elected 4 / Tota	al 520 🖇
	+	+ • C X	↑ ↓ ⊙ ₡		Deploy			Sh	ow Quick F	ilter
		Device Name	Name	Admin	Oper	Reason	Policy	Overlay Network	Status	Port-C
	_									
(☑	sjc-t2-sp-bb14	∠ Ethernet1/7			Not discovered	int_trunk_host_11_1	NA	8	
(☑	sjc-t2-sp-bb14	✓ Ethernet1/6			Not discovered	int_trunk_host_11_1	NA	8	
(☑	sjc-t2-sp-bb15	✓ Ethernet1/7			Not discovered	int_trunk_host_11_1	NA	8	
(☑	sjc-t2-sp-bb15	∠ Ethernet1/6			Not discovered	int_trunk_host_11_1	NA	8	

Le interfacce effettivamente utilizzate sono Eth1/6/1-4 e Eth1/7/1-4. Se non si corregge questo problema, il salvataggio e la distribuzione avranno esito negativo in seguito. C'è un modo per fare la svolta attraverso il DCNM stesso (pulsante accanto al segno +; non contemplato nel presente articolo)

Errore di infrastruttura durante la distribuzione su funzionalità non supportate

₿	Cisco Data Center Ne	etwork Manager	-			SCOPE:	SJ-Fabric-EVPN 🔻 🕜	admin 🏠
Netwo	rk / VRF Selection Network	/ VRF Deployment					VRF View	Continue
			F	abric Selected: SJ-Fab	ric-EVPN			
Netw	orks						Selected 1 / Total 2	Ø\$.
+						Sh	All	• •
	Network Name	Network ID	VRF Name	IPv4 Gateway/Subnet	IPv6 Gateway/Prefix	Status	VLAN ID	
	Andrea_TestNetwork_20001	20001	Andrea_VRF_RED	10.212.20.1/24	2001:db8::1/64	DEPLOYED	2300	
\checkmark	mesau-22302	22302	mesau-southeas	10.23.2.1/24		OUT-OF-SYNC	2302	

Edit Network

 Network Infe 	ormation						
	* Network ID	22302					
* N	etwork Name	mesau-2230	2				
	* VRF Name	mesau-south	neast-corner				
	Layer 2 Only						
* Netw	ork Template	Default_Net	work_Universal	▼			
* Netwo	ork Extension Template	Default_Net	work_Extension_Univer	▼			
	VLAN ID	2302			Propose V	/LAN	
 Network Pro Generate Multica General 	Dfile ast IP OP DHC DHCPv4	lease click onl Pv4 Server 2 Server VRF	y to generate a New Mul	lticast	Group Addres	as and overide the defa	ult value!
Advanced	Loopback Relay inte	ID for DHCP rface (Min:0, Max:1023)	40245			2 0 0 4204067205	
		Routing rag	12345			0-4294907295	

Alcuni chassis (T2s) in SJ Fabric non supportano TRM, quindi quando DCNM ha tentato di eseguire questa configurazione, non è stato in grado di avanzare. Supporto TRM: <u>https://www.cisco.com/c/en/us/td/docs/switches/datacenter/nexus9000/sw/92x/vxlan-92x/configuration/guide/b-cisco-nexus-9000-series-nx-os-vxlan-configuration-guide-92x/b Cisco Nexus 9000 Series NX-OS_VXLAN_Configuration_Guide_9x_chapter_01001.html#concept_vw1_syb_zfb</u>

TRM Enable 🔽 🕜 Enable Tenant Routed Multicast

Deselezionare la casella **TRM Enable** (Abilita TRM) in entrambe le finestre **Network (Rete) e VRF Edit** (Modifica VRF).

Ripetere lo stesso processo in Controllo > Fabric Builder > VRF.

L2 VNI Route-Target Doth Enable

Enable L3 Gateway on Border

₿	cisco Data Center Network Mana	ager		SCOPE: SJ	-Fabric-EVPN 🔻 🕜	adm	nin 🌣
Netwo	rk / VRF Selection Network / VRF Deployme	nt >			Network View	C 0	ntinue
			Fabric Selected: SJ-Fabric-EVPN				
VRF	5				Selected 1 / Total 2	\mathcal{O}	ζ‡ -
+				Show	All	•	Y
	VRF Name	VRF ID	Status				
	Andrea_VRF_RED	30000	DEPLOYED				
\checkmark	mesau-southeast-corner	32302	PENDING				

×

Edit VRF				×
▼ VRF Inform	ation			
	* VRF ID 32302			
	* VRF Name mesau-sout	heast-corner		
* VRF Template Default_V		F_Universal 🔻		
* v	RF Extension Template Default_VR	F_Extension_Universal		
 VRF Profile General 				
Advanced	VRF Intf MTU	9216	68-9216	
	Loopback Routing Tag	12345	0-4294967295	
	Redistribute Direct Route Map	FABRIC-RMAP-REDIST-SUBNET	0	
	Max BGP Paths	1	1-64	
	Max iBGP Paths	2	1-64	
	TRM Enable	G Enable Tenant Routed Multicast	, ,	
	* Is RP External	Is RP external to the fabric?		



Fare clic su **Continue** (Continua), quindi su **Deploy** (Distribuisci) rispettivamente come fatto in precedenza.

Novità di DCNM 11.2

- Peering fabric vPC
- Fabric di routing basati su eBGPAbilita EVPN all'inizio
- Miglioramenti Easy Fabric BrownfieldBordo dorso/Bordo dorso GWPIM BidirMulticast con routing tenant
- Day-0/Bootstrap con server DHCP esterno

Operazioni giorno 2:

- Risorse di Network Insights
- Network Insights Advisor
- Supporto IPv6 per accesso esterno (eth0)

- Visibilità di VMM Compute con UCS-FI
- Miglioramenti alla vista topologia
- Aggiornamento in linea dalla versione 11.0/11.1

Passaggio da vPC tradizionale a vPC senza MCT con DCNM:

Vantaggi di vPC senza MCT:

- Soluzione dual-homing avanzata senza sprechi di porte fisiche
- Conservazione delle caratteristiche tradizionali dei vPC
- Routing ottimizzato per singoli endpoint ospitati con PIP

Informazioni correlate

- Guida alla configurazione di Cisco DCNM LAN Fabric, versione 11.2(1)
 <u>https://www.cisco.com/c/en/us/td/docs/switches/datacenter/sw/11_2_1/config_guide/lanfabric/b_dcnm_fabric_lan/control.html</u>
- Capitolo: Caso di utilizzo del provisioning dei confini in fabric VPN BGP VXLAN multisito <u>https://www.cisco.com/c/en/us/td/docs/switches/datacenter/sw/11_2_1/config_guide/lanfabric/</u> <u>b_dcnm_fabric_lan/border-provisioning-multisite.html</u>
- White paper NextGen DCI con VXLAN EVPN Multi-Site con gateway di frontiera vPC <u>https://www.cisco.com/c/en/us/products/collateral/switches/nexus-9000-series-</u> <u>switches/whitepaper-c11-742114.html#_Toc5275096</u>
- Capitolo: Applicazioni DCNM
 <u>https://www.cisco.com/c/en/us/td/docs/switches/datacenter/sw/11_2_1/config_guide/lanfabric/</u>
 <u>b_dcnm_fabric_lan/applications.html</u>