Configurazione del trunking ISL tra gli switch Catalyst 5000/6000 con CatOS

Sommario

Introduzione Prerequisiti Requisiti Componenti usati Convenzioni Note importanti Configurazione Esempio di rete Configurazioni Verifica Catalyst 5500 Switch Catalyst 5000 Switch Risoluzione dei problemi Informazioni correlate

Introduzione

In questo documento vengono fornite configurazioni di esempio su un ISL (Inter-Switch Link) tra uno switch Catalyst 5500 e uno switch Catalyst 5000, entrambi con software Catalyst OS (CatOS). È possibile usare qualsiasi membro della famiglia Catalyst 5000 o 6000 con CatOS in questo scenario per ottenere gli stessi risultati.

In breve, il trunking è un modo per trasportare il traffico da diverse VLAN su un collegamento point-to-point tra i due dispositivi. Il trunking Ethernet può essere implementato in due modi:

- ISL (protocollo Inter-Switch Link proprietario Cisco)
- 802.1Q (standard IEEE)

In questo documento vengono visualizzati solo i file di configurazione degli switch e l'output dei relativi comandi **show di** esempio. Per i dettagli su come configurare un trunk ISL tra gli switch Catalyst, fare riferimento alla <u>configurazione del trunking ISL sugli switch Catalyst serie 5500/5000</u> <u>e 6500/6000</u>.

Prerequisiti

Requisiti

Nessun requisito specifico previsto per questo documento.

Componenti usati

Le informazioni fornite in questo documento si basano sulle seguenti versioni software e hardware:

- Switch Catalyst 5500 con software Catalyst OS 6.1(1)
- Switch Catalyst 5000 con software Catalyst OS 6.1(1)

Le informazioni discusse in questo documento fanno riferimento a dispositivi usati in uno specifico ambiente di emulazione. Se la rete è operativa, valutare attentamente eventuali conseguenze derivanti dall'uso dei comandi. Le configurazioni su tutti i dispositivi sono state cancellate con i comandi **clear config all** e **write erase** per assicurarsi che disponessero di una configurazione predefinita.

Convenzioni

Per ulteriori informazioni sulle convenzioni usate, consultare il documento <u>Cisco sulle convenzioni</u> <u>nei suggerimenti tecnici</u>.

Note importanti

La famiglia Catalyst 4000 (inclusi Catalyst 2948G e Catalyst 2980G) con CatOS supporta solo il trunking 802.1Q, non ISL.

Qualsiasi porta Ethernet su un dispositivo della famiglia Catalyst 6000 supporta l'incapsulamento 802.1Q e ISL.

A seconda del modulo, le porte Catalyst 5000 con supporto trunk possono supportare solo l'incapsulamento ISL o entrambi, ISL e 802.1Q. Per verificare questa condizione, usare il comando **show port capabilities**. La capacità di trunking è esplicitamente indicata. Ad esempio:

cat5000> show port capabilities 3 WS-X5225R Model Port 3/1 Type 10/100BaseTX auto,10,100 Speed Duplex half,full Trunk encap type 802.10,ISL Trunk mode on, off, desirable, auto, nonegotiate 3/1-2.3/1-4Channel Broadcast suppression percentage(0-100) Flow control receive-(off,on),send-(off,on) Security yes Membership static,dynamic Fast start yes QOS scheduling rx-(none),tx-(none) CoS rewrite yes ToS rewrite IP-Precedence Rewrite no UDLD yes 1..1000,1025..4094,untagged,dot1p,none AuxiliaryVlan SPAN source, destination

Verificare che le modalità di trunking corrispondano sul collegamento trunk. Se un lato del

collegamento è configurato come ISL trunk, anche l'altro lato del collegamento deve essere configurato come ISL; analogamente, se un lato del collegamento è configurato come 802.1Q, anche l'altro lato del collegamento deve essere configurato come 802.1Q.

Configurazione

In questa sezione vengono presentate le informazioni necessarie per configurare le funzionalità descritte più avanti nel documento.

Nota: per ulteriori informazioni sui comandi menzionati in questo documento, usare lo <u>strumento di</u> ricerca dei comandi (solo utenti registrati).

Esempio di rete

Nel documento viene usata questa impostazione di rete:



Configurazioni

Nel documento vengono usate queste configurazioni:

- <u>Catalyst 5500</u>
- Catalyst 5000

Catalyst 5500



```
set errordetection portcounter enable
#system
set system name cat5500
1
#frame distribution method
set port channel all distribution mac both
!
#vtp
!--- In this example, the VLAN Trunking Protocol (VTP)
mode is set to be transparent. !--- Depending on your
network, set the VTP mode accordingly. set vtp mode
transparent
!--- For details on VTP, refer to <u>Configuring VTP</u>. set
vlan 1 name default type ethernet mtu 1500 said 100001
state active set vlan 1002 name fddi-default type fddi
mtu 1500 said 101002 state active set vlan 1004 name
fddinet-default type fddinet mtu 1500 said 101004 state
active stp ieee set vlan 1005 name trnet-default type
trbrf mtu 1500 said 101005 state active stp ibm set vlan
2
set vlan 1003 name token-ring-default type trcrf mtu
1500 said 101003 state acti
ve mode srb aremaxhop 7 stemaxhop 7 backupcrf off
#ip
!--- IP address used for management. set interface sc0 1
10.10.10.2/255.255.255.0 10.10.10.255
#set boot command
set boot config-register 0x2102
set boot system flash slot0:cat5000-sup3.6-1-1.bin
# default port status is enable
1
#module 1 empty
#module 2 : 2-port 1000BaseSX Supervisor
#module 3 empty
1
#module 4 : 24-port 10/100BaseTX Ethernet
!--- Ports 4/13-24 are assigned to VLAN 2. set vlan 2
4/13-24
!--- The ISL trunking mode is set to on. !--- Depending
on your network and requirements, set the trunking mode
accordingly. set trunk 4/1 on isl 1-1005
!--- For details on different trunking modes, refer to
!--- Configuring VLAN Trunks on Fast Ethernet and
Gigabit Ethernet Ports !--- Portfast has been enabled on
the ports connected to the workstations. set spantree
portfast 4/2-24 enable
!--- For details on why to enable portfast, refer to !--
- Using Portfast and Other Commands to Fix Workstation
<u>Startup Connectivity Delays</u> ! #module 5 empty ! #module
6 empty ! #module 7 empty ! #module 8 empty ! #module 9
empty ! #module 10 empty ! #module 11 empty ! #module 12
empty ! #module 13 empty end
Catalyst 5000
#Version 6.1(1)
```

```
set option fddi-user-pri enabled
set password $2$J75L$Ug4163kfeHTDcLJZ/L9es1
set enablepass $2$h/BN$i3S54iNvIXknFelh6gOve0
#errordetection
set errordetection portcounter enable
!
#system
set system name cat5000
!
#frame distribution method
set port channel all distribution Mac both
1
#vtp
!--- In this example, the VTP mode is set to be
transparent. !--- Depending on your network and
requirements, set the VTP mode accordingly. set vtp mode
transparent
!--- For details on VTP, refer to <u>Configuring VTP</u>. set
vlan 1 name default type ethernet mtu 1500 said 100001
state active set vlan 1002 name fddi-default type fddi
mtu 1500 said 101002 state active set vlan 1004 name
fddinet-default type fddinet mtu 1500 said 101004 state
active stp IEEE set vlan 1005 name trnet-default type
trbrf mtu 1500 said 101005 state active stp IBM set vlan
2
set vlan 1003 name token-ring-default type trcrf mtu
1500 said 101003 state acti
ve mode srb aremaxhop 7 stemaxhop 7 backupcrf off
#ip
   - IP address used for management. set interface sc0 1
10.10.10.3/255.255.255.0 10.10.10.255
#set boot command
set boot config-register 0x2102
set boot system flash slot0:cat5000-sup3.6-1-1.bin
# default port status is enable
#module 1 : 0-port Supervisor III
#module 2 : 12-port 10/100BaseTX Ethernet
#module 3 : 24-port 10/100BaseTX Ethernet
!--- Ports 3/13-24 have been assigned to VLAN 2. set
vlan 2 3/13-24
!--- The ISL trunking mode is set to on. !--- Depending
on your network and requirements, set the trunking mode
accordingly. set trunk 3/1 on isl 1-1005
!--- For details on different trunking modes, refer to
!--- Configuring VLAN Trunks on Fast Ethernet and
<u>Gigabit Ethernet Ports</u> !--- Portfast has been enabled on
the ports connected to the workstations. set spantree
portfast 3/2-24 enable
!--- For details on why to enable portfast, refer to !--
- Using Portfast and Other Commands to Fix Workstation
<u>Startup Connectivity Delays</u> ! ! #module 4 : 24-port
10/100BaseTX Ethernet ! #module 5 : 12-port 10BaseFL
Ethernet end
```

Verifica

Le informazioni contenute in questa sezione permettono di verificare che la configurazione funzioni correttamente.

Alcuni comandi show, in particolare **show tech-support**, sono supportati dallo <u>strumento Output</u> <u>Interpreter</u> (solo utenti <u>registrati</u>); lo strumento permette di visualizzare un'analisi dell'output del comando **show**.

Catalyst 5500 Switch

show port capabilities *module/port*: eseguire questo comando per verificare se la porta è in grado di eseguire il trunking.

cat5500> (enable) show g	port capabilities 4/1
Model	WS-X5234
Port	4/1
Туре	10/100BaseTX
Speed	auto,10,100
Duplex	half,full
Trunk encap type	802.1Q, ISL
Trunk mode	on,off,desirable,auto,nonegotiate
Channel	4/1-2,4/1-4
Broadcast suppression	percentage(0-100)
Flow control	receive-(off,on),send-(off,on)
Security	yes
Membership	static,dynamic
Fast start	yes
QOS scheduling	<pre>rx-(none),TX(1q4t)</pre>
COs rewrite	yes
ToS rewrite	IP-Precedence
Rewrite	no
UDLD	yes
AuxiliaryVlan	11000,10254094,untagged,dot1p,none
SPAN	source,destination

show port *module/port*: utilizzare questo comando per determinare lo stato di una porta specifica e se è trunking o meno.

cat5500> (enable) show port 4/1									
Port	Name		Status	Vlan	Leve	l Duple	ex Speed	Туре	
4/1			connected	trunk	norm	al a-fu	ll a-100	10/100B	aseTX
Port	Auxiliary	YVlan AuxVl	an-Status						
4/1	none	none							
Port	Security	Violation	Shutdown-T	ime Age	e-Time Max	-Addr Ti	cap	IfIndex	
4/1	disabled	shutdown		0	0	1 d:	isabled	11	
Port	Num-Addr	Secure-Sro	c-Addr Ag	ge-Left	Last-Src-	Addr	Shutdo	wn/Time-	Left
4/1	0		-				-	-	-

!--- Output suppressed.

show trunk: esegue questo comando per verificare lo stato e la configurazione del trunking.

cat5500> (enable) **show trunk**

* - ind:	icates vtp	domain mismatch			
Port	Mode	Encapsulation	Status	Native vlan	
4/1	on	isl	trunking	1	
Port	Vlans al	lowed on trunk			
4/1	1-1005				
Port	Vlans al	lowed and active i	n managemen	t domain	
4/1	1-2				
Port	Vlans ir	n spanning tree for	warding sta	te and not pruned	
4/1	1-2				

show vtp domain: utilizzare questo comando per controllare le informazioni VTP.

cat5500> (enable) **show vtp domain** Domain Index VTP Version Local Mode Password Domain Name _____ 2 1 Transparent -Vlan-count Max-vlan-storage Config Revision Notifications _____ 6 1023 0 disabled Last Updater V2 Mode Pruning PruneEligible on Vlans _____ 10.10.10.2 disabled disabled 2-1000

Catalyst 5000 Switch

show port capabilities *module*/*port*: eseguire questo comando per verificare se la porta è in grado di eseguire il trunking.

cat5000> (enable) show port capabilities 3/1

Model	WS-X5225R
Port	3/1
Туре	10/100BaseTX
Speed	auto,10,100
Duplex	half,full
Trunk encap type	802.1Q, ISL
Trunk mode	on, off, desirable, auto, nonegotiate
Channel	3/1-2,3/1-4
Broadcast suppression	percentage(0-100)
Flow control	<pre>receive-(off,on),send-(off,on)</pre>
Security	yes
Membership	static,dynamic
Fast start	yes

QOS scheduling	<pre>rx-(none),TX(none)</pre>
COs rewrite	yes
ToS rewrite	IP-Precedence
Rewrite	no
UDLD	yes
AuxiliaryVlan	11000,10254094,untagged,dot1p,none
SPAN	source,destination

show port *module/port*: utilizzare questo comando per determinare lo stato di una porta specifica e se è trunking o meno.

cat5000> (enable) show port 3/1 Status Vlan Level Duplex Speed Type Port Name connected trunk normal a-full a-100 10/100BaseTX 3/1 Port AuxiliaryVlan AuxVlan-Status 3/1 none none Port Security Violation Shutdown-Time Age-Time Max-Addr Trap IfIndex 0 0 1 disabled 3/1 disabled shutdown 57 *!--- Output suppressed.*

show trunk: esegue questo comando per verificare lo stato e la configurazione del trunking.

cat5000> (enable) **show trunk**

* - indi	cates vtp d	omain mismatch				
Port	Mode	Encapsulation	Status	Native vlan		
3/1	 on	 isl	trunking	1		
Port	Vlans all	owed on trunk				
3/1	1-1005					
Port	Vlans all	Vlans allowed and active in management domain				
3/1	1-2					
Port	Vlans in	spanning tree forw	varding state	and not pruned		
3/1	1-2					

show vtp domain: utilizzare questo comando per controllare le informazioni VTP.

cat5000> (enable) show vtp domain
Domain Name Domain Index VTP Version Local Mode Password
I 2 Transparent Vlan-count Max-vlan-storage Config Revision Notifications
------6 1023 0 disabled
Last Updater V2 Mode Pruning PruneEligible on Vlans

----- ------

10.10.10.3 disabled disabled 2-1000

Risoluzione dei problemi

Al momento non sono disponibili informazioni specifiche per la risoluzione dei problemi di questa configurazione.

Informazioni correlate

- Pagine di supporto dei prodotti LAN
- Pagina di supporto dello switching LAN
- Documentazione e supporto tecnico Cisco Systems