# Configurazione di una rete VPN (Virtual Private Network) IPsec da sito a sito su un router RV132W o RV134W

## Obiettivo

Le reti VPN (Virtual Private Network) da sito a sito vengono implementate in base ai criteri IPSec assegnati alle topologie VPN. Un criterio IPSec è un insieme di parametri che definiscono le caratteristiche della VPN da sito a sito, ad esempio i protocolli e gli algoritmi di sicurezza che verranno utilizzati per proteggere il traffico in un tunnel IPSec.

I router RV132W e RV134W supportano la VPN IPsec da sito a sito per un tunnel VPN da gateway a gateway singolo. Dopo aver configurato le impostazioni VPN di base, è possibile connettersi in modo sicuro a un altro router abilitato per VPN. È ad esempio possibile configurare il dispositivo di una succursale per la connessione a un router che connetta tunnel VPN da sito a sito nella sede aziendale, in modo che la succursale disponga di un accesso sicuro alla rete aziendale.

Lo scopo di questo articolo è quello di mostrare come configurare le impostazioni VPN di base per una connessione IPsec da sito a sito sul router RV132W o RV134W.

#### Dispositivi interessati

- RV132W
- RV134W

### Versione del software

- 1.0.0.17 RV132W
- 1.0.0.21 RV134W

#### Configurazione della VPN IPSec da sito a sito su un router

Passaggio 1. Accedere all'utility basata sul Web e scegliere VPN > IPSec VPN da sito a sito > Configurazione VPN di base.



Passaggio 2. Nel campo *Nuovo nome connessione*, immettere un nome per il tunnel VPN. Il nome può contenere solo lettere, numeri e trattini.

Nota: In questo esempio, il nome è Branch1.

Basic VPN Setup			
About Basic VPN Setup			
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu			
View Default Settings			
Connection Name and Remote IP Type			
New Connection Name:	Branch1	]	
Pre-Shared Key:	Cisco1234\$	]	
Protocol:	ESP V		
Endpoint Information			
Remote Endpoint	IP Address 🔻		
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint 1.2.3.4 or abc.com)	
Local WAN (Internet) IP Address:	192.168.100.121	]	
Secure Connection Remote Accessibility			
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)	
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)	
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)	
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)	
Save Cancel Back			

Passaggio 3. Nel campo *Chiave già condivisa*, immettere la chiave o la password già condivisa che verrà scambiata tra i due router. La password deve contenere da 8 a 49 caratteri.

Nota: Nell'esempio, la chiave già condivisa è Cisco1234\$.

Basic VPN Setup			
	About Basic VPN Setup		
	The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
	View Default Settings		
	Connection Name and Remote IP Type		
	New Connection Name:	Branch1	]
	Pre-Shared Key:	Cisco1234\$	]
	Protocol:	ESP V	
	Endpoint Information		
	Remote Endpoint	IP Address 🔻	
	Remote WAN (Internet) IP Address:	10.11.12.13	(Hint 1.2.3.4 or abc.com)
	Local WAN (Internet) IP Address:	192.168.100.121	]
	Secure Connection Remote Accessibility		
	Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
	Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)
	Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)
	Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
	Save Cancel Back		

Passaggio 4. Nell'elenco a discesa Protocollo, scegliere il nome del protocollo. Le opzioni sono:

- ESP: il protocollo ESP (Encapsulating Security Payload) fornisce autenticità di origine, integrità e protezione della riservatezza dei pacchetti.
- AH: il protocollo AH (Authentication Header) autentica l'origine dei datagrammi e garantisce l'integrità dei dati.

Nota: Nell'esempio viene scelto ESP.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings Connection Name and Remote IP Type		
New Connection Name:	Branch1	
Pre-Shared Key:	Cisco1234\$	
Protocol:	ESP V	
Endpoint Information	ESP	
Remote Endpoint:	IP Address V	
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint: 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint: 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint: 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

Passaggio 5. Scegliere l'endpoint remoto dal menu a discesa. Le opzioni sono:

- Indirizzo IP Questa opzione identifica il router a cui il dispositivo si connetterà con il relativo indirizzo IP.
- FQDN: il nome di dominio completo (FQDN) identificherà il router a cui il dispositivo si connetterà con il relativo nome di dominio.

Nota: Nell'esempio, viene scelto IP Address (Indirizzo IP).

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	Branch1	]
Pre-Shared Key:	Cisco1234\$	]
Protocol:	ESP T	
Endpoint Information		
Remote Endpoint:	IR Address	
Remote WAN (Internet) IP Address:	IP Address FODN	(Hint 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

Passaggio 6. Immettere l'indirizzo IP o FQDN della WAN remota (Internet) nel campo Indirizzo IP della WAN remota (Internet).

Nota: Nell'esempio, l'indirizzo IP della rete WAN remota (Internet) è 10.11.12.13.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings Connection Name and Remote IP Type		
New Connection Name:	Branch1	]
Pre-Shared Key:	Cisco1234\$	]
Protocol:	ESP V	
Endpoint Information		
Remote Endpoint	IP Address 🔻	
Remote WAN (Internet) IP Address:	10.11.12.13	Hint 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Masic	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

Passaggio 7. Verificare che l'indirizzo IP di origine nel campo *Indirizzo IP WAN locale* (*Internet*) sia corretto. Viene generato automaticamente.

Nota: Nell'esempio, l'indirizzo IP della rete WAN locale (Internet) è 192.168.100.121.

Basic VPN Setup			
About Basic VPN Setup			
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu			
View Default Settings	View Default Settings		
Connection Name and Remote IP Type			
New Connection Name:	Branch1	]	
Pre-Shared Key:	Cisco1234\$	]	
Protocol:	ESP V		
Endpoint Information			
Remote Endpoint	IP Address 🔻		
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint: 1.2.3.4 or abc.com)	
Local WAN (Internet) IP Address:	192.168.100.121		
Secure Connection Remote Accessibility			
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)	
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)	
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)	
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)	
Save Cancel Back			

Passaggio 8. Immettere l'indirizzo IP della rete privata (LAN) dell'endpoint remoto nel campo *Indirizzo IP LAN remota (rete locale)*. Indirizzo IP della rete interna del sito remoto.

Nota: Nell'esempio, l'indirizzo IP della LAN remota (rete locale) è 10.10.100.162.

Basic VPN Setup			
About Basic VPN Setup			
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu			
View Default Settings	View Default Settings		
Connection Name and Remote IP Type			
New Connection Name:	Branch1	]	
Pre-Shared Key:	Cisco1234\$	]	
Protocol:	ESP V		
Endpoint Information			
Remote Endpoint	IP Address 🔻		
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint: 1.2.3.4 or abc.com)	
Local WAN (Internet) IP Address:	192.168.100.121	]	
Secure Connection Remote Accessibility		_	
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint: 1.2.3.4)	
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)	
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)	
Local LAN (Local Network) Subnet Masic	255.255.255.0	(Hint: 255.255.255.0)	
Save Cancel Back			

Passaggio 9. Verificare la subnet mask della rete privata (LAN) dell'endpoint remoto nel campo *Subnet mask LAN remota (Internet)*. Viene generato automaticamente.

Nota: Nell'esempio, la subnet mask LAN remota (rete locale) è 255.0.0.0.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	Branch1	]
Pre-Shared Key:	Cisco1234\$	]
Protocol:	ESP V	
Endpoint Information		
Remote Endpoint	IP Address 🔻	
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	]
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

Passaggio 10. Immettere l'indirizzo IP della rete privata (LAN) della rete locale nel campo *Indirizzo IP LAN locale (rete locale)*. Indirizzo IP della rete interna del dispositivo.

Nota: Nell'esempio, l'indirizzo IP della LAN locale (rete locale) è 192.168.100.128.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings Connection Name and Remote IP Type		
New Connection Name:	Branch1	]
Pre-Shared Key:	Cisco1234\$	]
Protocol:	ESP •	
Endpoint Information		
Remote Endpoint	IP Address ¥	
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint: 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	]
Secure Connection Remote Accessibility		,
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	Hint 1.2.3.4)
Local LAN (Local Network) Subnet Mask:	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

Passaggio 11. Verificare la subnet mask della rete privata (LAN) dell'endpoint locale nel campo *Subnet mask LAN locale (rete locale)*. Viene generato automaticamente.

Nota: Nell'esempio, la subnet mask LAN locale (rete locale) è 255.255.255.0.

Basic VPN Setup		
About Basic VPN Setup		
The basic VPN setup sets most parameters to defaults as proposed by the VPN Consortium (VPNC), and assumes a Pre-shared Key, which greatly simplifies setup. After creating the policies through the Basic VPN Setup, you can always update the parameters through the Policies menu		
View Default Settings		
Connection Name and Remote IP Type		
New Connection Name:	Branch1	]
Pre-Shared Key:	Cisco1234\$	]
Protocol:	ESP V	
Endpoint Information		
Remote Endpoint	IP Address 🔻	
Remote WAN (Internet) IP Address:	10.11.12.13	(Hint: 1.2.3.4 or abc.com)
Local WAN (Internet) IP Address:	192.168.100.121	]
Secure Connection Remote Accessibility		
Remote LAN (Local Network) IP Address:	10.10.100.162	(Hint 1.2.3.4)
Remote LAN (Local Network) Subnet Mask:	255.0.0.0	(Hint: 255.255.255.0)
Local LAN (Local Network) IP Address:	192.168.100.128	(Hint 1.2.3.4)
Local LAN (Local Network) Subnet Masic	255.255.255.0	(Hint: 255.255.255.0)
Save Cancel Back		

**Nota:** Gli indirizzi IP della WAN remota e della LAN remota non possono trovarsi nella stessa subnet. Ad esempio, un indirizzo IP LAN remoto di 192.168.1.100 e un indirizzo IP LAN locale di 192.168.1.115 causano un conflitto quando il traffico viene instradato sulla VPN. Il terzo ottetto deve essere diverso in modo che gli indirizzi IP si trovino su subnet diverse. Ad esempio, è possibile usare un indirizzo IP LAN remoto pari a 192.168.1.199 e un indirizzo IP LAN locale pari a 192.168.2.100.

Passaggio 12. Fare clic su Salva.

A questo punto, è necessario configurare correttamente la VPN IPsec da sito a sito sul router RV132W o RV134W.