Configurazione di utenti SNMP (Simple Network Management Protocol) su uno switch

Obiettivo

Simple Network Management Protocol (SNMP) è un protocollo di gestione di rete che consente di registrare, archiviare e condividere informazioni sui dispositivi della rete. Ciò consente all'amministratore di risolvere i problemi di rete. L'SNMP utilizza i MIB (Management Information Base) per memorizzare le informazioni disponibili in modo gerarchico. Un utente SNMP è definito da credenziali di accesso quali nome utente, password e metodo di autenticazione. Viene utilizzato in associazione a un gruppo SNMP e a un ID motore. Per istruzioni su come configurare un gruppo SNMP, fare clic <u>qui</u>. Solo SNMPv3 utilizza utenti SNMP. Gli utenti con privilegi di accesso vengono associati a una visualizzazione SNMP.

Ad esempio, gli utenti SNMP possono essere configurati da un gestore di rete per associarli a un gruppo in modo che i diritti di accesso possano essere assegnati a un gruppo di utenti in quel particolare gruppo anziché a un singolo utente. Un utente può appartenere a un solo gruppo. Per creare un utente SNMPv3, è necessario configurare un ID motore e disporre di un gruppo SNMPv3.

Questo documento spiega come creare e configurare un utente SNMP su uno switch.

Dispositivi interessati

- Serie Sx250
- Serie Sx300
- Serie Sx350
- Serie SG350X
- Serie Sx500
- Serie Sx550X

Versione del software

- 1.4.7.05 Sx300, Sx500
- 2.2.8.04 Sx250, Sx350, SG350X, Sx550X

Configurazione degli utenti SNMP su uno switch

Aggiunta di un utente SNMP

Passaggio 1. Accedere all'utility basata sul Web dello switch.

Passaggio 2. Impostare la modalità di visualizzazione su Avanzate.

Nota: Questa opzione non è disponibile sugli switch serie SG300 e SG500. Se si dispone di questi modelli, andare al <u>passo 3</u>.

cisco	Language:	English	•	Display Mode:	Basic	•	Logout	SNA	About
itch					Basic				
					Advanced				

Passaggio 3. Scegliere SNMP > Utenti.

Getting Started
 Status and Statistics
 Administration
 Port Management
 Smartport
 VLAN Management
Spanning Tree
MAC Address Tables
 Multicast
 IP Configuration
 Security
 Access Control
Access Control Quality of Service
Access Control Quality of Service SNMP
Access Control Quality of Service SNMP Engine ID
 Access Control Quality of Service SNMP Engine ID Views
 Access Control Quality of Service SNMP Engine ID Views Groups
 Access Control Quality of Service SNMP Engine ID Views Groups Users
 Access Control Quality of Service SNMP Engine ID Views Groups Users Communities
 Access Control Quality of Service SNMP Engine ID Views Groups Users Communities Trap Settings
 Access Control Quality of Service SNMP Engine ID Views Groups Users Communities Trap Settings Notification Recipients SNMPv1,2
 Access Control Quality of Service SNMP Engine ID Views Groups Users Communities Trap Settings Notification Recipients SNMPv1,2 Notification Recipients SNMPv3

Passaggio 4. Fare clic su Add per creare un nuovo utente SNMP.

Use	rs						
The S For a	The SNMP service is currently disabled. For a user configuration to be effective, its associated Groups/ Views must be defined, and the SNMP service must be enabled.						
Use	r Table						
	User Name	Group Name	Engine ID	IP Address	Authentication Method	Privacy Method	
0 res	sults found.						
	Add	Edit	Delete				
An * ir	ndicates that th	ne correspondin	g user config	uration is inac	tive because the associat	ed group no longer exists.	

Passaggio 5. Immettere il nome dell'utente SNMP nel campo Nome utente.

A Liser Name:	(10/20 characters used)
Coser Marrie.	
Cingine iD.	Remote IP Address
Group Name:	SNMP_Group V
Authentication Method:	 None MD5 SHA
Authentication Password:	 Encrypted Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	NoneDES
Privacy Password:	 Encrypted Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close)

Nota: In questo esempio, il nome utente è SNMP_User1.

Passaggio 6. Fare clic sull'ID del motore. Le opzioni sono:

- Local (Locale) Questa opzione indica che l'utente è connesso allo switch locale.
- Indirizzo IP remoto: questa opzione indica che l'utente è connesso a un'entità SNMP diversa oltre allo switch locale. Selezionare un indirizzo IP remoto dall'elenco a discesa Indirizzo IP. Questo indirizzo IP remoto è l'indirizzo IP configurato per l'ID del motore SNMP.

Ö User Name:	SNMP User1 (10/20 characters used)
Engine ID:	
- Engine ib.	Remote IP Address
Group Name:	SNMP_Group V
Authentication Method:	 None MD5 SHA
Authentication Password	 Encrypted Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	 None DES
Privacy Password:	 Encrypted Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close)

Nota: Quando l'ID motore SNMP locale viene modificato o rimosso, elimina il database utente SNMPv3. Per poter ricevere i messaggi informativi e le informazioni sulla richiesta, è necessario definire sia l'utente locale che quello remoto. Nell'esempio viene scelto Locale.

Passaggio 7. Selezionare il nome del gruppo SNMP a cui appartiene l'utente SNMP dall'elenco a discesa Nome gruppo.

🜣 User Name:	SNMP_User1 (10/20 characters used)
Engine ID:	Local Remote IP Address
Group Name: Authentication Method:	SNMP_Group SNMP_Group
Authentication Password:	 Encrypted Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	NoneDES
Privacy Password:	 Encrypted Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close)

Nota: In questo esempio, viene scelto SNMP_Group.

Passaggio 8. Fare clic sul metodo di autenticazione. Le opzioni sono:

- Nessuna questa opzione indica che non viene utilizzata l'autenticazione utente.
- MD5 Questa opzione indica che la password immessa dall'utente è crittografata con MD5. MD5 è una funzione di crittografia con un valore hash a 128 bit. Viene in genere utilizzato per l'immissione di dati.
- SHA questa opzione indica che la password immessa dall'utente è crittografata con il metodo di autenticazione SHA (Secure Hash Algorithm). Le funzioni hash vengono utilizzate per convertire un input di dimensioni arbitrarie in un output di dimensioni fisse che sarebbe un valore hash a 160 bit.

🗢 User Name:	SNMP User1 (10/20 characters used)
🌣 Engine ID:	Local Remote IP Address
Group Name:	SNMP_Group V
Authentication Method:	None MD5 SHA
Authentication Password:	 Encrypted Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	NoneDES
Privacy Password:	 Encrypted Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close]

Nota: Nell'esempio viene scelto Agente integrità sistema.

Passaggio 9. Fare clic sul pulsante di opzione relativo alla password di autenticazione. Le opzioni sono:

- Crittografata questa opzione indica che la password verrà crittografata. Non verrà visualizzato come è stato immesso.
- Testo normale questa opzione indica che la password non verrà crittografata. Verrà visualizzato durante l'immissione.

🜣 User Name:	SNMP_User1 (10/20 characters used)
🌣 Engine ID:	Local Remote IP Address
Group Name:	SNMP_Group V
Authentication Method:	 None MD5 SHA
Authentication Password	Encrypted (9/32 characters used) (The password is used for generating a key)
Privacy Method:	NoneDES
Privacy Password:	 Encrypted Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close)

Nota: Nell'esempio viene scelto Testo normale.

	Passaggio	10.	Immettere	la	password
--	-----------	-----	-----------	----	----------

ſ

🗳 User Name:	SNMP_User1 (10/20 characters used)
🌣 Engine ID:	Local Remote IP Address
Group Name:	SNMP_Group V
Authentication Method:	 None MD5 SHA
Authentication Password	 Encrypted Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	NoneDES
Privacy Password:	 Encrypted Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close)

Nota: In questo esempio, la password è password1.

Passaggio 11. Fare clic su un metodo di privacy. Le opzioni sono:

• Nessuna — questa opzione indica che la password non è crittografata.

Г

• DES - Questa opzione indica che la password è crittografata con DES (Data Encryption Standard). DES è uno standard che accetta un valore di input a 64 bit e utilizza una chiave a 56 bit per la crittografia e la decrittografia dei messaggi. Si tratta di un algoritmo di crittografia simmetrica in cui il mittente e il destinatario utilizzano la stessa chiave.

🗢 User Name:	SNMP_User1 (10/20 characters used)
🌣 Engine ID:	Local Remote IP Address
Group Name:	SNMP_Group V
Authentication Method:	 None MD5 SHA
Authentication Password	 Encrypted Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	DES None
Privacy Password:	 Encrypted Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close)

Nota: I metodi di privacy possono essere configurati solo per i gruppi con Autenticazione e Privacy configurati. Per ulteriori informazioni, fare clic <u>qui</u>. Nell'esempio riportato di seguito viene scelto DES.

Passaggio 12. (Facoltativo) Se si sceglie DES, scegliere l'autenticazione tramite password. Le opzioni sono:

- Crittografata questa opzione indica che la password verrà crittografata. Non verrà visualizzato come è stato immesso.
- Testo normale questa opzione indica che la password non verrà crittografata. Verrà visualizzato durante l'immissione.

🗳 User Name:	SNMP User1 (10/20 characters used)
Engine ID:	Local Remote IP Address
Group Name:	SNMP_Group V
Authentication Method:	 None MD5 SHA
Authentication Password:	 Encrypted Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	NoneDES
Privacy Password:	Encrypted Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close]

Nota: Nell'esempio viene scelto Testo normale.

Passaggio	13.	Immettere	la	password DES.
-----------	-----	-----------	----	---------------

Г

🗳 User Name:	SNMP_User1 (10/20 characters used)
🌣 Engine ID:	Local Remote IP Address
Group Name:	SNMP_Group V
Authentication Method:	 None MD5 SHA
Authentication Password	 Encrypted Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	NoneDES
Privacy Password:	 Encrypted Plaintext password2 (9/32 characters used) (7/32 characters used)
Apply Close)

Nota: In questo esempio, la password DES è password2.

Passaggio 14. Fare clic su Applica, quindi su Chiudi.

User Name:	SNMP_User1 (10/20 characters used)
Sengine ID:	Local Remote IP Address
Group Name:	SNMP_Group V
Authentication Method:	 None MD5 SHA
Authentication Password:	 Encrypted
	Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	NoneDES
Privacy Password:	 Encrypted
	Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close	

Passaggio 15. (Facoltativo) Fare clic su Salva.



A questo punto, è possibile aggiungere un utente SNMP allo switch.

Modifica utenti SNMP

Passaggio 1. Accedere all'utility basata sul Web dello switch.

Passaggio 2. Impostare la modalità di visualizzazione su Avanzate.

Nota: Questa opzione non è disponibile sugli switch serie SG300 e SG500. Se si dispone di questi modelli, andare al <u>passo 3</u>.

cisco	Language:	English	•	Display Mode:	Basic 🔹	Logout	SNA	About
itch					Basic			
iteri					Advanced			

Passaggio 3. Scegliere SNMP > Utenti.



Passaggio 4. Selezionare la casella di controllo corrispondente all'utente che si desidera modificare.

ι	Users						
The SNMP service is currently disabled. For a user configuration to be effective, its associated Groups/ Views must be defined, and the SNMP service must be enabled.							
	Use	r Table					
	2	User Name	Group Name	Engine ID	IP Address	Authentication Method	Privacy Method
(~	SNMP_User1	SNMP_Group	Local		SHA	DES
Add Edit Delete							
An * indicates that the corresponding user configuration is inactive because the associated group no longer exists.							

Passaggio 5. Fare clic su Modifica.

U	se	ers					
Th Fo	The SNMP service is currently disabled. For a user configuration to be effective, its associated Groups/ Views must be defined, and the SNMP service must be enabled.						
l	Jse	er Table					
6		User Name	Group Name	Engine ID	IP Address	Authentication Method	Privacy Method
		SNMP_User1	SNMP_Group	Local		SHA	DES
	Add Edit Delete						
An * indicates that the corresponding user configuration is inactive because the associated group no longer exists.							

Passaggio 6. Modificare le impostazioni.

🜣 User Name:	SNMP_User1 (10/20 characters used)
🌣 Engine ID:	Local Remote IP Address
Group Name: Authentication Method:	SNMP_Group V SNMP_Group MD5 SHA
Authentication Password	 Encrypted Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	 None DES
Privacy Password:	 Encrypted Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close)

Passaggio 7. Fare clic su Applica, quindi su Chiudi.

🜣 User Name:	SNMP_User1 (10/20 characters used)
🌣 Engine ID:	Local Remote IP Address
Group Name: Authentication Method:	SNMP_Group SNMP_Group MD5 SHA
Authentication Password	 Encrypted Plaintext password1 (9/32 characters used) (The password is used for generating a key)
Privacy Method:	NoneDES
Privacy Password:	 Encrypted Plaintext password2 (9/32 characters used) (The password is used for generating a key)
Apply Close)

Passaggio 8. (Facoltativo) Fare clic su **Salva**.



Le impostazioni utente SNMP dovrebbero essere state modificate.