# Installazione di una chiave di rilascio VCS tramite l'interfaccia Web e l'esempio di configurazione della CLI

## Sommario

Introduzione Prerequisiti Requisiti Componenti usati Configurazione Esempio di installazione della chiave di rilascio dell'interfaccia Web Esempio di installazione della chiave di rilascio CLI Verifica Verifica interfaccia Web dell'installazione della chiave di rilascio Verifica dell'interfaccia CLI dell'installazione della chiave di rilascio Risoluzione dei problemi

### Introduzione

In questo documento viene descritta l'installazione di una chiave di versione su un Cisco Video Communication Server (VCS) tramite l'interfaccia Web e l'interfaccia della riga di comando (CLI).

## Prerequisiti

### Requisiti

Cisco raccomanda la conoscenza dei seguenti argomenti:

Installazione di VCS

Installazione del software VCS completata. Applicazione di un indirizzo IP valido raggiungibile tramite interfaccia Web e/o CLI.

aver richiesto e ricevuto una chiave di rilascio valida per il numero di serie del software VCS.

Accedere al software VCS sia con root (dalla CLI) sia con l'account admin tramite interfaccia Web o CLI.

Èstata scaricata un'immagine di aggiornamento del software VCS da Cisco.com.

**Nota:** Le guide all'installazione sono disponibili qui: <u>http://www.cisco.com/c/en/us/support/unified-communications/telepresence-video-communication-server-vcs/products-installation-guides-list.html</u>

#### Componenti usati

Le informazioni di questo documento si basano sulle seguenti versioni software:

VCS versione x8.6.1 e x8.7.3

Versioni di VCS Control x7.X e x8.X

Versioni VCS Expressway x7.X e x8.X

PuTTY (software di emulazione terminale)

- In alternativa, è possibile utilizzare qualsiasi software di emulazione terminale che supporti SSH, ad esempio Secure CRT, TeraTerm e così via.

PSCP (client PuTTY Secure Copy Protocol)

- È possibile utilizzare qualsiasi client che supporti SCP.

E-mail sulle licenze con una chiave di rilascio o di aggiornamento.

Un browser Web. In questo esempio, Firefox è utilizzato, Internet Explorer e Chrome dovrebbe funzionare ugualmente bene.

Le informazioni discusse in questo documento fanno riferimento a dispositivi usati in uno specifico ambiente di emulazione. Su tutti i dispositivi menzionati nel documento la configurazione è stata ripristinata ai valori predefiniti. Se la rete è operativa, valutare attentamente eventuali conseguenze derivanti dall'uso dei comandi.

### Configurazione

#### Esempio di installazione della chiave di rilascio dell'interfaccia Web

Sono disponibili due opzioni:

Nell'opzione uno, è possibile impostare il tasto di rilascio.

Nel secondo caso, è possibile aggiungere la chiave di rilascio come parte del processo di **aggiornamento**.

Entrambe le opzioni funzionano e verrà visualizzata prima l'opzione **set** seguita dall'opzione **upgrade**.

Nota: Entrambe le opzioni richiedono il riavvio di VCS.

Nota: Entrambe le opzioni utilizzano lo stesso esempio di licenza e-mail.

L'opzione 1 mostra l'opzione **set**. Questo video di esempio dell'interfaccia Web completa questo documento.

Passaggio 1: Dopo aver installato il software VCS, aver ottenuto il numero di serie e aver richiesto la chiave di versione utilizzando la chiave PAK e il numero di serie, l'utente riceve un'e-mail di licenza dal team che gestisce le licenze Cisco, che può contenere o meno una chiave di versione e le chiavi di opzione. Nell'e-mail di esempio, è possibile vedere la chiave di rilascio utilizzata per questo documento.

Nota: Gli esempi di chiave PAK non rientrano nell'ambito di questo documento.

#### **ESEMPIO DI EMAIL**

You have received this email because your email address was provided to Cisco Systems during the Serial Number Lookup process for software license activation key/file. Please read this email carefully and forward it with any attachments to the proper system administrator if you are not the correct person. System Serial Number : 0B616767 Hardware Serial Number : 0B616767 00000000 MAC Address Service Contract : -: 000000000000 SC End Date 1.1 L-VCS-FINDME: Software Part Name Sample Release Tandberg Item No Shipped Version : L-VCS-FINDME:VCS - Enable User Policy feature Key Shipped Version . Shipped Version Key : 116341U00-1-1C328745 Shipped Image URL Upgrade To Upgrade To Key Upgrade To Image URL . . . : 7513492028475672 1.1 Options Cisco Option Name :LIC-VCS-300: Tandberg Option Name :116341X300:VCS - add 300 non-traversal calls Option Key :116341X300-1-7D03B558 Option Key Options Cisco Option Name :LIC-VCS-DEVPROV: Tandberg Option Name :116341P00:VCS - Enable Device Provisioning Option Key :116341P00-1-1FEB68A1 Options Cisco Option Name :LIC-VCS-GW: Tandberg Option Name :116341G00:VCS - Enable GW feature :116341G00-1-96554215 Option Key

Passaggio 2: Accedere all'interfaccia Web del software VCS tramite un browser Web. Effettuare l'accesso con un account **admin** e visualizzare la schermata di stato di VCS.

Nota: Alcune cifre sono state offuscate nel documento.

CISC	Cisc	o TelePresen	ce Video Co	mmunic	ation Server Cor	ntrol		This system has 5 alarms
Status	System	Configuration	Applications	Users	Maintenance			- <u> </u>
Overvi	ew							You are here: Status • Overv
System	information			Note: I	ogin brings you to th	he Status Screen		
System r	name	VCS-C						
Up time		22 days 3	32 minutes 11 seco	onds				
Software	version	X8.6.1						
IPv4 add	ress		101					
Options		500 Non 1 Interoperation	Traversal Calls, 15 ability.	0 Traversal	Calls, 2500 Registration	is, Encryption, Interwor	rking, FindMe, I	Device Provisioning, Microsoft
Resourc	e usage (last	updated: 17:07:52 8	EDT)	_			_	
Non-trave	ersal calls	Current	0					
		Peak	0					
		Since last restart	0		1			
		License usage cu	ment 0%					
		License usage pe	ak 0%					
Traversal	calls	Current video	0					
		Current audio (SIF	P) 0					
		Peak video	0					
		Peak audio (SIP)	0					
		Since last restart v	ideo 0					
		Since last restart a (SIP)	oudio 0					
		License usage cu	ment 0%					
		License usage per	ak 0%					
Registrat	ions	Current	0					
		Peak	0					
		Since last restart	0					
		License usage cu	ment 0%					
		License usage per	ak 0%					

alada

Passaggio 3: Per installare la **chiave** di **rilascio**, passare alla schermata appropriata. Passare il mouse sulla scheda di manutenzione.

Status     System     Configuration     Applications     Users     Maintenance     Click on Maintenance       System information     System information     VCS-C     Up time     22 days 32 minutes 11 seconds       Sodiumite version     X8.6.1     IPAL address     III       Creare usage (last updated: 17.07.62 EDT)     Volumentation     Maintenance       Montraversial calls     Current     0     Peak       Since last retart     0     Peak volume     0       Dense usage current     0%     Peak volume     0       Since last retart audo (SIP)     0     Peak volume     0       Disince last retart audo (SIP)     0     Peak volume     0       Since last retart audo (SIP)     0     Peak volume     0       Since last retart audo (SIP)     0     Peak volume     0       Ucense usage current     0%     Peak volume     0       Ucense usage current     0%     Peak volume     0       Since last retart audo (SIP)     0     Since last retart audo 0     0       Ucense usage current     0%     Peak volume     0       Disnoe last retart     0     Peak volume     0       Disnoe last retart     0     Peak volume     0       Ucense usage current     0% <td< th=""><th>ciso</th><th>Cise</th><th>co TelePresen</th><th><b>ce</b> Video Co</th><th>mmunic</th><th>ation Server Cor</th><th>ntrol</th><th>This system has 5 alarms</th></td<>	ciso	Cise	co TelePresen	<b>ce</b> Video Co	mmunic	ation Server Cor	ntrol	This system has 5 alarms
Overview         You are here: Salue * Overview           System information         System nome         VCS-C           Up time         22 days 32 minutes 11 seconds         Soloware version           Soloware version         X38.61         Interception           Pv4 address         01         Soloware version           Soloware version         X38.61         Interception           Pv4 address         01         Soloware version           Soloware version         X38.61         Interception           Pv4 address         01         Soloware version           Soloware version         X38.61         Interception           Pvest         00         Since last restart         0           Since last restart         0         Since last restart         0           License usage current         0%         Uncertained (SIP)         0           Since last restart video         0         Since last restart video         0           Since last restart video         0         Since last restart video         0           Unerret usage current         0%         Unerret usage current         0%           License usage current         0%         Unerret usage current         0%           License usage current	Status	System	Configuration	Applications	Users	Maintenance	Click on Maintenance	2 @
System information         VCS-C           Up time         22 days 32 minutes 11 seconds           Software version         X38.1           IP-d address         101           Software version         S00 Non Traversal Cals, 150 Traversal Cals, 2500 Registrations, Encryption, Interventing, FindMe, Device Provisioning, Microsoft intercoperature, VCF-C           Version         500 Non Traversal Cals, 150 Traversal Cals, 2500 Registrations, Encryption, Interventing, FindMe, Device Provisioning, Microsoft intercoperature, VCF-C           Resource usage (last updated: 17:07:52 EDT)           Non-traversal cals         Current         0           Peak         0         Since last restart         0           License usage current         0%         Ucense usage peak         0%           Traversal cals         Current video         0         Since last restart video         0           Since last restart video         0         Since last restart video         0           Since last restart video         0         Since last restart video         0           Unerner usage current         0%         Ucense usage current         0%           License usage current         0%         Ucense usage current         0%           License usage current         0%         Ucense usage current         0%	Overvi	ew					mainenance	You are here: Status • Overview
System name         VCS-C           Up im         22 days 32 minutes 11 seconds           Software version         X8.6.1           IP-4 address         Io1           Software version         S00 Non Traversal Calls, 150 Traversal Calls, 2500 Registrations, Encryption, Intervorking, FindMe, Device Provisioning, Microsoft Intercoprability.           Resource usage (last updated: 17.07.62 EDT)           Non-traversal calls         Current           Peak         0           Peak         0           License usage current         0%           License usage current         0%           Since last restart         0           Since last restart dado         0           License usage current         0%	System i	information						·
Up tme     22 days 32 minutes 11 seconds       Softwore version     X8.1       Pv4 address     101       Octions     Softwore Version       Softwore usage (last updated: 17:07:52 EDT)         Non-traversal cats     Current     0       Peak     0       Since last restant     0       License usage peak     0%       Traversal cats     Current wideo     0       Current audio (SIP)     0       Peak video     0       Since last restant     0       Peak video     0       Dense usage current     0%       License usage current     0%       License usage current     0%       Execurce usage current     0%       Current audio (SIP)     0       Peak video     0       Since last restant video     0       Current audio (SIP)     0       Peak video     0       Ucense usage current     0%       License usage current     0%	System n	iame	VCS-C					
Software version     X8.6.1       IP-4 address	Up time		22 days 3	2 minutes 11 seco	onds			
Intercent state     Intercent state       Outcom     Source class calls, 150 Traversal Calls, 2500 Registrations, Encryption, Intervorking, FindMe, Device Provisioning, Microsoft       Resource class (calls)     Current     0       Peak     0       Since last restart     0       License usage current     0%       License usage current     0%       Deak     0       Peak video     0       Peak video     0       Since last restart video     0       Since last restart video     0       Disce last restart video     0       Since last restart video     0       Registrations     Current     0%       License usage current     0%       License usage current     0%       License usage current     0%       License usage peak     0%	Software	version	×8.6.1					
Cotions         500 Non Traversal Calis, 150 Traversal Calis, 2500 Registrations, Encryption, Interworking, FindMe, Device Provisioning, Microsoft Interoperability.           Retsource usage (last updated: 17.07.62 EUT)         0           Peak         0           Peak         0           Since last restart         0           License usage current         0%           Traversal calis         Current wideo         0           Peak video         0         0           Peak video         0         0           Peak video         0         0           Peak video         0         0           Disce last restart audio (SIP)         0         0           Since last restart video         0         0           Since last restart video         0         0           Since last restart video         0         0           License usage current         0%         0           License usage current         0%         0           Eregistrations         Current         0         0           Since last restart         0         0         0           License usage current         0%         0         0           License usage current         0%         0<	IPv4 addr	1955		101				
Resource usage (last updated: 17:07:52 EDT)       Non-traversal cals     Current     0       Peak     0       Since last restart     0       License usage current     0%       License usage peak     0%       Traversal cals     Current video     0       Qurrent video     0       Peak video     0       Peak video     0       Since last restart video     0       License usage current     0%       License usage peak     0%	Options		500 Non T Interopera	fraversal Calls, 15 ability.	0 Traversal (	Calls, 2500 Registration	ns, Encryption, Interworking, FindM	le, Device Provisioning, Microsoft
Non-Insensal calls       Current       0         Peak       0         Since last restart       0         License usage current       0%         Treversal calls       Current video         Current audio (SIP)       0         Peak audio (SIP)       0         Peak audio (SIP)       0         Since last restart audio       0         Cirrent usage current       0%         License usage current       0%         License usage current       0%         Resistrations       Current         Peak       0         Since last restart       0         License usage current       0%         License usage current       0%         License usage current       0%	Resourc	e usage (last	updated: 17:07:52 E	OT)	_			
Peak       0         Since last restart       0         License usage current       0%         License usage peak       0%         Traversal calls       Current video         Current audio (SIP)       0         Peak video       0         Peak video       0         Peak video       0         Since last restart video       0         Since last restart video       0         License usage current       0%         License usage current       0%         License usage current       0%         Registrations       Current       0         Peak       0       0         License usage current       0%       0         License usage current       0%       0         License usage current       0%       0         License usage current       0       0         License usage current       0%       0         Since last restart       0       0         License usage current       0%       0%	Non-trave	rsal calls	Current	0				
Since last restart       0         License usage current       0%         License usage peak       0%         Traversal cals       Current video       0         Current audio (SIP)       0         Peak video       0         Peak audio (SIP)       0         Since last restart video       0         License usage current       0%         License usage peak       0%         Registrations       Current       0         Peak       0         Since last restart       0         License usage current       0%         License usage current       0%         License usage current       0%			Peak	0				
License usage current 0% License usage peak 0% Current audio (SIP) 0 Peak video 0 Peak video 0 Peak audio (SIP) 0 Since last restart video 0 Since last restart video 0 License usage current 0% License usage peak 0% Registrations Current 0 Peak 0 Since last restart 0 License usage current 0%			Since last restart	0		1		
License usage peak       0%         Traversal calls       Current video       0         Current audio (SIP)       0       Peak video       0         Peak video       0       Since last restart video       0         Since last restart video       0       Since last restart video       0         License usage current       0%       Uitense usage peak       0%         Recistrations       Current       0       Disce last restart       Disce last restart         License usage peak       0%       Disce last restart       Disce last restart       Disce last restart         License usage peak       0%       Disce last restart       Disce last restart       Disce last restart         License usage current       0%       Disce last restart       Disce last restart       Disce last restart         License usage current       0%       Disce last restart       Disce last restart       Disce last restart         License usage current       0%       Disce last restart       Disce			License usage cur	rent 0%				
Traversal calls       Current video       0         Current audio (SIP)       0         Peak video       0         Peak audio (SIP)       0         Since last restart video       0         Since last restart audio       0         License usage current       0%         License usage peak       0%         Peak       0         Since last restart       0         License usage current       0         Peak       0         Since last restart       0         License usage current       0%         License usage current       0%			License usage pea	ak 0%				
Current audio (SIP)       0         Peak video       0         Peak audio (SIP)       0         Since last restart video       0         Since last restart audio       0         License usage current       0%         License usage peak       0%         Since last restart       0         Peak       0         License usage current       0%         License usage current       0         Peak       0         Since last restart       0         License usage current       0%         License usage current       0%         License usage current       0%	Traversal	calls	Current video	0				
Peak video       0         Peak audio (SIP)       0         Since last restart video       0         Since last restart audio       0         License usage current       0%         License usage peak       0%         Peak       0         Since last restart       0         License usage current       0%         License usage current       0         License usage current       0         Peak       0         Since last restart       0         License usage current       0%			Current audio (SIP	P) 0				
Peak audio (SIP)     0       Since last restart video     0       Since last restart audio     0       License usage current     0%       License usage peak     0%       Peak     0       Since last restart     0       Since last restart     0       Since last restart     0       License usage current     0%			Peak video	0				
Since last restart video       0         Since last restart audio (SIP)       0         License usage current       0%         License usage peak       0%         Versitzations       Current         Peak       0         Since last restart       0         License usage current       0         Peak       0         Since last restart       0         License usage current       0%         License usage current       0%			Peak audio (SIP)	0				
Since last restart audio (SIP)       0         License usage current       0%         License usage peak       0%         Registrations       Current       0         Peak       0         Since last restart       0         License usage current       0%         License usage current       0%         License usage current       0%         License usage current       0%			Since last restart v	ideo 0				
License usage current       0%         License usage peak       0%         Registrations       Current       0         Peak       0         Since last restart       0         License usage current       0%			Since last restart a (SIP)	udio 0				
Registrations     Current     0       Peak     0       Since last restart     0       License usage current     0%			License usage cur	rent 0%				
Registrations     Current     0       Peak     0       Since last restart     0       License usage current     0%			License usage per	sk 096				
Peak 0 Since last restart 0 License usage current 0%	Desistant		Correct					
Since last restart 0 License usage current 0%	100,000,000		Deak	0				
License usage current 0%			Since last restert	0				
License usage peak 0%			License usage cur	vint 0%				
			License usage con	sk 0%				

Passaggio 4: Quando viene visualizzato il menu, fare clic su **Tasti opzione**:

Status System	Configuration App	olications Users	Maintenance					🛁 🤉 😁
Overview			Upgrade			٢	fou are here:	Status • Overvie
System information			Logging					
System name	VCS-C		Option keys			Click on Option K	eys	
Up time	22 days 32 min	utes 11 seconds	Tools					
Software version	×8.6.1		Security certificates					
IPv4 address	.101		Dealers and such as					
Options	500 Non Traver	sal Calls, 150 Traversal C	Backup and restore		tion, In	terworking, FindMe, Device Pr	rovisioning, N	ficrosoft
Resource usage flas	t updated: 17:10:32 EDT)		Diagnostics	,				
			Maintenance mode					
Non-traversal calls	Current	0	Language					
	Peak	0	Restart options					
	Since last restart	0		-				
	License usage current	0%						
	License usage peak	0%						

Passaggio 5: Osservare la sezione Chiave di rilascio e se si tratta di una nuova installazione, è

presente un campo vuoto relativo alla chiave di rilascio. Il campo **Chiave di rilascio** per un'installazione VCS esistente viene precompilato con il valore della chiave di rilascio corrente. In questo caso, è possibile utilizzare l'opzione **Upgrade** (Aggiorna)per impostare la chiave di rilascio.

**Nota:** La chiave di rilascio non cambia tra gli aggiornamenti di versioni secondarie. La chiave di rilascio cambia solo tra gli aggiornamenti della versione principale, ad esempio da x7.X a x8.X.

Copiare e incollare la chiave di rilascio nel campo Chiave di rilascio:

Status	System	Configuration	Applications	Users	Maintenance		👗 🧿	Help. 😁 Log
Option k	keys						You are here: Maintena	nce • Option
Key	×			_	Description	Status	Validity period	
11634	41C00-1-1E	7D8EDE		,	Microsoft Interoperability	Active	Unlimited	^
11634	41G00-1-965	54215		)	H323-SIP Interworking Gateway	Active	Unlimited	=
11634	41P00-1-1FE	B68A1		(	Device Provisioning	Active	Unlimited	
11634	41U00-1-1C	328745		1	FindMe	Active	Unlimited	-
System in Serial num Active opti	nformation nber ions		08610 500 N Devic	6767 Ion Traversa e Provisioni	al Calls, 150 Traversal Calls, 2500 ing, Microsoft Interoperability.	Registrations, Encr	yption, Interworking, FindMe,	
System in Serial num Active opti	nformation nber ions		0B610 500 N Devic	6767 Ion Traversa e Provisioni	al Calls, 150 Traversal Calls, 2500 ing, Microsoft Interoperability.	Registrations, Encr	yption, Interworking, FindMe,	
System in Serial num Active option	nformation nber ions option		08611 500 N Devic	6767 ion Traversa e Provisioni	al Calls, 150 Traversal Calls, 2500 ng, Microsoft Interoperability.	Registrations, Encr te the Release K a new VCS. This	yption, Interworking, FindMe, ey section and the blank fie may have a value if the rele	eld if this pase key
System in Serial num Active opti Software Add option	nformation nber ions option n key		0B610 500 N Devic	6767 Ion Traversa e Provisioni	al Calls, 150 Traversal Calls, 2500 ing, Microsoft Interoperability. No. is	Registrations, Encry ote the Release K a new VCS. This already installed. K	yption, Interworking, FindMe, ey section and the blank fir may have a value if the rele Copy your newly acquired (ey into this field.	eld if this base key Release
System in Serial num Active opti Software Add option	nformation nber ions option n key		0B610 500 N Devic	6767 Ion Traversa e Provisioni	al Calls, 150 Traversal Calls, 2500 ing, Microsoft Interoperability.	Registrations, Encry te the Release K a new VCS. This already installed. K	yption, Interworking, FindMe, ey section and the blank fir may have a value if the rele Copy your newly acquired (ey into this field.	eld if this ease key Release
System in Serial num Active option Software Add option Add option	nformation nber option n key		0B61/ 500 N Devic	6767 Ion Traversa e Provisioni	al Calls, 150 Traversal Calls, 2500 ing, Microsoft Interoperability.	Registrations, Encry te the Release K a new VCS. This already installed. K	yption, Interworking, FindMe, ey section and the blank fir may have a value if the rele Copy your newly acquired (ey into this field.	eld if this ase key Release

Passaggio 6: È possibile visualizzare il codice di rilascio incollato nel campo Codice di rilascio.

Status	System	Configuration	Applications	Users	Maintenance		🛓 🥑 E	telo. 😁 Logo
Optio	n keys						You are here: Maintena	nce • Option k
к	ey v			_	Description	Status	Validity period	
11	16341C00-1-1E	7D8EDE			Microsoft Interoperability	Active	Unlimited	-
11	16341G00-1-96	554215			H323-SIP Interworking Gateway	Active	Unlimited	=
11	16341P00-1-1F8	EB68A1			Device Provisioning	Active	Unlimited	
11	16341U00-1-1C	328745			FindMe	Active	Unlimited	-
Delete	Select all	Unselect all						
Curta	minformation							
oyster	m information							
Corial	number		00010	707				
Gena	i i uni i uni i		UBOIC	161				
Active	options		500 N Device	on Travers Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry	ption, Interworking, FindMe,	
Active	options are option		500 N Device	on Travers Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry	ption, Interworking, FindMe,	
Active Softw Add op	options are option		500 N Device	on Travers Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry Here, I've paste emai	ption, Interworking, FindMe, d in the release key from o il example above.	ur
Active Softw Add op	options are option otion key		500 N Device	on Travers Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry Here, I've paste emai	ption, Interworking, FindMe, d in the release key from o il example above.	ur
Active Softw Add op	options are option otion key tion se key		500 N Device	on Travers Provision	al Calls, 150 Traversal Calls, 2500 R ing, Microsoft Interoperability.	egistrations, Encry Here, I've paste emai	ption, Interworking, FindMe, d in the release key from o il example above.	ur

Current licenses

Passaggio 7: Fare clic su Set release key:

CISCO Cisco TelePresence Vi	deo Communication Server Control	This syste	m has 6 alarms
Status System Configuration Applic	ations Users Maintenance	-	👔 🕐 Help. 😔 Logo
Option keys		Ye	ou are here: Maintenance • Option I
Key =	Description	Status V	/alidity period
116341C00-1-1E7D8EDE	Microsoft Interoperability	Active U	Inlimited
116341G00-1-96554215	H323-SIP Interworking Gateway	Active U	Inlimited
116341P00-1-1FEB68A1	Device Provisioning	Active U	Inlimited
116341U00-1-1C328745	FindMe	Active U	Inlimited -
Serial number Active options Software option Add option key	0B616767 500 Non Traversal Calls, 150 Traversal Calls, 2500 R Device Provisioning, Microsoft Interoperability.	egistrations, Encryption, Int	terworking, FindMe,
Add option Release key Release key Set release key	7513492028475672 👔 Now I click Set release ke	y	
Current licenses		-	J

Passaggio 8: Fare clic sul collegamento ipertestuale **restart** nel prompt visualizzato nella parte superiore della pagina per riavviare il software VCS:

Status System Configuration /	pplications	Users	Maintenance		Ă 🤋 He	¢r ⊛ ro
ption keys					You are here: Maintenand	ce • Optio
Saved: The release key has been update	ed, however a <u>rest</u>	<u>tart</u> is req	uired for it to take effect.			
Key		0	escription	Status	Validity period	
116341C00-1-1E7D8EDE	- <b>+</b> -	N	ficrosoft Interoperability	Active	Unlimited	-
116341G00-1-96554215		н	323-SIP Interworking Gateway	Active	Unlimited	-
116341P00-1-1FEB68A1		D	levice Provisioning	Active	Unlimited	
116341U00-1-1C328745		F	indMe	Active	Unlimited	
Select all         Unselect all           System information           Serial number           Active options	0B61676 500 Non Device P	lotice ho steps 7 Traversal Provisionir	w a message comes up sayin from there to reload the VCS. Calls, 150 Traversal Calls, 2500 R Ig, Microsoft Interoperability.	g I need to rest Once rebooted egistrations, Encry	art, click on restart and follow d, the key will be installed. yption, Interworking, FindMe,	Y
Serial number Active options	0B61676 500 Non Device P	lotice ho steps 7 Traversal Provisionir	w a message comes up sayin from there to reload the VCS. Calls, 150 Traversal Calls, 2500 R ng, Microsoft Interoperability.	g I need to rest Once rebooted egistrations, Encry	art, click on restart and follow d, the key will be installed. yption, Interworking, FindMe,	v
Delete     Select all     Unselect all       System information       Serial number       Active options       Software option       Add option key	0B61676 500 Non Device P	lotice ho steps 7 Traversal 7rovisionin	w a message comes up sayin from there to reload the VCS. Calls, 150 Traversal Calls, 2500 R g, Microsoft Interoperability.	g I need to rest Once rebooted egistrations, Encry	art, click on restart and follow , the key will be installed. yption, Interworking, FindMe,	,
Delete       Select all       Unselect all         System information         Serial number         Active options         Software option         Add option key	0B61676 500 Non Device P	lotice ho steps 7 Traversal Provisionin	w a message comes up sayin from there to reload the VCS. Calls, 150 Traversal Calls, 2500 R ng, Microsoft Interoperability.	g I need to rest Once rebooted egistrations, Encry	art, click on restart and follow , the key will be installed. yption, Interworking, FindMe,	,
Delete       Select all       Unselect all         System information         Serial number         Active options         Software option         Add option         Add option         Release key	0B61676 500 Non Device P	lotice ho steps 7 Traversal rovisionin	w a message comes up sayin from there to reload the VCS. Calls, 150 Traversal Calls, 2500 R g, Microsoft Interoperability.	g I need to rest Once rebooted	art, click on restart and follow , the key will be installed. yption, Interworking, FindMe,	<b>v</b>

Opzione due: Opzione di aggiornamento per installare la chiave di rilascio

Passaggio 1: Dall'interfaccia Web, fare clic su **Manutenzione** come in precedenza, quindi su **Aggiorna** nel menu a comparsa.

Status System Configuration Applications Users	Maintenance		🛓 🕑 Help. 😔 Lozout
Upgrade Component *	Logging	You are here	K Maintenance • Upgrad
B2BUA Presence Relay B2BUA Service c_mgmt collectdsupport oaksupport stringencoderssupport System platform traffic_server xcp-vcs xcpsupport	Option keys Tools - Security certificates - Backup and restore Diagnostics - Maintenance mode Language Restart options	Click on Maintenance>Upgrade	~
Upgrade component WARNING: You should backup the system before upgrading. Select file Upgrade	m backup www		

Passaggio 2: Nella schermata Aggiorna è visualizzata la sezione Aggiorna componente.

**Nota:** in questo documento si presume che sia stata scaricata un'immagine di aggiornamento del software VCS sul computer locale.

Fare clic su **Sfoglia** per individuare l'immagine di aggiornamento VCS scaricata:

Status System Configuration Applicat	ions Users Maintenance	👗 😗 Helo. 😔 Loopul
Upgrade		You are here: Maintenance + Upgra
Component =	Version	Release key
B2BUA Presence Relay	1.0-319687	·
B2BUA Service	1.0-319687	
c_mgmt	8.6-1.0.319687	
collectdsupport	5128	
oaksupport	5128	
stringencoderssupport	5128	
System platform	×8.6.1	7513492028475672
traffic_server	5128	
xcp-vcs	1.0-319687	
xcpsupport	5128	
Upgrade component		
WARNING: You should backup the system before up Select file	rading. <u>System backso</u> BrowseNetworkstof	Click Browse to locate your upgrade image, then browse to the file on your local machine and upload.

Passaggio 3: Quando richiesto, immettere il valore della **chiave di rilascio** nel campo **Chiave di rilascio**. Copiare e incollare dall'e-mail o, se si tratta di un aggiornamento secondario come in questo caso, da x8.6.1 a x8.7.3, copiarlo e incollarlo dalla stessa schermata:

Status System Configuration Applica	tions Users Maintenance	👗 🖲 Helo. 😔 Logout
Upgrade		You are here: Maintenance • Upgra
Component -	Version	Release key
B2BUA Presence Relay	1.0-319687	A
B2BUA Service	1.0-319687	
c_mgmt	8.6-1.0.319687	
collectdsupport	5128	
oaksupport	5128	
stringencoderssupport	5128	
System platform	X8.6.1	7513492028475672
traffic_server	5128	
xcp-vcs	1.0-319687	
xcpsupport	5128	
Upgrade component		Once the file is selected, you can paste your release key
WARNING: You should beckup the system before up	s ograding. <u>Svatem backup</u>	in the held noted to the left. You can copy the release key from your licensing email. Or, if you are just doing a minor upgrade like in this example from 8.6.1 to 8.7.3, you can copy and casts the release key already installed which is
Select file	Browse \$42700x8_7_3.tar.gz	circled above in this example
Dalaana kau		

Passaggio 4: Fare clic sul pulsante **Aggiorna**. Controllare i processi che seguono e non uscire dal processo o ricominciare. L'immagine verrà caricata e quindi installata. Fare clic su **restart** quando richiesto.

Intenance You are here: Ma You are here:	2) Help. (e) Looo antenance - Uppri (e) looy for . This is grading to a from 1.0
You are here: Mo Version Release key 1.0-319687 1.0-319687 8.6-1.0.319687 5128	al key for . This is grading to a from 1.0
Version         Release key           1.0-319687         Information           1.0-319687         The 16-character release           8.6-1.0.319687         the new software version.           5128         not required if you are upg a dot release, for example 5128           5128         to 1.1.	key for This is grading to a from 1.0
Information           1.0-319687         Information           1.0-319687         The 16-character release           8.6-1.0.319687         the new software version.           5128         not required if you are upg a dot release, for example 5128           5128         to 1.1.	key for This is grading to p from 1.0
1.0-319987 The 16-character release 8.6-1.0.319687 The rew software version. 5128 not required if you are upg a dot release, for example to 1.1.	key for This is grading to e from 1.0
8.6-1.0.319687 the new software version. 5128 not required if you are upg a dot release, for example to 1.1.	This is grading to a from 1.0
5128 not required if you are upg a dot release, for example to 1.1.	grading to a from 1.0
5128 to 1.1.	e mom 1.0
5128	
120	
X8.6.1 7513492028475672	
5128	
1.0-319687	
5128	
Once the release key is pasted, you can click upgrade	le and then
s42700x8_7_3.ter.gz	you will have stalled and les back up, it be verified
51:	Once the release key is pasted, you can click upgrad follow the steps from there. Do not leave the screens or to start over. The image will first upload, then it gets in finally you restart the VCS. Once it is restarted and com should be on the new release and the release key can exactly the same as with a fresh install.

Verificare che la versione sia stata installata correttamente, una volta riavviato VCS. Utilizzare i due metodi descritti nella sezione **VERIFICA** di questo documento.

#### Esempio di installazione della chiave di rilascio CLI

Installare una **chiave di rilascio** dalla CLI. Si tratta di un processo in due parti che implica l'uso di un client SCP (PSCP in questo esempio dal prompt dei comandi (CMD) in Windows e di un'applicazione software di emulazione terminale come PuTTY.

Passaggio 1: Copiare la chiave di rilascio in un semplice file di testo ASCII. Accertarsi che non vi siano spazi prima o dopo il valore della chiave di rilascio. Copiare la chiave di rilascio nell'applicazione dell'editor di testo e salvare il file come **release-key.txt**:

release-key.txt	
File Edit Format View Help	
File         Edit         Format         View         Help           7513492028475672	First, open a plain text editor such as in this example, notepad. Be careful not to use an editor that saves the file in RTF format. It MUST be plain ASCII text. Paste the 16 digit release key from your email or Web Interface as noted previously in this article and save the file with the name "release-key.bt". Note the release key and filename syntax to the left.
4	

Passaggio 2: Posizionare il file **release-key.txt** e PSCP.exe nella stessa directory del computer. Passare a tale directory utilizzando un prompt dei comandi (CMD) in Windows e copiare la chiave di rilascio in una directory temporanea del software VCS. Utilizzare l'account radice per la transazione PSCP. Quando richiesto, immettere la password dell'account root. Verificare che il trasferimento sia stato completato come indicato da 100%. Di seguito è riportato un esempio:

:\Users\jawall\Desktop>pscp release-key.txt root@1101:/tmp/releas	e-key
Password:	
release-key.txt   0 kB   0.0 kB/s   ETA: 00:00:00   100%	
<pre>&gt;:\Users\jawall\Desktop&gt;pscp s42700x8_7_3.tar.gz root@ 101:/tmp/ta image.tar.gz Using keyboard-interactive authentication. Password: 42700x8_7_3.tar.gz   48644 kB   579.1 kB/s   ETA: 00:11:41   10%</pre>	ndber
Note in the first circle above, we are using a Windows CMD prompt where I've save the release-key.txt file to my desktop. In the first line, I've navigated to my desktop with the CMD command "cd desktop" and then am copying the file over to the VCS using free ware putty PSCP. In the next circle, I am copying over the image to the VCS using PSCP. and the third circled item is showing the progress. Once complet I will use putty SSH shell to restart the VCS.	d S e,

Passaggio 3: Copiare l'immagine a cui si desidera eseguire l'aggiornamento, ad esempio 8.7.3. Copiare l'immagine utilizzando PSCP. Verificare che lo stato sia 100%, che l'immagine software abbia completato la copia nel software VCS e che sia possibile riavviare il software:



Passaggio 4: Riavviare il VCS con una sessione SSH sul VCS. Aprire PuTTY e immettere l'indirizzo IP del software VCS. Fare clic su SSH per aprire:



Passaggio 5: Quando richiesto, fare clic su **Open** (Apri) e accedere al software VCS con un account amministratore. Quando richiesto, immettere la password dell'account amministratore. Verificare di disporre del comando corretto per riavviare VCS. Immettere il comando seguito da uno spazio e da un punto interrogativo per assicurarsi che sia corretto. Il software VCS conferma che **xCommand Boot** riavvierà il software VCS. Immettere il comando **xCommand Boot** per riavviare il software VCS.



Il VCS lampeggia quando si riavvia e la sessione PuTTy si chiude. Questo comportamento è normale in quanto la connessione viene interrotta al riavvio del software VCS. Il riavvio del sistema VCS richiede circa cinque minuti. Al termine, verificare che la chiave di rilascio sia stata installata correttamente tramite l'interfaccia Web o la CLI, come indicato nella sezione **VERIFY** di questo documento.

### Verifica

#### Verifica interfaccia Web dell'installazione della chiave di rilascio

Èpossibile verificare il codice di rilascio installato nell'interfaccia Web in due modi:

Opzione 1: Controllare la **pagina Opzioni: chiave** come indicato in precedenza e controllare il campo **Rilascio chiave**.

tatus System Configuration	Applications Users	Maintenance		🎽 🕐 Help. 😁
Option keys				You are here: Maintenance • Op
Key =		Description	Status	Validity period
116341C00-1-1E7D8EDE		Microsoft Interoperability	Active	Information
116341G00-1-96554215		H323-SIP Interworking Gateway	Active	Specifies the option key of your
116341P00-1-1FEB68A1		Device Provisioning	Active	software option. These are added to the system in
116341U00-1-1C328745		FindMe	Active	order to add extra functionality, such as increasing the system's
Delete Select all Unselect all				capacity. Contact your Cisco representative for further information.
System information				Range: 0 to 1024 characters
Serial number	0B616767			
Serial number Active options	0B616767 500 Non Traver	sal Calls, 150 Traversal Calls, 2500 R	egistrations, E	ncryption, Interworking, FindMe,
Serial number Active options	0B616767 500 Non Traver Device Provisio	sal Calls, 150 Traversal Calls, 2500 R ning, Microsoft Interoperability.	egistrations, E	ncryption, Interworking, FindMe,
Serial number Active options Software option	0B616767 500 Non Traver Device Provisio	sal Calls, 150 Traversal Calls, 2500 R ning, Microsoft Interoperability.	egistrations, E	ncryption, Interworking, FindMe,
Serial number Active options Software option Add option key	0B616767 500 Non Traver Device Provisio	sal Calls, 150 Traversal Calls, 2500 R ning, Microsoft Interoperability.	egistrations, E	ncryption, Interworking, FindMe,
Serial number Active options Software option Add option key Add option	0B616767 500 Non Trave Device Provisio	sal Calls, 150 Traversal Calls, 2500 R ning, Microsoft Interoperability.	egistrations, E	incryption, Interworking, FindMe,
Serial number Active options Software option Add option key Add option Release key	0B616767 500 Non Trave Device Provisio	sal Calls, 150 Traversal Calls, 2500 R ning, Microsoft Interoperability.	egistrations, E	incryption, Interworking, FindMe,

Opzione 2: Controllare la pagina Aggiorna come indicato in precedenza:

. .

Status System Configuration Ap	oplications Users Maintenance	🔺 🗿 Helo. 😔 Lozou
Jpgrade		You are here: Maintenance • Upgra
Component •	Version	Release key
2BUA Presence Relay 1.0-319687		· · · · · · · · · · · · · · · · · · ·
32BUA Service	1.0-319687	
c_mgmt	8.6-1.0.319687	
collectdsupport	5128	
paksupport	5128	
tringencoderssupport	5128	
System platform	X8.6.1	7513492028475672
raffic_server	5128	
icp-vcs	1.0-319687	
cpsupport	5128	
Upgrade component		
WARNING: You should backup the system	System backup	You can see the Release Key on the
before upgrading.		Upgrade Screen too.
Salart fila		

#### Verifica dell'interfaccia CLI dell'installazione della chiave di rilascio

Verificare la chiave di rilascio installata tramite l'interfaccia CLI da una sessione SSH alla CLI. Accedere con un account **admin** come indicato in precedenza in questo documento. A questo punto, usare il comando **xStatus System Unit Software**. L'aggiornamento è stato completato e la chiave di rilascio è installata:



### Risoluzione dei problemi

L'installazione della **chiave** di **rilascio** su un Cisco VCS non dovrebbe causare problemi. Immettere una **chiave di opzione** nel campo **Chiave di rilascio** del software VCS oppure immettere una **chiave di opzione** quando si esegue l'aggiornamento, le cause più comuni di errore. Nell'esempio e-mail citato all'inizio di questo articolo vengono mostrati **i tasti** di **opzione** oltre alla **chiave di rilascio**. Si verifica un errore quando si immette un tasto di opzione nel campo **Chiave rilascio**: սիսիս

CISCO Cisco TelePresence Video Communication Server Control

his system has 5 al 2 Help. 0 Log Status System Configuration Applications Users Maintenance You are here: Maintenance • Option I Option keys Saved. The release key has been updated, however a restart is required for it to take effect. inform Specifies the option key of your 16341C00-1-1E7DIEDE rosoft interoperability Active Unimited software option. These are added to the system in order to add exter functionality, such as increasing the system's capacity. Contact your Cisco representative Sector function of the system of the system's capacity. ŧ, 116341000-1-96554215 323-SIP Interworking Gat Active Unlimite 116341P00-1-1FEB68A1 Active oning Unlimb 116341U00-1-1C328745 Activ Uni for further informat Delete Select al. Unselect al. Range: 0 to 1024 characters System information Serial number 500 Non Tri rations, Encryption, Interworking, FindMe, Device Provisioning, Microsoft Interoperability Active options Software option Add option key Add option Here, I have pasted into the release key field to the left, the Microsoft Interoperability Option Key noted above. The VCS will let me do this, I then click Set release key which the VCS also lets me do and it prompts me to restart at the top of the page. elease key 116341C00-1-1E7D ۲ Set release key

Un VCS accetta qualsiasi valore nel campo **Chiave di rilascio**. Riavviare il software VCS con un valore non corretto e viene visualizzato il messaggio di errore "**Invalid release key**" (Chiave di versione non valida):

Status Syste	m Configuration Applications User	s Maintenance		🔺 🕑 Helo. 😔 Lozad
Overview				You are here: Status • Overvier
🕕 Invalid rele	see key: Release key is missing: the system is in der	nonstration mode and has limited	I functionality: contact your Cisco support representative to buy your release key.	
System information	sn			
System.name	VCS-C			
Up time	8 minutes 8 seconds			
Software version	X8.7.3			
Pv4.address	14.80.94.101			
Options	501 Non Traversal C	als, 150 Traversal Calls, 3 Regist	trations, Encryption, Interwork of FindMe, Device Provisioning, Microsoft Interoperability.	
Resource usage	(ast updated: 01:41:40 EDT)			
Non-Iomercual calls	Current	0		
	Peak.	0		
	Since last restart	0		
	License usage current	0%		
	License usage peak	0%	Now I have an Invalid Release Key To fix this, I simply follow the release key process noted in this document and install the	
Traversal cats	Current video	0	RELEASE KEY and not an option key.	
	Current audio (SIP)	0		
	Peakvideo	0		
	Peak audio (SIP)	0		
	Since last restart video	0		
	Since last restart audio (SIP)	0		
	License usage current	0%		
	License usage peak	0%		
Devisionations	Current			
	Peak	0		
	Since last restart	0		
	License usage current	0%		
	and an an an and a second			

Per correggere questa condizione, installare una **chiave** di **rilascio** come indicato in questo documento.

Richiedere assistenza a Cisco TAC per qualsiasi altro tipo di errore.