Procedura per configurare Cisco Aironet 1142 e registrare il telefono Wi-Fi 7925 con CUCM

Sommario

Introduzione **Prerequisiti** Requisiti Componenti usati Configurazione Configurazione Access Point Come accedere al punto di accesso (AP) Abilita interfacce radio Aggiungi nuova VLAN Creazione di un nuovo SSID e associazione della VLAN Come rendere SSID visibile ai client Verifica dei client connessi **Configurazione CUCM** Come aggiungere il telefono 7925 al server CUCM Configurazione telefonica fisica 7925 Nome profilo Configurazione della rete Configurazione della WLAN Verifica Risoluzione dei problemi

Introduzione

Questo documento descrive come registrare un telefono wireless Cisco su un server Cisco Unified Communications Manager (CUCM). Questo documento contiene una configurazione dettagliata di CUCM, Access Point e telefono wireless.

Prerequisiti

Requisiti

Cisco raccomanda la conoscenza dei punti di accesso CUCM e Cisco.

Componenti usati

Le informazioni fornite in questo documento si basano sulle seguenti versioni software e hardware:

• CUCM versione 9.1.2.15126-1.

- Access point Cisco Aironet serie 1140, versione 15.3(3)JBB2
- Cisco 7925 phone, versione 1.4(7)

Le informazioni discusse in questo documento fanno riferimento a dispositivi usati in uno specifico ambiente di emulazione. Su tutti i dispositivi menzionati nel documento la configurazione è stata ripristinata ai valori predefiniti. Se la rete è operativa, valutare attentamente eventuali conseguenze derivanti dall'uso dei comandi.

Configurazione

Utilizzare le informazioni descritte in questa sezione per registrare un telefono senza fili Cisco con il server CUCM.

Accesso Configurazione punto

Come accedere al punto di accesso (AP)

Configurare DHCP sullo switch L3 o verificare che lo switch a cui verrà connesso Aironet abbia accesso al server DHCP.



Dopo aver collegato Aironet alla porta dello switch Cisco, è possibile trovare i dettagli di Aironet usando il comando **show cdp neighbors** sullo switch.

Ramebala_vlan487#sh cdp neighbors									
Capability Codes:	: R - Router, T -	Trans Bridg	e, B - Source	e Route Bri	.dge				
	S - Switch, H -	Host, I - I	GMP, r - Repe	eater, P -	Phone,				
	D - Remote, C -	CVTA, M - T	wo-port Mac H	Relay					
Device ID	Local Intrfce	Holdtme	Capability	Platform	Port ID				
SEPDC7B94F8C4BB	Fas 0/7	140	ΗΡΜ	IP Phone	Port 1				
SEPD0C282D07393	Fas 0/17	131	ΗΡΜ	IP Phone	Port 1				
SEP002497AB40D8	Fas 0/11	147	ΗΡΜ	IP Phone	Port 1				
SEP2893FE1262C4	Fas 0/14	174	ΗΡΜ	IP Phone	Port 1				
SEP503DE57D9995	Fas 0/19	169	ΗΡΜ	IP Phone	Port 1				
SEPB41489A2F295	Fas 0/13	127	ΗΡΜ	IP Phone	Port 1				
BGL14.M.18-LAP114	42-1.LAB.com								
	Fas 0/6	157	ТВІ	AIR-AP114	Gig O				
UC-LAB-CUBE-SWITC	CH-FD2								
	Fas 0/24	153	RSI	WS-C3750E	Gig 2/0/5				

Per conoscere l'indirizzo IP dell'Aironet (che avrebbe dovuto usare via DHCP), usare il comando **show cdp neighbors fa 0/6 detail** sullo switch.

Ramebala_vlan487#show cdp neighbors fa 0/6 detail
<pre>Device ID: BGL14.M.18-LAP1142-1.LAB.com Entry address(es): IP address: 10.106.122.152 IPv6 address: FE80::CEEF:48FF:FEFA:4426 (link-local) Platform: cisco AIR-AP1142N-A-K9, Capabilities: Trans-Bridge Source-Route-Bridge IGMP Interface: FastEthernet0/6, Port ID (outgoing port): GigabitEthernet0 Holdtime : 166 sec</pre>
<pre>Version : Cisco IOS Software, C1140 Software (C1140-K9W7-M), Version 15.3(3)JBB2, RELEASE SOFTWARE (fc1) Technical Support: http://www.cisco.com/techsupport Copyright (c) 1986-2015 by Cisco Systems, Inc. Compiled Thu 27-Aug-15 19:02 by prod_rel_team</pre>
advertisement version: 2 Duplex: full Power drawn: 15.400 Watts Power request id: 44652, Power management id: 2 Power request levels are:15400 14500 0 0 0 Management address(es): IP address: 10.106.122.152

Il nome utente e le password predefiniti per Aironet sono Cisco e Cisco.

Per apportare le modifiche alla configurazione, è possibile usare l'accesso tramite interfaccia grafica utente (GUI) di Aironet o l'accesso tramite interfaccia della riga di comando (CLI) di Aironet. In questo documento è stato fatto uso dell'accesso GUI di Aironet.

ແມ່ນເມ່ນ cisco	HOME NETWORK ASSOCIATION WIRELE	SS SECURITY SERVICES MANAGEMEN	Saye Configuration Ping Logout <u>R</u> efree T SOFTWARE EVENT LOG					
Home Summary	cisco	Cisco Aironet 114	0 Series Access Point 🛛 🗐 🗃					
Network Assistant	Hostname BGL14.M.18-LAP1142-1		BGL14.M.18-LAP1142-1 uptime is 11 hours, 58 minutes					
	Home: Summary Status Association							
	Clients: 0 Network Identity		Infrastructure clients: 0					
	IP Address IPv6 Address		10.106.122.152 FE80-CEFF-48FF-EFFA-4426					
	MAC Address		ccef 48fa 4426					
	Interface	MAC Address	Transmission Rate					
	GigabitEthernet Radio0-802.11N ^{2.4GHz}	ccef.48fa.4426 2c3f.387f.4810	100Mbps Mcs Index 15					
	Radio1-802.11N ^{5GHz}	2c3f.3871.9c00	Mcs Index 15					

Abilita interfacce radio

Passare al menu **NETWORK** e fare clic su ciascuna interfaccia Radio e selezionare il pulsante di opzione **Enable** (Abilita) in **Enable Radio** (Abilita radio) della scheda **SETTINGS** (IMPOSTAZIONI), come mostrato nell'immagine. Abilitare tutte le interfacce radio.

iiliilii cisco	<u>H</u> OME	NETWORK	<u>A</u> SSOCIATION	WIRELESS	<u>s</u> ecurity	<u>s</u> ervices	<u>M</u> ANAGEMENT	<u>S</u> OFTWARE	<u>E</u> VENT LOO
NETWORK	H	RADIO0-802.	11N ^{2.4GHZ} STATUS 4.M.18-LAP1142-1	I	DETAI	LED STATUS	Ĩ	SE	TTINGS
NETWORK MAP Summary Adjacent Nodes NETWORK INTERFACE	,	Network Interf	aces: Radio0-802	11N ^{2.4GHz} Se	ettings				
Summary IP Address		Operating Mo	de:		Mixed				Disable
GigabitEthernet0 Radio0-802.11N 2.4GHz		Enable Radio:	s (Software/Hardv	vare):	Disable	able d		0	Disable
Radio1-802.11N 5GHz	1	Role in Radio	Network:		 Acc Acc Acc Acc Rep 	ess Point ess Point (Fal ess Point (Fal peater	lback to Radio Shu Iback to Repeater)	utdown)	
					Roo	ot Bridge			

Aggiungi nuova VLAN

Andare al menu **SECURITY** e selezionare **SSID Manager**. Dopo aver fatto clic su **Define VLANs**, sarà possibile aggiungere le VLAN. Al termine, fare clic sul pulsante **APPLY**.

ahaha									Sa <u>v</u> e C
CISCO	<u>H</u> OME <u>N</u> ETWOR	K <u>A</u> SSOCIATION	WIRELESS	<u>SECURITY</u>	<u>S</u> ERVICES	<u>M</u> ANAGEMEN I	<u>S</u> OFTWARE	<u>E</u> VENT LOG	
Security	Hostname ap								
Admin Access									
Encryption Manager	Security: Gl	obal SSID Manager							
SSID Manager	SSID Proper	ties							
Dot11u Manager	Current SSI	D List							
Server Manager					SS	ID:			
AP Authentication					VI	AN.			
Intrusion Detection								Backup 1	Deline VLANS
Local RADIUS Server								Backup 2:	
Advance Security			~					Backup 3:	
					Ba	nd-Select:		Band Se	elect
					Un	iversal Admin Mo	ode:	Universa	al Admin Mode
					Int	erface:		Radio0-8	02.11N ^{2.4GHz}
								Radio1-8	02.11N ^{5GHz}
	Network	ID:	(0-409	6)					
	Delete								

Come mostrato nell'immagine, la VLAN 487 viene aggiunta e controllata per entrambe le radio.

Se la VLAN è nativa, è possibile selezionare la casella VLAN nativa.

DOSTNAME DGL14.WI.TO-LAPT142-1		DGL14.WI.To-LAPT142-1 Uptime is 14 nours,
Services: VLAN		
Global VLAN Properties		
Current Native VLAN: None		
Assigned VLANs		
Current VLAN List	Create VLAN	Define SSIDs
< NEW >^		
	VLAN ID:	487 (1-4094)
	VLAN Name (optional):	
- Delete	🔽 Native VLAN	
	Enable Public Secure Packet Forw	arding
	Radio0-802.11N ^{2.4GHz}	
	Radio1-802.11N ^{5GHz}	
	Management VLAN (If non-native)	
		Apply

Creazione di un nuovo SSID e associazione della VLAN

Passare al menu **SECURITY** e selezionare **SSID Manager**.

Selezionare **<NEW>** in Current **SSID List** e fornire il valore SSID.

Selezionare la casella per entrambe le interfacce radio.

،،۱۱،،۱۱، cısco	<u>H</u> ome <u>N</u> etwork	ASSOCIATION	WIRELESS	<u>s</u> ecurity	<u>s</u> ervices	<u>M</u> ANAGEMENT	<u>S</u> OFTWARE	<u>e</u> vent log	Sa <u>v</u> e (
Security Admin Access Encryption Manager SSID Manager	Hostname BGL Security: Glo SSID Properti	14.M.18-LAP1142-1 bal SSID Manager ies	_						BGL14.M.18-LAP1
Dot11u Manager Server Manager AP Authentication Intrusion Detection Local RADIUS Server Advance Security	Current SSID List				SSID: VLAN:			voicelab < NONE > ▼ <u>Define VLANs</u> Backup 1: Backup 2: Backup 3:	
					Ba	nd-Select:		Band Se	lect
					Un	iversal Admin Mo	ode:	Universa	I Admin Mode
	Network	ID:	(0-409	6)	Int	erface:		<mark></mark> Radio0-8 ✓ Radio1-8	02.11N ^{2.4GHz} 02.11N ^{5GHz}
	Delete								

Fare clic sul pulsante Applica.

Iultiple BSSID Beacon Settin	ngs	
Multiple BSSID Beac	on	
	Set SSID as Guest Mode	
	Set DataBeacon Rate (DTIM): DISABLED (1-100)	
		Apply Cane
Guest Mode/Infrastructure S	SID Settings	
Radio0-802.11N ^{2.4GHz} :		
Set Beacon Mode:	Single BSSID Set Single Guest Mode SSID: < NONE > ▼	
	C Multiple BSSID	
Set Infrastructure SSID:	< NONE > \checkmark E Force Infrastructure Devices to associate only to this SSID	
Radio1-802.11N ^{5GHz} :		
Set Beacon Mode:	Single BSSID Set Single Guest Mode SSID: < NONE > ▼	
	Multiple BSSID	

Nota: se l'interfaccia radio non viene visualizzata dopo aver abilitato le interfacce radio dalla GUI, accedere alla CLI ed eseguire il comando **no shutdown** in interfacce radio (Dot11Radio).

Per visualizzare l'SSID sui client, scegliere gli SSID in Imposta SSID modalità Guest singolo per tutte le radio, come mostrato nell'immagine.

արտին		Sa <u>v</u> e Configuration <u>P</u> ing
cisco	Home <u>N</u> etwork <u>A</u> ssociation Wireless <u>Security</u> Services <u>M</u> anagement <u>S</u> oftware <u>E</u>	EVENT LOG
Security	Set DataBeacon Rate (DTIM) DISABLED (1-100)	Apply Cancel
Encryption Manager	Guest Mode/Infrastructure SSID Settings	
SSID Manager	2464	
Server Manager	Radio0-802.11N ^{2.4GHZ} :	
AP Authentication	Set Beacon Mode: Single BSSID Set Single Guest Mode SSID: voicelab 	
Intrusion Detection	Multiple BSSID Set Infrastructure SSID: NONE > The Force Infrastructure Devices to associate only to this SSID	
Advance Security	Radio1-802.11N ^{5GHz} :	
	Set Beacon Mode: Single BSSID Set Single Guest Mode SSID: voicelab Multiple BSSID	
	Set Infrastructure SSID: <pre></pre>	
		Apply Cancel

Verifica dei client connessi

Dopo che il client si è connesso al punto di accesso, i dettagli del client verranno visualizzati nel menu **HOME**.

uluilu cisco	<u>H</u> OME <u>N</u>	IETWORK	ASSOCIATION	WIRELESS	SECURITY	SERVICES	MANAGEMENT	<u>S</u> OFTWARE	<u>E</u> VENT LOG	Sa <u>v</u> e Configurat	tion <u>P</u> ing	 Logout <u>R</u> efresl
Home Summary	Hostna	me BGL14.	M.18-LAP1142-1						BGL14	I.M.18-LAP1142-1 upti	ime is 14 hours,	39 minutes
Easy Setup	Asso	ciation										
Network Assistant	Clients	Infrastructure clients: 0										
	View: Client Client Infrastructure client										Apply	
	Radio	0-802.11N ^{2.4}	IGHz									
	SSID	voicelab :										
	Devic	е Туре	Name	IPv4 Add	ress	IPv6 Add	Iress	MAC Address		State	Parent	VLAN
i i	ccx-cli	ient	NONE	10.106.12	2.153	-		8438.3801.45be		Associated	self	487
	unknov	wn	NONE	10.106.12	2.154			c0ee.fb53.eb46		Associated	self	487
	Radio1-802.11N ^{5GHz}											
												Refresh

Facoltativo - Come impostare la password su SSID

Passare alla scheda SECURITY e scegliere Encryption Manager.

In Modalità di crittografia, selezionare Cipher (Cifra), quindi AES CCMP.

Quindi fare clic su **APPLY** (APPLICA).

cisco	<u>H</u> OME	<u>N</u> etwork	<u>A</u> SSOCIATIC	N W <u>I</u> R	ELESS	SECURITY	<u>s</u> ervices	<u>M</u> ANA		
Security Admin Access	Host	name BGL14 curity: Encry	.M.18-LAP1142	1 r						
SSID Manager Dot11u Manager Server Manager AP Authentication Intrusion Detection Local RADIUS Server Advance Security	Se	Set Encryption Mode and Keys for VLAN: Encryption Modes								
	C	© None								
	C	WEP Encry	yption	Optional	 ▼ Cisco 	Compliant Tk	(IP Features:	En:		
	۲	Cipher		AES CCMF)	¥		En:		

Quindi selezionare SSID Manager nel menu SECURITY

Impostare la gestione delle chiavi come **obbligatoria**, selezionare la casella **Abilita WPA** e scegliere **WPAv2**.

Fornire la password SSID in WPA Pre-shared Key.

Fare quindi clic sul pulsante APPLY.

ululu cisco	<u>H</u> OME	<u>N</u> ETWORK	ASSOCIATION	WIRELESS	SECURITY	<u>S</u> ERVICES	<u>M</u> ANAGEMENT	<u>S</u> OFTWARE	<u>e</u> vent log	Sa <u>v</u> e Configuration
Security Admin Access Encryption Manager			Priority 2: < Priority 3: <	NONE > ▼ NONE > ▼				Prior Prior	ity 2: < NONE > ity 3: < NONE >	▼ ▼
SSID Manager Clier Dot11u Manager Server Manager AP Authentication		ilient Authentie Key M	cated Key Manag anagement:	jement	Manda	atory 🔻		ССКМ	Z Enable WP	a wpav2 -
Intrusion Detection Local RADIUS Server Advance Security		WPA P 11w Cc 11w As 11w Sa	re-shared Key: onfiguration: ssociation-come/ aquery-retry:	back:	Disabl 1000 100	le ▼ (100 (100	0-20000) -500)	A:	SCII 🔘 Hexadeci	imal

Configurazione CUCM

Come aggiungere il telefono 7925 al server CUCM

Accedere alla GUI di amministrazione CUCM e selezionare Device > Phone (Dispositivo >

Telefono)

CISCO Unified CM Administration For Cisco Unified Communications Solutions		Navigation Cisco Unified CM Administration 🝷 Go admin Search Documentation About Logou		
System Call Routing Media Resources Advanced Features	evice Application User Manag	ement 💌 Bulk Administration 💌 Help 💌		
	CTI Route Point			
	Gatekeeper			
The system is operating on demo licenses	Gateway	Add this system to a Cisco Prime License Manager and install sufficient		
Licenses to cover its usage before expiration	Phone	he ability to provision users and devices.		
WARNING: No backup device is configured	Trunk	r your system in case of failure.		
Smart Call Home is not configured. To configured.	Remote Destination	isable the reminder, please go to Cisco Unified Serviceability > Call		
Home or <u>click here.</u>	Device Settings			
Cisco Unified CM Administration System version: 10.5.2.13037-1				

Fare clic sul pulsante Aggiungi nuovo.

cisco	Cisco Un	nified CM A	dministrations	ation			
System -	Call Routing •	Media Resources	 Advanced Fe 	atures 🝷	Device •	Application	User Manag
Find and I	List Phones						
Add N	lew						
Phone							
Find Phone	e where Device	ere Device Name		✓ begins with ✓			Find
					Select iter	m or enter sea	arch text 🔻
					No act	ive query. Pleas	se enter your s
Add Nev	w						

Scegliere **Cisco 7925** in **Tipo di telefono** e fare clic su **Pulsante Avanti** (è possibile scegliere il tipo di telefono in base ai telefoni wireless disponibili).



Nella pagina **Configurazione telefono**, aggiungere l'**indirizzo MAC** del telefono e assegnare i valori appropriati a sezioni specifiche, come mostrato nell'immagine, quindi fare clic sul pulsante **Salva**.

CISCO Unified CM Administration For Cisco Unified Communications Solutions							
System 👻 Call Routing 👻 Media Resou	rces • Advanced Features •	Device •	Application •	User Management 💌	Bulk Administration 🔻		
Phone Configuration							
Save							
Status Status: Ready							
Product Type: Cisco 7925 Device Protocol: SCCP Device Information							
MAC Address*	00233341E192						
Description	SEP00233341E192						
Device Pool*	Default			 View Details 			
Common Device Configuration	< None >			 View Details 			
Phone Button Template*	e Button Template* Standard 7925 SCCP		•				
Softkey Template	< None >			•			
Common Phone Profile*	Standard Common Phon	e Profile		▼ <u>View Details</u>			

Packet Capture Mode*	None	•
Packet Capture Duration	0	
BLF Presence Group*	Standard Presence group	•
Device Security Profile*	Cisco 7925 - Standard SCCP Non-Secure Profile	•
SUBSCRIBE Calling Search Space	< None >	•

Fare clic su Add a new Line e assegnare un numero di elenco telefonico a questo telefono.

cis	Cisco Unified CM Administra For Cisco Unified Communications Solutions	ation
System	Call Routing Media Resources Advanced Fe	eatures Device Application User Management Building
Phone	Configuration	
🔚 s	ave 🗙 Delete 📄 Copy ବ Reset 🧷 Apply	Config 🕂 Add New
-	••	
Statu	S	
(i) s	Status: Ready	
Asso	ciation	□ □ Phone Type
	Modify Button Items	Product Type: Cisco 7925
1	Ine [1] - Add a new DN	Device Protocol: SCCP
-	Entry Add thew DA	
2	Line [2] - Add a new DN	Real-time Device Status
3	R Add a new SD	Registration: Unregistered
3		IPv4 Address: 10.106.122.155
4	Carl Add a new SD	Active Load ID: None
5	Add a new SD	Download Status: None
6	Add a new SD	Device Information

Assegnare un qualsiasi numero di Directory, quindi fare clic sul pulsante **SAVE**. Quindi, fare clic sui pulsanti **Apply Config** e **Reset**.

CISCO For Cisco Unifi	ified CM Ad	ministration s Solutions				
System Call Routing I	Media Resources 💌	Advanced Features •	Device •	Application •	User Management 💌	Bulk Administration
Directory Number Config	uration					
Save						
Status						
Directory Number Conf	figuration has refre	shed due to a directory	y number ch	nange. Please c	lick Save button to sa	ave the configuration.
Directory Number Conf Directory Number Inform	figuration has refre	shed due to a directory	y number ch	nange. Please c	lick Save button to sa	ave the configuration.
Directory Number Conf Directory Number Inform Directory Number Route Partition	figuration has refre	shed due to a director	y number ch	nange. Please c	lick Save button to sa	ave the configuration.
Directory Number Conf Directory Number Inform Directory Number Route Partition Description	figuration has refre ation 7999 < None >	shed due to a director	y number ch	nange. Please c	lick Save button to sa	ave the configuration.
Directory Number Conf Directory Number Inform Directory Number Route Partition Description Alerting Name	figuration has refre nation 7999 < None >	shed due to a director	y number ch	nange. Please c	lick Save button to sa	ave the configuration.
Directory Number Conf Directory Number Inform Directory Number Route Partition Description Alerting Name ASCII Alerting Name	figuration has refre	shed due to a director	y number ch	nange. Please c	lick Save button to sa	ave the configuration.
Directory Number Conf Directory Number Inform Directory Number Noute Partition Description Alerting Name ASCII Alerting Name External Call Control Profile	figuration has refre	shed due to a director	y number ch	nange. Please c	lick Save button to sa	ave the configuration.

Configurazione telefonica fisica 7925

Selezionare Impostazioni > Profili di rete

- Entra in qualsiasi profilo
- Digitare **# per sbloccare le impostazioni del telefono
- Assegnare un nome a qualsiasi profilo



Configurazione della rete

Selezionare Impostazioni > Profilo di rete > Configurazione di rete

Impostare il valore DHCP Enabled su YES

Se l'indirizzo IP TFTP non viene estratto dal server DHCP, aggiungere manualmente l'indirizzo IP TFTP.



Configurazione della WLAN

Selezionare Impostazioni > Profilo di rete > Configurazione WLAN

- Assegnare il nome SSID (configurato sul punto di accesso), quindi premere Option (Opzione) e selezionare SAVE (SALVA)
- Impostare la modalità di protezione su Auto (AKM)
- Nella sezione Chiave già condivisa, immettere la password dell'SSID (nel nostro laboratorio, voicelab123)



Verifica

Una volta registrato il telefono con il CUCM, il telefono wireless visualizza sullo schermo il numero di directory configurato. Nella pagina Configurazione telefono dell'interfaccia utente di amministrazione di CUCM, è possibile vedere che il telefono è nello stato registrato, come mostrato nell'immagine.

cise	Cisco Unified CM Administr For Cisco Unified Communications Solutions	ation Navigation Cisco Unified CM Administration - Go admin Search Documentation About Logou	o ut				
System	System Call Routing Media Resources Advanced Features Device Application User Management Bulk Administration Help						
Phone Configuration Related Links: Back To Find/List							
🔒 s	🔜 Save 🗶 Delete 🗈 Copy 🎦 Reset 🖉 Apply Config 🕂 Add New						
Assoc	Modify Button Items	Phone Type Product Type: Cisco 7925 Device Protocol: SCCP	•				
2	The Line [2] - 4004 (no partition)	C Device Information	-				
3	Add a new SD	Registration Registered with Cisco Unified Communications Manager cucm192 IP Address 10.106.122.161					
4	Can Add a new SD	Active Load ID Unknown					
5	Add a new SD	Download Status Unknown Device is Active					
6	Can Add a new SD	V Device is					

Risoluzione dei problemi

Al momento non sono disponibili informazioni specifiche per la risoluzione dei problemi di questa configurazione.