Configurazione e distribuzione del software MSE release 7.2 HA

Sommario

Introduzione Prerequisiti Requisiti Componenti usati Convenzioni Premesse Linee guida e limitazioni Scenario di configurazione HA per l'appliance virtuale MSE (connessa alla rete) Configurazione HA con connessione diretta Scenario di configurazione HA per appliance fisica MSE Risoluzione dei problemi di base di MSE HA Informazioni correlate

Introduzione

Il software Cisco Mobility Services Engine (MSE) versione 7.2 aggiunge il supporto ad alta disponibilità (HA) alle appliance fisiche e virtuali. In questo documento vengono fornite linee guida per la configurazione e l'installazione, oltre a suggerimenti per la risoluzione dei problemi per coloro che aggiungono l'elevata disponibilità MSE ed eseguono i servizi compatibili con il contesto e/o i servizi WiFi adattivi a una WLAN unificata Cisco. Lo scopo di questo documento è spiegare le linee guida per l'alta disponibilità di MSE e fornire scenari di distribuzione HA per MSE.

Nota: questo documento non fornisce i dettagli di configurazione per MSE e i componenti associati che non riguardano MSE HA. Queste informazioni vengono fornite in altri documenti e vengono forniti i riferimenti. Per un elenco dei documenti sulla configurazione e la progettazione dei servizi di mobilità compatibili con il contesto, vedere la sezione <u>Informazioni correlate</u>. Nel presente documento, inoltre, non viene descritta la configurazione degli IPS adattivi.

Prerequisiti

Requisiti

Nessun requisito specifico previsto per questo documento.

Componenti usati

Il documento può essere consultato per tutte le versioni software o hardware.

Convenzioni

Per ulteriori informazioni sulle convenzioni usate, consultare il documento <u>Cisco sulle convenzioni</u> nei suggerimenti tecnici.

Premesse

MSE è una piattaforma in grado di eseguire più servizi correlati. Questi servizi forniscono funzionalità di servizio di alto livello. Pertanto, la considerazione dell'HA è fondamentale per mantenere la massima affidabilità dei servizi.

Con HA abilitato, ogni MSE attivo viene sottoposto a backup da un'altra istanza inattiva. MSE HA introduce il monitoraggio dello stato in cui configura, gestisce e controlla la configurazione dell'alta disponibilità. Viene mantenuto un heartbeat tra l'MSE primario e quello secondario. Il monitoraggio dello stato è responsabile dell'impostazione del database, della replica dei file e del monitoraggio dell'applicazione. Quando l'MSE primario ha esito negativo e il secondario prende il controllo, l'indirizzo virtuale dell'MSE primario viene commutato in modo trasparente.

Questa configurazione (vedere figura 1) mostra una tipica installazione WLAN di Cisco che include Cisco Mobility Services Engine (MSE) abilitato per l'alta disponibilità. Il supporto HA è disponibile su MSE-3310, MSE-3350/3355 e Virtual Appliance su ESXi.

Figura 1. Implementazione di MSE in High Availability



Linee guida e limitazioni

Ecco alcune informazioni sull'architettura MSE HA:

- MSE Virtual Appliance supporta solo 1:1 HA.
- Un MSE secondario può supportare fino a due MSE primari. Vedere la matrice di accoppiamento HA (figure 2 e 3).
- HA supporta la connessione di rete e la connessione diretta.
- Èsupportata solo la ridondanza di livello 2 MSE. Sia l'IP del monitor di integrità che l'IP virtuale devono trovarsi nella stessa subnet ed essere accessibili dal Network Control System (NCS). La ridondanza di livello 3 non è supportata.
- L'indirizzo IP del monitor di integrità e l'indirizzo IP virtuale devono essere diversi.
- Èpossibile utilizzare il failover manuale o automatico.
- Èpossibile utilizzare il failback manuale o automatico.
- Sia l'MSE principale che quello secondario devono essere della stessa versione del software.
- Ogni MSE primario attivo è sottoposto a backup da un'altra istanza inattiva. Il database MSE secondario diventa attivo solo dopo l'avvio della procedura di failover.
- La procedura di failover può essere manuale o automatica.
- Èdisponibile un'istanza software e di database per ogni MSE primario registrato.

	Secondary Server Type							
Primary Server Type	3310	3350	3355	VA-Low	VA-Standard	VA-High		
3310	Y	Y	Y	N	N	N		
3350	N	Y	Y	N	N	N		
3355	N	Y	Y	N	N	N		
VA-Low	N	N	N	Y	Y	Ŷ		
VA-Standard	N	N	N	N	Y	Y		
VA-High	N	N	N	N	N	Y		

Figura 2. Matrice di associazione del supporto MSE HA

Figura 3. Matrice di accoppiamento MSE HA N:1

Secondary Server	Primary Server
3310	N:1 not supported
3350	Two 3310 servers are supported
3355	Two 3310 servers are supported
3355	Two 3350 servers are supported
3355	One 3310 and one 3350 are supported

Scenario di configurazione HA per l'appliance virtuale MSE (connessa alla rete)

Questo esempio mostra la configurazione HA per l'appliance virtuale MSE (VA) (vedere la <u>figura</u> <u>4</u>). Per questo scenario vengono configurate le impostazioni seguenti:

• VA MSE primario: IP virtuale - [10.10.10.11] Interfaccia Health Monitor (Eth0) - [10.10.10.12]

• VA MSE secondario: IP virtuale - [Nessuno]Interfaccia Health Monitor (Eth0) - [10.10.10.13]

Nota: è richiesta una licenza di attivazione (L-MSE-7.0-K9) per VA. Questa operazione è necessaria per la configurazione ad alta disponibilità del VA.



Figura 4. Appliance virtuale MSE in HA

Per ulteriori informazioni, fare riferimento alla documentazione di Cisco su MSE Virtual Appliance.

Di seguito sono riportati i passaggi generali:

1. Completare l'installazione di VA per MSE e verificare che tutte le impostazioni di rete siano soddisfatte.

23 MSE1 on kft-fx File View VM 🕨 🗐 🔯 🖓 🗊 🕪 🧇 to complete. reparing to install... xtracting the JRE from the installer archive... Unpacking the JRE... xtracting the installation resources from the installer archive... Configuring the installer for this system's environment... Launching installer... Preparing SILENT Mode Installation... isco Mobility Services Engine (created with InstallAnywhere by Macrovision) Command.run(): process completed before monitors could start. nstalling...

2. Iniziare l'installazione guidata al primo accesso.



3. Immettere le voci richieste (nome host, dominio e così via). Immettere YES nella fase per configurare la disponibilità elevata.



 Immettere quanto segue:Selezionare Role - [1 per Primary].Interfaccia Health Monitor -[eth0]^{**}Impostazioni di rete associate alla scheda di rete 1 (vedere la schermata di esempio)

lard	ware Options Resources		Davies Chabus
	Show All Devices	Add Remove	Connected
Hard	dware	Summary	Connect at power on
	Memory (edited) CPUs Video card VMCI device SCSI controller 0 Hard disk 1 CD/DVD Drive 1 Network adapter 1 (edite Network adapter 2 (edite	8192 MB 2 Video card Restricted LSI Logic Parallel Virtual Disk CD/DVD Drive 1 vlan 10 vlan 10	Adapter Type Current adapter: E1000 MAC Address 00:50:56:89:01:d9 Automatic Manua Network Connection Network label:
			vlan 10 VM Network vlan 104 vlan 21 vlan 20 vlan 12 vlan 11 vlan 10 DMZ

Enter a host name [mse]: mse1 Current domain=[] Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: s Current role=[Primary] Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]: High availability role for this MSE (Primary/Secondary) Select role [1 for Primary, 2 for Secondary] [1]: Health monitor interface holds physical IP address of this MSE server. This IP address is used by Secondary, Primary MSE servers and WCS to communicate among themselves Select Health Monitor Interface [eth0/eth1] [eth0]: __

5. Selezionare direct connect interface (interfaccia di connessione diretta) -

Immettere quanto segue:Indirizzo IP virtuale - [10.10.10.11]Network Mask - [255.255.255.0]Avvia MSE in modalità di ripristino -

[No] Select direct connect interface [eth0/eth1/none] [none]: Enter a Virtual IP address for first this primary MSE server Enter Virtual IP address [1.1.1.1]: 10.10.10.11 Enter the network mask for IP address 10.10.10.11. Enter network mask [1.1.1.1]: 255.255.255.0 Choose to start the server in recovery mode. You should choose yes only if this primary was paired earlier and you have now 1 ost the configuration from this box. And, now you want to restore the configuration from Secondary via NCS Do you wish to start this MSE in HA recovery mode ?: (yes/no): no_ 7. Immettere quanto segue:Configurare Eth0 - [Si]Immettere l'indirizzo IP Eth0-

[10.10.10.12]Network Mask - [255.255.255.0]Gateway predefinito -[10.10.10.1] Current IP address=[1.1.1.10] Current eth0 netmask=[255.255.255.0] Current gateway address=[1.1.1.1] Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes] Enter an IP address for first ethernet interface of this machine. Enter eth0 IP address [1.1.1.10]: 10.10.10.12 Enter the network mask for IP address 10.10.10.12. Enter network mask [255.255.255.0]: Enter an default gateway address for this machine. Note that the default gateway must be reachable from the first ethernet interface. Enter default gateway address [1.1.1.1]: 10.10.10.1__

8. La seconda interfaccia Ethernet (Eth1) non viene utilizzata.Configurare l'interfaccia eth1 - [skip]

The second ethernet interface is currently disabled for this machine. Configure eth1 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: s

9. Continuare l'installazione guidata.Èfondamentale abilitare il server NTP per sincronizzare l'orologio.Il fuso orario preferito è

```
UTC.
Domain Name Service (DNS) Setup
DNS is currently enabled.
No DNS servers currently defined
Configure DNS related parameters? (Y)es/(S)kip/(U)se default [Yes]: s
Current timezone=[America/New_York]
Configure timezone? (Y)es/(S)kip/(U)se default [Yes]:
Enter the current date and time.
Please identify a location so that time zone rules can be set correctly.
Please select a continent or ocean.
1) Africa
 2) Americas
 3) Antarctica
 4) Arctic Ocean
 5) Asia
6) Atlantic Ocean
 Australia
8) Europe
9) Indian Ocean
10) Pacific Ocean
11) UTC - I want to use Coordinated Universal Time.
12) Return to previous setup step (^).
#? 11
```

```
Network Time Protocol (NTP) Setup.
If you choose to enable NTP, the system time will be
configured from NTP servers that you select. Otherwise,
you will be prompted to enter the current date and time.
NTP is currently disabled.
Configure NTP related parameters? (Y)es/(S)kip/(U)se default [Yes]:
Enter whether or not you would like to set up the
Network Time Protocol (NTP) for this machine.
If you choose to enable NTP, the system time will be
configured from NTP servers that you select. Otherwise,
you will be prompted to enter the current date and time.
Enable NTP (yes∕no) [no]: yes
Enter NTP server name or address: ntp.network.local_
In questo documento viene riepilogata la configurazione principale di MSE Virtual Appliance:
-----BEGIN-----
Role=1, Health Monitor Interface=eth0, Direct connect interface=none
Virtual IP Address=10.10.10.11, Virtual IP Netmask=255.255.255.0
Eth0 IP address=10.10.10.12, Eth0 network mask=255.0.0.0
```

10. Immettere [YES] per confermare che tutte le informazioni di impostazione sono

11. Si consiglia di riavviare il sistema dopo la

Default Gateway=10.10.10.1



configurazione.

 Dopo un riavvio, avviare i servizi MSE con il comando /etc/init.d/msed start o con il comando msed startcommands.

```
[root@mse1 ~]# getserverinfo
Health Monitor is not running
[root@mse1 ~]# /etc/init.d/msed start
Starting MSE Platform
ip_tables: (C) 2000-2006 Netfilter Core Team
Netfilter messages via NETLINK v0.30.
ip_conntrack version 2.4 (8192 buckets, 65536 max) - 304 bytes per conntrack
Starting Health Monitor, Waiting to check the status.
Starting Health Monitor, Waiting to check the status.
Starting Health Monitor, Waiting to check the status.
Health Monitor successfully started
Starting Admin process...
Started Admin process.
Starting database ......
Database started successfully. Starting framework and services ......
Framework and services successfully started
```

```
[root@mse1 ~]#
```

13. Dopo l'avvio di tutti i servizi, verificare che i servizi MSE funzionino correttamente con il comando getserverinfo.Lo stato dell'operazione deve essere

Attivo.

```
Active Wired Clients: Ø
Active Elements(Wireless Clients, Rogue APs, Rogue Clients, Interferers, Wired (
lients, Tags) Limit: 100
Active Sessions: 0
Wireless Clients Not Tracked due to the limiting: 0
Fags Not Tracked due to the limiting: 0
Rogue APs Not Tracked due to the limiting: 0
Rogue Clients Not Tracked due to the limiting: 0
Interferers Not Tracked due to the limiting: 0
Wired Clients Not Tracked due to the limiting: 0
Total Elements(Wireless Clients, Rogue APs, Rogue Clients, Interferers, Wired Cl
ients) Not Tracked due to the limiting: 0
Context Aware Sub Services
Subservice Name: Aeroscout Tag Engine
dmin Status: Disabled
Operation Status: Down
Subservice Name: Cisco Tag Engine
admin Status: Enabled
Operation Status: Up
[root@mse1 ~]#
```

I seguenti passaggi fanno parte dell'impostazione per il database MSE secondario VA:

 Dopo la nuova installazione, l'accesso iniziale avvia l'Installazione guidata. Immettere quanto segue:Configurare la disponibilità elevata - [Sì]Selezionare il ruolo - [2] che indica SecondarioInterfaccia Health Monitor - [eth0] uguale a Primario

Current hostname=[mse] Configure hostname? (Y)es/(S)kip/(U)se default [Yes]: yes The host name should be a unique name that can identify the device on the network. The hostname should start with a letter, end with a letter or number, and contain only letters, numbers, and dashes. Enter a host name [mse]: mse2 Current domain=[] Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: s Current role=[Primary] Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]: ligh availability role for this MSE (Primary/Secondary) Select role [1 for Primary, 2 for Secondary] [1]: 2 lealth monitor interface holds physical IP address of this MSE server. This IP address is used by Secondary, Primary MSE servers and WCS to communicate among themselves

Select Health Monitor Interface [eth0/eth1] [eth0]:

 Immettere quanto segue:Connessione diretta - [Nessuno]Indirizzo IP eth0 -[10.10.10.13]Network mask - [255.255.255.0]Gateway predefinito -[10.10.10.1]

Select direct connect interface [eth0/eth1/none] [none]: Current IP address=[1.1.1.10] Current eth0 netmask=[255.255.255.0] Current gateway address=[1.1.1.1] Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: Enter an IP address for first ethernet interface of this machine. Enter eth0 IP address [1.1.1.10]: 10.10.10.13 Enter the network mask for IP address 10.10.10.13. Enter network mask [255.255.255.0]: Enter an default gateway address for this machine. Note that the default gateway must be reachable from the first ethernet interface. Enter default gateway address [1.1.1.1]: 10.10.10.1__

3. Configurare l'interfaccia eth1 -[Skip] Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: Enter an IP address for first ethernet interface of this machine. Enter eth0 IP address [1.1.1.10]: 10.10.10.13 Enter the network mask for IP address 10.10.10.13. Enter network mask [255.255.255.0]: Enter an default gateway address for this machine. Note that the default gateway must be reachable from the first ethernet interface. Enter default gateway address [1.1.1.1]: 10.10.10.1 The second ethernet interface is currently disabled for this machine. Configure eth1 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: s

4. Impostare il fuso orario -

[UTC]

Current timezone=[America/New_York] Configure timezone? (Y)es/(S)kip/(U)se default [Yes]: Enter the current date and time. Please identify a location so that time zone rules can be set correctly. Please select a continent or ocean. 1) Africa 2) Americas 3) Antarctica 4) Arctic Ocean 5) Asia 6) Atlantic Ocean Australia 8) Europe 9) Indian Ocean 10) Pacific Ocean 11) UTC - I want to use Coordinated Universal Time. 12) Return to previous setup step (^). #? 11

5. Abilitare il server

NTP.

```
Network Time Protocol (NTP) Setup.

If you choose to enable NTP, the system time will be

configured from NTP servers that you select. Otherwise,

you will be prompted to enter the current date and time.

NTP is currently disabled.

Configure NTP related parameters? (Y)es/(S)kip/(U)se default [Yes]:

Enter whether or not you would like to set up the

Network Time Protocol (NTP) for this machine.

If you choose to enable NTP, the system time will be

configured from NTP servers that you select. Otherwise,

you will be prompted to enter the current date and time.

Enable NTP (yes/no) [no]: yes

Enter NTP server name or address: ntp.network.local_
```

6. Completare i passaggi rimanenti dell'Installazione guidata e confermare le informazioni di installazione per salvare la

configurazione.

Please verify the following setup information. -----BEGIN------Host name=mse2 Role=2, Health Monitor Interface=eth0, Direct connect interface=none Eth0 IP address=10.10.10.13, Eth0 network mask=255.255.255.0 Default gateway=10.10.10.1 Time zone=UTC Enable NTP=yes, NTP servers=10.10.10.10 ------END------You may enter "yes" to proceed with configuration, "no" to make more changes, or "^" to go back to the previous step. Configuration Changed Is the above information correct (yes, no, or ^): yes_

7. Riavviare e avviare i servizi come nei passaggi precedenti per MSE

primario.

```
[root@mse2 ~]# /etc/init.d/msed start
Starting MSE Platform
ip_tables: (C) 2000-2006 Netfilter Core Team
Netfilter messages via NETLINK v0.30.
ip_conntrack version 2.4 (8192 buckets, 65536 max) - 304 bytes per conntrack
Starting Health Monitor, Waiting to check the status.
Starting Health Monitor, Waiting to check the status.
Starting Health Monitor, Waiting to check the status.
Health Monitor successfully started
Starting Admin process...
Started Admin process.
Started Admin process.
Starting database ......
Database started successfully. Starting framework and services ......
Framework and services successfully started
Iroot@mse2 ~]# _
```

Nei passaggi successivi viene illustrato come aggiungere i valori VA MSE primario e secondario al sistema NCS. Eseguire il normale processo di aggiunta di un MSE a NCS. Per ulteriori

informazioni, consultare la guida alla configurazione.

 Dalla NCS, selezionare Systems > Mobility Services (Sistemi > Servizi di mobilità) e selezionare Mobility Services Engine (Motori servizi di mobilità).



2. Dal menu a discesa, scegliere **Aggiungi Mobility Services Engine**. quindi, fare clic su **Go** (Vai).

ROOT-DOMAIN root V Log Out	P.	⇒
•	- 😵 😫	1 🕗
	Select a command 🔹	Go
	Select a command	
	Add Location Server	
	Add Mobility Services Engine	
3r	Delete Service(s)	
	Synchronize Services	
	Synchronization History	
	Edit Configuration	

 Seguire la Configurazione guidata NCS per MSE. Nello scenario di questo documento, i valori sono:Immettere il nome del dispositivo, ad esempio [MSE1]Indirizzo IP -[10.10.10.12]Nome utente e password (per impostazione iniziale)Fare clic su Next (Avanti).

Cisco Prime		
	Add Mobility Services Engine	
Add MSE Configuration		
Licensing	Device Name	msel
Select Service	IP Address	10.10.10.12
Tracking		
Assign Maps	Contact Name	
	Username®	admin
	Password D	•••••
	HTTP [®]	Enable
	Delete synchronized service assignt • Selecting Delete synchronized se Existing location history data is retained	ments 🔽 (Network designs, controllers, wired switche rvice assignments permanently removes all service a however you must use manual service assignments to

4. Aggiungere tutte le licenze disponibili, quindi fare clic su **Avanti**.

cisco Prime Network Control Syste	m		4 / 2		
	MSE License Su	immary			
Edit MSE Configuration	0 Permanent licen	ses includ	e installed licens	e counts and in-built lic	ense counts.
Licensing					
Select Service	MSE Name (UDI)	Service	Platform Limit	Туре	Installed Limit
Tracking	mse1 Activated	(AIR-MS	E-VA-K9:V01:r	mse1_d5972642-569	96-11e1-bd0o
Assign Maps		CAS	2000,	CAS Elements	100
		WIPS	2000	wIPS Monitor Mode APs	10
				wIPS Local Mode APs	10
		MSAP	2000	Service Advertisemen Clicks	t 1000
	Add License	Remove	License		

5. Selezionare i servizi MSE, quindi fare clic su Avanti.

cisco	Cisco Prime Network Control System		
		Select	Mobility Service
Edit MSE Cor	nfiguration		
Licensing			Contaut Awaro Comica
Select Servi	ice	1.	CONTEXT Aware Service
Tracking			• Cisco Context-Aware Engine for Clients and Tags
Assign Maps			C Partner Tag Engine 🔍
			Wireless Intrusion Protection Service
			MSAP Service

6. Abilitare i parametri di registrazione, quindi fare clic su **Avanti**.

Cisco Prime Cisco Network Control Syste	m
	Select Tracking & History Parameters.
Edit MSE Configuration	
Licensing	Tracking
Select Service	✓ Wired Clients
Tracking	✓ Wireless Clients
Assign Maps	Rogue AccessPoints
	Exclude Adhoc Rogue APs
	Rogue Clients
	□ Interferers
	Active RFID Tags

7. L'assegnazione delle mappe e la sincronizzazione dei servizi MSE sono facoltative. Fate clic su **Fatto (Done)** per completare l'aggiunta di MSE a NCS.

Cisco Prime Cisco Network Control Syste	m
Edit MSE Configuration	
Licensing	
Select Service	L Name
Tracking	
Assign Maps	
The page at https://10.10.10.20 say	rs: 🗙
Your MSE Settings have been s	aved.
ОК	

Nello screenshot successivo viene mostrato come è stato aggiunto il VA MSE primario. A questo punto, completare la procedura seguente per aggiungere il valore VA MSE secondario:

1. Individuare la colonna Server secondario e fare clic sul collegamento da

configurare

•1] C	Isco Network Control S	System			Virtual Domain: ROOT	-DOMMEN root + Lo	pour P+		÷
6	Home Monitor 🔹 Cor	nfigure • Services • Reports	 Administration 	•					* 3 0
Moł Servi	oliity Services Engines as > Mobility Services Engines						Select	a command	• Go
г	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server	Name	ability Service Admin Status	Service Status
	msel	Oxco Nobility Sentces Engine - Virtual Appliance	10.10.10.12	7.2.103.0	Reachable	N/A (Click here to configure)	Context Aware Service wIPS Service MSAP Service	Enabled Disabled Disabled	Up Dawn Dawn

 Aggiungere il valore VA MSE secondario utilizzando la configurazione in questo scenario:Nome dispositivo secondario - [mse2]Indirizzo IP secondario -[10.10.10.13]Password secondaria* - [predefinita o da script di installazione]Tipo di failover* -[Automatico o Manuale]Tipo di fallback*Attesa failover lunga*Fare clic su Salva.*Fare clic sull'icona delle informazioni o consultare la documentazione di MSE, se

necessario.

HA Configuration : mse1 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters					
Configure High Availability Pa	Configure High Availability Parameters				
Primary Health Monitor IP	10.10.10.12				
Secondary Device Name	mse2				
Secondary IP Address	10.10.13				
Secondary Password 🕸	••••				
Failover Type 🕸	Automatic 💌				
Failback Type 🕸	Manual 💌				
Long Failover Wait 🕸	10 seconds				
Save					

3. Fare clic su **OK** quando NCS chiede di accoppiare i due MSE.



NCS impiega alcuni secondi per creare la configurazione.

Please Wait. High Availability configuration is being created at the Primary and Secondary servers. This will take a few seconds

NCS chiede se per l'MSE secondario VA è necessaria una licenza di attivazione (L-MSE-7.0-K9).

	The page at https://10.10.10.20 sa	ays: 🗶
	Secondary MSE needs to be a config.	activated with a Virtual Appliance license. Add a license and save the
		ОК
4.	Fare clic su OK e individuare il fil secondario.	e di licenza da attivare come
	HA Configuration : mse1 Services > Mobility Services Engines > Sy:	stem > Services High Availability > Configure High Availability Parameters
	Configuration	
	Primary Health Monitor IP	10.10.12
	Secondary Device Name	mse2
	Secondary IP Address	10.10.13
	Secondary Password @	•••••
	Secondary Platform UDI	AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-0050568
	Secondary Activation Status	Not Activated
	Activate Secondary with License	Browse
	Failover Type	Automatic 💌
	Failback Type 🕸	Manual 🔽
	Long Failover Wait 🕸	10 seconds
	Save Delete	

5. Dopo aver attivato la funzione VA del MSE secondario, fare clic su **Save** (Salva) per completare la configurazione.

HA Configuration : mse1		
Services > Mobility Services Engines >	System > Services High Availability >	Configure High Availability Parameters

Configuration	
Primary Health Monitor IP	10.10.10.12
Secondary Device Name	mse2
Secondary IP Address	10.10.13
Secondary Password 🕸	•••••
Secondary Platform UDI	AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-005
Secondary Activation Status	Activated
Delete Secondary Activation license $\ensuremath{\widehat{\Psi}}$	
Failover Type 🕸	Automatic 👻
Failback Type 🕸	Manual 💌
Long Fallover Wait 🕸	10 seconds
Save Delete Switchover	

6. Selezionare NCS > Mobility Services > Mobility Services Engine.NCS visualizza questa schermata in cui appare MSE secondario nella colonna Server

se	condario:								
MOB Servis	ility Services Engines «: > Mobility Services Engines						- Select	a command	GO
							M	bility Service	
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server	Name	Admin Status	Service Status
	mse1	Cisco Mobility Services Engine - Virtual Appliance	10,10,10,11	7.2.103.0	Reachable	mee2	Context Aware Service MIPS Service MISAP Service	Enabled Disabled Disabled	Up Down Down

7. Per visualizzare lo stato Alta disponibilità, selezionare NCS > Servizi > Alta disponibilità.



Nello stato HA è possibile visualizzare lo stato corrente e gli eventi in base alla coppia MSE.

Cisco Prime Cisco Network Control System		Virtual Domain:	ROOT-DOMAIN root + Log Out	ρ.
🛕 Home Monitor 🔹 Configure	 Services Reports Ad 	ministration 🔹		
System 🗸	HA Configuration : mse1 Services > Mobility Services Engines > System > Current High Availability Status	- Services High Availability > Current High Ava	flability Status	
Trap Destinations Advanced Parameters Logs	Status Heartbeats Data Replication	Active Up Up		
 Services High Availability HA Configuration 	Mean Heartbeat Response Time	6 milisec		
📥 HA Status	Events Log			
Accounts Users	Event Description Active	Generated By Primary	Timestamp 2012-Feb-14, 00:22:26 UTC	Remarks
 Groups Status 	Heartbeats have been setup successfully	Primary	2012-Feb-14, 00:19:00 UTC	•
Server Events Audit Logs	Primary and secondary server synchronization in progress	Primary	2012-Feb-14, 00:18:56 UTC	-
NCS Alarms NCS Events	Configuration successfully created Refresh Status	Primary	2012-Feb-14, 00:18:56 UTC	

L'impostazione della sincronizzazione iniziale e della replica dei dati può richiedere alcuni minuti. L'NCS fornisce l'indicazione della percentuale di avanzamento fino a quando la coppia HA non è completamente attiva, come illustrato in precedenza.

Current High Availability Status		
Status	Primary and secondary server synchronization in progress	(68% complete)
Heartbeats	Up	
Data Replication	Setting up	
Mean Heartbeat Response Time	108 milisec	

Un nuovo comando introdotto con il software MSE versione 7.2 relativo a HA è **gethainfo**. In questo output vengono visualizzati i valori Principale e Secondario:

[root@mse1 ~] #gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Primary Health Monitor IP Address: 10.10.10.12 Virtual IP Address: 10.10.10.11 Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse1 Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.10.10.13 Virtual IP Address: 10.10.10.11 Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-0050568901d9 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: PRIMARY_ACTIVE

[root@mse2 ~] #gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Secondary Health Monitor IP Address: 10.10.10.13 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse2 Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.10.10.12 Virtual IP Address: 10.10.10.11 Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse1_d5972642-5696-11e1-bd0c-0050568901d6 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3

Configurazione HA con connessione diretta

Il server MSE HA connesso alla rete utilizza la rete, mentre la configurazione Direct Connect semplifica l'utilizzo di una connessione diretta via cavo tra i server MSE primario e secondario. Ciò consente di ridurre le latenze nei tempi di risposta di heartbeat, la replica dei dati e i tempi di rilevamento degli errori. In questo scenario, un MSE fisico primario si connette a un MSE secondario sull'interfaccia eth1, come mostrato nella figura 5. Si noti che per la connessione diretta viene utilizzato Eth1. È necessario specificare un indirizzo IP per ciascuna interfaccia.



1. Configurare il server MSE primario. Riepilogo della configurazione dallo script di installazione:

```
-----BEGIN-----
Host name=mse3355-1
Role=1 [Primary]
Health Monitor Interface=eth0
Direct connect interface=eth1
Virtual IP Address=10.10.10.14
Virtual IP Netmask=255.255.0
Eth1 IP address=1.1.1.1
Eth1 network mask=255.0.0.0
Default Gateway =10.10.10.1
```

2. Configurare l'MSE secondario. Riepilogo della configurazione dallo script di installazione:

-----BEGIN------Host name=mse3355-2 Role=2 [Secondary]

```
Health Monitor Interface=eth0
Direct connect interface=eth1
Eth0 IP Address 10.10.10.16
Eth0 network mask=255.255.255.0
Default Gateway=10.10.10.1
Eth1 IP address=1.1.1.2,
Eth1 network mask=255.0.0.0
------END------
```

3. Aggiungere l'MSE principale all'NCS (vedere gli esempi precedenti o fare riferimento alla guida alla

<i>c</i> .		、
contial	irazione)
ooninge		

1	Cisco Prime	ol System		Virtual Domain	ROOT-DOMAIN ro	ot v Log Out
4	🕯 Home Monitor 🔻	Configure 🔻 Services 🔻 F	Reports 🔻 Ac	Iministration	•	
M0 Servi	bility Services Engines ces > Mobility Services Engine:	\$				6
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
	mse3355-1	Cisco 3355 Mobility Services Engine	10.10.10.14	7.2.103.0	Reachable	N/A (Click here to configure)

 Impostare MSE secondario da NCS > Configura server secondario.Immettere il nome del dispositivo secondario - [mse3355-2]Indirizzo IP secondario - [10.10.10.16]Completate i parametri rimanenti e fate clic su Salva (Save).

Cisco Prime Cisco Network Control Sys	stem	Virtual Domain: ROOT-
🛕 Home Monitor 🔻 Config	ure 🔻 Services 🔻 Repo	rts 🔻 Administration 🔻
System	 HA Configuration : m Services > Mobility Services Eng 	Se3355–1 ines > System > Services High Availabili
General Properties Active Sessions	Configure High Availabilit	y Parameters
Trap Destinations	Primary Health Monitor IP	10.10.10.15
Advanced Parameters	Secondary Device Name	mse3355-2
 Logs Services High Availability 	Secondary IP Address	10.10.10.16
HA Configuration	Secondary Password 🔍	••••
 Accounts 	Failover Type 🔍	Manual
Users Groups	Failback Type 🕸	Manual 💌
 Status 	Long Failover Wait 🔍	10 seconds
ᡖ Server Events	Save	
📥 Audit Logs	and the first sector of the	

5. Fare clic su **OK** per confermare l'associazione dei due

Λ Λ	C	
ιν	5	с.

The pag	e at https://10.10.10.20 says: 🛛 🗙
?	Are you sure you want to pair up these two servers?
	OK Cancel
L'aggiunta dell minuto.	a configurazione del server secondario richiede qualche



6. Al termine, apportare le modifiche desiderate ai parametri HA. Fare clic su **Salva**.

HA Configuration : mse3355-1 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configuration

Primary Health Monitor IP	10.10.10.15
Secondary Device Name	mse3355-2
Secondary IP Address	10.10.10.16
Secondary Password 🕸	•••••
Secondary Platform UDI	AIR-MSE-3355-K9:V01:K
Failover Type 🔍	Manual 💌
Failback Type 🕸	Manual
Long Failover Wait 🔍	10 seconds
Save Delete Switchover	

7. Visualizzare lo stato HA per l'avanzamento in tempo reale della nuova coppia MSE

CISCO Network Control System	n	Virtual Domain: ROOT-DOMAIN	root + Log Out D+	÷
🛕 Home Monitor 🔻 Configure	▼ Services ▼ Reports ▼	Administration 🔻		- 🔶 🖨 😣
System 🗸	HA Configuration : mse33 Services > Mobility Services Engines > 9 Current High Availability Status	55–1 ystem > Services High Availability > Corr	rent High Availability Status	
Active Sessions Trap Destinations Advanced Parameters Logs Services High Availability HA Configuration	Status Heartbeats Data Replication Mean Heartbeat Response Time	Primary and secondary server s Up Setting up 8 millisec	ynchronization in progress (66 ⁴	% complete)
🖥 HA Status	Events Log			
Accounts	Event Description	Generated By	Timestamp	Remarks
🛓 Groups	Configuration updated	Primary	2012-Feb-15, 20:10:56 UTC	Fallover mode set to AUTOMATIC.
 Status Groups Supply 	Heartbeats have been setup successfully	Primary	2012-Feb-15, 20:10:11 UTC	
Audit Logs	Primary and secondary server synchronization in progress	Primary	2012-Feb-15, 20:10:09 UTC	
NCS Alarms NCS Events	Configuration successfully created	Primary	2012-Feb-15, 20:10:09 UTC	
NMSP Connection Status	Refresh Status			

 Da NCS > Servizi > Servizi di mobilità > Mobility Services Engine, confermare che MSE (connessione diretta) HA è stato aggiunto a NCS.

-il c	SCO Network Contr	rol System		Virtual Domain:	ROOT-DOMAIN	ot v Log Out
4	Home Monitor 🔻	Configure 🔻 Services 🔻 f	Reports 🔻 Ad	ministration	• L	Change Password
Mob Servic	ility Services Engines as > Mobility Services Engine	ş				[
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
	mse3355-1	Cisco 3355 Mobility Services Engine	10.10.10.14	7.2.103.0	Reachable	mse3355-2

9. Dalla console, la conferma può essere verificata anche con il comando gethainfo.Di seguito sono riportati i risultati principali e secondari: [root@mse3355-1 ~]#gethainfo

Health Monitor is running. Retrieving HA related information -----Base high availability configuration for this server _____ Server role: Primary Health Monitor IP Address: 10.10.10.15 Virtual IP Address: 10.10.10.14 Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ37xx Number of paired peers: 1 ------Peer configuration#: 1 _____ Health Monitor IP Address 10.10.10.16 Virtual IP Address: 10.10.10.14 Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Failover type: Automatic Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: Yes Heartbeat status: Up Current state: PRIMARY_ACTIVE [root@mse3355-2 ~]#gethainfo Health Monitor is running. Retrieving HA related information _____ Base high availability configuration for this server _____

Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Number of paired peers: 1 _____ Peer configuration#: 1 _____ Health Monitor IP Address 10.10.10.15 Virtual IP Address: 10.10.10.14 Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ37xx Failover type: Automatic Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: Yes Heartbeat status: Up Current state: SECONDARY_ACTIVE

Scenario di configurazione HA per appliance fisica MSE

In base alla matrice di accoppiamento, il massimo nella configurazione HA è 2:1. Ciò è riservato per MSE-3355, che in modalità secondaria può supportare MSE-3310 e MSE-3350. Connessione diretta non applicabile in questo scenario.



1. Configurare ciascuno di questi MSE per dimostrare uno scenario con rapporto 2:1 HA:

MSE-3310 (Primary1)
Server role: Primary
Health Monitor IP Address (Eth0): 10.10.10.17
Virtual IP Address: 10.10.10.18
Eth1 - Not Applicable

MSE-3350 (Primary2) Server role: Primary Health Monitor IP Address: 10.10.10.22 Virtual IP Address: 10.10.10.21 Eth1 - Not Applicable

MSE-3355 (Secondary) Server role: Secondary Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary

2. Dopo aver configurato tutti gli MSE, aggiungere Primary1 e Primary2 a

NC	NCS.						
c	Cisco Prime Vitual Domain: ROOT-DOMAIN Vitual Domain: ROOT-DOMAIN						
4	🛕 Home Monitor 🖲 Configure 🖲 Services 💌 Reports 👻 Administration 👻						
Moi Servi	bility Services Engines						
	Device Name	Device Type	IP Address	Version.	Reachability Status	Secondary Server	
÷							
	mse3350	Osco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	N/A (Click here to configure)	
	mse3310	Osco 33:10 Mobility Services Engine	10.10.10.18	7.2.103.0	Reachable	N/A (Click here to configure)	

3. Fare clic su questa opzione per configurare il server secondario, come illustrato negli esempi precedenti. Iniziare con uno degli MSE



4. Immettere i parametri per MSE secondario:Nome dispositivo secondario: ad esempio, [mse-3355-2}Indirizzo IP secondario - [10.10.10.16]Completate i parametri rimanenti.Fare clic su Salva.

HA Configuration : mse3350 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters				
Configuration				
Primary Health Monitor IP	10.10.10.22			
Secondary Device Name	mse3355-2			
Secondary IP Address	10.10.10.16			
Secondary Password 🔍	••••			
Secondary Platform UDI	AIR-MSE-3355-K9:V01:KQ4			
Failover Type 🕸	Manual 💌			
Failback Type 🕸	Manual 💌			
Long Failover Wait 🕸	10 seconds			
Save Delete Switchover				

5. Attendere qualche istante prima di configurare la prima voce secondaria.



6. Verificare che il server secondario sia stato aggiunto per il primo MSE

pri	primario.							
Mo	Mobility Services Engines							
Serv	ices > Mobility Services Engines							
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server		
9								
	mse3350	Osco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2		

7. Ripetere i passaggi da 3 a 6 per il secondo MSE

prir	nario.					
M0 Serv	bility Services Engines ces > Mobility Services Engines					
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
۰						
	mse3350	Cisco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2
	mse3310	Osco 3310 Mobility Services Engine	10.10.10.18	7.2.103.0	Reachable	N/A (Click bake to configure)
_						

8. Finalizzare con i parametri HA per il secondo MSE primario.

HA Configuration : mse3310 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configure High Availability Para	meters	
Primary Health Monitor IP	10.10.10.17	
Secondary Device Name	mse3355-2	
Secondary IP Address	10.10.10.16	
Secondary Password 🔍	•••••	
Failover Type 🔍	Manual	
Failback Type 🔍	Manual	
Long Failover Wait 🔍	10 seconds	
Save		

9. Salvare le

impostazioni.

HA Configuration : mse3310 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters				
Configuration				
Primary Health Monitor IP	10.10.17			
Secondary Device Name	mse3355-2			
Secondary IP Address	10.10.10.16			
Secondary Password 🏵	•••••			
Secondary Platform UDI	AIR-MSE-3355-K9:V01:KQ			
Failover Type 🏵	Manual 💌			
Failback Type 🏵	Manual 💌			
Long Failover Wait 🕸	10 seconds			
Save Delete Switchover				

10. Controllare lo stato di avanzamento di ciascun MSE primario.

cisco Prime Network Control Syst	tem		Virtual Domain: ROOT-DOMAIN root + Log O		
🛕 Home Monitor 🔻 Configu	re 🔻 Services 🔻 Reports 🔻 Administrat	ion •			
System v	HA Configuration : mse3310 Services > Mobility Services Engines > System > Services I Ourrent High Availability Status	High Availability > Current High Availability Status			
 Trap Destinations Advanced Parameters Logs 	Status Primary and Heartbeats Up Data Redication Setting up	secondary server synchronization in progress	(60% complete)		
 Services High Availability HA Configuration 	Mean Heartbeat Response Time 8 millisec				
🞳 HA Status	Events Log				
 Accounts Users 	Event Description	Generated By	Timestamp		
 Groups Status 	Primary and secondary server synchronization In progress	Primary	2012-Fab-17, 20:54:32 UTC		
 Server Events Audit Logs 	Configuration successfully created	Primary	2012-Feb-17, 20:54:32 UTC		

11. Confermare che i server MSE Primary1 e Primary2 siano entrambi impostati con un server MSE

secondario.

Mob Servic	oliity Services Engines as > Mobility Services Engines					
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
	mse3350	Osco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2
	mse3310	Cisco 3310 Mobility Services Engine	10.10.10.18	7.2.103.0	Reachable	mse3355-2

12. Da NCS > Servizi > Servizi di mobilità, scegliere Alta disponibilità.



Si noti che 2:1 è confermato per MSE-3355 come secondario per MSE-3310 e MSE-3350.

cisco Network	e Control System	Web	ual Domain: RO	OT-DOMAIN root *	Log Out D+		
💧 Home Monitor	▼ Configure ▼ Serv	ices 🔻 Reports 🔻 Adm	inistration 🔻				
Mobility Services Eng Services > High Availability	jines						
				Asso	Associated Primary Mobility Service Engines		
Secondary Server Name	Secondary HM IP Address	Secondary Device Type	Version	Device Name	Device Type	Heartbeats	
		1.5			Applance		
	10 10 10 14	Osco 3355 Mobility Services		mse3310	Cisco 3310 Mobility Services Engine	Up	
11583335-2	10.10.10.10	Engine	7.2.103.0	mse3350	Cisco 3350 Mobility Services Engine	Up	

Di seguito è riportato un esempio di output dell'impostazione HA dalla console di tutti e tre gli MSE quando viene usato il comando **gethainfo**: [root@mse3355-2 ~]#gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server Server role: Secondary Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Number of paired peers: 2 Peer configuration#: 1

Health Monitor IP Address 10.10.10.22 Virtual IP Address: 10.10.10.21 Version: 7.2.103.0 UDI: AIR-MSE-3350-K9:V01:MXQ839xx Failover type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE

Peer configuration#: 2

Health Monitor IP Address 10.10.10.17 Virtual IP Address: 10.10.10.18 Version: 7.2.103.0 UDI: AIR-MSE-3310-K9:V01:FTX140xx Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos4 Instance database port: 1525 Dataguard configuration name: dg_mse4 Primary database alias: mseop4s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE

La convalida finale per HA nell'NCS mostra lo stato completamente attivo sia per MSE-3310 che per MSE-

3350.

Cisco Prime Cisco Network Control System			
🛕 Home Monitor 🔻 Configure	▼ Services ▼ Reports ▼ Administratio	n v	
System 🗸	HA Configuration : mse3310 Services > Mobility Services Engines > System > Services H	igh Availability > Current High Availability Status	
General Properties	Current High Availability Status		
Trap Destinations	Status	Active	
Advanced Parameters	Heartbeats	Up	
📥 Logs	Data Replication	Up	
 Services High Availability HA Configuration 	Mean Heartbeat Response Time	5 milisec	
旹 HA Status	Events Log		
Accounts	Event Description	Generated By	
Users Groups	Active	Primary	
T Status	Heartbeats have been setup successfully	Primary	
Server Events	Primary and secondary server synchronization in progress	Primary	
Landit Logs	Configuration successfully created	Primary	

cisco Prime Network Control System				
🍐 Home Monitor 🔻 Configure	▼ Services ▼ Reports ▼ Administratio	n 🔻		
System 🗸	HA Configuration : mse3350 Services > Mobility Services Engines > System > Services Hi	gh Availability > Current High Availability Status		
 Active Sessions Trap Destinations Advanced Parameters Logs Services High Availability HA Configuration 	Status Heartbeats Data Replication Mean Heartbeat Response Time	Active Up Up 4 millisec		
🗄 HA Status	Events Log			
 Accounts Users Groups Status Server Events Audit Logs 	Event Description Active	Generated By Primary		
	Heartbeats have been setup successfully Primary and secondary server synchronization in progress Configuration successfully created	Primary Primary Primary		
-				

Risoluzione dei problemi di base di MSE HA

Quando si aggiunge il MSE secondario, viene visualizzato un messaggio simile al seguente:



Èpossibile che si sia verificato un problema durante lo script di installazione.

- Eseguire il comando getserverinfo per verificare le impostazioni di rete corrette.
- Èinoltre possibile che i servizi non siano stati avviati. Eseguire il comando /init.d/msed start.
- Eseguire di nuovo lo script di installazione se necessario (/mse/setup/setup.sh) e salvare alla fine.

L'appliance virtuale per MSE richiede anche una licenza di attivazione (L-MSE-7.0-K9). In caso contrario, NCS chiede se si desidera aggiungere l'istanza secondaria di MSE VA. Ottenere e aggiungere la licenza di attivazione per MSE VA.

The page at https://10.10.10.20 says:



Secondary MSE needs to be activated with a Virtual Appliance license. Add a license and save the config.

X



Se si cambia il ruolo HA su MSE, assicurarsi che i servizi siano completamente arrestati. Arrestare quindi i servizi con il comando **/init.d/msed stop**, quindi eseguire nuovamente lo script di installazione (/mse/setup/setup.sh).

Applying High Availability configuration *** User has switched roles for this MSE. MSE must be stopped before switching r oles. *** Please stop MSE and then re-run setup.sh. ERROR: One or more of the requested configurations was not applied. Role=2, Health Monitor Interface=eth0, Direct connect interface=none Success [root@mse2_setup]#

Utilizzare il comando **gethainfo** per *ottenere informazioni* sull'*elevata disponibilità* sul server MSE. Fornisce informazioni utili per la risoluzione dei problemi o il monitoraggio dello stato e delle modifiche di HA.

[root@mse3355-2 ~]#gethainfo Health Monitor is running. Retrieving HA related information _____ Base high availability configuration for this server _____ Server role: Secondary Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Number of paired peers: 2 _____ Peer configuration#: 1 _____ Health Monitor IP Address 10.10.10.22 Virtual IP Address: 10.10.10.21 Version: 7.2.103.0 UDI: AIR-MSE-3350-K9:V01:MXQ839xx Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No

Heartbeat status: Up Current state: SECONDARY_ACTIVE

Peer configuration#: 2

```
Health Monitor IP Address 10.10.10.17
Virtual IP Address: 10.10.10.18
Version: 7.2.103.0
UDI: AIR-MSE-3310-K9:V01:FTX140xx
Failover type: Manual
Failback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos4
Instance database port: 1525
Dataguard configuration name: dg_mse4
Primary database alias: mseop4s
Direct connect used: No
Heartbeat status: Up
Current state: SECONDARY_ACTIVE
```

Inoltre, NCS High Availability View è un ottimo strumento di gestione che consente di ottenere visibilità sull'installazione HA per MSE.

cisco Prime Cisco Network Control System			Virtual Domain: ROOT-DOMAIN root + Log O	
🔺 Home Monitor 🔻 Configure	▼ Services ▼ Reports ▼ Administr	ation 💌		
System v	HA Configuration : mse3310 Services > Mobility Services Engines > Services High Availability > Current High Availability Status Current High Availability Status			
Trap Destinations	Status Primary an	nd secondary server synchronization in progress	(60% complete)	
Advanced Parameters	Heartbeats Up			
Courses the surface	Data Replication Satting u	p		
 Services Fign Availability HA Configuration 	Mean Heartbeat Response Time 8 millisec			
🎳 HA Status	Events Log			
 Accounts Iteration 	Event Description	Generated By	Timestamp	
Conces	Heartbeats have been setup successfully	Primary	2012-Feb-17, 20:54:36 UTC	
 Status 	Primary and secondary server synchronization in progress	1 Primary	2012-Fab-17, 20:54:32 UTC	
Server Events	Configuration successfully created	Primary	2012-Feb-17, 20:54:32 UTC	
AUGT LOGS	Refresh Status			

Informazioni correlate

- Guida alla configurazione di MSE (dispositivo virtuale e fisico)
- <u>Configurazione alta disponibilità MSE</u>
- Ordinamento
- Documentazione e supporto tecnico Cisco Systems