ISEから設定および操作データのバックアップを エクスポートする方法

内容

概要 <u>前提条件</u> <u>要件</u> <u>使用するコンポーネント</u> <u>背景説明</u> <u>コンフィギュレーション</u> <u>GUIからのオンデマンドISE設定データバックアップの実行</u> <u>CLIからのオンデマンドISE設定データバックアップの実行</u> <u>GUIからのオンデマンドISE運用データバックアップの実行</u> <u>CLIからのオンデマンドISE運用データバックアップの実行</u> <u>確認</u> トラブルシュート

概要

このドキュメントでは、Identity Service Engine(ISE)のオンデマンド設定(ON-Demand Configuration)データおよび運用データバックアップを取得する方法について説明します。

前提条件

要件

次の項目に関する知識があることが推奨されます。

• Identity Service Engine(ISE)の基礎知識。

・リポジトリの設定方法。

使用するコンポーネント

このドキュメントの情報は、次のソフトウェアとハードウェアのバージョンに基づいています。

Cisco Identity Service Engine 2.7

このドキュメントの情報は、特定のラボ環境にあるデバイスに基づいて作成されました。このド キュメントで使用するすべてのデバイスは、初期(デフォルト)設定の状態から起動しています 。対象のネットワークが実稼働中である場合には、どのようなコマンドについても、その潜在的 な影響について確実に理解しておく必要があります。

背景説明

環境内のISEの可用性を保証するもう1つの重要な戦略は、堅牢なバックアップ戦略を持つことです。ISEバックアップには2つのタイプがあります。設定バックアップと運用バックアップ。

Cisco ISEでは、プライマリPANおよびモニタリングノードからデータをバックアップできます。 バックアップは、CLIまたはユーザインターフェイスから実行できます。

設定データ:アプリケーション固有の設定データとCisco ADEオペレーティングシステムの設定 データの両方が含まれます。バックアップは、プライマリPANからGUIまたはCLIを使用して実行 できます。

運用データ:監視およびトラブルシューティングデータが含まれます。バックアップは、プライ マリPAN GUIまたはモニタリングノードのCLIを使用して実行できます。

バックアップはリポジトリに保存され、同じリポジトリからリストアできます。バックアップを 自動的に実行するようにスケジュールすることも、手動でオンデマンドで実行することもできま す。バックアップのステータスはGUIまたはCLIから表示できますが、復元のステータスはCLIか らのみ表示できます。

注意:Cisco ISEは、ISEデータをバックアップするためのVMwareスナップショットをサポ ートしていません。VMwareスナップショットまたはサードパーティ製バックアップを使用 してISEデータをバックアップすると、Cisco ISEサービスが停止します。

コンフィギュレーション

GUIからのオンデマンドISE設定データバックアップの実行

ステップ1:リポジトリの設定については、「<u>ISEでのリポジトリの設定方法」を参照してくださ</u> い

ステップ2:ISEにログインし、[Administration] > [System] > [Backup & Restore]に移動し、 [Configuration Data Backup]を選択し、図に示すように[Backup Now]をクリックします。



ステップ3:バックアップ名、リポジトリ名、暗号化キーを入力し、[バックアップ]をクリックします。

ヒント:暗号キーを忘れないようにしてください。

Backup Configuration Data

*Backup Name	Config-Backup	
*Repository Name	FTP-Repo	•
*Encryption Key	*****	
*Re-Enter Encryption Key	*****	

Internal CA Certificate Store in not in this backup. It is recommend to export it using "application configure ise" CLI command

Cancel Backup

注:ISE設定のバックアップにはシステム証明書と信頼できる証明書が含まれ、内部認証局 (CA)証明書は含まれていません。

ISE CLIから内部**認証局(CA)ストアを手動でバ**ックアップするには、SSHを介してISEプライ**マリ 管理ノード(PAN)ノードにログイン**し、コマンドアプリケーションconfigure ise > selectオプショ ン7 to Export Internal CA Storeを実行します。

ise/admin# application configure ise

Selection configuration option [1]Reset M&T Session Database [2]Rebuild M&T Unusable Indexes [3]Purge M&T Operational Data [4]Reset M&T Database [5]Refresh Database Statistics [6]Display Profiler Statistics [6]Display Profiler Statistics [7]Export Internal CA Store [8]Import Internal CA Store [9]Create Missing Config Indexes [10]Create Missing M&T Indexes [11]Enable/Disable ACS Migration [12]Generate Daily KPM Stats [13]Generate KPM Stats for last 8 Weeks [14]Enable/Disable Counter Attribute Collection [15]View Admin Users [16]Get all Endpoints [17]Enable/Disable Wifi Setup [18]Reset Config Wifi Setup [19]Establish Trust with controller [20]Reset Context Visibility [21]Synchronize Context Visibility With Database [22]Generate Heap Dump [23]Generate Thread Dump [24]Force Backup Cancellation [25]CleanUp ESR 5921 IOS Crash Info Files [0]Exit

7

Export Repository Name: **FTP-Repo** Enter encryption-key for export: Security Protocol list Start Inside Session facade init Old Memory Size : 7906192 Old Memory Size : 7906192 Export in progress... Old Memory Size : 7906192

The following 5 CA key pairs were exported to repository 'FTP-Repo' at 'ise_ca_key_pairs_of_ise': Subject:CN=Certificate Services Root CA - ise Issuer:CN=Certificate Services Root CA - ise

Serial#:0x08f06033-2a4c4fcc-b297e75a-04f11bf9

Subject:CN=Certificate Services Node CA - ise Issuer:CN=Certificate Services Root CA - ise Serial#:0x3a0e8d8a-5a2846be-a902c280-b5d678aa

Subject:CN=Certificate Services Endpoint Sub CA - ise Issuer:CN=Certificate Services Node CA - ise Serial#:0x33b14150-596c4552-ad0a9ab1-9541f0bb

```
Subject:CN=Certificate Services Endpoint RA - ise
Issuer:CN=Certificate Services Endpoint Sub CA - ise
Serial#:0x37e17494-cf1d4372-bf0ba1e6-83653826
```

```
Subject:CN=Certificate Services OCSP Responder - ise
Issuer:CN=Certificate Services Node CA - ise
Serial#:0x68a694ed-bc48481d-bc6cc58e-60a44a61
```

ise CA keys export completed successfully

CLIからのオンデマンドISE設定データバックアップの実行

ステップ1:リポジトリの設定については、「<u>ISEでのリポジトリの設定方法」を参照してくださ</u> い

ステップ2:PANノードのCLIにログインし、次のコマンドを実行します。

backup <backup file name> repository <repository name> ise-config encryption-key plain <encryption key>

ise/admin# backup ConfigBackup-CLI repository FTP-Repo ise-config encryption-key plain

% Internal CA Store is not included in this backup. It is recommended to export it using "application configure ise" CLI command % Creating backup with timestamped filename: ConfigBackup-CLI-CFG10-200326-0705.tar.gpg % backup in progress: Starting Backup...10% completed % backup in progress: Validating ISE Node Role...15% completed % backup in progress: Backing up ISE Configuration Data...20% completed % backup in progress: Backing up ISE Indexing Engine Data...45% completed % backup in progress: Backing up ISE Logs...50% completed % backup in progress: Completing ISE Backup Staging...55% completed % backup in progress: Backing up ADEOS configuration...55% completed % backup in progress: Moving Backup file to the repository...75% completed % backup in progress: Completing Backup...100% completed ise/admin#

GUIからのオンデマンドISE運用データバックアップの実行

ステップ1:リポジトリの設定については、「<u>ISEでのリポジトリの設定方法」を参照してくださ</u> <u>い</u>

ステップ2:ISEの運用バックアップを開始します。

ISE GUIにログインし、[Administration] > [System] > [Backup & Restore]に移動し、[Operational Data Backup]を選択して、[Backup Now]をクリックします(図を参照)。



ステップ3:バックアップ名、リポジトリ名、暗号化キーを入力し、[バックアップ]をクリックします。

ヒント:暗号キーを忘れないようにしてください。

CLIからのオンデマンドISE運用データバックアップの実行

ステップ1:リポジトリの設定については、「<u>ISEでのリポジトリの設定方法」を参照してくださ</u> い

ステップ2:プライマリMNTノードのCLIにログインし、次のコマンドを実行します。

backup <backup file name> repository <repository name> ise-operational encryption-key plain <encryption key>

ise/admin# backup Ops-Backup-CLI repository FTP-Repo ise-operational encryption-key plain <backup password> % Creating backup with timestamped filename: Ops-Backup-CLI-OPS10-200326-0719.tar.gpg % backup in progress: Starting Backup...10% completed % backup in progress: starting dbbackup using expdp.....20% completed % backup in progress: starting cars logic......50% completed % backup in progress: Moving Backup file to the repository...75% completed % backup in progress: Completing Backup...100% completed ise/admin#

確認

図に示すように、[Administration] > [System] > [Backup & Restore]に移動して、構成データのバ ックアップの進行状況を表示します。

dentity Services Engine	ome	 Operations 	Policy	- Administration	Work Centers	
▼System ► Identity Management ► N	letwork Resources	Portal Managemer	nt pxGrid Se	rvices		
Deployment Licensing + Certificates	Logging Maintenance	Upgrade 🔫 E	Backup & Resto	ore Admin Acce	ss > Settings	
0						
Backup & Restore	Configuration Data Real	kum				
Policy Export	Configuration Data Bac	кир			_	
	20%				Stop	
	Click on 'Stop' to cancel Confi	iguration Data Bac	kup			
		guidaon Data Data	nup			
	Backup & Restore					
	Backup Now					
	Configuration Data I Operational Data Ba Backup Now	Backup ackup				
	Schedule Backup					
			Fre	quency Si	art End Date	Execute At
	Configuration Data Backup	Schedule	2			
	Operational Data Backup	Schedule	2			
	Last Backup Details	0				
	Configurational Backup Details					
	Backup Name	Config-Backup				
	Repository Name :	FTP-Repo				
	Start Date & Time :	Sat Mar 07 10:4	43:07 IST 202	20		
	Status :	Backup is in pro	ogress			
	Scheduled :	no Admin web UT				
	Execute On :	ise-1.ise.local				

図に示すように、[Administration] > [System] > [Backup & Restore]に移動し、[Operational Data Backup]の進行状況を確認します。

dentity Services Engine	Home Context Visibility Operations Policy Administration Work Centers	
▼ System → Identity Management	Network Resources Device Portal Management pxGrid Services	
Deployment Licensing + Certificate	es Logging Maintenance Upgrade Backup & Restore Admin Access Settings	
0	Occupient Bate Baters	
Backup & Restore	Operational Data Backup	
Policy Export	20% Stop	
	Click on 'Stor' to cancel Operational Data Backup	
	Citok on Stop to cancer operational bata Backup	
	Backup & Restore	
	Backup Now 🕲	
	O Configuration Data Backup	
	Operational Data Backup	
	Schedule Backup	
	Frequency Start End Date Execute At Schedule Status	3
	Configuration Data Backup Schedule	
	Operational Data Backup Schedule	
	Last Packus Dataila	
		Operational Backup Details
	Configurational Backup Details	Operational Dackup Details
	Backup Name ConfigBackup-CLI	Repository Name : FTP-Repo
	Repository Name : FTP-Repo	Start Date & Time : Fri Mar 13 13:55:02 IST 2020
	backup ConfigBackup-CLI-	Status : Backup is in progress
	Status : CFG10-200307-1128.tar.gpg to repository FTP-Repo: success	Scheduled : no
	Scheduled : no	Triggered Form : Admin web UI
	Triggered Form : CLI	Execute On : ise-1.ise.local
	Execute On :	

PANノードのCLIから設定バックアップの進行状況を確認することもできます。

ise/admin# show backup status %% Configuration backup status \$e\$e _____ % backup name: ConfigBackup-CLI % repository: FTP-Repo start date: Thu Mar 26 07:05:11 IST 2020 % scheduled: no % % triggered from: CLI % host: status: Backup is in progress ° progress %: 50 % % progress message: Backing up ISE Logs %% Operation backup status °°° -----% No data found. Try 'show backup history' or ISE operation audit report ise/admin# バックアップが完了すると、[バックアップの状態]**が[成功]と**表示されます。

• Value • Value • Network Resources • Device Portal Management • pordid Services Deployment Licensing • Certificates • Logging • Maintenance Upgrade • Backup & Restore Policy Export
Deployment Llosning * Certificates * Logging * Maintenano Upgrade * Backup & Restore * Admin Access * Settings Backup & Restore Policy Export Backup Now ① • Configuration Data Backup • Configuration Data Backup • Schedule Backup Frequency Start End Date Execute At
Backup & Restore Policy Export Backup Now Configuration Data Backup Schedule Backup Frequency Start End Date Execute At Schedule Status Configuration Data Backup Schedule Status Configuration Data Backup Schedule Schedule Status Configuration Data Backup Schedule Schedule Status
Backup & Restore Backup & Restore Policy Export Backup Now ① • Configuration Data Backup • Operational Data Backup • Schedule Backup • Configuration Data Backup • Schedule Status • Operational Data Backup • Schedule Status • Operational Data Backup
Policy Export Policy Export Backup Now Configuration Data Backup Configuration Data Backup Backup Now Schedule Backup Frequency Start End Date Execute At Schedule Status Configuration Data Backup Schedule
Backup Now O Configuration Data Backup Configuration Data Backup Configuration Data Backup Schedule Backup Configuration Data Backup Schedule Backup Configuration Data Backup Schedule Configuration Confi
Configuration Data Backup Configuration Dat
Configuration Data Backup Schedule Sche
Backup Now Schedule Backup Frequency Start End Date Execute At Schedule Status Configuration Data Backup Schedule
Schedule Backup Frequency Start End Date Execute At Schedule Status Configuration Data Backup <u>Schedule</u>
Schedule Backup Frequency Start End Date Execute At Schedule Status Configuration Data Backup Schedule
Frequency Start End Date Execute At Schedule Status Configuration Data Backup Schedule
Configuration Data Backup Schedule
Operational Data Backup Schedule
Last Backup Details 🔍
Configurational Backup Details Operational Backup Details
Backup Name ConfigBackup-CLI Backup-CLI
Repository Name : FTP-Repo
Start Date & Time : Thu Mar 26 07:05:11 IST 2020 Start Date & Time : Thu Mar 26 07:05:11 IST 2020
Status : Cr610-2003Ge-0755.tax.upg to repository FTP-Repo: Status : Cr610-2003Ge-0755.tax.upg to repository FTP-Repo:
success Scheduled : no
Screene no Triggered Form : CLI
Becate On :
Restore

トラブルシュート

ISE Indexing EngineサービスがISE Adminノードで実行されていることを確認します。

ise-1/admin# show application status ise

ISE PROCESS NAME	STATE	PROCESS ID
 Database Listener	running	15706
Database Server	running	89 PROCESSES
Application Server	running	25683
Profiler Database	running	23511
ISE Indexing Engine	running	28268
AD Connector	running	32319
M&T Session Database	running	23320
M&T Log Processor	running	16272
ISEでバックアップの復元をデバッ	次のデバッグを使用しま	

ISEでバックアップの復元をデバッグするには、次のデバッグを使用します。

ise-1/admin# debug backup-restore backup ? <0-7> Set level, from 0 (severe only) to 7 (all) <cr> Carriage return. ise-1/pan# debug backup-restore backup 7 ise-1/pan# ise-1/pan# 6 [25683]:[info] backup-restore:backup: br_history.c[549] [system]: ISE backup/restore initiated by web UI as ise.br.status is 'in-progress' in /tmp/ise-cfg-br-flags 7 [25683]:[debug] backup-restore:backup: br_backup.c[600] [system]: initiating backup Config-Backup to repos FTP-Repo 7 [25683]:[debug] backup-restore:backup: br_backup.c[644] [system]: no staging url defined, using local space 7 [25683]:[debug] backup-restore:backup: br_backup.c[60] [system]: flushing the staging area 7 [25683]:[debug] backup-restore:backup: br_backup.c[673] [system]: creating /opt/backup/backup-Config-Backup-1587431770 7 [25683]:[debug] backup-restore:backup: br_backup.c[677] [system]: creating /opt/backup/backup-Config-Backup-1587431770/backup/cars 7 [25683]:[debug] backup-restore:backup: br_backup.c[740] [system]: creating /opt/backup/backup-Config-Backup-1587431770/backup/ise

7 [25683]:[debug] backup-restore:backup: br_backup.c[781] [system]: calling script /opt/CSCOcpm/bin/isecfgbackup.sh 6 [25683]:[info] backup-restore:backup: br_backup.c[818] [system]: adding ADEOS files to backup 6 [25683]:[info] backup-restore:backup: br_backup.c[831] [system]: Backup password provided by user 6 [25683]:[info] backup-restore:backup: br_backup.c[190] [system]: No post-backup entry in the manifest file for ise 7 [25683]:[debug] backup-restore:backup: br_backup.c[60] [system]: flushing the staging area 6 [25683]:[info] backup-restore:backup: br_backup.c[60] [system]: flushing the staging area

6 [25683]:[info] backup-restore:backup: br_backup.c[912] [system]: backup Config-Backup-CFG10-200421-0646.tar.gpg to repository FTP-Repo: success

6 [25683]:[info] backup-restore:backup: br_history.c[487] [system]: updating /tmp/ise-cfg-brflags with status: complete and message: backup Config-Backup-CFG10-200421-0646.tar.gpg to repository FTP-Repo: success

no debug backup-restore backup 7を使用して、ノードのデバッグを無効にします。

ise-1/admin# no debug backup-restore backup 7