MSEソフトウェアリリース8.0ハイアベイラビリ ティの設定および導入ガイド

内容

概要 背景<u>説明</u> 注意事項と制約事項 MSE 仮想アプライアンス用の HA 設定シナ<u>リオ(ネットワーク接続)</u> セカンダリMSEの設定 Cisco Prime NCS(またはPrime Infrastructure)からの管理 セカンダリMSEのCisco Prime NCSへの追加 直接接続の場合の HA 設定 MSE 物理アプライアンス用の HA 設定シナリオ 確認 MSE HA の基本的なトラブルシューティング フェールオーバー/フェールバックのシナリオ <u>プライマリが起動、セカンダリがテイクオーバーの準備ができている</u> セカンダリへのフェールオーバー プライマリへのフェールバック HA状態マトリクス

<u>HAに関する重要事項</u> <u>HAのトラブルシューティング</u>

概要

注:このドキュメントは、MSE HA に関係ない MSE および関連コンポーネントの設定の詳細については説明していません。これらの情報は、他のドキュメントに含まれており、関連 資料に示してあります。適応型 wIPS の設定もこのドキュメントでは扱いません。

背景説明

MSE は、複数の関連サービスを実行できるプラットフォームです。これらのサービスには、ハイ レベル セキュリティ機能があります。したがって、最高のサービス信頼性を維持するには、 HAに対する配慮が重要です。

HA をイネーブルにすると、すべてのアクティブ MSE は、別の非アクティブ インスタンスでバ ックアップされます。MSE HA は、ハイ アベイラビリティ セットアップを設定、管理およびモ ニタするヘルス モニタを導入します。プライマリ MSE とセカンダリ MSE の間でハートビート が維持されます。ヘルス モニタは、データベースのセットアップ、ファイルのレプリケーション 、アプリケーションのモニタリングを行います。プライマリ MSE で障害が発生し、セカンダリ MSE に切り替わると、プライマリ MSE の仮想アドレスがトランスペアレントに切り替わります 。

この設定(図1を参照)は、HAに対応したCisco MSEを含む一般的なCisco WLAN導入を示してい ます。

HAは、MSE-3310、MSE-3350/3355、3365、およびESXi上の仮想アプライアンスでサポートされます。

図1. HAでのMSEの導入



注意事項と制約事項

次に、MSE HAアーキテクチャに関する情報を示します。

• MSE仮想アプライアンスは1:1 HAのみをサポート

• 1 つのセカンダリ MSE では最大 2 つのプライマリ MSE をサポートできます。HAペアマト

リクスを参照してください(図2および3)

- •HAはネットワーク接続と直接接続をサポート
- MSE レイヤ2 冗長性のみがサポートされます。ヘルスモニタIPと仮想IPの両方が同じサブネット上にある必要があり、Network Control System(NCS)レイヤ3の冗長性からアクセスできない
- ヘルスモニタIPと仮想IPは異なっている必要があります
- •手動または自動フェールオーバーを使用できます
- •手動または自動フェールバックのいずれかを使用できます
- プライマリMSEとセカンダリMSEの両方が同じソフトウェアバージョンである必要があります
- アクティブな各プライマリ MSE は別の非アクティブ インスタンスによりバックアップされ ます。セカンダリ MSE は、フェールオーバー手順の開始後にアクティブになります。
- •フェールオーバー手順は、手動または自動です
- ・登録されているプライマリ MSE ごとに 1 つのソフトウェアおよびデータベース インスタン スが存在します。

Primary Server Type		Secondary Server Type					
	3310	3350	3355	VA-Low	VA-Standard	VA-High	
3310	Y	Y	Y	N	N	N	
3350	N	Y	Y	N	N	N	
3355	N	Y	Y	N	N	N	
VA-Low	N	N	N	Y	Y	Y	
VA-Standard	N	N	N	N	Y	Y	
VA-High	N	N	N	N	N	Y	

図 2. MSE HA サポート ペア マトリクス

このマトリックスのベースラインは、セカンダリインスタンスがアプライアンスまたは仮想マシ ンであるかどうかにかかわらず、常にプライマリと同じ仕様または高い仕様である必要があるこ とです。

MSE-3365は、別のMSE-3365とのみペアリングできます。その他の組み合わせはテスト/サポートされていません。

図 3. MSE HA N1:ペア マトリクス

Secondary Server	Primary Server
3310	N:1 not supported
3350	Two 3310 servers are supported
3355	Two 3310 servers are supported
3355	Two 3350 servers are supported
3355	One 3310 and one 3350 are supported

MSE 仮想アプライアンス用の HA 設定シナリオ(ネットワーク 接続)

次に、MSE 仮想アプライアンス(VA)の HA 設定の例を示します(<u>図 4</u> を参照してください)。 この場合、これらは次のように設定されます。

・プライマリ MSE VA

Virtual IP - [10.10.10.11]

Health Monitor interface (Eth0) - [10.10.10.12] ・セカンダリ MSE VA

Virtual IP - [None]

Health Monitor interface (Eth0) - [10.10.10.13]

注:アクティブ化ライセンス(L-MSE-7.0-K9)は各 VA に必要です。これは、VA の HA 設 定に必要です。

図 4. HA での MSE 仮想アプライアンス



詳細については、<u>MSE 仮想アプライアンスの関する Cisco ドキュメント</u>を参照してください。

次に一般的な手順を示します。

1. MSEのVAインストールを完了し、図に示すように、すべてのネットワーク設定が満たされ ていることを確認します。



2. 図に示すように、最初のログイン時にセットアップウィザードからパラメータを設定します



 必要な項目(ホスト名やドメインなど)に入力します。 ハイ アベイラビリティの設定手順 で YES と入力します。

Current hostname=[mse]
Configure hostname? (Y)es/(S)kip/(U)se default [Yes]:
The host name should be a unique name that can identify
the device on the network. The hostname should start with
efters, numbers, and dashes
recers, numbers, una ausnes.
Enter a host name [mse]: mse1
Current domain=[]
Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: s
furrent role=[Primaru]
Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]:

4. 図に示すように、この情報を入力します。ロールの選択:[1 for Primary]ヘルス モニタ イン ターフェイス:[eth0]** Network Adapter 1にマッピングされたネットワーク設定

	Show All Devices	Add Remove	Connected		
Hard	fware	Summary	Connect at power on		
	Memory (edited) CPUs Video card VMCI device SCSI controller 0 Hard disk 1 CD/DVD Drive 1 Network adapter 1 (edite	8192 MB 2 Video card Restricted LSI Logic Parallel Virtual Disk CD/DVD Drive 1 vlan 10	Adapter Type Current adapter: E1000 MAC Address 00:50:56:89:01:d9 (Automatic		
	Network adapter 2 (edite	vlan 10	Network Connection Network label: vlan 10 VM Network vlan 104 vlan 21 vlan 20 vlan 12 vlan 11 vlan 10 DM7		

Enter a host name [mse]: mse1 Current domain=[] Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: s Current role=[Primary] Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]: High availability role for this MSE (Primary/Secondary) Select role [1 for Primary, 2 for Secondary] [1]: Health monitor interface holds physical IP address of this MSE server. This IP address is used by Secondary, Primary MSE servers and WCS to communicate among themselves Select Health Monitor Interface [eth0/eth1] [eth0]: 5. 図に示すように、直接接続イ**ンタフェース[**none]を選択します。 Health monitor interface holds physical IP address of this MSE server. This IP address is used by Secondary, Primary MSE servers and WCS to communicate among themselves Select Health Monitor Interface [eth0/eth1] [eth0]: Direct connect configuration facilitates use of a direct cable connection betwee n the primary and secondary MSE servers. This can help reduce latencies in heartbeat response times, data replication and failure detection times. Please choose a network interface that you wish to use for direct connect. You s hould appropriately configure the respective interfaces. implies you do not wish to use direct connect configuration. \"none\" Select direct connect interface [eth0/eth1/none] [none]: _ 6. 次の情報を入力します(図を参照)。仮想 IP アドレス : [10.10.10.11]ネットワーク マスク :[255.255.255.0]リカバリ モードでの MSE の起動 : [No] Select direct connect interface [eth0/eth1/none] [none]:

Enter a Virtual IP address for first this primary MSE server

Enter Virtual IP address [1.1.1.1]: 10.10.10.11

Enter the network mask for IP address 10.10.10.11.

Enter network mask [1.1.1.1]: 255.255.255.0

Choose to start the server in recovery mode. You should choose yes only if this primary was paired earlier and you have now ost the configuration from this box. And, now you want to restore the configuration from Secondary via NCS Do you wish to start this MSE in HA recovery mode ?: (yes/no): no_

7. 次の情報を入力します(図を参照)。Eth0 の設定:[Yes]Eth0 IP アドレスの入力 : [10.10.10.12]ネットワーク マスク:[255.255.255.0]デフォルト ゲートウェイ : [10.10.10.1]

Current IP address=[1.1.1.10] Current eth0 netmask=[255.255.255.0] Current gateway address=[1.1.1.1] Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes] Enter an IP address for first ethernet interface of this machine. Enter eth0 IP address [1.1.1.10]: 10.10.10.12 Enter the network mask for IP address 10.10.10.12. Enter network mask [255.255.255.0]: Enter an default gateway address for this machine. Note that the default gateway must be reachable from the first ethernet interface. Enter default gateway address [1.1.1.1]: 10.10.10.1 8. セカンド イーサネット インターフェイス (Eth1) は使用されません。図に示すように、 eth1インターフェイス – [skip]を設定します。 The second ethernet interface is currently disabled for this machine. Configure eth1 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: s 9. 図に示すように、セットアップウィザードを続行します。クロック同期化のために NTP サ ーバをイネーブルにすることは重要です。推奨タイム ゾーンは UTC です。 Domain Name Service (DNS) Setup DNS is currently enabled. No DNS servers currently defined Configure DNS related parameters? (Y)es/(S)kip/(U)se default [Yes]: s Current timezone=[America/New_York] Configure timezone? (Y)es/(S)kip/(U)se default [Yes]: Enter the current date and time. Please identify a location so that time zone rules can be set correctly. Please select a continent or ocean. 1) Africa 2) Americas 3) Antarctica 4) Arctic Ocean 5) Asia 6) Atlantic Ocean Australia 8) Europe 9) Indian Ocean 10) Pacific Ocean UTC - I want to use Coordinated Universal Time. 12) Return to previous setup step (^). #? 11.

Network Time Protocol (NTP) Setup. If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time. NTP is currently disabled. Configure NTP related parameters? (Y)es/(S)kip/(U)se default [Yes]: Enter whether or not you would like to set up the Network Time Protocol (NTP) for this machine. If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time. Enable NTP (yes∕no) [no]: yes Enter NTP server name or address: ntp.network.local 次に、MSE VAプライマリ設定の概要を示します。 -----BEGIN-----Role=1, Health Monitor Interface=eth0, Direct connect interface=none Virtual IP Address=10.10.10.11, Virtual IP Netmask=255.255.255.0 Eth0 IP address=10.10.10.12, Eth0 network mask=255.0.0.0 Default Gateway=10.10.10.1 -----END------10. **ves**と入力して、すべての設定情報が正しいことを確認します(図を参照)。 Please verify the following setup information. -----BEGIN------Host name=mse1 Role=1, Health Monitor Interface=eth0, Direct connect interface=none Virtual IP Address=10.10.10.11, Virtual IP Netmask=255.255.255.0 Eth0 IP address=10.10.10.12, Eth0 network mask=255.255.255.0 Default gateway=10.10.10.1 Time zone=UTC Enable NTP=yes, NTP servers=10.10.10.10 -----END------You may enter "yes" to proceed with configuration, "no" to make more changes, or "^" to go back to the previous step. Configuration Changed Is the above information correct (yes, no, or ^): yes 11. 図に示すように、セットアップ後のリブートが推奨されます。 [root@mse1 ~]# reboot Stopping MSE Platform

12. リブート後、図に示すように、MSEサービスを**/etc/init.d/msed startコマンド**またはservice msed startコ**マンドで**開始します。

[root@mse1 ~]# getserverinfo Health Monitor is not running [root@mse1 ~]# /etc/init.d/msed start Starting MSE Platform ip_tables: (C) 2000-2006 Netfilter Core Team Netfilter messages via NETLINK v0.30. ip_conntrack version 2.4 (8192 buckets, 65536 max) - 304 bytes per conntrack Starting Health Monitor, Waiting to check the status. Starting Health Monitor, Waiting to check the status. Starting Health Monitor, Waiting to check the status. Health Monitor successfully started Starting Admin process... Started Admin process. Starting database Database started successfully. Starting framework and services Framework and services successfully started

[root@mse1 ~]#

13. すべてのサービスが開始されたら、getserverinfoコマンドを使用して、MSEサービスが正常に動作していることを確認します。操作の状態は、図に示**すように**Upである必要があり

ます。 Active Wired Clients: 0 Active Elements(Wireless Clients, Rogue APs, Rogue Clients, Interferers, Wired (lients, Tags) Limit: 100 Active Sessions: 0 Wireless Clients Not Tracked due to the limiting: 0 Tags Not Tracked due to the limiting: 0 Rogue APs Not Tracked due to the limiting: 0 Rogue Clients Not Tracked due to the limiting: 0 Interferers Not Tracked due to the limiting: 0 Jired Clients Not Tracked due to the limiting: 0 Total Elements(Wireless Clients, Rogue APs, Rogue Clients, Interferers, Wired Cl ients) Not Tracked due to the limiting: 0 Context Aware Sub Services Subservice Name: Aeroscout Tag Engine dmin Status: Disabled Dperation Status: Down Subservice Name: Cisco Tag Engine admin Status: Enabled Operation Status: Up [root@mse1 ~]#

セカンダリMSEの設定

これらの手順は、セカンダリ MSE VA のセットアップの一部です。

新しいインストール後に初めてログインすると、Setup Wizard が起動します。図に示すように、次の情報を入力します。ハイ アベイラビリティの設定:[Yes]ロールの選択:[2](セカンダリを示します)ヘルス モニタ インターフェイス:[eth0](プライマリと同じです)

Current hostname=[mse] Configure hostname? (Y)es/(S)kip/(U)se default [Yes]: yes The host name should be a unique name that can identify the device on the network. The hostname should start with a letter, end with a letter or number, and contain only letters, numbers, and dashes. Enter a host name [mse]: mse2 Current domain=[] Configure domain name? (Y)es/(S)kip/(U)se default [Yes]: s Current role=[Primary] Configure High Availability? (Y)es/(S)kip/(U)se default [Yes]: ligh availability role for this MSE (Primary/Secondary) Select role [1 for Primary, 2 for Secondary] [1]: 2 lealth monitor interface holds physical IP address of this MSE server. This IP address is used by Secondary, Primary MSE servers and WCS to communicate among themselves elect Health Monitor Interface [eth0/eth1] [eth0]:

2. 図に示すように、情報を入力します。直接接続:[None]IP アドレス eth0 : [10.10.10.13]ネットワーク マスク : [255.255.255.0]デフォルト ゲートウェイ

: [10.10.10.1]

Select direct connect interface [eth0/eth1/none] [none]: Current IP address=[1.1.1.10] Current eth0 netmask=[255.255.255.0] Current gateway address=[1.1.1.1] Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: Enter an IP address for first ethernet interface of this machine. Enter eth0 IP address [1.1.1.10]: 10.10.10.13 Enter the network mask for IP address 10.10.10.13. Enter network mask [255.255.255.0]: Enter an default gateway address for this machine. Note that the default gateway must be reachable from the first ethernet interface. Enter default gateway address [1.1.1.1]: 10.10.10.1__

3. 図に示すように、eth1インターフェイス – [Skip]を設定します。

Configure eth0 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: Enter an IP address for first ethernet interface of this machine. Enter eth0 IP address [1.1.1.10]: 10.10.10.13 Enter the network mask for IP address 10.10.10.13. Enter network mask [255.255.255.0]: Enter an default gateway address for this machine. Note that the default gateway must be reachable from the first ethernet interface. Enter default gateway address [1.1.1.1]: 10.10.10.1 The second ethernet interface is currently disabled for this machine. Configure eth1 interface parameters? (Y)es/(S)kip/(U)se default [Yes]: s 4. 図に示すように、タイムゾーン – [UTC]を設定します。 Current timezone=[America/New_York] Configure timezone? (Y)es/(S)kip/(U)se default [Yes]: Enter the current date and time. Please identify a location so that time zone rules can be set correctly. Please select a continent or ocean. 1) Africa 2) Americas 3) Antarctica 4) Arctic Ocean

- 5) Asia
- 6) Atlantic Ocean
- Australia
- 8) Europe
- 9) Indian Ocean
- 10) Pacific Ocean
- 11) UTC I want to use Coordinated Universal Time.
- 12) Return to previous setup step (^).
- #? 11

5. 図に示すように、NTPサーバを有効にします。

Network Time Protocol (NTP) Setup.

If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time.

NTP is currently disabled. Configure NTP related parameters? (Y)es/(S)kip/(U)se default [Yes]:

Enter whether or not you would like to set up the Network Time Protocol (NTP) for this machine.

If you choose to enable NTP, the system time will be configured from NTP servers that you select. Otherwise, you will be prompted to enter the current date and time.

Enable NTP (yes/no) [no]: yes Enter NTP server name or address: ntp.network.local_

6. 図に示すように、セットアップウィザードの残りの手順を実行し、設定情報を確認して設定

を保存します。

Please verify the following setup information.
-----BEGIN-----Host name=mse2
Role=2, Health Monitor Interface=eth0, Direct connect interface=none
Eth0 IP address=10.10.10.13, Eth0 network mask=255.255.255.0
Default gateway=10.10.10.1
Time zone=UTC
Enable NTP=yes, NTP servers=10.10.10.10
You may enter "yes" to proceed with configuration, "no" to make
more changes, or "^" to go back to the previous step.
Configuration Changed
Is the above information correct (yes, no, or ^): yes_
7. 図に示すように、リブートし、プライマリMSEの前の手順と同じ手順でサービスを開始しま

f.

[root@mse2 ~]# /etc/init.d/msed start
Starting MSE Platform

ip_tables: (C) 2000-2006 Netfilter Core Team
Netfilter messages via NETLINK v0.30.
ip_conntrack version 2.4 (8192 buckets, 65536 max) - 304 bytes per conntrack
Starting Health Monitor, Waiting to check the status.
Starting Health Monitor, Waiting to check the status.
Health Monitor successfully started
Starting Admin process...
Started Admin process.
Starting database
Database started successfully. Starting framework and services
[root@mse2 ~]# __

Cisco Prime NCS(またはPrime Infrastructure)からの管理

次の手順は、プライマリおよびセカンダリ MSE VA を NCS に追加する方法を示します。通常の プロセスで、MSE を NCS に追加します。詳細については、設定ガイドを参照してください。

1. NCSから、[システム(Systems)] > [モビリティサービス(Mobility Services)]に移動し、図に示 すように[**モビリティサービスエン**ジン(Mobility Services Engines)]を選択します。



 ドロップダウンメニューから、[モビリティサービスエンジンの追加]を選択します。次に、 図に示すように[Go]をクリックします。

ROOT-DOMAIN root v Log Out	ρ	÷
•	😵 😂	0
	Select a command 🛛 🔻	Go
	Select a command	
	Add Location Server	
	Add Mobility Services Engine 🔪	
(Delete Service(s)	
	Synchronize Services	
	Synchronization History	
	Edit Configuration	

3. MSE の NCS 設定ウィザードを実行します。このドキュメントの例では、次の値を使用しま す。デバイス名の入力:例:[MSE1]IPアドレス:[10.10.10.12]ユーザ名およびパスワード (各初期セットアップ)図に示すように[次へ]をクリックします。

cisco Prime Cisco Network Control System		
	Add Mobility Services Engine	
Add MSE Configuration		
Licensing	Device Name	msel
Select Service	IP Address	10.10.10.12
Tracking		
Assign Maps	Contact Name	
	Username⊕	admin
	Password [®]	•••••
	нттр⊕	Enable
	Delete synchronized service assign	ments 🔽 (Network designs, controllers, wired switche
	O Selecting Delete synchronized se Existing location history data is retained	ervice assignments permanently removes all service a d, however you must use manual service assignments to
住田可能たさがてのこくしょう		

4. 使用可能なすべてのライセンス	くを追加し、図に	示すよ	うに[Next] ⁷	をクリックします	t。
cisco Prime Network Control Syste	em 🛛				
	MSE License Su	immary			
Edit MSE Configuration	0 Permanent licen	ses includ	e installed licens	e counts and in-built lic	ense counts.
Licensing					
Select Service	MSE Name (UDI)	Service	Platform Limit	Туре	Installed Limit
Tracking	mse1 Activated	(AIR-MS	E-VA-K9:V01:	mse1_d5972642-56	96-11e1-bd0
Assign Maps		CAS	2000	CAS Elements	100
		WIPS	2000	wIPS Monitor Mode APs	10
				wIPS Local Mode APs	10
		MSAP	2000	Service Advertisemer Clicks	^{it} 1000
	Add License	Remove	License		

5. MSEサービスを選択し、図のように[Next]をクリックします。

	cisco	Cisco Prime Network Control System	m	
			Select	Mobility Service
	Edit MSE Cor	Edit MSE Configuration		
	Licensing		R	Context Aware Service
	Select Servi	ce	-	
	Tracking			 Cisco Context-Aware Engine for Clients and Tags
	Assign Maps			C Partner Tag Engine 🔍
				Wireless Intrusion Protection Service
				MSAP Service
6.	トラッキン	グパラメータを有効にし	、図にえ	示すように[Next]をクリックします。
	cisco	Cisco Prime Network Control S	ystem	
			:	Select Tracking & History Parameters.
	Edit MSE C	onfiguration		
	Licensing			Tracking
	Select Serv	rice		✓ Wired Clients
	Tracking			✓ Wireless Clients
	Assign Map	5		Rogue AccessPoints
				Exclude Adhoc Rogue APs
				C Rogue Clients
				Interferers
				Active RFID Tags

7. オプションで、マップを割り当て、MSE サービスを同期化します。MSEのNCSへの追加を 完了するには、[Done]をクリックします(図を参照)。

cisco	Cisco Prime Network Control System				
Edit MSE Con	figuration				
Licensing					
Select Service	9	L Name			
Tracking					
Assign Maps	\$				
The page at	: https://10.10.10.20 says:	×			
Your MSE Settings have been saved.					
ОК					

セカンダリMSEのCisco Prime NCSへの追加

次のスクリーンショットは、プライマリ MSE VA が追加されたことを示します。ここで、セカン ダリ MSE VA を追加するために、次の手順を完了します。

1. [Secondary Server]列を見つけ、図に示すように、リンクをクリックして設定します。

•1] C	Istella Cisco Prime ISCO Network Control S	System			Virtual Domain: ROOT	DOMMAN root + Lo	pour D.		÷
4	👌 Home Monitor 🔹 Cor	nfigure • Services • Reports	 Administration 	•					* 8 0
Mol Servi	oliity Services Engines as > Mobility Services Engines						Select	a command	• čo
п	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server	Name	Admin Status	Service
	msel	Cisco Mobility Senrices Engine - Virtual Appliance	10.10.10.12	7.2.103.0	Reachable	N/A (Click here to configure)	Context Aware Service wIPS Service MSAP Service	Enabled Disabled Disabled	Up Down Down

2. 次のシナリオの設定でセカンダリMSE VAを追加します。セカンダリ デバイス名: [mse2]セ カンダリ IP アドレス: [10.10.10.13]セカンダリ パスワード*: [default or from setup script]フェールオーバー タイプ*: [Automatic, or Manual]フェールバック タイプ*フェールオ ーバーの長期待機*[Save] をクリックします。*必要に応じて、情報アイコンをクリックするか、MSEドキュメントを参照してください。

HA Conf	iguration	: mse1
---------	-----------	--------

Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configure High Availability Parameters			
Primary Health Monitor IP	10.10.12		
Secondary Device Name	mse2		
Secondary IP Address	10.10.13		
Secondary Password 🕸	•••••		
Failover Type 🕸	Automatic 💌		
Failback Type 🕸	Manual 👻		
Long Failover Wait 🕸	10 seconds		
Save			

3. 図に示すように、NCSが2つのMSEをペアにするようにプロンプトを表示したら、[OK]をクリックします。

The page at https://10.10.10.20 says: 🛛 🔀							
?	Are you sure you want to pair up these two servers?						
	OK Cancel						

図に示すように、NCSは設定を作成するのに数秒かかります。

Please Wait. High Availability configuration is being created at the Primary and Secondary servers. This will take a few seconds...

. . .

.

図に示すように、セカンダリMSE VAにアクティベーションライセンス(L-MSE-7.0-K9)が必 要かどうかをNCSが確認します。

	The page at https://10.10.10.20 says:								
	Secondary MSE needs to be a config.	activated with a Virtual Appliance license. Add a license and save the							
	OK								
4.	[OK]をクリックし、[License File] ます。]を見つけて、図に示すように[Secondary]をアクティブにし							
	HA Configuration : mse1 Services > Mobility Services Engines > Sys	tem > Services High Availability > Configure High Availability Parameters							
	Configuration								
	Primary Health Monitor IP	10.10.10.12							
	Secondary Device Name	mse2							
	Secondary IP Address	10.10.13							
	Secondary Password 🕸	•••••							
	Secondary Platform UDI	AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-0050568							
	Secondary Activation Status	Not Activated							
	Activate Secondary with License	Browse							
	Failover Type 🕸	Automatic 👻							
	Failback Type 🕸	Manual 💌							
	Long Failover Wait 🕸	10 seconds							
	Save Delete								

5. セカンダリMSE VAがアクティブになったら、[**Save**]をクリックして、図に示すように設定 を完了します。 HA Configuration : mse1 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configuration	
Primary Health Monitor IP	10.10.10.12
Secondary Device Name	mse2
Secondary IP Address	10.10.13
Secondary Password 🕸	•••••
Secondary Platform UDI	AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-005
Secondary Activation Status	Activated
Delete Secondary Activation license $\ensuremath{\widehat{\Psi}}$	
Failover Type 🕸	Automatic 💌
Failback Type 🛞	Manual 💌
Long Fallover Wait 🕸	10 seconds
Save Delete Switchover	

6. [NCS] > [Mobility Services] > [Mobility Services Engine] に移動します。セカンダリ MSE が [Secondary Server] の列に表示されると、NCS により次の画面が表示されます。

Mob Servio	ility Services Engines c > Mobility Services Engines						- Select	a command	• G0
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server	Marne Marne	Admin Status	Service Status
	msel	Osco Mobility Services Engine - Virtual Appliance	10.10.10.11	7.2.103.0	Reachable	mee2	Context Aware Service wIPS Service MSAP Service	Enabled Disabled Disabled	Up Down Down

7. HAステータスを表示するには、図に示すように、[NCS] > [Services] > [High Availability]に 移動します。



HAステータスでは、MSEペアおよび図に示すように、現在のステータスとイベントを確認

できます。									
Altala, Cisco Prime		No. Passager		-					
Vitua Bonanciko Ori-Donutin Proce V Log Ok 24									
👌 Home Monitor 🔹 Configure	🛕 Home Monitor 🔹 Configure 👻 Services 🔹 Reports 🔹 Administration 🔹								
	and the state of the state of the								
System 🗸	HA Configuration : mse1 Services > Mobility Services Engines > System :	Services High Availability > Current High Availability	lability Status						
General Properties	Current High Availability Status								
Trap Destinations	Status	Active							
Advanced Parameters	Heartbeats	Up							
🚠 Logs	Data Replication	Up							
 Services High Availability HA Configuration 	Mean Heartbeat Response Time	6 milisec							
👗 HA Status	Events Log								
 Accounts 	Event Description	Generated By	Timestamp	Remarks					
Groups	Active	Primary	2012-Feb-14, 00:22:26 UTC	-					
 Status 	Heartbeats have been setup successfully	Primary	2012-Feb-14, 00:19:00 UTC	•					
Server Events	Primary and secondary server synchronization in progress	Primary	2012-Feb-14, 00:18:55 UTC	-					
NCS Alarms	Configuration successfully created	Primary	2012-Feb-14, 00:18:56 UTC	-					
NCS Events	Refresh Status								

初期同期化およびデータ レプリケーションのセットアップには数分かかることがあります。図に示すように、HAペアが完全にアクティブになるまで、NCSは進行状況%を示しています。

Current High Availability Status						
Status	Primary and secondary server synchronization in progress	(68% complete)				
Heartbeats	Up					
Data Replication	Setting up					
Mean Heartbeat Response Time	108 millisec					

MSEソフトウェアリリース7.2で導入された、HAに関連する新しいコマンドはgethainfo**です**。この出力は、プライマリおよびセカンダリを示します。

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Primary Health Monitor IP Address: 10.10.10.12 Virtual IP Address: 10.10.10.11 Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse1 Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.10.10.13 Virtual IP Address: 10.10.10.11 Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse2_666f2046-5699-11e1-b1b1-0050568901d9 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: PRIMARY_ACTIVE

[root@mse2 ~]#gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Secondary Health Monitor IP Address: 10.10.10.13 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse2 Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.10.10.12 Virtual IP Address: 10.10.10.11 Version: 7.2.103.0 UDI: AIR-MSE-VA-K9:V01:mse1_d5972642-5696-11e1-bd0c-0050568901d6 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s

直接接続の場合の HA 設定

ネットワーク接続された MSE HA は、ネットワークを使用します。直接接続設定の場合、プライ マリおよびセカンダリ MSE サーバ間での直接ケーブル接続を簡単に使用できます。これにより 、ハートビート応答時間、データ レプリケーションおよび障害検出時間の遅延を減らすことがで きます。このシナリオでは、図5に示すように、プライマリ物理MSEがインターフェイスeth1の セカンダリMSEに接続します。直接接続にはEth1が使用されることに注意してください。各イン ターフェイスには IP アドレスが必要です。

図 5: 直接接続の MSE HA



1. プライマリ MSE をセットアップします。セットアップ スクリプトからの設定の要約:

-----BEGIN-----Host name=mse3355-1 Role=1 [Primary] Health Monitor Interface=eth0 Direct connect interface=eth1 Virtual IP Address=10.10.10.14 Virtual IP Netmask=255.255.255.0 Eth1 IP address=1.1.1.1 Eth1 network mask=255.0.0.0 Default Gateway =10.10.10.1

2. セカンダリ MSE をセットアップします。セットアップ スクリプトからの設定の要約: ------BEGIN------Host name=mse3355-2 Role=2 [Secondary]

Health Monitor Interface=eth0
Direct connect interface=eth1
Eth0 IP Address 10.10.10.16
Eth0 network mask=255.255.255.0
Default Gateway=10.10.10.1
Eth1 IP address=1.1.1.2,
Eth1 network mask=255.0.0.0
------END------

3. 図に示すように、プライマリMSEをNCSに追加します。(前の例を参照するか、『コンフィギュレーションガイド』を参照)。

	cisco Ne	co Prime twork Con	trol System			Virtual Domain	ROOT-DOMAIN r	oot v Log Out
	💧 Home 🛛	Monitor 🔻	Configure 🔻	Services 🔻	Reports 🔻 🖌	Administration	•	
M0 Serv	bility Servic rices > Mobility S	es Engine iervices Engin	5 es					[
	Device Nam	e	Device Type		IP Address	Version	Reachability Status	Secondary Server
	mse3355-1		Cisco 3355 Mo Engine	bility Services	10.10.10.14	7.2.103.0	Reachable	N/A (Click here to configure)

4. セカンダリMSEを設定するには、[NCS] > [configure Secondary Server]に移動します。セカ ンダリ デバイス名の入力: [mse3355-2]セカンダリ IP アドレス: [10.10.10.16]残りのパラメ ータを入力し、図に示すように[保存]をクリックします。

Cisco Prime Network Control System	n 6 4 1	Virtual Domain: ROOT
🛕 Home Monitor 🔻 Configure	▼ Services ▼ Report	ts 🔻 Administration 💌
System 🗸	HA Configuration : ms Services > Mobility Services Engin	ie3355–1 1es > System > Services High Availabil
 General Properties Active Sessions 	Configure High Availability	Parameters
Trap Destinations	Primary Health Monitor IP	10.10.10.15
Logs	Secondary Device Name	mse3355-2
HA Configuration	Secondary Password 🕸	•••••
 Accounts 	Failover Type 🕸	Manual
💼 Users 🏪 Groups	Failback Type 🔍	Manual 💌
 Status 	Long Failover Wait 🔍	10 seconds
Server Events Audit Logs	Save	

5. [OK]をクリックして、図に示すように2つのMSEのペアを確認します。
 The page at https://10.10.10.20 says:

 Are you sure you want to pair up these two servers?
 OK Cancel

 図に示すように、NCSはセカンダリサーバの設定を追加します。

Please Wait, High Availability configuration is being created at the Primary and Secondary servers. This will take a few seconds...

.

6. 完了したら、HA パラメータを変更します。図に示すように、[保存(Save)] をクリックし ます。 HA Configuration : mse3355-1 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configuration

ž			
Primary Health Monitor IP	10.10.10.15		
Secondary Device Name	mse3355-2		
Secondary IP Address	10.10.10.16		
Secondary Password 🔍	•••••		
Secondary Platform UDI	AIR-MSE-3355-K9:V01:K0		
Failover Type 🕸	Manual		
Failback Type 🕸	Manual		
Long Failover Wait 🔍	10 seconds		
Save Delete Switchover			

7. 図に示すように、新しいMSE HAペアのHAステータスをリアルタイムで表示します。

cisco Network Control System	m 700 87	Virtual Domain: ROOT-DOMAIN	root v Log Out P v	÷			
🛕 Home Monitor 🔻 Configure	🔹 Services 🔹 Reports 🔹	Administration 💌		🔶 🖨 😌			
System 🗸	HA Configuration : mse33: Services > Mobility Services Engines > S Current High Availability Status	55– <u>1</u> ystem > Services High Availability > Cur	rent High Availability Status				
Active Sessions Trap Destinations Advanced Parameters Logs Services High Availability HA Configuration	Status Heartbeats Data Replication Mean Heartbeat Response Time	atus Primary and secondary server synchronization in progress (66% complete) sartbeats Up ita Replication Setting up san Heartbeat Response Time 8 millisec					
🛔 HA Status	Events Log						
Accounts Accounts Accounts	Event Description	Generated By	Timestamp	Remarks			
di Groups	Configuration updated	Primary	2012-Feb-15, 20:10:56 UTC	Fallover mode set to AUTOMATIC.			
 Status Server Events 	Heartbeats have been setup successfully	Primary	2012-Feb-15, 20:10:11 UTC	-			
Audit Logs	Primary and secondary server synchronization in progress	Primary	2012-Feb-15, 20:10:09 UTC				
NCS Alarms NCS Events	Configuration successfully created	Primary	2012-Feb-15, 20:10:09 UTC	-			
MMSP Connection Status	Refresh Status						

8. [NCS] > [Services] > [Mobility Services] > [Mobility Services Engines]に移動して、図に示す ようにMSE(直接接続)HAがNCSに追加されていることを確認します。

Cisco Prime Network Control System Virtual Domain: ROOT-DOMAIN root •							
6	🖌 Home Monitor 🔻	Configure 🔻 Services 🔻 f	Reports 🔻 Ad	ministration	•	Change Password	
Mol Servic	bility Services Engines :es > Mobility Services Engine:	s				[
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server	
	mse3355-1	Osco 3355 Mobility Services Engine	10.10.10.14	7.2.103.0	Reachable	mse3355-2	

9. コンソールから、gethainfo コマンドを使用して確認することもできます。次に、プライマ リおよびセカンダリの出力を示します。 [root@mse3355-1~]#gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Primary Health Monitor IP Address: 10.10.10.15 Virtual IP Address: 10.10.10.14 Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ37xx Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.10.10.16 Virtual IP Address: 10.10.10.14 Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Failover type: Automatic Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: Yes Heartbeat status: Up Current state: PRIMARY_ACTIVE

[root@mse3355-2 ~]#gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.10.10.15 Virtual IP Address: 10.10.10.14 Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ37xx Failover type: Automatic Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: Yes Heartbeat status: Up Current state: SECONDARY_ACTIVE

MSE 物理アプライアンス用の HA 設定シナリオ

ペアマトリクスに基づき、HA設定の最大値は2:1です。これは、セカンダリモードでMSE-3310お よびMSE-3350をサポートできるMSE-3355用に予約されています。このシナリオでは、直接接続 は利用できません。



1. これらの各 MSE を設定して、2:1 HA シナリオを示します。

MSE-3310 (Primary1)
Server role: Primary
Health Monitor IP Address (Eth0): 10.10.10.17
Virtual IP Address: 10.10.10.18
Eth1 - Not Applicable

MSE-3350 (Primary2) Server role: Primary Health Monitor IP Address: 10.10.10.22 Virtual IP Address: 10.10.10.21 Eth1 - Not Applicable

MSE-3355 (Secondary) Server role: Secondary Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary

2. すべてのMSEを設定したら、図に示すように、Primary1とPrimary2をNCSに追加します。

1	ISCO Network Control Syste	em Alla			W	tual Domain: ROOT-DOMAIN			
	👌 Home Monitor 🔹 Configure	a 🔻 Services 🔻 Reports 🔻 Adminis	stration 🔻						
M0 Servi	Mobility Services Engines Services > Mobility Services Engines								
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server			
ø									
	mse3350	Osco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	N/A (Click here to configure)			
ø									
	mse3310	Osco 3310 Mobility Services Engine	10.10.10.18	7.2.103.0	Readhable	N/A (Click here to configure)			

3. クリックして、セカンダリ サーバを設定します(上記の例を参照してください)。 図に示 すように、いずれかのプライマリMSEから開始します。

Reachability Status	Secondary Server
Reachable	N/A (Click <mark>here</mark> to configure)
Reachable	N/A (Click <u>here to</u> configure)

4. セカンダリ MSE のパラメータを入力します。セカンダリ デバイス名:たとえば、[mse-3355-2]セカンダリ IP アドレス:[10.10.10.16]残りのパラメータを完了します。図に示すよ うに、[保存 (Save)] をクリックします。

HA Configuration : mse3350 Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters					
Configuration					
Primary Health Monitor IP	10.10.10.22				
Secondary Device Name	mse3355-2				
Secondary IP Address	10.10.10.16				
Secondary Password 🔍	••••				
Secondary Platform UDI	AIR-MSE-3355-K9:V01:KQ4				
Failover Type 🕸	Manual 💌				
Failback Type 🔍	Manual 💌				
Long Failover Wait 🕸	10 seconds				
Save Delete Switchover					

5. 図に示すように、最初のセカンダリエントリが設定されるまで少し待ちます。



6. 図に示すように、最初のプライマリMSEにセカンダリサーバが追加されていることを確認します。

Mob Servic	ullity Services Engines >> Mobility Services Engines					
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
9						
	mse3350	Osco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2

7. 図に示すように、2番目のプライマリMSEに対してステップ3~6を繰り返します。

Mob Servic	ility Services Engines es > Mobility Services Engines					
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
	msp3350	Cisco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2
	mse3310	Osco 3310 Mobility Services Engine	10.10.10.19	7.2.103.0	Reachable	N/A (Click have to configure)

8. 図に示すように、2番目のプライマリMSEのHAパラメータでファイナライズします。

HA Configuration : mse3310	
Services > Mobility Services Engines > System > S	vices High Availability > Configure High Availability Parameters

Configure High Availability Parameters				
Primary Health Monitor IP	10.10.10.17			
Secondary Device Name	mse3355-2			
Secondary IP Address	10.10.10.16			
Secondary Password 🕸	•••••			
Failover Type 🕸	Manual 💌			
Failback Type 🕸	Manual 💌			
Long Failover Wait 🕸	10 seconds			
Save				

9. 図に示すように設定を保存します。

HA Configuration : mse3310

Services > Mobility Services Engines > System > Services High Availability > Configure High Availability Parameters

Configuration				
Primary Health Monitor IP	10.10.10.17			
Secondary Device Name	mse3355-2			
Secondary IP Address	10.10.10.16			
Secondary Password 🕸	•••••			
Secondary Platform UDI	AIR-MSE-3355-K9:V01:KQ			
Failover Type 🕸	Manual			
Failback Type 🕸	Manual			
Long Failover Wait 🕸	10 seconds			
Save Delete Switchover				

10. 図に示すように、各プライマリMSEの進行状況のステータスを確認します。

cisco Prime Cisco Network Control Syste	em a la l			Virtual Domain: ROOT-DOMAIN	root + Log C
🛕 Home Monitor 🔻 Configur	e 🔻 Services 🔻 Reports 🔻	Administrati	an ¥		
System v	HA Configuration : mse331 Service > Mobility Services Engines > Sy Current High Availability Status	0 stem > Services H	igh Availability > Current High Availability Status		
Trap Destinations Advanced Parameters Logs Services High Availability	Status Heartboats Data Replication Mean Heartbeat Response Time	Primary and Up Satting up 8 millisec	secondary server synchronization in progress	(60% complete)	
HA Configuration	Events Log				
Accounts Accounts Boses	Event Description Heartbeats have been setup suc	cessfully	Generated By Primary	Timestamp 2012-Fab-17, 20:54:36 UTC	
 Status 	Primary and secondary server syn in progress	dvonization	Primary	2012-Feb-17, 20:54:32 UTC	
Server Events Audit Logs	Configuration successfully created	ł	Primary	2012-Feb-17, 20:54:32 UTC	

11. 図に示すように、プライマリ1とプライマリ2の両方のMSEがセカンダリMSEで設定されて いることを確認します。

Mot Servis	oliity Services Engines as > Mobility Services Engines					
	Device Name	Device Type	IP Address	Version	Reachability Status	Secondary Server
	mse3350	Osco 3350 Mobility Services Engine	10.10.10.21	7.2.103.0	Reachable	mse3355-2
	mse3310	Osco 3310 Mobility Services Engine	10.10.10.18	7.2.103.0	Reachable	mse3355-2

12. [NCS] > [Services] > [Mobility Services]に移動し、図に示すように[High Availability]を選択 します。

cisco Network	e Control System	
💧 Home Monitor	▼ Configure ▼	Services 🔻 Reports 🔻 Adminis
		 Mobility Services Mobility Services Engines Synchronize Services Synchronization History High Availability Context Awar Votifications MSAP Identity Services

図に示すように、MSE-3310およびMSE-3350のセカンダリとしてMSE-3355が2:1であるこ とが確認されています。

cisco Network	e Control System	With	ual Domain: RC	OT-DOMAIN root v	Log Out P+	
🛕 Home Monitor	🔹 Configure 💌 Serv	ices 🔻 Reports 🔻 Admi	inistration 🔻			
Mobility Services Eng Services > High Availability	jines					
				Assoc	iated Primary Mobility Servic	e Engines
Secondary Server Name	Secondary HM IP Address	Secondary Device Type	Version	Device Name	Device Type	Heartbeats
		A CONTRACTOR OF			Appiance	
	10 10 10 16	Osco 3355 Mobility Services	7.0.100.0	mse3310	Cisco 3310 Mobility Services Engine	Up
11583333-2	10.10.10.10	Engine	7.2.103.0	mse3350	Cisco 3350 Mobility	Up

次に、gethainfo コマンドが使用されたときのすべての 3 つの MSE のコンソールからの HA セットアップの出力例を示します。

[root@mse3355-2 ~]#gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Secondary Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Number of paired peers: 2

Peer configuration#: 1

Health Monitor IP Address 10.10.10.22 Virtual IP Address: 10.10.10.21 Version: 7.2.103.0 UDI: AIR-MSE-3350-K9:V01:MXQ839xx Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE

Peer configuration#: 2

Health Monitor IP Address 10.10.10.17 Virtual IP Address: 10.10.10.18 Version: 7.2.103.0 UDI: AIR-MSE-3310-K9:V01:FTX140xx Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos4 Instance database port: 1525 Dataguard configuration name: dg_mse4 Primary database alias: mseop4s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE

図に示すように、NCSでのHAの最終検証では、MSE-3310とMSE-3350の両方のステータ スが完全アクティブと表示されます。

cisco Prime Cisco Network Control System					
💧 Home Monitor 🔻 Configure	🔻 Services 🔻 Reports 🔻 Administr	ation 🔻			
System 🗸	HA CONTIGULATION : INSE3310 Services > Mobility Services Engines > System > Service	es High Availability > Current High Availability Status			
General Properties	Current High Availability Status				
Active Sessions	Status	Action			
Trap Destinations	Status	ALUVE			
	Heartbeats	Op			
 Services High Availability 	Data Replication	Up			
HA Configuration	Mean Heartbeat Response Time	5 millisec			
旹 HA Status	Events Log				
 Accounts 	Event Description	Generated By			
Users	Active	Primary			
Groups Status	Heartbeats have been setup successfully	Primary			
Events	Primary and secondary server synchronization	Primary			
📥 Audit Logs	Configuration successfully created	Primary			
ululu. Cisco Prime					
cisco Network Control System					
🛕 Home Monitor 🔻 Configure	▼ Services ▼ Reports ▼ Administratio	n y			
System 🗸	HA Configuration : mse3350 Services > Mobility Services Engines > System > Services Hi	gh Availability > Current High Availability Status			
General Properties	Ourrent High Availability Status				
Active Sessions	Chatur	Artiso			
Irap Destinations Advanced Parameters	Heatheats	Lb			
Logs	Data Registion	up.			
 Services High Availability 	Maan Heartheat Remonse Time	4 million			
🖥 HA Configuration	Mean Hear Wespunse Time 4 millisec				
HA Status	Events Log				
Accounts Accounts	Event Description	Generated By			
Groups	Active	Primary			
 Status 	Heartbeats have been setup successfully	Primary			
Server Events	Primary and secondary server synchronization in progress	Primary			
Audit Logs	Configuration successfully created	Primary			

現在、この設定に使用できる確認手順はありません。

MSE HA の基本的なトラブルシューティング

ここでは、設定のトラブルシューティングに使用できる情報を示します。

セカンダリMSEを追加すると、図のようにプロンプトが表示されます。



セットアップスクリプト中に問題が発生した可能性があります。

- ・getserverinfoコマンドを実行し、ネットワークの設定が正しいことを確認します。
- また、サービスが起動していない可能性もあります。/init.d/msed start コマンドを実行します 。
- 必要な場合、セットアップスクリプト(/mse/setup/setup.sh)を再実行して、最後に保存します。

MSE用VAには、アクティベーションライセンス(L-MSE-7.0-K9)も必要です。 それ以外の場合、 セカンダリMSE VAを追加するとNCSからプロンプトが表示されます。図に示すように、MSE VAのアクティベーションライセンスを取得して追加します。

The page	e at https://10.10.10.20 says:	×
	Secondary MSE needs to be activated with a Virtual Appliance license. Add a license and save the config.	
	OK	

MSEでHAロールを切り替える場合は、サービスが完全に停止していることを確認します。したがって、/init.d/msed stopコマンドを使用してサービスを停止し、次に図に示すようにセットアップ スクリプト(/mse/setup/setup.sh)を再実行してください。

Applying High Availability configuration *** User has switched roles for this MSE. MSE must be stopped before switching oles. *** Please stop MSE and then re-run setup.sh. ERROR: One or more of the requested configurations was not applied. Role=2, Health Monitor Interface=eth0, Direct connect interface=none Success [root@mse2_setup]# gethainfoコマンドを実行して、MSEのHA情報を取得します。これは、HA ステータスおよび変更 のトラブルシューティングまたはモニタに役に立つ情報を提供します。 [root@mse3355-2 ~]#gethainfo Health Monitor is running. Retrieving HA related information _____ Base high availability configuration for this server _____ Server role: Secondary Health Monitor IP Address: 10.10.10.16 Virtual IP Address: Not Applicable for a secondary Version: 7.2.103.0 UDI: AIR-MSE-3355-K9:V01:KQ45xx Number of paired peers: 2 _____ Peer configuration#: 1 _____ Health Monitor IP Address 10.10.10.22 Virtual IP Address: 10.10.10.21 Version: 7.2.103.0 UDI: AIR-MSE-3350-K9:V01:MXQ839xx Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE _____ Peer configuration#: 2 _____ Health Monitor IP Address 10.10.10.17 Virtual IP Address: 10.10.10.18

Version: 7.2.103.0 UDI: AIR-MSE-3310-K9:V01:FTX140xx Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos4 Instance database port: 1525 Dataguard configuration name: dg_mse4 Primary database alias: mseop4s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ACTIVE

また、NCS HA Viewは、図に示すように、MSEのHA設定を表示するための優れた管理ツールです。



フェールオーバー/フェールバックのシナリオ

手動フェールオーバー/フェールバックのみの場合の状況。制御性が向上します。

プライマリが起動、セカンダリがテイクオーバーの準備ができている

MSE HAが設定され、稼働したら、次の図に示すようにPrimeの状態になります。

Current High Availability Status

Status	Active
Heartbeats	Up
Data Replication	Up
Mean Heartbeat Response Time	12 millised

Events Log

Event Description	Generated By	Timestamp
Active	Primary	2015-Mar-08, 12:50:17 CET
Heartbeats have been setup successfully	Primary	2015-Mar-08, 12:39:17 CET
Primary and secondary server synchronization in progress	Primary	2015-Mar-08, 12:39:13 CET
Configuration successfully created	Primary	2015-Mar-08, 12:39:11 CET

プライマリMSEのgetserverinfoとgethainfoを次に示します。

[root@NicoMSE ~]# getserverinfo Health Monitor is running Retrieving MSE Services status. MSE services are up, getting the status _____ Server Config _____ Product name: Cisco Mobility Service Engine Version: 8.0.110.0 Health Monitor Ip Address: 10.48.39.238 High Availability Role: 1 Hw Version: V01 Hw Product Identifier: AIR-MSE-VA-K9 Hw Serial Number: NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 HTTPS: null Legacy Port: 8001 Log Modules: -1 Log Level: INFO Days to keep events: 2 Session timeout in mins: 30 DB backup in days: 2 _____ Services _____ Service Name: Context Aware Service Service Version: 8.0.1.79 Admin Status: Disabled Operation Status: Down Service Name: WIPS Service Version: 3.0.8155.0 Admin Status: Enabled Operation Status: Up Service Name: Mobile Concierge Service Service Version: 5.0.1.23 Admin Status: Disabled Operation Status: Down Service Name: CMX Analytics Service Version: 3.0.1.68 Admin Status: Disabled Operation Status: Down Service Name: CMX Connect & Engage Service Version: 1.0.0.29 Admin Status: Disabled Operation Status: Down Service Name: HTTP Proxy Service Service Version: 1.0.0.1 Admin Status: Disabled Operation Status: Down

Server Monitor _____ Server start time: Sun Mar 08 12:40:32 CET 2015 Server current time: Sun Mar 08 14:04:30 CET 2015 Server timezone: Europe/Brussels Server timezone offset (mins): 60 Restarts: 1 Used Memory (MB): 197 Allocated Memory (MB): 989 Max Memory (MB): 989 DB disk size (MB): 17191 -----Active Sessions _____ Session ID: 5672 Session User ID: 1 Session IP Address: 10.48.39.238 Session start time: Sun Mar 08 12:44:54 CET 2015 Session last access time: Sun Mar 08 14:03:46 CET 2015 _____ Default Trap Destinations _____ Trap Destination - 1 _____ IP Address: 10.48.39.225 Last Updated: Sun Mar 08 12:34:12 CET 2015 [root@NicoMSE ~]# gethainfo Health Monitor is running. Retrieving HA related information _____ Base high availability configuration for this server _____ Server role: Primary Health Monitor IP Address: 10.48.39.238 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 Number of paired peers: 1 Peer configuration#: 1 Health Monitor IP Address 10.48.39.240 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s

Direct connect used: No Heartbeat status: Up Current state: PRIMARY_ACTIVE セカンダリMSEについても同じ手順を次に示します。

[root@NicoMSE2 ~]# getserverinfo
Health Monitor is running
Retrieving MSE Services status.
MSE services are up and in DORMANT mode, getting the status

Server Config

Product name: Cisco Mobility Service Engine Version: 8.0.110.0 Health Monitor Ip Address: 10.48.39.240 High Availability Role: 2 Hw Version: V01 Hw Product Identifier: AIR-MSE-VA-K9 Hw Serial Number: NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66 HTTPS: null Legacy Port: 8001 Log Modules: -1 Log Level: INFO Days to keep events: 2 Session timeout in mins: 30 DB backup in days: 2

Services

Service Name: Context Aware Service Service Version: 8.0.1.79 Admin Status: Disabled Operation Status: Down

Service Name: WIPS Service Version: 3.0.8155.0 Admin Status: Enabled Operation Status: Up

Service Name: Mobile Concierge Service Service Version: 5.0.1.23 Admin Status: Disabled Operation Status: Down

Service Name: CMX Analytics Service Version: 3.0.1.68 Admin Status: Disabled Operation Status: Down

Service Name: CMX Connect & Engage Service Version: 1.0.0.29 Admin Status: Disabled Operation Status: Down

Service Name: HTTP Proxy Service Service Version: 1.0.0.1 Admin Status: Disabled

```
Operation Status: Down
_____
Server Monitor
_____
Server start time: Sun Mar 08 12:50:04 CET 2015
Server current time: Sun Mar 08 14:04:32 CET 2015
Server timezone: Europe/Brussels
Server timezone offset (mins): 60
Restarts: null
Used Memory (MB): 188
Allocated Memory (MB): 989
Max Memory (MB): 989
DB disk size (MB): 17191
[root@NicoMSE2 ~]# gethainfo
Health Monitor is running. Retrieving HA related information
_____
Base high availability configuration for this server
_____
Server role: Secondary
Health Monitor IP Address: 10.48.39.240
Virtual IP Address: Not Applicable for a secondary
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66
Number of paired peers: 1
-------
Peer configuration#: 1
_____
Health Monitor IP Address 10.48.39.238
Virtual IP Address: 10.48.39.224
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63
Failover type: Manual
Failback type: Manual
Failover wait time (seconds): 10
Instance database name: mseos3
Instance database port: 1524
Dataguard configuration name: dg_mse3
Primary database alias: mseop3s
Direct connect used: No
Heartbeat status: Up
Current state: SECONDARY_ACTIVE
```

セカンダリへのフェールオーバー

```
手動でトリガーするには、Prime InfrastructureのMSE HA設定に移動し、[Switchover]をクリック
します。
```

非常に迅速に、両サーバのgethainfoはFAILOVER_INVOKEDに変わります

プライマリgethainfo:

Health Monitor is running. Retrieving HA related information _____ Base high availability configuration for this server _____ Server role: Primary Health Monitor IP Address: 10.48.39.238 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 Number of paired peers: 1 ------Peer configuration#: 1 _____ Health Monitor IP Address 10.48.39.240 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Down Current state: FAILOVER_INVOKED セカンダリgethainfo: [root@NicoMSE2 ~]# gethainfo Health Monitor is running. Retrieving HA related information Base high availability configuration for this server _____

Server role: Secondary
Health Monitor IP Address: 10.48.39.240
Virtual IP Address: Not Applicable for a secondary
Version: 8.0.110.0
UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66
Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.48.39.238 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Down Current state: FAILOVER_INVOKED フェールオーバーが完了すると、Primeに次のイメージが表示されます。

Status

Instance is in failover active state

Events Log

Event Description	Generated By
Instance is in failover active state	Secondary
Failover invoked; starting application instance	Secondary
Failover has been invoked. Reconfiguring instance database	Secondary
Failover invoked; shutting down primary instance	Secondary

プライマリgethainfo:

[root@NicoMSE ~]# gethainfo Health Monitor is not running. Following information is from the last saved configuration _____ Base high availability configuration for this server _____ Server role: Primary Health Monitor IP Address: 10.48.39.238 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 Number of paired peers: 1 _____ Peer configuration#: 1 _____ Health Monitor IP Address 10.48.39.240 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No

Last shutdown state: FAILOVER_ACTIVE セカンダリ: [root@NicoMSE2 ~]# gethainfo Health Monitor is running. Retrieving HA related information _____ Base high availability configuration for this server _____ Server role: Secondary Health Monitor IP Address: 10.48.39.240 Virtual IP Address: Not Applicable for a secondary Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66 Number of paired peers: 1 -------Peer configuration#: 1 _____ Health Monitor IP Address 10.48.39.238 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Down Current state: FAILOVER_ACTIVE この段階で、フェールオーバーが完了し、セカンダリMSEが完全に担当します。

手動スイッチオーバーを実行すると、プライマリMSEのサービスが停止することに注意してくだ さい(プライマリMSEがダウンする実際のイベントをシミュレートするため)

プライマリをバックアップすると、その状態は「TERMINATED」になります。 通常であり、セ カンダリが引き続き担当であり、「FAILOVER_ACTIVE」と表示されます

プライマリへのフェールバック

フェールバックする前に、プライマリをバックアップする必要があります。

状態は「TERMINATED」になります。

[root@NicoMSE ~]# gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

```
-----
```

Server role: Primary Health Monitor IP Address: 10.48.39.238 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 Number of paired peers: 1 _____ Peer configuration#: 1 _____ Health Monitor IP Address 10.48.39.240 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Down Current state: TERMINATED Primeからフェールバックを呼び出すと、両方のノードが最終的な状態ではない「FAILBACK ACTIVE」になります(「フェールオーバアクティブ」とは異なります)。

primary gethainfo:

[root@NicoMSE ~]# gethainfo Health Monitor is running. Retrieving HA related information Base high availability configuration for this server _____ Server role: Primary Health Monitor IP Address: 10.48.39.238 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 Number of paired peers: 1 _____ Peer configuration#: 1 ------Health Monitor IP Address 10.48.39.240 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s

Direct connect used: No Heartbeat status: Down Current state: FAILBACK_ACTIVE

セカンダリgethainfo:

[root@NicoMSE2 ~]# gethainfo Health Monitor is running. Retrieving HA related information _____ Base high availability configuration for this server _____ Server role: Secondary Health Monitor IP Address: 10.48.39.240 Virtual IP Address: Not Applicable for a secondary Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE2 1c6b1940-b6a5-11e4-b017-005056993b66 Number of paired peers: 1 Peer configuration#: 1 _____ Health Monitor IP Address 10.48.39.238 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Down Current state: FAILBACK_ACTIVE 次のイメージが表示されます。

Event Description

Generated By

Secondary

Failback in progress; starting primary database instance

フェールバックが完了しても、セカンダリがまだプライマリにデータを転送し直している場合、 プライマリは次のように表示します。

gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Primary Health Monitor IP Address: 10.48.39.238 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.48.39.240 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3s Instance database port: 1624 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: FAILBACK_COMPLETE

セカンダリショー:

[root@NicoMSE2 ~]# gethainfo

Health Monitor is running. Retrieving HA related information

Base high availability configuration for this server

Server role: Secondary Health Monitor IP Address: 10.48.39.240 Virtual IP Address: Not Applicable for a secondary Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE2_1c6b1940-b6a5-11e4-b017-005056993b66 Number of paired peers: 1

Peer configuration#: 1

Health Monitor IP Address 10.48.39.238 Virtual IP Address: 10.48.39.224 Version: 8.0.110.0 UDI: AIR-MSE-VA-K9:V01:NicoMSE_b950a7c0-b68c-11e4-99d9-005056993b63 Failover type: Manual Failback type: Manual Failover wait time (seconds): 10 Instance database name: mseos3 Instance database port: 1524 Dataguard configuration name: dg_mse3 Primary database alias: mseop3s Direct connect used: No Heartbeat status: Up Current state: SECONDARY_ALONE **この段階のプライムは、次の図のようになります。**

Current High Availability Status

Status	Primary instance is not synchronized with the secondary server. In progress.
Heartbeats	Up
Data Replication	Up
Mean Heartbeat Response Time	13 millisec

Events Log

Event Description	Generated By
Heartbeats have been setup successfully	Primary

完了すると、すべてのステータスが元の状態に戻ります。PRIMARY_ACTIVE、

SECONDARY_ACTIVE、およびPrime HAのステータスは、新しい展開が繰り返し表示されます。

HA状態マトリクス

PRIMARY ACTIVE プライマリMSEがプライマリの場合はプライマリMSEの状態が問題なく、す SECONDARY ACTIVE セカンダリMSEが起動しているが未充電状態(プライマリがまだ存在する) フェールオーバーが発生すると、両方のノードに表示されます。つまり、セス FAILOVER INVOKED フェールオーバーの最終的な状態。セカンダリMSEは「up and running」と FAILOVER ACTIVE MSEノードの状態。ダウン後にサービスがアップ状態に戻り、それが担当ノ 終了 ンクがアップしていない可能性があります(たとえば、MSEの1つがリブート フェールオーバーとは異なり、フェールバックの最終段階ではありません。 FAILBACK ACTIVE プライマリMSEからのデータベースの読み込みがビジー状態で、プライマリ FAILBACK_COMPLETE フェールバックが完了し、プライマリが使用中でデータをロードしている場合 SECONDARY_ALONE GRACEFUL_SHUTDOWN 自動フェールオーバー/フェールバックの場合に、手動でリブートするか、他

HAに関する重要事項

- フェールオーバーが完了した直後にフェールバックをトリガーせず、その逆をトリガーしないことが非常に重要です。データベースの安定化には30分の余裕が必要
- HAコンフィギュレーションファイルは、/opt/mse/health-monitor/resources/config/のbaseha-config.propertiesですが、手動での編集は意図されていません(代わりにsetup.shを使用し てください)。 ただし、疑いの場合は表示できます
- HAは手動で壊す目的ではありません。唯一のクリーンな方法は、Prime Infraからセカンダリ MSEを削除することです。その他の方法(セカンダリでsetup.shを実行してプライマリにし 、アンインストールしてipを変更する…)では、データベースとステートマシンが破損し、 両方のMSEを再インストールする必要があります

HAのトラブルシューティング

HA関連のログは、/opt/mse/logs/hmディレクトリに保存され、health-monitor*.logがプライマリロ

グファイルになります。

問題:プライマリとセカンダリの両方がアクティブである(スプリットブレイン状態)

1.セカンダリの仮想IPインターフェイス(VIP)をシャットダウンします。**eth0:**1 ifconfig eth0:**1がダ ウンします**

2.セカンダリMSEでサービスを再起動する

service msed stop service msed start

3.セカンダリがPrime Infrastructureからプライマリとの同期を開始したかどうかを確認します。

問題:HAのプライマリとセカンダリの同期が長時間X%でスタックする

1.セカンダリのサービスを停止します

service msed stop

2. /opt/mse/health-monitor/resources/config/advance-cconfig-<IP-address-of-Primary>.properties ファイルを作成します。

3. HAの確立で問題が解決しない場合は、rm -rf /opt/data/*を使用してセカンダリの「data」ディレクトリの下のすべてを削除する必要がある不整合な状態になった可能性があります

4.セカンダリを再起動します。Prime InfrastructureからプライマリにHAを再度開始します。

問題:到達不能になったセカンダリサーバをPIから削除できません

1.プライマリでサービスを停止します。

2. /opt/mse/health-monitor/resources/config/advance-cconfig-<IP-address-of-Primary>.properties プライマリのファイルを指定します。

3.プライマリでサービスを再起動します。

4. PIからプライマリMSEを削除し、再度追加します。