



## モード別 CLI コマンド一覧

E	
EXEC モード コマンド	
cd	3-3
cifs	3-4
clear	3-5
clock	3-8
cms	3-9
configure	3-12
copy cdrom	3-13
copy compactflash	3-14
copy disk	3-15
copy ftp	3-16
copy http	3-20
copy running-config	3-24
copy startup-config	3-25
copy sysreport	3-26
copy system-status	3-28
copy tech-support	3-29
copy tftp	3-30
cpfile	3-31
debug	3-32
delfile	3-37
deltree	3-38
dir	3-39
disable	3-41
disk	3-42
dnslookup	3-47
enable	3-48
exit	3-49
find-pattern	3-50
help	3-52
install	3-53
less	3-54
lls	3-55
ls	3-56
mkdir	3-57
mkfile	3-58
ntpdate	3-59
ping	3-60
pwd	3-61
reload	3-62
rename	3-63
restore	3-64
rmdir	3-68
scp	3-69
script	3-71
setup	3-72
show aaa accounting	3-73
show adapter	3-74
show alarms	3-75
show arp	3-78
show authentication	3-79
show auto-register	3-81
show banner	3-82
show bypass	3-83
show cdp	3-84
show cifs	3-89
show clock	3-90
show cms	3-92
show debugging	3-95
show device-mode	3-96
show disks	3-98
show egress-methods	3-104
show flash	3-105
show hardware	3-106
show hosts	3-109
show inetd	3-110
show interface	3-111
show inventory	3-116
show ip access-list	3-117
show ip routes	3-119
show kerberos	3-120
show key-manager	3-121
show logging	3-122
show memory	3-123
show ntp	3-124
show policy-engine application	3-125
show policy-engine status	3-129

show print-services 3-130  
 show processes 3-132  
 show radius-server 3-134  
 show running-config 3-135  
 show services 3-136  
 show smb-conf 3-137  
 show snmp 3-139  
 show ssh 3-144  
 show standby 3-145  
 show startup-config 3-146  
 show statistics authentication 3-147  
 show statistics cifs 3-148  
 show statistics content-distribution-network 3-149  
 show statistics dre 3-150  
 show statistics dre connection 3-152  
 show statistics dre peer 3-154  
 show statistics epm 3-156  
 show statistics flow 3-157  
 show statistics icmp 3-159  
 show statistics ip 3-161  
 show statistics key-manager 3-163  
 show statistics netstat 3-164  
 show statistics radius 3-165  
 show statistics services 3-166  
 show statistics snmp 3-167  
 show statistics tacacs 3-168  
 show statistics tcp 3-169  
 show statistics tfo 3-173  
 show statistics udp 3-175  
 show statistics wccp 3-176  
 show statistics windows-domain 3-181  
 show sysfs 3-182  
 show tacacs 3-183  
 show tcp 3-184  
 show tech-support 3-186  
 show telnet 3-189  
 show tfo accelerators 3-190  
 show tfo auto-discovery 3-191  
 show tfo bufpool 3-193  
 show tfo connection 3-194  
 show tfo egress connection 3-195  
 show tfo filtering 3-198  
 show tfo status 3-200  
 show tfo synq 3-201  
 show transaction-logging 3-202  
 show user 3-203

show users administrative 3-204  
 show version 3-205  
 show wccp 3-206  
 show windows-domain 3-212  
 shutdown 3-213  
 snmp trigger 3-216  
 ssh 3-219  
 tcpdump 3-220  
 telnet 3-221  
 terminal 3-222  
 tethereal 3-223  
 traceroute 3-224  
 transaction-log 3-225  
 type 3-226  
 type-tail 3-227  
 undebug 3-229  
 wafs 3-234  
 whoami 3-236  
 windows-domain 3-237  
 write 3-240

い

インターフェイス コンフィギュレーション モード コマンド

(config-if) autosense 3-408  
 (config-if) bandwidth 3-409  
 (config-if) cdp 3-411  
 (config-if) exit 3-412  
 (config-if) failover timeout 3-413  
 (config-if) full-duplex 3-414  
 (config-if) half-duplex 3-415  
 (config-if) inline 3-416  
 (config-if) ip 3-418  
 (config-if) ip access-group 3-420  
 (config-if) mtu 3-421  
 (config-if) no 3-422  
 (config-if) shutdown 3-424  
 (config-if) standby 3-425

か

拡張 ACL コンフィギュレーション モード コマンド

(config-ext-nacl) delete 3-445  
 (config-ext-nacl) deny 3-446  
 (config-ext-nacl) exit 3-450

(config-ext-nacl) list	3-451	(config) policy-engine application map adaptor WAFS transport	3-321
(config-ext-nacl) move	3-452	(config) policy-engine application map basic delete	3-323
(config-ext-nacl) permit	3-453	(config) policy-engine application map basic disable	3-324
<b>こ</b>			
コンフィギュレーション モード コマンド			
(config) aaa accounting	3-242	(config) policy-engine application map basic insert	3-325
(config) adapter	3-246	(config) policy-engine application map basic list	3-326
(config) alarm overload-detect	3-247	(config) policy-engine application map basic move	3-327
(config) asset	3-249	(config) policy-engine application map basic name	3-328
(config) authentication	3-250	(config) policy-engine application map other optimize DRE	3-330
(config) auto-register	3-255	(config) policy-engine application map other optimize full	3-331
(config) banner	3-257	(config) policy-engine application map other pass-through	3-332
(config) bypass	3-260	(config) policy-engine application name	3-333
(config) cdp	3-262	(config) policy-engine config	3-334
(config) central-manager	3-263	(config) port-channel	3-335
(config) clock	3-267	(config) primary-interface	3-336
(config) cms	3-271	(config) print-services	3-338
(config) device mode	3-273	(config) radius-server	3-341
(config) disk disk-name	3-275	(config) smb-conf	3-343
(config) disk encrypt	3-277	(config) snmp-server access-list	3-347
(config) disk error-handling	3-279	(config) snmp-server community	3-348
(config) disk logical shutdown	3-281	(config) snmp-server contact	3-350
(config) egress-method	3-282	(config) snmp-server enable traps	3-351
(config) end	3-284	(config) snmp-server group	3-354
(config) exec-timeout	3-285	(config) snmp-server host	3-356
(config) exit	3-286	(config) snmp-server location	3-358
(config) external-ip	3-287	(config) snmp-server mib	3-359
(config) flow monitor	3-289	(config) snmp-server notify inform	3-361
(config) help	3-290	(config) snmp-server user	3-362
(config) hostname	3-291	(config) snmp-server view	3-364
(config) inetd	3-292	(config) sshd	3-365
(config) interface	3-293	(config) ssh-key-generate	3-368
(config) ip	3-300	(config) tacacs	3-369
(config) ip access-list	3-303	(config) tcp	3-372
(config) kerberos	3-306	(config) telnet enable	3-375
(config) kernel	3-308	(config) tfo auto-discovery	3-376
(config) line	3-309	(config) tfo optimize	3-377
(config) logging	3-310	(config) tfo tcp keepalive	3-378
(config) no	3-314	(config) tfo tcp optimized-mss	3-379
(config) ntp	3-316	(config) tfo tcp optimized-receive-buffer	3-380
(config) policy-engine application classifier	3-317		
(config) policy-engine application map adaptor EPM	3-319		

(config) tfo tcp optimized-send-buffer 3-381  
 (config) tfo tcp original-mss 3-382  
 (config) tfo tcp original-receive-buffer 3-383  
 (config) tfo tcp original-send-buffer 3-384  
 (config) transaction-logs 3-385  
 (config) username 3-392  
 (config) wccp access-list 3-395  
 (config) wccp flow-redirect 3-398  
 (config) wccp router-list 3-399  
 (config) wccp shutdown 3-400  
 (config) wccp tcp-promiscuous 3-402  
 (config) wccp version 3-404  
 (config) windows-domain 3-405

## ひ

### 標準 ACL コンフィギュレーション モード コマンド

(config) ip access-list standard 3-431  
 (config-std-nacl) delete 3-434  
 (config-std-nacl) deny 3-435  
 (config-std-nacl) exit 3-437  
 (config-std-nacl) list 3-438  
 (config-std-nacl) move 3-439  
 (config-std-nacl) permit 3-440