



A P P E N D I X

A

Cisco Wireless LAN Controller互換性マトリクス

Cisco wireless LAN Solution のコマンドラインインターフェイス (CLI) は、すべてのコントローラで動作します。Cisco Wireless LAN Controller Module (WLCM) など任意のコントローラで動作するコマンドは、これらのコマンドのサブセットです。この互換性マトリクスを使用して、個々のコントローラ固有のコマンドを特定できます。

次のような類似性があります。

- WLDM コントローラの列は、2006 コントローラにも適用されます。
- 4400 シリーズ コントローラの列は、これらの機能をサポートする 4100 にも適用されます。

付録の凡例：

•	コマンドはこのコントローラに存在します。
---	コマンドはこのコントローラに存在しません。
	前回確認時、コマンドは特定のコントローラに存在ませんでした。

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
clear ap-config	•	•	•
clear arp	•	•	•
clear config	•	•	•
clear ext-webauth-url	•	•	•
clear redirect-url	•	•	•
clear stats mobility	•	•	•
clear stats port <i>port</i>	•	•	•
clear stats switch	•	•	•
clear transfer	•	•	•
clear traplog	•	•	•
clear webimage	•	•	•
clear webmessage	•	•	•
clear webtitle	•	•	•
config {802.11a 802.11b} l2roam rf-params min-rssi <i>rssi-value</i> roam-hyst hyst_value scan-thres <i>thres_value</i> trans-time <i>time_value</i>	•	•	•
config 802.11a antenna extAntGain <i>antenna_gain Cisco_AP</i>	•	•	•
config 802.11a antenna diversity {enable sideA sideB} <i>Cisco_AP</i>	•	•	•
config 802.11a antenna mode {omni sectorA sectorB} <i>Cisco_AP</i>	•	•	•
config 802.11a antenna selection {internal external} <i>Cisco_AP</i>	•	•	•
config 802.11a beaconperiod <i>time_units</i>	•	•	•
config 802.11a channel {global {auto once off} <i>Cisco_AP</i> {global channel}}	•	•	•
config 802.11a disable {network <i>Cisco_AP</i> }	•	•	•
config 802.11a dtim period	•	•	•
config 802.11a dtpc {enable disable}	•	•	•
config 802.11a enable {network <i>Cisco_AP</i> }	•	•	•
config 802.11a fragmentation <i>threshold</i>	•	•	•
config 802.11a pico-cell {enable disable}	•	•	•
config 802.11a rate {disabled mandatory supported} <i>rate</i>	•	•	•
config 802.11a txPower {global {auto once power_level} <i>Cisco_AP</i> {global power_level}}	•	•	•
config 802.11b 11gSupport {enable disable}	•	•	•
config 802.11b antenna diversity {enable sideA sideB} <i>Cisco_AP</i>	•	•	•
config 802.11b antenna extAntGain <i>antenna_gain Cisco_AP</i>	•	•	•
config 802.11b antenna selection {internal external} <i>Cisco_AP</i>	•	•	•
config 802.11b beaconperiod <i>milliseconds</i>	•	•	•
config 802.11b channel {global {auto once off}} { <i>Cisco_AP</i> {global channel}}	•	•	•
config 802.11b disable {network <i>Cisco_AP</i> }	•	•	•
config 802.11b dtim period	•	•	•
config 802.11b dtpc {enable disable}	•	•	•
config 802.11b enable {network <i>Cisco_AP</i> }	•	•	•
config 802.11b fragmentation <i>threshold</i>	•	•	•
config 802.11b pico-cell {enable disable}	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
config 802.11b preamble {short long}	•	•	•
config 802.11b rate {disabled mandatory supported} <i>rate</i>	•	•	•
config 802.11b txPower {global {auto power_level} Cisco_AP {global power_level}}	•	•	•
config 802.11h channelswitch	•		•
config 802.11h powerconstraint	•		•
config 802.11h setchannel	•		•
config acl apply	•	•	•
config acl create	•	•	•
config acl delete	•	•	•
config acl rule	•	•	•
config advanced 802.11a channel foreign {enable disable}	•	•	•
config advanced 802.11a channel load {enable disable}	•	•	•
config advanced 802.11a channel noise {enable disable}	•	•	•
config advanced 802.11a channel update	•	•	•
config advanced 802.11a factory	•	•	•
config advanced 802.11a group-mode {auto off}	•	•	•
config advanced 802.11a logging channel {on off}	•	•	•
config advanced 802.11a logging coverage {on off}	•	•	•
config advanced 802.11a logging foreign {on off}	•	•	•
config advanced 802.11a logging load {on off}	•	•	•
config advanced 802.11a logging noise {on off}	•	•	•
config advanced 802.11a logging performance {on off}	•	•	•
config advanced 802.11a logging txpower {on off}	•	•	•
config advanced 802.11a monitor channel-list {all country dca}	•	•	•
config advanced 802.11a monitor coverage seconds	•	•	•
config advanced 802.11a monitor load seconds	•	•	•
config advanced 802.11a monitor mode {enable disable}	•	•	•
config advanced 802.11a monitor noise seconds	•	•	•
config advanced 802.11a monitor signal seconds	•	•	•
config advanced 802.11a profile clients {global Cisco_AP} <i>clients</i>	•	•	•
config advanced 802.11a profile coverage {global Cisco_AP} <i>dBm</i>	•	•	•
config advanced 802.11a profile customize Cisco_AP {on off}	•	•	•
config advanced 802.11a profile exception {global Cisco_AP} <i>percent</i>	•	•	•
config advanced 802.11a profile foreign {global Cisco_AP} <i>percent</i>	•	•	•
config advanced 802.11a profile level {global Cisco_AP} <i>clients</i>	•	•	•
config advanced 802.11a profile noise {global Cisco_AP} <i>value</i>	•	•	•
config advanced 802.11a profile throughput {global Cisco_AP} <i>value</i>	•	•	•
config advanced 802.11a profile utilization {global Cisco_AP} <i>percent</i>	•	•	•
config advanced 802.11a receiver {default rxstart}	•	•	•
config advanced 802.11a txpower-update	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
config advanced 802.11b 7920VSIEConfig {call-admission-limit <i>limit</i> G711-CU-Quantum <i>quantum</i> }	•	•	•
config advanced 802.11b channel foreign {enable disable}	•	•	•
config advanced 802.11b channel load {enable disable}	•	•	•
config advanced 802.11b channel noise {enable disable}	•	•	•
config advanced 802.11b channel update	•	•	•
config advanced 802.11b factory	•	•	•
config advanced 802.11b group-mode {auto off}	•	•	•
config advanced 802.11b logging channel {on off}	•	•	•
config advanced 802.11b logging coverage {on off}	•	•	•
config advanced 802.11b logging foreign {on off}	•	•	•
config advanced 802.11b logging load {on off}	•	•	•
config advanced 802.11b logging noise {on off}	•	•	•
config advanced 802.11b logging performance {on off}	•	•	•
config advanced 802.11b logging txpower {on off}	•	•	•
config advanced 802.11b monitor channel-list {all country dca}	•	•	•
config advanced 802.11b monitor coverage <i>seconds</i>	•	•	•
config advanced 802.11b monitor load <i>seconds</i>	•	•	•
config advanced 802.11b monitor mode {enable disable}	•	•	•
config advanced 802.11b monitor noise <i>seconds</i>	•	•	•
config advanced 802.11b monitor signal <i>seconds</i>	•	•	•
config advanced 802.11b profile clients {global Cisco_AP} <i>clients</i>	•	•	•
config advanced 802.11b profile coverage {global Cisco_AP} <i>dBm</i>	•	•	•
config advanced 802.11b profile customize Cisco_AP {on off}	•	•	•
config advanced 802.11b profile exception {global Cisco_AP} <i>percent</i>	•	•	•
config advanced 802.11b profile foreign {global Cisco_AP} <i>percent</i>	•	•	•
config advanced 802.11b profile level {global Cisco_AP} <i>clients</i>	•	•	•
config advanced 802.11b profile noise {global Cisco_AP} <i>dBm</i>	•	•	•
config advanced 802.11b profile throughput {global Cisco_AP} <i>rate</i>	•	•	•
config advanced 802.11b profile utilization {global Cisco_AP} <i>percent</i>	•	•	•
config advanced 802.11b receiver {default rxstart}	•	•	•
config advanced 802.11b txpower-update	•	•	•
config advanced client-handoff <i>num_of_retries</i>	•	•	•
config advanced statistics {enable disable}	•	•	•
config advanced timers ap-discovery-timeout <i>seconds</i>	•	•	•
config advanced timers ap-heartbeat-timeout <i>seconds</i>	•	•	•
config advanced timers auth-timeout <i>seconds</i>	•	•	•
config advanced timers eap-timeout <i>seconds</i>	----	•	•
config advanced timers eap-identify-request-delay	----		----
config ap add MAC <i>port</i> {enable disable} <i>IP_address</i>	----	•	•
config ap bhmode {11a 11b 11g}	•	•	•
config ap bhrate rate Cisco_AP	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
config ap bridgegroupname {set groupname delete} Cisco_AP	•	•	•
config ap bridging {enable disable} Cisco_AP	•	•	•
config ap core-dump {enable IP_address filename {compress uncompress} disable} {Cisco_AP all}	•	•	•
config ap crash-file clear-all	•	•	•
config ap crash-file delete filename	•	•	•
config ap crash-file get-crash-file Cisco_AP	•	•	•
config ap crash-file get-radio-core-dump Slot_ID Cisco_AP	•	•	•
config ap delete MAC	----	•	•
config ap disable Cisco_AP	•	•	•
config ap enable Cisco_AP	•	•	•
config ap group-name groupname Cisco_AP	•	•	•
config ap led-state {enable disable} Cisco_AP	•	•	•
config ap location location Cisco_AP	•	•	•
config ap mode {local reap monitor rogue sniffer bridge} Cisco_AP	•	•	•
config ap name new_name old_name	•	•	•
config ap port MAC port	----	•	•
config ap power injector {enable disable} Cisco_AP MAC	•	•	•
config ap power pre-standard {enable disable} Cisco_AP	•	•	•
config ap primary-base controller_name Cisco_AP	•	•	•
config ap reporting-period period	•	•	•
config ap reset Cisco_AP	•	•	•
config ap role {rooftop poletop auto} Cisco_AP	•	•	•
config ap rst-button {enable disable} Cisco_AP	•	•	•
config ap secondary-base controller_name Cisco_AP	•	•	•
config ap sniff 802.11a {enable disable} channel ip_address Cisco_AP	•	•	•
config ap sniff 802.11b {enable disable} channel ip_address Cisco_AP	•	•	•
config ap static-ip {enable disable} Cisco_AP ip_address net_mask gateway	•	•	•
config ap stats-timer period Cisco_AP	•	•	•
config ap tertiary-base controller_name Cisco_AP	•	•	•
config ap tftp-downgrade IP_address filename Cisco_AP	•	•	•
config ap wlan {add delete enable disable} {802.11a 802.11b} wlan_id Cisco_AP	•	•	•
config auth-list add {mic ssc} AP_MAC [AP_key]	•	•	•
config auth-list ap-policy {authorize-ap {enable disable} ssc {enable disable}}	•	•	•
config auth-list delete AP_MAC	•	•	•
config boot {primary backup}	•	•	•
config certificate {generate {webadmin webauth} compatibility {on off}}	•	•	•
config client deauthenticate MAC	•	•	•
config country country_code	•	•	•
config custom-web ext-webauth-mode {enable disable}	•	•	•
config custom-web ext-webauth-url URL	•	•	•
config custom-web ext-webserver {add delete} index IP_address	----	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
config custom-web redirectUrl URL	•	•	•
config custom-web weblogo {enable disable}	•	•	•
config custom-web webmessage message	•	•	•
config custom-web webtitle title	•	•	•
config database size	•	•	•
config dhcp address-pool	•	•	•
config dhcp create-scope	•	•	•
config dhcp default-router	•	•	•
config dhcp delete-scope	•	•	•
config dhcp disable	•	•	•
config dhcp dns-servers	•	•	•
config dhcp domain	•	•	•
config dntp enable	•	•	•
config dhcp lease	•	•	•
config dhcp netbios-name-server	•	•	•
config dhcp network	•	•	•
config exclusionlist {add delete description}	•	•	•
config interface acl {ap-manager management interface_name} {ACL none}	•	•	•
config interface address {ap-manager IP_address netmask gateway management IP_address netmask gateway service-port IP_address netmask virtual IP_address interface-name IP_address netmask gateway}	•	•	•
config interface ap-manager interface_name {enable disable}	----	•	•
config interface create interface_name vlan-id	•	•	•
config interface delete interface-name	•	•	•
config interface dhcp {ap-manager server1 [server2] management server1 [server2] service-port {enable disable} interface-name server1 [server2]}	•	•	•
config interface hostname virtual DNS_host	•	•	•
config interface port {ap-manager management interface_name} port1 [port2]	•	•	•
config interface vlan {ap-manager management interface-name} vlan	•	•	•
config known ap {add alert delete} MAC	•	•	•
config load-balancing {status {enable disable} window clients}	•	•	•
config location add location [description]	•	•	•
config location delete location	•	•	•
config location description location_name description	•	•	•
config location disable	•	•	•
config location enable	•	•	•
config location interface-mapping {add location_name wlan_id interface_name delete location_name wlan_id}	•	•	•
config loginsession close {session_id all}	•	•	•
config macfilter add	•	•	•
config macfilter delete	•	•	•
config macfilter description	•	•	•
config macfilter interface	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
config macfilter mac-delimiter	•	•	•
config macfilter radius-compat {cisco free other}	•	•	•
config macfilter wlan-id MAC wlan_id	•	•	•
config mgmtuser add username password {read-write read-only} [description]	•	•	•
config mgmtuser delete username	•	•	•
config mgmtuser description username description	•	•	•
config mgmtuser password username password	•	•	•
config mobility group anchor {add delete} wlan_id IP_address	•	•	•
config mobility group domain domain_name	•	•	•
config mobility group member {add MAC IP_address [group_name] delete MAC}	•	•	•
config mobility secure-mode {enable disable}	----	•	•
config mobility statistics reset	•	•	•
config msglog level critical	•	•	•
config msglog level error	•	•	•
config msglog level security	•	•	•
config msglog level verbose	•	•	•
config msglog level warning	•	•	•
config nac acl {none acl-name}	•	•	•
config nac add index IP_address port secret	•	•	•
config nac delete	•		•
config nac disable	•		•
config nac enable	•		•
config netuser add username password wlan_id [description]	•	•	•
config netuser delete username	•	•	•
config netuser description username description	•	•	•
config netuser maxUserLogin count	•	•	•
config netuser password username password	•	•	•
config netuser wlan-id username wlan_id	•	•	•
config network allow-old-bridge-aps {enable disable}	•	•	•
config network ap-fallback {enable disable}	•	•	•
config network apple-talk {enable disable}	----	•	•
config network arptimeout seconds	•	•	•
config network arpunicast {enable disable}	•	•	•
config network bridging-shared-secret shared_secret	•	•	•
config network broadcast {enable disable}			
config network fast-ssid-change {enable disable}	•	•	•
config network master-base {enable disable}	•	•	•
config network mgmt-via-wireless {enable disable}	•	•	•
config network multicast global {enable disable}	•	•	•
config network otap-mode {enable disable}	•	•	•
config network peer-blocking {enable disable}	•	•	•
config network rf-network-name name	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
config network secureweb {enable disable}	•	•	•
config network ssh {enable disable}	•	•	•
config network telnet {enable disable}	•	•	•
config network usertimeout seconds	•	•	•
config network web-auth-port port	•	•	•
config network webmode {enable disable}	•	•	•
config network zero-config {enable disable}	•	•	•
config pmk-cache delete {all MAC}	•	•	•
config port adminmode {all port} {enable disable}	•	•	•
config port autoneg {all port} {enable disable}	---	•	•
config port linktrap {all port} {enable disable}	•	•	•
config port multicast appliance port {enable disable}	---	•	•
config port physicalmode {all port} {100h 100f 10h 10f}	---	•	•
config port power {all port} {enable disable}	•	•	•
config prompt	•	•	•
config qos queue_length {bronze silver gold platinum} length	•	•	•
config radius acct add index ip_address port {ascii hex} secret	•	•	•
config radius acct delete index	•	•	•
config radius acct disable index	•	•	•
config radius acct enable index	•	•	•
config radius acct network index	•	•	•
config radius acct ipsec authentication {hmac-md5 hmac-sha1} index	•	•	•
config radius acct ipsec disable index	•	•	•
config radius acct ipsec enable index	•	•	•
config radius acct ipsec encryption {3des aes des}	•	•	•
config radius acct ipsec ike {dh-group {group-1 group-2 group-5} lifetime seconds phase1 {aggressive main}} index	•	•	•
config radius acct network index {enable disable}	•	•	•
config radius acct retransmit-timeout index timeout	•	•	•
config radius auth add index ip_address port {ascii hex} secret	•	•	•
config radius auth delete index	•	•	•
config radius auth disable index	•	•	•
config radius auth enable index	•	•	•
config radius auth ipsec authentication {hmac-md5 hmac-sha1} index	•	•	•
config radius auth ipsec disable index	•	•	•
config radius auth ipsec enable index	•	•	•
config radius auth ipsec encryption {3des aes des} index	•	•	•
config radius auth ipsec ike {dh-group {group-1 group-2 group-5} lifetime seconds phase1 {aggressive main}} index	•	•	•
config radius auth management index {enable disable}	•	•	•
config radius auth network index {enable disable}	•	•	•
config radius auth retransmit-timeout index timeout	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
config radius auth rfc3576 {enable disable} index	•	•	•
config radius backward compatibility {enable disable}	•	•	•
config radius callStationIdType {ipAddr macAddr ap-macAddr}	•	•	•
config rfid auto-timeout {enable disable}	•	•	•
config rfid status {enable disable}	•	•	•
config rfid timeout seconds	•	•	•
config rogue adhoc {acknowledged alert contain} MAC	•	•	•
config rogue ap {acknowledged alert contain known} MAC	•	•	•
config rogue client {alert contain} MAC	•	•	•
config route add ip_address netmask gateway	---	•	•
config route delete ip_address	---	•	•
config serial baudrate {1200 2400 4800 9600 19200 38400 57600 115200}	•	•	•
config serial timeout minutes	•	•	•
config sessions maxsessions session_num	•	•	•
config sessions timeout timeout	•	•	•
config snmp community accessmode {ro rw} name	•	•	•
config snmp community create name	•	•	•
config snmp community delete name	•	•	•
config snmp community ipaddr ip_address ip_mask name	•	•	•
config snmp community mode {enable disable} name	•	•	•
config snmp syscontact contact	•	•	•
config snmp syslocation location	•	•	•
config snmp trapreceiver create name ip_address	•	•	•
config snmp trapreceiver delete name	•	•	•
config snmp trapreceiver mode {enable disable} name	•	•	•
config snmp v3user create username {ro rw} {none hmacmd5 hmacsha} {none des} [auth_key] [encrypt_key]	•	•	•
config snmp v3user delete username	•	•	•
config snmp version {v1 v2 v3} {enable disable}	•	•	•
config spanningtree port mode {off 802.1d fast} {port all}	---	•	•
config spanningtree port pathcost {cost auto} {port all}	---	•	•
config spanningtree port priority priority_num port	---	•	•
config spanningtree switch bridgepriority priority_num	---	•	•
config spanningtree switch forwarddelay seconds	---	•	•
config spanningtree switch hello time seconds	---	•	•
config spanningtree switch maxage seconds	---	•	•
config spanningtree switch mode {enable disable}	---	•	•
config switchconfig flowcontrol {enable disable}	•	•	•
config switchconfig mode {L2 L3}	---	•	•
config syslog {ip_address disable}	•	•	•
config sysname	•	•	•
config time manual MM/DD/YY HH:MM:SS	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
config time ntp {interval seconds server index ip_address}	•	•	•
config time timezone {enable disable} delta_hours delta_mins	•	•	•
config trapflags 802.11-Security wepDecryptError {enable disable}	•	•	•
config trapflags aaa {auth servers} {enable disable}	•	•	•
config trapflags ap {register interfaceUp} {enable disable}	•	•	•
config trapflags authentication {enable disable}	•	•	•
config trapflags client {802.11-disassociate 802.11-deauthenticate 802.11-authfail 802.11-assocfail excluded} {enable disable}	•	•	•
config trapflags configsave {enable disable}	•	•	•
config trapflags ipsec {esp-auth esp-reply invalidSPI ike-neg suite-neg invalid-cookie} {enable disable}	•	•	•
config trapflags linkmode {enable disable}	•	•	•
config trapflags multiusers {enable disable}	•	•	•
config trapflags rogueap {enable disable}	•	•	•
config trapflags rrm-params {tx-power channel antenna} {enable disable}	•	•	•
config trapflags rrm-profile {load noise interference coverage} {enable disable}	•	•	•
config trapflags stpmode {enable disable}	----	•	•
config trapflags wps {enable disable}	•	•	•
config watchlist add {mac MAC username username}	•	•	•
config watchlist delete {mac MAC username username}	•	•	•
config watchlist disable	•	•	•
config watchlist enable	•	•	•
config wlan 7920-support {ap-cac-limit client-cac-limit} {enable disable} wlan_id	•	•	•
config wlan 802.11e {allow disable require} wlan_id	•	•	•
config wlan aaa-override {enable disable} {wlan_id foreignAp}	•	•	•
config wlan broadcast-ssid {enable disable} wlan_id	•	•	•
config wlan create {wlan_id wlan_name foreignAp}	•	•	•
config wlan delete {wlan_id foreignAp}	•	•	•
config wlan dhcp_server {wlan_id foreignAp} ip_address [required]	•	•	•
config wlan disable {wlan_id foreignAp}	•	•	•
config wlan enable {wlan_id foreignAp}	•	•	•
config wlan exclusionlist {wlan_id foreignAp} {enabled disabled} seconds	•	•	•
config wlan interface {wlan_id foreignAp} interface-name	•	•	•
config wlan IPv6support {enable disable} wlan_id	•	•	•
config wlan mac-filtering {enable disable} {wlan_id foreignAp}	•	•	•
config wlan mobility anchor {add delete} wlan_id ip_address	•	•	•
config wlan qos {wlan_id foreignAp} {bronze silver gold platinum}	•	•	•
config wlan radio wlan_id {all 802.11a 802.11bg 802.11g 802.11ag}	•	•	•
config wlan radius_server {auth acct} {add wlan_id server_id delete wlan_id {all server_id}}	•	•	•
config wlan security 802.1X {enable disable encryption} {wlan_id foreignAp} [40 104 128]	•	•	•
config wlan security granite {enable disable} {wlan_id foreignAp}	----	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
config wlan security fortress {enable disable} {wlan_id foreignAp}	----	•	•
config wlan security ipsec authentication {hmac-md5 hmac-sha-1} {wlan_id foreignAp}	----	•	•
config wlan security ipsec config qotd ip_address {wlan_id foreignAp}	----	•	•
config wlan security ipsec disable {wlan_id foreignAp}	----	•	•
config wlan security ipsec enable {wlan_id foreignAp}	----	•	•
config wlan security ipsec encryption {3des aes des} {wlan_id foreignAp}	----	•	•
config wlan security ipsec ike authentication {certificates pre-share-key xauth-psk} {wlan_id foreignAp} [key]	----	•	•
config wlan security ipsec ike contivity {enable disable} {wlan_id foreignAp}	----	•	•
config wlan security ipsec ike dh-group {wlan_id foreignAp} {group-1 group-2 group-5}	----	•	•
config wlan security ipsec ike lifetime {wlan_id foreignAp} seconds	----	•	•
config wlan security ipsec ike phase1 {aggressive main} {wlan_id foreignAp}	----	•	•
config wlan security l2tp authentication {hmac-md5 hmac-sha-1} wlan_id	----	•	•
config wlan security l2tp disable wlan_id	----	•	•
config wlan security l2tp enable wlan_id	----	•	•
config wlan security l2tp encryption {3des aes des} wlan_id	----	•	•
config wlan security l2tp ike dh-group wlan_id {group-1 group-2 group-5}	----	•	•
config wlan security l2tp ike lifetime wlan_id seconds	----	•	•
config wlan security l2tp ike phase1 main wlan_id	----	•	•
config wlan security passthru {enable disable} {wlan_id foreignAp} [ip_address]	•	•	•
config wlan security static-wep-key authentication {shared-key open} wlan_id	•	•	•
config wlan security static-wep-key disable wlan_id	•	•	•
config wlan security static-wep-key enable wlan_id	•	•	•
config wlan security static-wep-key encryption wlan_id {40 104 128} {hex ascii} key key-index	•	•	•
config wlan security web-auth {acl enable disable} {wlan_id foreignAp} [{acl_name none}]	•	•	•
config wlan security web-passthrough acl {wlan_id foreignAp} {acl_name none}	•	•	•
config wlan security web-passthrough disable {wlan_id foreignAp}	•	•	•
config wlan security web-passthrough email-input {enable disable} {wlan_id foreignAp}	•	•	•
config wlan security web-passthrough enable {wlan_id foreignAp}	•	•	•
config wlan security wpa1 disable wlan_id	•	•	•
config wlan security wpa1 enable wlan_id	•	•	•
config wlan security wpa1 pre-shared-key {enable disable} wlan_id key	•	•	•
config wlan security wpa2 disable wlan_id	•	•	•
config wlan security wpa2 enable wlan_id	•	•	•
config wlan security wpa2 pre-shared-key {enable disable} wlan_id key	•	•	•
config wlan security wpa2 tkip {enable disable} wlan_id	•	•	•
config wlan security wpa2 wpa-compat {enable disable} wlan_id	•	•	•
config wlan timeout {wlan_id foreignAp} seconds	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
config wlan wmm {allow disable require} <i>wlan_id</i>	•	•	•
debug aaa	•		•
debug ap	•	•	•
debug airewave-director	•		•
debug arp	•		•
debug broadcast	•		•
debug cac	•		•
debug crypto	•		•
debug dhcp	•		•
debug disable-all	•		•
debug dot11	•		•
debug dot1x	•		•
debug l2age	•		•
debug lwapp	•		•
debug mac	•		•
debug mobility	•		•
debug nac	•		•
debug ntp	•		•
debug pem	•		•
debug pm	•		•
debug poe	•		•
debug rbcp	•		•
debug snmp	•		•
debug transfer	•		•
debug wcp	•	•	•
debug wps	•	•	•
save config	•	•	•
transfer download certpassword	•	•	•
transfer download datatype	•	•	•
transfer download filename <i>filename</i>	•	•	•
transfer download mode tftp	•	•	•
transfer download path <i>path</i>	•	•	•
transfer download serverip <i>ip_address</i>	•	•	•
transfer download start	•	•	•
transfer download tftpMaxRetries <i>retries</i>	•	•	•
transfer download tftpPktTimeout <i>timeout</i>	•	•	•
transfer encrypt {enable disable set-key <i>key</i> }	•	•	•
transfer upload datatype {config crashfile errorlog radio-core-dump signature systemtrace traplog}	•	•	•
transfer upload filename <i>filename</i>	•	•	•
transfer upload mode tftp	•	•	•
transfer upload path <i>path</i>	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
transfer upload serverip ip_address	•	•	•
transfer upload start	•	•	•
show 802.11a	•	•	•
show 802.11b	•	•	•
show 802.11h	•	•	•
show acl	•	•	•
show advanced 802.11a channel	•	•	•
show advanced 802.11a group	•	•	•
show advanced 802.11a logging	•	•	•
show advanced 802.11a monitor	•	•	•
show advanced 802.11a profile	•	•	•
show advanced 802.11a receiver	•	•	•
show advanced 802.11a summary	•	•	•
show advanced 802.11a txpower	•	•	•
show advanced 802.11b channel	•	•	•
show advanced 802.11b group	•	•	•
show advanced 802.11b logging	•	•	•
show advanced 802.11b monitor	•	•	•
show advanced 802.11b profile	•	•	•
show advanced 802.11b receiver	•	•	•
show advanced 802.11b summary	•	•	•
show advanced 802.11b txpower	•	•	•
show advanced client-handoff	•	•	•
show advanced eap	•		•
show advanced max-1x-sessions	•		•
show advanced probe-limit	•		•
show advanced rate	•		•
show advanced send-disassoc-on-handoff	•		•
show advanced statistics	•	•	•
show advanced timers	•	•	•
show advanced timers eap-identity-request-delay	----	----	----
show ap auto-rf	•	•	•
show ap bhmode	•		•
show ap bhrate	•		•
show ap config	•	•	•
show ap core-dump	•	•	•
show ap crash-file	•	•	•
show ap stats	•	•	•
show ap summary	•	•	•
show ap wlan	•	•	•
show arp switch	•	•	•
show auth-list	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
show boot	•	•	•
show certificate compatibility	•	•	•
show certificate summary	•	•	•
show client ap	•	•	•
show client detail	•	•	•
show client summary	•	•	•
show client username	•	•	•
show country	•	•	•
show cpu	•	•	•
show custom-web	•	•	•
show database summary	•	•	•
show debug	•	•	•
show dhcp	•	•	•
show eventlog	•	•	•
show exclusionlist	•	•	•
show ike	•	•	•
show interface	•	•	•
show inventory	•	•	•
show ipsec	•	•	•
show known ap	•	•	•
show l2tp	•	•	•
show load-balancing	•	•	•
show location summary	•	•	•
show loginsession	•	•	•
show macfilter	•	•	•
show mesh linkrate	•	•	•
show mesh neigh	•	•	•
show mesh path	•	•	•
show mesh stats	•	•	•
show mesh summary	•	•	•
show mgmtuser	•	•	•
show mobility anchor	•	•	•
show mobility statistics	•	•	•
show mobility summary	•	•	•
show msglog	•	•	•
show nac statistics	•	•	•
show nac summary	•	•	•
show netuser	•	•	•
show network summary	•	•	•
show pmk-cache	•	•	•
show port	•	•	•
show qos queue_length all	•	•	•

コマンドラインインターフェイス シンタックス	WLCM	WiSM	4400
show radius acct statistics	•	•	•
show radius auth statistics	•	•	•
show radius rfc3576 statistics	•	•	•
show radius summary	•	•	•
show rfid config	•	•	•
show rfid detail	•	•	•
show rfid summary	•	•	•
show rogue adhoc detailed	•	•	•
show rogue adhoc summary	•	•	•
show rogue ap clients	•	•	•
show rogue ap detailed	•	•	•
show rogue ap summary	•	•	•
show rogue client detailed	•	•	•
show rogue client summary	•	•	•
show route summary	•	•	•
show rules	•	•	•
show run-config	•	•	•
show serial	•	•	•
show sessions	•	•	•
show snmpcommunity	•	•	•
show snmptrap	•	•	•
show snmpv3user	•	•	•
show snmpversion	•	•	•
show spanningtree port	----	•	•
show spanningtree switch	----	•	•
show stats port	•	•	•
show stats switch	•	•	•
show switchconfig	•	•	•
show sysinfo	•	•	•
show syslog	•	•	•
show tech-support	•	•	•
show time	•	•	•
show trapflags	•	•	•
show traplog	•	•	•
show watchlist	•	•	•
show wlan	•	•	•
show wps	•		•

