

# Configurar ajustes WPS no RV110W

## Objetivo

A instalação protegida Wi-fi (WPS) é uma maneira rápida estabelecer uma rede Wireless segura. O objetivo deste artigo é explicar como configurar ajustes WPS no RV110W.

## Dispositivos aplicáveis

- RV110W

## Etapas do procedimento

Etapa1. Use a utilidade de configuração de roteador para escolher o **Sem fio > o WPS**.

**WPS**

**Wi-Fi Protected Setup™**

SSID: ciscosb1

WPS:  Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.

OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here  and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

---

Wi-Fi Protected Setup Status:	Unconfigured
Network Name (SSID):	ciscosb1
Security:	Disabled
Session Status:	N/A

**Etapa 2.** Do menu suspenso *SSID*, escolha uma rede Wireless aplicar WPS a.

## WPS

### Wi-Fi Protected Setup™

SSID:

WPS:  Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here  and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

Etapa 3. À direita de WPS, verifique a caixa de seleção da **possibilidade** para permitir ajustes WPS.

Etapa 4. Execute uma das três opções para adicionar um dispositivo do cliente à rede.

## WPS



Configuration settings have been saved successfully

### Wi-Fi Protected Setup™

SSID:

WPS:  Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here  and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

- Opção 1. Se o cliente tem um botão WPS, pressione o botão. Clique o ícone WPS.

## WPS



Configuration settings have been saved successfully

### Wi-Fi Protected Setup™

SSID:

WPS:  Enable

Use one of the following for each Wi-Fi Protected Setup supported device:

1. If your client device has a Wi-Fi Protected Setup button, click or press that button and then click the button on the right.



OR

2. If your client device has a Wi-Fi protected Setup PIN number, enter that number here  and then click

OR

3. If your client asks for the Router's PIN number, enter this number **61443143** in your client device.

Wi-Fi Protected Setup Status: Unconfigured

Network Name (SSID): ciscosb1

Security: Disabled

Session Status: N/A

- Opção 2. Se o dispositivo do cliente tem um número Pin WPS, inscreva o número Pin no campo no campo da opção 2. Clique o **registro**.
- Option 3. Os pedidos do cliente para o número Pin do roteador. O cliente incorpora o número 61443143 ao dispositivo do cliente.