Configurar a fluidez ponto a ponto e da camada 2 em access points sem fio industriais (IW)

Contents

Introdução
Componentes Utilizados
Informações de Apoio
Configuração de link ponto a ponto com IW9165D
Modo geral
Rádio sem fio
Monitorando a conectividade
Monitoramento do FM Quadro
Fluidez
Configurando a fluidez

Introdução

Este documento descreve a configuração de um enlace ponto-a-ponto em um AP IW sendo executado no modo CURWB junto com a configuração da camada 2 de fluidez.

Componentes Utilizados

Há quatro tipos diferentes de hardware:

- Cisco Catalyst IW9167
- Cisco Catalyst IW9165D
- Cisco Catalyst IW9165E

As informações neste documento foram criadas a partir de dispositivos em um ambiente de laboratório específico. Todos os dispositivos utilizados neste documento foram iniciados com uma configuração (padrão) inicial. Se a rede estiver ativa, certifique-se de que você entenda o impacto potencial de qualquer comando.

Informações de Apoio

O hardware CURWB fornece backhaul sem fio sobre arquiteturas fixas e de mobilidade. Este documento descreve a configuração de um link ponto-a-ponto em um ponto de acesso industrial sem fio (AP IW) sendo executado no modo CURWB junto com a configuração de camada 2 de fluidez.

Configuração de link ponto a ponto com IW9165D

- 1. Os rádios podem ser configurados no Painel de operações da IoT (IoT OD) ou manualmente na interface da Web do AP. Neste artigo, configuramos todos os rádios manualmente.
- 2. Durante a configuração inicial, é possível que o acesso do console seja necessário. Para se conectar ao console, use uma taxa de baud de 115200, se a versão do software for 17.12.1 ou mais recente.
- 3. Por padrão, todos os rádios estão no modo IOT-OD on-line. Emita este comando para verificar o status do AP.

show iotod-iw status

Cisco-137.250.148#show iotod-iw status IOTOD IW mode: Offline Cisco-137.250.148#

Use esse comando para alterar o modo no AP para off-line se ele estiver configurado para se comunicar com IoT OD.

configure iotod-iw offline

Cisco-137.250.148#configure iotod-iw offline Set up IOTOD IW mode to offline online Set up IOTOD IW mode to online. The device can be managed from the IOTOD IW Cloud Server (if it is connected to the Internet) Cisco-137.250.148#configure iotod-iw

- 4. Quando o rádio estiver configurado para estar no modo off-line, a GUI da Web poderá ser acessada pelo endereço IP padrão 192.168.0.10.
- Na GUI, configure o link ponto-a-ponto com os rádios da página Configurações gerais > Modo geral.

Modo geral

- O modo de rádio (Head End (que está conectado à infraestrutura com fio) precisa ser configurado como mesh end e a extremidade remota como mesh point)

-IP Address

- Máscara de sub-rede e Gateway

ULTRA RELIABLE WIRELESS BACKHAUL	Cisco URWB IW91 5.137.250.148 - M	65DH Configurator ESH END MODE
IOTOD IW Offline IW-MONITOR Enabled FM-QUADRO	Configuration contains changes. Apply these change	ges? Discard Review Apply
GENERAL SETTINGS - general mode - wireless radio - antenna alignment and stats NETWORK CONTROL - advanced tools ADVANCED SETTINGS - advanced radio settings - static routes - allowlist / blocklist - multicast - snmp - radius - ntp - ethernet filter - I2tp configuration - vlan settings - Fluidity - misc settings - smart license MANAGEMENT SETTINGS - remote access - firmware upgrade - status - configuration settings - reset factory default - reboot - logout	GENERAL MODE General Select MESH END mode if you are installing this Cisco fo connecting this unit to a wired network (i.e. LAN). Mode Radio-off LAN Para Local IP: Local Netmask: Default Gateway: Local Dns 1: Local Dns 2: Reset	I Mode DT IW9165DH Series Access Point at the head end and mesh point mesh end gateway 10.122.136.9 255.255.255.192 10.122.136.1 Save
	© 2023 Cisco and/or its affiliates. All rights reserved	L

Quando os parâmetros estiverem configurados, salve as configurações.

Rádio sem fio

• Normalmente, para um IW9165, o Radio 1 é configurado para um link de retorno ponto a ponto, pois essa é uma antena interna direcional. Para o uso apenas de aplicativos ponto-a-

ponto, o segundo rádio precisa ser desativado.

• Ambos os rádios precisam ser configurados com a mesma senha compartilhada, frequência e largura de canal.

ULTRA RELIABLE WIRELESS BACKHAUL	Cisco URWB IW9165DH Configurator 5.137.250.148 - MESH END MODE
IOTOD IW Offline	WIRELESS RADIO
IW-MONITOR Enabled	Wireless Settings
FM-QUADRO	"Shared Passphrase" is an alphanumeric string or special characters excluding '[apex] "[double apex] `[backtick] \$[dollar] =[equal] \[backslash] and whitespace (e.g. "mysecurecamnet") that indentifies your network. It MUST be the same for all the Cisco URWB units belonging to the same network.
GENERAL SETTINGS	
- general mode	Shared Passphrase:
- wireless radio	Show passphrase:
	In order to establish a wireless connection between Cisco URWB units, they need to be operating on the same
- advanced tools	frequency.
ADVANCED SETTINGS	Radio 1 Settings
- advanced radio settings	Role: Fixed V
- static routes	
- allowlist / blocklist	Frequency (MHz): 5180
- multicast	Channel Width (MHz): 20 V
- snmp	
- radius	Radio 2 Settings
- ntp	Role: Disabled V
- ethernet filter	
- I2tp configuration	
- vlan settings	Reset Save
- Fluidity	
- misc settings	
- Smart license	
- remote access	
- firmware ungrade	
- status	
- configuration settings	
- reset factory default	
- reboot	
- logout	
	© 2023 Cisco and/or its affiliates. All rights reserved.

Quando a página estiver configurada, salve as configurações em ambos os rádios e aplique as alterações. Isso reinicializa os rádios e as alterações são aplicadas.

Monitorando a conectividade

Quando os rádios voltarem, a intensidade do sinal da página de alinhamento da antena poderá ser verificada. A intensidade de sinal recomendada está entre -45 dBm e -70 dBm.

É importante validar a intensidade do sinal de ambas as extremidades do link ponto-a-ponto com valores RSSI muito próximos.



Monitoramento do FM Quadro

Mais detalhes sobre o desempenho do link podem ser obtidos na página FM-Quadro. Isso fornece qualidade em tempo real do link, incluindo LER (Link Error Rate), PER (Packet Error Rate), RSSI, MCS de throughput, fluxo espacial, frequência operacional, etc.

🟥 Cisco URWB IW9165DH - 5.1 x 🟥 Cisco FM-QUADRO x	🛗 Cisco URWB IW9165DH - 5.1 x +	•
← → C O Not Secure https://192.168.0.11/fmquadro/topolog	y_view 🖈	8 D I I 🔺 I
o QUADRO		cisco
	ME - 192.168.0.10	
	10 11 11 11 11 11 11 11 11 11 11 11 11 1	
Agg: Throughput 0.05 MBps Frequency 5180 MBtz (R1) 192.168.0.10 📛 (R1) 192.168.0.11	•	
UPLINK → Throughout LLR PLR. RSSI MCS Rate 0.01 Mbps 0% 0% -32 dBm 9/2 SGI @80 MHz 780 Mbps		
DOWNLINK ← Throughput LER P.E.R. RSSI MCS Rate 0.04 Mbps 0% 0% -31 dBm 0/0 SGI @20 MHz 0 Mbps		
Ohannel utilization Others @ Free O		

Fluidez

A arquitetura de rede Cisco Fluidity (anteriormente Fluidmesh Fluidity) é baseada no Prodigy 2.0. Esta é uma tecnologia baseada em Multiprotocol Label Switching (MPLS) usada para fornecer dados encapsulados por IP.

Em um cenário de rede de mobilidade Cisco Ultra-Reliable Wireless Backhaul, o processo de handoff pode ser assimilado a uma alteração na topologia da rede na qual um link existente é interrompido e um novo link é criado. No entanto, os mecanismos padrão do setor para detectar a alteração e reconfigurar os nós são muito lentos e consomem muitos dados para fornecer desempenho adequado em um cenário restrito em tempo real (como mobilidade de alta velocidade). Em particular, a latência de reconfiguração e o número de mensagens trocadas precisam ser minimizados para reduzir qualquer chance de perda de pacotes de dados no processo. Para atenuar os problemas mencionados anteriormente, o Fluidity implementa uma solução de handoff rápido que fornece uma reconfiguração de caminho muito rápida, com latência na ordem de um milissegundo. O mecanismo ativo é uma extensão do plano de controle existente da rede e é baseado em uma técnica de manipulação específica referente às tabelas FIB de MPLS do nó.

O esquema de fluidez permite que os nós móveis e os dispositivos clientes conectados a eles mantenham seus endereços IP durante todo o processo de mobilidade. Além disso, todos os nós fazem parte de uma única rede em malha de camada 2.

Configurando a fluidez

Topologia: dois APs IW9165D que estão conectados por rede sem fio e IW9167 como um veículo usando a fluidez da camada 2

- Assim como o link ponto a ponto, precisamos configurar a página do modo geral. Observe que o cluster de uma rede de fluidez CURWB L2 tem apenas uma extremidade de malha. Como nessa rede, não há conectividade de fibra entre os dois IW9165D. Eles são conectados por meio de um link de backhaul sem fio ponto a ponto com a interface de rádio 1. A extremidade da malha dessa pequena rede de fluidez é o IW9165D que está fisicamente conectado à rede central. Todos os outros rádios no cluster (incluindo o veículo) são configurados como um ponto de malha. Nessa topologia, temos 1 extremidade de malha e 1 ponto de malha que forma o link ponto a ponto e o IW 9167AP como um veículo (configurado como um ponto de malha).
- 2. O rádio 1 está configurado para um link ponto-a-ponto e o rádio 2 precisa ser configurado para Fluidez, tanto para rádios de via quanto para rádios de veículos. Para rádios de veículo, apenas uma interface é configurada com fluidez, mas o segundo rádio é desativado.

ULTRA RELIABLE WIRELESS BACKHAUL	Cisco URWB IW9165DH Configurator 5.137.250.148 - MESH END MODE
IOTOD IW Offline	WIRELESS RADIO
IW-MONITOR Enabled	Wireless Settings
FM-QUADRO	"Shared Passphrase" is an alphanumeric string or special characters excluding '[apex] "[double apex] `[backtick] \$[dollar] =[equal] \[backslash] and whitespace (e.g. "mysecurecamnet") that indentifies your network. It MUST be the same for all the Cisco URWB units belonging to the same network.
GENERAL SETTINGS - general mode	Shared Passphrase:
- wireless radio	
- antenna alignment and stats	Show passphrase:
NETWORK CONTROL	In order to establish a wireless connection between Cisco URWB units, they need to be operating on the same frequency.
- advanced tools	Radio 1 Settings
ADVANCED SETTINGS	
- advanced radio settings	Role: Fixed V
- static routes	Frequency (MHz): 5180
- allowlist / blocklist	
- multicast	Channel Width (MHz): 20 V
- snmp	Radio 2 Settings
- ntp	
- ethernet filter	Role: Fluidity V
- I2tp configuration	Frequency (MHz): 5745
- vlan settings	
- Fluidity	Channel Width (MHz): 20 V
- misc settings	
- smart license	
MANAGEMENT SETTINGS	Reset Save
- remote access	
- firmware upgrade	
- status	
- configuration settings	
- reset factory default	
- logout	
- wyour	
	© 2023 Cisco and/or its affiliates. All rights reserved.

3. Na página Advanced Settings > Fluidity (Configurações avançadas > Fluidez), os rádios instalados na via que fornecem cobertura para os veículos precisam ser configurados como Infrastructure. Por outro lado, o rádio do veículo (IW 9167) precisa ser configurado como um veículo.

ULTRA RELIABLE WIRELESS BACKHAUL	C	5.137.250.148 - MESH END MODE
IOTOD IW Offline	FLUIDITY	
IW-MONITOR Enabled		Fluidity Settings
FM-QUADRO GENERAL SETTINGS - general mode - wireless radio - antenna alignment and stats NETWORK CONTROL - advanced tools	The unit can operate in 3 m The unit must be set as Infr and it is connected to a wire must be set as Infrastructur Infrastructure units. In this o it will use the wireless conn The unit must be set as Vef Vehicle. Specifically, Vehicle installed on different vehicle The Network Type filed mus the infrastructure networks organized as different layer	odes: Infrastructure, Infrastructure (wireless relay), Vehicle. astructure when it acts as the entry point of the infrastructure for the mobile vehicles ed network (backbone) which possibly includes other Infrastructure nodes. The unit e (wireless relay) ONLY when it is used as a wireless relay agent to other operating mode, the unit MUST NOT be connected to the wired network backbone as ection to relay the data coming form the mobile units. hicle when it is mobile. Vehicle ID must be set ONLY when the unit is configured as a ID must be a unique among all the mobile units installed on the same vehicle. Unit as must use different Vehicle IDs. It be set according to the general network architecture. Choose Flat if the mesh and belong to a single layer-2 broadcast domain. Use Multiple Subnets if they are -3 routing domains.
ADVANCED SETTINGS	Unit Role:	Infrastructure V
- advanced radio settings		
- static routes	Network Type:	Flat V
 allowlist / blocklist multicast snmp radius ntp ethernet filter l2tp configuration vlan settings Fluidity misc settings smart license MANAGEMENT SETTINGS remote access firmware upgrade status 	environment. Please do not doing. The Handoff Logic controls to. In Normal mode, the poi radio prefers the point whic Handoff Logic:	In the algorithm to infect the performance of the system depending on the specific alter this settings unless you have read the manual first and you know what you are the algorithm used by a mobile radio to select the best infrastructure point to connect in provides the best balance between signal strength and amount of traffic carried. Standard Image: Standard I
- configuration settings		
- reset factory default		
- reboot		
- logout		
© 2023 Cisco and/or its affiliates. All rights reserved.		

ULTRA RELIABLE WIRELESS BACKHAUL	Cisco URWB IW9167EH Configurator 5.246.2.120 - MESH POINT MODE	
IOTOD IW Offline	FLUIDITY	
IW-MONITOR Enabled	Fluidity Settings	
GENERAL SETTINGS - general mode - wireless radio - antenna alignment and stats NETWORK CONTROL - advanced tools ADVANCED SETTINGS	The unit can operate in 3 modes: Infrastructure, Infrastructure (wireless relay), Vehicle. The unit must be set as Infrastructure when it acts as the entry point of the infrastructure for the mobile vehicles and it is connected to a wired network (backbone) which possibly includes other Infrastructure nodes. The unit must be set as Infrastructure (wireless relay) ONLY when it is used as a wireless relay agent to other Infrastructure units. In this operating mode, the unit MUST NOT be connected to the wired network backbone as it will use the wireless connection to relay the data coming form the mobile units. The unit must be set as Vehicle when it is mobile. Vehicle ID must be set ONLY when the unit is configured as Vehicle. Specifically, Vehicle ID must be a unique among all the mobile units installed on the same vehicle. Unit installed on different vehicles must use different Vehicle IDs. The Network Type filed must be set according to the general network architecture. Choose Flat if the mesh and the infrastructure networks belong to a single layer-2 broadcast domain. Use Multiple Subnets if they are organized as different layer-3 routing domains.	
- advanced radio settings	Unit Role: Vehicle V	
- static routes - allowlist / blocklist - snmp	Automatic Vehicle ID: C Enable Network Type: Flat	
- radius - ntp - ethernet filter - I2tp configuration	The following advanced settings allow to fine-tune the performance of the system depending on the specific environment. Please do not alter this settings unless you have read the manual first and you know what you are doing. The Handoff Logic controls the algorithm used by a mobile radio to select the best infrastructure point to connect to. In Normal mode, the point providing the strongest signal is selected. In Load Balancing mode, the mobile radio prefers the point which provides the best balance between signal strength and amount of traffic carried.	
 vlan settings Fluidity misc settings MANAGEMENT SETTINGS remote access firmware upgrade status configuration settings reset factory default reboot logout 	Handoff Logic: Standard V Reset Save	
© 2023 Cisco and/or its affiliates. All rights reserved.		

- 4. Se estiver usando MIMO 2x2, selecione o número da antena como ab-antenna.
- Para o IW 9167, se estiver usando MIMO 2x2 e estiver usando a interface 1, use as portas de antena 3 e 4. Se configurado para a interface 2, use as portas de antena 5 e 6.

ULTRA RELIABLE WIRELESS BACKHAUL	Cisco URWB IW9167EH Configurator 5.246.2.120 - MESH POINT MODE
IOTOD IW Offline	ADVANCED RADIO SETTINGS
IW-MONITOR Enabled	Radio 1
GENERAL SETTINGS	FluidMAX Management
- general mode - wireless radio - antenna alignment and stats	Force the FluidMAX operating mode of this unit. If the operating mode is Primary/Secondary a FluidMAX Cluster ID can be set. If the FluidMAX Autoscan is enabled, the Secondary units will scan the frequencies to associate with the Primary with the same Cluster ID. In this case, the frequency selection on the Secondarys will be disabled.
- advanced tools	Radio Mode: OFF
ADVANCED SETTINGS	Max TX Power
- advanced radio settings - static routes - allowlist / blocklist	Select the max power level that the radio shall use to transmit (power level 1 sets the highest transmit power). The Cisco URWB TPC (Transmit Power Control) will automatically select the optimum transmission power according to the channel condition while not exceeding the MAX TX Power parameter. Note: in Europe TPC is automatically enabled.
- snmp	Select TX Max Power: 1
- radius	
- ethernet filter	Antenna Configuration
- I2tp configuration	Select radio 1 antenna gain and antenna number.
- vlan settings - Fluidity	Select Antenna Gain: UNSELECTED V
MANAGEMENT SETTINGS	Antenna number: ab-antenna V
- remote access	Data Packet Encryption
- status	Enable AES to cypher all wireless traffic. This setting must be the same on all the Cisco URWB units.
- configuration settings	Enable AES: Disabled
- reset factory default	
- logout	Maximum link length
	Insert the length of the longest link in the net, or let the system select an optimal value.
	Distance: 3
	Unit: 💽 Km 🔿 Miles
	© 2023 Cisco and/or its affiliates. All rights reserved.

5. Depois de definir cada configuração, salve a configuração e, no final, aplique as alterações. Os APs são reinicializados e, quando os rádios estiverem novamente on-line, podemos verificar o RSSI na página de alinhamento da antena e monitorar a conectividade em tempo real na página FM-Quadro.





Sobre esta tradução

A Cisco traduziu este documento com a ajuda de tecnologias de tradução automática e humana para oferecer conteúdo de suporte aos seus usuários no seu próprio idioma, independentemente da localização.

Observe que mesmo a melhor tradução automática não será tão precisa quanto as realizadas por um tradutor profissional.

A Cisco Systems, Inc. não se responsabiliza pela precisão destas traduções e recomenda que o documento original em inglês (link fornecido) seja sempre consultado.