# 在ACI中配置从主机到交换矩阵扩展器(FEX)的 vPC

# 目录

简介 拓扑 先决条件 要求 使用的组件 配置 在2台枝叶交换机之间设置vPC 使FEX在线 在FEX上配置主机接口 选项1:将接口添加到每个FEX配置文件,并将其映射到同一vPC策略组。 选项2:为两个FEX分配相同的FEX配置文件并添加接入端口选择器。

# 简介

本文档介绍在以应用为中心的基础设施(ACI)环境中配置从主机到这些FEX的交换矩阵外部器 (FEX)和虚拟端口通道(vPC)所使用的配置步骤。

# 拓扑



# 先决条件

### 要求

本文档没有任何特定的要求。

### 使用的组件

本文档中的信息基于下列硬件和软件版本:

- •由两台主干交换机和两台枝叶交换机组成的ACI交换矩阵
- 2个支持的Cisco FEX,每个都插入到自己的枝叶中
- •应用策略基础设施控制器(APIC)
- 连接到每个FEX的主机

本文档中的信息都是基于特定实验室环境中的设备编写的。本文档中使用的所有设备最初均采用原 始(默认)配置。如果您使用的是真实网络,请确保您已经了解所有命令的潜在影响。

## 配置

### 在2台枝叶交换机之间设置vPC

此配置将指导您在ACI中的2个枝叶交换机之间设置vPC域。此部分中使用的枝叶交换机标有"101"和 "102" 导航至交换矩阵>访问策略>交换机策略>策略>虚拟端口通道默认值,然后点击"显式VPC保护组"旁的"+"。 输入名称、您希望vPC之间的2个枝叶交换机和"逻辑对ID"(传统Nexus OS中的"域ID")。

Explicit VPC Protection Groups:			
Create VPC Explicit P	rotection Group	CUITALEC	1 ×
Specify the Explicit G	roup settings		
Name:	101-102		
ID:	10	* *	
VPC Domain Policy:	select or type to pre-provision	×	
Switch 1:	101	¥	
Switch 2:	102	V	
			CALLER
		SUBMIT	CANCEL

现在,我们可以在CLI上验证vPC域已配置。 通过SSH(安全外壳)连接到其中一台交换机并运行 "show vpc brief"

#### fab1-leaf1# show vpc brief

Legend: (\*) - local vPC is down, forwarding via vPC peer-link

vPC domain id	: 10
Peer status	: peer adjacency formed ok
vPC keep-alive status	: Disabled
Configuration consistency status	: success
Per-vlan consistency status	: success
Type-2 consistency status	: success
vPC role	: primary
Number of vPCs configured	: 4
Peer Gateway	: Disabled
Dual-active excluded VLANs	: -
Graceful Consistency Check	: Enabled
Auto-recovery status	: Enabled (timeout = 240 seconds)
Operational Layer3 Peer	: Disabled

vPC Peer-link status

id	Port	Status	Active	vlans			

1 up -

在ACI中,由于我们在内部使用主干 — 枝叶连接作为"对等链路",因此保持连接状态被禁用。

## 使FEX在线

现在,我们可以在每台枝叶交换机上注册FEX。 我们不支持FEX和2个枝叶交换机之间的vPC连接 ,因此每个FEX只能连接到1个枝叶交换机。

导航至交换矩阵>访问策略>快速启动,然后单击"配置接口、PC和VPC"。单击绿色"+"添加交换机。 选择"高级"单选按钮。 输入连接到第一个FEX的枝叶的交换机ID。输入交换机配置文件的名称并添 加FEX类型和编号。 最后,在FEX连接的枝叶上输入端口。

Select Switches To Cor	nfigure Interfaces:	Quick	Advanced		
Switches:	+ 🗙				
	Switch IDs		Switch Policy Group		
	101	~	select or type to pre-provision		
		UPDATE	CANCEL		
Switch Profile Name:	FEX101				
Switch Type:	48 Ports	Ø 96 Ports			
Fexes:	÷				
	ID		Switch Port(s) It Connects To		
	101	* *	1/36		
		UPDATE	CANCEL		
				ra switch interferen	
				e switch interfaces	
			<u> </u>		
				SAVE	CANCEL

更新、所有字段、保存一次并提交。此时,您应该看到FEX从交换机CLI联机。如果映像不同,它 将从枝叶下载正确的映像。

fab1-leaf1# show fex detail
FEX: 101 Description: FEX0101 state: Online
FEX version: 11.1(10) [Switch version: 11.1(10)]
FEX Interim version: 11.1(10)
Switch Interim version: 11.1(10)
Extender Model: N2K-C2232PP-10GE, Extender Serial: SSI1350063T
Part No: 68-3547-03
Card Id: 82, Mac Addr: 00:0d:ec:fa:4b, Num Macs: 75
Module Sw Gen: 22 [Switch Sw Gen: 21]
pinning-mode: static Max-links: 1
Fabric port for control traffic: Eth1/36
Fabric interface state:
Eth1/36 - Interface Up. State: Active
Po5 - Interface Up. State: Active
对第二台FEX和枝叶交换机重复相同的过程。

NOTE: 查看连接到FEX的枝叶端口通道或物理接口时,您会看到"输入丢弃"递增。 这是正常的,应 忽略。 由于链路层控制数据包的Broadcom ASIC(第1代Nexus 9000交换机)的限制,引发输入丢 弃。 在正常操作下,您将看到输入丢弃,因此可能希望禁用这些接口的监控。

### 在FEX上配置主机接口

将每个FEX上的主机接口配置为位于vPC中有两种方法。

1)将接口添加到每个FEX配置文件,并将其映射到同一vPC策略组。

2)分配两个FEX的相同FEX配置文件并添加接入端口选择器。

完成向导后,您将看到每个FEX的"FEX"配置文件和"接口选择器"。

"FEX配置文件"是FEX也将关联的配置文件。 FEX配置文件类似于将接口链接到FEX的"交换机配置 文件"。

接口选择器是为连接到FEX的枝叶接口创建的策略。

### 选项1:将接口添加到每个FEX配置文件,并将其映射到同一vPC策略组。

导航至交换矩阵>访问策略>接口策略>配置文件,然后点击FEX 101的FEX配置文件。右键点击并选 择"创建访问端口选择器"。 在本例中,主机已插入两个FEX的端口10。

命名选择器,输入要将接口映射到的接口ID和vPC策略组:

## Create Access Port Selector

Specify the selector identity		
Name:	1-10	
Description:	optional	
Interface IDs:	1/10 valid values: All or Ranges. For Example: 1/13,1/15 or 1/22-24	
Interface Policy Group:	FEX-vPC 💙 🗗	

对枝叶102接口选择器完成相同操作,并确保使用接口策略组,以便将两者捆绑到vPC中。

然后,您可以通过从枝叶CLI运行命令"show port-channel summary"和"show vpc brief"来验证两台 交换机上的接口是否都捆绑在一起。每台交换机可能都有自己的PC编号,但它们应映射回相同的

### vPC ID:

#### fab1-leaf1# show port-channel summary

Flags	: D - Down	P - Up in port-channel (members)
	I - Individual	H - Hot-standby (LACP only)
	s - Suspended	r - Module-removed
	S - Switched	R - Routed
	U - Up (port-ch	annel)
	M - Not in use.	Min-links not met
	F - Configurati	on failed
Group	Port- Type	Protocol Member Ports
	Channel	

7	Po7 (SU)	Eth	NONE	Eth101/1/10(P)
6	Po6(SU)	Eth	NONE	Eth1/36(P)
5	Po5(SU)	Eth	LACP	Ethl/4(P)
3	Po3(SD)	Eth	NONE	Eth1/48(D)
2	Po2(SU)	Eth	LACP	Eth1/17(P)
1	Pol(SU)	Eth	LACP	Eth1/16(P)

### fab1-leaf3# show port-channel summarv

Labi	lears# show	por c-chai	mer summar	¥
Flags	: D - Down	P	- Up in po	rt-channel (members)
	I - Indiv	idual H	- Hot-stan	dby (LACP only)
	s - Suspe	nded r	- Module-r	emoved
	S - Switc	hed R	- Routed	
	U – Up (p	ort-chann	nel)	
	M - Not i	n use. Mi	n-links no	t met
	F - Confi	guration	failed	
Group	Port-	Туре	Protocol	Member Ports
	Channel			
1	Pol(SU)	Eth	LACP	Eth1/4(P)
2	Po2(SU)	Eth	LACP	Eth1/17(P)
3	Po3(SU)	Eth	LACP	Eth1/16(P)
4	Po4(SD)	Eth	NONE	Eth1/48(D)
6	Po6(SU)	Eth	NONE	Eth1/36(P)
7	Po7 (SU)	Eth	NONE	Eth102/1/10(P)

## fab1-leaf1# show vpc brief

#### Legend:

(\*) - local vPC is down, forwarding via vPC peer-link

: 13
: peer adjacency formed ok
: Disabled
: success
: success
: success
: primary
: 5
: Disabled
: -
: Enabled
: Enabled (timeout = 240 seconds)
: Disabled

vPC Peer-link status

\_ \_

id	Port	Status Active vlans

---- -----

1 up vPC status \_\_\_\_\_ id Port Status Consistency Reason Active vlans ----- ------ ------\_ \_ \_\_\_\_ \_\_\_\_\_ success 2 Po7 success up fab1-leaf3# show vpc brief Legend: (\*) - local vPC is down, forwarding via vPC peer-link vPC domain id : 13 Peer status : peer adjacency formed ok vPC keep-alive status : Disabled Configuration consistency status : success : success Per-vlan consistency status : success Type-2 consistency status vPC role : secondary Number of vPCs configured : 5 Peer Gateway : Disabled Dual-active excluded VLANs : -Graceful Consistency Check : Enabled : Enabled (timeout = 240 seconds) Auto-recovery status : Disabled Operational Layer3 Peer vPC Peer-link status \_\_\_\_\_ Port Status Active vlans id \_\_\_\_\_ \_\_\_\_\_ 1 up \_ vPC status \_\_\_\_\_ id Port Status Consistency Reason Active vlans -- ---- ------ ------\_\_\_\_\_ 2 Po7 up success success

### 选项2:分配两个FEX的同一FEX配置文件并添加接入端口选择器。

如果配置多台vPC,则进入每个FEX配置文件并添加接口的配置会变得繁琐。为简化配置,您可以 分配多个FEX的同一FEX配置文件,然后使用该配置文件在每个FEX上部署接入端口。

为此,请导航至交换矩阵>访问策略>接口策略>配置文件,右键单击并选择"创建FEX配置文件"。 将其命名并点击提交:

## **Create FEX Profile**

Specify the profile Identity			
Name:	101-102		
Description:	optional		
FEX Access Interface Selectors:			
TEX Access Intenace Selectors.	Name	Type	
		.,,-	

既然我们定义了FEX配置文件,我们需要将FEX 101和102映射到此唯一配置文件。 如果展开 FEX接口选择器,您将看到从下拉列表中选择FEX配置文件的位置,确保选择创建的配置文件(本 例中为101-102):

Policies 🧧 💽	Access Port Selector - FexCard101
Cuick Start	
H Switch Policies	
🕂 💼 Module Policies	
Interface Policies	
+ Policies	PROPERTIES
+ Policy Groups	Name: FexCard101
Profiles	Description: optional
+ 📃 101-102	
- EX101_FexP101	
FEX Policy Group	Type: range
ExBndleP101	Policy Group: 101-102 🗸 🖓 🗸
EX101_ifselector	
ExCard101	
- 1 FEX102_FexP102	Port Blocks: 🔛 🔛
FEX Policy Group	INTERFACES
ExBndleP102	1/26
- EX102_ifselector	1/30
ExCard102	

对FEX 102接口选择器重复相同的步骤。

然后,我们可以将接入端口块添加到"101-102" FEX配置文件,以同时在两个FEX上部署这些接口。

右键点击"101-102" FEX配置文件并选择"创建接入端口选择器"。 将其命名,然后选择接口和策略组 ,如上部分所示:

# **Create Access Port Selector**

Specify the selector identity		
Name:	1-10	
Description:	optional	
Interface IDs:	1/10	
	valid values: All or Ranges. For Example: 1/13,1/15 or 1/22-24	
Interface Policy Group:	FEX-vPC 💙 🗗	

然后,您可以通过从枝叶CLI运行命令"show port-channel summary"和"show vpc brief"来验证两台 交换机上的接口是否都捆绑在一起。每台交换机可能都有自己的PC编号,但它们应映射回相同的 vPC ID:

fab1-1	fab1-leaf1# show port-channel summary						
Flags: D - Down P - Up in port-channel (members)							
I - Individual H - Hot-standby (LACP only)							
	s - Suspended r - Module-removed						
	S - Switched R - Routed						
	U - Up (p	port-chann	el)				
	M - Not i	in use. Mi	n-links no	t met			
	F - Confi	iguration	failed				
Group	Port- Channel	Туре	Protocol	Member Ports			
1	Pol(SU)	Eth	LACP	Eth1/16(P)			
2	Po2(SU)	Eth	LACP	Eth1/17(P)			
3	Po3(SD)	Eth	NONE	Eth1/48(D)			
5	Po5(SU)	Eth	LACP	Eth1/4(P)			
б	Po6(SU)	Eth	NONE	Eth1/36(P)			
7	Po7 (SU)	Eth	NONE	Eth101/1/10(P)			
fab1-1	leaf3# show	port-chan	nel summar	y			
Flags	: D - Down	P	- Up in po	- rt-channel (members)			
	I - Indiv	/idual H	- Hot-stan	dby (LACP only)			
	s - Suspe	ended r	- Module-r	emoved			
	S - Swite	ched R	- Routed				
	ı) qU - U	port-chann	el)				
	M - Not	in use. Mi	n-links no	t met			
	F - Confi	iguration	failed				
Group	Group Port- Type Protocol Member Ports Channel						

1	Pol(SU)	Eth	LACP		Eth1/4(P)		
2	Po2(SU)	Eth	LACP		Eth1/17(P)		
3	Po3(SU)	Eth	LACP		Eth1/16(P)		
4	Po4(SD)	Eth	NONE		Eth1/48(D)		
6	Po6(SU)	Eth	NONE		Eth1/36(P)		
7	Po7 (SU)	Eth	NONE		Eth102/1/10(P)		
fab1-	-leaf1# show	w vpc brief					
Leger	Legend:						
(*) -	- local vPC	is down, f	orwardin	ıg	via vPC peer-link		
vPC c	domain id			:	13		
Peer status				:	peer adjacency formed ok		
vPC keep-alive status				:	Disabled		
Configuration consistency status				:	success		
Per-vlan consistency status				:	success		

Type-2 consistency status	:	success
vPC role	:	primary
Number of vPCs configured	:	5
Peer Gateway	:	Disabled
Dual-active excluded VLANs	:	-
Graceful Consistency Check	:	Enabled
Auto-recovery status	:	Enabled (timeout = 240 seconds)
Operational Layer3 Peer	:	Disabled

vPC Peer-link status

id	Port	Status	Active vlans
1		up	-

#### vPC status

2	Po7	up	success	success	-
id	Port	Status	Consistency	Reason	Active vlans

#### fab1-leaf3# show vpc brief

Legend:

(\*) - local vPC is down, forwarding via vPC peer-link

: 13
: peer adjacency formed ok
: Disabled
: success
: success
: success
: secondary
: 5
: Disabled
: -
: Enabled
: Enabled (timeout = 240 seconds)
: Disabled

vPC Peer-link status

id	Port	Status	Active vlans
1		up	-

#### vPC status

\_\_\_\_\_

id	Port	Status	Consistency	Reason	Active	vlans
2	Po7	up	success	success	-	