

得到Firepower设备和Firepower服务模块的许可证密钥

Contents

[Introduction](#)

[得到许可证密钥](#)

[请使用FMC](#)

[请使用ASDM](#)

[Related Information](#)

Introduction


本文描述步骤得到一个经典许可证的许可证密钥从用户界面- FMC和ASDM。为了生成所有Firepower服务的一个经典许可证，许可证密钥是必要的。您能使用Firepower管理中心(FMC)或可适应安全设备管理器(ASDM)为了确定许可证密钥。

得到许可证密钥

请使用FMC

如果设备由Firepower管理中心管理，请遵从这些步骤为了查找许可证密钥：

1. 登陆对Firepower管理中心。
2. 选择系统>许可证>经典许可证。
Note:如果FMC早于6.x运行版本，请选择系统>许可证。
3. 点击添加新的许可证。
4. 从屏幕，请得到许可证密钥。

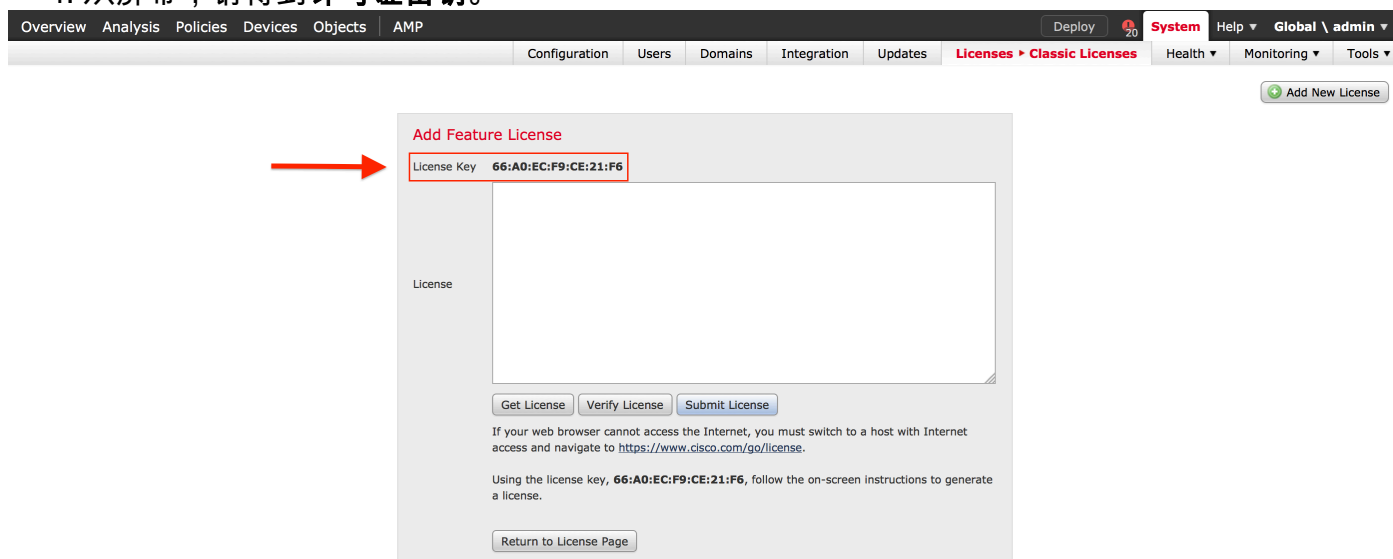


The screenshot shows the Cisco Firepower Management Center (FMC) interface. The top navigation bar includes 'Overview', 'Analysis', 'Policies', 'Devices', 'Objects', 'AMP', 'Deploy', 'System', 'Help', 'Global', and 'admin'. The main navigation bar includes 'Configuration', 'Users', 'Domains', 'Integration', 'Updates', 'Licenses > Classic Licenses', 'Health', 'Monitoring', and 'Tools'. A green button labeled 'Add New License' is visible in the top right corner. The main content area is titled 'Add Feature License'. It features a 'License Key' field with the value '66:A0:EC:F9:CE:21:F6', which is highlighted by a red box and a red arrow. Below the license key field is a large empty text area labeled 'License'. At the bottom of the form are three buttons: 'Get License', 'Verify License', and 'Submit License'. Below the buttons, there is a note: 'If your web browser cannot access the Internet, you must switch to a host with Internet access and navigate to <https://www.cisco.com/go/license>.' Below this note is another note: 'Using the license key, 66:A0:EC:F9:CE:21:F6, follow the on-screen instructions to generate a license.' At the very bottom of the form is a 'Return to License Page' button.


请使用ASDM

如果设备由ASDM管理，请完成这些步骤为了查找许可证密钥：

1. 选择位于在窗口顶部的配置选项。
2. 选择位于左窗格底部的ASA Firepower配置选项。
3. 从左窗格中选择许可证选项。

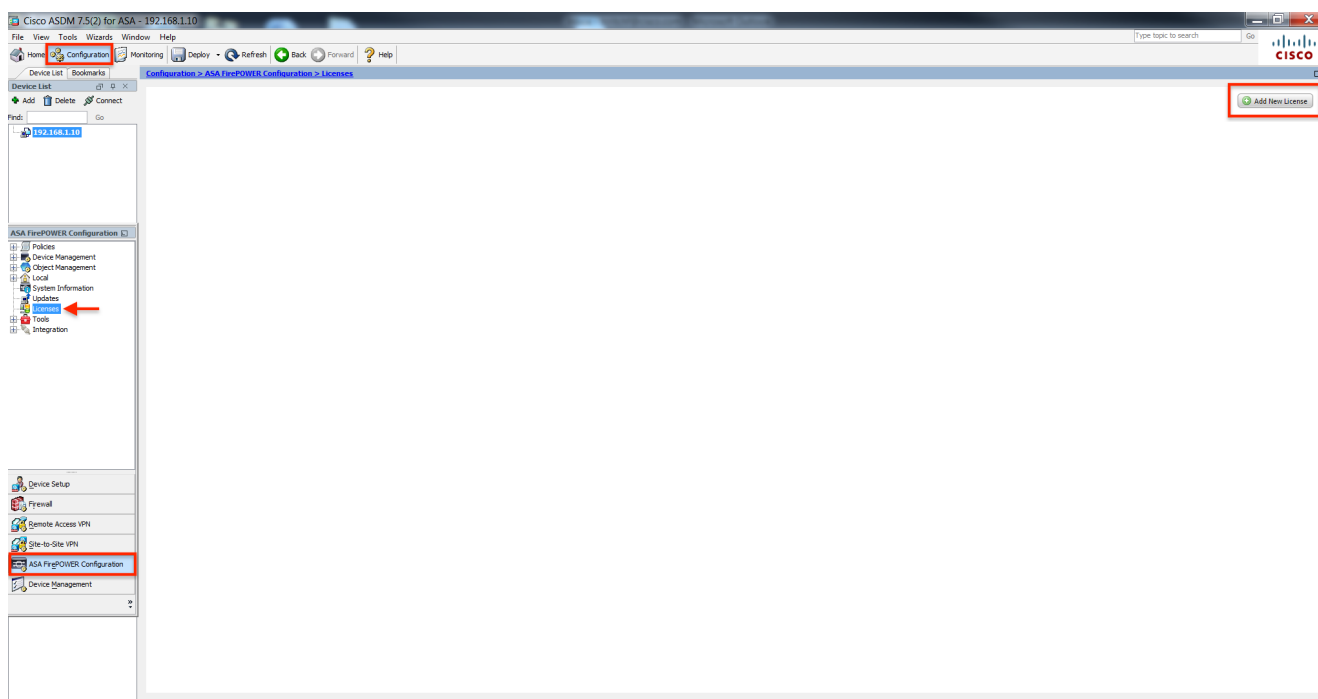

4. 点击添加新的许可证为了得到许可证密钥。

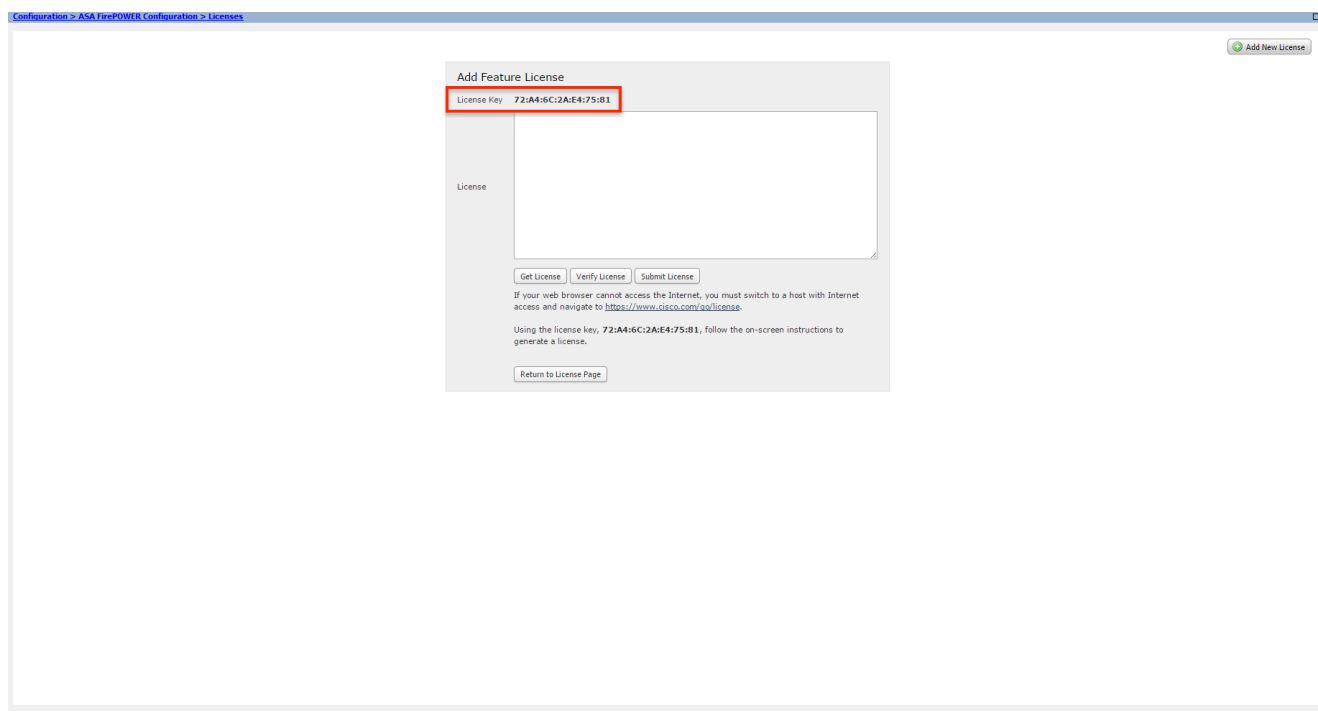

Related Information

- [Firepower快速入门指南](#)
- [准许FireSIGHT系统](#)

- [Technical Support & Documentation - Cisco Systems](#)