

在RV180和RV180W的固件升级使用Web接口

目标

此条款说明如何升级在RV180和RV180W路由器的固件。使用最新的固件帮助调整Bug和其他断断续续问题在路由器。

可适用的设备|固件


- RV180|([下载最新的固件](#))
- RV180W|([下载最新的固件](#))

先决条件

1. 下载固件新版本使用上面提供的链接。默认情况下，文件将进入您的计算机您的下载文件夹。如果它是.zip文件，请解压缩文件。
2. 登录路由器的图形用户界面(GUI)。如果需要与此步骤的援助，请检查[访问Cisco企业VPN路由器GUI](#)。


步骤步骤

第 1 步：请使用路由器配置工具选择Administration > 固件升级。固件升级页打开。

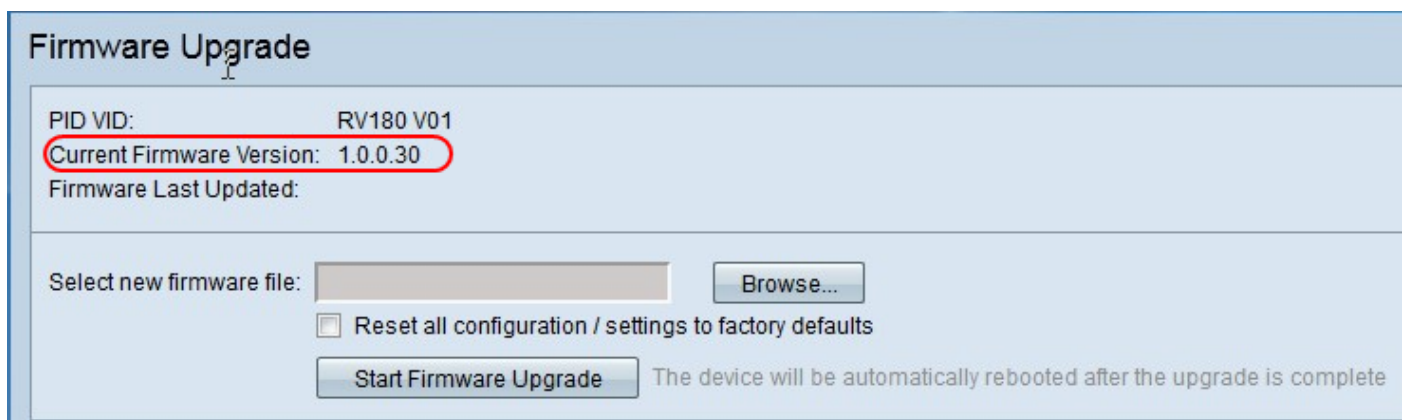

The screenshot shows the 'Firmware Upgrade' web interface. At the top, it says 'Firmware Upgrade'. Below that, it displays 'PID VID: RV180 V01' and 'Current Firmware Version: 1.0.0.30'. The 'Current Firmware Version' text is circled in red. Below this, there is a 'Firmware Last Updated:' field. Further down, there is a 'Select new firmware file:' label followed by a text input field and a 'Browse...' button. Below the input field, there is a checkbox labeled 'Reset all configuration / settings to factory defaults'. At the bottom, there is a 'Start Firmware Upgrade' button and a note: 'The device will be automatically rebooted after the upgrade is complete'.

Step 2.在固件升级页，请选择浏览...并且选择您下载的固件文件。

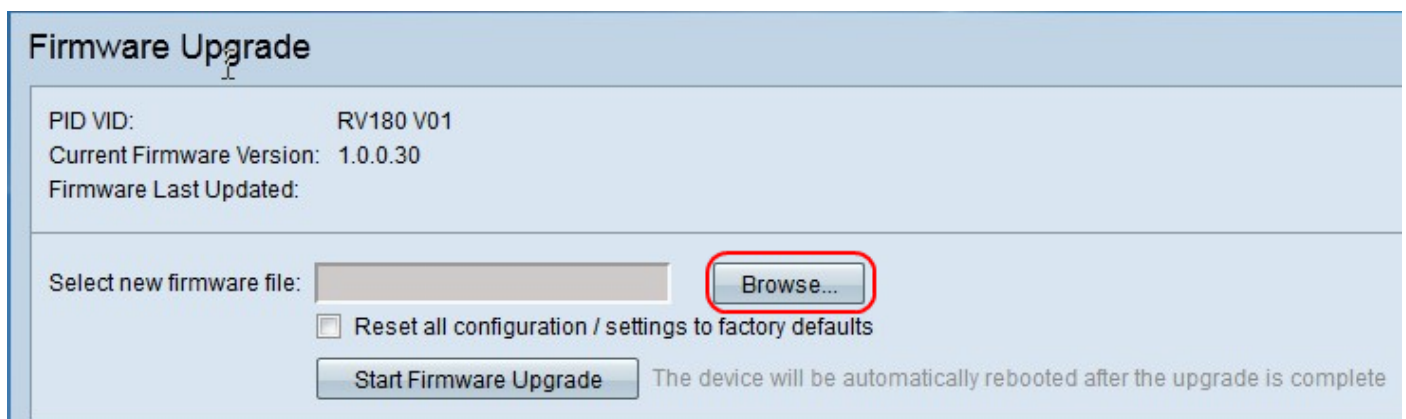

This screenshot is identical to the previous one, but the 'Browse...' button is circled in red to indicate the next step in the process.

步骤3.点击启动固件升级开始。请勿在升级进程中重置或停电设备。

Firmware Upgrade

PID VID: RV180 V01
Current Firmware Version: 1.0.0.30
Firmware Last Updated:

Select new firmware file:

Browse...

Reset all configuration / settings to factory defaults

Start Firmware Upgrade

The device will be automatically rebooted after the upgrade is complete

欲知更多信息，包括对所有文档的链路您的系列路由器的，请点击下面适当的链路：

- [RV180产品网页](#)
- [RV180W产品网页](#)