

配置在RV180的HTTPS访问

客观


本文如何解释对在Cisco RV180/RV180W的LAN接口的enable (event) HTTPS访问。 如果用户连接PC到局域网端口，使用安全连接， Web访问然后允许。

可适用的设备

•RV180

HTTPS访问的配置

第1.In步RV180的配置工具，点击对Administration>Management接口> Web访问。

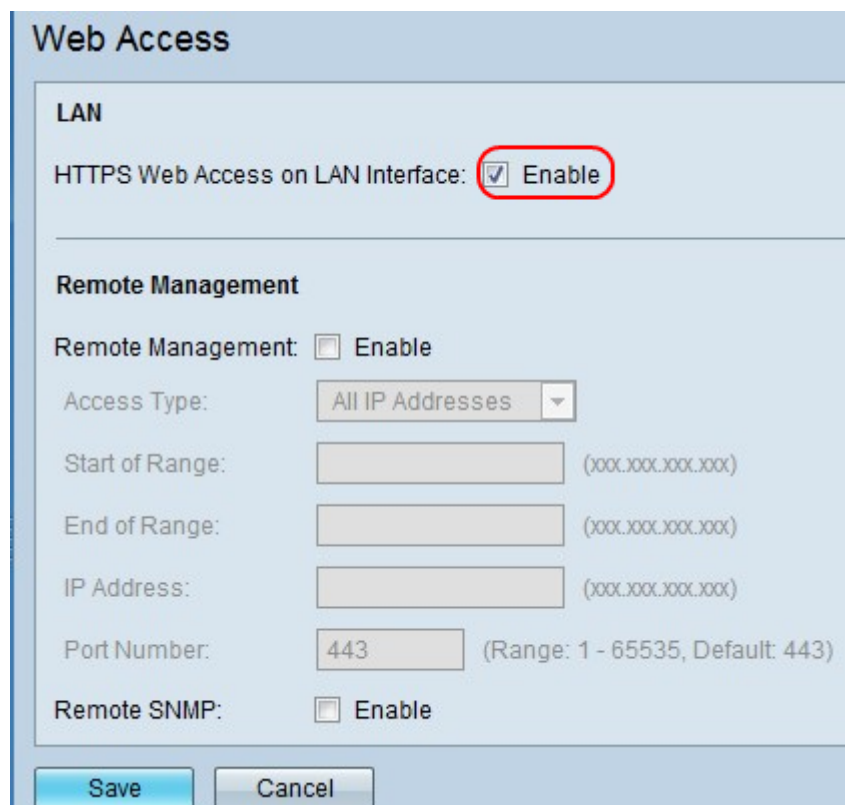

The screenshot shows the 'Web Access' configuration window. Under the 'LAN' section, the 'HTTPS Web Access on LAN Interface' checkbox is checked and circled in red. Below this, the 'Remote Management' section is visible, with 'Remote Management' unchecked. The 'Access Type' is set to 'All IP Addresses'. The 'Start of Range', 'End of Range', and 'IP Address' fields are empty. The 'Port Number' is set to 443. The 'Remote SNMP' checkbox is also unchecked. At the bottom, there are 'Save' and 'Cancel' buttons.

Step 2. 在LAN接口的HTTPS Web访问下，请检查Enable (event)强制执行在LAN接口的HTTPS Web访问。

步骤3.点击“Save”保存配置。