在WAP571或WAP571E上配置单点设置

目标

单点设置(SPS)是一种简单的多设备管理技术,允许您部署和管理支持此功能的一组接入点。此设 置提供了从单个点配置集群接入点的便利性,而不是单独配置。它还允许您在本地或远程管理接入 点。

本文将指导您如何在接入点上配置单点设置。

适用设备

•WAP500系列—WAP571、WAP571E

软件版本

• 1.0.0.15 - WAP571、WAP571E

配置单点设置

配置单点设置之前

规划单点设置集群。确保要集群的接入点彼此兼容。例如,WAP551只能配置另一个 WAP551或WAP561。WAP571E只能与另一个WAP571E集群。

确保要集群的接入点具有最新固件。

设置将集群到同一IP子网的接入点。

检验接入点是否互连并可通过网络访问。

确保在接入点上启用单点设置。

验证接入点是否具有相同的单点设置名称。

配置单点设置

步骤1.登录需要配置的接入点的基于Web的实用程序。

步骤2.单击"单点设置">"接入点"。



注意:默认情况下,WAP上禁用单点设置。仅当功能禁用时,您才可编辑单点设置设置。

步骤3.(可选)在Location字段中指定接入点的位置。

Access Points					
Single Point Setup allows WAP571E-H-K9 access points to propagate settings. Single Point Setup: Disabled	Not Clustered				
To enable clustering, complete the following fields and click "Enable Single Point Setup".	Access Points				
Location: Cluster 1 (Range: 1 - 64 Characters)					
Enter the name of the cluster for this AP to join.					
Cluster Name: Outdoors (Range: 1 - 64 Characters) Clustering IP Version: IPv6 IPv6					
Cluster-Priority: 0 (Range: 0 - 255, Default: 0)					
Enable Single Point Setup					
Single IP Management					
Cluster Management Address: 192.168.1.101 (X.X.X.X)					
Save					

注意:页面右侧的图标指示是否启用了单点设置,如果启用了,还指示当前加入集群的WAP数量。

步骤4.在Cluster Name字段中输入集群名称。

Access Points	
Single Point Setup allows WAP571E-H-K9 access points to propagate settings. Single Point Setup: Disabled	Not Clustered
To enable clustering, complete the following fields and click "Enable Single Point Setup".	Access 2
Enter the location of this AP.	
Location: Cluster 1 (Range: 1 - 64 Characters)	
Enter the name of the cluster for this AP to join. Cluster Name: Outdoors Clustering IP Version: IPv6 IPv4 Cluster-Priority: 0	
Enable Single Point Setup	
Single IP Management	
Cluster Management Address: 192.168.1.101 (X.X.X.X)	
Save	

步骤5.单击"集群IP版本"下的相应选项,选择IP版本。

Access Points					
Single Point Setup allo	Not Clustered				
To enable clustering, c	0 Access				
Enter the location of th	is AP.	Points			
Location:	Cluster 1 (Range: 1 - 64 Characters)				
Enter the name of the	cluster for this AP to join.				
Cluster Name:	Outdoors (Range: 1 - 64 Characters)				
Clustering IP Version:	O IPv6 IPv4				
Cluster-Priority:	0 (Range: 0 - 255, Default: 0)				
Enable Single Point Setup					
Single IP Management					
Cluster Management Address: 192.168.1.101 (X.X.X.X)					
Save					

步骤6.单击Enable Single Point Setup。

Access Points						
Single Point Setup allo	ttings. Not Clustered					
Single Point Setup: Dis	0					
To enable clustering, c	omplete the following fields and click "Enable Sing	le Point Setup". Access				
Enter the location of th	is AP.	1 Onto				
Location:	Cluster 1 (Range: 1 - 64	Characters)				
Enter the name of the	cluster for this AP to join.					
Cluster Name:	Outdoors (Range: 1 - 64	Characters)				
Clustering IP Version:	IPv6 IPv4					
Cluster-Priority:	0 (Range: 0 - 255, Default: 0)					
Enable Single Point Setup						
Single IP Management						
Cluster Management Address: 192.168.1.101 (X.X.X.X)						
Save						

WAP开始搜索子网中配置了相同集群名称和IP版本的其他WAP。在搜索其他集群成员时,状态表示 正在应用配置。

步骤7.刷新页面,直到您看到新配置。现在Access Points页面显示一个表,其中显示当前在集群中 检测到的接入点的位置、MAC地址和IP地址。

步骤8.指定集群管理地址。您可以访问此地址来配置集群中的设备。

步骤9.单击"保**存"。**

步骤10.对要加入单点设置的其他WAP重复步骤1-6。如果您的其他WAP配置了相同的集群设置 ,WAP将加入集群,新成员的信息将显示在表中。确保在完成后*刷新*"接入点"页,以查看最新的配 置。或者,您也可以在其他WAP上运行设置向导。

注意:单点设置集群中的所有WAP现在将共享相同的设备配置。对集群中任何WAP上设备设置的更 改都将传播到成员。

步骤11.(可选)如果您不再希望WAP与集群中的其他设备共享配置,只需单击禁用单点设置将其 从集群中**删除即可。**

Access Points					
Single Point Setup allow	Single Point Setup allows WAP571-I-K9 access points to propagate settings.				
Single Point Setup: Enab Access Points detected i	oled in Cluster: Lobby-cluster				1 58
Location	MAC Address	IP Address	Cluster-Priority	Cluster-Controller	Points
Lobby	00:41:D2:A0:FA:20	192.168.1.101	0	Yes	
To change your clustering options, click "Disable Single Point Setup". Enter the location of this AP. Location: Lobby (Range: 1 - 64 Characters) Enter the name of the cluster for this AP to join. Cluster Name: Lobby-cluster (Range: 1 - 64 Characters) Clustering IP Version: Prv6 (Pv4 Cluster-Priority: 0 (Range: 0 - 255, Default: 0) Disable Single Point Setup					
Single IP Management					
Cluster Management Address: 192.168.1.101 (X.X.X.X)					
Save					

现在,您应该已经在无线接入点上成功配置了单点设置。