

# 访问SPA3000的交互语音应答菜单

---

## 目录

### [简介](#)

[如何能访问SPA3000交互语音应答 \(IVR\) 菜单?](#)

### [相关信息](#)

## 简介

本文是一系列协助设置、排错和维护Cisco小型企业产品(以前Linksys企业系列)文档中的一篇。

### Q. [如何能访问SPA3000交互语音应答 \(IVR\) 菜单?](#)

#### A.

访问您需要按星号(\*)在模拟电话的四次附加对SPA3000 SPA3000的IVR菜单。

下面IVR菜单列表:

IVR Action	IVR Menu Choice	Parameter(s)	Notes
Enter IVR Menu	* * * *	None	Ignore SIT or other tones until you hear, "Sipura configuration menu. Please enter the option followed by the pound key or hang-up to exit."
Exit IVR Menu	3948	None	
Check DHCP	100	None	The IVR will announce if DHCP is enabled or disabled.
Enable/Disable DHCP	101	Enter "1" to enable Enter "0" to disable	Requires a Password.
Check IP Address	110	None	The IVR will announce the current IP address of SPA.
Set Static IP Address	111	Enter the IP address using numbers on the telephone key pad. Use the asterisk (*) key when entering a decimal point.	DHCP must be "Disabled" otherwise you will hear, "Invalid Option," if you set this value. <b>Requires a Password.</b>
Check Network Mask	120	None	The IVR will announce the current network mask of SPA.
Set Network Mask	121	Enter value using numbers on the telephone key pad. Use the asterisk (*) key when entering a decimal point.	DHCP must be "Disabled" otherwise you will hear, "Invalid Option," if you set this value. <b>Requires a Password.</b>
Check Static Gateway IP Address	130	None	The IVR will announce the current gateway IP address of SPA.
Set Static Gateway IP Address	131	Enter IP address using numbers on the telephone key pad. Use the asterisk (*) key when entering a decimal point.	DHCP must be "Disabled" otherwise you will hear, "Invalid Option," if you set this value. <b>Requires a Password.</b>
Check MAC Address	140	None	The IVR will announce the MAC address of SPA in a hex string format.
Check Firmware Version	150	None	The IVR will announce the version of the firmware running on the SPA.
Check Primary DNS Server Setting	160	None	The IVR will announce the current setting in the <b>Primary DNS</b> field.
Set Primary DNS Server	161	Enter IP address using numbers on the telephone key pad. Use the asterisk (*) key when entering a decimal point.	<b>Requires a Password.</b>
Check SPA's <a href="#">Web Server Port</a>	170	None	The IVR will announce the port that the web server is listening to. The default port is 80.
Enable/Disable Web Server of SPA	7932	Enter "1" to enable Enter "0" to disable	<b>Requires a Password.</b>
Manual Reboot of Unit	732668	None	After hearing "Option Successful," hang-up. The unit will reboot automatically.

**注意：**如果管理员密码没有设置或用户允许更改它，项目标记用要求密码不会要求密码。

## **相关信息**

- [技术支持和文档 - Cisco Systems](#)