

# CER IP地址崔凡吉莱

## 目录

[简介](#)

[CER IP更改](#)

## 简介

本文描述如何更改思科紧急响应(CER)的IP地址。

## CER IP更改



**注意：**在本例中，CER版本8.6.1安装，域名系统(DNS)配置不是存在(IP在DNS没有注册)，并且CER IP地址从14.128.60.213更改到14.128.60.212。

为了更改CER IP地址，请完成这些步骤：


1. 请使用CER管理GUI，并且导航对**System > Server**设置。



- 2.
3. 更改服务器名对新的IP地址。

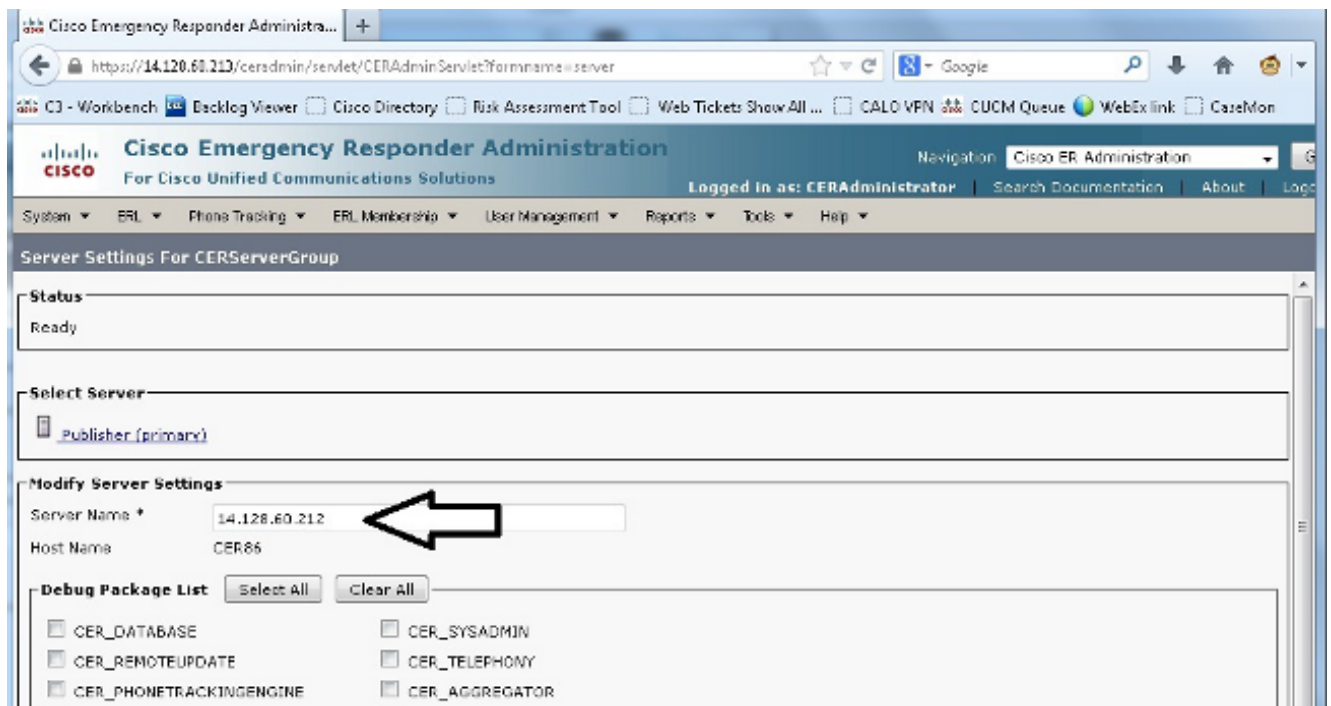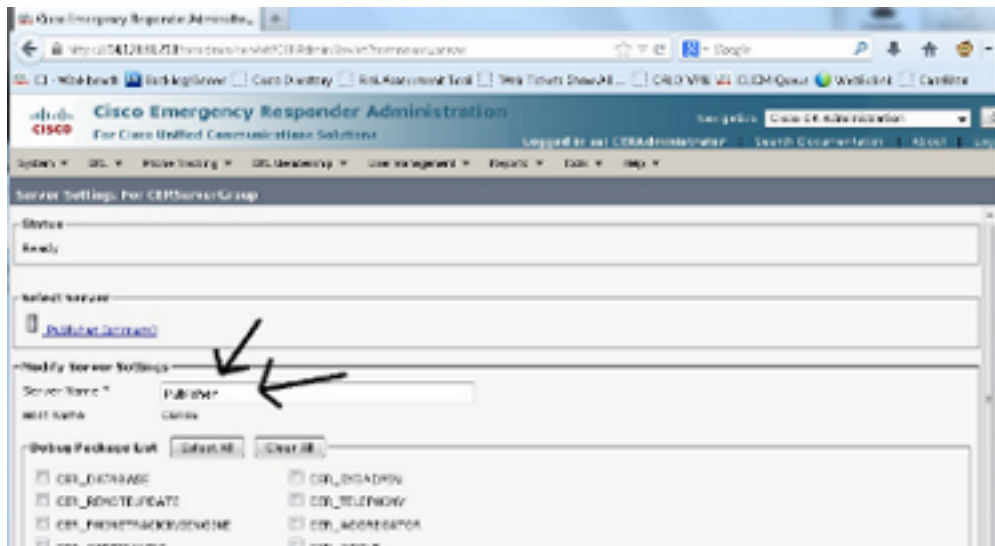


- 4.
5. 新的IP地址在三个地方显示，一旦服务器名更新，并且页刷新：

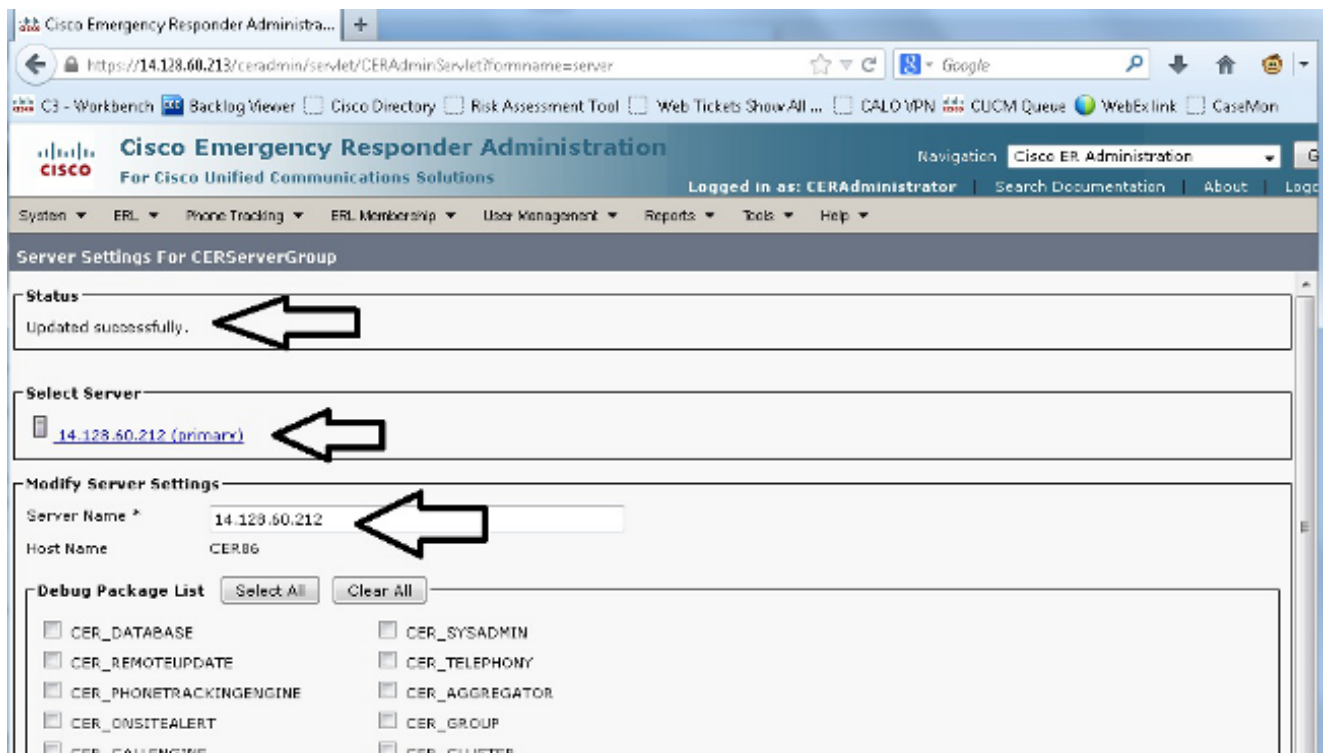

6.

7. 对CER的安全壳SSH作为admin：并且请做对网关的变动有使用的CLI。

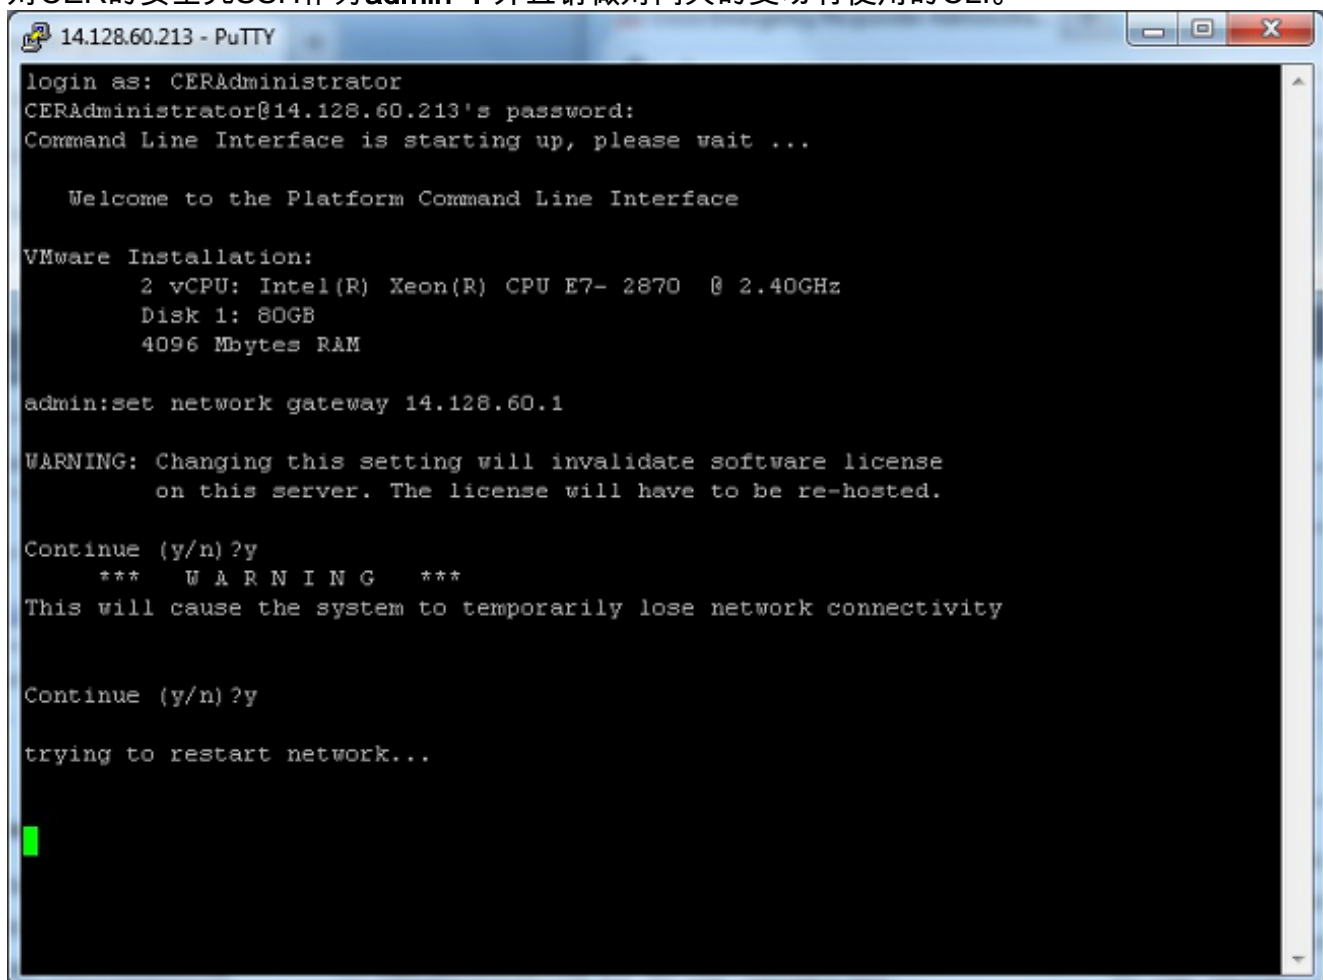

等待admin：返回的提示符，在您继续前。

8.

9. 更改IP地址和子网信息：

```
14.128.60.213 - PuTTY
admin:
admin:
admin:
admin:
admin:
admin:set network ip eth0 14.128.60.212 255.255.255.0

WARNING: Changing this setting will invalidate software license
         on this server. The license will have to be re-hosted.

Continue (y/n)?y
          ***  W A R N I N G  ***
If there are IP addresses (not hostnames)
configured in Cisco Unified CM Administration
under System -> Servers
then you must change the IP address there BEFORE
changing it here or call processing will fail.

This will cause the system to restart

=====
Note: To recognize the new IP address all nodes within
      the cluster will have to be manually rebooted.
=====

Continue (y/n)?y

trying to restart system...

Warning: Restart could take up to 5 minutes...

Shutting down Service Manager. Please wait...
Service Manager shutting down services... Please Wait
```

在重新启动进程完成后，需要所有的15到20分钟服务适当地来的联机和工作。