安装和使用Fluidmesh (FM)显示器

目录

<u>简介</u>		
<u>背景信息</u>		
<u>先决条件</u>		
<u>安装和运行Docker容器</u>		
<u>访问Web UI</u>		
<u>数据监控</u>		
<u>许可证激活</u>		

简介

本文档介绍Cisco FM Monitor及其在Ubuntu服务器上的安装。

背景信息

Cisco FM Monitor是一种网络范围的本地监控工具,允许任何<u>思科超可靠无线回程</u>(URWB)用户主动 维护和监控一个或多个无线运营技术(OT)网络。它会实时显示网络中每台Cisco URWB设备的数据 和情景警报。该工具是基于虚拟图像的诊断和分析界面,该虚拟图像以Docker格式提供。

先决条件

◎ CURWB设备固件:

CURWB硬件必须采用更新的固件版本,才能与FM监控器工具兼容。请参阅最新的配置 指南,确定特定FM显示器和CURWB固件版本之间的兼容性。 要升级Fluidmesh设备固 件,请参阅特定硬件类型的CURWB安装和配置指南的"覆盖和升级设备固件"部分。

∘ 服务器:

要运行应用的Docker容器,您需要具有这些规格的专用服务器。

Operating system	Windows 7 or later	Mac OS X 10.9.x or later	Linux (32-bit or 64-bit): • Ubuntu 14.04 or later • Debian 9 or later • OpenSuSE 14.2 or later • Fedora Linux 19 or later
Docker application	Yes	Yes	Yes
Base system	Virtual machine or bare metal	Virtual machine or bare metal	Virtual machine or bare metal
Processor	Intel Core i7 or Xeon (any frequency, mandatory minimum of four cores)	Intel Core i7 or Xeon (any frequency, mandatory minimum of four cores)	Intel Core i7 or Xeon (any frequency, mandatory minimum of four cores)
RAM	16 GB minimum	16 GB minimum	16 GB minimum
Hard disk	100 GB minimum* 1 TB or greater recommended	100 GB minimum* 1 TB or greater recommended	100 GB minimum* 1 TB or greater recommended
High-speed connection to local networks and radio transceiver units	Preferred	Preferred	Preferred
Screen resolution	1024x768 minimum	1024x768 minimum	1024x768 minimum

最低服务器规格

。支持的 Web 浏览器:

Mozilla Firefox Google Chrome Microsoft Internet Explorer Microsoft Edge Apple Safari

◎ 软件插件

监控传统CURWB硬件需要软件插件,而对于IW硬件,则不需要插件。

Docker :

在服务器上安装Docker时,必须确保服务器支持虚拟化和二级地址转换(SLAT)。Intel版 本的SLAT称为EPT(扩展页表)。"

安装和运行Docker容器

- 在本文档中,我们主要介绍在初始设置期间连接到互联网的Ubuntu服务器上的安装。
- 登录software.cisco.com并将最新的监控映像文件下载到您的服务器。
- 下一步是为服务器安装docker引擎。有关详细信息,请参阅<u>Docker文档</u>,但基本步骤如下:
 运行此命令可卸载所有冲突的包:

for pkg in docker.io docker-doc docker-compose docker-compose-v2 podman-docker containerd runc; do sudo

- 设置Docker apt存储库。
- > sudo apt-get update
- > sudo apt-get install ca-certificates curl
- > sudo install -m 0755 -d /etc/apt/keyrings
- > sudo curl -fsSL https://download.docker.com/linux/ubuntu/gpg -o /etc/apt/keyrings/docker.asc
- > sudo chmod a+r /etc/apt/keyrings/docker.asc
- > echo \setminus

"deb [arch=\$(dpkg --print-architecture) signed-by=/etc/apt/keyrings/docker.asc] https://download.dock

\$(. /etc/os-release && echo "\$VERSION_CODENAME") stable" | \

sudo tee /etc/apt/sources.list.d/docker.list > /dev/null

> sudo apt-get update

• 安装Docker程序包

请运行此命令以安装最新的docker软件包:

sudo apt-get install docker-ce docker-ce-cli containerd.io docker-buildx-plugin docker-compose-plugin

• 通过运行hello-world映像,验证Docker引擎安装是否成功

sudo docker run hello-world

sudo docker images

fm-iw-moni	tor@fmiwmon	itor-virtual-mac	: <mark>hine:~</mark> \$ sudo do	ocker images
REPOSITORY	TAG	IMAGE ID	CREATED	SIZE
hello-worl	d latest	d2c94e258dcb	11 months ago	o 13.3kB

• 现在,已安装docker引擎,请使用以下命令将Cisco FM监视器映像加载到监视器服务器:

docker load -i fm-monitor-docker-v1.x.x.tar.

fm-iw-monitor	@fmiwmonitor	r-vir	tual-machine:~\$ sudo docker load -i '/home/fm-iw-mon	<pre>itor/Downloads/fm-monitor-docker-v2.0-rc2.0.tar.gz'</pre>
8cf5d74bcf68:	Loading lay	/er [>]	134.4MB/134.4MB
bce5b7b7ae9a:	Loading lay	/er [j	965.6MB/965.6MB
1d2e5de37b47:	Loading lay	/er [j	3.072kB/3.072kB
72a57e173486:	Loading lay	/er [j	26.11kB/26.11kB
eed00e336fdc:	Loading lay	/er [j	1.633MB/1.633MB
f43525ea70c4:	Loading lay	/er [j	17.67MB/17.67MB
54162be3e4b4:	Loading lay	/er [j	68.47MB/68.47MB
5f70bf18a086:	Loading lay	/er [j	1.024kB/1.024kB
ca58e150d27c:	Loading lay	/er [j	75.03MB/75.03MB
d78879eea568:	Loading lay	/er [j	5.632kB/5.632kB
e3d74964f28f:	Loading lay	/er [j	4.608kB/4.608kB
c6958528657a:	Loading lay	/er [j	5.12kB/5.12kB
145cbf33218d:	Loading lay	/er [j	6.144kB/6.144kB
0786591577bc:	Loading lay	/er [4.608kB/4.608kB
69c239009c34:	Loading lay	/er [41.47kB/41.47kB
Loaded image:	dockerhub.c	cisco	.com/fm-dev-artifactory-docker/monitor:v2.0-rc2.0	

• 再次运行此命令以确保其已加载。此外,请记下映像ID:

sudo docker images

fm-iw-monitor@fmiwmonitor-virtual-machine:~\$ sudo docker	- images			
REPOSITORY	TAG	IMAGE ID	CREATED	SIZE
dockerhub.cisco.com/fm-dev-artifactory-docker/monitor	v2.0-rc2.0	3e610b47c38b	5 weeks ago	1.25GB
hello-world	latest	d2c94e258dcb	11 months ago	13.3kB

• 通过执行以下步骤首次运行Docker容器:

sudo docker run -d --name fm_monitor -p 8080:8080 -p 8443:8443 --restart always X

(其中X是MONITOR Docker映像的映像ID值。)

访问Web UI

- 最后,从您选择的浏览器访问网页。从https://X:Y导航至URL,其中X是服务器的IP地址,Y是 配置的主机端口号。
- 现在,在首次安装期间,您需要通过输入您的姓名电邮和密码为FM-Monitor创建脱机帐户。
- 完成后,您可以开始将CURWB设备注册到FM-Monitor。确保服务器IP地址正确。

FM-IW-MONITOR-BETA			Actions X
Activities 🔮 Firefox Web Browser	Mar 27 23:35		≛ ♦ ७
🗈 👻 New Tab 🛛 🕹 🖉 Install Docker Engine on	× 📫 Cisco Ultra Reliable Wirel × +	~	- ø ×
← → C ○ A https://10.122.136.8:844	/wizard	☑ (ා එ ≡
MONITOR A Analyst State View Data Analyst	a, Trepology Log	© -1	altalta cisco
C 1. Welcome	2. Report 🗸 3. Complete		
Configure se	rver settings 10.122.136.8 8443		
Attach de	vices		
Enter one or more	P addresses separated by comma		
0.122.136.9 >	10.122.136.10 × 10.122.136.11 × p.g. 192.168.0.1, 192.168.0		
	Associate devices		
•••			

🜠 (3) IoT lab RTP L x 🔯 (3) RTP - IoT Lab x 🗰 Cisco URWB IW91 x 🚔 Cisco FM-QUADR(x 🚔 Cisco FM-QUADR(x 🗯 Cisco URWB IW91 x 🚔 Cisco URWB IW91 x	tta Cisco Ultra Reliabi x	+ •
← → C O Not Secure https://10.122.136.8:8443/wizard	* 🖲 D	0 🔺 i
🗅 Cisco 💿 V4.9.5.1000 - Rel 🔯 CURWB 🗯 Spaces Admin 🔗 Cisco Certified De 🛃 CART - Search/Re 🗅 Birds 🏥 Cisco Catalyst IW Cb. JSON Fixer Online W WireGuard - Wikip 🏥 IW9167E Heavy D 🤹	loT Learning Serie 🙆 Shift	>>
E MONITOR A X AX E E v2.0-e2.0 Dastbased Table View Data Analysis Topology Log	Ø	Cisco
Attach report *		
Devices: 3		
Q. Search Ta		
0 selected		
D Ne Status		
Ci If you're still having issues please contact support_fm@cisco.com		
3 Records Close (1 > >>		
Next		

• 将所有无线电添加到FM监视器后,您就可以在控制面板的主屏幕上看到所有无线电。

÷	MONITOR v2.0-rc2.0	Dashboard	o Table View	HTTT Data Analysis	Topology	Log							© -1	alialia cisco
	Real-time n	nonitoring												
	a En pe Se	able network rformance check ittings > Network	k in : KPL	URWB devices online	3 out of 3		1.17 Mbps Throughput TX	580 Kbps	412 Sent Packets/s	206 Received Packets/s	5.52 ms Average latency	0 Edge devices	100 % Average uptime	
	+ ADD	SECTION												
				You can cre	ate one or mor	re custor	m sections which will a	show information only	on those URWB devi	ices you decide to put i	nside them.			

• 表视图中还可以进一步详细查看添加到监控器的所有设备。

÷	MONITOR v2.0-rc2.0	Dashboard Table V	بیج New Data Analysis	Topology Log							Ø	-1	cisco
	Q Search	by Mesh ID, label or IP ad	(3)	Filter by status 🗌 • C	critical 🗌 • Warning	g 🗋 • Disco	nnected						
			_										
						Uncategorize	d (3)					^	
	Status	Label	IP Address	Mesh ID	FW version		Role	Frequency	TX Power	Channel width	More		
	MP	Cisco-137.250.80	10.122.136.10	5.137.250.80	17.13.0.109	R1 R2	Fluidity Infra Fixed Infra	5180 MHz 5745 MHz	17 dBm 20 dBm	20 MHz 20 MHz			
	ME	Cisco-137.250.148	10.122.136.9	5.137.250.148	17.13.0.109	R1 R2	Fluidity Infra Fixed Infra	5180 MHz 5745 MHz	17 dBm 20 dBm	20 MHz 20 MHz			
	MP	Cisco-246.2.120	10.122.136.11	5.246.2.120 P	17.13.0.109	R1 R2	Fluidity Vehicle Disabled	5180 MHz	22 dBm -	20 MHz			
	1 - 3					« « (]	> >>						

• 通过导航到设置>设备页面,可以从显示器中删除或添加这些设备。

÷	MONITOR v2.0-rc2.0	Dashboard	o Table View	Data Analysis	C) Topology	Log							Ø	-1	cisco
=	Database		« Device	es: 3								Server IP: 10.122.1	Settings 36.8 Po	rt 8443	0
~~	Statistics		Q s	Search Table	Add device:										
	Network KPI		O	Na	me		IP Address	Mesh ID	Mode	i i	Role		Status		
å	Account		0	Ci	sco-137.250.80		10.122.136.10	5.137.250.80	IW91	65DH-B	Fluidity Infra Fixed Infra		•		
	Account		0	Cit	sco=137.250.14	1	10.122.136.9	5.137.250.148	IW91	65DH-B	Fluidity Infra Fixed Infra		٠		
	Log		0	Ci	sco-246.2.120		10.122.136.11	5.246.2.120	IW91	67EH-B	Fluidity Vehicle Disabled		•		
٥	Devices														
t.	Upgrade														

 可以根据位置/功能将大量无线电进一步分组到更小的部分,以便从控制面板主页进行更轻松 的监控。

Info 🖗
3 selected units Cancel Confirm

Fluidity				Ec
	1.57 ms	3	100 %	
3 out of 3	Average latency	Edge devices	Average uptime	
	Last 6 hours trend		Last 7 days	

数据监控

可以实时监控连接,也可以查找历史数据,还可以分析连接以进行故障排除。要从无线电的角度查看性能,需要选择特定的无线电。



RSSI





许可证激活

您必须先从思科获取并输入激活许可证,然后才能使用FM监控器监控网络。您安装的激活许可证级 别决定了可监控的Fluidmesh无线电收发器设备的数量。其范围可以是5到5000个设备。

还提供演示许可证选项。如果激活,演示许可证将保持三个月有效。FM Monitor许可证升级允许您 从最初许可的数量中增加在单个许可证下可以监控的设备数量。

关于此翻译

思科采用人工翻译与机器翻译相结合的方式将此文档翻译成不同语言,希望全球的用户都能通过各 自的语言得到支持性的内容。

请注意:即使是最好的机器翻译,其准确度也不及专业翻译人员的水平。

Cisco Systems, Inc. 对于翻译的准确性不承担任何责任,并建议您总是参考英文原始文档(已提供 链接)。