# 使用RSM在Catalyst 5000上配置令牌環和乙太網 VLAN

```
目錄
```

 簡介

 必要條件

 需求

 採用元件

 慣例

 背景理論

 設定

 使用RSM為SRB配置令牌環,使用IP配置多環

 在同一台交換器上的乙太網路和權杖環VLAN之間通訊

 驗證

 疑難排解

 相關資訊

# <u>簡介</u>

本文探討如何在Catalyst 5000和路由交換模組(RSM)上設定權杖環交換。 具體而言,本文重點介紹 使用RSM的Catalyst 5000在來源路由橋接環境中路由IP的配置,以及涉及的步驟。還給出了通過 RSM在乙太網VLAN和令牌環VLAN之間進行通訊的配置示例。本檔案也討論一些最常用的**show**命 令。

# <u>必要條件</u>

## <u>需求</u>

思科建議您瞭解以下主題:

- 權杖環交換的概念,包括權杖環網橋中繼功能(TrBRF)和權杖環集中器中繼功能(TrCRF)。
- 如何配置和管理思科路由器和交換機。

### <u>採用元件</u>

本文中的資訊係根據以下軟體和硬體版本:

•搭載Supervisor Engine III軟體版本4.5(6)的Catalyst 5505,已安裝以下專案:含IBM功能集的 Cisco IOS®軟體版本12.1(2)的路由交換器模組帶軟體版本4.5(6)的乙太網刀片權杖環刀鋒軟體 版本3.3(2) 本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除(預設))的組態來啟動。如果您的網路正在作用,請確保您已瞭解任何指令可能造成的影響。

### <u>慣例</u>

如需文件慣例的詳細資訊,請參閱<u>思科技術提示慣例。</u>

## <u>背景理論</u>

與乙太網VLAN不同(一個VLAN實際上代表一個物理乙太網網段(例如廣播域),權杖環交換在每個 廣播域使用多個VLAN。中心概念是權杖環網橋中繼功能(TrBRF)VLAN。這個VLAN代表權杖環網路 中的橋接功能。在此TrBRF或網橋下,配置一個或多個令牌環集中器中繼功能(TrCRF)VLAN。這些 環類似於令牌環網路中的物理環。作為定義的一部分,必須為每個環分配一個唯一的環號。

不同TrCRF上的終端裝置可以通過TrBRF中的橋接功能相互通訊,而無需任何外部網橋或路由器。 一台交換機可以配置多個TrBRF VLAN,每個交換機都與其關聯的TrCRF VLAN相關聯。但是,對 於TrBRF之間的通訊,需要一個外部裝置,例如路由器。

TrBRF VLAN可通過兩種方式配置:作為透明網橋或作為源路由網橋。由於典型的權杖環交換器安裝在已使用來源路由橋接(SRB)的IBM商店中,TrBRF最常見的組態是作為來源路由橋接器。

權杖環VLAN(例如乙太網路VLAN)需要執行跨距樹狀目錄演演算法以避免回圈。但是,與乙太網 VLAN不同,它們需要運行兩個此例項,一個在TrBRF級別,另一個在TrCRF級別。

如果TrBRF充當透明網橋(設定相關TrCRF時為**模式srt**),則必須將其配置為在TrBRF級別運行 IEEE作為生成樹協定(**stp ieee**)。

如果TrBRF用作源路由網橋(設定相關TrCRF時為**模式srb**),則必須將其配置為在TrBRF級別運行 IBM作為生成樹協定(**stp ibm**)。

在TrCRF級別運行的生成樹協定將根據橋接模式自動選擇。如果橋接模式為SRB(例如,TrBRF正 在運行IBM生成樹協定),則IEEE生成樹協定在TrCRF級別運行。如果橋接模式為透明橋接(例如 ,TrBRF已在運行IEEE生成樹協定),則在TrCRF級別運行的生成樹協定為CISCO。

有關TrBRF和TrCRF概念的詳細資訊,請參閱<u>令牌環交換概念</u>。

## <u>設定</u>

本節提供用於設定本文件中所述功能的資訊。

註:使用Command Lookup Tool(僅限註冊客戶)查詢有關本文檔中使用的命令的更多資訊。

在配置任何令牌環VLAN之前,域中的所有令牌環交換機都必須運行VLAN中繼協定(VTP)V2。為了 避免現有VTP域的中斷,您應該使用以下命令將新新增的交換機配置為透明模式或客戶端模式:

set vtp domain cisco mode transparent V2 enable

有關VTP的詳細資訊,請參閱<u>配置VTP</u>。預設模式為**server**。

接下來,在交換機上設定TrBRF VLAN。在本示例中,有兩個獨立的TrBRF設定為源路由網橋,因 為這是最常見的配置型別。

在交換機上建立TrBRF VLAN。這是TrCRF VLAN的父級,該父級具有為其分配了連線終端裝置的埠。注意:由於您執行的是源路由橋接,因此生成樹協定設定為ibm。

set vlan 100 type trbrf name test\_brf bridge 0xf stp ibm set vlan 200 type trbrf name test\_brf2 bridge 0xf stp ibm

建立TrCRF VLAN。注意:模式設定為SRB,並且環編號可以輸入十六進位制或十進位制記法,如下一個示例所示。但是,當顯示配置時,交換機以十六進位制顯示這些配置。

set vlan 101 type trcrf name test\_crf101 ring 0x64 parent 100 mode srb
!--- All rings in hexadecimal. set vlan 102 type trcrf name test\_crf102 ring 0x65 parent
100 mode srb
set vlan 103 type trcrf name test\_crf103 ring 0x66 parent 100 mode srb
set vlan 201 type trcrf name test\_crf201 decring 201 parent 200 mode srb
!--- All rings in decimal. set vlan 202 type trcrf name test\_crf202 decring 202 parent 200
mode srb
set vlan 203 type trcrf name test\_crf203 decring 203 parent 200 mode srb

3. 將VLAN分配到交換機網路中要使用的埠。按照分配乙太網埠的方式將埠分配給CRF VLAN。 例如,此處將埠8/1-4分配給VLAN 101,即環號100(0x64)。由於所有權杖環連線埠的預設值 VLAN是1003(與所有乙太網路連線埠的預設值VLAN 1相同),因此也會修改VLAN 1003。 ptera-sup (enable) set vlan 101 8/1-4

將所有所需的令牌環埠分配給TrCRF VLAN後,即完成了交換機的配置。同一VLAN下的 TrCRF中的裝置現在能夠在它們之間進行源路由網橋。

對於IP連線,由於這是一個橋接環境,因此所有終端裝置都必須屬於同一個IP網路。但是,由於 TrBRF用作源路由網橋,連線到不同TrCRF的路由器需要多環選項,以便快取和使用路由資訊欄位 (RIF)。

例如,連線到TrCRF 101的外部路由器的令牌環介面配置如下:

```
source-bridge ring-group 2000
!
interface token-ring 0
ip address 1.1.1.10 255.255.255.0
multiring all
source-bridge 100 1 2000
!--- The ring number is 100, to match CRF 101 ring number; !--- and 2000 is the virtual ring
```

### 使用RSM為SRB配置令牌環,使用IP配置多環

如果您在源路由橋接網路中路由IP,則需要將多環新增到您的配置中,並配置源路由橋接。這是因 為,使用RSM時,您將橋接器從交換機擴展到RSM,並且您必須建立多環代碼附加到RIF的偽環。 當您在父TrBRF下建立TrCRF(在RSM中分配了多環代碼)時,將建立此偽環。

由於您還需要為RSM配置源路由橋接,因此必須將介面VLAN連線到RSM的虛擬環上。當您在每個 TrBRF下建立一個TrCRF(其環號與RSM中的虛擬環號匹配)時,將完成此操作。實際上,您可以 出於多環和源路由橋接目的使用相同的TrCRF,前提是它們具有相同的環號。請參見下一個圖:



在本示例中,您將使用global source-bridge ring-group 1000命令將RSM設定為虛擬環1000。

1. 使用以下命令在交換機上設定相應的偽TrCRF,每個TrBRF一個:

set vlan 104 type trcrf name test\_crf104 decring 1000 parent 100 mode srb set vlan 204 type trcrf name test\_crf204 decring 1000 parent 200 mode srb

**註:**上述TrCRF的環號必須與RSM 1000中的虛擬環匹配。而且,沒有埠分配給偽TrCRF。物 理埠被分配給TrCRF 101和201,如本文檔的<u>配置</u>主部分的第3步中的示例所示。

2. 在RSM中為交換器上設定的每個TrBRF新增一個interface vlan指令:

interface vlan100 type trbrf interface vlan200 type trbrf

3. 向VLAN介面新增多環和源路由橋接命令。這些命令會告訴路由器已分配了哪些TrCRF VLAN以對映到路由器中的虛擬環上。在本檔案的範例中,它是VLAN 104和204,兩個的環號 均為1000,與路由器中的環組相符。您還需要新增IP地址來路由IP流量,以便最終完成以下配

```
置:
```

```
source-bridge ring-group 1000
!
interface vlan100 type trbrf
ip address 1.1.1.1 255.255.255.0
multiring trcrf-vlan 104 ring 1000
multiring all
source-bridge trcrf-vlan 104 ring-group 1000
source-bridge spanning
!
interface Vlan200 type trbrf
ip address 1.1.2.1 255.255.255.0
multiring trcrf-vlan 204 ring 1000
multiring all
source-bridge trcrf-vlan 204 ring-group 1000
source-bridge trcrf-vlan 204 ring-group 1000
```

**注意:為**了簡便起見,本示例中未顯示IP協定配置。

### <u>在同一台交換器上的乙太網路和權杖環VLAN之間通訊</u>

您可以在同一台交換器上設定權杖環和乙太網路VLAN,但您只能透過RSM或外部路由器在兩者之 間傳送流量。

如果您已經按照本文檔前面所述配置了交換機和RSM,則可以新增乙太網VLAN並在RSM上配置源 網橋轉換,以橋接兩個介質之間的流量:

1. 設定乙太網VLAN,並使用set vlan 命令為其分配埠: ptera-sup (enable) set vlan 500 3/1-5

2. 在RSM上設定VLAN介面,並將其放入透明網橋組中:

```
interface vlan 500
bridge-group 1
```

bridge 1 protocol ieee

3. 使用source-bridge transparent ring-group pseudo-ring bridge-number tb-group 命令配置源網 橋轉換,其中:ring-group是在RSM上配置的源網橋環組虛擬環。這裡是1000。pseudoring是要分配給此透明橋接域的環號。您可以選擇任何編號,但它必須是唯一的,與源路由橋 接網路中的實際環號必須是唯一的一樣。在上一個範例中,振鈴號碼是3000。bridgenumber是用於在來自透明網橋組且正在傳送到源路由橋接網路的幀中形成RIF的網橋編號。在 這種情況下,您使用1。tb-group是透明網橋組編號。在本例中為1。

```
source-bridge transparent 1000 3000 1 1
source-bridge ring-group 1000
   !
interface vlan100 type trbrf
   ip address 1.1.1.1 255.255.255.0
```

```
multiring trcrf-vlan 104 ring 1000
     multiring all
     source-bridge trcrf-vlan 104 ring-group 1000
     source-bridge spanning
    !
interface Vlan200 type trbrf
     ip address 1.1.2.1 255.255.255.0
     multiring trcrf-vlan 204 ring 1000
    multiring all
    source-bridge trcrf-vlan 204 ring-group 1000
     source-bridge spanning
    !
interface vlan 500
  ip address 1.1.3.1 255.255.255.0
  bridge-group 1
bridge 1 protocol ieee
```

**注意:**在此案例中,IP是路由而非橋接。

### 驗證

使用本節內容,確認您的組態是否正常運作。

<u>輸出直譯器工具</u>(僅供<u>已註冊</u>客戶使用)(OIT)支援某些**show**命令。使用OIT檢視**show**命令輸出的分析 。

show vlan — 在交換器上,您可以檢查已設定的VLAN、橋接模式和跨距樹狀目錄。

VLAN	Name			Status	IfIndex	Mod/Ports	VLANs		
1	default			active	3	3/6-24 6/1-24 10/1-12			
100	test_brf			active	8	<b>8</b> 105	101, 102,	103,	104
101	test_crf101			active	10	8/1-4			
102	test_crf102			active	11				
103	test_crf103			active	12				
104	test_crf104			active	13				
105	test_crf105			active	14				
200	test_brf2			active	9	<b>9</b> 205	201, 202,	203,	204
201	test_crf201			active	15	8/5-8			
202	test_crf202			active	16				
203	test_crf203			active	17				
204	test_crf204			active	18				
205	test_crf205			active	19				
210	VLAN0210			active	98				
500	VLAN0500			active	20	3/1-5			
1002	fddi-default			active	4				
1003	trcrf-default			active	7	8/9-16			
1004	fddinet-default			active	5				
1005	trbrf-default			active	6	6	1003		
VLAN	Type SAID	MTU	Parent Ri	.ngNo Brdgl	No Stp B:	rdgMode Trai	nsl Trans2		

ptera-sup (enable) **show vlan** 

1	enet	100001	1500	-	-	-	-	-	0	0
100	trbrf	100100	4472	-	-	0xf	ibm	-	0	0
101	trcrf	100101	4472	100	0x64	-	-	srb	0	0
102	trcrf	100102	4472	100	0x65	-	-	srb	0	0
103	trcrf	100103	4472	100	0x66	-	-	srb	0	0
104	trcrf	100104	4472	100	0x3e8	-	-	srb	0	0
105	trcrf	100105	4472	100	0x7d0	-	-	srb	0	0
200	trbrf	100200	4472	-	-	0xf	ibm	-	0	0
201	trcrf	100201	4472	200	0xc9	-	-	srb	0	0 ! All ring numbers
are	display	yed in hexad	decima.	202	trcrf 3	L00202	44	172 200	0хса	srb 0
0										
203	trcrf	100203	4472	200	0хср	-	-	srb	0	0
204	trcrf	100204	4472	200	0x3e8	-	-	srb	0	0
205	trcrf	100205	4472	200	0x7d0	-	-	srb	0	0
210	enet	100210	1500	-	-	-	-	-	0	0
500	enet	100500	1500	-	-	-	-	-	0	0
1002	fddi	101002	1500	-	-	-	-	-	0	0
1003	trcrf	101003	4472	1005	0xccc	-	-	srb	0	0
1004	fdnet	101004	1500	-	-	0x0	ieee	-	0	0
1005	trbrf	101005	4472	-	-	0xf	ibm	-	0	0

VLAN DynCreated

1	static					
100	static					
101	static					
102	static					
103	static					
104	static					
105	static					
200	static					
201	static					
202	static					
203	static					
204	static					
205	static					
210	static					
500	static					
1002	static					
1003	static					
1004	static					
1005	static					
VLAN	AREHops	STEHops	Backup	CRF	1q	VLAN
101	7	7	off			
102	7	7	off			
103	7	7	off			
104	7	7	off			
105	7	7	off			
201	7	7	off			
202	7	7	off			
203	7	7	off			
204	7	7	off			
205	7	7	off			
1003	7	7	off			

ptera-sup (enable)

show spantree TrBRF vlan\_number — 顯示重要資訊,例如連線哪些埠和轉發哪些埠,並顯示在 TrBRF級別運行的生成樹模式。

VLAN 100 Spanning tree enabled **ibm** 00-10-1f-29-f9-63 Spanning tree type Designated Root Designated Root Priority 32768 Designated Root Cost 0 1/0 Designated Root Port Root Max Age 10 sec Hello Time 2 sec Forward Delay 4 sec Bridge ID MAC ADDR 00-10-1f-29-f9-63 Bridge ID Priority 32768 Bridge Max Age 10 sec Hello Time 2 sec Forward Delay 4 sec Vlan Port-State Cost Priority Portfast Channel\_id Port,Vlan 100 forward.... 100 inactive ^^ inactive 4 disabled 100 forwarding 5/1 5 0 62 101 4 disabled 102 62 4 disabled 62 4 disabled 103 100 inactive 4 disabled 104 100 inactive 62 62 4 disabled 100 inactive 105 \* = portstate set by user configuration.

**註:在該輸出**中,您會看到TrBRF VLAN 100下列出連線埠5/1。這是因為您在插槽5中有一個 RSM,而且因為ISL主幹用於自動將橋接器從交換器延伸到RSM。有關令牌環ISL的詳細資訊,請參 閱Cisco Catalyst 5000和3900交換機和路由器之間的TR-ISL中繼。

show spantree TrCRF vlan\_number — 顧示重要資訊,例如連線哪些埠和轉發哪些埠,並顯示在 TrCRF級別運行的生成樹模式。

ptera-sup (enable) show spantree 101 VI.AN 101 Spanning tree enabled Spanning tree type **ieee** 00-10-1f-29-f9-64 Designated Root Designated Root Priority 32768 Designated Root Cost 0 2 Poot Port 1/0 Root Max Age 10 sec Hello Time 2 sec Forward Delay 4 sec Bridge ID MAC ADDR 00-10-1f-29-f9-64 Bridge ID Priority 32768 Bridge Max Age 10 sec Hello Time 2 sec Forward Delay 4 sec Vlan Port-State Cost Priority Portfast Channel\_id Port ----- ----- ----- ----- ----- ------101 forwarding\* 5 32 disabled 5/1 0 101 not-connected 250 8/1 32 disabled 0 101 not-connected 250 32 disabled 0 8/2 101 not-connected 250 32 disabled 0 8/3 101 not-connected 250 32 disabled 0 8/4 \* = portstate set by user configuration or set by vlan 100 spanning tree. ptera-sup (enable) show port — 驗證ISL中繼是否存在。

Port Name Status Vlan Level Duplex Speed Type

ptera-sup (enable) **show port 5/1** 

Port Trap IfIndex ----- ------ ------5/1 disabled 81

Last-Time-Cleared

\_\_\_\_\_

Sat Jun 29 2002, 03:15:59

ptera-sup (enable)

show trunk — 顯示哪些埠正在轉發,哪些埠處於非活動狀態,並在TrBRF級別顯示生成樹模式。

ptera-sup (enable) show trunk

Port	Mode	Encapsulation	Status	Native vlan								
5/1	on	isl	trunking	1								
7/1-2	on	lane	trunking	1								
Port	Vlans allowed on trunk											
5/1	1-1005											
7/1-2	1-1005											
Port	rt Vlans allowed and active in management domain											
5/1												
7/1-2	1003											
Port	Vlans in spanning tree forwarding state and not pruned											
5/1	100-105,200-	205										
7/1-2	1003											
ptera-sup	(enable)											
show inte	rface — 以與	路由器上的物理	∎介面相同的方	式顯示RSM上的VLAN配置。								

#### ptera-rsm# show interface

Vlan100 is up, line protocol is up Hardware is Cat5k Virtual Token Ring, address is 0009.fa18.3800 (bia0009.fa18.3800) Internet address is 1.1.1.1/24 MTU 4464 bytes, BW 16000 Kbit, DLY 630 usec, reliability 255/255, txload 1/255, rxload 1/255 Encapsulation SNAP, loopback not set ARP type: SNAP, ARP Timeout 04:00:00 Ring speed: 16 Mbps Duplex: half Mode: Classic token ring station Source bridging enabled, srn 0 bn 15 trn 1000 (ring group) spanning explorer enabled Group Address: 0x00000000, Functional Address: 0x08000100 Ethernet Transit OUI: 0x000000 Last input 00:00:01, output 00:00:55, output hang never Last clearing of "show interface" counters never Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0 Queueing strategy: fifo Output queue :0/40 (size/max) 5 minute input rate 0 bits/sec, 0 packets/sec 5 minute output rate 0 bits/sec, 0 packets/sec 390 packets input, 21840 bytes, 0 no buffer

Received 0 broadcasts, 0 runts, 0 giants, 0 throttles 0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort 25 packets output, 6159 bytes, 0 underruns 0 output errors, 1 interface resets 0 output buffer failures, 0 output buffers swapped out 3 transitions Vlan200 is up, line protocol is up Hardware is Cat5k Virtual Token Ring, address is 0009.fa18.3800 (bia0009.fa18.3800) Internet address is 1.1.2.1/24 MTU 4464 bytes, BW 16000 Kbit, DLY 630 usec, reliability 255/255, txload 1/255, rxload 1/255 Encapsulation SNAP, loopback not set ARP type: SNAP, ARP Timeout 04:00:00 Ring speed: 16 Mbps Duplex: half Mode: Classic token ring station Source bridging enabled, srn 0 bn 15 trn 1000 (ring group) spanning explorer enabled Group Address: 0x0000000, Functional Address: 0x08000100 Ethernet Transit OUI: 0x000000 Last input 00:00:00, output 00:08:43, output hang never Last clearing of "show interface" counters never Input queue: 0/75/0/0 (size/max/drops/flushes); Total output drops: 0 Queueing strategy: fifo Output queue :0/40 (size/max) 5 minute input rate 0 bits/sec, 0 packets/sec 5 minute output rate 0 bits/sec, 0 packets/sec 381 packets input, 21336 bytes, 0 no buffer Received 0 broadcasts, 0 runts, 0 giants, 0 throttles 0 input errors, 0 CRC, 0 frame, 0 overrun, 0 ignored, 0 abort 9 packets output, 783 bytes, 0 underruns 0 output errors, 1 interface resets 0 output buffer failures, 0 output buffers swapped out 3 transitions ptera-rsm#

#### show spanning-tree — 顯示有關在RSM上運行生成樹協定的資訊。

ptera-rsm# show spanning-tree

#### Port 12 (Vlan500) of Bridge group 1 is down

Port path cost 19, Port priority 128 Designated root has priority 32768, address 0090.5f18.1c00 Designated bridge has priority 32768, address 0090.5f18.1c00 Designated port is 12, path cost 0 Timers: message age 0, forward delay 0, hold 0 BPDU: sent 0, received 0

#### Port 13 (RingGroup1000) of Bridge group 1 is forwarding

Port path cost 10, Port priority 128 Designated root has priority 32768, address 0090.5f18.1c00 Designated bridge has priority 32768, address 0090.5f18.1c00 Designated port is 13, path cost 0 Timers: message age 0, forward delay 0, hold 0 BPDU: sent 0, received 0

ptera-rsm#

## <u>疑難排解</u>

目前尚無適用於此組態的具體疑難排解資訊。

# 相關資訊

- 權杖環路由交換模組
- Cisco Catalyst 5000和3900交換機和路由器之間的TR-ISL中繼
- 權杖環支援頁面
- IBM技術支援
- 產品支援
- 技術支援與文件 Cisco Systems