將透明VTP域遷移到伺服器客戶端VTP域

目錄

<u>簡介</u> <u>必要條件</u> <u>需求</u> <u>採用元件</u> <u>慣例</u> <u>背景資訊</u> <u>設定</u> <u>網息</u> <u>調整</u> <u>編態</u> <u>線数難排解</u> 相關資訊

<u> 簡介</u>

本文提供一個範例組態,說明如何將所有VLAN中繼線通訊協定(VTP)透明模式交換器的園區網移轉 至具有VTP伺服器和使用者端的網路。本文檔還可用於重構現有的VTP域。

<u>必要條件</u>

<u>需求</u>

嘗試此組態之前,請確保符合以下要求:

- Catalyst交換機管理基礎知識
- VTP知識

<u>採用元件</u>

本檔案中的資訊是根據Cisco IOS®軟體版本12.2(25)SEC2和Catalyst OS(CatOS)版本8.1(2)。

本檔案中的資訊適用於支援VLAN中繼通訊協定版本2的所有思科裝置。

本文中的資訊是根據特定實驗室環境內的裝置所建立。如果您的網路正在作用,請確保您已瞭解任 何指令可能造成的影響。



<u>背景資訊</u>

VTP減少了交換網路中的管理。若在一台 VTP 伺服器上設定新的 VLAN,會將 VLAN 分配至網域中 的所有交換器。這可減少到處設定相同 VLAN 的必要。VTP是大多數Cisco Catalyst系列產品都可用 的Cisco專有協定。

注意:本文檔不包括VTP第3版。VTP第3版與VTP第1版(v1)和第2版(v2)不同。 它僅在CatOS 8.1(1)或更高版本上可用。VTP第3版整合了VTP v1和v2的許多更改。在更改網路配置之前,請確保 您已瞭解VTP第3版與早期版本之間的差異。如需詳細資訊,請參閱<u>設定VTP</u>中的以下各節之一:

- <u>瞭解VTP第3版的工作原理</u>
- 與VTP第1版和VTP第2版互動

<u>設定</u>

本節提供將園區網路從所有VTP透明配置遷移到VTP伺服器客戶端配置的資訊。本節還提供快速步 驟,用於將新交換機引入現有的VTP域。

註:使用Command Lookup Tool(僅限註冊客戶)查詢有關本文檔中使用的命令的更多資訊。

網路圖表

本檔案會使用以下網路設定:



該網路包括:

• 兩台運行Cisco IOS軟體的分發層交換機 — DistributionA和DistributionB。

•兩台存取層交換器 — AccessA執行Cisco IOS軟體, AccessB執行CatOS軟體。 初始VLAN資料庫具有以下乙太網VLAN:

- DistributionA VLAN 1、10和11
- DistributionB VLAN 1、20和21
- AccessA VLAN 1、30和31
- AccessB VLAN 1、40和41

<u>組態</u>

本節包含三個小節:

- 遷移前檢查
- 遷移規劃
- •<u>移轉程式</u>

<u>遷移前檢查</u>

此部分提供核對表,以確保網路已為遷移過程做好準備。若要接收交換機中VTP配置的當前狀態 ,請對Cisco IOS發出**show vtp status**命令,對CatOS發出**show vtp domain**命令。

Cisco IOS

DistributionA# show vtp status		
VTP Version	:	2
Configuration Revision	:	0
Maximum VLANs supported locally	:	1005
Number of existing VLANs	:	7
VTP Operating Mode	:	Transparent
VTP Domain Name	:	migration
VTP Pruning Mode	:	Disabled
VTP V2 Mode	:	Disabled
VTP Traps Generation	:	Disabled
MD5 digest	:	0xE5 0x9F 0x80 0x70 0x73 0x62 0xC0 0x54
Configuration last modified by	0.0).0.0 at 3-1-93 04:23:21
DistributionA#		

Catalyst OS

AccessB> (enable) show vtp domain	
Version : running VTP1 (VTP3 capable)	
Domain Name : migration	Password : not configured
Notifications: disabled	Updater ID: 0.0.0.0

Feature Mod	le	Revision
VLAN Cli	.ent	0

Pruning : disabled VLANs prune eligible: 2-1000 AccessB> (enable)

1. 檢查是否所有交換機都處於VTP透明模式。發出以下命令以更改VTP模式: Cisco IOS AccessA#conf t

AccessA(config) **#vtp mode transparent** Setting device to VTP TRANSPARENT mode AccessA(config) **#exit** AccessA#

Catalyst OS

AccessB> (enable) **set vtp mode transparent** Changing VTP mode for all features VTP domain migration modified AccessB> (enable)

2. 檢查所有交換機是否具有相同的VTP域名。發出以下命令以更改VTP域名: **Cisco IOS** DistributionB(config)**#vtp domain** *migration*

Changing VTP domain name from aaaa to migration DistributionB(config)#

Catalyst OS

AccessB> (enable) **set vtp domain** *migration* VTP domain migration modified AccessB> (enable)

3. 檢查是否所有交換機都運行相同的VTP版本。發出以下命令以更改VTP版本: Cisco IOS

vtp version 2

Catalyst OS

set vtp v2 enable

set vtp version 2

4. 檢查是否所有交換機都運行相同的VTP口令(如果配置了口令)。 發出以下命令以更改VTP口 令: Cisco IOS

vtp password vtp_password

Catalyst OS

AccessB> (enable) set vtp passwd ? <passwd> Password (0 to clear) AccessB> (enable) **set vtp passwd** vtp_password Generating the secret associated to the password. VTP domain migration modified

5. 檢查是否所有交換機都通過中繼鏈路連線。Cisco IOS

DistributionA#**show interfaces trunk**

Port	Mode	Encapsulation	Status	Native vlan
Gi2/0/1	auto	n-isl	trunking	1
Gi2/0/5	auto	n-802.1q	trunking	1
Gi2/0/9	desirable	n-isl	trunking	1
Gi2/0/10	desirable	n-isl	trunking	1

Port	Vlans allowed on trunk
Gi2/0/1	1-4094
Gi2/0/5	1-4094
Gi2/0/9	1-4094
Gi2/0/10	1-4094
Port	Vlans allowed and active in management domain
Gi2/0/1	1,10-11
Gi2/0/5	1,10-11
Gi2/0/9	1,10-11
Gi2/0/10	1,10-11
Port	Vlans in spanning tree forwarding state and not pruned

Gi2/0/1	1,10-11
Gi2/0/5	1,10-11
Gi2/0/9	1,10-11

!--- Rest of output elided.

Catalyst OS

AccessB> (enable) **show trunk**

```
* - indicates vtp domain mismatch
```

- indicates dot1q-all-tagged enabled on the port

	-	55	-	
Port	Mode	Encapsulation	Status	Native vlan
3/25	desirable	n-isl	trunking	1
3/26	desirable	n-isl	trunking	1
6/1	nonegotiate	dot1q	trunking	1
6/2	nonegotiate	dot1q	trunking	1
6/3	nonegotiate	dot1q	trunking	1
6/4	nonegotiate	dot1q	trunking	1
16/1	nonegotiate	isl	trunking	1
Port	Vlans allowe	d on trunk		
3/25	1-1005,1025-	4094		
3/26	1-1005,1025-	4094		

6/1

6/2 6/3

6/4 16/1 1-1005,1025-4094

Port Vlans allowed and active in management domain !--- Rest of output elided.

遷移規劃

 確定網路所需的VLAN數量。Catalyst交換器支援的最大作用中VLAN數量因型號而異。 AccessA#show vtp status : 2 VTP Version Configuration Revision : 0 Maximum VLANs supported locally : 250 Number of existing VLANs : 7 VTP Operating Mode : Transparent VTP Domain Name : migration VTP Pruning Mode : Disabled VTP V2 Mode : Disabled VTP Traps Generation : Disabled MD5 digest : 0xC8 0xB7 0x36 0xC3 0xBD 0xC6 0x56 0xB2 Configuration last modified by 0.0.0.0 at 3-1-93 04:23:21 AccessA#

•確定DistributionA和DistributionB等交換機將成為VTP伺服器。一台或多台交換機可以是域中的 VTP伺服器。選擇一個交換機(例如DistributionA)以開始遷移。

移轉程式

完成以下步驟,以便使用VTP模式伺服器和客戶端配置園區網路:

1. 將DistributionA的VTP模式更改為Server。

DistributionA#conf t Enter configuration commands, one per line. End with CNTL/Z. DistributionA(config)#vtp mode server Setting device to VTP SERVER mode DistributionA(config)#exit DistributionA#

2. 建立域中所需的VLAN。

!--- Before creating VLANs DistributionA#show vlan

VLAN	Name				Sta	tus	Port	ts			
1	defaul	lt			act	ive	Gi2, Gi2, Gi2, Gi2, Gi2, Gi2, Gi2,	/0/2, /0/6, /0/11 /0/14 /0/17 /0/20	Gi2/0/3, Gi2/0/7, L, Gi2/0/2 Gi2/0/2 Gi2/0/2 Gi2/0/2	, Gi2/0, , Gi2/0, 12, Gi2, 15, Gi2, 18, Gi2, 21, Gi2,	/4 /8 /0/13 /0/16 /0/19 /0/22
10	VLAN0(010			act	ive	Gi2,	/0/23	3		
11	VLAN0(011			act	ive	Gi2,	/0/24	1		
1002	fddi-o	default			act	/unsup					
1003	token-	-ring-defau	lt		act	/unsup					
1004	fddine	et-default			act	/unsup					
1005	trnet-	-default			act	/unsup					
VLAN	Туре	SAID	MTU	Parent	RingNo	Bridge	eNo S	Stp	BrdgMode	Trans1	Trans2
1	enet	100001	1500	-	-	_		_	-	0	0
10	enet	100010	1500	-	-	-		_	-	0	0

11 enet 100011 1500 -0 0 -1002 fddi 101002 1500 -1003 tr 101003 1500 -0 0 _ _ _ _ _ _ srb 0 0 !--- Rest of output elided. !--- Creating required VLANs DistributionA#conf t Enter configuration commands, one per line. End with CNTL/Z. DistributionA(config)#vlan 20-21,30-31,40-41 DistributionA(config-vlan)#exit DistributionA(config) #exit DistributionA#

!--- After creating VLANs DistributionA#show vlan

VLAN	Name	Status	Ports
1	default	active	Gi2/0/2, Gi2/0/3, Gi2/0/4 Gi2/0/6, Gi2/0/7, Gi2/0/8 Gi2/0/11, Gi2/0/12, Gi2/0/13 Gi2/0/14, Gi2/0/15, Gi2/0/16 Gi2/0/17, Gi2/0/18, Gi2/0/19 Gi2/0/20, Gi2/0/21, Gi2/0/22
10	VLAN0010	active	Gi2/0/23
11	VLAN0011	active	Gi2/0/24
20	VLAN0020	active	
21	VLAN0021	active	
30	VLAN0030	active	
31	VLAN0031	active	
40	VLAN0040	active	
41	VLAN0041	active	
1002	fddi-default	act/unsup	
1003	token-ring-default	act/unsup	
1004	fddinet-default	act/unsup	
1005	trnet-default	act/unsup	

VLAN Type SAID MTU Parent RingNo BridgeNo Stp BrdgMode Trans1 Trans2 !--- Rest of output elided.

如果不配置新的VLAN,請建立虛擬VLAN。這會將配置修訂版增加到「1」,從而使VLAN資 料庫在整個網路中傳播。

DistributionA#conf t Enter configuration commands, one per line. End with CNTL/Z. DistributionA(config)#vlan 100 DistributionA(config-vlan)#name dummy DistributionA(config-vlan)#exit DistributionA(config)#exit DistributionA#

3. 將DistributionB的VTP模式更改為Client,然後更改AccessA和AccessB。Cisco IOS

DistributionB#conf t Enter configuration commands, one per line. End with CNTL/Z. DistributionB(config)#vtp mode client Setting device to VTP CLIENT mode. DistributionB(config)#exit DistributionB#

DistributionB# show vtp status		
VTP Version	:	2
Configuration Revision	:	0
Maximum VLANs supported locally	:	1005
Number of existing VLANs	:	13
VTP Operating Mode	:	Client
VTP Domain Name	:	migration
VTP Pruning Mode	:	Disabled
VTP V2 Mode	:	Disabled
VTP Traps Generation	:	Disabled

MD5 digest

Configuration last modified by 0.0.0.0 at 3-1-93 04:23:21

Catalyst OS

AccessB> (enable) **set vtp mode client** Changing VTP mode for all features VTP domain migration modified

4. 驗證是否所有VLAN都通過域傳播。Cisco IOS

DistributionB#**show vlan**

VLAN	Name				Sta	tus	Ports			
1	defau:	 lt			 act	ive	Fa1/0/	/1, Fa1/0	/3, Fa1	/0/4
							Fa1/0/	/5, Fa1/0	/7, Fal	/0/8
							Fa1/0/	/11, Fa1/	0/12, F	a1/0/13
							Fa1/0/	/14, Fa1/	0/15, F	a1/0/16
							Fa1/0/	/17, Fa1/	0/18, F	a1/0/19
							Fa1/0/	/20, Fa1/	0/21, F	a1/0/22
							Fa1/0/	/23, Fa1/	0/24	
10	VLAN0	010			act	ive				
11	VLAN0	011			act	ive				
20	VLAN0	020			act	ive	Gi1/0/	/1		
21	VLAN0	021			act	ive	Gi1/0/	/2		
30	VLAN0	030			act	ive				
31	VLAN0	031			act	ive				
40	VLAN0	040			act	ive				
41	VLAN0	041			act	ive				
1002	fddi-	default			act	/unsup				
1003	token	-ring-defau	ılt		act	/unsup				
1004	fddine	et-default			act	/unsup				
1005	trnet	-default			act	/unsup				
!	Rest o	of output e	elided.							
Cata	lyst O	S								
Acces	ssB> (e	enable) sh o	w vlan	L						
VLAN	Name				Sta	tus	IfInde	ex Mod/Po:	rts, Vl	ans
1	defau	lt			act	ive	64	2/1-2		
								3/1-24	,3/27-4	6
								4/1-8		
10	VLAN0	010			act	ive	107			
11	VLAN0	011			act	ive	108			
20	VLAN0	020			act	ive	105			
21	VLAN0	021			act	ive	106			
30	VLAN0	030			act	ive	109			
31	VLAN0	031			act	ive	110			
40	VLAN0	040			act	ive	111	3/47		
41	VLAN0	041			act	ive	112	3/48		
1002	fddi-0	default			act	ive	65			
1003	token	-ring-defau	ılt		act	ive	68			
1004	fddine	et-default			act	ive	66			
1005	trnet	-default			act	ive	67			
VLAN	Туре	SAID	MTU	Parent	RingNo	BrdgNo	stp	BrdgMode	Trans1	Trans2
		1.01.000								
1002	tadi	101002	1500	-	-	-	-	-	U	U
1003	trcrf	101003	1500	-	-	-	-	-	0	U

!--- Rest of output elided.

5. 檢查是否有任何交換機埠處於Inactive狀態。如果交換器連線埠中不存在為交換器連線埠設定的VLAN,則交換器連線埠可能會進入非作用中狀態。根據需要在VTP伺服器交換機中建立適當的VLAN。Cisco IOS在show interfaces switchport命令的輸出中,如果交換器連線埠具有存 取模式VLAN屬性的Inactive關鍵字,則可確定該交換器連線埠是否處於非活動模式。 DistributionB#show interfaces switchport Name: Fa1/0/1 Switchport: Enabled Administrative Mode: dynamic auto Operational Mode: down Administrative Trunking Encapsulation: negotiate Negotiation of Trunking: On Access Mode VLAN: 1 (default) Trunking Native Mode VLAN: 1 (default) Administrative Native VLAN tagging: enabled Voice VLAN: none Administrative private-vlan host-association: none Administrative private-vlan mapping: none Administrative private-vlan trunk native VLAN: none Administrative private-vlan trunk Native VLAN tagging: enabled Administrative private-vlan trunk encapsulation: dotlq Administrative private-vlan trunk normal VLANs: none Administrative private-vlan trunk private VLANs: none Operational private-vlan: none Trunking VLANs Enabled: ALL Pruning VLANs Enabled: 2-1001 Capture Mode Disabled Capture VLANs Allowed: ALL

!--- Part of output elided. Name: Fa1/0/24 Switchport: Enabled Administrative Mode: dynamic
auto Operational Mode: down Administrative Trunking Encapsulation: negotiate Negotiation of

Trunking: On Access Mode VLAN: 50 (Inactive) Trunking Native Mode VLAN: 1 (default) Administrative Native VLAN tagging: enabled Voice VLAN: none Administrative private-vlan host-association: none Administrative private-vlan mapping: none Administrative private-vlan trunk native VLAN: none Administrative private-vlan trunk Native VLAN tagging: enabled Administrative private-vlan trunk encapsulation: dot1q Administrative private-vlan trunk normal VLANs: none Administrative private-vlan trunk private VLANs: none Operational private-vlan: none Trunking VLANs Enabled: ALL Pruning VLANs Enabled: 2-1001 Capture Mode Disabled Capture VLANs Allowed: ALL

Protected: false
Unknown unicast blocked: disabled
!--- Rest of output elided.

在VTP伺服器交換機(DistributionA)中建立VLAN 50。

DistributionA#conf t Enter configuration commands, one per line. End with CNTL/Z. DistributionA(config)#vlan 50 DistributionA(config-vlan)#name Vlan50 DistributionA(config-vlan)#end DistributionA#

!--- Verify the switchport status in the DistributionB switch. DistributionB#show
interfaces fa1/0/24 switchport

Name: Fa1/0/24 Switchport: Enabled Administrative Mode: dynamic auto Operational Mode: down Administrative Trunking Encapsulation: negotiate Negotiation of Trunking: On

```
Access Mode VLAN: 50 (Vlan50)
Trunking Native Mode VLAN: 1 (default)
Administrative Native VLAN tagging: enabled
Voice VLAN: none
Administrative private-vlan host-association: none
Administrative private-vlan mapping: none
Administrative private-vlan trunk native VLAN: none
Administrative private-vlan trunk Native VLAN tagging: enabled
Administrative private-vlan trunk encapsulation: dotlq
Administrative private-vlan trunk normal VLANs: none
Administrative private-vlan trunk private VLANs: none
Operational private-vlan: none
Trunking VLANs Enabled: ALL
Pruning VLANs Enabled: 2-1001
Capture Mode Disabled
Capture VLANs Allowed: ALL
!--- Rest of output elided.
```

 將DistributionB交換機的VTP模式更改為Server。VTP伺服器交換機必須具有相同的配置修訂 版號,並且必須是VTP域中的最高配置。

將交換機新增到VTP域

最近新增的交換機可能導致網路出現問題。它可以是以前在實驗中使用的交換機,並且輸入了良好 的VTP域名。該交換機被配置為VTP客戶端,並連線到網路的其它部分。然後,您將中繼鏈路連線 到網路的其它部分。在幾秒鐘內,整個網路就會關閉。

如果插入的交換機的配置修訂版號高於VTP域的配置修訂版號,它會通過VTP域傳播其VLAN資料庫 。

無論交換機是VTP客戶端還是VTP伺服器,都會出現這種情況。VTP客戶端可以清除VTP伺服器上 的VLAN資訊。當網路中的許多埠進入非活動狀態並繼續分配給不存在的VLAN時,您可以得知發生 了這種情況。

註:請參閱<u>Flash動畫:VTP</u>,用於說明此問題。

若要避免將交換器新增至網路時發生此問題,請完成以下步驟:

- 將新交換機連線到網路之前,將交換機的VTP模式更改為透明。這會將配置修訂版號重置為零 ('0')。
- 2. 將交換機連線到網路並配置適當的中繼鏈路。
- 3. 配置VTP屬性:配置VTP域名以匹配網路的VTP域名。配置VTP版本和口令(如果需要)。
- 將VTP模式更改為Client。配置修訂版號仍然為零('0')。VLAN開始從網路中存在的VTP伺服器 進行傳播。
- 5. 檢驗新交換機和網路的VTP伺服器中是否所有所需的VLAN都可用。
- 6. 如果缺少任何VLAN,快速解決方法是從其中一個VTP伺服器新增該VLAN。

如需詳細資訊,請參閱最近插入的交換器如何導致網路問題。

<u>驗證</u>

沒有適用於此組態的單獨驗證程式。使用作為配置示例的一部分提供的驗證步驟。

<u>輸出直譯器工具</u>(僅供<u>已註冊</u>客戶使用)(OIT)支援某些**show**命令。使用OIT檢視**show**命令輸出的分析

- show vtp status [Cisco IOS] 顯示VTP域的當前狀態。
- show vtp domain [Catalyst OS] 顯示VTP域的當前狀態。
- show vlan 顯示VLAN資訊。

<u>疑難排解</u>

目前尚無適用於此組態的具體疑難排解資訊。

有關VTP常見問題的資訊,請參閱<u>VTP故障排除和警告</u>。

相關資訊

- <u>瞭解 VLAN 主幹通訊協定 (VTP)</u>
- <u>LAN 產品支援</u>
- LAN 交換技術支援
- 技術支援與文件 Cisco Systems