通過FXOS機箱管理器更改或恢復FTD密碼

目錄

<u>簡介</u> <u>必要條件</u> <u>家採用元件</u> <u>計設 組</u> <u>驗</u> 證

簡介

Cisco Firepower(FXOS)Cisco Firepower(FTD)

必要條件

需求

思科建議您瞭解以下主題:

- Cisco Firepower威脅防禦(FTD)
- Cisco Firepower可擴充作業系統(FXOS)機箱管理員

採用元件

- Cisco Firepower威脅防禦(FTD)6.2.2或更高版本
- Cisco Firepower 4120安全裝置FXOS 2.2或更高版本

本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除(預設))的組態來啟動。如果您的網路運作中,請確保您瞭解任何指令可能造成的影響。

背景資訊

在某些情況下,安全策略要求網路管理員定期更改裝置的密碼。

此外,還可能出現裝置密碼丟失且需要恢復的情況。

對於通過FP41xx和FP93xx安全裝置的FTD例項,可通過FXOS機箱管理器完成此操作。

設定

組態

更改FTD應用程式的密碼,請遵循以下步驟:

步驟1.使用管理員許可權使用者名稱登入到機箱管理器。

_	
	cisco
	Firepower
	Chassis Manager
	Username
١.	Password
	Login
	Support : tactRisico.com 1-800-553-2447

步驟2.導覽至Devices索引標籤,並為相關FTD應用程式選擇Edit按鈕。

Ov	erview Interfaces	Logical Devi	ces Security E	ingine Platform Setting	;	-			System	Tools	Help	admin
Logi	cal Device List								C Refres	h O	Add D	evice
	FTD1 Star	ndalone	Status:ok								5	•
	Application	Version	,	Management IP	Gateway	Ма	anagement Port	Status				
•	FTD	6.2.2.81		10.03.103.14	10.03.103.1	Eth	hernet1/7	1 online		 ✓ ○ ^p 	\rightarrow	
	Ports: Data Interfaces:	Ethernet1/1 Ethernet1/4	Ethernet1/3	Attribute Cluster Firepow Manage HA-ROI UUID	s: Operational Status ver Management IP ement URL LE	: not-applicable : 10:00:19:11 : https://kms.tft2-uiseo. : active : 514b3f44-4711 11:00 2:	~:					

步驟3.選擇FTD例項的圖示,如下圖所示。

-			
	and a second		
		2002	
	inent ()		

步驟4.顯示「配置」視窗。找到後,導航到Settings頁籤。

Cisco Firepower Thr	eat Defense - Config	uration TX
General Information Set	ings Agreement	
Interface Information		
Management Interface:	Ethernet1/7	•
Management		
Address Type:	IPv4 only	*
IPv4		
Management IP:	10.00.100.0	
Network Mask:		
Network Gateway:	10.00.100.1	
	6	OK Canad
	6	UN Cancel

步驟5.在「密碼」文本框中輸入FTD應用的新密碼。

Cisco Firepower Three General Information Setting	at Defense - Co Agreement	nfigur	ation	?×
Registration Key:	[Set: Yes	
Confirm Registration Key:	•••••			
Password:	•••••		Set: Yes	
Confirm Password:				
Firepower Management Center IP:	194-100-2-			
Search domains:				
Firewall Mode:	Transparent	*		
DNS Servers:	174-100-1-			
Fully Qualified Hostname:				
Eventing Interface:		*		
		-	eu	
		-	OK Can	cel

步驟6.在「確認密碼」文本框中**重新輸**入新密碼。

附註:在新密碼生效之前,在FXOS級別重新啟動裝置。

Bootstrap Settings Update Confirmation



Updating the bootstrap settings from the Firepower Chassis Manager is for disaster recovery only; we recommend that you instead change bootstrap settings in the application. To update the bootstrap settings from the Firepower Chassis Manager, click Restart Now: the old bootstrap configuration will be overwritten, and the application

will restart. Or click Restart Later so you can manually restart the application at a time of your choosing and apply the new bootstrap settings (Logical Devices > Restart).

Note: For FTD, if you change the management IP address, be sure to change the device IP address in FMC (Devices > Device Management > Device tab > Management area). This task is not required if you specified the NAT ID instead of the device IP address in FMC.

Cancel



透過SSH登入FTD應用程式,確保新密碼已正確套用。