為Cisco ThreatGrid裝置設定SSH客戶端

目錄

<u>簡介</u> <u>問題</u> <u>解決方案</u> <u>膩子</u> <u>SecureCRT</u>

簡介

本文檔介紹如何配置不同的SSH客戶端,以便通過SSH正確使用Cisco ThreatGrid裝置。

問題

連線到思科ThreatGrid裝置時,SSH客戶端顯示不正確的偽圖形。



解決方案

膩子

步驟1.選擇DEC-MCS作為PuTTY配置 — > Window -> Translation下的Remote字符集,如下圖所示



步驟2.在PuTTY配置 — >連線 — >資料下輸入 putty作為Terminal-type字串,如下圖所示。

Data to details login username n username is not sp rompt © Use sy nal details	send to the server becified: ystem username (1)
nal details	
inal huno ohina	nutty
iinal <u>s</u> peeds onment variables ible	38400,38400 A <u>d</u> d <u>R</u> emove
	ninal <u>s</u> peeds onment variables able e

步驟3.開啟已配置的會話。



SecureCRT

步驟1.在「Session Options -> Terminal -> Emulation」下選擇Linux作為Terminal,如下圖所示。

Category:	Emulation	
Connection Logon Actions SSH2 SFTP Session Advanced Port Forwarding Remote/X11	Emulation Terminal: Linux	ANSI Color Use color scheme ation
▼ Terminal	Size	On resize
Modes Emacs Mapped Keys Advanced * Appearance Window Log File Printing X/Y/Zmodem	Logical rows: 24 Logical columns: 256 Scrollback Scrollback buffer: 2000	Synchronize view to size Scale the font Retain size and font
		Cancel OK

步驟2.開啟已配置的會話。

