配置CIMC並在發生災難性故障時在BE6K/7K上安裝ESXi

目錄

<u>簡介</u> <u>必要條件</u> <u>需求</u> <u>採用元件</u> <u>背景資訊</u> <u>要遵循的流程</u> <u>第2部分CIMC配置</u> <u>第2部分。ESXi安裝</u> <u>驗證</u> 疑難排解

簡介

本文檔介紹在出現完全硬體故障或完全更換伺服器時,在BE6/7K伺服器上安裝Elastic Sky X Integrated(ESXi)和配置Cisco Integrated Management Controller(CIMC)的過程。本文檔可幫助從 頭開始設定伺服器。

必要條件

需求

思科建議您瞭解以下主題:

- 物理訪問伺服器,以連線鍵盤和顯示器
- 需要訪問鍵盤和顯示器
- •用於連線顯示器和鍵盤的CIMC轉換器
- 在VMware中提供免費帳戶以下載Cisco Customer Image

採用元件

本文件所述內容不限於特定軟體和硬體版本。

本文中的資訊是根據特定實驗室環境內的裝置所建立。文中使用到的所有裝置皆從已清除(預設))的組態來啟動。如果您的網路運作中,請確保您瞭解任何指令可能造成的影響。

背景資訊

BE6K/7K是套裝解決方案,即ESXi已預安裝在伺服器上。有時,您可能會遇到BE6k/7K問題,您必 須更換所有硬碟驅動器(HDD),或者無法恢複資料,或者虛擬驅動器(VD)發生故障或完全更換伺服 器,然後必須在新硬體上安裝ESXi。本文檔介紹在此類情況下安裝ESXi和配置CIMC要遵循的程式

要遵循的流程

過程可以分為兩部分:

- 第1部分:配置CIMC並建立VD。
 - 1. 使用鍵盤/影片/滑鼠(KVM)轉換器將鍵盤和顯示器連線到統一計算系統(UCS)伺服器的控制檯
 - 2. 開啟伺服器電源
 - 3. 配置CIMC IP
 - 4. 確保所有物理驅動器都處於正常狀態
 - 5. 在RAID 5中建立VD

第2部分:在建立的VD上安裝ESXi。

- 1. 從VMware下載Cisco Custom ISO®
- 2. 登入CIMC並啟動KVM控制檯。(確保在PC上安裝了JRE)
- 3. 使用KVM控制檯安裝虛擬ISO
- 4. 從KVM重新啟動UCS伺服器,啟動時按F6
- 5. 選擇Virtual CD/DVD, 然後按Enter
- 6. 繼續安裝ESXi
- 7. 在直接控制檯使用者介面(DCUI)中,按F2, 配置ESXi IP、子網、VLAN(可選)
- 8. 從Vsphere客戶端訪問ESXi IP

第1部分CIMC配置

螢幕截圖的過程。

步驟1.使用KVM轉換器將鍵盤和顯示器連線到UCS伺服器的控制檯,如下圖所示。

Figure B-1 KVM Cable



步驟2.開啟伺服器電源。

步驟3.在「Power On (開機)」閃屏時按下F8,如下圖所示。



步驟4.配置CIMC進行連線,如下圖所示。

進入CIMC實用程式後,您必須配置以下內容:

- CIMC IP地址
- 預設閘道
- 設定CIMC的密碼

NIC Properties		
NIC mode		NIC redundancy
Dedicated:	[<u>X</u>]	None: [X]
Shared LOM:	Ū	Active-standby:[]
Cisco Card:	[]	Active-active: []
IPV4 (Basic)		Factory Defaults
DHCP enabled:	[]	CIMC Factory Default:[]
CIMC IP:	10.110.9.11	Default User (Basic)
Subnetmask:	255.255.255.0	Default password:
Gateway:	10.110.9.1	Reenter password:
VLAN (Advanced)		
VLAN enabled:	[]	
VLAN ID:	1	
Priority:	0	
******	***************	*****
<up arrow="" down=""></up>	Select items	<f10> Save <space bar=""> Enable/Disable</space></f10>

步驟5.建立VD。

為了建立VD,必須執行以下操作:

- 1. 啟動CIMC
- 2. 導航到**儲存**
- 3. 導覽至Storage > Controller Info
- 4. 導覽至Controller Info > Create Virtual Drive from Unused Physical Drives
- 5. 選擇Raid為5
- 6. 選擇HDD 附註: Raid 5至少需要3個硬碟。
- 7. 設定名稱和屬性
- 8. 按一下Create Virtual Drive
- 1.從Web瀏覽器啟動CICM,接受您獲得的所有證書警報(如圖所示)。

😕 uluulu Cisco	Integrated Management Controlle	er	_	🐥 🚫 7 admin@64.1
角 / Chassis / Sum	mary 📩		Refresh	Host Power Launch KVM P
Server Proper	ties	Cisco Integrated N	Anagement Controller (Cisc	co IMC) Information
Product Name:	UCS C220 M4S	Hostname:	C220-FCH1850V31Y	
Serial Number:	FCH1850V31Y	IP Address:	10.197.252.34	
PID:	UCSC-C220-M4S	MAC Address:	64:F6:9D:36:B2:8C	
UUID:	CA872166-B342-4C1B-A750-F841485DF926	Firmware Version:	3.0(3f)	
BIOS Version:	C220M4.3.0.3c.0.0831170216	Current Time (UTC):	Thu Apr 26 11:38:21 2018	
Description:	ESXI-Static-Ankoul-DND	Local Time:	Thu Apr 26 17:08:21 2018 IST +0530	
Asset Tag:	Unknown	Timezone:	Asia/Kolkata	Select Timezone
Chassis Status Power	S • State: On Status: Severe Fault	Server Utilization		
Tempe		90 -		Overall Utilization (%)
	Statue: 🕺 Source Fault	80		Memory Utilization (%)

2.導覽至**Storage**,如下圖所示。



3.導覽至Storage > Controller Info,如下圖所示。

≠ cisco	isco integrated Mi	anagement Conti						
🔒 / / Cisco 1	12G SAS Modular	Raid Controller (
Controller Info	Physical Drive Info	Virtual Drive Info						
Virtual Drives	Virtual Drives	Cancel Initialization						
	Virtual D	Virtual Drive Number						

4.導覽至Controller Info > Create Virtual Drive from Unused Physical Drives,如下圖所示。

♠ / / Cisco	12G SAS Modular	Raid Controller (
Controller Info	Physical Drive Info	Virtual Drive Info					
Create Virtual Drive from Unused Physical Drives Clear Boot Drive Get Storage Firmware Log Enable Drive Security							
	itus						
	Composite Hea	alth: 🔽 Good					
5.從下拉選項中選擇RA	AID級別為5,如下圖所示。						

		RAID Level:	Ø			•	Enable
			0				
			1				
Creat	te Driv	e Groups	5	\$ 3			
			6				
Physi	ical Dr	ives	10				¢
	ID	Size(MB)	50				
0		050700.110	60				
	1	952720 MB		TUSHIBA	nuu	OMO	
	2	952720 MB		TOSHIBA	HDD	SAS	
	3	3814697 MB		TOSHIBA	HDD	SAS	
	4	3814697 MB		TOSHIBA	HDD	SAS	
	5	952720 MB		TOSHIBA	HDD	SAS	
0	~			TOOLIDA			

6.選擇HDD,如下圖所示。

附註:Raid 5至少需要3個硬碟。

Physical Drives			Selected 3 /	Drive Groups			
	ID	Size(MB)	Model	Interface	Туре		Name
	1	952720 MB	TOSHIBA	HDD	SAS		No data available
	2	952720 MB	TOSHIBA	HDD	SAS	>>	
¥.	3	3814697 MB	TOSHIBA	HDD	SAS	<<	
Ő	4	3814697 MB	TOSHIBA	HDD	SAS		
	5	952720 MB	TOSHIBA	HDD	SAS		
0	-	000000110	7001004		~ ~ ~		

7.如圖所示設定「名稱」和「屬性」。

8.按一下「Create Virtual Drive」,如下圖所示。

Virtual Drive Properties

Name:	RAID5_123		Disk Cache Policy:	Unchanged	•		
Access Policy:	Read Write	•	Write Policy:	Write Through	•		
Read Policy:	No Read Ahead	•	Strip Size (MB):	64k	•		
Cache Policy:	Direct IO	•	Size	1905440		MB	,
				[952720 : 1905440]			
			Generate XMLAPI	Request Create Virtual D	Irivo	Close	i.

9.驗證是否已建立驅動器,如下圖所示。

/ ... / Cisco 12G SAS Modular Raid Controller (SLC)

Controller Info	Physical Drive Info	Virtual Drive Info	Ba
Clear Post Drive	from Unused Physical Driv	es <u>Create Virtual Drive f</u>	Disc
(/ Cisco 12G SAS Modular Raid C	Controller (SLOT-HBA) / Virtual Drive Info *	Refresh Heat Power Launch KVM]	Ping Rebo

Controller Info Physical Drive Info Virtual Drive Info Battery Backup Unit Storage Log Virtual Drives Virtual Drives Virtual Drives Virtual Drives Virtual Drive Virtual Drive Set as Boot Drive Delete Virtual Drive Hids Drive Set Transpo Virtual Drive Virtual Drive Virtual Drive Virtual Drive Name Status Health Size RAID Level Boot Drive Info RAID 5 false false											
Virtual Drives Virtual Drive Secure Virtual Drive Virtual Drive Secure Virtual Drive Virtual Drive Name Status Health Size RAID Level Boot Drive 0 RAID5_123 Optimal Good 1905400 MB RAID 5 false	Controller Info	Physic	al Dri	ve Info	Virtual Drive Info	Battery Backup Unit	Storage Log				
VD-0 Initialize Cancel Initialization Set as Boot Drive Delete Virtual Drive Edit Virtual Drive Hide Drive Secure Virtual Drive Set Transponder Virtual Drive Number Name Status Health Size RAID Level Boot Drive 0 RAID5_123 Optimal Good 1905440 MB RAID 5 false	 Virtual Drives 	\ \	/irtua	I Drives							
Virtual Drive Number Name Status Health Size RAID Level Boot Drive 0 RAID5_123 Optimal Good 1905440 MB RAID 5 false	VD-0		Init	tialize	Cancel Initialization	Set as Boot Drive	elete Virtual Drive Ed	lit Virtual Drive Hid	Drive Secure Virt	ual Drive S	et Transport R
0 RAID5_123 Optimal Good 1905440 MB RAID 5 false				Virtual D	Vrive Number	Name	Status	Health	Size	RAID Level	Boot Drive
				0		RAID5_123	Optimal	Good	1905440 MB	RAID 5	false

第2部分。 ESXi安裝

步驟1.從VMware下載Cisco Custom ISO®,如下圖所示。

-	/are	Products Accounts Sup
Home / CISCO C	ustom Image for ESXi 6.0 Uta GA Install CD	
Downloa	d Product	
Version	60U1a	Product Resources
Documentation	Blade Servers	View My Download History
	Rack servers E-Series Blades	Product Information
	Support Matrix	Documentation
Release Date	2015-10-30	Community
Туре	Custom ISOs	📩 Get Free Trial
Product Downloa	Version History	
Product Download	Marsion History Information m Image for ESXI 6.0 U1a GA Install CD	Download Now
File CISCO Custor File size: 353 2	Information m Image for ESXI 6.0 U1a GA Install CD	Download Now
File CISCO Custor File size: 353 2 File type iso	ds Version History Information m Image for ESXI 6.0 U1a GA Install CD 5 MB	Download Now Download Manager
File CISCO Custer File size: 353.2: File type: Iso Read More	ds Version History Information m Image for ESXI 6.0 U1a GA Install CD 5 MB	Dewnload New Download Manager
File CISCO Custer File size: 353 2 File type: tso Read More CISCO Custer	ds Version History Information m Image for ESXI 6.0 U1a GA Install CD 5 MB	Download Now Download Manager Download Now

步驟2.登入CIMC並啟動KVM控制檯。(如果使用基於Java的,請確保在PC上安裝了JRE 1.7或更 高版本)。 在這種情況下,使用基於**HTML的KVM**,如下圖所示。

	*	87	admin@64.10
	Refresh Hos	Fower	Launch KVM Fir
Cisco Integrated N	lanagement Controller (Cisco I	Jav	/a based KVM
Hostname:	C220-FCH1850V31Y		
IP Address:	10.197.252.34	_	
	Cisco Integrated M Hostname: IP Address:	Refresh Hos Cisco Integrated Management Controller (Cisco II Hostname: C220-F-CH1850V31Y IP Address: 10.197.252.34	Refresh Hos Fower Cisco Integrated Management Controller (Cisco II Hostname: C220-F-CH1850V31Y IP Address: 10.197.252.34

步驟3.使用KVM控制檯安裝虛擬ISO,如下圖所示。

cisco Cisc	co Integrated Ma	anagemen	nt Contr	oller		
File View M	Aacros Tools Power	Boot Device	Activate Map CD/ Map Ren	dia Help Virtual Devices DVD novable Disk	ESV	Vansi
	For your convenience, Cisco Prime Collabor Cisco Unified Commun Cisco Unity Connecti Cisco Instant Messag Cisco Paging Server Cisco Contact Center Cisco Prime Collabor Please refer to the Bu HMM.cisco.com/go/be7kd	this server ha ation Provisio ications Manag on ing and Presen Express ration Deployme siness Edition g	Map Flop s occur our ning er ce Server nt 7000 Insta	Medium install 7500 user template 5000 user template 5000 user template 5000 user template 400 agent template 400 agent template Standard template allation Guide for fu	Machines predep 11.6 11.5(1)SU2 11.5(1)SU2 11.5(1)SU2 11.5(2) 11.5(1) 11.5(3) Formation on hom	

Virtual Media -	CD/DVD	×
Image File :	Vmware-ESXI-6.0.0-3073146-Custom-Ci: Browse	
	Cancel	

步驟4.從KVM重新啟動UCS伺服器,在啟動時按**F6**,如下圖所示。

	cisco	; Ci	sco Int	tegrat	ed Ma	anageme	nt Contr	oller	
	File	View	Macros	Tools	Power	Boot Device	Virtual Med	dia Hel	р
Г					Power				
					Power	Off System			
			Cisco	Busines	Reset	System (warn	n boot)		
					Power	r Cycle System	n (cold boot)		
			For y	our conv	en rence,	THIS SERVER I	ias deen dut	it with	the following
			Cis	co Prime	Collabo	ration Provisi	oning	Medium 7588. ust	install ec.template
			Cis	co Unity co Insta	Connect nt Messa	ion ging and Prese	nce Server	5000 usi 5000 usi	er template er template



步驟5.選擇Virtual CD/DVD Option,然後按Enter,如下圖所示。



步驟6.如圖所示繼續安裝ESXi。



 File View Macros Tools Power Boot Device Virtual Media Help
 A
 1
 3

 Loading ESX1 installer

 Loading (boot, bdl)
 Booting (boot, b

File View Macros Tools Power Boot Device Virtual Media Help



Wheare ESXi 6.0.0 Installer

Helcone to the VMware ESXI 6.0.0 Installation

Where ESXi 6.0.0 installs on most systems but only systems on Where's Compatibility Guide are supported.

Consult the Whware Compatibility Guide at: http://www.vmware.com/resources/compatibility

Select the operation to perform.

(Esc) Cancel (Enter) Continue



附註:選擇您在CIMC中建立的驅動器。







File View Macros Tools Power Boot Device Virtual Media Help





步驟6.從DCUI按F2配置ESXi IP、子網、VLAN(可選),如下圖所示。



File View Macros Tools Power Boot Device Virtual Media Help

Configure Management Network	IPv4 Configuration		
Network Adoptors VLAN (optional) IPv4 Configuration IPv6 Configuration DHS Configuration Custon DHS Suffixes	Automotic IPvd.Addness: Not set Subnet Mask: Not set Default Gatewag: Not set This host cervabisin en IPvt.addness and other networking, parameters antavalizettig if goer network includes a ONCP serven - TE unit, eskogion nofwenkradministrator for the oppropriath; settings.		



此後,從Vsphere客戶端或Web瀏覽器訪問ESXi IP並將UC ISO上傳到資料儲存區以部署VM。

驗證

使用本節內容,確認您的組態是否正常運作。

驗證工作請參閱本文的第1部分。CIMC配置>步驟9。

疑難排解

目前尚無適用於此組態的具體疑難排解資訊。