# 在RV160和RV260路由器上配置IPv6轉換

### 目標

本文的目的是展示如何使用6in4或6rd在RV160x和RV260x路由器上配置IPv6轉換。

## 簡介

Internet協定第6版(IPv6)為Internet協定第4版(IPv4)提供了許多附加優勢。IPv6提供了更大的 地址空間、更簡單的地址聚合和整合安全性。IPv6過渡可幫助屬於IPv6網路的主機通過IPv4網 路鏈路進行通訊。

要從IPv4遷移到IPv6,可以使用稱為6in4的Internet轉換機制。 6in4使用隧道,其中IPv6資料 包封裝在IPv4報頭中,IP協定號設定為41。協定號是IPv4報頭中的「協定」欄位值或IPv6中的 「下一報頭」欄位值。協定41是嵌入IPv4資料包中的IPv6資料包的路由協定。然後,資料包 會通過IPv4 Internet或網路傳送。6in4是一種常用的過渡機制。

實現IPv6過渡的另一種方式是IPv6快速部署(第6次)。第6層也是隧道機制,它允許網際網路服務提供商(ISP)以輕量級且安全的方式快速部署IPv6,而不需要升級現有的IPv4訪問網路基礎設施。在此方法中,每個ISP使用唯一的IPv6字首。

### 適用裝置

- RV160
- RV260

### 軟體版本

• 1.0.00.15

### 配置IPv6過渡

要在RV160x/RV260x上配置IPv6轉換,請執行以下步驟。

步驟1.登入到路由器的Web配置頁。



©2018 Cisco Systems, Inc. All Rights Reserved. Cisco, the Cisco Logo, and the Cisco Systems are registered trademarks or trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

附註: 在本文中,我們將使用RV260W來配置IPv6轉換。配置可能因所使用的型號而異。

步驟2.選擇WAN > IPv6 Transition。

用通道介面。
TUN1
V
TUN1

步驟5. Local Interface和Local IPv4 Address顯示所選介面。

IPv6 Transition	
Tunnel Interface:	TUN1
Enable:	
Description:	Test
Local Interface:	WAN (Interface should have a public IP address)
Local IPv4 Address:	140. 7

#### 步驟6.按一下Apply。

IPv6 Transition		Apply Cancel
Tunnel Interface:	TUN1	
Enable:	0	
Description:		
Local Interface:	WAN (Interface should have a public IP address)	
Local IPv4 Address:		

## IPv4隧道中的IPv6(6in4)

要新增IPv4隧道(6in4),請輸入以下資訊:

### 步驟1.選擇IPv4 Tunnel(6in4)中的IPv6單選按鈕。

	IPv6 in IPv4 Tunnel (6in4)	O IPv6 Rapid Deployment (6rd)
Remote IPv4 Address:		
Local IPv6 Address/Length:	2222::1	
Remote IPv6 Address/Length:	3333::1	
步驟2.輸入遠端IPv4地址。		
	● IPv6 in IPv4 Tunnel (6in4)	O IPv6 Rapid Deployment (6rd)
Remote IPv4 Address:	19210	
Local IPv6 Address/Length:	2222::1	
Remote IPv6 Address/Length:	3333::1	1

步驟3.輸入本地IPv6地址和長度。

	O IPv6 in IPv4 Tunnel (6in4) (€	D IPv6 Rapid Deployment (6rd)
Remote IPv4 Address:	192. 10	
Local IPv6 Address/Length:	2222:	/ 64
Remote IPv6 Address/Length:	3333::1	1

#### 步驟4.輸入遠端IPv6地址和長度。

1	IPv6 in IPv4 Tunnel (6in4)		v6 Rapid Deployment (6rd)
Remote IPv4 Address:	192. 📕 "10		
Local IPv6 Address/Length:	2222: ::	]/	64
Remote IPv6 Address/Length:	2225: ::	] / [	64

### 步驟5.按一下Apply。

IPv6 Transition			(	Apply	Cancel
Tunnel Interface:	TUN1				
Enable:	0				
Description:					
Local Interface:	WAN (Interface should have a pul	olic IP address)			
Local IPv4 Address:					
	IPv6 in IPv4 Tunnel (6in4) O I	Pv6 Rapid Deployment (6rd)			
Remote IPv4 Address:	192 .10				
Local IPv6 Address/Length:	2222: :: /	64	2		
Remote IPv6 Address/Length:	2225:	64			

步驟6.如果要在重新啟動之間保留配置,則需要將運行配置複製到啟動配置。為此,請按一下 頁面頂部的Save圖示。

🔇 Save cisco(admin) English 🗸 ? 🕄 🕩
步驟7.在 <i>組態管理</i> 中,向下滾動至 <i>複製/儲存組態</i> 一節。請確認 <i>Source</i> 是Running Configuration,而 <i>Destination</i> 是Startup Configuration。按一下「Apply」。
Configuration Management 3 Apply Cancel Disable Save Icon Blinking
Configuration File Name
Last Change Time
Running Configuration: 2019-Mar-11, 10:34:16 UTC
Startup configuration:
Mirror Configuration: 2019-Mar-11, 15:00:12 UTC
Backup Configuration:
Copy/Save Configuration

All configurations that the router is currently using are in the Running Configuration file which is volatile and is not retained between reboots

## IPv6快速部署(第6個)

在IPv6快速部署(第6個)中,每個ISP使用自己的IPv6字首之一。因此,提供商可以保證其 第6台主機可從所有可以到達其IPv6網路的本地IPv6主機中訪問。

#### 步驟1.選擇IPv6 Rapid Deployment (第6步)單選按鈕。

	O IPv6 in IPv4 Tunnel (6in4) 💿 IPv6 Rapid Deployment (6rd)
Configuration Mode:	O Manual O Automatically for DHCP
IPv4 Address of Relay:	
IPv4 Common Prefix Length:	
IPv6 Prefix/Length:	
步驟2.在「配置模式 第6個字首、中繼IPv	」部分,按一下 <i>Automatically from DHCP</i> 以使用DHCP(選項212)獲取 4地址和IPv4掩碼長度。
	O IPv6 in IPv4 Tunnel (6in4) O IPv6 Rapid Deployment (6rd)
Configuration Mode:	O Manual  Automatically for DHCP
IPv4 Address of Relay:	
IPv4 Common Prefix Length:	
IPv6 Prefix/Length:	
步驟3.如果您願意,	請選擇 <b>手動</b> 並設定以下第6個引數。
● 輸入中 <i>繼的IPv4</i> ● 輸入 <i>IPv4通用首</i> ● 輸入 <i>IPv6字首/長</i> 相同的初始位。	<i>地址</i> 。 <i>碼長度</i> 。 度。IPv6網路(子網)由字首標識。網路中的所有主機的IPv6地址都有 輸入網路地址中的常用初始位數。預設值為64。
<b>附註</b> :上述引數需要	由ISP定義。
C	DIPv6 in IPv4 Tunnel (6in4) OIPv6 Rapid Deployment (6rd)
Configuration Mode:	Manual O Automatically for DHCP

IPv4 Address of Relay:	2	
IPv4 Common Prefix Length:	3	
IPv6 Prefix/Length:		4

步驟4.按一下Apply。

IPv6 Transition	Apply Cancel
Tunnel Interface:	TUN1
Enable:	
Description:	
Local Interface:	WAN (Interface should have a public IP address)
Local IPv4 Address:	
	O IPv6 in IPv4 Tunnel (6in4) O IPv6 Rapid Deployment (6rd)
Configuration Mode:	Manual O Automatically for DHCP
IPv4 Address of Relay:	
IPv4 Common Prefix Length:	
IPv6 Prefix/Length:	

**附註**:請記得按一下頁面頂部的**Save**圖示,導航到*Configuration Management*部分,將運行 配置檔案複製到啟動配置檔案中。

現在,您應該已經在RV160x/RV260x路由器上成功配置IPv6轉換。