配置RV110W的時間設定

目標

時間設定允許使用者自動或手動更改路由器上的時間並記錄夏令時(DTS)。本文的目的是解釋如何在RV110W上配置時間設定。

適用裝置

·RV110W

程式步驟

步驟1.使用Web配置實用程式選擇Administration > Time Settings。將開啟時間設定頁面:

Time Settings			
Current Time:		01/01/10 12:02 AM	
Time Zone		(GMT-08:00) Pacific Time (USA & Canada)	
Adjust for Dayligh	t Savings Time:		
Daylight Saving M	lode:	Isy date Recurring	
From:		Month: 01 - Day: 01 - Time: 12 - : 00 - : AM -	
To:		Month: 01 - Day: 01 - Time: 12 - : 00 - : AM -	
From:		Month: 01 - Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -	
To:		Month: 01 - Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -	
Daylight Saving O)ffset:	+60 - Minutes	
Set Date and Tim	e:	Auto Manual Manual Auto Manual Auto Auto Manual Auto Auto	
NTP Server:		Ose Default	
		O User defined NTP Server	
		1. (Hint: 1.2.3.4 or abc.com)	
		2.	
Enter Date and Ti	ime:	Year: 2011 - Month: 01 - Day: 01 -	
		Time: 12 - : 00 - : AM -	
Save	Cancel		

步驟2.從Time Zone欄位的下拉選單中選擇時區。

Time Settings			
Current Time:	01/01/10 12:02 AM		
Time Zone	(GMT-08:00) Pacific Time (USA & Canada)		
Adjust for Daylight Savings Time:			
Daylight Saving Mode:	By date Recurring Recurring Recurring Additional Additiona Additional Addita Additiona Additional Additional Additadataa Additi Additio		
From:	Month: 01 - Day: 01 - Time: 12 - : 00 - : AM -		
To:	Month: 01 - Day: 01 - Time: 12 - : 00 - : AM -		
From:	Month: 01 - Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -		
То:	Month: 01 - Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -		
Daylight Saving Offset:	+60 - Minutes		
Set Date and Time:	Auto O Manual		
NTP Server:	Ose Default		
	User defined NTP Server		
	1. (Hint: 1.2.3.4 or abc.com)		
	2.		
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -		
	Time: 12 - : 00 - : AM -		
Save Cancel			

自動設定時間

此功能允許使用者使用夏令時選項自動調整時間。

步驟1.按一下Set Date and Time 欄位中的Auto單選按鈕。

Current Time:	01/01/10 12:04 AM
Time Zone	(GMT-06:00) Central Time (USA & Canada)
Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date Recurring
From:	Month: 01 - Day: 01 - Time: 12 -
To:	Month: 01 - Day: 01 - Time: 12 -
From:	Month: 01 - Week: 1st - Day: Sund
To:	Month: 01 - Week: 1st - Day: Sund
Daylight Saving Offset:	+60 - Minutes
Set Date and Time:	Auto Manual
NTP Server:	Ose Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4
	2.
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01
	Time: 12 - : 00 - : AM -
Save Cancel	

步驟2.在Adjust for Daylight Savings Time欄位中選中覈取方塊以啟用DTS。

Time Settings	
Current Time:	01/01/10 12:04 AM
Time Zone	(GMT-06:00) Central Time (USA & Canada)
Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date
From:	Month: 01 - Day: 01 - Time: 12 - : 00 -
To:	Month: 01 - Day: 01 - Time: 12 - : 00 -
From:	Month: 01 - Week: 1st - Day: Sunday -
То:	Month: 01 - Week: 1st - Day: Sunday -
Daylight Saving Offset:	+60 - Minutes
Set Date and Time:	Auto O Manual
NTP Server:	Ose Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4 or abc.co
	2.
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -
	Time: 12 - : 00 - : AM -

步驟3.按一下所需的DTS選項的單選按鈕。選項如下:

• 按日期 — 將DTS設定為在兩個特定日期之間發生。

• Recurring — 將DTS設定為在兩個不同月份的兩天之間(即3月的第一個星期日)。

Time Settings	
Current Time:	01/01/10 12:04 AM
Time Zone	(GMT-06:00) Central Time (USA & Canada)
Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date Recurring
From:	Month: 01 Day: 01 Time: 12 : 0
To:	Month: 01 - Day: 01 - Time: 12 - : 0
From:	Month: 01 - Week: 1st - Day: Sunday
То:	Month: 01 - Week: 1st - Day: Sunday
Daylight Saving Offset:	+60 - Minutes
Set Date and Time:	🖲 Auto 🔘 Manual
NTP Server:	Ose Default

-

: 00 - : /

: 00 - : /

(Hint: 1.2.3.4 or abc.com)

- T

▼ | T

註:如果選擇Recurring單選按鈕,請跳至步驟5。

Enter Date and Time:

步驟4.如果選擇「**按日期**」單選按鈕,請在「自」行的「*月」、「日」和「時間」*欄位中設定 所需的開始日期和時間。然後在「到」行中的「*月*」、「*日」和「*時間」字*段中設*置結束日*期 和*時間。

User defined NTP Server

Time: 12 - : 00 - : AM -

Year: 2011 - Month: 01 - Day: 01 -

1.

2.

By d	ate 🔘 F	lecurring	
Month:	01 👻	Day: 01 - Time: 12 - : 00 - : AM -	
Month:	01 👻	Day: 01 - Time: 12 - : 00 - : AM -	
Month:	01 -	Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -	-
Month:	01 -	Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -	-

步驟5.如果選擇「**Recurring**」單選按鈕,請在「*自*」行的「*月」、「週」、「日」和「時間*」欄位中設定所需的開始日期和時間。然後在「至」行的「*月*」、「*週」、「日」和「時*間」 *欄位*中設定結束*日期*和時間。

By date Recurring			
Month:	01 👻	Day: 01 - Time: 12 - : 00 - : AM -	
Month:	01 👻	Day: 01 - Time: 12 - : 00 - : AM -	
Month:	01 👻	Week: 1st ▼ Day: Sunday ▼ Time: 12 ▼ : 00 ▼ : AM ▼	
Month:	01 -	Week: 1st - Day: Sunday - Time: 12 - : 00 - : AM -	

步驟6.從Daylight Saving Offset欄位的下拉選單中選擇DTS應偏移當前時間的分鐘數。

Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date Recurring
From:	Month: 03 ▼ Day: 11 ▼ Time: 02 ▼ : 00 ▼ :
To:	Month: 11 ▼ Day: 04 ▼ Time: 02 ▼ : 00 ▼ :
From:	Month: 01 - Week: 1st - Day: Sunday -
To:	Month: 01 - Week: 1st - Day: Sunday -
Daylight Saving Offset:	+60 Vinutes
Set Date and Time: NTP Server:	+60 +45 ① Manual +30 -30 Cefault -45 -60 defined NTP Server
	1. (Hint: 1.2.3.4 or abc.com
	2.
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -
	Time: 12 - : 00 - : AM -
Save Cancel	

步驟7.在NTP Server欄位中點選所需選項的單選按鈕。選項如下:

- 使用預設值 使用預設的網路時間協定伺服器設定時鐘。
- 使用者定義的NTP伺服器 手動輸入網路時間協定伺服器。

Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date Recurring
From:	Month: 03 ▼ Day: 11 ▼ Time: 02 ▼ : 00 ▼ :
To:	Month: 11 ▼ Day: 04 ▼ Time: 02 ▼ : 00 ▼ :
From:	Month: 01 - Week: 1st - Day: Sunday -
To:	Month: 01 - Week: 1st - Day: Sunday -
Daylight Saving Offset:	+60 👻 Minutes
Set Date and Time:	Auto O Manual
NTP Server:	Use Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4 or abc.con
	2.
Enter Date and Time:	Year: 2011 - Month: 01 - Day: 01 -
	Time: 12 - : 00 - : AM -
Save Cancel	

附註:如果按一下**使用者定義的NTP伺服器**單選按鈕,請在1和2欄位中輸入一個或兩個IP地 址或網站名稱以設定時鐘。

步驟8.按一下Save儲存更改,或按一下Cancel放棄更改。

手動設定時間

此功能允許使用者手動設定時間。

步驟1.按一下Set Date and Time 欄位中的Manual單選按鈕。

Time Settings	
Current Time:	01/01/10 12:52 AM
Time Zone	(GMT-08:00) Pacific Time (USA & Canada) 🔹
Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date
From:	Month: 01 - Day: 01 - Time: 12 - : 00 - :
To:	Month: 01 - Day: 01 - Time: 12 - : 00 - :
From:	Month: 01 - Week: 1st - Day: Sunday -
To:	Month: 01 - Week: 1st - Day: Sunday -
Daylight Saving Offset:	+60 👻 Minutes
Set Date and Time:	🛇 Aute 🖲 Manual
NTP Server:	Ose Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4 or abc.con
	2.
Enter Date and Time:	Year: 2011 ▼ Month: 01 ▼ Day: 01 ▼
	Time: 12 👻 : 00 👻 : AM 👻

步驟2.在「輸入日期和時間」行的年、月、日和時間欄位中選擇所需的日期和時間。

Time Settings	
Current Time:	01/01/10 12:52 AM
Time Zone	(GMT-08:00) Pacific Time (USA & Canada) 🔹
Adjust for Daylight Savings Time:	
Daylight Saving Mode:	By date
From:	Month: 01 - Day: 01 - Time: 12 - : 00 - :
To:	Month: 01 - Day: 01 - Time: 12 - : 00 - :
From:	Month: 01 - Week: 1st - Day: Sunday -
To:	Month: 01 - Week: 1st - Day: Sunday -
Daylight Saving Offset:	+60 - Minutes
Set Date and Time:	🛇 Auto 🖲 Manual
NTP Server:	Ose Default
	O User defined NTP Server
	1. (Hint: 1.2.3.4 or abc.con
	2.
Enter Date and Time:	Year: 2011 ▼ Month: 01 ▼ Day: 01 ▼
	Time: 12 - : 00 - : AM -

步驟3.按一下Save儲存更改,或按一下Cancel放棄更改。