訪問RV016、RV042、RV042G和RV082 VPN路 由器上的Web配置實用程式

目標

更改裝置配置的最簡單方法之一是使用Web配置實用程式。Web配置實用程式是一個圖形使用者介 面(GUI),為管理員提供了一個易於使用的工具,其中包含所有可以用來修改裝置效能的功能。本文 檔旨在展示如何登入和訪問RV016、RV042、RV042G和RV082 VPN路由器的Web配置實用程式。

適用裝置 | 韌體版本

- RV016 | V 4.2.1.02(下載<u>最新版本</u>)
- RV042 | V 4.2.1.02(下載<u>最新版本</u>)
- RV042G | V 4.2.1.02(下載<u>最新版本</u>)
- RV082 | V 4.2.1.02(下載<u>最新版本</u>)

訪問Web配置實用程式

步驟1.開啟Web瀏覽器,在位址列中輸入路由器的IP地址,然後按Enter鍵。登入頁面隨即開啟:

注意:路由器的預設IP地址為192.168.1.1。預設情況下,裝置已啟用DHCP伺服器。一旦主機電腦 連線到路由器以訪問Web配置實用程式,它就會成為路由器的DHCP伺服器的客戶端。然後會在與 路由器相同的子網中為其分配IP地址。如果沒有顯示任何網頁,只要路由器子網已知,就嘗試通過 手動配置主機電腦的IP地址訪問裝置。完成此操作後,主機的新IP地址必須與路由器位於同一個子 網中。嘗試重置裝置時,按住重置按鈕30秒。這會將裝置的IP地址、DHCP伺服器和所有其它設定 重置為出廠預設值。有關重置裝置的說明,請參閱<u>在RV042、RV042G、RV082 VPN路由器上重新</u> <u>啟動並恢復為出廠預設設定</u>。

註:瀏覽器中可能會出現一個安全警報,其中顯示一條消息,指出該網站的證書不可信。按一下「 Proceed」或「Continue」。瀏覽器不信任憑證,因為它來自網站本身,而不是第三方。

cisco	Router	Username:
		Password:

步驟 2.在Username欄位中輸入裝置的使用者名稱。預設使用者名稱是「admin」。

步驟 3.在Password欄位中輸入裝置的密碼。預設密碼為「admin」。

注意:如果您忘記了密碼,可以將路由器重置為出廠預設值,使裝置恢復預設登入。要執行此操作 ,請按住Reset按鈕30秒。有關特定說明,請參閱<u>RV042、RV042G、RV082 VPN路由器上的重新</u> <u>啟動並恢復為出廠預設設定</u>。

步驟 4.按一下Login進入Web配置實用程式。將開啟System Summary頁面:

注意:這些步驟是在RV082 VPN路由器上執行的。系統摘要頁面如下所示,但是同樣的流程適用於 RV016、RV042和RV042G VPN路由器。

System Summary System Summary Setup System Summary Setup System Information System Management PiD VD 0: Firewall LAN Cisco ProtectLink Web IPv4/ Subnet mask: VPN IPv4/ Subnet mask: Vizard System Up Time: Ocisco ProtectLink Up time: Vizard Ocisco ProtectLink Ocisco ProtectLink Ocisco ProtectLink Opid guideline to re-configure the router, you may launch wizard Setup Wizard Firmware LAN Opid Statistics Port ID Port ID 1 2 3 4 5 6 7 8 Status Enabled Enabled Connected Enabled Enabled Enabled Enabled Enabled Enabled Enabled Enabled	IIIII Small Business CISCO RV082 10)/100 8-P	ort VPN	N Router									admin	Logout	^	bo
OHCP System Information System Management Serial Number : NKS10403550 Firmware Version : v4.21.02 (Jan 18 2012 14:10:55) Prot Management PID VID : RV082 V03 Firmware MD5 Checksum:: a981782dbdcbd8a6c109eaa21b1c3545 Since ProtectLink Web IPV4 Subnet mask: 192 v168.11/255255255.0 IPV4 Subnet mask: 192 v168.11/255255255.0 IPV6 PTPN IPV6 PTPRix: to 0.177 System Up Time :: 0 Days 0 Hours 14 Minutes 50 Seconds (Now: Sun May 28 2013 22:04:07) Wizard Cisco ProtectLink Go buy Register Adtwate Configuration If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Port Statistics Port 1D 1 2 3 4 5 6 7 8 Interface LAN LAN Status Enabled <	System Summary Setup	System S	Summary													
System Management Serial Number :: NKS10403550 Firmware Version :: v4.2.1.02 (Jan 18 2012 14:10:5) Prof. Management PID VID :: RV082 V03 Firmware MD5 Checksum :: s9817f2dbdcbd6a5c109eaa21b1c3545 Scisco ProtectLink Web VPN IP4/4 Subnet mask :: 192 188.1.1/255 255 255.0 Vizard IP4/4 Subnet mask :: 192 188.1.1/255 255 255.0 Vizard IP4/4 Subnet mask :: 192 188.1.1/255 255 255.0 Vizard Cisco ProtectLink Go buy Register Activate Configuration If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Port Statistics Port 1D 1 2 3 4 5 6 7 8 Interface LAN LAN Status Enabled	> DHCP	System Infor	mation													
Pot Management PID_VID_: RV082 V03 Firmware MD5 Checksum: ±9817f2dbdcbd6a5c109eaa21b1c3545 Firewall Working Mode Gateway Cisco ProtectLink Web IPAd/ Subnet mask: 192.168.1.1/255.255.5.0 VPN IPAd/ Prefix fc00:11/7 System Up Time : 0 Days 0 Hours 14 Minutes 50 Seconds (Now : Sun May 26 2013 22.04.07) Wizard Cisco ProtectLink Go buy Register Activate Configuration If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Port Statistics Port Statistics Port ID 1 2 3 4 5 6 7 8 Interface LAN LAN Status Enabled Enable	 System Management 	Serial Numbe	er :	NKS10403550		Firmwar	e Version :	v4.2.1.02	(Jan 18 2012 ·	14:10:55)						
Fiewall LAN Working Mode: Gateway Cisco ProtectLink Web Wizard (Sico ProtectLink Configuration If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Port Statistics Port Statistics Port Statistics Interface LAN Example duideline to re-configure the router. you may launch wizard. Setup Wizard Fort Statistics Port Statistics<	Port Management	PID VID :		RV082 V03		Firmwar	e MD5 Checksum	: a9817f20	dbdcbd6a5c109	eaa21b1c3545						
Cisco ProtectLink Web VPN VBA Ibid/ Prefix: Vitard Cisco ProtectLink Configuration If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Port ID 1 2 3 4 5 6 7 8 Interface LAN Status Enabled Enabled Enabled Enabled Enabled Enabled	Firewall	LAN				Working	Mode :	Gateway								
VPN IPv6/Prefix: tc00::1/7 Log System Up Time : 0 Days 0 Hours 14 Minutes 50 Seconds (Now : Sun May 26 2013 22:04:07) Vitard Configuration If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Port Statistics Port ID 1 2 3 4 5 6 7 8 Interface LAN Status Enabled Enab	Cisco ProtectLink Web	IPv4/ Su	bnet mask :	192.168.1.1/25	5.255.255.0											
Log System Up Time: 0 Days 0 Hours 14 Minutes 50 Seconds (Now: Sun May 26 2013 22:04:07) Wizard Configuration If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Port Statistics Port Statistics Interface LAN Status Enabled Enabled Enabled Enabled Enabled Enabled Enabled Enabled	VPN	IPv6/ Pre	efix :	fc00::1/7												
Wizard Cisco ProtectLink Go buy Register Activate Configuration If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Setup Wizard Port Statistics Port Statistics Interface LAN Status Enabled Enabled Enabled Data ID DMZ/report Interface LAN	▶ Log	System Up Ti	ime :	0 Days 0 Hour	s 14 Minutes 5	0 Seconds (No	w : Sun May 26 20	13 22:04:07)							
Cisco ProtectLink Co buy Register Activate Configuration If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Setup Wizard Port Statistics Port ID 1 2 3 4 5 6 7 8 Interface LAN LAN Status Enabled Enabled Enabled Enabled Enabled Darl ID Different Unterface LAN Status Enabled Enabled Enabled Enabled Enabled	Wizard								·							
Configuration If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Port Statistics Port ID 1 2 3 4 5 6 7 8 Interface LAN		Cisco ProtectLink						Go buy Register Activate								
If you need guideline to re-configure the router, you may launch wizard. Setup Wizard Port Statistics Port ID 1 2 3 4 5 6 7 8 Interface LAN Status Enabled Enabled Enabled Enabled Enabled Enabled Enabled Dart ID Different LAN Interface Interfac		Configuration	ı													
Port Statistics Port ID 1 2 3 4 5 6 7 8 Interface LAN LAN Enabled Enabled Enabled Enabled Enabled Status Enabled Enabled Connected Enabled Enabled Enabled		lf you need g	uideline to re	-configure the ro	uter, you may l	aunch wizard.	Setup Wizard									
Port ID 1 2 3 4 5 6 7 8 Interface LAN Status Enabled Enabled Enabled Enabled Enabled		Port Statistic	S													
Interface LAN Status Enabled Enabled Enabled Enabled Enabled Enabled		Port ID	1	2	3	4	5	6	7	8						
Status Enabled Enabled Connected Enabled Enabled Enabled Enabled		Interface				L	AN									
		Status	Enabled	Enabled	Enabled	Connected	Enabled	Enabled	Enabled	Enabled						
I Det In Different Island											1					
		Dottin		DU7/	ntornat			Int	armat							

系統摘要頁面顯示要配置的裝置的基本資訊。螢幕左側的導航樹將所有不同的配置選項組織成類別

。導航樹可用於訪問裝置的所有不同配置選項。



右上角的工具欄提供了有關路由器的有用資訊。

- 註銷 將您從Web配置實用程式註銷。
- 關於 開啟一個視窗,顯示裝置的名稱和當前韌體版本
- 幫助 開啟一個視窗,提供有關開啟的當前頁面的各個選項的資訊。

關於此翻譯

思科已使用電腦和人工技術翻譯本文件,讓全世界的使用者能夠以自己的語言理解支援內容。請注 意,即使是最佳機器翻譯,也不如專業譯者翻譯的內容準確。Cisco Systems, Inc. 對這些翻譯的準 確度概不負責,並建議一律查看原始英文文件(提供連結)。